



Configuring the Modem Router

1. Connecting your computer to the modem router (Wired or Wireless).

• Wired

Connect the computer to the LAN1, LAN2, LAN3 or LAN4 port on your modem router with an Ethernet cable. And the LAN LED \square lights up.



• Wireless

a Find the SSID (network name) and Wireless Password printed on the product label at the bottom of the modem router.

Ptp-link	
	Wireless Password/PIN-XXXXXXXX

b Click the network icon of your computer or go to Wi-Fi Setting of your smart device, then select the SSID to join the network.

Computer	Smart Device
	< Settings Wi-Fi
Connections are available	
Wireless Network Connection	Wi-Fi
TP-LINK_XXXXX	CHOOSE A NETWORK
Connect automatically Connect	TP-LINK_XXXXX
	Other

2. Configuring the modem router via a web browser.

A Enter http://tplinkmodem.net or 192.168.1.1 in the address bar of a web browser. Use admin for both username and password, and then click Log in. Note: If the login window does not appear, please refer to FAQ > Q1.

http://tp	inkmodem.net ♀*→
·	
Username:	admin
oscinanie.	
Password:	admin
	Log in

B A Quick Start window will pop up. Click NEXT, and select your Time Zone, then click NEXT.



C Complete the Internet Settings with the information provided by your ISP and click NEXT. Here we use PPPoE/PPPoA for demonstration.

Note:

All the internet settings in the figure below are used for demonstration only. If you are unsure of the internet settings, please contact your ISP.

Quick Start - Internet S	ettings
Country:	Other V
ISP:	Other V
ISP Connection Type:	PPPoE/PPPoA V
Username:	XXXXXXXXXX
Password:	****
VPI:	8 (0~255)
VCI:	35 (32~65535)
Connection Type:	PPPoe LLC V BACK NEXT EXIT
	· u

Q4. •

Verify or change the Wlan settings (wireless network settings) and click NEXT to continue.

Note: You may personalize your SSID (wireless network name) and key. Once done, you will have to reconnect to your wireless network using the new SSID and key.

Access Point : Activated Deactivated	
SSID : TP-LINK_XXXXXX	
Broadcast SSID :	
Authentication Type: WPA2-PSK 🗸	
Encryption : AES V	
Pre-Shared Key : XXXXXXXX	
	BACK NEXT EXIT

E Click SAVE to complete the configuration.

FAQ (Frequently Asked Questions)

Q1. What can I do if the login page does not appear?

- A1. Make sure the computer is connected to the modem router properly.
- A2. If the computer is set to a static or fixed IP address, change the computer's settings to obtain an IP address automatically from the modem router.
- A3. Verify http://tplinkmodem.net or 192.168.1.1 is correctly entered in the web browser and press Enter.
- A4. Use another web browser and try again.
- A5. Reboot your modem router and try again.
- A6. Disable and enable the active network adapter.

Q2. What can I do if I cannot access the internet?

- A1. Make sure the telephone and Ethernet cables are plugged in correctly.
- A2. Try to log in to the web management page of the modem router using the default
 - address at http://tplinkmodem.net or 192.168.1.1. If you can, try the following answers. If you cannot, change your computer's settings to obtain an IP address automatically from the modem router.
- A3. Consult your ISP and make sure all the VPI/VCI, Connection Type, account username and password are correct. If they are not, please replace them with the correct settings and try again.
- A4. Restore the modem router to its factory default settings and reconfigure the modem router by following the instructions in this Quick Installation Guide.
- A5. Please contact our Technical Support if the problem persists.

Q3. How do I restore the modem router to its factory default settings?



WPS/RESET Button Press & Hold for 10 seconds

A2. Log in to the web management page of the modem router, and go to Maintenance > SysRestart, select Factory Default Settings and click RESTART, then wait until the reset process is complete.

Q4. What can I do if I forget my password?

• Web management page password:

Refer to FAQ > Q3 to reset the modem router, and then use **admin** (all lowercase) for both username and password to log in.

• Wireless network password:

A1. The default Wireless Password/PIN is printed on the product label of the modem router.
 A2. If the default wireless password has been changed, log in to the modem router's web management page and go to Interface Setup > Wireless to retrieve or reset your password.

Q5. What can I do if the ADSL LED $\mathbf{\hat{\Psi}}$ does not turn solid on?

- A1. Check your cables and make sure they are all plugged in correctly, including the telephone lines and power adapter.
- A2. Manually change your DSL settings. Log in to the modem router's web management page. Go to Advanced Setup > ADSL, change the ADSL Mode to G.DMT, and click SAVE. If this cannot work, try to change the ADSL Mode to ADSL2 and click SAVE.
 A3. Restore your modem router to its factory default settings.
- A4. Remove the ADSL splitter, directly connect the modem router to the phone jack and then reconfigure the modem router by following the instructions in this Quick Installation Guide.
- A5. Contact your internet service provider to verify if the ADSL line is in good status.A6. If you have tried all the suggestions above and the problem persists, contact our Technical Support.

For technical support and other information, please visit http://www.tp-link.com/support, or simply scan the QR code.

