

# Quick Installation Guide

# **LED** Explanation On/Off: The extender is connected

or not connected to your router's wireless network.

Blinking: WPS connection is being

#### Wireless

Power

On/Off: The extender's wireless function is enabled or disabled.

On/Off: The extender is on or off.



### (Signal Strength)

Indicates the Wi-Fi connection between the extender and the router. More lit LEDs indicate a better signal strength.

#### Ethernet

On/Off: The Ethernet port is connected or not connected to a powered-on device.

 















#### Quick Setup Using the WPS Button **Option ONE**

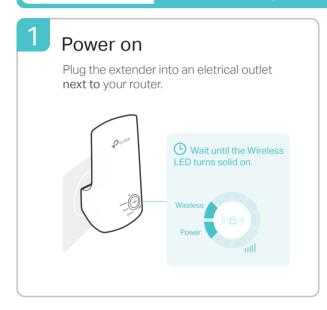

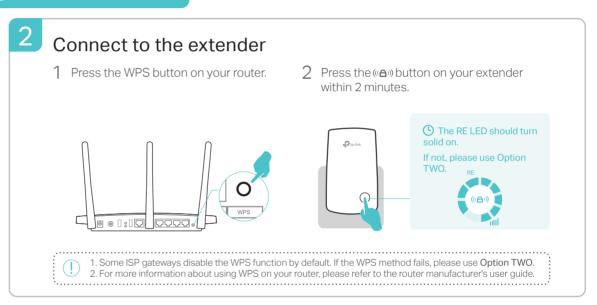

## Relocate

- Plug in the extender about halfway between your router and the Wi-Fi dead zone. The location you choose must be within the range of the host network.
- Wait until the IIII LEDs are lit. Make sure 3 or more LEDs lit. If not, relocate it closer to the router to achieve better signal quality.

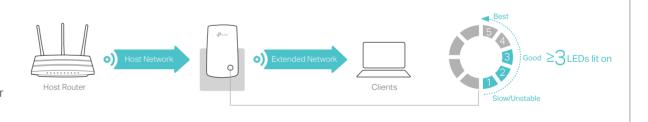



The extended network shares the same wireles network name and password as that of your host network.



### Entertainment Adapter

The extender can be used as a wireless adapter to connect any Ethernet-only device such as a Blu-ray player, game console, DVR, or smart TV to your Wi-Fi network. First, connect the extender to your router using Option ONE or Option TWO, then connect your Ethernet-only device to the extender via an Ethernet cable.

#### **Ethernet Connection**











### TP-Link Tether App

Tether provides a simple, intuitive way to access and manage your extender with your iOS or Android devices.







Turn on/off the LEDs



Modify wireless settings



Block unwelcome devices

- 1. Download the Tether app from the Apple App Store or Google Play Store.
- 2. Ensure your device is wirelessly connected to the extender or to the host router 3. Launch the app and start managing your extended network.



## Option TWO Quick Setup Using Your Web Browser


Plug the extender into an eletrical outlet next to your router.

By Wait until the Wireless LED turns solid on.

Wireless
Power

Connect to the extender

For Windows Users

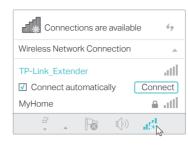

- 1. Unplug the Ethernet cable from your computer (if any).
- 2. Click the Wi-Fi icon on the taskbar and connect to the extender's network TP-Link Extender.

#### For Mac OS X Users



- 1. Unplug the Ethernet cable from your Mac (if any).
- Click the Wi-Fi icon in the top right corner of the screen and connect to the extender's network TP-Link Extender.

# 3 Configure

1 Launch a web browser and enter http://tplinkrepeater.net or http://192.168.0.254 in the address bar. Create a password for future login attempts, and click Start.



If the login window does not appear, please refer to the FAQ > Q1.

3 Either keep the default SSID or customize it for the 2.4GHz extended network, and click **Next**.



2 Select your **router's 2.4GHz network** and enter its wireless password (NOT the account password you just created for management). Then click **Next**.



4 Verify your wireless settings and click **Save**. And then check the RE LED.



4 Re

### Relocate



Flip this piece of paper, and refer to Step 3 of Option ONE.

### © Enjoy!

The extended network shares the same Wi-Fi password as that of your host network, but may have different wireless network name if you have customized it during the configuration.

## FAQ(Frequently Asked Questions)

#### Q1. What should I do if I can't access the extender's web management page?

- If your computer is wirelessly connected, make sure that your have connected to the extended's SSID.
- If your computer is connected via an Ethernet cable, please make sure that the connection is stable.
- Make sure your computer is set to obtain an IP address and DNS server address automatically.
- Verify that http://tplinkrepeater.net or http://192.168.0.254 is correctly entered in the web browser and press Enter.
- Reset the extender and try again.

#### Q2. How do I reset the extender?

• With the extender powered on, use a pin to press and hold the RESET button until all the LEDs turn on momentarily. Then release the button.

#### Q3. Why doesn't the RE LED light up after I completed Option TWO?

- You may have entered an incorrect Wi-Fi password of your host network during the configuration. Log in to the extender's web management page to check the password and try again.
- The extender may be out-of-range. Please move it closer to the router.
- Reset the extender and go through the configuration again.

# Q4. I enabled a wireless MAC filter, wireless access control, or access control list (ACL) on my router. What should I do before configuring and using the extender?

• If your have enabled those features of your host router, you may need to disable them first, and then follow Option ONE or Option TWO to complete the configuration.

