

AC450 Wireless Nano USB Adapter

For Mac OS X



Insert the adapter into a USB port on your computer directly.

 $\psi \psi \psi$ 000 A

2 Install Driver and Utility

a. Download the driver and utility from this product's Support page at www.tp-link.com.

#### Note:

If your computer has a CD drive, you can also run the included CD to install the driver and utility.

b. Unzip the downloaded folder and run the Installer.pkg.

c. Follow the instructions to complete the installation.



**3** Join a Wireless Network

a. Select the **Site Survey** tab of the pop-up utility window.

b. Select your Wi-Fi network and click CONNECT. The connection status can be viewed on the Link Status screen.

SSID	BSSID	Signal	Channel	Auba	Encr	Network Type
TP-Link_XOOX_	72 - 10 -18 - 01 - 00 - 03	26	36	WPA2-PS	AES	Infrastructure
TP-Link_TEST_	02 - 10 -18 - 01 - 00 - 02	50	38	WPA2-PS	AES	Infrastructure
TP-Link_0903_5	00 - 51 - E1 - 02 - 20 - 44	100	48	Open	NONE	Infrastructure
TP-Link_0001_5	00 - 10 - 18 - A9 - 5D - 8D	42	36	Open	NONE	Infrastructure

### Connect to a Computer

Insert the adapter into a USB port on your computer directly.

# 

#### Note:

For Windows

In Windows XP, a Found New Hardware Wizard window will appear when the adapter is detected. Please click Cancel.

## 2 Install Driver

a. Insert the CD and run the Autorun.exe.

Note: You can also download the driver from this product's Support page at www.tp-link.com.

b. Select Archer T1U and follow the instructions to complete the installation.

Note: If you can't install the driver successfully, disable the antivirus software and firewall, then try again.



### **3** Join a Wireless Network

a. Click the network icon (\* or \* or ) on the taskbar.

b. Select your Wi-Fi network, click **Connect** and enter the password when prompted.



For detailed instructions, please refer to the
User Manual from this product's Support
page at www.tp-link.com.
For technical support and other information,
please visit http://www.tp-link.com/support,
or simply scan the QR code.

This USB Adapter can only be powered by computers that comply with Limited Power Source (LPS).

