



# User Guide

150Mbps Wireless N ADSL2+ Modem Router

TD-W8901N

# CONTENTS

|   |           |
|---|-----------|
| <b>About This Guide</b> .....                 | <b>1</b>  |
| <b>Chapter 1 Introduction</b> .....           | <b>2</b>  |
| 1.1 Product Overview .....                    | 2         |
| 1.2 Product Appearance .....                  | 2         |
| 1.2.1 The Front Panel .....                   | 2         |
| 1.2.2 The Back Panel .....                    | 4         |
| <b>Chapter 2 Hardware Installation</b> .....  | <b>5</b>  |
| 2.1 Positioning the Modem Router .....        | 5         |
| 2.2 Connecting the Modem Router .....         | 6         |
| <b>Chapter 3 Quick Start</b> .....            | <b>8</b>  |
| <b>Chapter 4 Software Configuration</b> ..... | <b>12</b> |
| 4.1 Status .....                              | 12        |
| 4.1.1 Device Info .....                       | 12        |
| 4.1.2 System Log .....                        | 13        |
| 4.1.3 Statistics .....                        | 14        |
| 4.2 Interface Setup .....                     | 17        |
| 4.2.1 Internet .....                          | 17        |
| 4.2.2 LAN .....                               | 23        |
| 4.2.3 Wireless .....                          | 27        |
| 4.2.4 6RD .....                               | 36        |
| 4.2.5 Guest Network .....                     | 37        |
| 4.3 Advanced Setup .....                      | 39        |
| 4.3.1 Firewall .....                          | 39        |
| 4.3.2 Routing .....                           | 39        |
| 4.3.3 NAT .....                               | 40        |
| 4.3.4 QoS .....                               | 44        |
| 4.3.5 VLAN .....                              | 46        |
| 4.3.6 ADSL .....                              | 48        |
| 4.4 Access Management .....                   | 49        |
| 4.4.1 ACL .....                               | 49        |
| 4.4.2 Filter .....                            | 50        |
| 4.4.3 SNMP .....                              | 57        |
| 4.4.4 UPnP .....                              | 57        |

---

|  |                     |           |
|--|---------------------|-----------|
| 4.4.5                                      | DDNS.....           | 58        |
| 4.4.6                                      | CWMP .....          | 58        |
| 4.5  | Maintenance.....    | 59        |
| 4.5.1                                      | Administration..... | 59        |
| 4.5.2                                      | Time Zone.....      | 60        |
| 4.5.3                                      | Firmware .....      | 61        |
| 4.5.4                                      | SysRestart.....     | 63        |
| 4.5.5                                      | Diagnostics.....    | 64        |
| 4.6  | Help.....           | 64        |
| <b>Appendix A: Configuring the PC.....</b> |                     | <b>66</b> |
| <b>Appendix B: Troubleshooting .....</b>   |                     | <b>71</b> |


## About This Guide

This guide is a complement to Quick Installation Guide. The Quick Installation Guide instructs you on quick Internet setup, and this guide provides details of each function and shows you the way to configure these functions appropriate to your needs.

When using this guide, please notice that features of the router may vary slightly depending on the model and software version you have, and on your location, language, and internet service provider. All screenshots, images, parameters and descriptions documented in this guide are used for demonstration only.

### Conventions

In this guide, the following conventions are used:

| Convention   | Description   |
|--|---|
| <u>Teal Underlined</u>   | Hyperlinks are teal underlined. You can click to redirect to a website or a specific section.   |
| Teal   | Contents to be emphasized and texts on the web page are in teal, including the menus, items, buttons, etc.  |
| →  | The menu structures to show the path to load the corresponding page. For example, <a href="#">Access Management</a> → <a href="#">Filter</a> means the Filtering function page is under the Access Management menu. |
|  Note | Ignoring this type of note might result in a malfunction or damage to the device.   |

### More Info

The latest software, management app and utility can be found at the Download Center page at <http://www.tp-link.com/support>.

The Quick Installation Guide can be found where you find this guide or inside the package of the router.

Specifications can be found on the product page at <http://www.tp-link.com>.

A Technical Support Forum is provided for you to discuss our products at <http://forum.tp-link.com>.

Our Technical Support contact information can be found at Contact Technical Support page at [www.tp-link.com/support](http://www.tp-link.com/support).

## Chapter 1 Introduction

### 1.1 Product Overview

TP-Link's Modem Router is a combined wired/wireless network connection device with integrated wireless router and DSL modem, reducing hassle of configuration and saving space.

With ADSL and WAN, the modem router is compatible with ADSL connections and fiber/cable access.

With Ethernet ports and antennas, the modem router provides wired and wireless access for multiple computers and mobile devices.

With various features and functions, the modem router is the perfect hub of your home or business network.




### 1.2 Product Appearance




#### 1.2.1 The Front Panel

The modem router's LEDs are located on the front panel (View from left to right).



#### LED Explanation:


| Name   | Status | Indication  |
|--|--------|---|
|  (Power)    | On     | The modem router is powered on.   |
|  | Off    | Power is off.   |
|  (ADSL)     | On     | ADSL synchronization is established.  |
|  | Flash  | ADSL synchronization is in progress.  |
|  | Off    | ADSL synchronization fails. Please refer to <a href="#">Note 1</a> for troubleshooting.   |
|  (INTERNET) | On     | Internet connection is available.   |
|  | Flash  | There is data being transmitted or received via the internet.   |
|  | Off    | No successful internet connection is available or the modem router is operating in Bridge mode. Please refer to <a href="#">Note 2</a> for troubleshooting. |

| Name  | Status | Indication  |
|---|--------|---|
|  (WLAN)    | On     | The wireless function is enabled.   |
|   | Flash  | The modem router is sending or receiving data over the wireless network.  |
|   | Off    | The wireless function is disabled.  |
|  (WPS)     | On     | A wireless device has been successfully added to the network by WPS function.   |
|   | Flash  | A wireless device is trying to connect to the network via WPS. This process may take up to 2 minutes.   |
|   | Off    | The WPS function is disabled or the wireless device fails to be added to the network in 2 minutes after WPS function is enabled. Please refer to <a href="#">WPS Settings</a> for more information. |
|  (LAN 1-4) | On     | The corresponding LAN port is connected.  |
|   | Flash  | The modem router is sending or receiving data over this LAN port.   |
|   | Off    | The corresponding LAN port is not connected.  |

 **Note:**

1. If the ADSL LED is off, please check your internet connection first. Refer to [2.2 Connecting the Modem Router](#) for more information about how to make internet connection correctly. If you have already made a right connection, please contact your ISP to make sure if your internet service is available now.
2. If the Internet LED is off, please check your ADSL LED first. If your ADSL LED is also off, please refer to [Note 1](#). If your ADSL LED is on, please check your internet configuration. You may need to check this part of information with your ISP and make sure everything has been input correctly. Refer to [4.1.1 Device Info](#) and [4.2.1 Internet](#) for more information.

## 1.2.2 The Back Panel

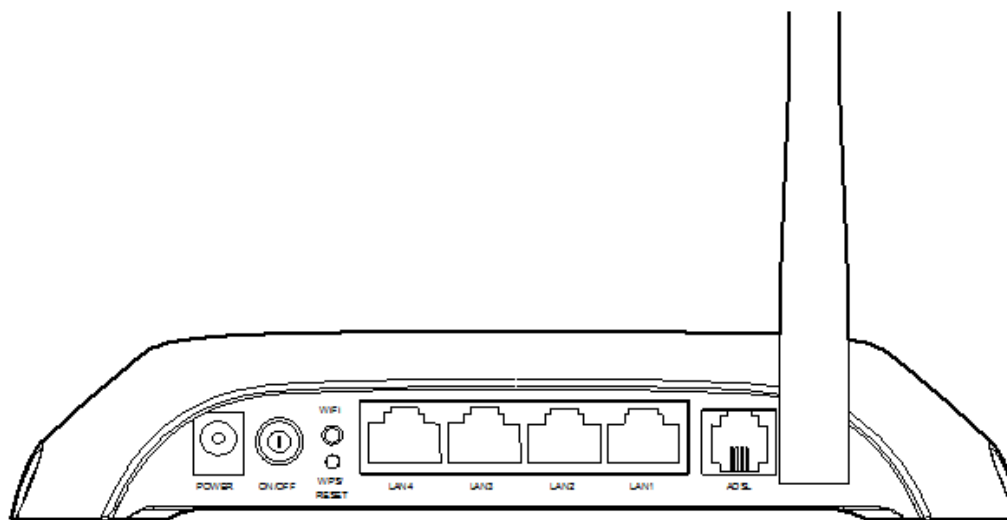

| Item      | Description   |
|-----------|---|
| POWER     | For connecting the modem router to power socket via the provided power adapter.   |
| ON/OFF    | The switch for the power.   |
| WIFI      | The button for the wireless function.   |
| WPS/RESET | The switch for the WPS and Reset function. Please refer to the note below for more information.   |
| LAN       | Through the port, you can connect the modem router to your PC or the other Ethernet network devices.  |
| ADSL      | Through the port, you can connect the modem router with the telephone. Or you can connect them by an external separate splitter. For details, please refer to <a href="#">2.2 Connecting the Modem Router</a> . |
| Antennas  | Used for wireless operation and data transmit.  |

### Note:

If your client devices, such as wireless adapters, support Wi-Fi Protected Setup, then you can press this button for about two seconds to quickly establish a connection between the router and client devices and automatically configure wireless security for your wireless network. For details, please refer to [WPS Settings](#).

If you press this button for about 8 seconds, you will enable the RESET function. Refer to [Appendix B: Troubleshooting](#) about how to reset the modem router to factory defaults.

## Chapter 2 Hardware Installation


### 2.1 Positioning the Modem Router

With the modem router, you can access your network from anywhere within the wireless network coverage. However, the wireless signal strength and coverage vary depending on the actual environment of your modem router. Many obstacles may limit the range of the wireless signal, for example, concrete structures or thick walls.

For your security and best Wi-Fi performance, please:

- Do NOT locate the modem router in a place where it will be exposed to moisture or excessive heat.
- Keep away from the strong electromagnetic radiation and the device of electromagnetic sensitive.
- Place the modem router in a location where it can be connected to the various devices as well as to a power source.
- Make sure the cables and power cord are safely placed out of the way to avoid a tripping hazard.

Generally, the modem router is placed on a horizontal surface, such as on a shelf or desktop. The device also can be mounted on the wall as shown in the following figure.

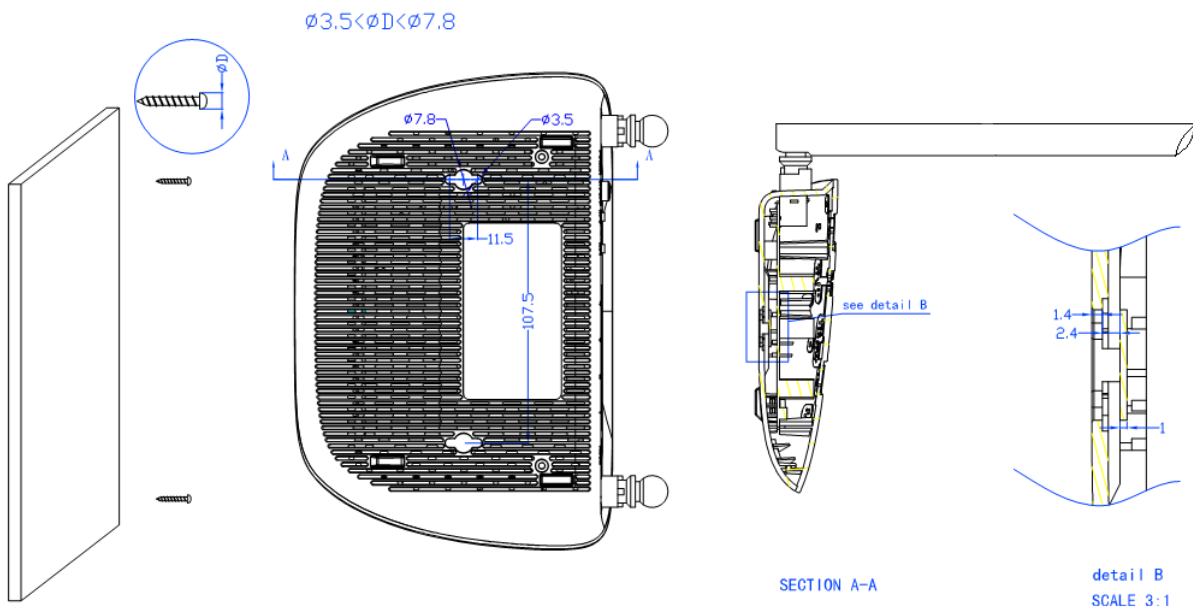


**Note:**

The diameter of the screw,  $3.5\text{mm} < D < 7.8\text{mm}$ , and the distance of two screws is 107.5mm. The screw that project from the wall need around 4mm based, and the length of the screw need to be at least 20mm to withstand the weight of the product.



## 2.2 Connecting the Modem Router

Before installing the device, please make sure your broadband service provided by your ISP is available. If there is any problem, please contact your ISP. Before cable connection, cut off the power supply and keep your hands dry. You can follow the steps below to install it.

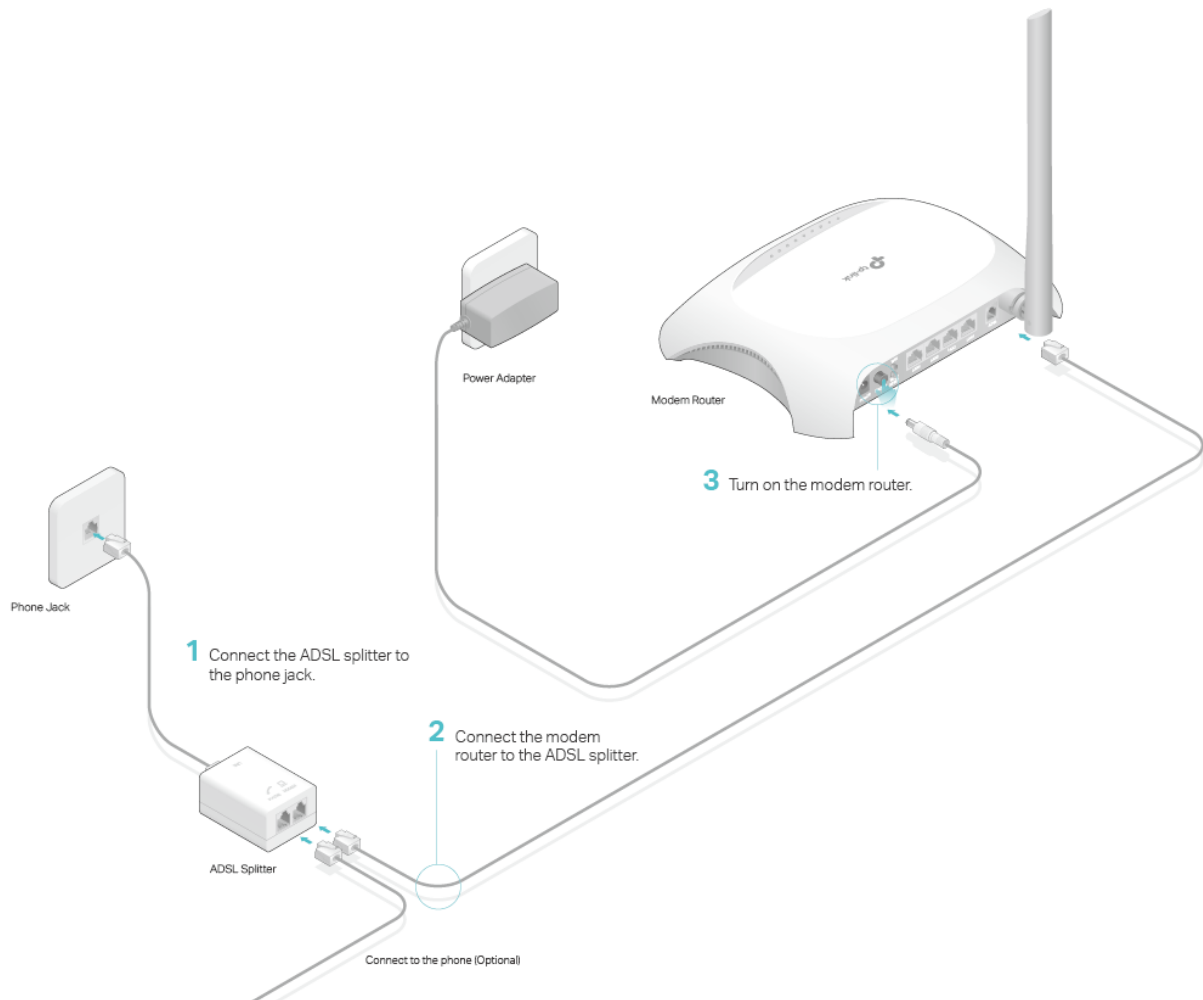

### Step 1: Connect the ADSL Line.

**Method One:** Directly connect the modem router to the phone jack with the ADSL line.

**Method Two:** Connect the modem router to the phone jack via a separate splitter. External splitter can divide the data and voice, and then you can access the internet and make calls at the same time. The external splitter has three ports:

- LINE: Connect to the wall jack
- PHONE: Connect to the phone sets
- MODEM: Connect to the ADSL port of the modem router

### Step 2: Connect your computer to the modem router.

### Method One: Wired

Connect the computer to a LAN port on your modem router with an Ethernet cable.

### Method Two: Wireless

Click the network icon of your computer or go to Wi-Fi Setting of your smart device, then use the default SSID (Wireless Network Name) and Wireless Password printed on the product label of the modem router to join the network.

### Method Three: Via the WPS button

Wireless devices that support WPS, including Android phones, tablets, most USB network cards, can be connected to your router through this method. (WPS is not supported by iOS devices.)

#### Note:

The WPS function cannot be configured if the wireless function of the modem router is disabled. Also, the WPS function will be disabled if your wireless encryption is WEP. Please make sure the wireless function is enabled and is configured with the appropriate encryption before configuring the WPS.

- 1) Tap the WPS icon on the device's screen.
- 2) Immediately press the WPS button on your modem router.
- 3) The WPS LED flashes for about two minutes during the WPS process.
- 4) When the WPS LED is on, the client device has successfully connected to the modem router.

**Step 3:** Attach the power adapter. The electrical outlet shall be installed near the device and shall be easily accessible.


## Chapter 3 Quick Start

This chapter will show you how to configure the basic functions of your modem router using [Quick Setup Wizard](#) within minutes.

1. If the TCP/IP Protocol on your computer is set to the static (fixed) IP address, you need to change it to obtain an IP address automatically. Please refer to [Appendix A: Configuring the PC](#) for more detailed instruction.
2. Once your host PC is properly configured, launch a web browser and go to <http://tplinkmodem.net> or 192.168.1.1.



3. Enter the default Username [admin](#) and the default Password [admin](#), then click [Log in](#) or press [Enter](#) to access to the [Quick Setup](#).

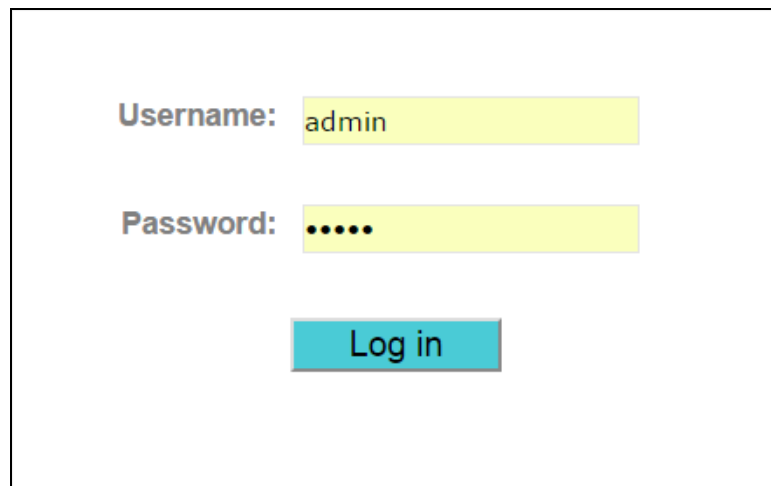
A screenshot of a login form. It features two input fields: 'Username:' with the text 'admin' entered, and 'Password:' with five dots representing a masked password. Below these fields is a blue button labeled 'Log in'.

 **Note:**


A [Quick Setup](#) window will pop up automatically when logging for the first time; otherwise, select [Quick Start](#) from the menu and click [RUN WIZARD](#).

4. Follow the steps below to set up your modem router quickly.

Step 1: Click **NEXT** to continue.

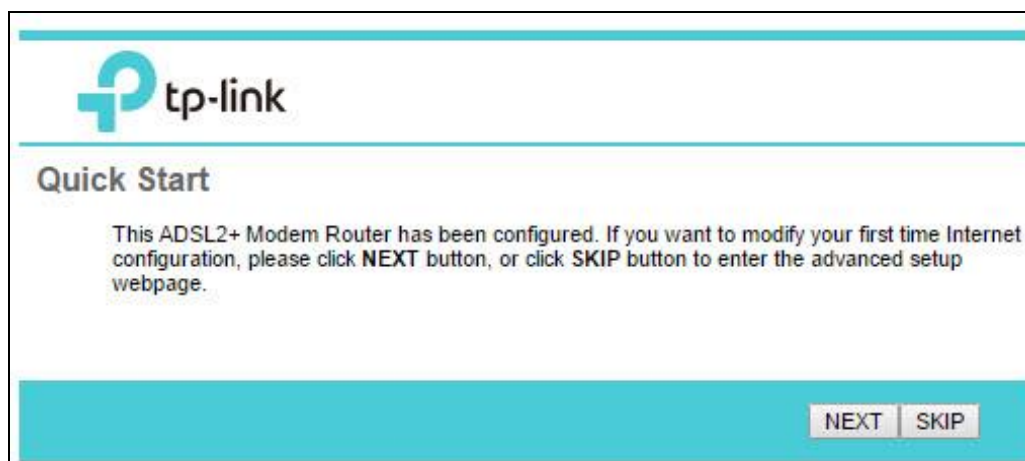

Step 2: Configure the time zone for the modem router, and then click **NEXT**.

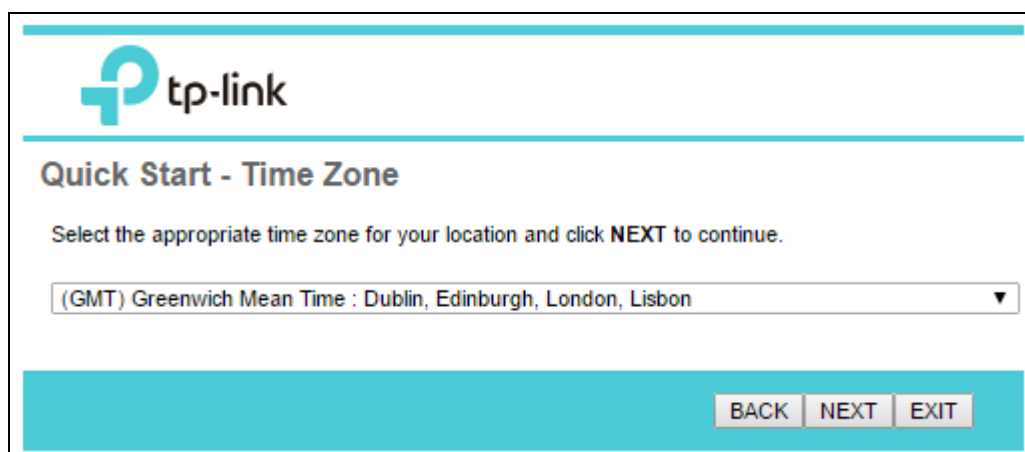

Step 3: Select your country and ISP from the dropdown list. Then select your ISP Connection type and complete the corresponding settings with the information provided by your ISP and click **NEXT**. Here we take **PPPoE/PPPoA** mode for example.

**tp-link**

## Quick Start - Internet Settings

You can select your country and ISP to quickly configure the Internet settings.

Country:

ISP:

ISP Connection Type:

Username:

Password:

VPI:  (0~255)

VCI:  (32~65535)

Connection Type:

Step 4: Configure the rules for the Wlan, and click [NEXT](#).

**tp-link**

## Quick Start - Wlan

You may enable/disable Wlan, change the Wlan SSID and Authentication type in this page. Click **NEXT** to continue.

Access Point :  Activated  Deactivated

---

SSID :

Broadcast SSID :  Yes  No

Authentication Type :

---


Encryption :

Pre-Shared Key :  (8~63  
ASCII characters or 64 hexadecimal characters)

Note:

If the Access Point is activated, the wireless function will be available even without the external antenna because of an additional printed antenna. To adopt the wireless security protection measures, please refer to section [4.2.3 Wireless](#).

Step 5: Click **SAVE** to finish the Quick Start.

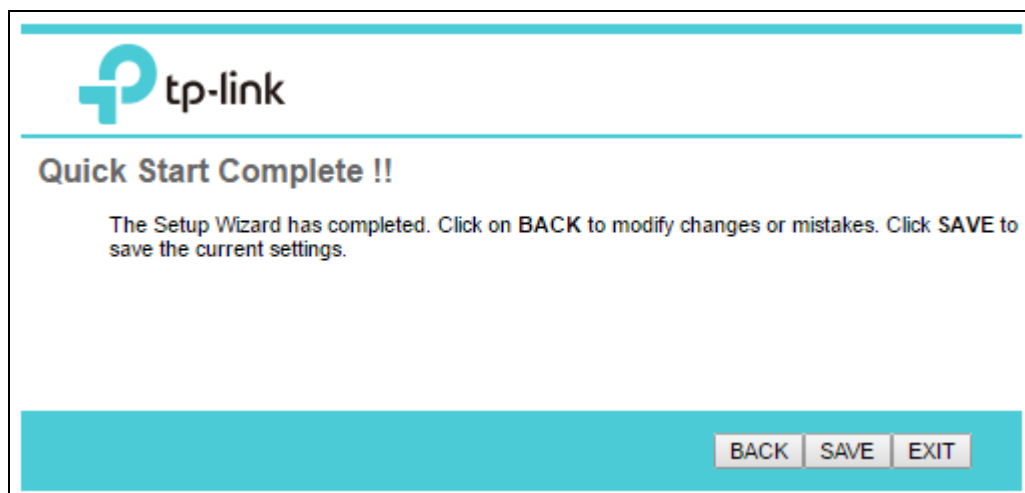

## Chapter 4 Software Configuration

This User Guide recommends using the [Quick Installation Guide](#) for first-time installation. For advanced users, if you want to know more about this device and make use of its functions adequately, maybe you will get help from this chapter to configure the advanced settings through the web management page to configure and manage the device.

After your successful login, you will see the main menus of the web management page and submenus with detailed configurations or status information will be available after you click one of the main menus. To apply any settings you have altered on the page, please click [SAVE](#) to make the settings take effect.

### 4.1 Status

Choose [Status](#), and you will see the following submenus: [Device Info](#), [System Log](#) and [Statistics](#). Click any of them, and you can configure the corresponding function.

|                             |                                 |                                |                                   |                             |                        |                      |
|-----------------------------|---------------------------------|--------------------------------|-----------------------------------|-----------------------------|------------------------|----------------------|
| <a href="#">Quick Start</a> | <a href="#">Interface Setup</a> | <a href="#">Advanced Setup</a> | <a href="#">Access Management</a> | <a href="#">Maintenance</a> | <a href="#">Status</a> | <a href="#">Help</a> |
| <a href="#">Device Info</a> | <a href="#">System Log</a>      | <a href="#">Statistics</a>     |                                   |                             |                        |                      |

#### 4.1.1 Device Info

Go to [Status](#) → [Device Info](#), and you can view the device information, including LAN, Wireless, WAN and ADSL. The information will vary depending on the settings of the modem router configured on the Interface Setup screen.

|               |                    |                 |                |                   |             |               |      |
|---------------|--------------------|-----------------|----------------|-------------------|-------------|---------------|------|
| <b>Status</b> | Quick Start        | Interface Setup | Advanced Setup | Access Management | Maintenance | <b>Status</b> | Help |
|               | <b>Device Info</b> | System Log      | Statistics     |                   |             |               |      |


---

| <b>Device Information</b> | Firmware Version : 3.0.0 Build 160825 Rel.10321<br>MAC Address : d8:5d:4c:00:00:06   |            |            |            |            |               |            |               |        |                    |      |     |     |             |     |        |      |            |      |     |      |         |     |        |      |       |      |     |     |     |     |        |      |      |       |     |     |     |     |        |      |      |      |     |     |     |     |        |      |      |      |     |     |     |     |        |      |      |      |     |     |     |     |        |      |
|---------------------------|--|------------|------------|------------|------------|---------------|------------|---------------|--------|--------------------|------|-----|-----|-------------|-----|--------|------|------------|------|-----|------|---------|-----|--------|------|-------|------|-----|-----|-----|-----|--------|------|------|-------|-----|-----|-----|-----|--------|------|------|------|-----|-----|-----|-----|--------|------|------|------|-----|-----|-----|-----|--------|------|------|------|-----|-----|-----|-----|--------|------|
| <b>LAN</b>                | IP Address : 192.168.1.23<br>Subnet Mask : 255.255.255.0<br>DHCP Server : Enabled  |            |            |            |            |               |            |               |        |                    |      |     |     |             |     |        |      |            |      |     |      |         |     |        |      |       |      |     |     |     |     |        |      |      |       |     |     |     |     |        |      |      |      |     |     |     |     |        |      |      |      |     |     |     |     |        |      |      |      |     |     |     |     |        |      |
| <b>Wireless</b>           | Current Connected Wireless Clients number is 0 <input type="button" value="Refresh"/>  |            |            |            |            |               |            |               |        |                    |      |     |     |             |     |        |      |            |      |     |      |         |     |        |      |       |      |     |     |     |     |        |      |      |       |     |     |     |     |        |      |      |      |     |     |     |     |        |      |      |      |     |     |     |     |        |      |      |      |     |     |     |     |        |      |
|                           | <table border="1"> <thead> <tr> <th>ID</th> <th>MAC</th> </tr> </thead> <tbody> <tr> <td> </td> <td> </td> </tr> </tbody> </table>   | ID         | MAC        |            |            |               |            |               |        |                    |      |     |     |             |     |        |      |            |      |     |      |         |     |        |      |       |      |     |     |     |     |        |      |      |       |     |     |     |     |        |      |      |      |     |     |     |     |        |      |      |      |     |     |     |     |        |      |      |      |     |     |     |     |        |      |
| ID                        | MAC  |            |            |            |            |               |            |               |        |                    |      |     |     |             |     |        |      |            |      |     |      |         |     |        |      |       |      |     |     |     |     |        |      |      |       |     |     |     |     |        |      |      |      |     |     |     |     |        |      |      |      |     |     |     |     |        |      |      |      |     |     |     |     |        |      |
|                           |  |            |            |            |            |               |            |               |        |                    |      |     |     |             |     |        |      |            |      |     |      |         |     |        |      |       |      |     |     |     |     |        |      |      |       |     |     |     |     |        |      |      |      |     |     |     |     |        |      |      |      |     |     |     |     |        |      |      |      |     |     |     |     |        |      |
| <b>WAN</b>                | <table border="1"> <thead> <tr> <th>PVC</th> <th>VPI/VCI</th> <th>IP Address</th> <th>Subnet</th> <th>GateWay</th> <th>DNS Server</th> <th>Encapsulation</th> <th>Status</th> </tr> </thead> <tbody> <tr> <td>PVC0</td> <td>1/32</td> <td>N/A</td> <td>N/A</td> <td>N/A</td> <td>N/A</td> <td>Bridge</td> <td>Down</td> </tr> <tr> <td>PVC1</td> <td>0/33</td> <td>N/A</td> <td>N/A</td> <td>N/A</td> <td>N/A</td> <td>Bridge</td> <td>Down</td> </tr> <tr> <td>PVC2</td> <td>0/35</td> <td>N/A</td> <td>N/A</td> <td>N/A</td> <td>N/A</td> <td>Bridge</td> <td>Down</td> </tr> <tr> <td>PVC3</td> <td>0/100</td> <td>N/A</td> <td>N/A</td> <td>N/A</td> <td>N/A</td> <td>Bridge</td> <td>Down</td> </tr> <tr> <td>PVC4</td> <td>8/35</td> <td>N/A</td> <td>N/A</td> <td>N/A</td> <td>N/A</td> <td>Bridge</td> <td>Down</td> </tr> <tr> <td>PVC5</td> <td>8/48</td> <td>N/A</td> <td>N/A</td> <td>N/A</td> <td>N/A</td> <td>Bridge</td> <td>Down</td> </tr> <tr> <td>PVC6</td> <td>0/38</td> <td>N/A</td> <td>N/A</td> <td>N/A</td> <td>N/A</td> <td>Bridge</td> <td>Down</td> </tr> </tbody> </table> | PVC        | VPI/VCI    | IP Address | Subnet     | GateWay       | DNS Server | Encapsulation | Status | PVC0               | 1/32 | N/A | N/A | N/A         | N/A | Bridge | Down | PVC1       | 0/33 | N/A | N/A  | N/A     | N/A | Bridge | Down | PVC2  | 0/35 | N/A | N/A | N/A | N/A | Bridge | Down | PVC3 | 0/100 | N/A | N/A | N/A | N/A | Bridge | Down | PVC4 | 8/35 | N/A | N/A | N/A | N/A | Bridge | Down | PVC5 | 8/48 | N/A | N/A | N/A | N/A | Bridge | Down | PVC6 | 0/38 | N/A | N/A | N/A | N/A | Bridge | Down |
| PVC                       | VPI/VCI  | IP Address | Subnet     | GateWay    | DNS Server | Encapsulation | Status     |               |        |                    |      |     |     |             |     |        |      |            |      |     |      |         |     |        |      |       |      |     |     |     |     |        |      |      |       |     |     |     |     |        |      |      |      |     |     |     |     |        |      |      |      |     |     |     |     |        |      |      |      |     |     |     |     |        |      |
| PVC0                      | 1/32   | N/A        | N/A        | N/A        | N/A        | Bridge        | Down       |               |        |                    |      |     |     |             |     |        |      |            |      |     |      |         |     |        |      |       |      |     |     |     |     |        |      |      |       |     |     |     |     |        |      |      |      |     |     |     |     |        |      |      |      |     |     |     |     |        |      |      |      |     |     |     |     |        |      |
| PVC1                      | 0/33   | N/A        | N/A        | N/A        | N/A        | Bridge        | Down       |               |        |                    |      |     |     |             |     |        |      |            |      |     |      |         |     |        |      |       |      |     |     |     |     |        |      |      |       |     |     |     |     |        |      |      |      |     |     |     |     |        |      |      |      |     |     |     |     |        |      |      |      |     |     |     |     |        |      |
| PVC2                      | 0/35   | N/A        | N/A        | N/A        | N/A        | Bridge        | Down       |               |        |                    |      |     |     |             |     |        |      |            |      |     |      |         |     |        |      |       |      |     |     |     |     |        |      |      |       |     |     |     |     |        |      |      |      |     |     |     |     |        |      |      |      |     |     |     |     |        |      |      |      |     |     |     |     |        |      |
| PVC3                      | 0/100  | N/A        | N/A        | N/A        | N/A        | Bridge        | Down       |               |        |                    |      |     |     |             |     |        |      |            |      |     |      |         |     |        |      |       |      |     |     |     |     |        |      |      |       |     |     |     |     |        |      |      |      |     |     |     |     |        |      |      |      |     |     |     |     |        |      |      |      |     |     |     |     |        |      |
| PVC4                      | 8/35   | N/A        | N/A        | N/A        | N/A        | Bridge        | Down       |               |        |                    |      |     |     |             |     |        |      |            |      |     |      |         |     |        |      |       |      |     |     |     |     |        |      |      |       |     |     |     |     |        |      |      |      |     |     |     |     |        |      |      |      |     |     |     |     |        |      |      |      |     |     |     |     |        |      |
| PVC5                      | 8/48   | N/A        | N/A        | N/A        | N/A        | Bridge        | Down       |               |        |                    |      |     |     |             |     |        |      |            |      |     |      |         |     |        |      |       |      |     |     |     |     |        |      |      |       |     |     |     |     |        |      |      |      |     |     |     |     |        |      |      |      |     |     |     |     |        |      |      |      |     |     |     |     |        |      |
| PVC6                      | 0/38   | N/A        | N/A        | N/A        | N/A        | Bridge        | Down       |               |        |                    |      |     |     |             |     |        |      |            |      |     |      |         |     |        |      |       |      |     |     |     |     |        |      |      |       |     |     |     |     |        |      |      |      |     |     |     |     |        |      |      |      |     |     |     |     |        |      |      |      |     |     |     |     |        |      |
| <b>ADSL</b>               | ADSL Firmware Version : FwVer:3.24.13.0_MT7550 HwVer:T14.F7_13.0<br>Line State : Down<br>Modulation : N/A<br>Annex Mode : N/A  |            |            |            |            |               |            |               |        |                    |      |     |     |             |     |        |      |            |      |     |      |         |     |        |      |       |      |     |     |     |     |        |      |      |       |     |     |     |     |        |      |      |      |     |     |     |     |        |      |      |      |     |     |     |     |        |      |      |      |     |     |     |     |        |      |
|                           | <table border="1"> <thead> <tr> <th></th> <th>Downstream</th> <th>Upstream</th> <th></th> </tr> </thead> <tbody> <tr> <td>SNR Margin :</td> <td>N/A</td> <td>N/A</td> <td>db</td> </tr> <tr> <td>Line Attenuation :</td> <td>N/A</td> <td>N/A</td> <td>db</td> </tr> <tr> <td>Data Rate :</td> <td>N/A</td> <td>N/A</td> <td>kbps</td> </tr> <tr> <td>Max Rate :</td> <td>N/A</td> <td>N/A</td> <td>kbps</td> </tr> <tr> <td>POWER :</td> <td>N/A</td> <td>N/A</td> <td>dbm</td> </tr> <tr> <td>CRC :</td> <td>N/A</td> <td>N/A</td> <td></td> </tr> </tbody> </table>   |            | Downstream | Upstream   |            | SNR Margin :  | N/A        | N/A           | db     | Line Attenuation : | N/A  | N/A | db  | Data Rate : | N/A | N/A    | kbps | Max Rate : | N/A  | N/A | kbps | POWER : | N/A | N/A    | dbm  | CRC : | N/A  | N/A |     |     |     |        |      |      |       |     |     |     |     |        |      |      |      |     |     |     |     |        |      |      |      |     |     |     |     |        |      |      |      |     |     |     |     |        |      |
|                           | Downstream   | Upstream   |            |            |            |               |            |               |        |                    |      |     |     |             |     |        |      |            |      |     |      |         |     |        |      |       |      |     |     |     |     |        |      |      |       |     |     |     |     |        |      |      |      |     |     |     |     |        |      |      |      |     |     |     |     |        |      |      |      |     |     |     |     |        |      |
| SNR Margin :              | N/A  | N/A        | db         |            |            |               |            |               |        |                    |      |     |     |             |     |        |      |            |      |     |      |         |     |        |      |       |      |     |     |     |     |        |      |      |       |     |     |     |     |        |      |      |      |     |     |     |     |        |      |      |      |     |     |     |     |        |      |      |      |     |     |     |     |        |      |
| Line Attenuation :        | N/A  | N/A        | db         |            |            |               |            |               |        |                    |      |     |     |             |     |        |      |            |      |     |      |         |     |        |      |       |      |     |     |     |     |        |      |      |       |     |     |     |     |        |      |      |      |     |     |     |     |        |      |      |      |     |     |     |     |        |      |      |      |     |     |     |     |        |      |
| Data Rate :               | N/A  | N/A        | kbps       |            |            |               |            |               |        |                    |      |     |     |             |     |        |      |            |      |     |      |         |     |        |      |       |      |     |     |     |     |        |      |      |       |     |     |     |     |        |      |      |      |     |     |     |     |        |      |      |      |     |     |     |     |        |      |      |      |     |     |     |     |        |      |
| Max Rate :                | N/A  | N/A        | kbps       |            |            |               |            |               |        |                    |      |     |     |             |     |        |      |            |      |     |      |         |     |        |      |       |      |     |     |     |     |        |      |      |       |     |     |     |     |        |      |      |      |     |     |     |     |        |      |      |      |     |     |     |     |        |      |      |      |     |     |     |     |        |      |
| POWER :                   | N/A  | N/A        | dbm        |            |            |               |            |               |        |                    |      |     |     |             |     |        |      |            |      |     |      |         |     |        |      |       |      |     |     |     |     |        |      |      |       |     |     |     |     |        |      |      |      |     |     |     |     |        |      |      |      |     |     |     |     |        |      |      |      |     |     |     |     |        |      |
| CRC :                     | N/A  | N/A        |            |            |            |               |            |               |        |                    |      |     |     |             |     |        |      |            |      |     |      |         |     |        |      |       |      |     |     |     |     |        |      |      |       |     |     |     |     |        |      |      |      |     |     |     |     |        |      |      |      |     |     |     |     |        |      |      |      |     |     |     |     |        |      |

### 4.1.2 System Log

Go to [Status](#) → [System Log](#), and you can query the logs of the modem router.



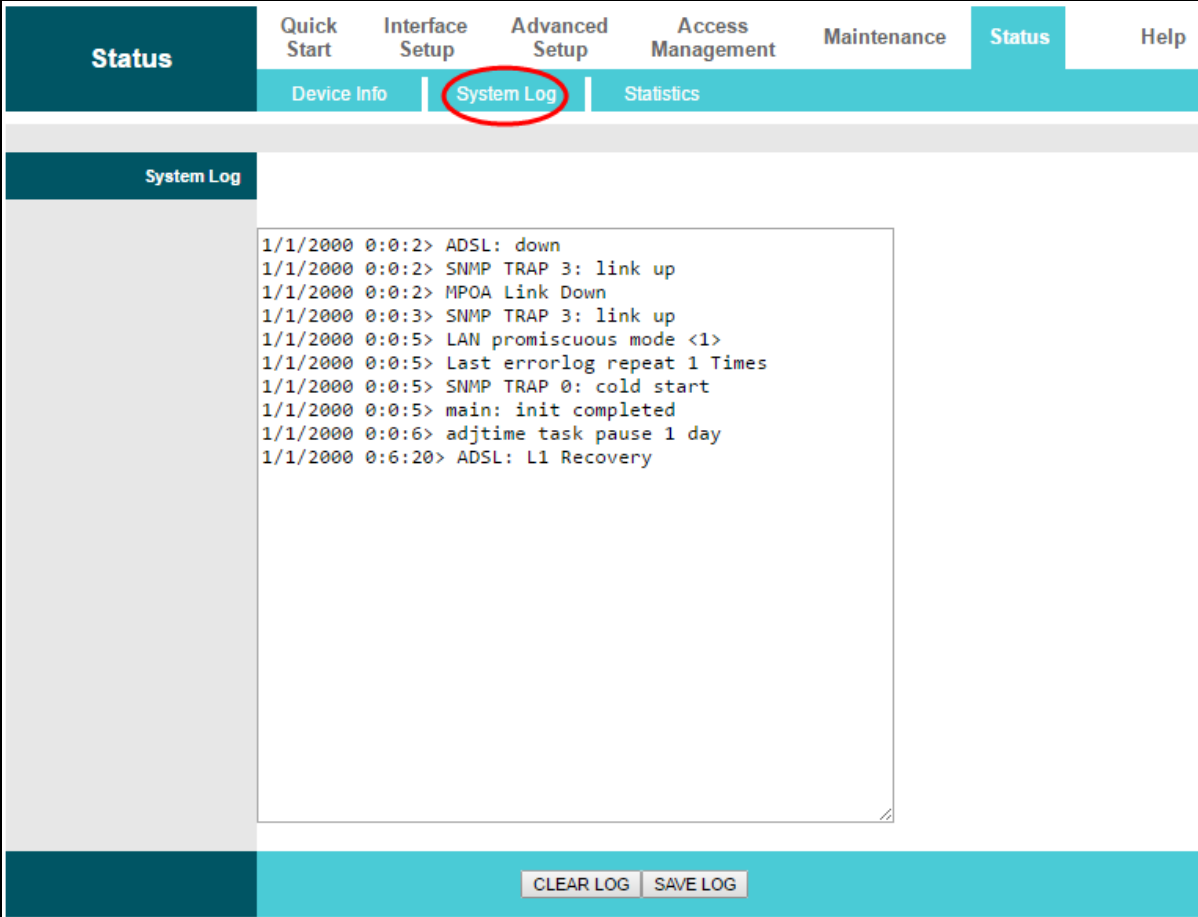

The screenshot displays the web interface of a TD-W8901N modem router. The top navigation bar includes 'Status', 'Quick Start', 'Interface Setup', 'Advanced Setup', 'Access Management', 'Maintenance', 'Status', and 'Help'. Below this, a secondary bar contains 'Device Info', 'System Log' (circled in red), and 'Statistics'. The main content area is titled 'System Log' and contains the following log entries:

```
1/1/2000 0:0:2> ADSL: down
1/1/2000 0:0:2> SNMP TRAP 3: link up
1/1/2000 0:0:2> MPOA Link Down
1/1/2000 0:0:3> SNMP TRAP 3: link up
1/1/2000 0:0:5> LAN promiscuous mode <1>
1/1/2000 0:0:5> Last errorlog repeat 1 Times
1/1/2000 0:0:5> SNMP TRAP 0: cold start
1/1/2000 0:0:5> main: init completed
1/1/2000 0:0:6> adjtime task pause 1 day
1/1/2000 0:6:20> ADSL: L1 Recovery
```

At the bottom of the log area, there are two buttons: 'CLEAR LOG' and 'SAVE LOG'.

The modem router can keep logs of all traffic. You can query the logs to find what happened to your modem router.

Click [CLEAR LOG](#) to clear the logs.

Click [SAVE LOG](#) to save the logs.

### 4.1.3 Statistics

Go to [Status](#) → [Statistics](#), and you can view the network traffic over Ethernet, ADSL and WLAN.

- **Interface:** You can select [Ethernet](#), [ADSL](#) or [WLAN](#) to view the corresponding network traffic over different ports.
- Select [Ethernet](#), and you will see the statistics table as below.

Interface :  Ethernet  ADSL  WLAN

| Transmit Statistics       |           | Receive Statistics        |            |
|---------------------------|-----------|---------------------------|------------|
| Transmit Frames           | 3,237     | Receive Frames            | 3,816      |
| Transmit Multicast Frames | 7,931     | Receive Multicast Frames  | 213,354    |
| Transmit total Bytes      | 4,968,824 | Receive total Bytes       | 59,682,544 |
| Transmit Collision        | 0         | Receive CRC Errors        | 0          |
| Transmit Error Frames     | 0         | Receive Under-size Frames | 0          |

Statistics Table:

|                            |                                  |   |
|----------------------------|----------------------------------|---|
| <b>Transmit Statistics</b> | <b>Transmit Frames</b>           | The frames transmitted over the Ethernet port.                                |
|                            | <b>Transmit Multicast Frames</b> | The multicast frames transmitted over the Ethernet port.                      |
|                            | <b>Transmit total Bytes</b>      | The total bytes transmitted over the Ethernet port.                           |
|                            | <b>Transmit Collision</b>        | The collision occurred over the Ethernet port when data is being transmitted. |
|                            | <b>Transmit Error Frames</b>     | The error frames over the Ethernet port when data is being transmitted.       |
| <b>Receive Statistics</b>  | <b>Receive Frames</b>            | The frames received over the Ethernet port.                                   |
|                            | <b>Receive Multicast Frames</b>  | The multicast frames received over the Ethernet port.                         |
|                            | <b>Receive total Bytes</b>       | The total bytes received over the Ethernet port.                              |
|                            | <b>Receive CRC Errors</b>        | The CRC errors occurred over the Ethernet port when data is being received.   |
|                            | <b>Receive Under-size Frames</b> | The Under-size frames received over the Ethernet port.                        |

- Select [ADSL](#), and you will see the statistics table as below.

|   |       |                            |     |
|---|-------|----------------------------|-----|
| Interface : <input type="radio"/> Ethernet <input checked="" type="radio"/> ADSL <input type="radio"/> WLAN |       |                            |     |
| <b>Transmit Statistics</b>  |       | <b>Receive Statistics</b>  |     |
| Transmit total PDUs   | 3,816 | Receive total PDUs         | 931 |
| Transmit total Error Counts   | 0     | Receive total Error Counts | 0   |

Statistics Table:

|                            |                                    |  |
|----------------------------|------------------------------------|--|
| <b>Transmit Statistics</b> | <b>Transmit total PDUs</b>         | The total PDUs transmitted over the ADSL port.                               |
|                            | <b>Transmit total Error Counts</b> | The total errors occurred over the ADSL port when data is being transmitted. |
| <b>Receive Statistics</b>  | <b>Receive total PDUs</b>          | The total PDUs transmitted over the ADSL port.                               |
|                            | <b>Receive total Error Counts</b>  | The total errors occurred over the ADSL port when data is being received.    |

- Select [WLAN](#), and you will see the statistics table as below.

|   |   |                           |         |
|---|---|---------------------------|---------|
| Interface : <input type="radio"/> Ethernet <input type="radio"/> ADSL <input checked="" type="radio"/> WLAN |   |                           |         |
| <b>Transmit Statistics</b>  |   | <b>Receive Statistics</b> |         |
| Tx Frames Count   | 0 | Rx Frames Count           | 957,018 |
| Tx Errors Count   | 0 | Rx Errors Count           | 0       |
| Tx Drops Count  | 0 | Rx Drops Count            | 2       |

Statistics Table:

|                            |                        |   |
|----------------------------|------------------------|---|
| <b>Transmit Statistics</b> | <b>Tx Frames Count</b> | The frames transmitted over the WLAN when wireless data is being transmitted. |
|                            | <b>Tx Errors Count</b> | The errors occurred over the WLAN when wireless data is being transmitted.    |
|                            | <b>Tx Drops Count</b>  | The drops occurred over the WLAN when wireless data is being transmitted.     |
| <b>Receive Statistics</b>  | <b>Rx Frames Count</b> | The frames received over the WLAN when wireless data is being transmitted.    |
|                            | <b>Rx Errors Count</b> | The errors occurred over the WLAN when wireless data is being received.       |
|                            | <b>Rx Drops Count</b>  | The drops occurred over the WLAN when wireless data is being received.        |

Click [REFRESH](#) to refresh immediately.

## 4.2 Interface Setup

Choose [Interface Setup](#), and you will see the following submenus: [Internet](#), [LAN](#), [Wireless](#), [6RD](#), [Guest Network](#). Click any of them, and you can configure the corresponding function.

|             |                 |                |                   |               |        |      |
|-------------|-----------------|----------------|-------------------|---------------|--------|------|
| Quick Start | Interface Setup | Advanced Setup | Access Management | Maintenance   | Status | Help |
| Internet    | LAN             | Wireless       | 6RD               | Guest Network |        |      |

### 4.2.1 Internet

Go to [Interface Setup](#) → [Internet](#), and you can configure the parameters for WAN ports in the following screen.

| Interface                           | Quick Start  | Interface Setup | Advanced Setup | Access Management | Maintenance   | Status | Help |
|-------------------------------------|--|-----------------|----------------|-------------------|---------------|--------|------|
|                                     | <b>Internet</b>  | LAN             | Wireless       | 6RD               | Guest Network |        |      |
| <b>ATM VC</b>                       | Virtual Circuit : PVC4 <input type="button" value="PVCs Summary"/><br>Status : <input checked="" type="radio"/> Activated <input type="radio"/> Deactivated<br>VPI : 8 (range: 0~255)<br>VCI : 35 (range: 32~65535)  |                 |                |                   |               |        |      |
| <b>QoS</b>                          | ATM QoS : UBR <input type="button" value="▼"/><br>PCR : 0 cells/second<br>SCR : 0 cells/second<br>MBS : 0 cells  |                 |                |                   |               |        |      |
| <b>IPv4/IPv6</b>                    | IP Version : <input checked="" type="radio"/> IPv4 <input type="radio"/> IPv4/IPv6 <input type="radio"/> IPv6  |                 |                |                   |               |        |      |
| <b>Encapsulation</b>                | ISP : <input type="radio"/> Dynamic IP Address<br><input type="radio"/> Static IP Address<br><input checked="" type="radio"/> PPPoA/PPPoE<br><input type="radio"/> Bridge Mode   |                 |                |                   |               |        |      |
| <b>PPPoE/PPPoA</b>                  | Servicename : <input type="text"/><br>Username : <input type="text"/><br>Password : <input type="text"/><br>Encapsulation : PPPoE LLC <input type="button" value="▼"/><br>PPP Authentication : AUTO <input type="button" value="▼"/><br>Bridge Interface : <input type="radio"/> Activated <input checked="" type="radio"/> Deactivated  |                 |                |                   |               |        |      |
| <b>Connection Setting</b>           | Connection : <input checked="" type="radio"/> Always On (Recommended)<br><input type="radio"/> Connect On-Demand (Close if idle for <input type="text" value="0"/> minutes)<br><input type="radio"/> Connect Manually<br>TCP MSS Option : TCP MSS(default: 1400) <input type="text" value="1400"/> bytes   |                 |                |                   |               |        |      |
| <b>IP Common Options</b>            | Default Route : <input checked="" type="radio"/> Yes <input type="radio"/> No  |                 |                |                   |               |        |      |
| <b>IPv4 Address</b>                 | Get IP Address : <input type="radio"/> Static <input checked="" type="radio"/> Dynamic<br>Static IP Address : <input type="text" value="0.0.0.0"/><br>IP Subnet Mask : <input type="text" value="0.0.0.0"/><br>Gateway : <input type="text" value="0.0.0.0"/><br>TCP MTU Option : TCP MTU(default: 1490) <input type="text" value="1490"/> bytes<br>NAT : <input type="button" value="Enable"/> <input type="button" value="▼"/><br>Dynamic Route : RIP2-B <input type="button" value="▼"/> Direction : Both <input type="button" value="▼"/><br>Multicast : IGMP v2 <input type="button" value="▼"/><br>MAC Clone : <input type="radio"/> Enabled <input checked="" type="radio"/> Disabled<br><input type="text" value="00:00:00:00:00:00"/> |                 |                |                   |               |        |      |
| <input type="button" value="SAVE"/> |  |                 |                |                   |               |        |      |

- **ATM VC:** ATM settings are used to connect to your ISP. Your ISP provides VPI (Virtual Path Identifier) and VCI (Virtual Channel Identifier) settings to you. In this device, you can totally setup 8 VCs on different encapsulations. If you apply 8 different virtual circuits from your ISP, you need to activate the VC to take effect. For PVCs management, you can use ATM QoS to setup each PVC traffic line's priority.

- **Virtual Circuit:** Select the VC number you want to setup, PVC0~PVC7.

- **PVCs Summary:** Click the button, and you can view the summary information about the PVCs.
  - **Status:** If you want to use a designed VC, you should activate it.
  - **VPI:** Identifies the virtual path between endpoints in an ATM network. The valid range is from 0 to 255. Please input the value provided by your ISP.
  - **VCI:** Identifies the virtual channel endpoints in an ATM network. The valid range is from 32 to 65535 (1 to 31 is reserved for well-known protocols). Please input the value provided by your ISP.
  - **ATM QoS:** Select the Quality of Service types for this Virtual Circuit, including CBR (Constant Bit Rate), UBR (Unspecified Bit Rate) and VBR (Variable Bit Rate). These QoS types are all controlled by the parameters specified below, including PCR (Peak Cell Rate), SCR (Sustained Cell Rate) and MBS (Maximum Burst Size). Please configure them according to your needs.
- **IPv4/IPv6:** Select the version of IP.
- **Encapsulation:** There are four connection types: Dynamic IP Address, Static IP Address, PPPoA/PPPoE and Bridge Mode. Please choose the designed type that you want to use. After that, you should follow the configuration below to proceed.

### 1) Dynamic IP Address

Select this option if your ISP provides you an IP address automatically. This option is typically used for Cable services. Please enter the Dynamic IP information accordingly.

|   |                    |
|---|--------------------|
| ISP : <input checked="" type="radio"/> Dynamic IP Address                                       |                    |
| <input type="radio"/> Static IP Address   |                    |
| <input type="radio"/> PPPoA/PPPoE   |                    |
| <input type="radio"/> Bridge Mode   |                    |
| Encapsulation : 1483 Bridged IP LLC ▼   |                    |
| Bridge Interface : <input type="radio"/> Activated <input checked="" type="radio"/> Deactivated |                    |
| Default Route : <input checked="" type="radio"/> Yes <input type="radio"/> No                   |                    |
| TCP MTU Option : TCP MTU(default:1500) 1500 bytes   |                    |
| NAT : Enable ▼  |                    |
| Dynamic Route : RIP2-B ▼  | Direction : Both ▼ |
| Multicast : IGMP v2 ▼   |                    |
| MAC Clone : <input checked="" type="radio"/> Enabled <input type="radio"/> Disabled             |                    |
| 00:00:00:00:00:00   |                    |

- **Encapsulation:** Select the encapsulation mode for the Dynamic IP Address. You can leave it default.
- **Bridge Interface:** Activate the option, and the modem router can also work in Bridge mode.

- **Default Route:** If enable this function, the current PVC will be considered as the default gateway to internet from this device.
- **TCP MTU Option:** Enter the TCP MTU as your desire.
- **NAT:** Select this option to Enable/Disable the NAT (Network Address Translation) function for this VC. The NAT function can be activated or deactivated per PVC basis.
- **Dynamic Route:** Select this option to specify the RIP (Routing Information protocol) version for WAN interface, including [RIP1](#), [RIP2-B](#) and [RIP2-M](#). RIP2-B and RIP2-M are both sent in RIP2 format. The difference is that RIP2-M using Multicast, while RIP2-B using Broadcast format.
- **Direction:** Select this option to specify the RIP direction. [None](#) is for disabling the RIP function. [Both](#) means the ADSL modem router will periodically send routing information and accept routing information, and then incorporate them into routing table. [IN only](#) means the ADSL modem router will only accept but will not send RIP packet. [OUT only](#) means the ADSL modem router will only send but will not accept RIP packet.
- **Multicast:** Select IGMP version, or disable the function. IGMP (Internet Group Multicast Protocol) is a session-layer protocol used to establish membership in a multicast group. The ADSL ATU-R supports both IGMP version 1 ([IGMP v1](#)), [IGMP v2](#) and [IGMP v3](#). Select [Disabled](#) to disable it.
- **Mac Clone:** ISP just permits only one computer with the authenticated MAC address to access the internet. In this case, you can enable MAC Clone function to allow more computers to access the internet via the same account.

## 2) Static IP Address

Select this option if your ISP provides static IP information to you. You should set Static IP Address, IP Subnet Mask, and Gateway address in the screen below.

|  |
|--|
| IP Version : <input checked="" type="radio"/> IPv4 <input type="radio"/> IPv4/IPv6 <input type="radio"/> IPv6  |
| ISP : <input type="radio"/> Dynamic IP Address<br><input checked="" type="radio"/> Static IP Address<br><input type="radio"/> PPPoA/PPPoE<br><input type="radio"/> Bridge Mode   |
| Encapsulation : 1483 Bridged IP LLC ▼<br>Bridge Interface : <input type="radio"/> Activated <input checked="" type="radio"/> Deactivated<br>Default Route : <input checked="" type="radio"/> Yes <input type="radio"/> No<br>TCP MTU Option : TCP MTU(default: 1500) 1500 bytes    |
| Static IP Address : 0.0.0.0<br>IP Subnet Mask : 0.0.0.0<br>Gateway : 0.0.0.0<br>NAT : Enable ▼<br>Dynamic Route : RIP2-B ▼ Direction : Both ▼<br>Multicast : IGMP v2 ▼<br>MAC Clone : <input checked="" type="radio"/> Enabled <input type="radio"/> Disabled<br>00:00:00:00:00:00 |

 **Note:**

Each IP address entered in the fields must be in the appropriate IP form, which is four IP octets separated by a dot (x.x.x.x), such as 192.168.1.100. The modem router will not accept the IP address if it is not in this format.

### 3) PPPoA/PPPoE

Select this option if your ISP requires you to use a PPPoE connection. This option is typically used for DSL services. Select Dynamic PPPoE to obtain an IP address automatically for your PPPoE connection. Select Static PPPoE to use a static IP address for your PPPoE connection. Please enter the information accordingly.




|  |
|--|
| ISP : <input type="radio"/> Dynamic IP Address<br><input type="radio"/> Static IP Address<br><input checked="" type="radio"/> PPPoA/PPPoE<br><input type="radio"/> Bridge Mode   |
| Servicename : <input type="text"/><br>Username : <input type="text"/><br>Password : <input type="text"/><br>Encapsulation : PPPoE LLC ▾<br>PPP Authentication : AUTO ▾<br>Bridge Interface : <input type="radio"/> Activated <input checked="" type="radio"/> Deactivated  |
| Connection : <input checked="" type="radio"/> Always On (Recommended)<br><input type="radio"/> Connect On-Demand (Close if idle for <input type="text" value="0"/> minutes)<br><input type="radio"/> Connect Manually<br>TCP MSS Option : TCP MSS(default:1400) <input type="text" value="1400"/> bytes  |
| Default Route : <input checked="" type="radio"/> Yes <input type="radio"/> No  |
| Get IP Address : <input type="radio"/> Static <input checked="" type="radio"/> Dynamic<br>Static IP Address : <input type="text" value="0.0.0.0"/><br>IP Subnet Mask : <input type="text" value="0.0.0.0"/><br>Gateway : <input type="text" value="0.0.0.0"/><br>TCP MTU Option : TCP MTU(default:1480) <input type="text" value="1480"/> bytes<br>NAT : Enable ▾<br>Dynamic Route : RIP2-B ▾ Direction : Both ▾<br>Multicast : IGMP v2 ▾<br>MAC Clone : <input checked="" type="radio"/> Enabled <input type="radio"/> Disabled<br><input type="text" value="00:00:00:00:00:00"/> |

- **Servicename:** Enter a name to mark current connection, or you can leave it blank.
- **Username:** Enter your username for your PPPoA/PPPoE connection.
- **Password:** Enter your password for your PPPoA/PPPoE connection.
- **Encapsulation:** For both PPPoA and PPPoE connection, you need to specify the type of Multiplexing, either LLC or VC Mux.
- **Bridge Interface:** Activate the option, and the modem router can also work in Bridge mode.
- **Connection:** For PPPoA/PPPoE connection, you can select [Always On](#) or [Connect On-Demand](#) or [Connect Manually](#). Connect On-Demand is dependent on the traffic. If there is no traffic (or [Idle](#)) for a pre-specified period of time, the connection will tear down automatically. And once there is traffic send or receive, the connection will be automatically on.
- **TCP MSS Option:** Enter the TCP MSS as your desire.
- **Default Route:** You should select [Yes](#) to configure the PVC as the default gateway to internet from this device.
- **Get IP Address:** Select [Static](#) or [Dynamic](#). For PPPoA/PPPoE connection, you need to specify the public IP address for this ADSL modem router. The IP address can be either dynamically (via DHCP) or given IP address provided by your ISP. For Static IP, you need to specify the IP address, Subnet Mask and Gateway IP address.

#### 4) Bridge Mode

If you select this type of connection, the modem can be configured to act as a bridging device between your LAN and your ISP. Bridges are devices that enable two or more networks to communicate as if they are two segments of the same physical LAN.

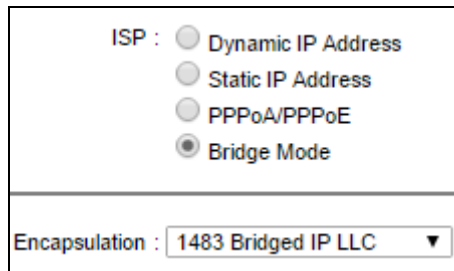

The image shows a configuration window for ISP settings. It contains four radio button options: 'Dynamic IP Address', 'Static IP Address', 'PPPoA/PPPoE', and 'Bridge Mode'. The 'Bridge Mode' option is selected. Below these options is a dropdown menu labeled 'Encapsulation' with the value '1483 Bridged IP LLC'.

 Note:

After you finish the internet configuration, please click [SAVE](#) to make the settings take effect.

#### 4.2.2 LAN

Go to [Interface Setup](#) → [LAN](#), and you will see the LAN screen. Please configure the parameters for LAN ports according to the descriptions below.

The screenshot shows the 'Interface Setup' page for the LAN interface. The 'LAN' tab is highlighted with a red circle. The configuration is organized into several sections:

- Router Local IP:**
  - IP Address: 192.168.1.23
  - IP Subnet Mask: 255.255.255.0
  - Dynamic Route: RIP2-B (selected), Direction: Both
  - Multicast: IGMP v2
  - IGMP Snoop: Disabled (selected), Enabled
  - MldSnoop: Disabled (selected), Enabled
- DHCP:**
  - DHCP: Disabled, Enabled (selected), Relay
- DHCP Server:**
  - Starting IP Address: 192.168.1.100 (with 'Current Pool Summary' button)
  - IP Pool Count: 101
  - Lease Time: 259200 seconds (0 sets to default value of 259200)
  - Physical Ports: 1, 2, 3, 4 (all checked)
- DHCP Table:**

| Hostname        | IP Address    | MAC Address       | Status | Expire Time     |
|-----------------|---------------|-------------------|--------|-----------------|
|                 | 192.168.1.105 | Manual Config     | Static |                 |
| Xuande-iPhone   | 192.168.1.100 | D0:03:4B:A7:0D:B8 | Auto   | 2days, 4:7:33   |
| xihuannetaiyang | 192.168.1.101 | A4:F1:E8:D2:8E:59 | Auto   | 2days, 15:26:29 |
| iPhone          | 192.168.1.102 | 34:E2:FD:14:1D:0D | Auto   | 2days, 15:28:59 |
| chen            | 192.168.1.103 | 0C:D7:46:16:8E:4A | Auto   | 2days, 21:33:45 |
| TL-WR845N       | 192.168.1.104 | 00:0A:EB:42:52:36 | Auto   | 2days, 23:51:46 |
- DNS:**
  - DNS Relay: Use Auto Discovered DNS Server Only
  - Primary DNS Server: N/A
  - Secondary DNS Server: N/A
- Radvd:**
  - Radvd Enable: Disable, Enable (selected)
- DHCPv6:**
  - DHCPv6 Server: Disable, Enable (selected)

At the bottom, there are 'SAVE' and 'CANCEL' buttons.

- **Router Local IP:** These are the IP settings of the LAN interface for the device. These settings may be referred to as Private settings. You may change the LAN IP address if needed. The LAN IP address is private to your internal network and cannot be seen on the Internet.
  - **IP Address:** Enter the modem router’s local IP Address, then you can access to the Web management page via the IP Address. The default value is 192.168.1.1.
  - **IP Subnet Mask:** Enter the modem router’s Subnet Mask. The default value is 255.255.255.0.
  - **Dynamic Route:** Select this option to specify the RIP (Routing Information protocol) version for LAN interface, including [RIP1](#), [RIP2-B](#) and [RIP2-M](#). RIP2-B and RIP2-M are both sent in RIP2 format, the difference is that RIP2-M using Multicast, while RIP2-B using Broadcast format.

- **Direction:** Select this option to specify the RIP direction. **None** is for disabling the RIP function. **Both** means the ADSL modem router will periodically send routing information and accept routing information, and then incorporate them into routing table. **IN only** means the ADSL modem router will only accept but will not send RIP packet. **OUT only** means the ADSL modem router will only send but will not accept RIP packet.
  - **Multicast:** Select IGMP version, or disable the function. IGMP (Internet Group Multicast Protocol) is a session-layer protocol used to establish membership in a multicast group. The ADSL ATU-R supports both IGMP version 1 (**IGMP v1**), **IGMP v2** and **IGMP v3**. Select **Disabled** to disable it.
  - **IGMP Snoop:** Enable the IGMP Snoop function if you need.
  - **Mld Snoop:** Enable the Mld Snoop function if you need.
- **DHCP:** Select **Enabled**, then you will see the screen below. The modem router will work as a DHCP Server; it becomes the default gateway for DHCP client connected to it. DHCP stands for Dynamic Host Control Protocol. The DHCP Server gives out IP addresses when a device is booting up and request an IP address to be logged on to the network. That device must be set as a DHCP client to obtain the IP address automatically. By default, the DHCP Server is enabled. The DHCP address pool contains the range of the IP address that will automatically be assigned to the clients on the network.

DHCP :  Disabled  Enabled  Relay

Starting IP Address : 192.168.1.100

IP Pool Count : 101

Lease Time : 259200 seconds (0 sets to default value of 259200)

Physical Ports :  1  2  3  4

| Hostname        | IP Address      | MAC Address       | Status   | Expire Time     |
|-----------------|-----------------|-------------------|----------|-----------------|
|                 | 192.168.1.105 ▼ | Manual Config ▼   | Static ▼ |                 |
| Xuande-iPhone   | 192.168.1.100   | D0:03:4B:A7:0D:B8 | Auto     | 2days, 3:46:46  |
| xihuannetaiyang | 192.168.1.101   | A4:F1:E8:D2:8E:59 | Auto     | 2days, 15:5:42  |
| iPhone          | 192.168.1.102   | 34:E2:FD:14:1D:0D | Auto     | 2days, 15:8:12  |
| chen            | 192.168.1.103   | 0C:D7:46:16:8E:4A | Auto     | 2days, 21:12:58 |
| TL-WR845N       | 192.168.1.104   | 00:0A:EB:42:52:36 | Auto     | 2days, 23:30:59 |

DNS Relay : Use Auto Discovered DNS Server Only ▼

Primary DNS Server : N/A

Secondary DNS Server : N/A

Radvd Enable :  Disable  Enable

DHCPv6 Server :  Disable  Enable

- **Starting IP Address:** Enter the starting IP address for the DHCP server's IP assignment. Because the default IP address for the modem router is 192.168.1.1, the default Start IP Address is [192.168.1.100](#).
- **IP Pool Count:** The max user pool size.
- **Lease Time:** The length of time for the IP lease. After the dynamic IP address has expired, the user will be automatically assigned a new dynamic IP address. The default is [259200](#) seconds.
- **Physical Ports:** If a physical port is unchecked, the client connected to that port will not be able to obtain IP address automatically although the DHCP function is enabled. All ports are checked by default.

➤ **DHCP Table:** The information of the DHCP clients will be displayed here

| Hostname        | IP Address                                 | MAC Address                                | Status                              | Expire Time     |
|-----------------|--|--|-------------------------------------|-----------------|
|                 | <input type="text" value="192.168.1.105"/> | <input type="text" value="Manual Config"/> | <input type="text" value="Static"/> |                 |
| Xuande-iPhone   | 192.168.1.100                              | D0:03:4B:A7:0D:B8                          | Auto                                | 2days, 3:17:59  |
| xihuannetaiyang | 192.168.1.101                              | A4:F1:E8:D2:8E:59                          | Auto                                | 2days, 14:36:55 |
| iPhone          | 192.168.1.102                              | 34:E2:FD:14:1D:0D                          | Auto                                | 2days, 14:39:25 |
| chen            | 192.168.1.103                              | 0C:D7:46:16:8E:4A                          | Auto                                | 2days, 20:44:11 |
| TL-WR845N       | 192.168.1.104                              | 00:0A:EB:42:52:36                          | Auto                                | 2days, 23:2:12  |

- **Hostname:** Display the name of the DHCP client.
- **IP Address:** Display the IP Address of the DHCP client.
- **MAC Address:** Display the MAC Address of the DHCP client.
- **Status:** Display the status of the assigned IP Address, either [Static](#) or [Auto](#). [Static](#) indicates that the IP Address is bounded to the MAC Address, while [Auto](#) indicates that the IP Address is assigned to the MAC Address automatically.

#### How to assign a static IP address to the client?

- 1). Select an [IP Address](#) from the drop-down list.
- 2). Enter the [MAC Address](#) of the client in the table.
  - **DNS Relay:** If you want to disable this feature, you just need to set both Primary and secondary DNS IP to 0.0.0.0. If you want to use DNS relay, you can setup DNS server IP to 192.168.1.1 on their Computer. If not, the device will perform as no DNS relay.
  - **Primary DNS Server:** Type in your preferred DNS server.
  - **Secondary DNS Server:** Type in your preferred DNS server.

#### Note:

If [Use Auto Discovered DNS Server Only](#) is selected in DNS Relay, this modem router will accept the first received DNS assignment from one of the PPPoA, PPPoE or MER/DHCP enabled PVC(s) during the connection establishment. If [Use User Discovered DNS Server Only](#) is selected in DNS Relay, it is necessary for you to enter the primary and optional secondary DNS server IP addresses. After type in the address, click SAVE to save it and invoke it.

- **DHCP Relay:** Select [Relay](#), then you will see the following screen, and the modem router will work as a DHCP Relay. A DHCP relay is a computer that forwards DHCP data between computers that request IP addresses and the DHCP server that assigns the addresses. Each of the device's interfaces can be configured as a DHCP relay. If it is enabled, the DHCP requests from local PCs will forward to the DHCP server runs on WAN side. To have this function working properly, please run on router mode only, disable the DHCP server on the LAN port, and make sure the routing table has the correct routing entry.

|  |                                      |
|--|--------------------------------------|
| DHCP : <input type="radio"/> Disabled <input type="radio"/> Enabled <input checked="" type="radio"/> Relay |                                      |
| DHCP Server IP for Relay Agent :   | <input type="text" value="0.0.0.0"/> |
| Radvd Enable : <input checked="" type="radio"/> Disable <input type="radio"/> Enable                       |                                      |
| DHCPv6 Server : <input checked="" type="radio"/> Disable <input type="radio"/> Enable                      |                                      |

- **DHCP Server IP for Relay Agent:** Enter the DHCP server IP Address runs on WAN side.

👉 **Note:**

If you select [Disabled](#), the DHCP function will not take effect.

- **Radvd Enable:** Enable or Disable the auto configuration of radvd.
- **DHCPv6 Server:** Enable or Disable the modem router working as a DHCPv6 Server.

### 4.2.3 Wireless

Go to [Interface Setup](#) → [Wireless](#), and you will see the Wireless screen. Please configure the parameters for wireless according to the descriptions below.

|                  |             |                        |                 |                   |               |        |      |
|------------------|-------------|------------------------|-----------------|-------------------|---------------|--------|------|
| <b>Interface</b> | Quick Start | <b>Interface Setup</b> | Advanced Setup  | Access Management | Maintenance   | Status | Help |
|                  | Internet    | LAN                    | <b>Wireless</b> | 6RD               | Guest Network |        |      |

---

**Access Point Settings**

Access Point:  Activated  Deactivated  
 Channel: Auto  Current Channel:   
 Transmit Power: High   
 Beacon Interval(ms):  (range: 20~1000)  
 RTS/CTS Threshold:  (range: 1500~2347)  
 Fragmentation Threshold(bytes):  (range: 256~2346, even numbers only)  
 DTIM(ms):  (range: 1~255)  
 Wireless Mode: 802.11b+g+n

---

**11n Settings**

Channel Bandwidth: Auto   
 Extension Channel: above the control channel   
 Guard Interval: AUTO   
 MCS: AUTO

---

**Multiple SSIDs Settings**

SSID Index: 1   
 PerSSID Switch:  Activated  Deactivated  
 Broadcast SSID:  Yes  No  
 Use WPS:  Yes  No

---

**WPS Settings**

WPS state: Configured  
 WPS mode:  PIN code  PBC  
  
 WPS progress: Idle  
  
 SSID:   
 Authentication Type: WPA2-PSK

---

**WPA2-PSK**

Encryption: AES   
 Pre-Shared Key:  (8~63 ASCII characters or 64 hexadecimal characters)

---

**WDS Settings**

WDS Mode:  On  Off  
 WDS Encryption Type: TKIP   
 WDS Key:  (8~63 ASCII characters or 64 hexadecimal characters)  
 Mac Address #1:   
 Mac Address #2:   
 Mac Address #3:   
 Mac Address #4:

---

**Wireless MAC Address Filter**

Active:  Activated  Deactivated  
 Action: Allow Association  the follow Wireless LAN station(s) association.  
 Mac Address #1:   
 Mac Address #2:   
 Mac Address #3:   
 Mac Address #4:   
 Mac Address #5:   
 Mac Address #6:   
 Mac Address #7:   
 Mac Address #8:

- 
- **Access Point Settings:** These are the settings of the access point. You can configure the rules to allow wireless-equipped computers and other devices to communicate with a wireless network.
- **Access Point:** Select [Activated](#) to allow wireless station to associate with the access point.
  - **Channel:** Select the channel you want to use from the drop-down List of Channel. This field determines which operating frequency will be used. It is not necessary to change the wireless channel unless you notice interference problems with another nearby access point.
  - **Transmit Power:** Here you can specify the transmit power of modem router. You can select [High](#), [Medium](#) or [Low](#) which you would like. High is the default setting and is recommended.
  - **Beacon Interval:** Enter a value between 20-1000 milliseconds. The Beacon Interval value indicates the frequency interval of the beacon. A beacon is a packet broadcast by the modem router to synchronize the wireless network. The default value is 100.
  - **RTS/CTS Threshold:** Should you encounter inconsistent data flow, only minor reduction of the default value 2347 is recommended. If a network packet is smaller than the preset RTS threshold size, the RTS/CTS mechanism will not be enabled. The modem router sends Request to Send (RTS) frames to a particular receiving station and negotiates the sending of a data frame. After receiving an RTS, the wireless station responds with a Clear to Send (CTS) frame to acknowledge the right to begin transmission. In most cases, keep its default value of 2347.
  - **Fragmentation Threshold:** This value specifies the maximum size for a packet before data is fragmented into multiple packets. If you experience a high packet error rate, you may slightly increase the Fragmentation Threshold. Setting the Fragmentation Threshold too low may result in poor network performance. Only minor reduction of the default value is recommended. In most cases, it should remain at its default value of 2346.
  - **DTIM:** This value, between 1 and 255, indicates the interval of the Delivery Traffic Indication Message (DTIM). A DTIM field is a countdown field informing clients of the next window for listening to broadcast and multicast messages. When the modem router has buffered broadcast or multicast messages for associated clients, it sends the next DTIM with a DTIM Interval value. Its clients hear the beacons and awaken to receive the broadcast and multicast messages. The default value is 1.
  - **Wireless Mode:** In the drop-down list you can select [802.11b](#), [802.11g](#), [802.11n](#), [802.11b+g](#), [802.11g+n](#) and [802.11b+g+n](#). 802.11b+g+n allows both 802.11b, 802.11g and 802.11n wireless stations to connect to the modem router.
- **11n Settings:** These are the settings of the 11n parameters. If 802.11n, 802.11g+n or 802.11b+g+n is selected for [Wireless mode](#), these settings will be displayed.



- **Channel Bandwidth:** Select the Bandwidth you want to use from the drop-down List. There are three options, [Auto](#), [20 MHz](#) and [40 MHz](#). If bigger bandwidth is selected, device could transmit and receive data with higher speed.
  - **Extension Channel:** If Auto or 40 MHz is selected, this option will be displayed.
  - **Guard Interval:** If 20MHz is selected, this option will be displayed. And then you can select the guard interval you want from the drop-down list.
  - **MCS:** Select the wireless transmission rate from the drop-down list. By default, the option is AUTO.
- **Multiple SSIDs Settings:** These are the settings of the SSID.
- **SSID Index:** The index of the SSID, and in this model, you can only leave it as a default value of 1.
  - **PerSSID Switch:** Select [Activated](#) to allow switch of per SSID.
  - **Broadcast SSID:** When wireless clients survey the local area for wireless networks to associate with, they will detect the SSID broadcast by the modem router. To broadcast the modem router's SSID, keep the default setting. If you don't want to broadcast the modem router's SSID, select [No](#).
  - **Use WPS:** Use WPS (Wi-Fi Protected Setup) function, you can add a new wireless device to an existing network quickly. To use WPS, keep the default setting, and configure the parameters in [WPS Settings](#). If you don't want to Use WPS, select [No](#).
- **WPS Settings:** WPS can help you to add a new wireless device to an existing network quickly.
- **WPS state:** Display the current WPS state.
  - **WPS mode:** If the wireless adapter supports Wi-Fi Protected Setup (WPS), you can establish a wireless connection between wireless adapter and modem router using either PIN method or Push Button Configuration (PBC) method, please select the one you want.

### 1) By PIN

If the wireless adapter supports Wi-Fi Protected Setup and the PIN method, you can add it to the network by PIN with the following two methods. Select [PIN code](#), you will see the following screen.

WPS Settings

WPS state : Configured

WPS mode :  PIN code  PBC

AP self PIN code : 00000000

enrollee PIN code :


WPS progress : Idle

SSID : TP-LINK\_000006

Authentication Type : WPA2-PSK


**Method One:** Enter the PIN of wireless adapter into my modem router

**Step 1:** For the configuration of the wireless adapter, please choose [Enter the PIN of this device into my access point or wireless router](#) in the configuration utility, and get the PIN code on the screen as below, then click [Connect](#).

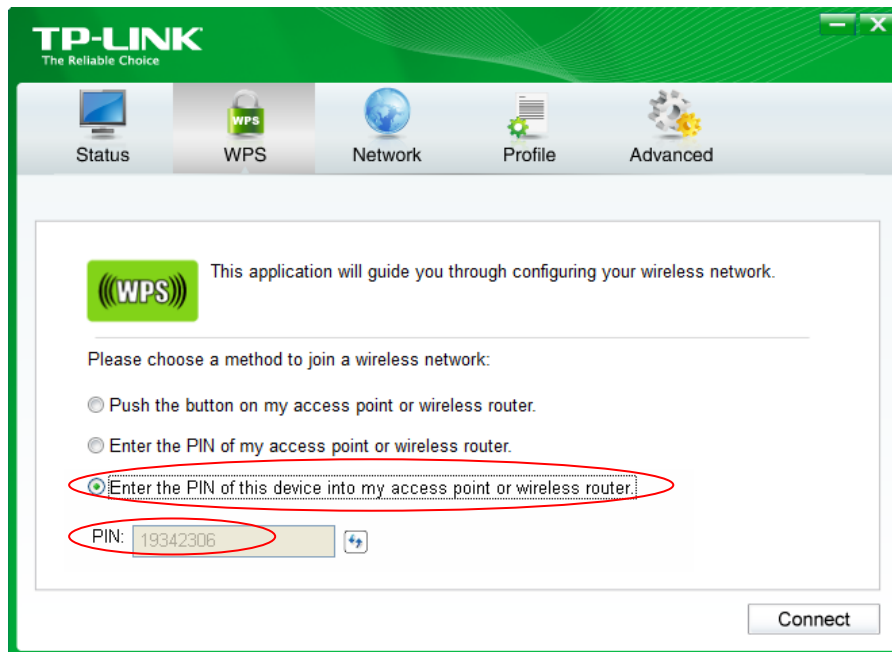

The WPS Configuration Screen of Wireless Adapter

**Step 2:** For the modem router, keep [PIN code](#) selected and enter the PIN code of the wireless adapter in the field next to [enrollee PIN code](#) as shown below. Then click [Start WPS](#).

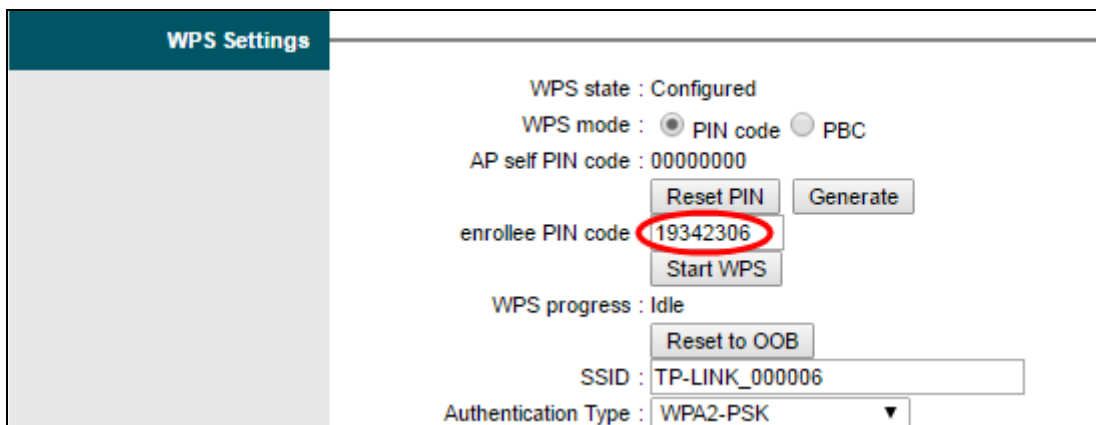


**Note:**


In this example, the default PIN code of this adapter is 19342306 as the preceding figure shown.

**Method Two:** Enter the PIN from your Router or AP device

**Step 1:** Get the Current PIN code of your modem router from [AP self PIN code](#) (each modem router has its unique PIN code. Here takes the PIN code 00000000 of this modem router for example).

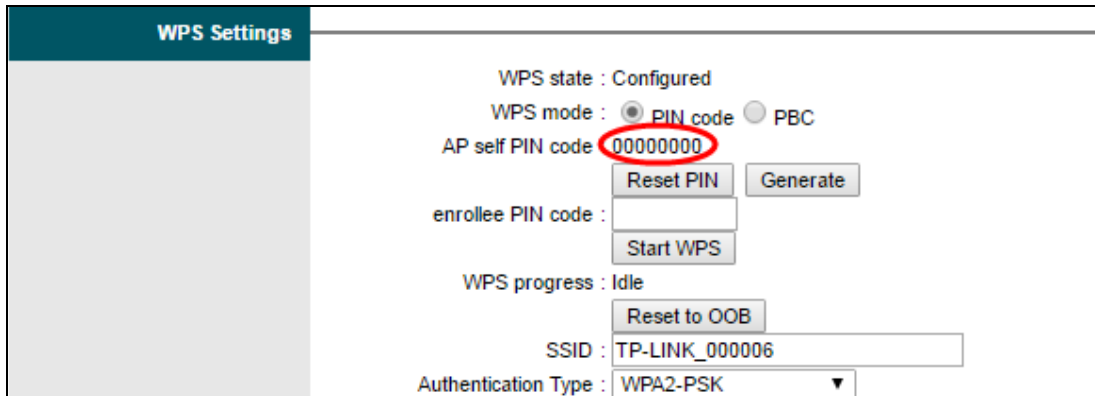

**Step 2:** For the configuration of the wireless adapter, please choose [Enter the PIN of my access point or wireless router](#) in the configuration utility, and enter the PIN code of the modem router into the field next to [PIN](#). Then click [Connect](#).

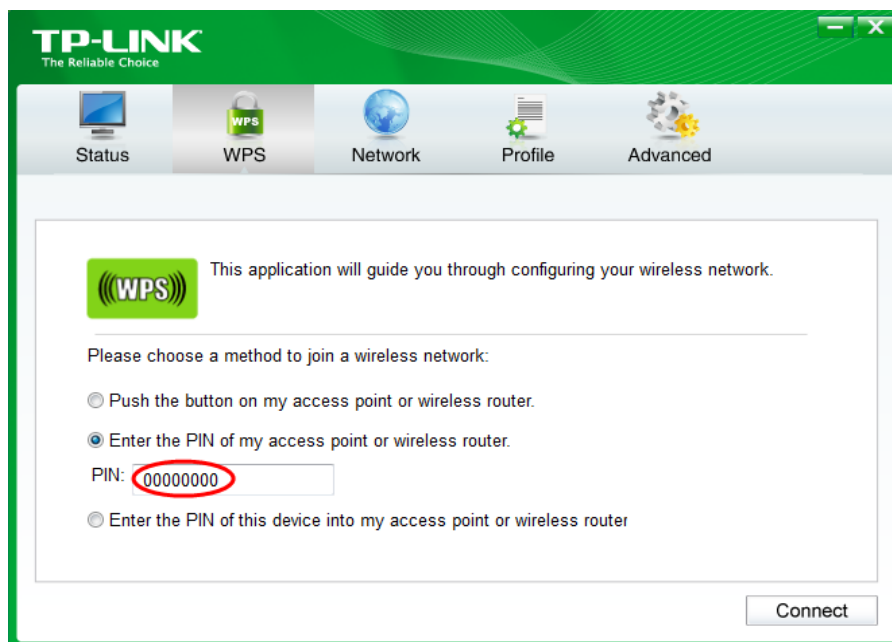


The WPS Configuration Screen of Wireless Adapter

**Note:**

The default PIN code of the modem router can be found on its label or the WPS screen in its web configuration page.


**2) PBC**

If the wireless adapter supports Wi-Fi Protected Setup and the Push Button Configuration (PBC) method, you can add it to the network by PBC with the following two methods. Select [PBC](#), you will see the following screen.

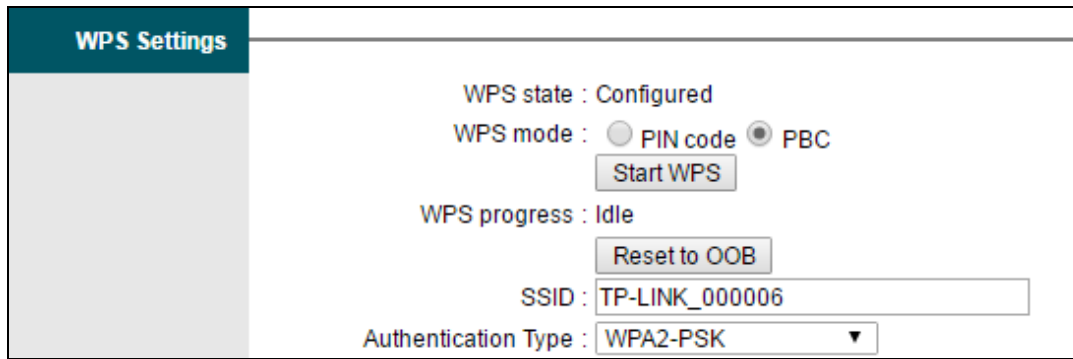

**Method One:** Hardware push button

**Step 1:** Press the WPS/RESET button on your modem router for about 2 seconds or click the [Start WPS](#) button on the screen.

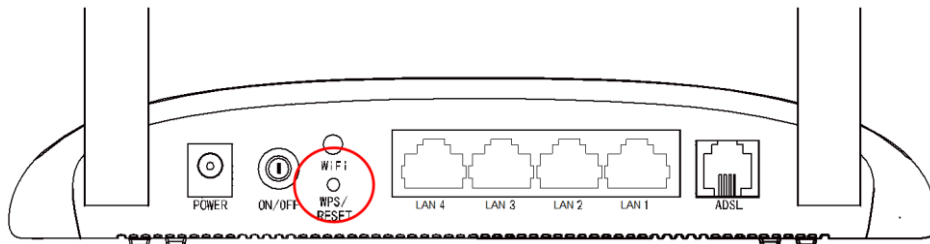

**Step 2:** Press and hold the WPS button of the adapter directly for about 2 seconds.




**Step 3:** Wait until the following screen appears. Click [OK](#) to complete the WPS configuration.




The WPS Configuration Screen of Wireless Adapter

**Method Two:** Software push button

**Step 1:** Click [Start WPS](#) button on the screen.

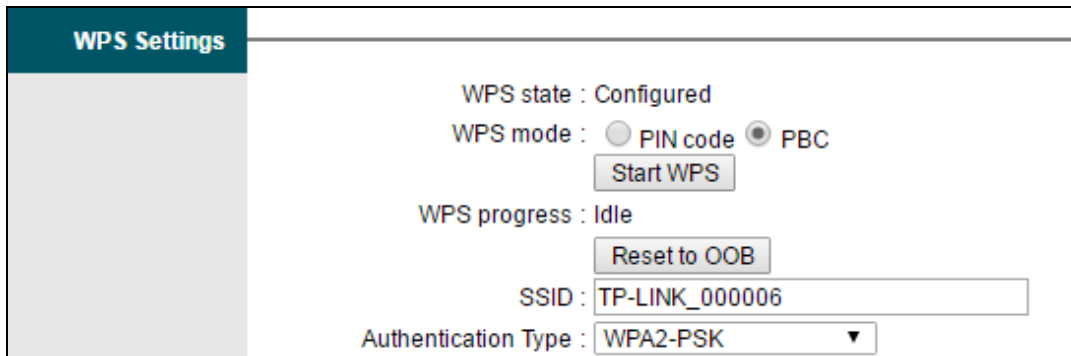

**Step 2:** For the configuration of the wireless adapter, please choose [Push the button on my access point or wireless router](#) in the configuration utility as below, and click [Connect](#).

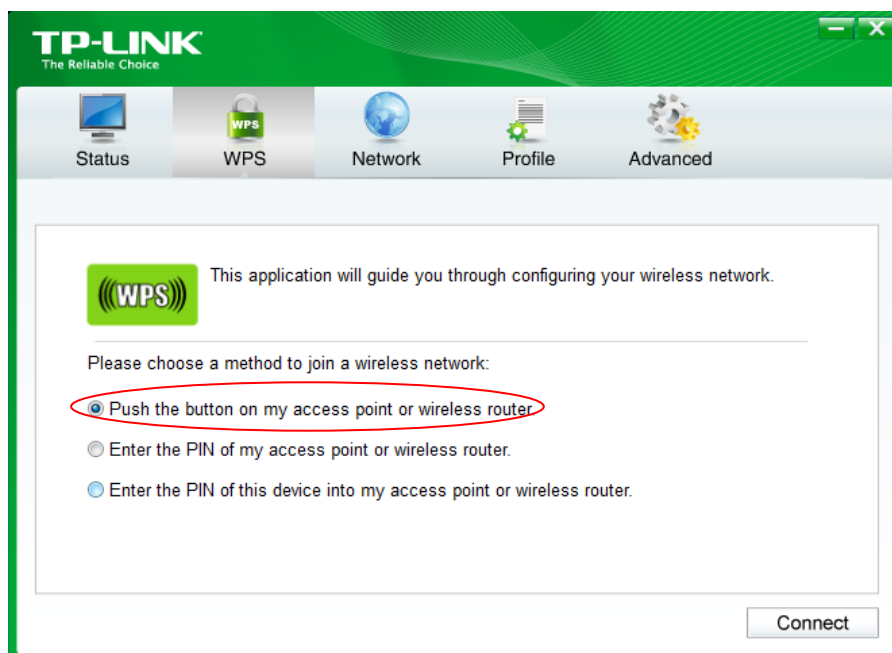

The WPS Configuration Screen of Wireless Adapter

**Step 3:** Wait for a while until the following screen appears. Click [OK](#) to complete the WPS configuration.



The WPS Configuration Screen of Wireless Adapter

- **WPS progress:** Show the current WPS progress.
- **Reset to OOB:** Reset WPS AP to the OOB (out-of-box) configuration.
- **SSID:** Wireless network name shared among all points in a wireless network. The SSID must be identical for all devices in the wireless network. It is case-sensitive and must not exceed 32 characters (use any of the characters on the keyboard). Make sure this setting is the same for all stations in your wireless network. Type the desired SSID in the space provided.
- **Authentication Type:** Select an authentication type from the drop-down list, which allows you to configure security features of the wireless LAN interface. Options available are: [Disabled](#), [WEP-64Bits](#), [WEP-128Bits](#), [WPA-PSK](#), [WPA2-PSK](#), and [WPA-PSK/WPA2-PSK](#).

#### WEP- 64Bits

To configure WEP-64Bits settings, select the WEP-64Bits option from the drop-down list. The menu will change to offer the appropriate settings. WEP-64Bits is a data privacy mechanism based on a 64-bit shared key algorithm, as described in the IEEE 802.11g standard.

#### WEP-128Bits

To configure WEP-128Bits settings, select the WEP-128Bits option from the drop-down list. The menu will change to offer the appropriate settings. 128-bit is stronger than 64-bit.

#### WPA-PSK

To configure WPA-PSK settings, select the WPA-PSK option from the drop-down list. The menu will change to offer the appropriate settings. WPA-PSK requires a shared key and does not use a separate server for authentication. PSK keys can be ASCII or Hex type.

- **Encryption:** Select the encryption you want to use: TKIP/AES, TKIP or AES (AES is an encryption method stronger than TKIP).
  - ✓ **TKIP** (Temporal Key Integrity Protocol) - a wireless encryption protocol that provides dynamic encryption keys for each packet transmitted.
  - ✓ **AES** (Advanced Encryption Standard) - A security method that uses symmetric 128-bit block data encryption.
- **Pre-Shared Key:** Enter the key shared by the modem router and your other network devices.

#### WPA2-PSK

To configure WPA2-PSK settings, select the WPA2-PSK option from the drop-down list. The menu will change to offer the appropriate settings. WPA2-PSK requires a shared key and does not use a separate server for authentication. PSK keys can be ASCII or Hex type.

### WPA-PSK/WPA2-PSK

To configure WPA-PSK/WPA2-PSK settings, select the WPA-PSK/WPA2-PSK option from the drop-down list. The menu will change to offer the appropriate settings. WPA-PSK/WPA2-PSK requires a shared key and does not use a separate server for authentication. PSK keys can be ASCII or Hex type. WPA-PSK/WPA2-PSK is more flexible than WPA-PSK or WPA2-PSK.

- **WDS Settings:** With this function enabled, the modem router can bridge two or more WLANs.
  - **WDS Mode:** Select On/Off to enable/disable WDS.
  - **WDS Encryption Type:** You can select either [AES](#) or [TKIP](#).
  - **WDS Key:** Create a key for the router.
  - **MAC Address:** Enter the MAC Address you wish to bridge in the field.
- **Wireless MAC Address Filter:** Wireless access can be filtered by using the MAC addresses of the wireless devices transmitting within your network's RADIUS.
  - **Active:** If you wish to filter users by MAC Address, select [Activated](#), and [Deactivated](#) for don't.
  - **Action:** To filter wireless users by MAC Address, select [Allow Association](#) or [Deny Association](#) the follow Wireless LAN station(s) association.
  - **MAC Address:** Enter the MAC Address you wish to filter in the field.

#### Note:

For most users, it is recommended to use the default Wireless LAN Performance settings. Any changes made to these settings may adversely affect your wireless network. Under certain circumstances, changes may benefit performance. Carefully consider and evaluate any changes to these wireless settings.

### 4.2.4 6RD

IPv6 tunnel is a kind of transition mechanism to enable IPv6-only hosts to reach IPv4 services, and to allow isolated IPv6 hosts and networks to reach each-other over IPv4-only infrastructure before IPv6 completely supplants IPv4. It is a temporary solution for networks that do not support native dual-stack, where both IPv6 and IPv4 run independently.

As a type of IPv6 tunnel, 6RD is used in the situation that your WAN connection is IPv4 while LAN connection is IPv6. Go to [Interface Setup](#) → [6RD](#).

The screenshot shows the router's configuration page for 6RD. The '6RD' tab is highlighted with a red circle. The configuration fields are as follows:

- 6RD Enable :  Enable  Disable
- 6rd IPv6 Prefix :  /
- IPv4 Mask Length :
- 6RD Border Relay IPv4Addr :
- 6rd Prefix Delegation : c0a8:1464::/64
- Use PVC :

Buttons: SAVE, CANCEL

- **6RD Enable:** The default setting is disabled. Select Enable when your WAN connection is IPv4 while LAN connection is IPv6.

The close-up shows the configuration fields with '6RD Enable' set to 'Enable':

- 6RD Enable :  Enable  Disable
- 6rd IPv6 Prefix :  /
- IPv4 Mask Length :
- 6RD Border Relay IPv4Addr :
- 6rd Prefix Delegation : c0a8:1464::/64
- Use PVC :

- **6rd IPv6 Prefix:** Enter the prefix of the IPv6.
- **IPv4 Mask Length:** The length of the selected WAN connection's IPv4 mask.
- **6RD Border Relay IPv4Addr:** The IPv4 address of the border relay router of 6RD tunnel.
- **Use PVC:** Select the PVC from the drop-down list.


**Note:**

To enable the function, there should not be any IPv6 WAN connections.


## 4.2.5 Guest Network

Go to [Interface Setup](#) → [Guest Network](#), and you will see the Guest Network screen. This feature allows you to create a separate network for your guests without allowing them to access your main network and the computers connected to it.



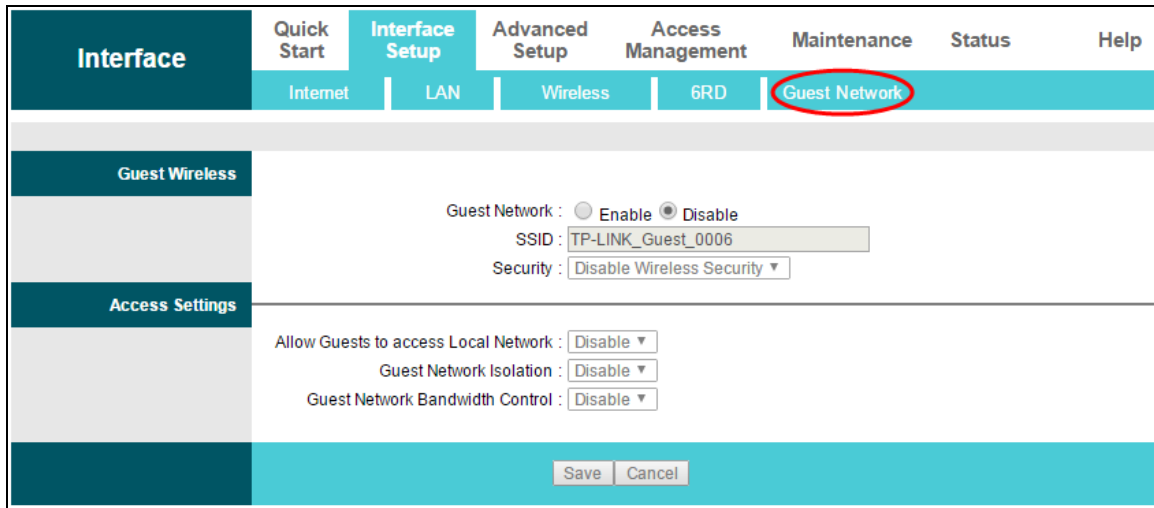

You can enable or disable Guest Network. The default setting is disabled. When you enable this function, you could set wireless parameters for Guest Network.

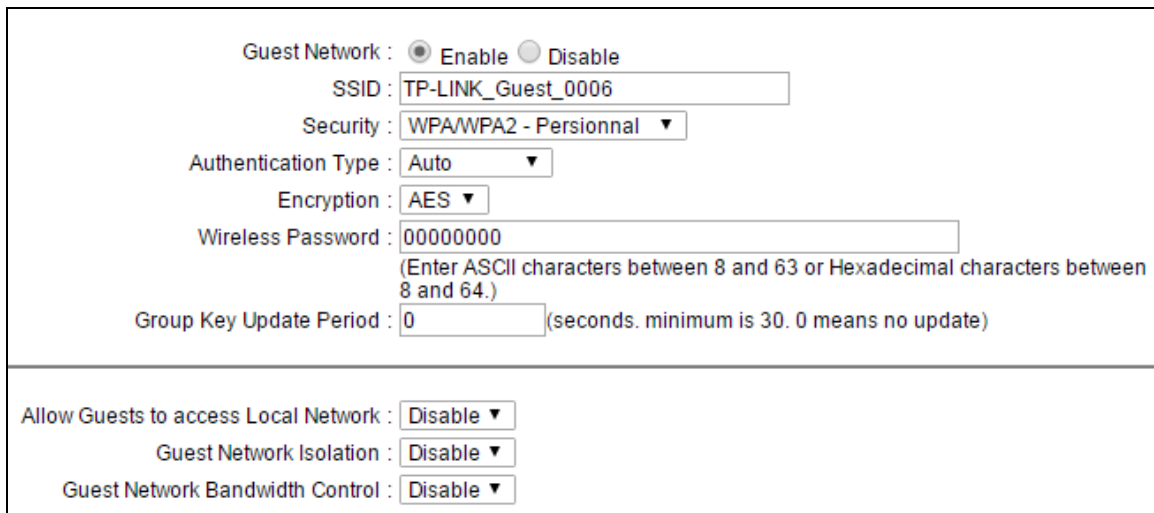

- **SSID:** The guest network name. When setting up a Guest network, it is strongly recommended to use a name that easily distinguishes it from your primary network.
- **Authentication Type:** Select the Authentication Type from the drop-down list.
- **Encryption:** You can select either **AUTO**, **AES** or **TKIP**.
- **Wireless Password:** You may personalize your guest network password by entering a new password.
- **Group Key Update Period:** Specify the group key update interval in seconds. The value should be 30 or above. Enter 0 to disable the update.
- **Allow Guests to access Local Network:** The guests have access to your local Network, but cannot login the modem router’s web management interface.
- **Guest Network Isolation:** This function can isolate wireless clients on your guest network from each other. Client isolation is disabled by default.
- **Guest Network Bandwidth Control:** With this function, you can configure the Upstream Bandwidth and Downstream Bandwidth for guest network.

Click [Save](#) to save your settings.


### 4.3 Advanced Setup

Choose [Advanced Setup](#), and you will see the following submenus. Click any of them, and you can configure the corresponding function.



#### 4.3.1 Firewall

Go to [Advanced Setup](#) → [Firewall](#), and you will see the following screen.

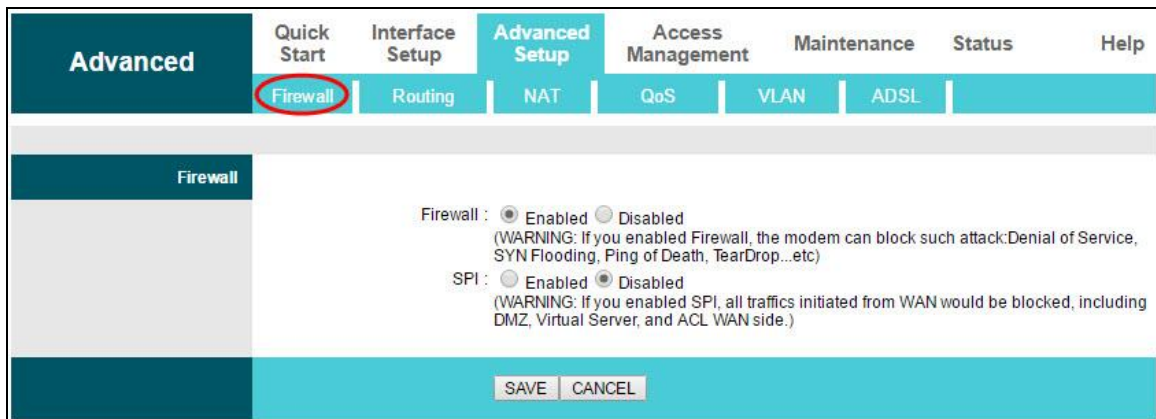

- **Firewall:** Select this option can automatically detect and block Denial of Service (DoS) attacks, such as Ping of Death, SYN Flood, Port Scan and Land Attack.
- **SPI:** If you enable SPI, all traffics initiated from WAN would be blocked, including DMZ, Virtual Server, and ACL WAN side.

#### 4.3.2 Routing

Go to [Advanced Setup](#) → [Routing](#), and you will see the routing information in the following screen.



Click [ADD ROUTE](#) to add a new route in the following screen.

| Static Route  |   |
|---|---|
|   | Destination IP Address : <input type="text" value="0.0.0.0"/><br>IP Subnet Mask : <input type="text" value="0.0.0.0"/><br>Gateway IP Address : <input checked="" type="radio"/> <input type="text" value="0.0.0.0"/> <input type="radio"/> PVC0 ▾<br>Metric : <input type="text" value="0"/><br>Announced in RIP : <input style="border: none; border-bottom: 1px solid black;" type="text" value="Yes"/> ▾ |
| <input type="button" value="SAVE"/> <input type="button" value="DELETE"/> <input type="button" value="BACK"/> <input type="button" value="CANCEL"/> |   |

- **Destination IP Address:** This parameter specifies the IP network address of the final destination.
- **IP Subnet Mask:** Enter the subnet mask for this destination.
- **Gateway IP Address:** Enter the IP address of the gateway. The gateway is an immediate neighbor of your ADSL modem router that will forward the packet to the destination. On the LAN, the gateway must be a modem router on the same segment as your modem router; over Internet (WAN), the gateway must be the IP address of one of the remote nodes.
- **Metric:** Metric represents the "cost" of transmission for routing purposes. IP Routing uses hop count as the measurement of cost, with a minimum of 1 for directly connected networks. Enter a number that approximates the cost for this link. The number need not to be precise, but it must between 1 and 15. In practice, 2 or 3 is usually a good number.
- **Announced in RIP:** This parameter determines if the ADSL modem router will include the route to this remote node in its RIP broadcasts. If set to **Yes**, the route to this remote node will be propagated to other hosts through RIP broadcasts. If **No**, this route is kept private and is not included in RIP broadcasts.

### 4.3.3 NAT

Go to [Advanced Setup](#) → [NAT](#), you can setup the NAT (Network Address Translation) function for the Modem router.

| Advanced  | Quick Start  | Interface Setup | Advanced Setup | Access Management | Maintenance | Status | Help |     |  |
|---|--|-----------------|----------------|-------------------|-------------|--------|------|-----|--|
|   | Firewall   | Routing         | NAT            | QoS               | VLAN        | ADSL   |      |     |  |
|   |  |                 |                |                   |             |        |      |     |  |
| <table border="0"> <tr> <td style="background-color: #e0e0e0; width: 150px; vertical-align: top;">NAT</td> <td>                             Virtual Circuit : <input type="text" value="PVC4"/> ▾<br/>                             NAT Status : Activated<br/>                             Number of IPs : <input checked="" type="radio"/> Single <input type="radio"/> Multiple<br/> <input checked="" type="radio"/> DMZ<br/> <input checked="" type="radio"/> Virtual Server                         </td> </tr> </table> |  |                 |                |                   |             |        |      | NAT | Virtual Circuit : <input type="text" value="PVC4"/> ▾<br>NAT Status : Activated<br>Number of IPs : <input checked="" type="radio"/> Single <input type="radio"/> Multiple<br><input checked="" type="radio"/> DMZ<br><input checked="" type="radio"/> Virtual Server |
| NAT   | Virtual Circuit : <input type="text" value="PVC4"/> ▾<br>NAT Status : Activated<br>Number of IPs : <input checked="" type="radio"/> Single <input type="radio"/> Multiple<br><input checked="" type="radio"/> DMZ<br><input checked="" type="radio"/> Virtual Server |                 |                |                   |             |        |      |     |  |

- **Virtual Circuit:** Enter Virtual Circuit Index that you plan to setup for the NAT function.
- **NAT Status:** This field shows the current status of the NAT function for the current VC. You can go to the previous screen to activate the function.

 **Note:**

For VCs with single IP, they share the same DMZ and Virtual servers; for VCs with multiple IPs, each VC can set DMZ and Virtual servers. Furthermore, for VCs with multiple IPs, they can define the Address Mapping rules; for VCs with single IP, since they have only one IP, there is no need to individually define the Address Mapping rule.

#### 4.3.3.1 DMZ

Go to [Advanced Setup](#) → [NAT](#) → [DMZ](#), you can configure the DMZ host in the following screen. A DMZ (demilitarized zone) is a host between a private local network and the outside public network. It prevents outside users from getting direct access to a server that has company data. Users of the public network outside the company can access to the DMZ host.

 Enabled  Disabled', and 'DMZ Host IP Address : '. At the bottom right, there are two buttons: 'SAVE' and 'BACK'." data-bbox="147 384 846 515"/>

- **DMZ Host IP Address:** Enter the specified IP address for DMZ host on the LAN side.

#### 4.3.3.2 Virtual Server

Go to [Advanced Setup](#) → [NAT](#) → [Virtual Server](#), you can configure the Virtual Server in the following screen.

The Virtual Server is the server or server(s) behind NAT (on the LAN), for example, Web server or FTP server, which you can make visible to the outside world even though NAT makes your whole inside network appear as a single machine to the outside world.

| Virtual Server                         |              |          |            |          |                  |
|--|--------------|----------|------------|----------|------------------|
| Virtual Server for : Single IP Account |              |          |            |          |                  |
| Rule Index :                           | 3 ▼          |          |            |          |                  |
| Application :                          | FTP FTP ▼    |          |            |          |                  |
| Protocol :                             | ALL ▼        |          |            |          |                  |
| Start Port Number :                    | 21           |          |            |          |                  |
| End Port Number :                      | 21           |          |            |          |                  |
| Local IP Address :                     | 192.168.1.23 |          |            |          |                  |
| Virtual Server Listing                 |              |          |            |          |                  |
| Rule                                   | Application  | Protocol | Start Port | End Port | Local IP Address |
| 1                                      | -            | -        | 0          | 0        | 0.0.0.0          |
| 2                                      | -            | -        | 0          | 0        | 0.0.0.0          |
| 3                                      | -            | -        | 0          | 0        | 0.0.0.0          |
| 4                                      | -            | -        | 0          | 0        | 0.0.0.0          |
| 5                                      | -            | -        | 0          | 0        | 0.0.0.0          |

- **Rule Index:** The Virtual server rule index for this VC. You can specify 10 rules in maximum. All the VCs with single IP will use the same Virtual Server rules.
- **Application:** The Virtual servers can be used for setting up public services on your LAN.
- **Protocol:** The protocol used for this application.
- **Start & End port number:** Enter the specific Start and End Port number you want to forward. If it is one port only, you can enter the End port number the same as Start port number. For example, if you want to set the FTP Virtual server, you can set the start and end port number to 21.
- **Local IP Address:** Enter the IP Address for the Virtual Server in LAN side.
- **Virtual Server Listing:** This displays the information about the Virtual Servers you establish.

#### To add a virtual server entry:

**Step 1:** Select [Virtual Circuit](#) and select [Virtual Server](#).

**Step 2:** Select the Rule index for the rule.

**Step 3:** Select the application you want from drop-down list, then the protocol and port number will be added to the corresponding field automatically. You only need to configure the IP address for the virtual server. If the application list does not contain the service that you want, please configure the Port number, IP Address and Protocol manually.

**Step 4:** After that, click [SAVE](#) to make the entry take effect.

 **Note:**

For VCs with single IP, select [Single](#); For VCs with multiple IPs, select [Multiple](#) for the option.

#### Other operations for the entries:

Enter the index of assigned entry, and click [DELETE](#) to delete the entry.

Click [BACK](#) to return to the previous screen.

Click [CANCEL](#) to cancel the configuration which is made just now.

### 4.3.3.3 IP Address Mapping

Select **Multiple** for **numbers of IPs**, and go to **Advanced Setup** → **NAT** → **IP Address Mapping** (for **Multiple IP Service**). You can configure the Address Mapping Rule in the following screen. The IP Address Mapping is for those VCs that configured with multiple IPs. The IP Address Mapping rule is per-VC based (only for Multiple IPs' VCs).

IP Address Mapping

Address Mapping Rule : PVC4

Rule Index :

Rule Type :

Local Start IP :  (for all local IPs, enter 0.0.0.0 for Start IP)

Local End IP :  (for all local IPs, enter 255.255.255.255 for End IP)

Public Start IP :

Public End IP :

---

Address Mapping List

| Rule | Type   | Local Start IP | Local End IP    | Public Start IP | Public End IP  |
|------|--------|----------------|-----------------|-----------------|----------------|
| 1    | M-M Ov | 0.0.0.0        | 255.255.255.255 | 61.141.228.32   | 61.141.228.254 |
| 2    | -      | ...            | ...             | ...             | ...            |
| 3    | -      | ...            | ...             | ...             | ...            |
| 4    | -      | ...            | ...             | ...             | ...            |
| 5    | -      | ...            | ...             | ...             | ...            |
| 6    | -      | ...            | ...             | ...             | ...            |
| 7    | -      | ...            | ...             | ...             | ...            |
| 8    | -      | ...            | ...             | ...             | ...            |

- **Rule Index:** Select the Virtual server rule index for this VC. You can specify 8 rules in maximum.
- **Rule Type:** There are four types: one-to-one, Many-to-One, Many-to-Many Overload and Many-to-Many No-overload.
- **Local Start & End IP:** Enter the local IP Address you plan to map to. Local Start IP is the starting local IP address and Local End IP is the ending local IP address. If the rule is for all local IPs, then the Start IP is 0.0.0.0 and the End IP is 255.255.255.255.
- **Public Start & End IP:** Enter the public IP Address you want to do NAT. Public Start IP is the starting public IP address and Public End IP is the ending public IP address. If you have a dynamic IP, enter 0.0.0.0 as the Public Start IP.
- **Address Mapping List:** This displays the information about the Mapping addresses.

#### To add a mapping rule:

**Step 1:** Select **Virtual Circuit** and **Multiple** for **Number of IPs**. Then select the tab **IP Address Mapping**.

**Step 2:** Select Rule Index for the rule.

**Step 3:** Select Rule Type you want from the drop-down list.

**Step 4:** Enter the local and public IP addresses in the corresponding fields.

**Step 5:** After that, click **SAVE** to make the entry take effect.

 **Note:**

IP Address Mapping is only available for VCs with Multiple IPs.

#### Other operations for the entries:

Select the index of assigned entry, and click **DELETE** to delete the entry.

Click [BACK](#) to return to the previous screen.

Click [CANCEL](#) to cancel the configuration which is made just now.

#### 4.3.4 QoS

Go to [Advanced Setup](#) → [QoS](#), you can configure the QoS in the following screen. QoS helps to prioritize data as it enters your modem router. By attaching special identification marks or headers to incoming packets, QoS determines which queue the packets enter, based priority. This is useful when there are certain types of data you want to give higher priority, such as voice data packets give higher priority than Web data packets. This option will provide better service of selected network traffic over various technologies.

The screenshot shows the 'Quality of Service' configuration page. The top navigation bar includes 'Advanced', 'Quick Start', 'Interface Setup', 'Advanced Setup', 'Access Management', 'Maintenance', 'Status', and 'Help'. Under 'Advanced Setup', 'QoS' is highlighted with a red circle. The page is divided into 'Rule' and 'Action' sections.

**Rule Section:**

- IP Version:  IPv4  IPv6
- QoS:  Activated  Deactivated
- Summary: [QoS Settings Summary](#)
- Rule Index: 1
- Active:  Activated  Deactivated
- Application: [Dropdown]
- Physical Ports:
 

|                          |                          |                          |                          |
|--------------------------|--------------------------|--------------------------|--------------------------|
| <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> |
| Enet1                    | Enet2                    | Enet3                    | Enet4                    |
| <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> |
| WLAN1                    | WLAN2                    | WLAN3                    | Guest                    |
- Destination MAC: [Text Field]
- IP: [Text Field]
- Mask: [Text Field]
- Port Range: [Text Field] ~ [Text Field]
- Source MAC: [Text Field]
- IP: [Text Field]
- Mask: [Text Field]
- Port Range: [Text Field] ~ [Text Field]
- Protocol ID: [Dropdown]
- Vlan ID Range: [Text Field] ~ [Text Field]
- IPP/DS Field:  IPP/TOS  DSCP
- IP Precedence Range: [Dropdown] ~ [Dropdown]
- Type of Service: [Dropdown]
- DSCP Range: [Text Field] ~ [Text Field] (Value Range: 0 ~ 63)
- 802.1p: [Text Field] ~ [Text Field]

**Action Section:**

- IPP/DS Field:  IPP/TOS  DSCP
- IP Precedence Remarking: [Dropdown]
- Type of Service Remarking: [Dropdown]
- DSCP Remarking: [Text Field] (Value Range: 0 ~ 63)
- 802.1p Remarking: [Dropdown] [Text Field]
- Queue #: [Dropdown]

Buttons at the bottom: [ADD](#) [DELETE](#) [CANCEL](#)

- **IP Version:** Select your IP version.

- **QoS:** Select this option to Activate/Deactivate the IP QoS on different types (IP ToS and DiffServ).
- **Summary:** Click the button to view the configurations of QoS.
- **Rule:** Configure the rules for QoS. If the traffic complies with the rule, then the modem router will take the corresponding action to deal with it.
  - **Rule Index:** Select the index for the rule you want to configure.
  - **Active:** Activate the rule. The rule can take effect only when it is activated.
  - **Application:** Select the application that the rule aimed at.
  - **Physical Ports:** Select the port whose traffic flow are controlled by the rule.
  - **Destination MAC & IP & Mask & Port Range:** Enter the IP information about the Destination host for the rule.
  - **Source MAC & IP & Mask & Port Range:** Enter the IP information about the Source host for the rule.
  - **Protocol ID:** Select one among TCP/UDP, TCP, UDP, ICMP or IGMP protocols for the application.
  - **Vlan ID Range:** Enter the Vlan range, and the rule will be effective to the selected Vlans.
  - **IPP/DS Field:** Select the type of the action to assign the priority.

When you select IPP/TOS, you can assign the priority via IP information. IP QoS function is intended to deliver guaranteed as well as differentiated internet services by giving network resource and usage control to the Network operator.

- **IP Precedence Range:** Enter the IP precedence range that the modem router takes to differentiate the traffic.
- **Type of Service:** Select the type of service that the modem router takes to deal with the traffic.
- **802.1p:** Select the priority range for the rule.

When you select DSCP, you can assign the priority via DHCP (the header of IP group). It maps the IP group into corresponding service class.

- **DSCP Range:** Enter the DSCP range to differentiate the traffic.
- **Action:** Configure the action that the modem router takes to deal with the traffic which accord with the rule.
  - **IPP/DS Field:** Select the type for the action.
  - **IP Precedence Remark:** Select the number to remark the priority for IP precedence.
  - **Type of Service Remark:** Select the type to remark the service.
  - **DSCP Remark:** Enter the number to remark the DSCP priority.
  - **802.1p Remark:** Select the type to remark the 802.1p priority.
  - **Queue:** Select the priority type for the action.




### 4.3.5 VLAN

Go to [Advanced Setup](#) → [VLAN](#), you can activate the VLAN function in the following screen.

Virtual LAN (VLAN) is a group of devices on one or more LANs that are configured so that they can communicate as if they were attached to the same LAN, when in fact they are located on a number of different LAN segments. Because VLANs are based on logical instead of physical connections, it is very flexible for user/host management, bandwidth allocation and resource optimization. There are two types of VLAN as follows:

**Port-Based VLAN:** Each physical switch port is configured with an access list specifying membership in a set of VLANs.

**ATM VLAN:** Using LAN Emulation (LANE) protocol to map Ethernet packets into ATM cells and deliver them to their destination by converting an Ethernet MAC address into an ATM address.

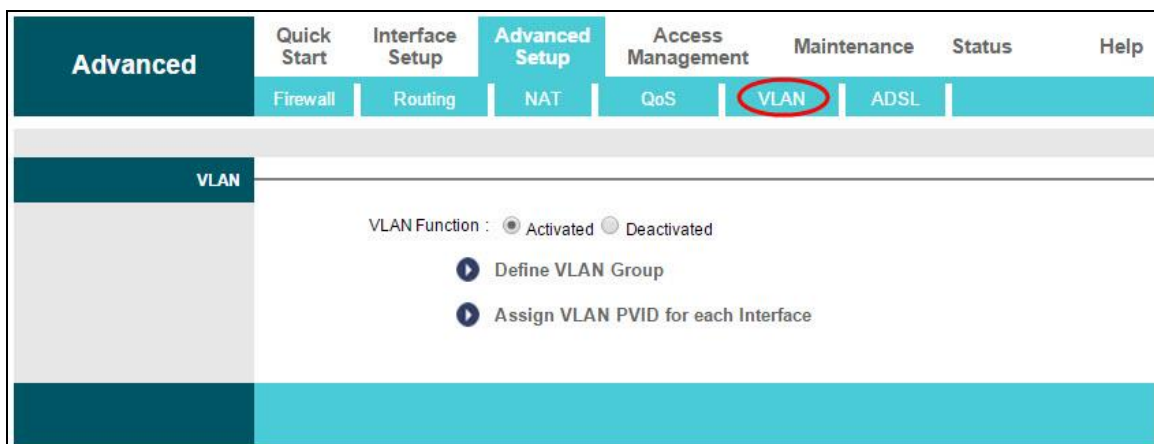

#### 1) Define VLAN Group

Click [Define VLAN Group](#), you can define VLAN groups in the following screen.

VLAN Group Setting

VLAN Index :

Active :  Yes  No

VLAN ID :  (Decimal)

ATM VCs :

|        |                                     |                                     |                                     |                                     |                                     |                                     |                                     |
|--------|-------------------------------------|-------------------------------------|-------------------------------------|-------------------------------------|-------------------------------------|-------------------------------------|-------------------------------------|
| Tagged | <input type="checkbox"/>            | <input type="checkbox"/>            | <input type="checkbox"/>            | <input type="checkbox"/>            | <input type="checkbox"/>            | <input type="checkbox"/>            | <input type="checkbox"/>            |
| Port # | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> |
|        | 0                                   | 1                                   | 2                                   | 3                                   | 4                                   | 5                                   | 6                                   |

Ethernet :

|        |                                     |                                     |                                     |                                     |
|--------|-------------------------------------|-------------------------------------|-------------------------------------|-------------------------------------|
| Tagged | <input type="checkbox"/>            | <input type="checkbox"/>            | <input type="checkbox"/>            | <input type="checkbox"/>            |
| Port # | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> |
|        | 1                                   | 2                                   | 3                                   | 4                                   |

Wireless LAN :

|        |                                     |                          |                          |                                     |
|--------|-------------------------------------|--------------------------|--------------------------|-------------------------------------|
| Tagged | <input type="checkbox"/>            | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/>            |
| Port # | <input checked="" type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input checked="" type="checkbox"/> |
|        | 1                                   | 2                        | 3                        | 4                                   |

VLAN Group Summary

| Group | Active | ID | VLAN Group Ports                          | VLAN Tagged Ports |
|-------|--------|----|---|-------------------|
| 1     | Yes    | 1  | e4,e3,e2,e1,w1,w4,p0,p1,p2,p3,p4,p5,p6,p7 |                   |

p:pvc, e:ethernet, and wlan(w4:Guest Network)

- **VLAN Index:** Select VLAN Index for this VC. You can specify 8 groups in maximum.
- **VLAN ID:** This indicates the VLAN group.
- **ATM VCs:** Select ATM VCs as members of VLAN, and if you leave the Tagged blank, the tag in frames will be deleted when transmitted from the VC.
- **Ethernet:** Select the Ethernet port as a member of VLAN.
- **Wireless LAN:** Select the wireless LAN port as a member of VLAN, and if you leave the Tagged blank, the tag in frames will be deleted when transmitted from the port.
- **VLAN Group Summary:** This displays the information about the VLAN Groups.

## 2) Assign VLAN PVID for each Interface

Click [Assign VLAN PVID for each Interface](#), you can assign the PVID for each interface in the following screen.

- **PVID:** Each physical port has a default VID called PVID (Port VID). PVID is assigned to untagged frames or priority tagged frames (frames with null (0) VID) received on this port.

#### 4.3.6 ADSL

Go to [Advanced Setup](#) → [ADSL](#), and you can select ADSL Mode and ADSL Type in the following screen. The ADSL feature can be selected when you meet the physical connection problem. Please check the proper settings with your ISP.

- **ADSL Mode:** Select the ADSL operation mode which your ADSL connection uses.
- **ADSL Type:** Select the ADSL operation type which your ADSL connection uses.

## 4.4 Access Management

Choose [Access Management](#), and you will see the following submenus. Click any of them, and you can configure the corresponding function.



### 4.4.1 ACL

Go to [Access Management](#) → [ACL](#), you will see the following screen. You can specify the client to access the ADSL modem router once setting his IP as a Secure IP Address through selected applications.

The screenshot shows the ACL configuration page. The 'Access Management' menu is selected, and the 'ACL' sub-menu is circled in red. The page is divided into sections: ACL IP Version, Access Control Setup, Access Control Editing, and Access Control Listing.

**ACL IP Version:** IP Version :  IPv4  IPv6

**Access Control Setup:** ACL :  Activated  Deactivated

**Access Control Editing:**

ACL Rule Index : 1 ▼

Active :  Yes  No

Secure IP Address : 0.0.0.0 ~ 0.0.0.0 (0.0.0.0 ~ 0.0.0.0 means all IPs)

Application : ALL ▼

Interface : LAN ▼

**Access Control Listing:**

| Index | Active | Secure IP Address | Application | Interface |
|-------|--------|-------------------|-------------|-----------|
| 1     | Yes    | 0.0.0.0-0.0.0.0   | ALL         | LAN       |

Buttons: SAVE, DELETE, CANCEL

- **ACL:** If [Activated](#), the IP addresses which are contained in the Access Control List can access to the modem router. If [Deactivated](#), all IP addresses can access to the modem router.
- **ACL Rule Index:** Select the ACL rule index for the entry.
- **Active:** Select [Yes](#) to enable the ACL rule.
- **Secure IP Address:** Select the IP addresses which are permitted to access to the modem router remotely. With the default IP 0.0.0.0, any client would be allowed to remotely access the ADSL modem router.
- **Application:** Select the application for the ACL rule, and then you can access the modem router through it.
- **Interface:** Select the interface for access: [LAN](#), [WAN](#) or [Both](#).

- **Access Control Listing:** This displays the information about the ACL Rules.

### 4.4.2 Filter

Go to [Access Management](#) → [Filter](#), you will see the Filter screen (the default is IP/MAC Filter screen). The filtering feature includes [IP/MAC Filter](#), [Application Filter](#), and [URL Filter](#). The feature makes it possible for administrators to control users' access to the Internet and protect the networks.

#### 4.4.2.1 IP Filter

Select [IP/MAC Filter](#) as the Filter type, and select [IP](#) as the Rule type, then you can configure the filter rules based on IP address. The filtering includes [Outgoing](#) and [Incoming](#), and the detailed descriptions are provided below.

The screenshot shows the configuration page for IP/MAC filters. The navigation menu at the top includes 'Access Management', 'Quick Start', 'Interface Setup', 'Advanced Setup', 'Access Management', 'Maintenance', 'Status', and 'Help'. Under 'Access Management', 'Filter' is highlighted and circled in red. The main content area is titled 'Filter' and contains several sections:

- Filter Type:** 'Filter Type Selection' is set to 'IP / MAC Filter' (circled in red).
- IP / MAC Filter Set Editing:** 'IP / MAC Filter Set Index' is 1, 'Interface' is PVC0, and 'Direction' is Both.
- IP / MAC Filter Rule Editing:** 'IP / MAC Filter Rule Index' is 1, 'Rule Type' is IP (circled in red), and 'Active' is set to No.
- Source IP Address:** Fields for Source IP Address, Subnet Mask, and Port Number (0).
- Destination IP Address:** Fields for Destination IP Address, Subnet Mask, and Port Number (0).
- Protocol:** Set to TCP.
- Rule Unmatched:** Set to Forward.
- IP / MAC Filter Listing:** A table showing a list of filter rules.

| # | Active | Src Address/Mask | Dest IP/Mask | Src Port | Dest Port | Protocol | Unmatched |
|---|--------|------------------|--------------|----------|-----------|----------|-----------|
| 1 | -      | -                | -            | -        | -         | -        | -         |
| 2 | -      | -                | -            | -        | -         | -        | -         |
| 3 | -      | -                | -            | -        | -         | -        | -         |
| 4 | -      | -                | -            | -        | -         | -        | -         |
| 5 | -      | -                | -            | -        | -         | -        | -         |
| 6 | -      | -                | -            | -        | -         | -        | -         |

At the bottom of the page, there are buttons for 'SAVE', 'DELETE', and 'CANCEL'.

- **Filter Type Selection:** Select the filter type for the configuration below.

- **IP/MAC Filter Set Index:** Select the Set index for the IP Filter entry. This index can match with six IP / MAC Filter Rule Indexes.
- **Interface:** Select the interface for the entry.

 **Note:**

If select PVC0~PVC7 as an interface, the filter will match the IP traffic of WAN port with specified IPs (Source IP Address and Destination IP Address). If select LAN as an interface, the filter will match the IP traffic of LAN port with specified IPs.

- **Direction:** Select the direction for this IP Filter rule. There are three filtering directions: [Both](#), [Incoming](#) and [Outgoing](#).

 **Note:**

Incoming means that IP traffic which is coming into the modem router, and the Outgoing means that IP traffic which is going out the modem router.

- **IP/MAC Filter Rule Index:** Select the Rule index for the IP Filter entry.

 **Note:**

You should set [IP/MAC Filter Set Index](#) and [IP/MAC Filter Rule Index](#) together to appoint the address (shown in the Filter List) for the IP Filter rule. For example, (1, 2), it means the rule will be shown in the row 2 IP/MAC Filter Set Index 1.

- **Rule Type:** For IP Filter, please select [IP](#) here.
- **Active:** Select [Yes](#) to make the rule to take effect.
- **Source IP Address:** Enter the source IP address for the rule. You can enter 0.0.0.0; it means that all IP addresses are controlled by the rule.
- **Destination IP Address:** Enter the destination IP address for the rule. You can enter 0.0.0.0, which means that all IP addresses are controlled by the rule. The set of Subnet Mask and Port Number are same as Source IP Address.
- **Subnet Mask:** Enter the Subnet Mask for the rule.
- **Port Number:** Enter the Port Number for the rule. You can enter 0, which means that all ports are controlled by the rule.
- **Protocol:** Select the protocol: [TCP](#), [UDP](#) or [ICMP](#) for the filter rule.
- **Rule Unmatched:** If the current rule can not match, and you select [Forward](#), the modem router will skip the rule and transmit directly. If you select [Next](#), the modem router will find the next filter rule (show in Filter list) to match.
- **IP/MAC Filter Listing:** This displays the information about the IP Filter rules.

### To add an IP Address filtering entry:

**For example:** If you desire to block E-mail received and sent by the IP address 192.168.1.7 on your local network and wish to make the PCs with IP address 192.168.1.8 unable to visit the website of IP address 202.96.134.12, while other PCs have no limit, you can configure the rules as follows. Presume the rules are both aimed at the interface PVC0, and their indexes are (1, 1), (1, 2) and (1, 3).

**Step 1:** Select [IP/MAC Filter](#) as the Filter Type Selection.

Filter Type Selection :

Select **IP** as the Rule Type on the Filter screen, then you can configure the specific rule for the example.

Rule Type :

**Step 2:** Select **IP/MAC Filter Set Index** and **IP/MAC Filter Rule Index** for the rule, then select the Interface **PVC0**, and select the Direction **Both** for the first rule.

|                              |   |
|------------------------------|---|
| IP / MAC Filter Set Index :  | <input type="text" value="1"/>                                |
| Interface :                  | <input type="text" value="PVC0"/>                             |
| Direction :                  | <input type="text" value="Both"/>                             |
| <hr/>                        |   |
| IP / MAC Filter Rule Index : | <input type="text" value="1"/>                                |
| Rule Type :                  | <input type="text" value="IP"/>                               |
| Active :                     | <input type="radio"/> Yes <input checked="" type="radio"/> No |

 **Note:**

If you want to make the rule take effect, please select **Yes** to activate the rule.

**Step 3:** Enter the **Source IP Address**, **Destination IP Address**, **Subnet Mask** and **Port Number** in the corresponding field.

|                          |  |                            |
|--------------------------|--|----------------------------|
| Source IP Address :      | <input type="text" value="192.168.1.7"/>     | (0.0.0.0 means Don't care) |
| Subnet Mask :            | <input type="text" value="255.255.255.255"/> |                            |
| Port Number :            | <input type="text" value="0"/>               | (0 means Don't care)       |
| <hr/>                    |  |                            |
| Destination IP Address : | <input type="text" value="0.0.0.0"/>         | (0.0.0.0 means Don't care) |
| Subnet Mask :            | <input type="text" value="0.0.0.0"/>         |                            |
| Port Number :            | <input type="text" value="25"/>              | (0 means Don't care)       |
| <hr/>                    |  |                            |
| Protocol :               | <input type="text" value="TCP"/>             |                            |
| Rule Unmatched :         | <input type="text" value="Next"/>            |                            |

**Step 4:** Select the Protocol as **TCP** and select the Unmatched rule as **Next**.

**Step 5:** Finally, click **SAVE** to save the entry.

**Step 6:** Go to Step 2 to configure the next two rules: Block E-mail received by the IP address 192.168.1.7 on your local network; Make the PC with IP address 192.168.1.8 unable to visit the website of IP address 202.96.134.12.

 **Note:**

After you complete the IP filter rules for the example, the Filter list will show as follows. You can enter the **IP / MAC Filter Set Index** to view the information about the rule.

| # | Active | Src Address/Mask                | Dest IP/Mask                      | Src Port | Dest Port | Protocol | Unmatched |
|---|--------|---------------------------------|-----------------------------------|----------|-----------|----------|-----------|
| 1 | Yes    | 192.168.1.7/<br>255.255.255.255 | 0.0.0.0/<br>0.0.0.0               | 0        | 25        | TCP      | Next      |
| 2 | Yes    | 192.168.1.7/<br>255.255.255.255 | 0.0.0.0/<br>0.0.0.0               | 0        | 110       | TCP      | Forward   |
| 3 | Yes    | 192.168.1.8/<br>255.255.255.255 | 202.96.134.12/<br>255.255.255.255 | 0        | 0         | TCP      | Forward   |

Other operations for the entries:

Select [IP/MAC Filter Set Index](#) and [IP/MAC Filter Rule Index](#) to view or modify the entry.

Select [IP/MAC Filter Set Index](#) and [IP/MAC Filter Rule Index](#) to locate the specific rule, and then click [DELETE](#) to delete the entry.

#### 4.4.2.2 MAC Filter

Select [IP/MAC Filter](#) as the Filter type, and select [MAC](#) as the Rule type, and then you can configure the filter rules based on MAC address.

**Access Management** | Quick Start | Interface Setup | Advanced Setup | **Access Management** | Maintenance | Status | Help

ACL | Filter | SNMP | UPnP | DDNS | CWMP

**Filter**

Filter Type

Filter Type Selection: **IP / MAC Filter**

IP / MAC Filter Set Editing

IP / MAC Filter Set Index: 1  
Interface: PVC0  
Direction: Both

IP / MAC Filter Rule Editing

IP / MAC Filter Rule Index: 1  
Rule Type: **MAC**  
Active:  Yes  No

MAC Address: 00:00:00:00:00:00  
Rule Unmatched: Forward

IP / MAC Filter Listing

| # | Active | Src Address/Mask | Dest IP/Mask | Src Port | Dest Port | Protocol | Unmatched |
|---|--------|------------------|--------------|----------|-----------|----------|-----------|
| 1 | -      | -                | -            | -        | -         | -        | -         |
| 2 | -      | -                | -            | -        | -         | -        | -         |
| 3 | -      | -                | -            | -        | -         | -        | -         |
| 4 | -      | -                | -            | -        | -         | -        | -         |
| 5 | -      | -                | -            | -        | -         | -        | -         |
| 6 | -      | -                | -            | -        | -         | -        | -         |

SAVE | DELETE | CANCEL

- **Rule Type:** Select MAC for the MAC Filter rule.
- **Active:** Select [Yes](#) to make the rule to take effect.
- **MAC Address:** Enter the MAC address for the rule.

 


- **Rule Unmatched:** If the current rule can not match, and you select [Forward](#), the modem router will skip the rule and transmit directly. If you select [Next](#), the modem router will find the next filter rule (show in Filter list) to match.
- **IP/MAC Filter Listing:** This displays the information about the MAC Filter rules.

#### To add a MAC Address filtering entry:


**For example:** If you want to block the PCs with MAC addresses 00:0A:EB:00:07:BE and 00:0A:EB:00:07:5F to access the internet, you can configure as follows. Presume the rules are both aimed at the interface PVC0, and their indexes are (1, 1) and (1, 2).

**Step 1:** Select [IP/MAC Filter](#) as the Filter Type Selection.




Filter Type Selection : [IP / MAC Filter](#) ▼

 Select the [MAC](#) as the Rule Type on the Filter screen, then you can configure the specific rule for the example.



Rule Type : [MAC](#) ▼

**Step 2:** Select the [IP/MAC Filter Set Index](#) and [IP/MAC Filter Rule Index](#) for the rule, then select the Interface [PVC0](#), and select the Direction [Outgoing](#) for the first rule.

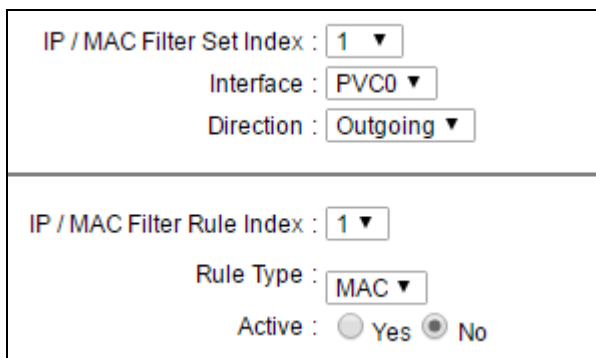

IP / MAC Filter Set Index : [1](#) ▼  
 Interface : [PVC0](#) ▼  
 Direction : [Outgoing](#) ▼


---

IP / MAC Filter Rule Index : [1](#) ▼  
 Rule Type : [MAC](#) ▼  
 Active :  Yes  No

 **Note:**

 If you want to make the rule take effect, please select [Yes](#) to activate the rule.

**Step 3:** Enter the [MAC Address](#) and select the Unmatched rule as [Next](#).



MAC Address : [00:0A:EB:00:07:BE](#)  
 Rule Unmatched : [Next](#) ▼

**Step 4:** Finally, click [SAVE](#) to save the entry.

**Step 5:** Go to Step 2 to configure the next rule: Block the PC with MAC address 00:0A:EB:00:07:BE to access the internet.

 **Note:**

After you complete the MAC filter rules for the example, the Filter list will show as follows. You can enter the [IP / MAC Filter Set Index](#) to view the information about the rule.

| # | Active | Src Address/Mask  | Dest IP/Mask | Src Port | Dest Port | Protocol | Unmatched |
|---|--------|-------------------|--------------|----------|-----------|----------|-----------|
| 1 | Yes    | 00:0a:eb:00:07:be | -            | -        | -         | -        | Next      |
| 2 | Yes    | 00:0a:eb:00:07:5f | -            | -        | -         | -        | Forward   |

Other operations for the entries:

Select [IP / MAC Filter Set Index](#) and [IP/MAC Filter Rule Index](#) to view or modify the entry.

Select [IP / MAC Filter Set Index](#) and [IP/MAC Filter Rule Index](#) to locate the specific rule, and then click [DELETE](#) to delete the entry.

#### 4.4.2.3 Application Filter

Select [Application Filter](#) as the Filter type, and then you can configure the filter rules based on application.

The screenshot shows the 'Filter' configuration page. The 'Filter' tab is selected under 'Access Management'. The 'Filter Type' is set to 'Application Filter'. The 'Application Filter' section is active, showing options to activate or deactivate the filter, and radio buttons for 'Allow' or 'Deny' for ICQ, MSN, YMSG, and Real Audio/Video.

- **Filter Type Selection:** Select the [Application Filter](#) for the next configuration.
- **Application Filter:** Activate or deactivate the function.
- **ICQ & MSN & YMSG & Real Audio/Video:** Select [Allow](#) or [Deny](#) for these applications. If you select [Allow](#), the modem router will accept the application; if you select [Deny](#), the modem router will forbid the application.

#### 4.4.2.4 URL Filter

Select [URL Filter](#) as the Filter type, and then you can configure the filter rules based on URL.

| Access Management   | Quick Start | Interface Setup  | Advanced Setup | Access Management | Maintenance | Status | Help |
|---|-------------|------------------|----------------|-------------------|-------------|--------|------|
|   | ACL         | Filter           | SNMP           | UPnP              | DDNS        | CWMP   |      |
| <b>Filter</b>   |             |                  |                |                   |             |        |      |
| Filter Type   |             |                  |                |                   |             |        |      |
| Filter Type Selection: <span>URL Filter</span>  |             |                  |                |                   |             |        |      |
| URL Filter Editing  |             |                  |                |                   |             |        |      |
| Active: <input type="radio"/> Yes <input checked="" type="radio"/> No   |             |                  |                |                   |             |        |      |
| Rule Type: <span>IP</span>  |             |                  |                |                   |             |        |      |
| URL Index: <span>1</span>   |             |                  |                |                   |             |        |      |
| URL: <input type="text"/>   |             |                  |                |                   |             |        |      |
| Local Start IP: <input type="text"/>  |             |                  |                |                   |             |        |      |
| Local End IP: <input type="text"/> (0.0.0.0 ~ 0.0.0.0 means all IPs)  |             |                  |                |                   |             |        |      |
| URL Filter Listing  |             |                  |                |                   |             |        |      |
|   | Index       | IP / MAC Address | URL            |                   |             |        |      |
|   | 1           |                  |                |                   |             |        |      |
|   | 2           |                  |                |                   |             |        |      |
|   | 3           |                  |                |                   |             |        |      |
|   | 4           |                  |                |                   |             |        |      |
|   | 5           |                  |                |                   |             |        |      |
|   | 6           |                  |                |                   |             |        |      |
|   | 7           |                  |                |                   |             |        |      |
|   | 8           |                  |                |                   |             |        |      |
|   | 9           |                  |                |                   |             |        |      |
|   | 10          |                  |                |                   |             |        |      |
|   | 11          |                  |                |                   |             |        |      |
|   | 12          |                  |                |                   |             |        |      |
|   | 13          |                  |                |                   |             |        |      |
|   | 14          |                  |                |                   |             |        |      |
|   | 15          |                  |                |                   |             |        |      |
|   | 16          |                  |                |                   |             |        |      |
| <input type="button" value="SAVE"/> <input type="button" value="DELETE"/> <input type="button" value="CANCEL"/> |             |                  |                |                   |             |        |      |

- **Filter Type Selection:** Select the URL Filter for the next configuration.
- **Active:** Select **Yes** to make the rule to take effect.
- **URL Index:** Select the index for the URL Filter entry.
- **URL:** Enter the URL for this URL Filter.
- **URL Filter Listing:** This displays the information about the URL Filter rules.

#### To add a URL filter entry:

**For example:** If you want to forbid the user to access the website: [www.yahoo.com](http://www.yahoo.com). Presume the rule is aimed at the interface PVC0, and its index is 1.

**Step 1:** Select **URL Filter** as the Filter Type Selection.

**Step 2:** Select **Index** for the rule, and then enter the website in the URL field.

**Step 3:** Finally, select **Yes** to activate the rule, and then click **SAVE** to save the entry.

#### Other operations for the entries:

Select **URL Index** to view or modify the entry.

Select **URL Index** to locate the specific rule, and then click **DELETE** to delete the entry.

### 4.4.3 SNMP

Go to [Access Management](#) → [SNMP](#), you will see the SNMP screen. The Simple Network Management Protocol (SNMP) is used for exchanging information between network devices.

The screenshot shows the web interface for configuring SNMP. The navigation menu at the top includes 'Access Management', 'Quick Start', 'Interface Setup', 'Advanced Setup', 'Access Management', 'Maintenance', 'Status', and 'Help'. Under 'Advanced Setup', the 'SNMP' option is highlighted with a red circle. The main content area is titled 'SNMP' and contains the following configuration options:

- SNMP:  Activated  Deactivated
- Get Community:
- Set Community:
- Trap Host:

A 'SAVE' button is located at the bottom of the configuration area.

- **Get Community:** Set the password for the incoming Get and Get next requests from the management station.
- **Set Community:** Set the password for incoming Set requests from the management station.

### 4.4.4 UPnP

Go to [Access Management](#) → [UPnP](#), you can configure the UPnP in the screen.

UPnP (Universal Plug and Play) is a distributed, open networking standard that uses TCP/IP for simple peer-to-peer network connectivity between devices. An UPnP device can dynamically join a network, obtain an IP address, convey its capabilities and learn about other devices on the network. In turn, a device can leave a network smoothly and automatically when it is no longer in use. UPnP broadcasts are only allowed on the LAN.

The screenshot shows the web interface for configuring UPnP. The navigation menu at the top includes 'Access Management', 'Quick Start', 'Interface Setup', 'Advanced Setup', 'Access Management', 'Maintenance', 'Status', and 'Help'. Under 'Advanced Setup', the 'UPnP' option is highlighted with a red circle. The main content area is titled 'Universal Plug & Play' and contains the following configuration options:

- UPnP:  Activated  Deactivated
- Auto-configured:  Activated  Deactivated (by UPnP-enabled Application)

A 'SAVE' button is located at the bottom of the configuration area.

- **UPnP:** Activate or deactivate the UPnP function. Only when the function is activated can the UPnP take effect.
- **Auto-configured:** If you activate the function, the UPnP network devices can automatically configure network addressing, announce their presence in the network to other UPnP devices and enable exchange of simple product and service descriptions.

#### 4.4.5 DDNS

Go to [Access Management](#) → [DDNS](#), you can configure the DDNS function in the screen.

The modem router offers a Dynamic Domain Name System ([DDNS](#)) feature. The feature lets you use a static host name with a dynamic IP address. User should type the host name, username and password assigned to your ADSL modem router by your Dynamic DNS provider.

The screenshot shows the web interface for configuring DDNS. The navigation menu includes 'Access Management', 'Maintenance', 'Status', and 'Help'. Under 'Access Management', there are sub-menus for 'ACL', 'Filter', 'SNMP', 'UPnP', 'DDNS' (circled in red), and 'CWMP'. The 'Dynamic DNS' section contains the following configuration options:

- Dynamic DNS:  Activated  Deactivated
- Service Provider:
- My Host Name:
- Username:
- Password:

A 'SAVE' button is located at the bottom of the configuration area.

- **Dynamic DNS:** Activate the DDNS function or not.
- **Service Provider:** This field displays the service provider of DDNS.
- **My Host Name:** Enter your host name here.
- **Username & Password:** Type the [Username](#) and [Password](#) for your DDNS account.

#### 4.4.6 CWMP

Go to [Access Management](#) → [CWMP](#), you can configure the CWMP function in the screen.

The modem router offers CWMP feature. The function supports TR-069 protocol which collects information, diagnoses the devices and configures the devices automatically via ACS (Auto-Configuration Server).

| Access Management  | Quick Start | Interface Setup | Advanced Setup | Access Management | Maintenance | Status      | Help |
|--|-------------|-----------------|----------------|-------------------|-------------|-------------|------|
|  | ACL         | Filter          | SNMP           | UPnP              | DDNS        | <b>CWMP</b> |      |
| <b>CWMP Setup</b>  |             |                 |                |                   |             |             |      |
| CWMP : <input type="radio"/> Activated <input checked="" type="radio"/> Deactivated            |             |                 |                |                   |             |             |      |
| Login ACS  |             |                 |                |                   |             |             |      |
| URL : <input type="text" value="http://0/"/>   |             |                 |                |                   |             |             |      |
| User Name : <input type="text"/>   |             |                 |                |                   |             |             |      |
| Password : <input type="text"/>  |             |                 |                |                   |             |             |      |
| Connection Request   |             |                 |                |                   |             |             |      |
| Path : <input type="text" value="/tr069"/>   |             |                 |                |                   |             |             |      |
| Port : <input type="text" value="7547"/>   |             |                 |                |                   |             |             |      |
| UserName : <input type="text"/>  |             |                 |                |                   |             |             |      |
| Password : <input type="text"/>  |             |                 |                |                   |             |             |      |
| Periodic Inform  |             |                 |                |                   |             |             |      |
| Periodic Inform : <input checked="" type="radio"/> Activated <input type="radio"/> Deactivated |             |                 |                |                   |             |             |      |
| Interval(s) : <input type="text" value="86400"/>   |             |                 |                |                   |             |             |      |
| <input type="button" value="SAVE"/> <input type="button" value="CANCEL"/>                      |             |                 |                |                   |             |             |      |

- **CWMP:** Activate the CWMP function or not.
- **URL:** Enter the website of ACS which is provided by your ISP.
- **User Name/Password:** Enter the username and password to login the ACS server.
- **Path:** Enter the path that connects to the ACS server.
- **Port:** Enter the port that connects to the ACS server.
- **UserName/Password:** Enter the username and password that provided the ACS server to login the modem router.
- **Periodic Inform:** Activate or deactivate the function. If activated, the information will be informed to ACS server periodically.
- **Interval:** Enter the interval time here.

## 4.5 Maintenance

Choose [Maintenance](#), and you will see the following submenus. Click any of them, and you can configure the corresponding function.

| Quick Start    | Interface Setup | Advanced Setup | Access Management | Maintenance | Status | Help |
|----------------|-----------------|----------------|-------------------|-------------|--------|------|
| Administration | Time Zone       | Firmware       | SysRestart        | Diagnostics |        |      |

### 4.5.1 Administration

Go to [Maintenance](#) → [Administration](#), and you can set new password for admin in the screen.

| Maintenance   | Quick Start    | Interface Setup | Advanced Setup | Access Management | Maintenance | Status | Help |
|---|----------------|-----------------|----------------|-------------------|-------------|--------|------|
|   | Administration | Time Zone       | Firmware       | SysRestart        | Diagnostics |        |      |
| <b>Administrator</b>  |                |                 |                |                   |             |        |      |
| Username : admin  |                |                 |                |                   |             |        |      |
| New Password : <input type="text"/>                                       |                |                 |                |                   |             |        |      |
| Confirm Password : <input type="text"/>                                   |                |                 |                |                   |             |        |      |
| <input type="button" value="SAVE"/> <input type="button" value="CANCEL"/> |                |                 |                |                   |             |        |      |

👉 Note:

- 1) There is only one account that can access web management page. The default account is **admin**, and the password is **admin**. Admin has read/write access privilege.
- 2) When you change the password, you should enter the new password twice, and then click **SAVE** to make the new password take effect.

#### 4.5.2 Time Zone

Go to [Maintenance](#) → [Time Zone](#), and you can configure the system time in the screen.

The system time is the time used by the device for scheduling services. There are three methods to configure the time. You can manually set the time or connect to a NTP (Network Time Protocol) server. If a NTP server is set, you will only need to set the time zone. If you manually set the time, you may also set Daylight Saving dates and the system time will automatically adjust on those dates.

##### 1) NTP Server automatically

Select [NTP Server automatically](#) as the Synchronize time, then you only need to set the time zone.


| Maintenance   | Quick Start    | Interface Setup | Advanced Setup | Access Management | Maintenance | Status | Help |
|---|----------------|-----------------|----------------|-------------------|-------------|--------|------|
|   | Administration | Time Zone       | Firmware       | SysRestart        | Diagnostics |        |      |
| <b>Time Zone</b>  |                |                 |                |                   |             |        |      |
| Current Date/Time : 01/03/2000 22:06:48   |                |                 |                |                   |             |        |      |
| <b>Time Synchronization</b>   |                |                 |                |                   |             |        |      |
| Synchronize time with : <input checked="" type="radio"/> NTP Server automatically         |                |                 |                |                   |             |        |      |
| <input type="radio"/> PC's Clock<br><input type="radio"/> Manually                        |                |                 |                |                   |             |        |      |
| Time Zone : (GMT) Greenwich Mean Time : Dublin, Edinburgh, London, Lisbon ▼               |                |                 |                |                   |             |        |      |
| Daylight Saving : <input type="radio"/> Enabled <input checked="" type="radio"/> Disabled |                |                 |                |                   |             |        |      |
| NTP Server Address : <input type="text" value="0.0.0.0"/> (0.0.0.0: Default Value)        |                |                 |                |                   |             |        |      |
| <input type="button" value="SAVE"/> <input type="button" value="CANCEL"/>                 |                |                 |                |                   |             |        |      |

 **Note:**

The ADSL modem router is built-in some NTP Servers. When the modem router connects to the internet, the modem router will get the system time automatically from the NTP Server. You can also configure the NTP Server address manually, and then the modem router will get the time from the specific Server firstly.

## 2) PC's Clock

Select [PC's Clock](#) as the Synchronize time, and you don't need to set any items.

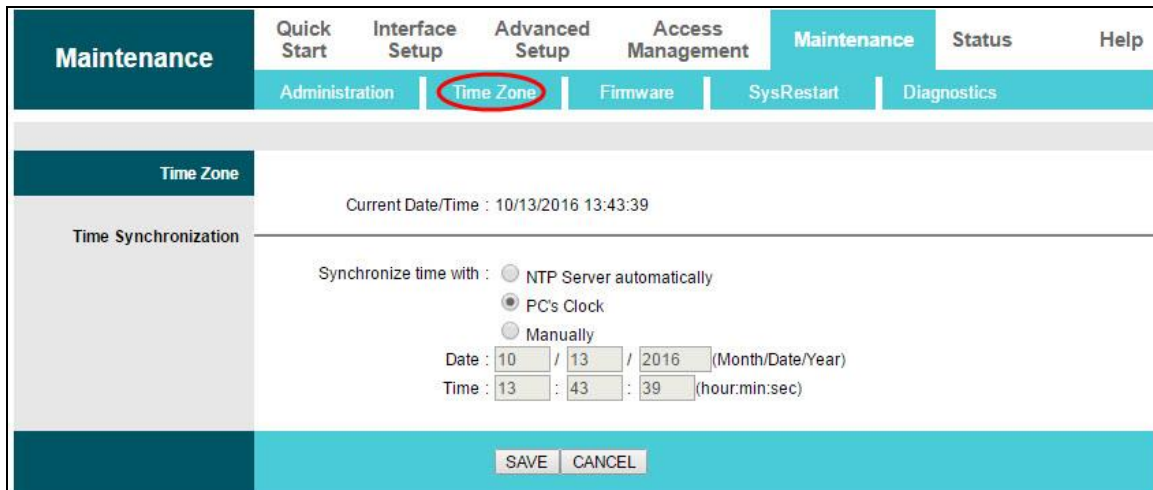

| Maintenance | Quick Start    | Interface Setup  | Advanced Setup | Access Management | Maintenance | Status | Help |
|-------------|----------------|------------------|----------------|-------------------|-------------|--------|------|
|             | Administration | <b>Time Zone</b> | Firmware       | SysRestart        | Diagnostics |        |      |

---

**Time Zone**

Current Date/Time : 10/13/2016 13:43:39

Time Synchronization

Synchronize time with :


- NTP Server automatically
- PC's Clock
- Manually

Date :  /  /  (Month/Date/Year)

Time :  :  :  (hour.min.sec)

## 3) Manually

Select [Manually](#) as the Synchronize time, and you need to set the date and time corresponding to the current time.

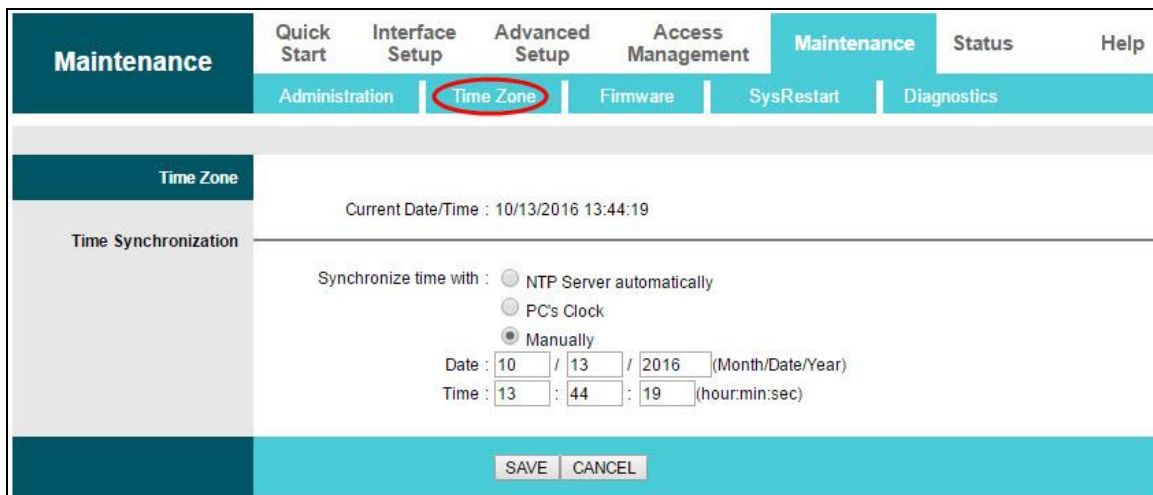

| Maintenance | Quick Start    | Interface Setup  | Advanced Setup | Access Management | Maintenance | Status | Help |
|-------------|----------------|------------------|----------------|-------------------|-------------|--------|------|
|             | Administration | <b>Time Zone</b> | Firmware       | SysRestart        | Diagnostics |        |      |

---

**Time Zone**

Current Date/Time : 10/13/2016 13:44:19

Time Synchronization

Synchronize time with :

- NTP Server automatically
- PC's Clock
- Manually


Date :  /  /  (Month/Date/Year)

Time :  :  :  (hour.min.sec)

### 4.5.3 Firmware

Go to [Maintenance](#) → [Firmware](#), and you can upgrade the firmware of the modem router in the screen. Make sure the firmware or romfile you want to use is on the local hard drive of the computer. Click [Choose File](#) to find the local hard drive and locate the firmware or romfile to be used for upgrade.



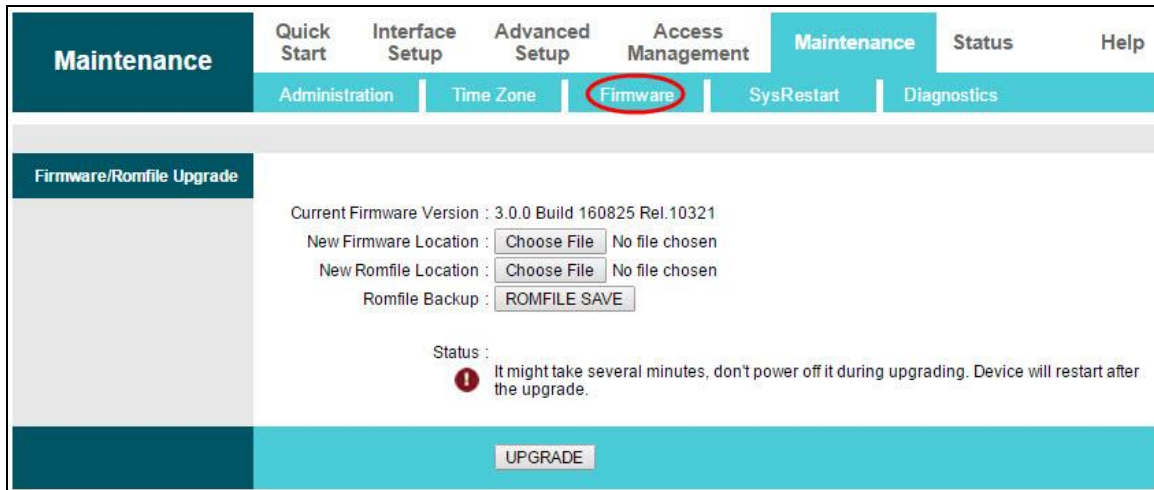

**To upgrade the modem router's firmware, follow these instructions below:**

Step 1: Click [Choose File](#) of [New Firmware Location](#) to locate the update file.


Step 2: Click [UPGRADE](#).

**Note:**



- 1) When you upgrade the modem router's firmware, you may lose its current configurations, so please back up the modem router's current settings before you upgrade its firmware.
- 2) Do not turn off the modem router or press the WPS/Reset button while the firmware is being upgraded.
- 3) The modem router will reboot after the upgrading has been finished.

**To back up the modem router's current settings:**

Step 1: Click [ROMFILE SAVE](#), click [OK](#) and then click [Save](#) in the following screens to proceed.

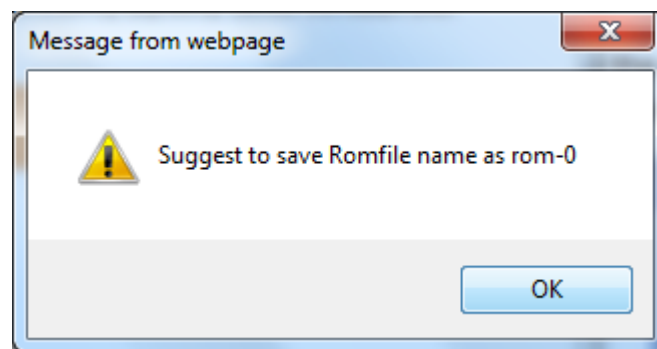

Step 2: Save the file as the appointed file.

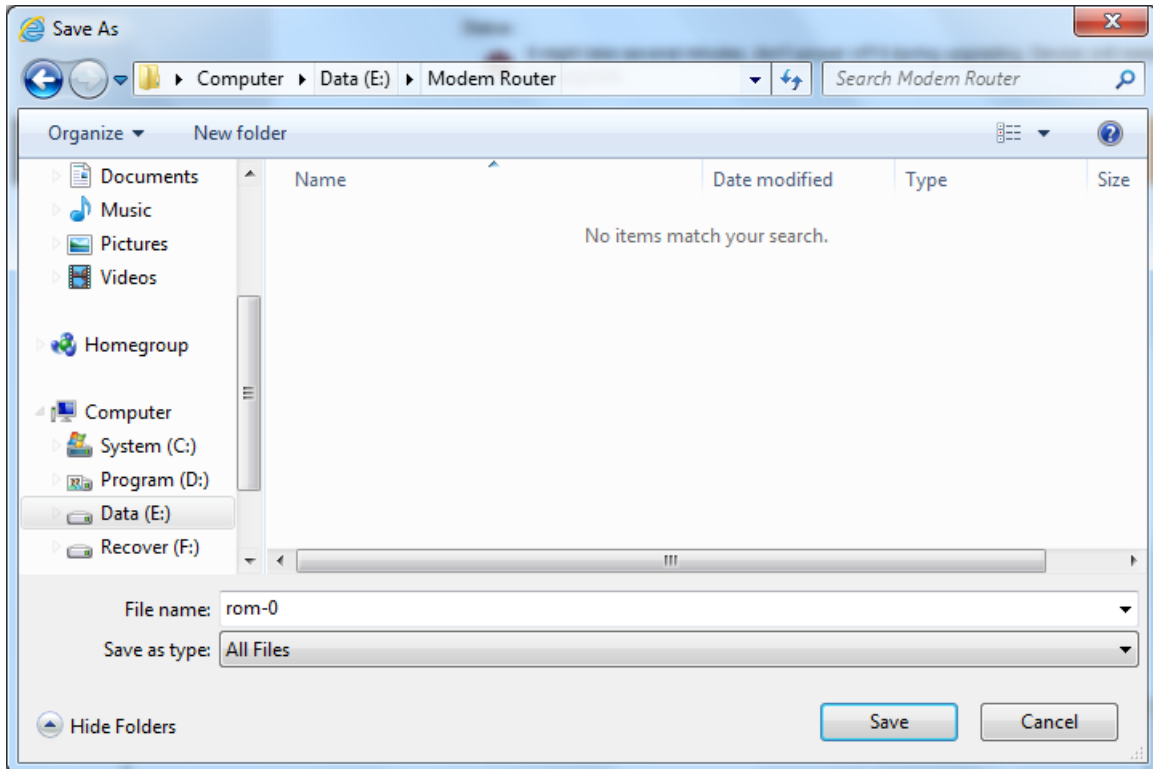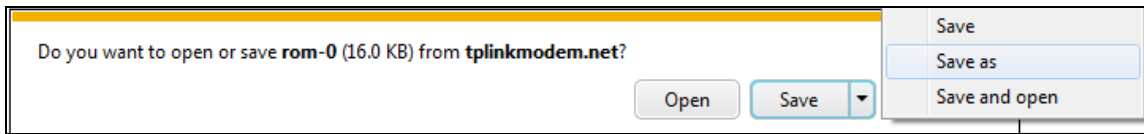


**To restore the modem router’s settings:**

Step 1: Click [Choose File of New Roomfile Location](#) to locate the update file for the device.

Step 2: Click [UPGRADE](#) to complete.

**4.5.4 SysRestart**

Go to [Maintenance](#) → [SysRestart](#), and you can select to restart the device with current settings or restore to factory default settings in the screen.

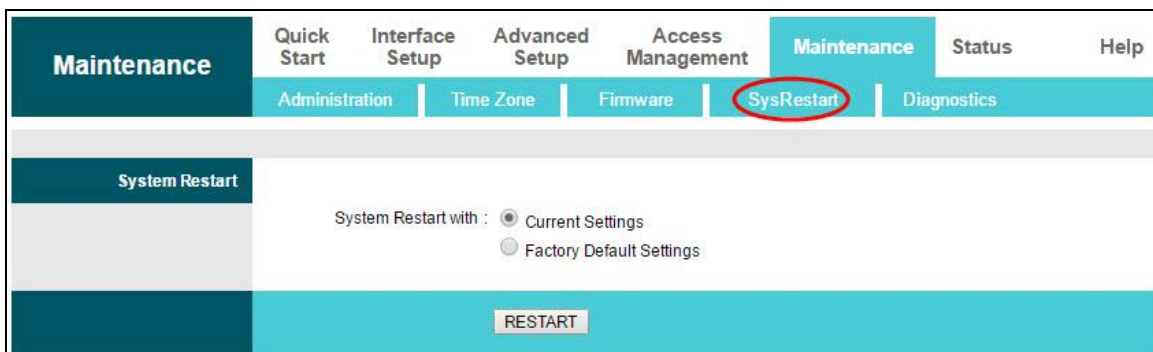

## 4.5.5 Diagnostics

Go to [Maintenance](#) → [Diagnostics](#), and you can view the test results for the connectivity of the physical layer and protocol layer for both LAN and WAN sides in the screen.

The screenshot displays the 'Diagnostics' page under the 'Maintenance' menu. The navigation bar includes 'Quick Start', 'Interface Setup', 'Advanced Setup', 'Access Management', 'Maintenance', 'Status', and 'Help'. The 'Diagnostics' sub-menu is highlighted with a red circle. The main content area is divided into two sections: 'Diagnostic Test' and 'Ping Tool'.

**Diagnostic Test**

Virtual Circuit: PVC0 ▼

|   |         |
|---|---------|
| >> Testing Ethernet LAN connection ...    | PASS    |
| >> Testing ADSL Synchronization .         | FAIL    |
| >> Testing ATM OAM segment ping ...       | SKIPPED |
| >> Testing ATM OAM end to end ping ...    | SKIPPED |
| >> Testing ATM OAM F4 segment ping ...    | SKIPPED |
| >> Testing ATM OAM F4 end to end ping ... | SKIPPED |
| >> Ping Primary Domain Name Server .      | SKIPPED |
| >> Ping www.yahoo.com ...                 | SKIPPED |

**Ping Tool**

IP Address/Domain Name:  Ping

- Info -

## 4.6 Help

Choose [Help](#), and you can view the help information for configuration of any function.

| Help              | Quick Start | Interface Setup | Advanced Setup   | Access Management | Maintenance | Status | Help |
|-------------------|-------------|-----------------|--|-------------------|-------------|--------|------|
| Quick Start       |             |                 | ▶ Quick Start  |                   |             |        |      |
| Interface Setup   |             |                 | ▶ Internet Settings<br>▶ LAN Settings<br>▶ Wireless LAN Settings<br>▶ 6RD Settings<br>▶ Guest Network Settings |                   |             |        |      |
| Advanced Setup    |             |                 | ▶ Firewall<br>▶ Routing<br>▶ NAT<br>▶ QoS<br>▶ VLAN<br>▶ ADSL  |                   |             |        |      |
| Access Management |             |                 | ▶ ACL<br>▶ IP Filter<br>▶ SNMP<br>▶ UPnP<br>▶ DDNS<br>▶ CWMP   |                   |             |        |      |
| Maintenance       |             |                 | ▶ Administration<br>▶ Time Zone<br>▶ Firmware<br>▶ SysRestart<br>▶ Diagnostics                                 |                   |             |        |      |
| Status            |             |                 | ▶ Device Info<br>▶ System Log<br>▶ Statistics  |                   |             |        |      |

 Note:

Click the tab, and you can get the corresponding information.


## Appendix A: Configuring the PC

We'll introduce how to install and configure the TCP/IP correctly on your computer. First make sure your Ethernet Adapter is working, refer to the adapter's manual if necessary.


The default IP address of the modem router is 192.168.1.1. And the default Subnet Mask is 255.255.255.0. These values can be changed as you desire. Here we use all the default values for description and take Windows XP as example.

### 1. Configure TCP/IP component

- 1) On the Windows taskbar, click Start, and then click Control Panel.
- 2) Click the [Network and Internet Connections](#) icon, and then click on the [Network Connections](#) tab in the appearing window.
- 3) Right click the icon that showed below, then select Properties on the prompt page.

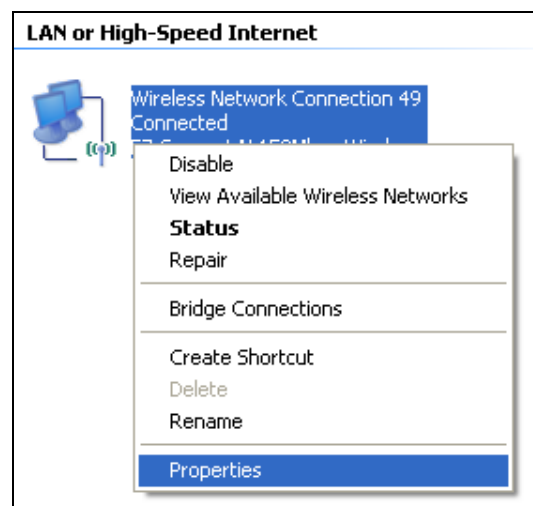

- 4) In the prompt page that showed below, double click on the [Internet Protocol \(TCP/IP\)](#).

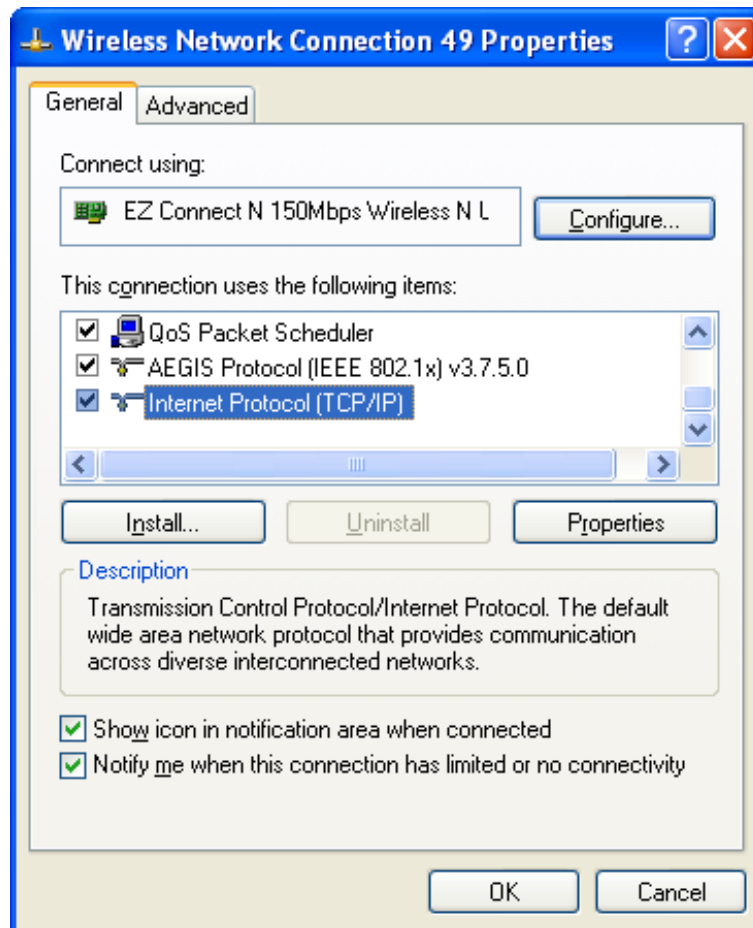


- 5) The following [TCP/IP Properties](#) window will display and the [IP Address](#) tab is open on this window by default.

Now you have two ways to configure the [TCP/IP](#) protocol below:


➤ **Setting IP address automatically**

Select [Obtain an IP address automatically](#), and choose [Obtain DNS server automatically](#), as shown in the Figure below:

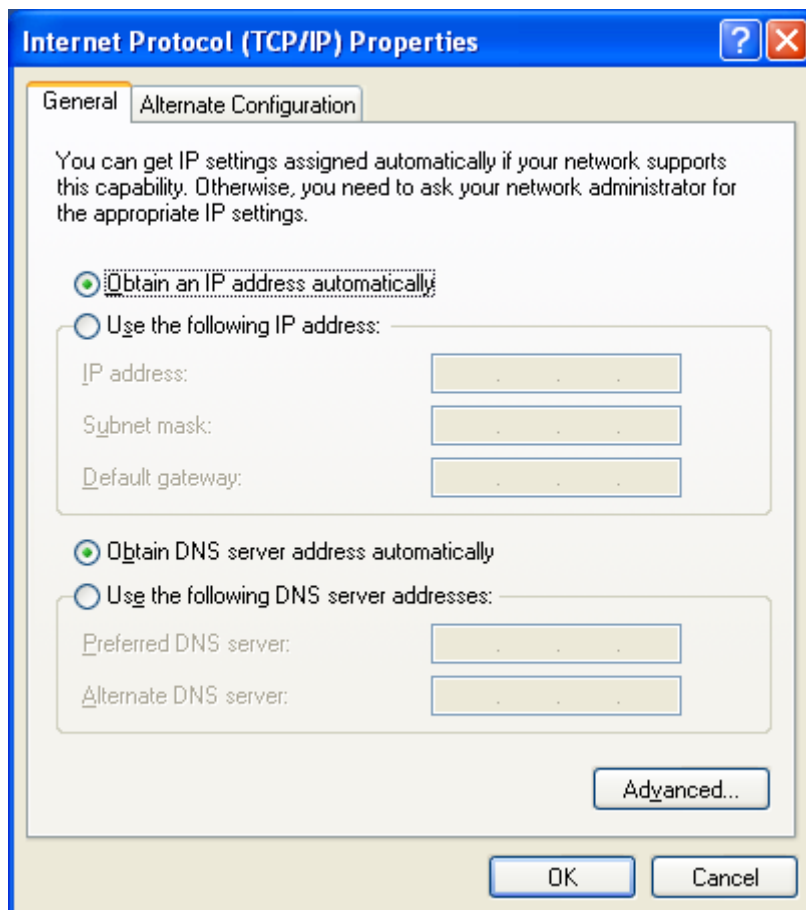

➤ **Setting IP address manually**

- 1) Select **Use the following IP address** radio button. And the following items available
- 2) If the modem router's LAN IP address is 192.168.1.1, specify the **IP address** as 192.168.1.x (x is from 2 to 254), and the **Subnet mask** as 255.255.255.0.
- 3) Type the modem router's LAN IP address (the default IP is 192.168.1.1) into the Default gateway field.
- 4) Select **Use the following DNS server addresses**. In the **Preferred DNS Server** field you can enter the same value as the **Default gateway** or type the local DNS server IP address.

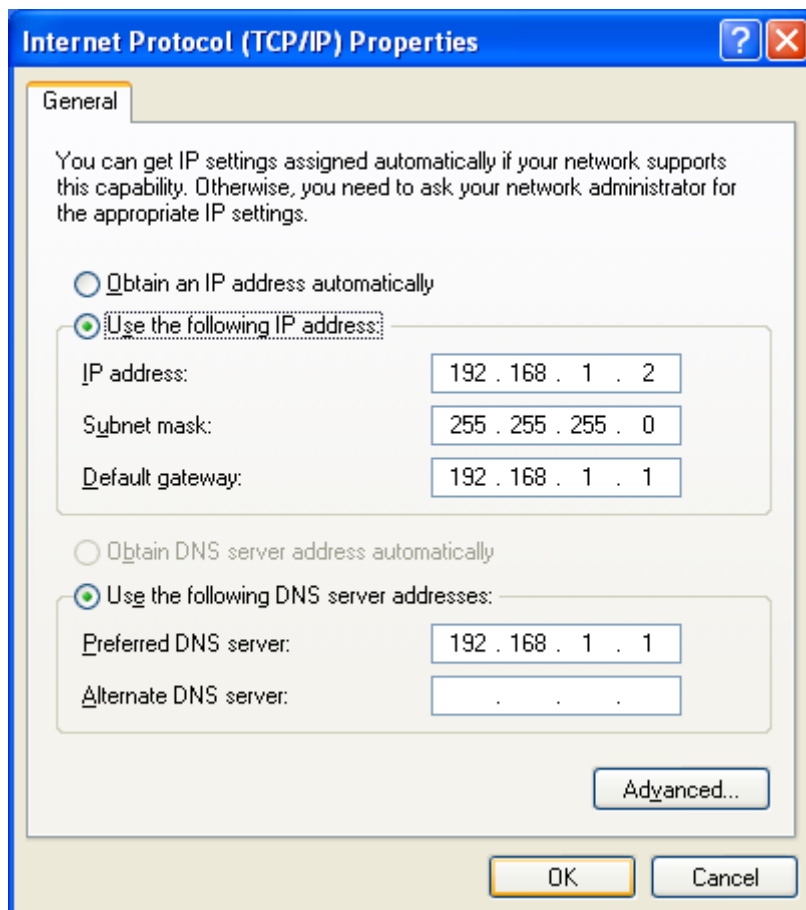

Now: Click **OK** to keep your settings.

## 2. Verify the network connection

Now, you can run the Ping command in the command prompt to verify the network connection. Please click the **Start** menu on your desktop, select **run** tab, type **cmd** or **command** in the field and press **Enter**. Type **ping 192.168.1.1** on the following screen, and then press **Enter**.

- If the result displayed is similar to the screen below, the connection between your PC and the router has been established.

```
Pinging 192.168.1.1 with 32 bytes of data:
Reply from 192.168.1.1: bytes=32 time<1ms TTL=64
Reply from 192.168.1.1: bytes=32 time<1ms TTL=64
Reply from 192.168.1.1: bytes=32 time<1ms TTL=64
Reply from 192.168.1.1: bytes=32 time<1ms TTL=64

Ping statistics for 192.168.1.1:
    Packets: Sent = 4, Received = 4, Lost = 0 (0% loss),
    Approximate round trip times in milli-seconds:
        Minimum = 0ms, Maximum = 0ms, Average = 0ms
```

- If the result displayed is similar to the screen shown below, it means that your PC has not connected to the router.



```
Pinging 192.168.1.1 with 32 bytes of data:

Request timed out.
Request timed out.
Request timed out.
Request timed out.

Ping statistics for 192.168.1.1:
    Packets: Sent = 4, Received = 0, Lost = 4 (100% loss),
```

You can check it by following the steps below:

**1) Is the connection between your PC and the router correct?**

The LEDs of LAN port which you link to the device and the LEDs on your PC's adapter should be lit.

**2) Is the TCP/IP configuration for your PC correct?**

If the router's IP address is 192.168.1.1, your PC's IP address must be within the range of 192.168.1.2 ~ 192.168.1.254.

## Appendix B: Troubleshooting

### T1. What can I do if I don't know or forget my password?

- 1) For default wireless password: Please refer to the [Wireless Password/PIN](#) labeled on the bottom of the modem router.
- 2) For the web management page password: Reset the modem router first and then use the default username and password: [admin/admin](#).

### T2. How do I restore my modem router's configuration to its factory default settings?

**Method one:** With the modem router powered on, press and hold down the [WPS/RESET](#) button for about 8 seconds until all LEDs turn off momentarily, then release the button.

**Method two:** Restore the default setting from [Maintenance](#) → [SysRestart](#) of the modem router's web management page.

 **Note:**


Once the modem router is reset, the current configuration settings will be lost and you will need to re-configure the router.

### T3. What can I do if I cannot access the web management page?

- Make sure the modem router connects to the computer correctly and the corresponding LED indicator(s) light up.
- Make sure the IP address of your computer is configured to obtain an IP address automatically and obtain DNS server address automatically.
- Make sure the default access you input is right.
- Check your computer's settings:

Go to [Start](#) → [Control Panel](#) → [Network and Internet](#), and click [View network status and tasks](#);


- 1) Click [Internet Options](#) on the bottom left;
- 2) Click [Connections](#), and select [Never dial a connection](#);

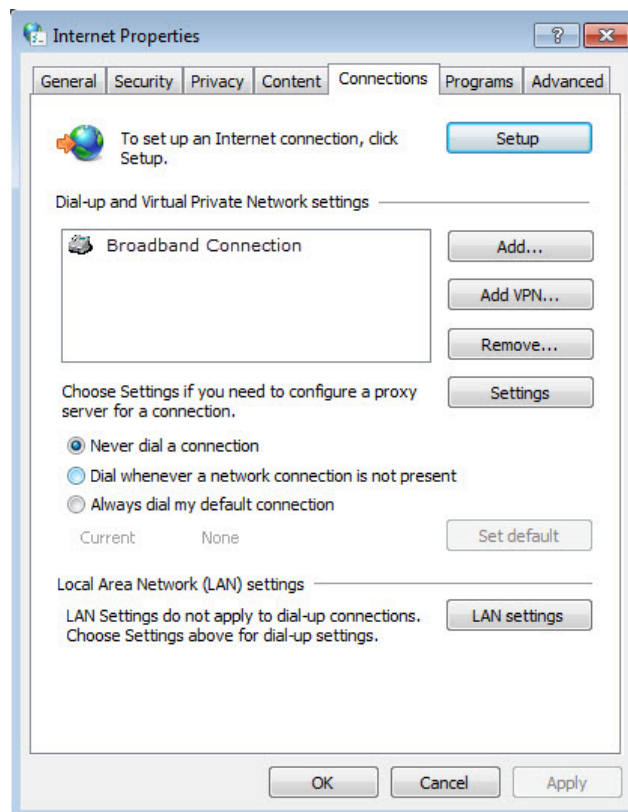

3) Click [LAN settings](#), deselect the following three options and click [OK](#);



4) Go to [Advanced](#) → [Restore advanced settings](#), and click [OK](#) to save the settings.

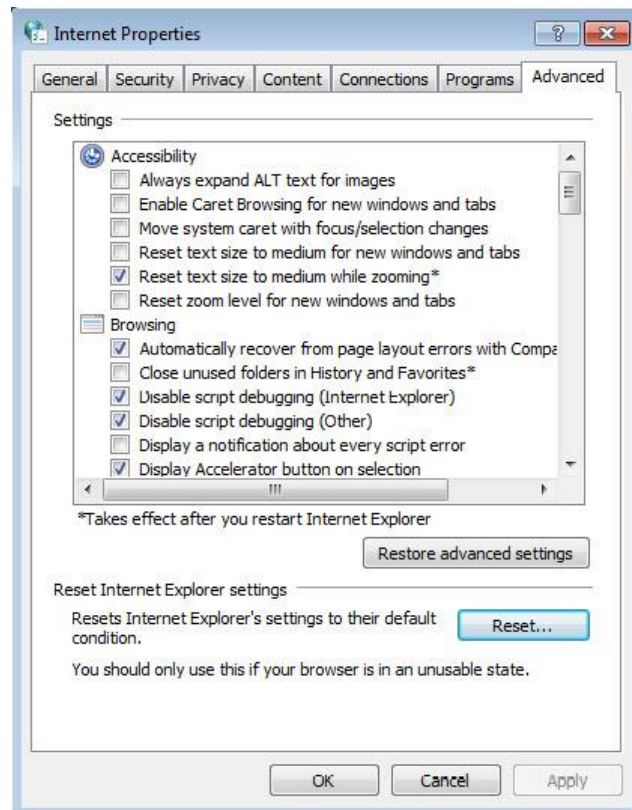

- Change a web browser or computer and log in again.
- Reset the modem router to factory default settings.

 **Note:**

You'll need to reconfigure the modem router to surf the internet once the modem router is reset.

- Open a web browser and log in again. If login fails, please contact the technical support.

#### **T4. What can I do if I cannot access the internet?**

- 1) Check to see if all the connectors are connected well, including the telephone line, Ethernet cables and power adapter.
- 2) Check to see if you can log on to the web management page of the modem router. If you can, try the following steps. If you cannot, please set your computer referring to **T3** then try to see if you can access the internet. If the problem persists, please go to the next step.
- 3) Consult your ISP and make sure all the VPI/VCI, Connection Type, account username and password are correct. If there are any mistakes, please correct the settings and try again.
- 4) If you still cannot access the internet, please restore your modem router to its factory default settings and reconfigure your modem router by following the instructions in [Chapter 3 Quick Start](#).
- 5) Please feel free to contact our Technical Support if the problem still exists.

 Note:

For more details about Troubleshooting and Technical Support contact information, please refer to the support page at [www.tp-link.com](http://www.tp-link.com).

## **COPYRIGHT & TRADEMARKS**

Specifications are subject to change without notice. TP-Link is a registered trademark of TP-Link Technologies Co., Ltd. Other brands and product names are trademarks or registered trademarks of their respective holders.

No part of the specifications may be reproduced in any form or by any means or used to make any derivative such as translation, transformation, or adaptation without permission from TP-Link Technologies Co., Ltd. Copyright © 2016 TP-Link Technologies Co., Ltd. All rights reserved.

<http://www.tp-link.com>

## FCC STATEMENT



This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/ TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- 1) This device may not cause harmful interference.
- 2) This device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.

### **FCC RF Radiation Exposure Statement:**

This equipment complies with FCC RF radiation exposure limits set forth for an uncontrolled environment. This device and its antenna must not be co-located or operating in conjunction with any other antenna or transmitter.

"To comply with FCC RF exposure compliance requirements, this grant is applicable to only Mobile Configurations. The antennas used for this transmitter must be installed to provide a

separation distance of at least 20 cm from all persons and must not be co-located or operating in conjunction with any other antenna or transmitter.”

## CE Mark Warning

# CE 1588

This is a class B product. In a domestic environment, this product may cause radio interference, in which case the user may be required to take adequate measures.

## RF Exposure Information

This device meets the EU requirements (1999/5/EC Article 3.1a) on the limitation of exposure of the general public to electromagnetic fields by way of health protection.

The device complies with RF specifications when the device used at 20 cm from your body.



Продукт сертифіковано згідно с правилами системи УкрСЕПРО на відповідність вимогам нормативних документів та вимогам, що передбачені чинними законодавчими актами України.



## Safety Information




- When product has power button, the power button is one of the way to shut off the product; when there is no power button, the only way to completely shut off power is to disconnect the product or the power adapter from the power source.
- Don't disassemble the product, or make repairs yourself. You run the risk of electric shock and voiding the limited warranty. If you need service, please contact us.
- Avoid water and wet locations.
- Adapter shall be installed near the equipment and shall be easily accessible.
- The plug considered as disconnect device of adapter.



- Use only power supplies which are provided by manufacturer and in the original packing of this product. If you have any questions, please don't hesitate to contact us.



## Explanation of the symbols on the product label

| Symbol  | Explanation  |
|---|--|
|  | DC voltage   |
|  | Indoor use only  |
|  | <p>RECYCLING</p> <p>This product bears the selective sorting symbol for Waste electrical and electronic equipment (WEEE). This means that this product must be handled pursuant to European directive 2012/19/EU in order to be recycled or dismantled to minimize its impact on the environment.</p> <p>User has the choice to give his product to a competent recycling organization or to the retailer when he buys a new electrical or electronic equipment.</p> |