

# Printer Compatibility List

Update:2015.01.23

Printer Manufacture	Printer Model	TL-PS110U 2.0	TL-WPS510U	TL-PS110P
HP	Business InkJet 1000	OK	OK	
HP	Color Laserjet 1500L	OK	OK	
HP	Color Laserjet 1600	OK	OK	
HP	Color Laserjet 2500	OK	OK	OK
HP	Color LaserJet 2550	OK	OK	OK
HP	Color LaserJet 2550L/LN	OK	OK	
HP	Color LaserJet 2600	OK	OK	
HP	Color LaserJet 2605	OK	OK	OK
HP	Color LaserJet 2700n	OK	OK	
HP	Color LaserJet 2840	OK	OK	
HP	Color LaserJet 3700	OK	OK	OK
HP	Color LaserJet 4000			OK
HP	Color LaserJet 4100			OK
HP	Color LaserJet 4500			OK
HP	Color Laserjet 4650	OK	OK	OK
HP	Color LaserJet 8550			OK
HP	Color Laserjet CP1215	OK	OK	
HP	Color Laserjet CP1525nw	OK	OK	
HP	Color Laserjet CM1312 MFP	OK	OK	
HP	Color Laserjet CM1015 MFP	OK	OK	
HP	Designjet 100	OK	OK	OK
HP	Designjet 600			OK
HP	Designjet 650C			OK
HP	Designjet 700			OK
HP	Designjet 750C+			OK
HP	DeskJet 1120C			OK
HP	Deskjet 1125C	OK	OK	OK
HP	Deskjet 1180C	OK	OK	OK
HP	DeskJet 1280	OK	OK	OK
HP	Deskjet 2000 J210	OK	OK	
HP	Deskjet Ink Advantage 2020hc	OK	OK	
HP	Deskjet 2050	OK	OK	
HP	Deskjet 2510	OK	OK	
HP	Deskjet IA 2520hc	OK	OK	
HP	Deskjet 2540	OK	OK	
HP	Deskjet 3000	OK	OK	
HP	Deskjet 3070A	OK	OK	
HP	Deskjet 3050	OK	OK	
HP	Deskjet 3325	OK	OK	
HP	DeskJet 3420	OK	OK	
HP	Deskjet 3520	OK	OK	
HP	Deskjet 3535	OK	OK	
HP	Deskjet 3650	OK	OK	
HP	Deskjet 3743	OK	OK	
HP	Deskjet 3748	OK	OK	
HP	Deskjet 3820	OK	OK	OK

HP	DeskJet 3920	OK	OK	
HP	DeskJet 3940	OK	OK	
HP	DeskJet 400/420			OK
HP	Deskjet 450C	OK	OK	OK
HP	DeskJet 5440	OK	OK	
HP	DeskJet 5500			<b>OK</b>
HP	Deskjet 5550	OK	OK	OK
HP	Deskjet 5652	OK	OK	OK
HP	Deskjet 670C			OK
HP	Deskjet 680C			OK
HP	Deskjet 720C			OK
HP	Deskjet 810C	OK	OK	OK
HP	Deskjet 830C	OK	OK	OK
HP	Deskjet 845C	OK	OK	
HP	DeskJet 9300	OK	OK	OK
HP	Deskjet 948c	OK	OK	OK
HP	Deskjet 9600	OK	OK	OK
HP	Deskjet 9650	OK	OK	OK
HP	Deskjet 970c XI	OK	OK	OK
HP	Deskjet 9800	OK	OK	OK
HP	Deskjet D1560	OK	OK	
HP	Deskjet D2560	OK	OK	
HP	Deskjet D5560	OK	OK	
HP	DeskJet F370	OK	OK	
HP	DeskJet F380	OK	OK	
HP	DeskJet F4185	OK	OK	
HP	DeskJet F4280	OK	OK	
HP	Deskjet F4480	OK	OK	
HP	Laserjet Pro M401n	OK	OK	
HP	Laserjet M1005 MFP	OK	OK	
HP	LaserJet 1022	OK	OK	
HP	LaserJet 1022N	OK	OK	
HP	Laserjet 1100			OK
HP	LaserJet 1160	OK	OK	OK
HP	LaserJet 1200	OK	OK	OK
HP	LaserJet 1220	OK	OK	OK
HP	Laserjet 1300	OK	OK	OK
HP	Laserjet 1320	OK	OK	OK
HP	Laserjet M1522n MFP	OK	OK	
HP	LaserJet 2100			OK
HP	Laserjet 2200d	OK	OK	OK
HP	Laserjet 2300	OK	OK	OK
HP	LaserJet 2410	OK	OK	OK
HP	LaserJet 2420	OK	OK	OK
HP	LaserJet 2550	OK	OK	OK
HP	LaserJet 3015	OK	OK	OK
HP	LaserJet 3050	OK	OK	
HP	LaserJet 3055	OK	OK	
HP	Laserjet 3200	OK	OK	OK
HP	Laserjet 3330	OK	OK	OK
HP	LaserJet 3330mfp	OK	OK	OK

HP	LaserJet 3380	OK	OK	
HP	LaserJet 4000			OK
HP	LaserJet 4050			OK
HP	LaserJet 4100 /4100n			OK
HP	LaserJet 4250	OK	OK	OK
HP	LaserJet 4300n			OK
HP	LaserJet 4300tn/dtn			OK
HP	LaserJet Color 4500			OK
HP	LaserJet 4650	OK	OK	OK
HP	LaserJet 5100fn/tn			OK
HP	LaserJet 5100le/se			OK
HP	LaserJet 6P / 6L			OK
HP	LaserJet 8100			OK
HP	LaserJet M1005	OK	OK	
HP	LaserJet M1005 MFP	OK	OK	
HP	LaserJet M1120 MFP	OK	OK	
HP	LaserJet M1319F MFP	OK	OK	
HP	LaserJet P2015	OK	OK	
HP	LaserJet Pro M127fn	OK	OK	
HP	LaserJet Pro M1536dnf	OK	OK	
HP	LaserJet Pro M425dn MFP	OK	OK	
HP	LaserJet Pro M521dn	OK	OK	
HP	Officejet J3608 150 Mobile L511	OK	OK	
HP	Officejet J3608	OK	OK	
HP	Officejet 2620	OK	OK	
HP	OfficeJet 4255	OK	OK	
HP	Officejet 4500	OK	OK	
HP	Officejet 4610	OK	OK	
HP	Officejet 4620	OK	OK	
HP	Officejet 4630	OK	OK	
HP	OfficeJet 5610	OK	OK	
HP	Officejet J5780	OK	OK	
HP	OfficeJet 6210	OK	OK	
HP	OfficeJet 6310	OK	OK	
HP	Officejet 6000	OK	OK	
HP	Officejet 6100 eP	OK	OK	
HP	Officejet 6500	OK	OK	
HP	Officejet 6600	OK	OK	
HP	Officejet 6700	OK	OK	
HP	Officejet 7000			
HP	Officejet 7500A	OK	OK	
HP	OfficeJet 7210	OK	OK	
HP	OfficeJet J4580	OK	OK	
HP	Officejet J4660	OK	OK	
HP	Officejet J6480	OK	OK	
HP	Officejet K7100	OK	OK	
HP	OfficeJet K850	OK	OK	OK
HP	OfficeJet Pro K5300	OK	OK	
HP	OfficeJet Pro K550	OK	OK	
HP	OfficeJet Pro K8600	OK	OK	
HP	Officejet Pro L7380	OK	OK	

HP	Officejet Pro L7590	OK	OK	
HP	Officejet Pro 6500A Plus	OK	OK	
HP	Officejet Pro 7000	OK	OK	
HP	Officejet Pro 8000	OK	OK	
HP	Officejet Pro 8100	OK	OK	
HP	Officejet Pro 8500A Plus	OK	OK	
HP	Officejet Pro 8500W	OK	OK	
HP	Officejet Pro 8600	OK	OK	
HP	Officejet Pro 8600 Plus	OK	OK	
HP	Photosmart 2610	OK	OK	
HP	Photosmart 3110	OK	OK	
HP	Photosmart 5510	OK	OK	
HP	Photosmart 5520	OK	OK	
HP	Photosmart 6510	OK	OK	
HP	Photosmart 6520	OK	OK	
HP	Photosmart 7150	OK	OK	
HP	Photosmart 7200	OK	OK	
HP	Photosmart 7510	OK	OK	
HP	Photosmart 7550	OK	OK	
HP	Photosmart 7660	OK	OK	
HP	Photosmart 7830	OK	OK	
HP	Photosmart 7900	OK	OK	
HP	Photosmart 8200	OK	OK	
HP	Photosmart Plus B209a	OK	OK	
HP	Photosmart Plus B210a	OK	OK	
HP	Photosmart Plus C310a	OK	OK	
HP	Photosmart A520	OK	OK	
HP	Photosmart B109a	OK	OK	
HP	Photosmart B110a AIO	OK	OK	
HP	Photosmart C309a	OK	OK	
HP	Photosmart C410a	OK	OK	
HP	Photosmart C3180	OK	OK	
HP	Photosmart C4180	OK	OK	
HP	Photosmart C4280	OK	OK	
HP	Photosmart C4385	OK	OK	
HP	Photosmart C4480	OK	OK	
HP	Photosmart C4580	OK	OK	
HP	Photosmart C5180	OK	OK	
HP	Photosmart C5280	OK	OK	
HP	Photosmart C5380	OK	OK	
HP	Photosmart C6180	OK	OK	
HP	Photosmart C6280	OK	OK	
HP	Photosmart C6380	OK	OK	
HP	Photosmart C7180	OK	OK	
HP	Photosmart C7280	OK	OK	
HP	Photosmart C8180	OK	OK	
HP	Photosmart D5160	OK	OK	
HP	Photosmart D5360	OK	OK	
HP	Photosmart D5460	OK	OK	
HP	Photosmart D7160	OK	OK	
HP	Photosmart D7260	OK	OK	

HP	Photosmart D7360	OK	OK	
HP	Photosmart Premium C309g	OK	OK	
HP	Photosmart Premium C310g	OK	OK	
HP	PSC 1210			
HP	PSC 1315	OK	OK	
HP	PSC 1350	OK	OK	
HP	PSC 1410	OK	OK	
HP	PSC 1610	OK	OK	
HP	PSC 2210	OK	OK	
HP	PSC 2310	OK	OK	
EPSON	Aculaser C1100SE	OK	OK	OK
EPSON	Aculaser C1600	OK	OK	
EPSON	Aculaser C1700	OK	OK	
EPSON	Aculaser C1750N	OK	OK	
EPSON	Aculaser C1750W	OK	OK	
EPSON	Aculaser C1900	OK	OK	OK
EPSON	Aculaser C2900	OK	OK	
EPSON	Aculaser C3800	OK	OK	
EPSON	Aculaser C3900N	OK	OK	
EPSON	Aculaser C9100	OK	OK	
EPSON	Aculaser CX16NF	OK	OK	
EPSON	Aculaser CX17NF	OK	OK	
EPSON	Aculaser M1400	OK	OK	
EPSON	Aculaser M2010DN	OK	OK	
EPSON	Aculaser M2010D	OK	OK	OK
EPSON	Aculaser M2310D	OK	OK	OK
EPSON	Aculaser M2310DN	OK	OK	
EPSON	Aculaser M2410D	OK	OK	OK
EPSON	Aculaser M2410DN	OK	OK	
EPSON	Aculaser MX14	OK	OK	
EPSON	Aculaser MX14NF	OK	OK	
EPSON	AL-M200DN	OK	OK	
EPSON	AL-M7000	OK	OK	
EPSON	AL-M8000	OK	OK	OK
EPSON	AL-MX200DWF	OK	OK	
EPSON	B-508DN	OK	OK	
EPSON	B-518DN	OK	OK	
EPSON	C750	OK	OK	OK
EPSON	CC-500L	OK	OK	
EPSON	CL-760	OK	OK	
EPSON	E-300L	OK	OK	
EPSON	E-520	OK	OK	
EPSON	E-720	OK	OK	
EPSON	EC-01	OK	OK	
EPSON	EPL 5700			OK
EPSON	EPL 5700			OK
EPSON	EPL 5800	OK	OK	OK
EPSON	EPL 5800	OK	OK	OK
EPSON	EPL 5900	OK	OK	OK
EPSON	EPL 6100	OK	OK	OK
EPSON	EPL 6200	OK	OK	OK

EPSON	EPL N2120			OK
EPSON	K100	OK	OK	
EPSON	L110	OK	OK	
EPSON	L120	OK	OK	
EPSON	L200	OK	OK	
EPSON	L210	OK	OK	
EPSON	L350	OK	OK	
EPSON	L355	OK	OK	
EPSON	L300	OK	OK	
EPSON	L550	OK	OK	
EPSON	L555	OK	OK	
EPSON	L800	OK	OK	
EPSON	L1300	OK	OK	
EPSON	L1800	OK	OK	
EPSON	LP2500	OK	OK	
EPSON	LP-7700	OK	OK	
EPSON	LP-8700	OK	OK	
EPSON	LP-8800C	OK	OK	
EPSON	LP8900	OK	OK	
EPSON	LP-9500C	OK	OK	
EPSON	LQ 100			OK
EPSON	LQ 1000C			OK
EPSON	LQ 1170+			OK
EPSON	LQ 1170C			OK
EPSON	LQ 1170C+			OK
EPSON	LQ 2070C			OK
EPSON	LQ 2080C			OK
EPSON	LQ 2090			OK
EPSON	LQ 2090C	OK	OK	OK
EPSON	LQ 2170C			OK
EPSON	LQ 2180C			OK
EPSON	LQ 2190C	OK	OK	OK
EPSON	LQ 2550			OK
EPSON	LQ 300			OK
EPSON	LQ 300+			OK
EPSON	LQ 300+II	OK	OK	OK
EPSON	LQ-310	OK	OK	OK
EPSON	LQ 3500C			OK
EPSON	LQ 570C			OK
EPSON	LQ 670			OK
EPSON	LQ 680			OK
EPSON	LQ 680C			OK
EPSON	M105	OK	OK	
EPSON	ME 320	OK	OK	
EPSON	ME 340	OK	OK	
EPSON	ME Office 82WD	OK	OK	
EPSON	ME Office 900WD	OK	OK	
EPSON	ME Office 940FW	OK	OK	
EPSON	ME Office 960FWD	OK	OK	
EPSON	MC-2000	OK	OK	
EPSON	PictureMate PM250	OK	OK	

EPSON	PLQ-20C	OK	OK	
EPSON	PLQ-20CM	OK	OK	
EPSON	PM-860PT	OK	OK	
EPSON	PM-890C	OK	OK	
EPSON	PM-920C	OK	OK	
EPSON	PM-930C	OK	OK	
EPSON	PM-950C	OK	OK	
EPSON	PM-970C	OK	OK	
EPSON	PM-980C	OK	OK	
EPSON	PM-A550	OK	OK	
EPSON	PM-A620	OK	OK	
EPSON	PM-A650	OK	OK	
EPSON	PM-A720	OK	OK	
EPSON	PM-A820	OK	OK	
EPSON	PM-A840	OK	OK	
EPSON	PM-A850	OK	OK	
EPSON	PM-A890	OK	OK	
EPSON	PM-A900	OK	OK	
EPSON	PM-A920	OK	OK	
EPSON	PM-A940	OK	OK	
EPSON	PM-A950	OK	OK	
EPSON	PM-A970	OK	OK	
EPSON	PM-2200C	OK	OK	
EPSON	PM-3500C	OK	OK	
EPSON	PM-3700C	OK	OK	
EPSON	PM-4000PX	OK	OK	
EPSON	PM-D800	OK	OK	
EPSON	PM-D870	OK	OK	
EPSON	PM-D1000	OK	OK	
EPSON	PM-FA700	OK	OK	
EPSON	PM-G800	OK	OK	
EPSON	PM-G820	OK	OK	
EPSON	PM-G850	OK	OK	
EPSON	PM-G860	OK	OK	
EPSON	PM-G4500	OK	OK	
EPSON	PM-T960	OK	OK	
EPSON	PM-T990	OK	OK	
EPSON	PX-5000	OK	OK	
EPSON	PX-A640	OK	OK	
EPSON	PX-A740	OK	OK	
EPSON	PX-G5300	OK	OK	
EPSON	PX-G5100	OK	OK	
EPSON	PX-G930	OK	OK	
EPSON	PX-G5000	OK	OK	
EPSON	PX-V780	OK	OK	
EPSON	RX 510	OK	OK	
EPSON	RX 530	OK	OK	
EPSON	RX 590	OK	OK	
EPSON	RX 630	OK	OK	
EPSON	RX 690	OK	OK	
EPSON	Stylus C20	OK	OK	

EPSON	Stylus C40	OK	OK	
EPSON	Stylus C41UX/SX	OK	OK	
EPSON	Stylus C43UX	OK	OK	
EPSON	Stylus C45	OK	OK	
EPSON	Stylus C59	OK	OK	
EPSON	Stylus C60	OK	OK	OK
EPSON	Stylus C63	OK	OK	OK
EPSON	Stylus C67	OK	OK	OK
EPSON	Stylus C79	OK	OK	
EPSON	Stylus C83			OK
EPSON	Stylus C90	OK	OK	
EPSON	Stylus Color 1160	OK	OK	
EPSON	Stylus Color 1500	OK	OK	
EPSON	Stylus Color 1520	OK	OK	
EPSON	Stylus Color 400			OK
EPSON	Stylus Color 600			OK
EPSON	Stylus Color 670	OK	OK	OK
EPSON	Stylus Color 800	OK	OK	OK
EPSON	Stylus Color 810	OK	OK	OK
EPSON	Stylus Color 850	OK	OK	OK
EPSON	Stylus Color 900	OK	OK	
EPSON	Stylus CX-1500	OK	OK	
EPSON	Stylus CX-2900	OK	OK	
EPSON	Stylus CX-3500	OK	OK	
EPSON	Stylus CX-3700	OK	OK	
EPSON	Stylus CX-3900	OK	OK	
EPSON	Stylus CX-4100	OK	OK	
EPSON	Stylus CX-4700	OK	OK	
EPSON	Stylus CX-4900	OK	OK	
EPSON	Stylus CX-5300	OK	OK	
EPSON	Stylus CX-5500	OK	OK	
EPSON	Stylus CX-5505	OK	OK	
EPSON	Stylus CX-5900	OK	OK	
EPSON	Stylus CX-6900F	OK	OK	
EPSON	Stylus CX-7300	OK	OK	
EPSON	Stylus CX-7800	OK	OK	
EPSON	Stylus CX-8300	OK	OK	
EPSON	Stylus CX-9300F	OK	OK	
EPSON	Stylus Office T30	OK	OK	
EPSON	Stylus Office T40W	OK	OK	
EPSON	Stylus Office TX300F	OK	OK	
EPSON	Stylus Office TX320F	OK	OK	
EPSON	Stylus Office TX510FN	OK	OK	
EPSON	Stylus Office TX600FW	OK	OK	
EPSON	Stylus Office TX610FW	OK	OK	
EPSON	Stylus Office T1100	OK	OK	
EPSON	Stylus Photo 915	OK	OK	
EPSON	Stylus Photo 1270	OK	OK	OK
EPSON	Stylus Photo 1290	OK	OK	
EPSON	Stylus Photo 1390	OK	OK	
EPSON	Stylus Photo 2100	OK	OK	

EPSON	Stylus Photo 710	OK	OK	
EPSON	Stylus Photo 720	OK	OK	
EPSON	Stylus Photo 790	OK	OK	
EPSON	Stylus Photo 810	OK	OK	OK
EPSON	Stylus Photo 830U	OK	OK	
EPSON	Stylus Photo 900	OK	OK	OK
EPSON	Stylus Photo 915	OK	OK	
EPSON	Stylus Photo EX2	OK	OK	OK
EPSON	Stylus Photo EX3	OK	OK	OK
EPSON	Stylus Photo R1800	OK	OK	OK
EPSON	Stylus Photo R210	OK	OK	
EPSON	Stylus Photo R230	OK	OK	
EPSON	Stylus Photo R250	OK	OK	
EPSON	Stylus Photo R270	OK	OK	
EPSON	Stylus Photo R310	OK	OK	
EPSON	Stylus Photo R350	OK	OK	
EPSON	Stylus Photo R2400	OK	OK	
EPSON	Stylus Photo R800	OK	OK	
EPSON	Stylus Photo RX430	OK	OK	
EPSON	Stylus Photo RX 510	OK	OK	
EPSON	Stylus Photo RX 530	OK	OK	
EPSON	Stylus Photo RX 590	OK	OK	
EPSON	Stylus Photo RX 630	OK	OK	
EPSON	Stylus Photo RX 650	OK	OK	
EPSON	Stylus Photo RX 690	OK	OK	
EPSON	Stylus Photo R2880	OK	OK	
EPSON	Stylus Photo TX700W	OK	OK	
EPSON	Stylus Photo TX800FW	OK	OK	
EPSON	Stylus Photo TX820FWD	OK	OK	
EPSON	Stylus Pro 7600	OK	OK	OK
EPSON	Stylus TX550W	OK	OK	
EPSON	Stylus TX420W	OK	OK	
EPSON	Stylus TX410	OK	OK	
EPSON	Stylus TX430	OK	OK	
EPSON	Stylus TX235	OK	OK	
EPSON	Stylus TX220	OK	OK	
EPSON	Stylus TX200	OK	OK	
EPSON	Stylus TX210	OK	OK	
EPSON	Stylus TX130	OK	OK	
EPSON	Stylus TX110	OK	OK	
EPSON	Stylus TX100	OK	OK	
EPSON	Stylus T22	OK	OK	
EPSON	Stylus T20	OK	OK	
EPSON	Stylus T21	OK	OK	
EPSON	Stylus Photo T50	OK	OK	
EPSON	TM883 (III)			OK
EPSON	TM T88III			OK
EPSON	WorkForce AL-M300D	OK	OK	OK
EPSON	WorkForce AL-M300DN	OK	OK	
EPSON	WorkForce AL-M400D	OK	OK	
EPSON	WF-2521	OK	OK	

<b>EPSON</b>	WF-2531	OK	OK	
<b>EPSON</b>	WF-2541	OK	OK	
<b>EPSON</b>	WF-3521	OK	OK	
<b>EPSON</b>	WorkForce WF-3541	OK	OK	
<b>EPSON</b>	WF-5191	OK	OK	
<b>EPSON</b>	WF-5621	OK	OK	
<b>EPSON</b>	WF-7011	OK	OK	
<b>EPSON</b>	WF-7511	OK	OK	
<b>EPSON</b>	WF-7521	OK	OK	
<b>EPSON</b>	WP-4531	OK	OK	
<b>EPSON</b>	WP-4091	OK	OK	
<b>EPSON</b>	XP30	OK	OK	
<b>EPSON</b>	XP-102	OK	OK	
<b>EPSON</b>	XP-202	OK	OK	
<b>EPSON</b>	XP-302	OK	OK	
<b>EPSON</b>	XP-402	OK	OK	
<b>EPSON</b>	XP-701	OK	OK	
<b>EPSON</b>	GP-C830	OK	OK	OK
<b>EPSON</b>	GP-M800	OK	OK	OK
<b>EPSON</b>	GP-C800	OK	OK	OK
<b>EPSON</b>	AL-C500	OK	OK	
<b>EPSON</b>	AL-C9300	OK	OK	
<b>EPSON</b>	TM-U220	Fail	Fail	OK
<b>Canon</b>	BJ-330			OK
<b>Canon</b>	BJC-4200			OK
<b>Canon</b>	BJC-4300			OK
<b>Canon</b>	BJC-4500			
<b>Canon</b>	BJC-4550			OK
<b>Canon</b>	BJC-4600			OK
<b>Canon</b>	BJF9000	OK	OK	
<b>Canon</b>	D380	OK	OK	
<b>Canon</b>	E400	OK	OK	
<b>Canon</b>	E600	OK	OK	
<b>Canon</b>	I-255	OK	OK	
<b>Canon</b>	I-355	OK	OK	
<b>Canon</b>	I-450	OK	OK	
<b>Canon</b>	I-455	OK	OK	
<b>Canon</b>	I-470D	OK	OK	
<b>Canon</b>	I-475D	OK	OK	
<b>Canon</b>	I-550	OK	OK	
<b>Canon</b>	I-560	OK	OK	
<b>Canon</b>	I-850	OK	OK	
<b>Canon</b>	I-865	OK	OK	
<b>Canon</b>	I-950	OK	OK	
<b>Canon</b>	I-6100	OK	OK	OK
<b>Canon</b>	I-6500	OK	OK	OK
<b>Canon</b>	I-9100	OK	OK	
<b>Canon</b>	I-9950	OK	OK	
<b>Canon</b>	IX4000	OK	OK	
<b>Canon</b>	IX5000	OK	OK	

Canon	IX6770	OK	OK	
Canon	Imageclass D380	OK	OK	
Canon	MP-160	OK	OK	
Canon	MP-638	OK	OK	
Canon	MP 770	OK	OK	
Canon	PIXMA MX318	OK	OK	
Canon	PIXMA MX320	OK	OK	
Canon	PIXMA MX357	OK	OK	
Canon	PIXMA MX377	OK	OK	
Canon	PIXMA MX397	OK	OK	
Canon	PIXMA MX416	OK	OK	
Canon	PIXMA MX457	OK	OK	
Canon	PIXMA MX477	OK	OK	
Canon	PIXMA MX527	OK	OK	
Canon	PIXMA MX700	OK	OK	
Canon	PIXMA MX727	OK	OK	
Canon	PIXMA MX927	OK	OK	
Canon	PIXUS IP2500	OK	OK	
Canon	PIXUS 990i	OK	OK	
Canon	PIXMA E510	OK	OK	
Canon	PIXMA iP1000	OK	OK	
Canon	PIXMA iP1700	OK	OK	
Canon	PIXMA iP1800	OK	OK	
Canon	PIXMA Ip1880	OK	OK	
Canon	PIXMA Ip1980	OK	OK	
Canon	PIXMA Ip2000	OK	OK	
Canon	PIXMA Ip2870	OK	OK	
Canon	PIXMA iP3000	OK	OK	
Canon	PIXMA Ip3300	OK	OK	
Canon	PIXMA Ip3500	OK	OK	
Canon	PIXMA Ip3680	OK	OK	
Canon	PIXMA iP4000	OK	OK	OK
Canon	PIXMA Ip4200	OK	OK	
Canon	PIXMA Ip4300	OK	OK	
Canon	PIXMA Ip4500	OK	OK	
Canon	PIXMA Ip4760	OK	OK	
Canon	PIXMA ip4970	OK	OK	
Canon	PIXMA Ip5000	OK	OK	
Canon	PIXMA Ip6000	OK	OK	
Canon	PIXMA Ip7270	OK	OK	
Canon	PIXMA Ip8500	OK	OK	
Canon	PIXMA Ip8770	OK	OK	
Canon	PIXMA MG2270	OK	OK	
Canon	PIXMA MG2470	OK	OK	
Canon	PIXMA MG2570	OK	OK	
Canon	PIXMA MG2970	OK	OK	
Canon	PIXMA MG3170	OK	OK	
Canon	PIXMA MG3270	OK	OK	
Canon	PIXMA MG3570	OK	OK	
Canon	PIXMA MG4270	OK	OK	
Canon	PIXMA MG5470	OK	OK	

Canon	PIXMA MG5570	OK	OK	
Canon	PIXMA MG5670	OK	OK	
Canon	PIXMA MG6170	OK	OK	
Canon	PIXMA MG6270	OK	OK	
Canon	PIXMA MG6370	OK	OK	
Canon	PIXMA MG7170	OK	OK	
Canon	PIXMA MG7570	OK	OK	
Canon	PIXMA MP110	OK	OK	
Canon	PIXMA MP130	OK	OK	
Canon	PIXMA MP145	OK	OK	
Canon	PIXMA MP150	OK	OK	
Canon	PIXMA MP180	OK	OK	
Canon	PIXMA MP237	OK	OK	
Canon	PIXMA MP258	OK	OK	
Canon	PIXMA MP450	OK	OK	
Canon	PIXMA MP730	OK	OK	
Canon	PIXMA MP780	OK	OK	
Canon	PIXMA MP830	OK	OK	
Canon	S-200SPX	OK	OK	
Canon	S-520			OK
Lexmark	C720			OK
Lexmark	E230	OK	OK	
Lexmark	E322	OK	OK	OK
Lexmark	Optra S1250			OK
Lexmark	P4350	OK	OK	
Lexmark	P6250	OK	OK	
Lexmark	T420	OK	OK	OK
Lexmark	T620	OK	OK	OK
Lexmark	W812	OK	OK	OK
Lexmark	Z42	OK	OK	
Lexmark	Z43	OK	OK	OK
Lexmark	Z45	OK	OK	
Lexmark	Z55	OK	OK	OK
Lexmark	Z515	OK	OK	OK
Lexmark	Z615	OK	OK	
Lexmark	Z705	OK	OK	OK
FUJI Xerox	Able 3321			OK
FUJI Xerox	DL700			OK
FUJI Xerox	DL900			OK
FUJI Xerox	DL-3400			OK
FUJI Xerox	DL-3800			OK
FUJI Xerox	DL-3850			OK
FUJI Xerox	DL-5800			OK
FUJI Xerox	DL-6400Pro			OK
FUJI Xerox	DL-6800			OK
FUJI Xerox	DocuP 2050	OK	OK	OK
FUJI Xerox	DocuP 240A	OK	OK	OK
FUJI Xerox	DocuP C1110B	OK	OK	
FUJI Xerox	DocuP CM205 f	OK	OK	
FUJI Xerox	DocuP CP105 b	OK	OK	
FUJI Xerox	DocuP P205 b	OK	OK	

<b>FUJI Xerox</b>	DocuP M205 b	OK	OK	
<b>FUJI Xerox</b>	DocuP M205 f	OK	OK	
<b>FUJI Xerox</b>	DocuP M205 fw	OK	OK	
<b>FUJI Xerox</b>	FP 410			OK
<b>FUJI Xerox</b>	Jet Wind 500C			OK
<b>FUJI Xerox</b>	Phaser 3310	OK	OK	OK
<b>FUJI Xerox</b>	PP 10			OK
<b>Konica Minolta</b>	Di 152			OK
<b>Konica Minolta</b>	Di 200/Di 250/Di 251			OK
<b>Konica Minolta</b>	magicolor 2450	OK	OK	OK
<b>Konica Minolta</b>	magicolor 5450	OK	OK	OK
<b>Konica Minolta</b>	magicolor 7300	OK	OK	
<b>Konica Minolta</b>	Magicolor 7300	OK	OK	
<b>Konica Minolta</b>	PagePro 1350W	OK	OK	
<b>Konica Minolta</b>	PagePro 9100	OK	OK	
<b>Samsung</b>	CLP-315	OK	OK	
<b>Samsung</b>	CLP-500	OK	OK	OK
<b>Samsung</b>	CLP-510	OK	OK	OK
<b>Samsung</b>	CLP-620ND	OK	OK	
<b>Samsung</b>	CLP-661NDK	OK	OK	
<b>Samsung</b>	CLP-670NDK	OK	OK	
<b>Samsung</b>	CLP-680ND	OK	OK	
<b>Samsung</b>	CLP-775N	OK	OK	
<b>Samsung</b>	CLX2160	OK	OK	
<b>Samsung</b>	ML-1510/1710	OK	OK	OK
<b>Samsung</b>	ML-1520	OK	OK	
<b>Samsung</b>	ML-1660	OK	OK	
<b>Samsung</b>	ML-1710	OK	OK	
<b>Samsung</b>	ML-1750	OK	OK	OK
<b>Samsung</b>	ML-1915	OK	OK	
<b>Samsung</b>	ML-2010	OK	OK	
<b>Samsung</b>	ML-2165W	OK	OK	
<b>Samsung</b>	ML-2250	OK	OK	OK
<b>Samsung</b>	ML-2550	OK	OK	OK
<b>Samsung</b>	ML-2580N	OK	OK	
<b>Samsung</b>	ML-2580NK	OK	OK	
<b>Samsung</b>	ML-3471ND	OK	OK	OK
<b>Samsung</b>	ML-4555N	OK	OK	
<b>Samsung</b>	ML-5010ND	OK	OK	
<b>Samsung</b>	ML-5015ND	OK	OK	
<b>Samsung</b>	ML-8951N	OK	OK	
<b>Samsung</b>	SL-M2620ND	OK	OK	
<b>Samsung</b>	SCX-4016	OK	OK	OK
<b>Samsung</b>	SCX-4100/4106/4116/4216F	OK	OK	OK
<b>Samsung</b>	SRP 270			OK
<b>Panasonic</b>	KX-MB1500TW	OK	OK	
<b>Panasonic</b>	KX-MB1520TW	OK	OK	
<b>Panasonic</b>	KX-MB1530TW	OK	OK	
<b>Panasonic</b>	KX-P1121			OK
<b>Panasonic</b>	KX-P1123			OK
<b>Panasonic</b>	KX-P1124			OK

<b>Panasonic</b>	KX-P1624			OK
<b>Panasonic</b>	KX-P6500			OK
<b>TOSHIBA</b>	Estudio-25			OK
<b>NEC</b>	NEC P2200			OK
<b>NEC</b>	NEC P3200			OK
<b>NEC</b>	NEC P5300			OK
<b>NEC</b>	NEC P8000			OK
<b>IBM</b>	IBM InforP 20			OK
<b>IBM</b>	InfoP 1116	OK	OK	OK
<b>IBM</b>	InfoP 1312	OK	OK	OK
<b>IBM</b>	InfoP 1316	OK	OK	OK
<b>IBM</b>	InfoP 1332	OK	OK	OK
<b>IBM</b>	InfoP 1412	OK	OK	OK
<b>Star</b>	NX-2420			OK
<b>Sharp</b>	AR-255			OK(Parallel only)
<b>Sharp</b>	AR-265FG			OK(Parallel only)
<b>Sharp</b>	AR-M160(AR-NB2)			OK(Parallel only)
<b>Sharp</b>	AR-M205			OK(Parallel only)
<b>Sharp</b>	AR-M207			OK(Parallel only)
<b>Sharp</b>	AR-M235			OK(Parallel only)
<b>Sharp</b>	AR-M275			OK(Parallel only)
<b>Sharp</b>	AR-M350			OK(Parallel only)
<b>Sharp</b>	AR-M400			OK(Parallel only)
<b>Sharp</b>	AR-M450			OK(Parallel only)
<b>RICOH</b>	NF3570			OK
<b>Brother</b>	MFC 1815	OK	OK	
<b>Brother</b>	MFC 4800	OK	OK	OK
<b>Brother</b>	MFC 4800J	OK	OK	OK
<b>Brother</b>	MFC 6800	OK	OK	OK
<b>Brother</b>	MFC 7220	OK	OK	OK
<b>Brother</b>	MFC 7420	OK	OK	OK
<b>Brother</b>	MFC 7820N	OK	OK	OK
<b>Brother</b>	MFC 8840D	OK	OK	OK
<b>Brother</b>	MFC 210C	OK	OK	
<b>Brother</b>	MFC 240C	OK	OK	
<b>Brother</b>	MFC-J200	OK	OK	
<b>Brother</b>	MFC-J2320	OK	OK	
<b>Brother</b>	MFC-J3520	OK	OK	
<b>Brother</b>	MFC-J430W	OK	OK	
<b>Brother</b>	MFC-J825DW	OK	OK	
<b>Brother</b>	DCP-J100	OK	OK	
<b>Brother</b>	DCP-J105	OK	OK	
<b>Brother</b>	DCP-7030	OK	OK	
<b>Brother</b>	HL-1110	OK	OK	
<b>Brother</b>	HL1260			OK
<b>Brother</b>	HL-2040			
<b>Brother</b>	HL-2140	OK	OK	
<b>Brother</b>	HL-2170W	OK	OK	
<b>Brother</b>	HL-2240D	OK	OK	
<b>Brother</b>	IntelliFax 2820	OK	OK	
<b>Others</b>	AURORA AD-166 MFP			
<b>Others</b>	AURORA AD-216 MFP			

<b>Others</b>	AURORA AD-226 MFP			
<b>Others</b>	DELL 1100			
<b>Others</b>	Zonerich AB-80K mini Per			
<b>Others</b>	OKI 5530			
<b>Others</b>	OKI Microline 391			OK
<b>Others</b>	OKI B4350	OK	OK	OK
<b>Others</b>	GSAN 5890 thermal Per			
<b>Others</b>	MITAC MP-6600C			OK
<b>Others</b>	BENQ CM3000	OK	OK	
<b>Avision</b>	MF 3200	OK	OK	
	MF 3230	OK	OK	
<b>Citizen</b>	GSX230			OK
<b>DATAMAX</b>	I-4208			OK
	I-4308			OK
<b>DOCUJET</b>	1610F	OK	OK	OK
	UA1610	OK	OK	OK
<b>FUTEK</b>	F8000			OK
	F84+			OK
	F86+			OK
<b>Kyocera</b>	FS-1010	OK	OK	OK
	FS-1010KX	OK	OK	
	FS-1020	OK	OK	OK
	FS-1920	OK	OK	OK
	FS-2000D	OK	OK	OK
	FS-820	OK	OK	OK
	FS-920	OK	OK	OK
	FS-6020	OK	OK	OK
FS-6026	OK	OK	OK	