

Quick Installation Guide

TL-WA850RE

Option ONE: Quick Setup using the WPS Button

Poption TWO: Setup using your Web Browser

LED Legend

On: The extender is connected to the router

Blinking: WPS connection is in

Off: The extender is not connected to the router.

Wireless

On/Off: The extender's wireless function is on or off.

Power

On/Off: The extender is powered on or off.

(Signal Strength)

Indicates the Wi-Fi connection between the extender and the router. More lit LEDs indicate a better signal strength.

Ethernet

RE

Ethernet

Wireless


On/Off: The Ethernet port is connected or not connected.




Option ONE

Quick Setup using the WPS Button

Your router should support WPS. Otherwise, please use Option TWO.

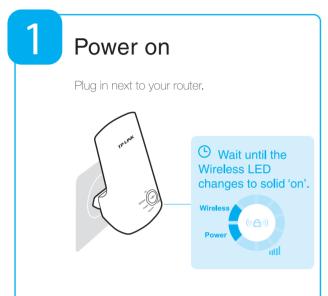

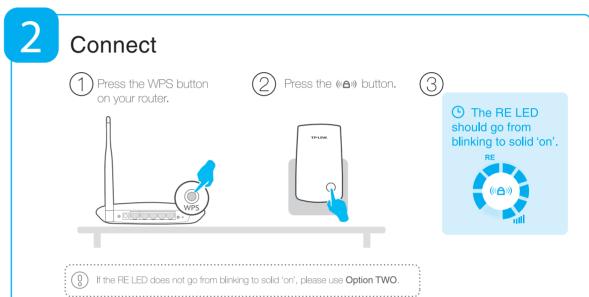

Relocate

1 Plug in the extender halfway between your router and the Wi-Fi dead zone.

Wait until the **IIIII** (Signal Strength) LEDs are lit.

Make sure the extender is in a location with **3 or more LEDs lit**.

If not, **relocate it closer to the router** to achieve a good (or better) signal quality.











To minimize wireless interference, place your extender in an open space area, away from other Bluetooth devices or radioactive devices such as cordless phone, microwaves, etc.



The extended network shares the same SSID (network name) and password as your host network.

Frequently Asked Questions (FAQ)

Q1. What should I do if my router doesn't have a WPS button?

A: Please use Option TWO to set up the extender

Q2. Why the RE LED doesn't light up after I completed Option TWO?

A1: You may have typed in the router's wireless password incorrectly, please log in and

A2: The extender may be out-of-range, please move it closer to the router.


Q3. Why can't I see the login page after entering http://tplinkrepeater.net in the browser?


A1: Make sure your computer is connected to extender's network

A2: Make sure your computer is set to obtain an IP address automatically

Q4. How do I reset the extender?

A: While the extender is powered on, use a pin to press the RESET button until all the LEDs turn on momentarily, then release the button.

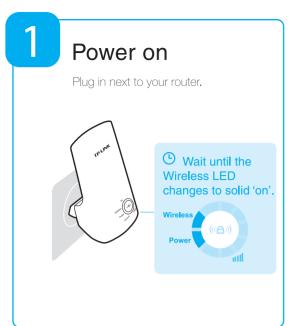

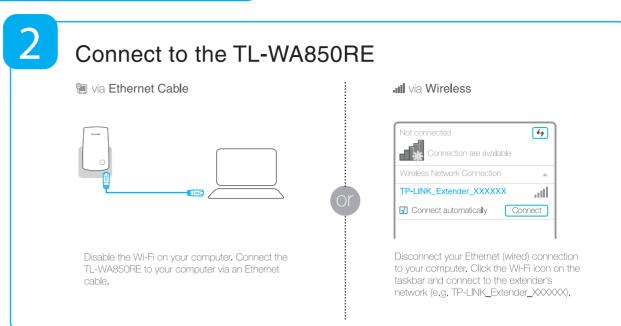

Configure

1) Launch a web browser and type http://tplinkrepeater.net into the URL field and use admin (all lowercase) for both Username and Password to log in.



- If the login window does not pop up, please refer to the FAQ > Q3.
- Create a new username and password to log in the web management page, then click Confirm.
- 3 Select your region, then click Next.

Select your router's 2.4GHz host network and enter the password, then click Next.



(5) Either copy the host's SSID or customize it for 2.4GHz extended network, then click Next.



6 Verify your wireless settings and click Finish. The RE LED should turn on and stay solid.

4

Relocate

Please refer to Step 3 of Option ONE.



Enjoy!

The extended network shares the same Wi-Fi password as your host network, but may have different wireless network name if you customize the name during the configuration.

Entertainment Adapter

The extender can be used as a wireless adapter to connect any Ethernet-only device such as a Blu-ray player, game console, DVR, or smart TV to your Wi-Fi network.

First, connect the extender to your router using Option ONE or Option TWO, then connect the extender to your Ethernet-only device via an Ethernet cable.



