



Kasa Wi-Fi Smart Plug Mini Installation

- 1 Download **Kasa for Mobile** from the App Store or Google Play.


OR scan
QR code

- 2 Connect your mobile device to a **2.4GHz Wi-Fi** network.

Note: The Kasa Wi-Fi Smart Plug Mini only supports 2.4GHz networks.



- 3 Launch **Kasa** and follow the in-app instructions to connect the Kasa Wi-Fi Smart Plug Mini to your network.

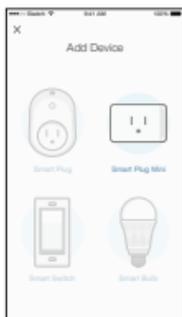

Note: The U.S. plug version is used throughout the Kasa app.

Support

- 1 Visit www.tp-link.com/support for technical support and troubleshooting information.



Kasa Wi-Fi Smart Plug Mini



 Press to turn the socket ON or OFF.

Press and hold for 5 seconds or until the LED flashes amber and blue alternately to initiate the configuration process (SoftAP).

Press and hold for 10 seconds or until the LED flashes amber rapidly to factory reset the Kasa Wi-Fi Smart Plug Mini.

LED **Flashing amber and blue:** Configuring.

Flashing blue rapidly: Connecting to the network.

Solid blue: Connected to the network.

Flashing amber rapidly: Factory resetting.

Solid amber: Initializing, rebooting, or no network connection.

Off: The Kasa Wi-Fi Smart Plug Mini is switched OFF.

Supported Load Types:

Coffee Maker: 800 W

Desk Lamp: 235.2 W

LCD: 270 W

Heater: 1500 W

Humidifier: 260 W

Iron: 1500 W

Toaster: 850 W

Tower Fan: 50 W

Troubleshooting

1. What devices can I control with the Kasa Wi-Fi Smart Plug Mini?

You can control lights, fans, humidifiers, portable heaters, and any small appliances in accordance with the Kasa Wi-Fi Smart Plug Mini's specifications.

2. What should I do when I can't turn devices on or off using Kasa?

- Make sure the device connected to the Kasa Wi-Fi Smart Plug Mini is switched to ON.
- Make sure the *Remote Control* feature in the app is enabled to control your devices from outside of your home.

3. What should I do when the LED is lit solid amber?

A solid amber light indicates no network connection.

- Check your network connectivity.
- Relocate the Kasa Wi-Fi Smart Plug Mini. Avoid placing the Kasa Wi-Fi Smart Plug Mini near potential sources of radio signal interference.
- Repeat the configuration process.
- Factory reset the Kasa Wi-Fi Smart Plug Mini and try to add it again.

4. How do I pair the Kasa Wi-Fi Smart Plug Mini with Amazon Echo?

Visit www.tp-link.com/en/faq-944.html or within the Kasa Help section for pairing instructions.