



Business Networking Solution

Installation Guide

Jetstream Smart Switch

About this Installation Guide

This Installation Guide describes the hardware characteristics, installation methods and the points that should be attended to during the installation. This Installation Guide is structured as follows:

Chapter 1 Introduction

This chapter describes the external components of the switch.

Chapter 2 Installation

This chapter illustrates how to install the switch.

Chapter 3 Connection

This chapter illustrates how to do the physical connection of the switch.

Appendix A Troubleshooting

Appendix B Hardware Specifications

Audience



This Installation Guide is for:

Network Engineer

Network Administrator

Conventions

- Some models featured in this guide may be unavailable in your country or region. For local sales information, visit <https://www.tp-link.com>.
- The figures in Chapter 2 and Chapter 3 are for demonstration purposes only. Your switch may differ in appearance from that depicted.
- PoE budget calculations are based on laboratory testing. Actual PoE power budget is not guaranteed and will vary as a result of client limitations and environmental factors.
- This guide uses the specific formats to highlight special messages. The following table lists the notice icons that are used throughout this guide.

	Remind to be careful. A caution indicates a potential which may result in device damage.
	Remind to take notice. The note contains the helpful information for a better use of the product.

Related Document

The User Guide and CLI Reference Guide of the product are provided on the resource CD. To obtain the latest product information, visit the official website: <https://www.tp-link.com>.

Contents

Chapter 1	Introduction	01
1.1	Product Overview	01
1.2	Appearance	01
Chapter 2	Installation	08
2.1	Package Contents	08
2.2	Safety Precautions	08
2.3	Installation Tools	10
2.4	Product Installation	10
Chapter 3	Connection	12
3.1	Ethernet Port	12
3.2	SFP/SFP+ Port	12
3.3	Verify Installation	12
3.4	Power On	12
3.5	Initialization	13
3.6	Software Configuration	13
Appendix A	Troubleshooting	14
Appendix B	Specifications	15

Chapter 1 Introduction

1.1 Product Overview

Designed for workgroups and departments, TP-Link JetStream Smart Switch provides wire-speed performance and abundant L2 management features. It provides a variety of service features and multiple powerful functions with high security.

The EIA-standardized framework and smart configuration capacity can provide flexible solutions for a variable scale of networks. QoS and IGMP snooping/filtering optimize voice and video application. Link aggregation increases aggregated bandwidth, optimizing the transport of business critical data. SNMP, RMON, WEB and CLI Login bring abundant management policies. TP-Link Gigabit Smart Switch integrates multiple functions with excellent performance, and is friendly to manage, which can fully meet the need of the users demanding higher networking performance.

T1600G-52PS (TL-SG2452P)/TL-SG2210MP/TL-SG2428P/TL-SL2428P is also a Power Sourcing Equipment (PSE*). Some of the RJ45 ports on the switch support Power over Ethernet (PoE*) function, which can automatically detect and supply power to those powered devices (PDs*) complying with IEEE 802.3af and IEEE 802.3at.

*PSE: a device (switch or hub for instance) that provides power through an Ethernet cable.

*PoE: a technology describes a system to transmit electrical power, along with data, to remote devices over standard twisted-pair cable in an Ethernet.


*PD: a device powered by a PSE and thus consumes energy. Examples include powering network cameras, wireless LAN access points, IP telephones, network hubs, embedded computers etc.

1.2 Appearance

Front Panel


The front panel of T1500-28TC (TL-SL2428) is shown as the following figure.

Figure 1-1 Front Panel of T1500-28TC (TL-SL2428)

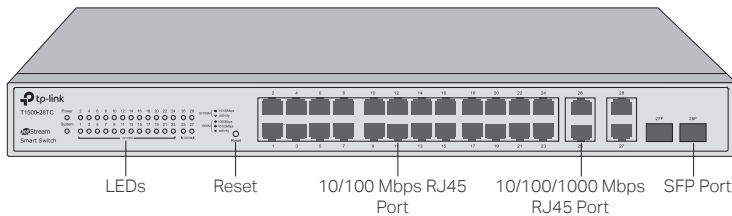


The front panel of T1600G-18TS (TL-SG2216) is shown as the following figure.

Figure 1-2 Front Panel of T1600G-18TS (TL-SG2216)

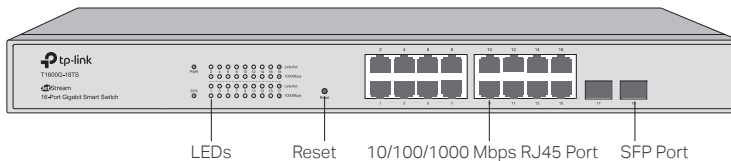


The front panel of T1600G-28TS is shown as the following figure.

Figure 1-3 Front Panel of T1600G-28TS

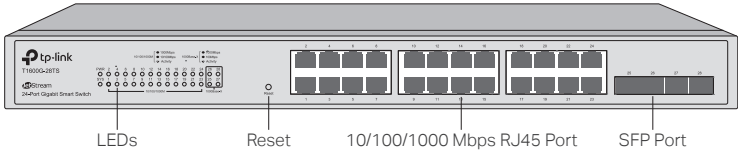


The front panel of T1600G-52TS (TL-SG2452) is shown as the following figure.

Figure 1-4 Front Panel of T1600G-52TS (TL-SG2452)

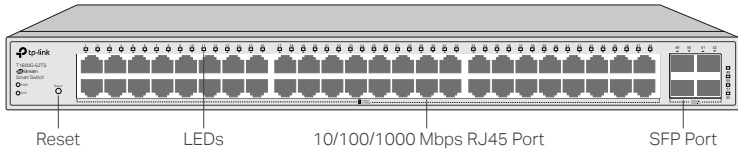


The front panel of T1600G-52PS (TL-SG2452P) is shown as the following figure.

Figure 1-5 Front Panel of T1600G-52PS (TL-SG2452P)

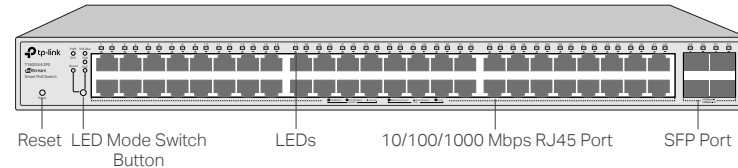


The front panel of T1700G-28TQ is shown as the following figure.

Figure 1-6 Front Panel of T1700G-28TQ

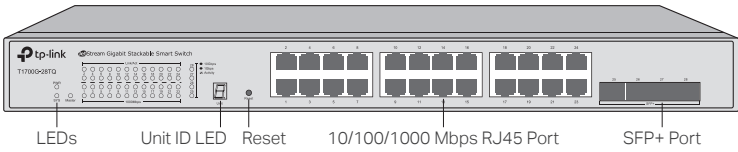

The front panel of T1700X-16TS is shown as the following figure.


Figure 1-7 Front Panel of T1700X-16TS

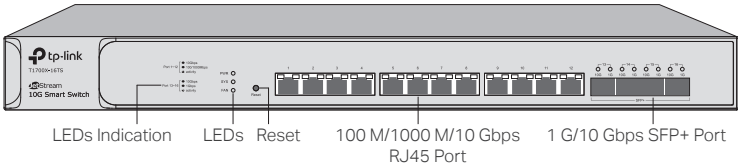

JetStream Smart Switch


The front panel of TL-SG2210MP is shown as the following figure.

Figure 1-8 Front Panel of TL-SG2210MP

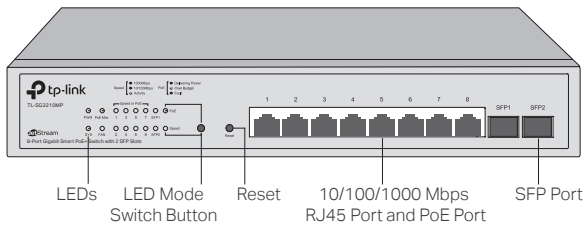


The front panel of TL-SG2428P is shown as the following figure.

Figure 1-9 Front Panel of TL-SG2428P

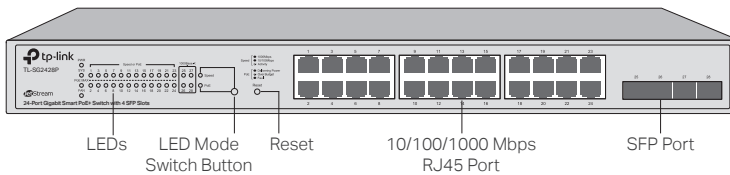

The front panel of TL-SL2428P is shown as the following figure.

Figure 1-10 Front Panel of TL-SL2428P

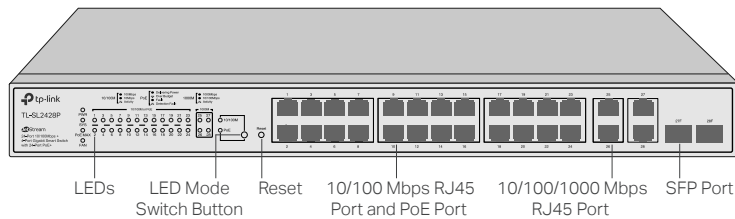

LEDs

For T1500-28TC (TL-SL2428)/T1600G-18TS (TL-SG2216)/T1600G-28TS/T1600G-52TS (TG-SG2452)/T1700G-28TQ/T1700X-16TS

LED	Indication
PWR	On: The switch is powered on. Off: The switch is powered off or power supply is abnormal. Flashing: Power supply is abnormal.
SYS	Flashing: The switch works properly. On or Off: The switch works improperly.
10/100M Link/Act	On: A device is connected to the corresponding port but no activity. Flashing: Data is being transmitted or received. Off: No device is connected to the corresponding port. Note: 10/100M for T1500-28TC. Link/Act for T1600G-18TS (TL-SG2216)/T1700G-28TQ.

LED	Indication
1000Mbps	<p>On: Running at 1000 Mbps.</p> <p>Off: Running at 10/100 Mbps or no device is linked to the corresponding port.</p> <p>Note: For T1600G-18TS (TL-SG2216)/1700G-28TQ.</p>
1000M 10/100/1000Mbps	<p>Green On: Running at 1000 Mbps, but no activity.</p> <p>Green Flashing: Running at 1000 Mbps and is transmitting or receiving data.</p> <p>Yellow On: Running at 10/100 Mbps, but no activity.</p> <p>Yellow Flashing: Running at 10/100 Mbps and is transmitting or receiving data.</p> <p>Off: No device is linked to the corresponding port.</p> <p>Note: 1000M for T1500-28TC. 10/100/1000Mbps for port 1–24 of T1600G-28TS and port 1–48 of T1600G-52TS (TL-SG2452).</p>
100Base-FX 1000Base-X	<p>Green On: A 1000 Mbps device is connected to the corresponding port but no activity.</p> <p>Green Flashing: A 1000 Mbps device is linked to the corresponding port and data is being transmitted or received.</p> <p>Yellow On: A 10/100 Mbps device is connected to the corresponding port but no activity.</p> <p>Yellow Flashing: A 10/100 Mbps device is linked to the corresponding port and is transmitting or receiving data.</p> <p>Off: No device is linked to the corresponding port.</p> <p>Note: 1000Base-X for port 25–28 of T1600G-28TS. 100Base-FX/1000Base-X for port 49–52 of T1600G-52TS (TL-SG2452). Port 49–52 of T1600G-52TS (TL-SG2452) doesn't support 10 Mbps devices.</p>
25–28 Link/Act	<p>Green On: Running at 10 Gbps, but no activity.</p> <p>Green Flashing: Running at 10 Gbps and is transmitting or receiving data.</p> <p>Yellow On: Running at 1000 Mbps, but no activity.</p> <p>Yellow Flashing: Running at 1000 Mbps and is transmitting or receiving data.</p> <p>Off: No device is linked to the corresponding port.</p> <p>Note: 25–28 for T1700G-28TQ. Link/Act for port 13–16 of T1700X-16TS.</p>
Link/Act	<p>Green On: Running at 10 Gbps, but no activity.</p> <p>Green Flashing: Running at 10 Gbps and is transmitting or receiving data.</p> <p>Yellow On: Running at 100/1000 Mbps, but no activity.</p> <p>Yellow Flashing: Running at 100/1000 Mbps and is transmitting or receiving data.</p> <p>Off: No device is linked to the corresponding port.</p> <p>Note: Only for port 1–12 of T1700X-16TS.</p>
Master	<p>On: The switch works as master in the stack system, or does not join any stack system.</p> <p>Off: The switch works as stack member in the stack system.</p> <p>Note: Only for T1700G-28TQ.</p>
Fan	<p>Green: All the fans work properly.</p> <p>Yellow: Not all the fans work properly.</p> <p>Off: The switch is working abnormally.</p> <p>Note: Only for T1700X-16TS.</p>

T1600G-52PS (TL-SG2452P)/TL-SG2210MP/TL-SG2428P/TL-SL2428P has an LED mode switch button which is used to switch the LED status indication. When the Speed LED is on, the port LED is indicating the data transmission rate. When the PoE LED is on, the port LED is indicating the power supply status. By default the Speed LED is on. Pressing the mode switch button, the Speed LED will turn off and the PoE LED will light up. Then the PoE LED will turn off after being on for 60 seconds and the Speed LED will light up again.

LED	Indication
PWR	<p>On: The switch is powered on.</p> <p>Off: The switch is powered off or power supply is abnormal.</p> <p>Flashing: Power supply is abnormal.</p>
SYS	<p>Flashing: The switch works properly.</p> <p>On or Off: The switch works improperly.</p>
FAN	<p>Green: All the fans work properly.</p> <p>Yellow: Not all the fans work properly.</p>
PoE Max (When the PoE LED is on)	<p>On: The remaining PoE power is ≤ 7 W.</p> <p>Flashing: The remaining PoE power keeps ≤ 7 W after this LED is on for 2 minutes.</p> <p>Off: The remaining PoE power is > 7 W.</p>
10/100M or PoE (When the Speed LED is on)	<p>Green On: Running at 100 Mbps, but no activity.</p> <p>Green Flashing: Running at 100 Mbps and is transmitting or receiving data.</p> <p>Yellow On: Running at 10 Mbps, but no activity.</p> <p>Yellow Flashing: Running at 10 Mbps and is transmitting or receiving data.</p> <p>Off: No device is linked to the corresponding port.</p> <p>Note: Only for TL-SL2428P.</p>
1000M Speed or PoE (When the Speed LED is on)	<p>Green On: Running at 1000 Mbps, but no activity.</p> <p>Green Flashing: Running at 1000 Mbps and is transmitting or receiving data.</p> <p>Yellow On: Running at 10/100 Mbps, but no activity.</p> <p>Yellow Flashing: Running at 10/100 Mbps and is transmitting or receiving data.</p> <p>Off: No device is linked to the corresponding port.</p> <p>Note: 1000M for TL-SL2428P. Speed or PoE for TL-SG2210MP, port 1–24 of TL-SG2428P and port 1–48 of T1600G-52PS (TL-SG2452P)</p>
10/100M or PoE Speed or PoE (When the PoE LED is on)	<p>Green On: The port is supplying power normally.</p> <p>Green Flashing: The supply power exceeds the corresponding port's maximum power.</p> <p>Yellow On: Overload or short circuit is detected.</p> <p>Yellow Flashing: Power-on self-test failed.</p> <p>Off: Not providing PoE power on the port.</p> <p>Note: 10/100M or PoE for TL-SL2428P. Speed or PoE for TL-SG2210MP, port 1–24 of TL-SG2428P and port 1–48 of T1600G-52PS (TL-SG2452P)</p>

LED	Indication
100Base-FX 1000Base-X SFP1, SFP2	<p>Green On: A 1000 Mbps device is linked to the corresponding port, but no activity.</p> <p>Green Flashing: A 1000 Mbps device is linked to the corresponding port and data is being transmitted or received.</p> <p>Yellow On: A 10/100 Mbps device is linked to the corresponding port, but no activity.</p> <p>Yellow Flashing: A 10/100 Mbps device is linked to the corresponding port and is transmitting or receiving data.</p> <p>Off: No device is linked to the corresponding port.</p> <p>Note: 1000Base-X for port 25–28 of TL-SG2428P. 100Base-FX/1000Base-X for port 49–52 of T1600G-52PS (TL-SG2452P). SFP1/SFP2 for TL-SG2210MP.</p> <p>100Base-FX and 1000Base-X ports don't support 10 Mbps device.</p>

LED Mode Switch Button

Press this button to switch the LED status indication between Speed and PoE.

Reset

With the switch powered on, press Reset button for 5 seconds to reset the switch to its factory default settings.

Unit ID LED

Designed to display the stack Unit ID of the switch. For the switch that does not join any stack system, it displays its default Unit ID. To modify the default unit number, please log on to the GUI of the switch and go to **Stack**→**Stack Management**→**Stack Config** page and configure the New Unit ID. The new Unit ID will take effect after you reboot the switch.

10/100 Mbps RJ45 Port

Designed to connect to the device with a bandwidth of 10 Mbps or 100 Mbps.

10/100/1000 Mbps RJ45 Port

Designed to connect to the device with a bandwidth of 10 Mbps, 100 Mbps or 1000 Mbps.

SFP Port

Designed to install the SFP module. For products except T1700X-16TS, the switch features some slots that are shared with the associated RJ45 ports. The associated two ports are referred as a "Combo" port, which means they cannot be used simultaneously, otherwise only SFP port works.

SFP+ Port

Designed to install the SFP module. For T1700G-28TQ and T1700X-16TS, the switch supports 1 G or 10 G SFP module connection.

Port Feature


Model	100M/1000 M/10Gbps RJ45 Port	10/100/1000 Mbps RJ45 Port	10/100 Mbps RJ45 Port	SFP Port	SFP+ Port
T1500-28TC	/	4	24	2	/
T1600G-18TS	/	16	/	2	/
T1600G-28TS	/	24	/	4	/
T1600G-52TS	/	48	/	4	/
T1600G-52PS	/	48	/	4	/
T1700G-28TQ	/	24	/	/	4

Model	100M/1000 M/10Gbps RJ45 Port	10/100/1000 Mbps RJ45 Port	10/100 Mbps RJ45 Port	SFP Port	SFP+ Port
T1700X-16TS	12	/	/	/	4
TL-SG2210MP	/	8	/	2	/
TL-SG2428P	/	24	/	4	/
TL-SL2428P	/	4	24	2	/

▪ **Rear Panel**

The rear panel is shown as the following figure. Here we take T1600G-28TS as an example.

Figure 1-11 Rear Panel

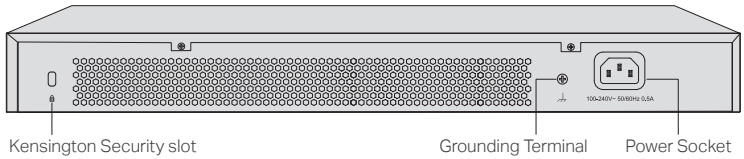

Kensington Security Slot


Secure the lock (not provided) into the security slot to prevent the device from being stolen.

Grounding Terminal

The switch already comes with lightning protection mechanism. You can also ground the switch through the PE (Protecting Earth) cable of AC cord or with Ground Cable. For detailed lightning protection measures, go to <https://www.tp-link.com/support>, search the model number of your switch and go to the product Support web page, refer to the Lightning Protection Guide from the Related Documents: https://www.tp-link.com/us/configuration-guides/lightning_protection_guide/.

Power Socket


Connect the female connector of the power cord here, and the male connector to the AC power outlet. Make sure that the voltage of the power supply meets the requirement of the input voltage (100–240 V~ 50/60 Hz).

 **Caution:** You should use the provided power cord.

Chapter 2 Installation

2.1 Package Contents

Make sure that the package contains the following items. If any of the listed items is damaged or missing, please contact your distributor.

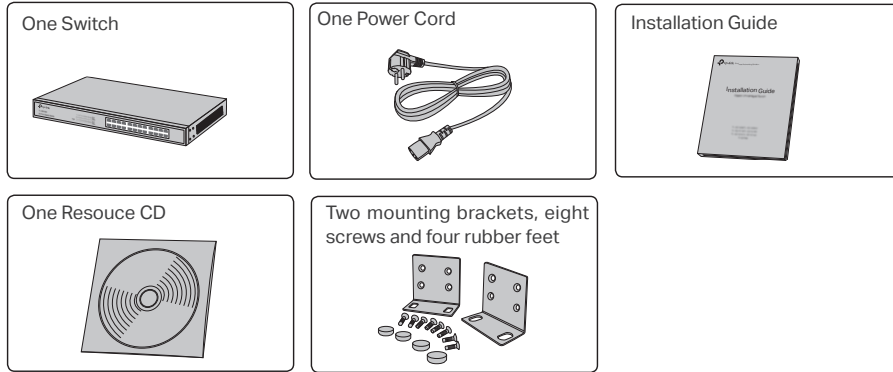

2.2 Safety Precautions

To avoid any device damage and bodily injury caused by improper use, you should observe the following rules.

■ Safety Precautions

- Keep the power off during the installation.
- Wear an ESD-preventive wrist strap, and make sure that the wrist strap has a good skin contact and is well grounded.
- Use only the power cord provided with the switch.
- Make sure that the supply voltage matches the specifications indicated on the rear panel of the switch.
- Ensure that the switch is installed in a well-ventilated environment and its ventilation hole is not blocked.
- Do not open or remove the cover of the switch.
- Before cleaning the device, cut off the power supply. Do not clean it by the waterish cloth, and never use any other liquid cleaning method.
- Place the device with its bottom surface downward.

■ Site Requirements

Temperature/Humidity



Keep the equipment room at an appropriate level of temperature and humidity. Too much or too little humidity may lead to bad insulation, leakage of electricity, mechanical property changes, and corrosion. High temperatures may accelerate aging of the insulation materials, significantly shortening the service life of the device. To find out the best temperature and humidity conditions for the device, check the following table.

Environment	Temperature	Humidity
Operating	0 °C to 50 °C (for TL-SG2210MP/TL-SG2428P/TL-SL2428P) 0 °C to 40 °C (for other switches)	10% to 90%RH Non-condensing
Storage	-40 °C to 70 °C	5% to 90%RH Non-condensing

 
Clearness



The dust accumulated on the switch can be absorbed by static electricity and result in poor contact of metal contact points. Some measures have been taken for the device to prevent static electricity, but too strong static electricity can cause deadly damage to the electronic elements on the internal circuit board. To avoid the effect of static electricity on the operation of the Switch, attach much importance to the following items:

- Dust the device regularly, and keep the indoor air clean.
- Keep the device well grounded and ensure that the static electricity has been transferred.

Electromagnetic Interference



Electronic elements including capacitance and inductance on the device can be affected by external interferences, such as conducted emission by capacitance coupling, inductance coupling, and impedance coupling. To decrease the interferences, make sure to take the following measures:

- Use the power supply that can effectively filter interference from the power grid.
- Keep the device far from high-frequency and strong-current devices such as radio transmitting station.
- Use electromagnetic shielding when necessary.

Lightning Protection




Extremely high voltage currents can be produced instantly when lightning occurs and the air in the electric discharge path can be instantly heated up to 20,000 °C. As this instant current is strong enough to damage electronic devices, more effective lightning protection measures should be taken.

- Ensure that the rack and the device are well earthed.
- Make sure the power socket has a good contact with the ground.
- Keep a reasonable cabling system and avoid induced lightning.
- Use the signal SPD (Surge Protective Device) when wiring outdoor.



Note: For detailed lightning protection measures, go to <https://www.tp-link.com/support>, search the model number of your switch and go to the product Support web page, refer to the Lightning Protection Guide from the Related Documents: https://www.tp-link.com/us/configuration-guides/lightning_protection_guide/.

Installation Site

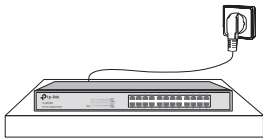

When installing the device on a rack or a flat workbench, attach much importance to the following items:

- The rack or workbench is flat, stable, and sturdy enough to support the weight of 5.5 kg at least.
- The rack or workbench has a good ventilation system. The equipment room is well ventilated.
- The rack is well grounded. Keep the device less than 1.5 meters away from the power socket.

2.3 Installation Tools

- Phillips screwdriver
- ESD-preventive wrist wrap
- Cables



Note: These tools are not included with our product. If needed, you can purchase them separately.


2.4 Product Installation

■ Desktop Installation

To install the device on the desktop, follow the steps:

1. Set the device on a flat surface which is strong enough to support the entire weight of the device with all fittings.
2. Remove the adhesive backing papers from the rubber feet.
3. Turnover the device and attach the supplied rubber feet to the recessed areas on the bottom at each corner of the device.

Figure 2-1 Desktop Installation

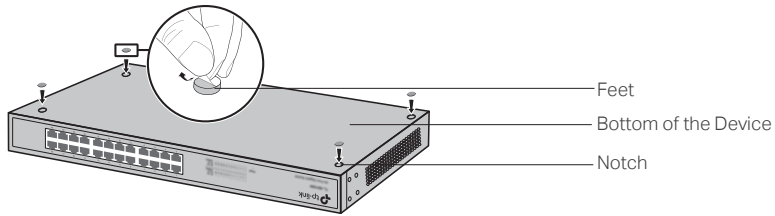


▪ Rack Installation

To install the device in an EIA standard-sized, 19-inch rack, follow the instructions described below:


1. Check the efficiency of the grounding system and the stability of the rack.
2. Secure the supplied rack-mounting brackets to each side of the device with supplied screws, as illustrated in the following figure.

Figure 2-2 Bracket Installation

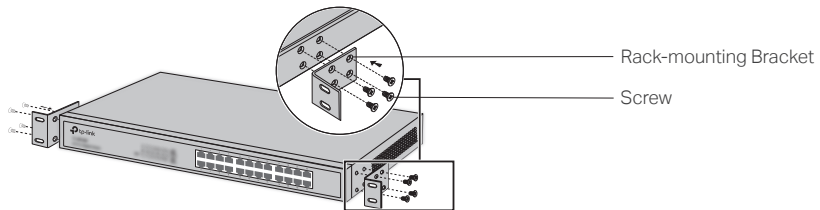

3. After the brackets are attached to the device, use suitable screws (not provided) to secure the brackets to the rack, as illustrated in the following figure.

Figure 2-3 Rack Installation

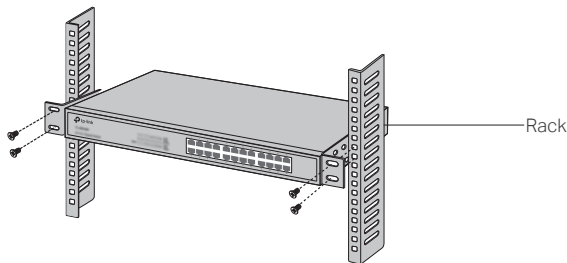

Caution:


- Leave 5 to 10 cm gaps around the devices for air circulation.
- Avoid placing heavy things on the device.
- Place the device with its bottom facing downwards.
- Mount devices in sequence from the bottom to top of the rack and ensure a certain clearance between devices for the purpose of heat dissipation.

Chapter 3 Connection

3.1 Ethernet Port

Connect an Ethernet port of the switch to the computer by RJ45 cable as the following figure shows.


Figure 3-1 Connecting the RJ45 Port

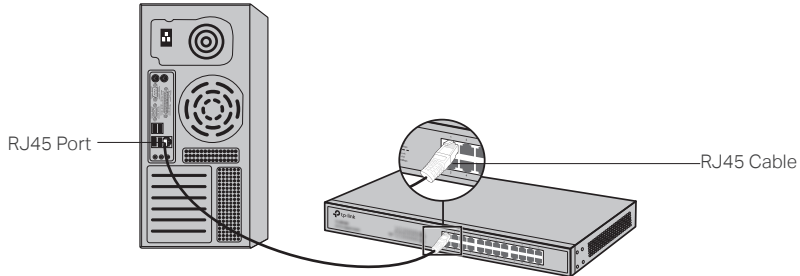

3.2 SFP/SFP+ Port

The following figure demonstrates the connection of SFP port to an SFP module.

Figure 3-2 Inserting the SFP Module

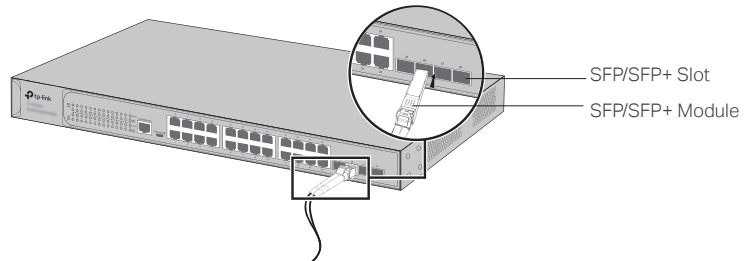

3.3 Verify Installation


After completing the installation, verify the following items:

- There should be 5 to 10 cm of clearance around the device for ventilation and make sure the air flow is adequate.
- The voltage of the power supply meets the requirement of the input voltage of the device.
- The power socket, device and rack are well grounded.
- The device is correctly connected to other network devices.

3.4 Power On

Plug the negative connector of the provided power cord into the power socket of the device and plug the positive connector into a power outlet as the following figure shows.

Figure 3-3 Connecting to Power Supply

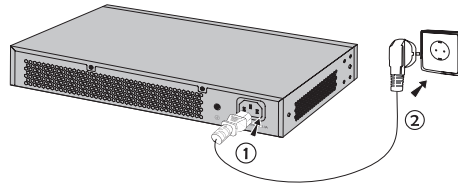

Note:

The figure is to illustrate the application and principle. The provided plug and the socket in your region may differ from the figures above.

3.5 Initialization

After the device is powered on, it begins the Power-On Self-Test. A series of tests run automatically to ensure the device functions properly. During this time, its LED indicators will respond in the following order:

1. The PWR LED indicator lights on all the time. The SYS LED and the LED indicators of all the ports keep off.
2. (For TL-SG2210MP/TL-SG2428P/TL-SL2428P) After about one minute, all LED indicators will turn green, and then the FAN indicator and LED indicators of all the ports will turn yellow momentarily. Subsequently, all LED indicators except the PWR LED will turn off.

(For other switches) After about one minute, the SYS LED and LED indicators of all the ports will flash momentarily and then turn off.

3. Several seconds later, the SYS LED indicator will flash, which represents a successful initialization.

3.6 Software Configuration

The switch can support two configuration options: Standalone Mode or Controller Mode. To configure and manage the switch singly, Standalone Mode is recommended. To configure and manage a large-scale network centrally, which consists of devices such as access points, switches, and gateways, Controller Mode is recommended.



Note:

Only TL-SG2428P and TL-SG2210MP support Controller Mode.

Standalone Mode

- Using the GUI: Open a web browser on your computer and type the default management address `http://192.168.0.1` in the address field, then press the Enter key. The default username and password are both admin in lower case letters.
- Using the CLI: Set up a Telnet or SSH connection to access the CLI (command-line interface).

For the detailed configurations, refer to the User Guide and CLI Guide. The guides can be found on the resource CD or on the download center of our official website: <https://www.tp-link.com/download-center.html>

**Note:**

For certain devices, you may need to change the password the first time you log in, which will better protect your network and devices.

Controller Mode

Use an Omada Software Controller, Hardware Controller or Cloud-Based Controller to configure and manage your network devices centrally.

For the detailed configurations, refer to the Omada SDN Controller User Guide. The guide can be found on the download center of our official website: <https://www.tp-link.com/download-center.html>.

Appendix A Troubleshooting

Q1. What could I do if I forgot the username and password of the switch?

Press the Reset button for at least 5 seconds to reset the system. The system will be reset to the factory default settings, and the default login user name and password are both admin.

Q2. Why does the PWR/Power LED work abnormally?

The PWR/Power LED should be lit up when the power system works normally. If the PWR LED worked abnormally, try the following:

1. Make sure that the power cable is connected properly, and the power contact is normal.
2. Make sure the voltage of the power supply meets the requirement of the input voltage of the switch.

Q3. What should I do if I cannot access the web management page?

Try the following:

1. Check every port LED on the switch and make sure the Ethernet cable is connected properly.
2. Try another port on the switch and make sure the Ethernet cable is suitable and works normally.
3. Power off the switch and, after a while, power it on again.
4. Make sure the IP address of your PC is set within the subnet of the switch.
5. If you still cannot access the configuration page, please reset the switch to its factory defaults. Then the IP address of your PC should be set as 192.168.0.x ("x" is any number from 2 to 254) and subnet mask as 255.255.255.0.

Appendix B Specifications

Item	Content
Standards	IEEE 802.3i, IEEE 802.3u, IEEE 802.3ab, IEEE 802.3ad, IEEE 802.3z, IEEE 802.3x, IEEE 802.1p, IEEE 802.1q, IEEE 802.1x, IEEE 802.1d, IEEE 802.1s, IEEE 802.1w
	IEEE 802.3ae (For T1700G-28TQ/T1700X-16TS)
	IEEE 802.3af, IEEE 802.3at (For T1600G-52PS/TL-SG2210MP/TL-SG2428P/TL-SL2428P)
Transmission Medium	10Base-T: UTP/STP of Cat. 3 or above
	100Base-TX: UTP/STP of Cat. 5 or above
	100Base-FX/LX10/BX10: MMF or SMF SFP Module (For T1500-28TC/TL-SG2210MP/TL-SG2428P)
	1000Base-T: 4-pair UTP (≤ 100 m) of Cat. 5e, and Cat. 6 or above
	1000Base-SX/LX/LX10/BX10: MMF or SMF SFP Module
	10GBASE-SR/LR: MMF or SMF SFP+ Transceiver (For T1700G-28TQ/T1700X-16TS)
	10GBASE-T: 4-pair UTP of Cat.6 (maximum 55 m) or Cat.6a (maximum 100 m), 4-pair STP of Cat.6/Cat. 6a/Cat.7 (maximum 100 m) (For T1700X-16TS)
LEDs	T1500-28TC: Power, System, 10/100M, 1000M TL-SL2428P: PWR, SYS, PoE MAX, FAN, 10/100M or PoE, 1000M, 10/100M, PoE TL-SG2210MP: PWR, SYS, PoE MAX, FAN, Speed or PoE, SFP1, SFP2, PoE, Speed
	T1600G-18TS: PWR, SYS, 1000Mbps, Link/Act
	T1600G-25TS/T1600G-52TS: PWR, SYS, 10/100/1000Mbps, 100Base-TX/1000Base-X
	TL-SG2428P/T1600G-52PS: PWR, SYS, FAN, PoE MAX, Speed, PoE, 100Base-TX/1000BASE-X
	T1700G-28TQ: PWR, SYS, Master, Link/Act, 1000M, 25, 26, 27, 28, Unit ID LED
	T1700X-16TS: PWR, SYS, FAN, Link/Act
Operating Temperature	0 °C to 50 °C (32 °F to 122 °F) (For TL-SG2210MP/TL-SG2428P/TL-SL2428P) 0 °C to 40 °C (32 °F to 104 °F) (For other switches)
Storage Temperature	-40 °C to 70 °C (-40 °F to 158 °F)
Operating Humidity	10% to 90%RH Non-condensing
Storage Humidity	5% to 90%RH Non-condensing

CE Mark Warning



This is a class A product. In a domestic environment, this product may cause radio interference, in which case the user may be required to take adequate measures.

EU declaration of conformity

TP-Link hereby declares that the device is in compliance with the essential requirements and other relevant provisions of directives 2014/30/EU, 2014/35/EU, 2009/125/EC, 2011/65/EU and (EU)2015/863.

The original EU declaration of conformity may be found at <https://www.tp-link.com/en/ce>.



Продукт сертифіковано згідно с правилами системи УкрСЕПРО на відповідність вимогам нормативних документів та вимогам, що передбачені чинними законодавчими актами України.

Safety Information

- Keep the device away from water, fire, humidity or hot environments.
- Do not attempt to disassemble, repair, or modify the device.
- Place the device with its bottom surface downward.

Please read and follow the above safety information when operating the device. We cannot guarantee that no accidents or damage will occur due to improper use of the device. Please use this product with care and operate at your own risk.



To ask questions, find answers, and communicate with TP-Link users or engineers, please visit <https://community.tp-link.com> to join TP-Link Community.



For technical support, the user guide and other information, please visit <https://www.tp-link.com/support>, or simply scan the QR code.



If you have any suggestions or needs on the product guides, welcome to email techwriter@tp-link.com.cn.

