


Hello, I'm here. Follow me to extend your Wi-Fi network.




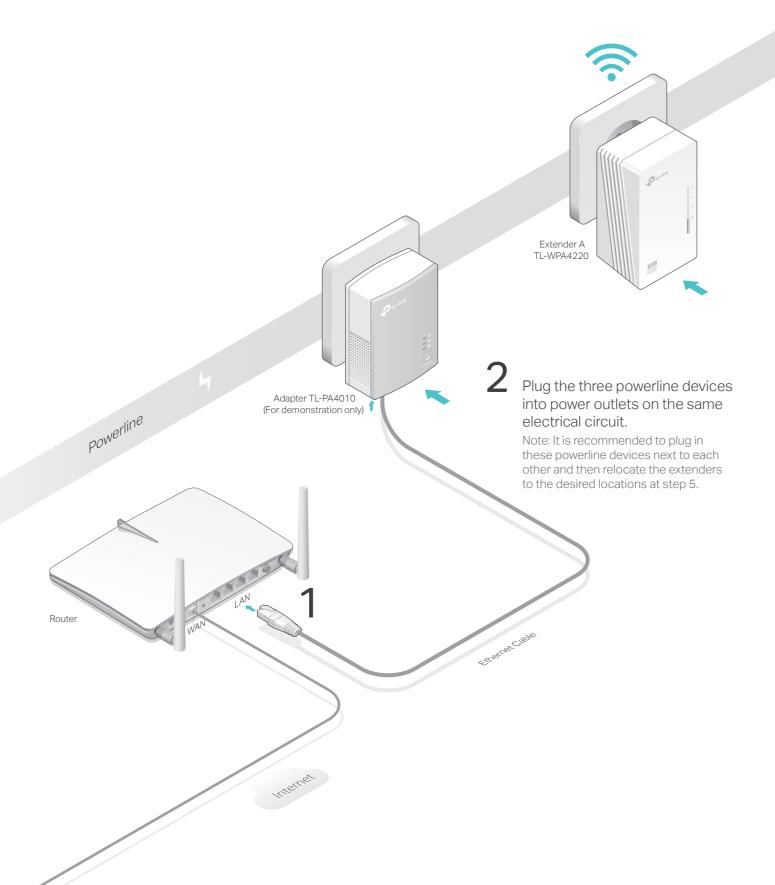

- Pair Adapter and Extender A (the first paired extender).
 - A Press the Pair button on the adapter for 1 second. The Power LED **U** starts blinking.

Note: If the Power LED does not blink, press the Pair button again.

- **B** Within 2 minutes, press the Pair button on Extender A for 1 second. The Power LED **U** starts blinking. Note: Save the Wi-Fi Info Card of this extender for later use.
- C When the Powerline LED a on Extender A turns solid, the pairing process is complete.

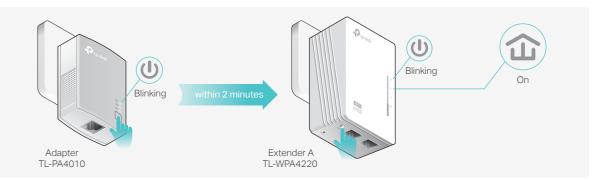

Pair Adapter and Extender B.

A Press the Pair button on the adapter for 1 second. The Power LED **U** starts blinking.

- **B** Within 2 minutes, press the Pair button on Extender B for 1 second. The Power LED **U** starts blinking.
- C When the Powerline LED on Extender B turns solid, the pairing process is complete.



5 Enjoy!

Relocate the extenders to the Wi-Fi "dead" zones. Use the SSID (network name) and password on the provided Wi-Fi Info Card of Extender A to connect to the internet.

Any changes made to the Wi-Fi settings of one powerline extender will be synced to the other powerline extender.

Note: A red Powerline LED 🏠 indicates poor signal strength. Move the extender to another location.



Wi-Fi Clone allows you to copy the main router's wireless settings (SSID and password) to the powerline extender in seconds.

1. Plug in the powerline extender near your router, and press the WPS button on the router.



2. Within 2 minutes, press the Wi-Fi button on the extender for 1 second. The Wi-Fi LED
starts blinking.

Note: If you want to end the Wi-Fi Clone process, press the Wi-Fi button on the extender




3. When the Wi-Fi LED blinks quickly for 3 seconds and then stays on, the Wi-Fi Clone process is complete.

Wi-Fi Move


Wi-Fi Move technology helps to keep all Wi-Fi settings and LED schedules on your powerline extenders in sync after your powerline devices are paired.

The settings automatically sync from one powerline extender to another when pairing a new device to the secured powerline network.

Wi-Fi Move is enabled by default and can be accessed via the extender's web interface. For more details, please refer to the User Guide at http://www.tp-link.com.

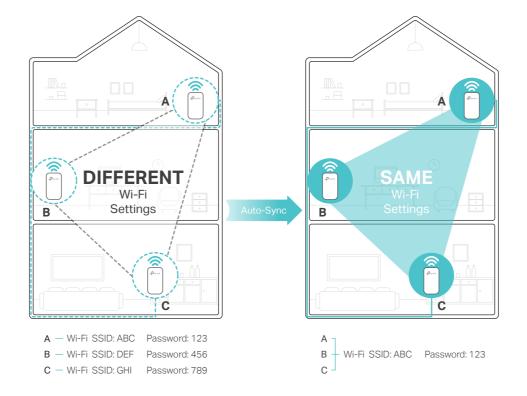

Button Legend

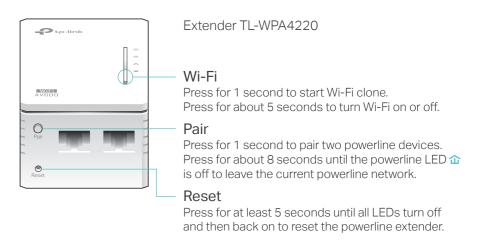


Attention

Plug the powerline devices into wall outlets instead of power strips.



Power Strip

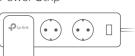

Easy Management

Using tpPLC utility and app for basic configuration:

Find and download the tpPLC Utility on the product's Support page at http://www.tp-link.com.

Download the tpPLC App from the App Store or Google Play, or simply scan the QR code.



Using web interface for advanced configuration:

Connect your device to the powerline extender wirelessly and visit http://tplinkplc.net. Use 'admin' for both username and password upon initial login.

Note: For advanced settings, please refer to the User Guide on our official website at http://www.tp-link.com.

Frequently Asked Questions

Q1. How to reset my powerline extender?

A. With the extender plugged in, press and hold the Reset button until all LEDs turn off. When the LEDs turn back on, the reset process is complete.

Q2. What should I do if I can't find the Powerline Extender's SSID in my Wi-Fi

- A1. Try to look for the SSID on the other Wi-Fi Info Card.
- A2. If you used the Wi-Fi Clone feature, the SSID is the same as the router's SSID.
- A3. Check if the powerline extender's Wi-Fi is turned on.

Q3. What can I do if there is no internet connection in my powerline network?

- A1. Make sure all powerline adapters and extenders are on the same electrical circuit.
- A2. Make sure each device's Powerline LED 🏠 is on. If not, pair your devices again.
- A3. Make sure all hardware devices are correctly and securely connected.
- A4. Check if you have an internet connection by connecting the computer directly to the modem or router.

- A5. Make sure your computer's IP address is in the same segment as your router's.
- Q4. What can I do if a successfully-paired extender does not reconnect after relocating?
- A1. Make sure all powerline adapters and extenders are on the same electrical
- A2. Pair it again with another powerline device, and make sure the Powerline LED **a** is on before relocating it.
- A3. Check for possible interference, such as washers, air conditioners or other household appliances that may be too close to one of the powerline devices. Plug it into the integrated electrical socket to remove some electrical noise if your powerline device has an integrated electrical socket.



For technical support and more information, please visit http://www.tp-link.com/support, or simply scan the QR code.