

Installation Guide

SafeStream Wireless N GigabitBroadband VPN Router

TL-ER604W

PWR

On: Power on
Off: Power off

WLAN

On: Wireless function enabled
Flashing: Transferring data through wireless
Off: Wireless function disabled

SYS


Flashing: System running normally
On/Off: System running abnormally

WAN/LAN

On (Yellow): An inactive 10/100Mbps device is linked to it
On (Green): An inactive 1000Mbps device is linked to it
Flashing (Yellow): Transmitting/receiving data at 10/100Mbps
Flashing (Green): Transmitting/receiving data at 1000Mbps

Package Contents: TL-ER604W, Ethernet Cable, Power Cord, Resource CD, Intallation Guide

Connection

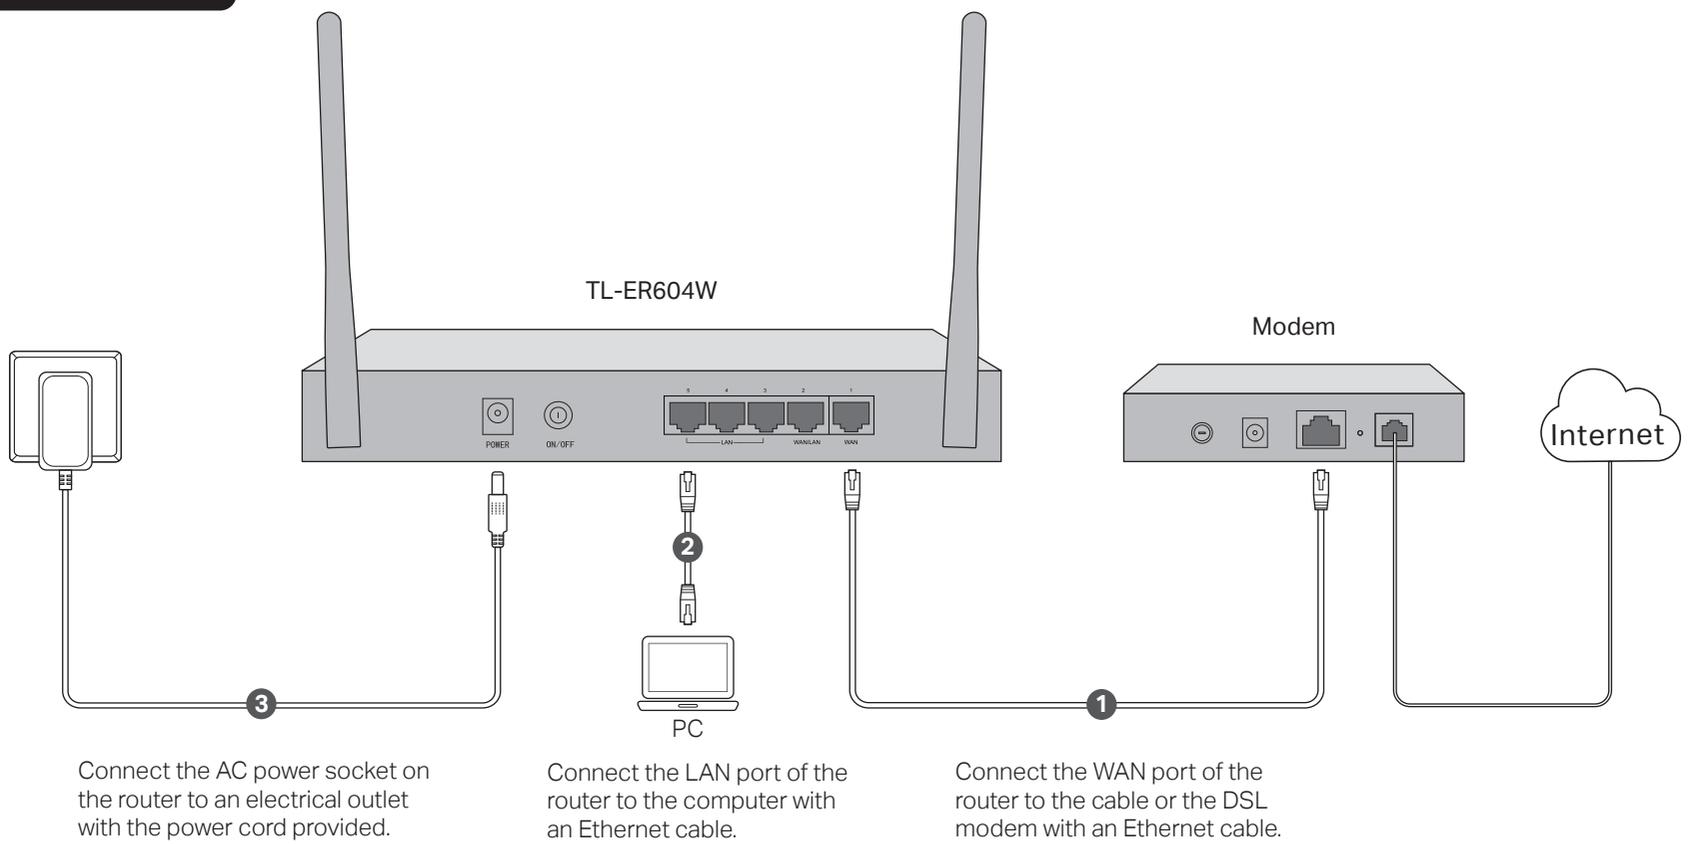

Configuration

1. Connect your computer to the router (Wired or Wireless)

- **Wired**



Turn off the Wi-Fi on your computer and connect the devices as shown in the **Connection** part.

- **Wireless**

a Confirm the SSID (network name) and Wireless Password printed on the label at the bottom panel of the router.

The default SSID is TP-Link_XXXXXX. XXXXXX is the last six characters of the router's MAC address.


b Click the network icon of your computer or go to Wi-Fi Setting of your smart device, and then select the SSID to join the network.

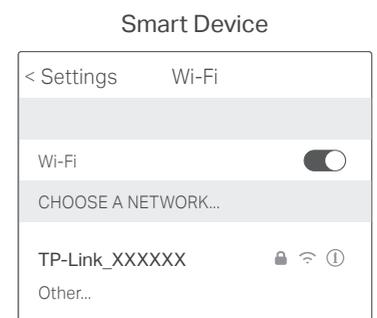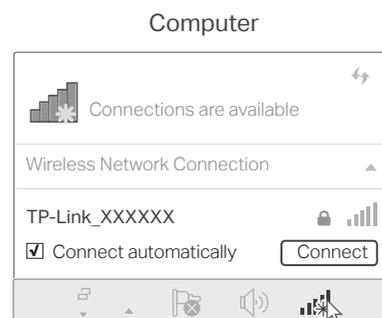


2. Enter <http://192.168.0.1> in the address bar of a web browser. Use **admin** for both User Name and Password, and click **Login**.




4. Go to **Network > WAN > WAN1** and configure the connection type according to your ISP. Click **Save** to save your settings.

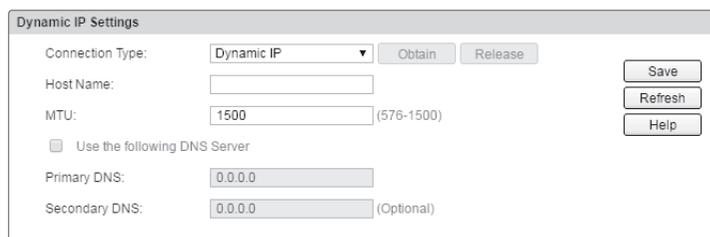

3. Go to **Network > WAN > WAN Mode** and select the total number of WAN ports you require. Then click **Save**.

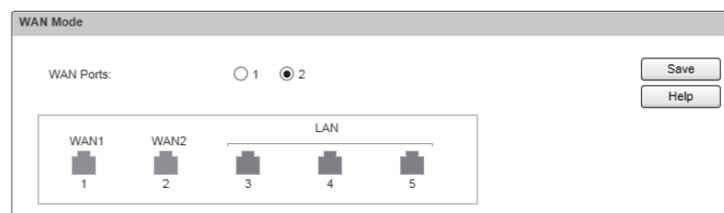


5. Go to **Wireless > Wireless Setting** and configure the router's wireless parameters. The modification of the Wireless Setting will take effect after the router is rebooted.

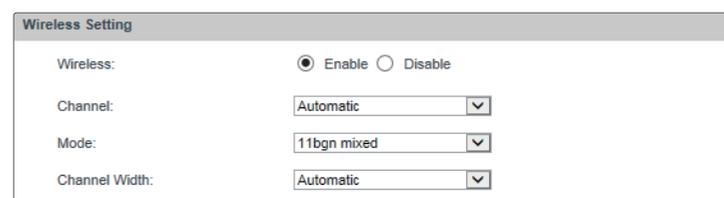

Appendix: Troubleshooting

How do I restore the router to its factory default settings?

- With the router powered on, use a pin to press and hold the **Reset** button (for about 5 seconds) until the SYS LED lights up and flashes quickly. Then release the button and wait while the router reboots, restoring it to its factory default settings.

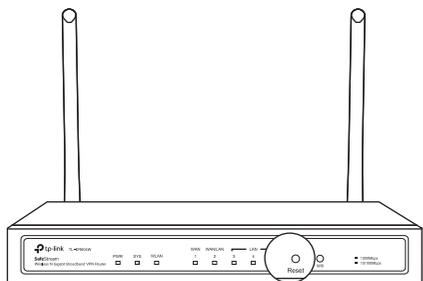

- Log in to the web management page of the router. Go to **Maintenance > Management > Factory Defaults**, and click **Restore to Factory Defaults**. The router will restore and reboot automatically.

What should I do if I forget the user name and password for the router's web management page?

You can restore the router to factory defaults. The default management address of the router is <http://192.168.0.1>. The default username and password are both **admin**. All current settings will be cleared once the router is restored. If you have a backup of your configurations, you can import it after the factory restore is complete.

Why is the PWR LED working abnormally?

The PWR LED should be lit when the power system is working normally. If it is not, please check the following:

- 1) Make sure that the power cable is connected properly, and the power contact is normal.
- 2) Make sure the voltage of the power supply meets the requirements for the input voltage of the router.

Why is the web management page not displaying properly?

Please try the following:

- 1) Update your web browser or try a different web browser.
- 2) If pop-ups are being blocked, please lower the security level of your web browser.

What should I do if I can't access the web management page?

- If the computer is set to a static or fixed IP address, change settings to obtain an IP address automatically.
- Enter <http://192.168.0.1> in the web browser and press **Enter**.
- Use another web browser and try again.
- Reboot your router and try again.
- Disable then enable the network adapter being used.



For technical support and other information, please visit <http://www.tp-link.com/support>, or simply scan the QR code.



©2017 TP-Link