


# Quick Installation Guide

AC2600 Wireless Gigabit VDSL/ADSL Modem Router  
*Archer VR2600*


## Connect the Hardware

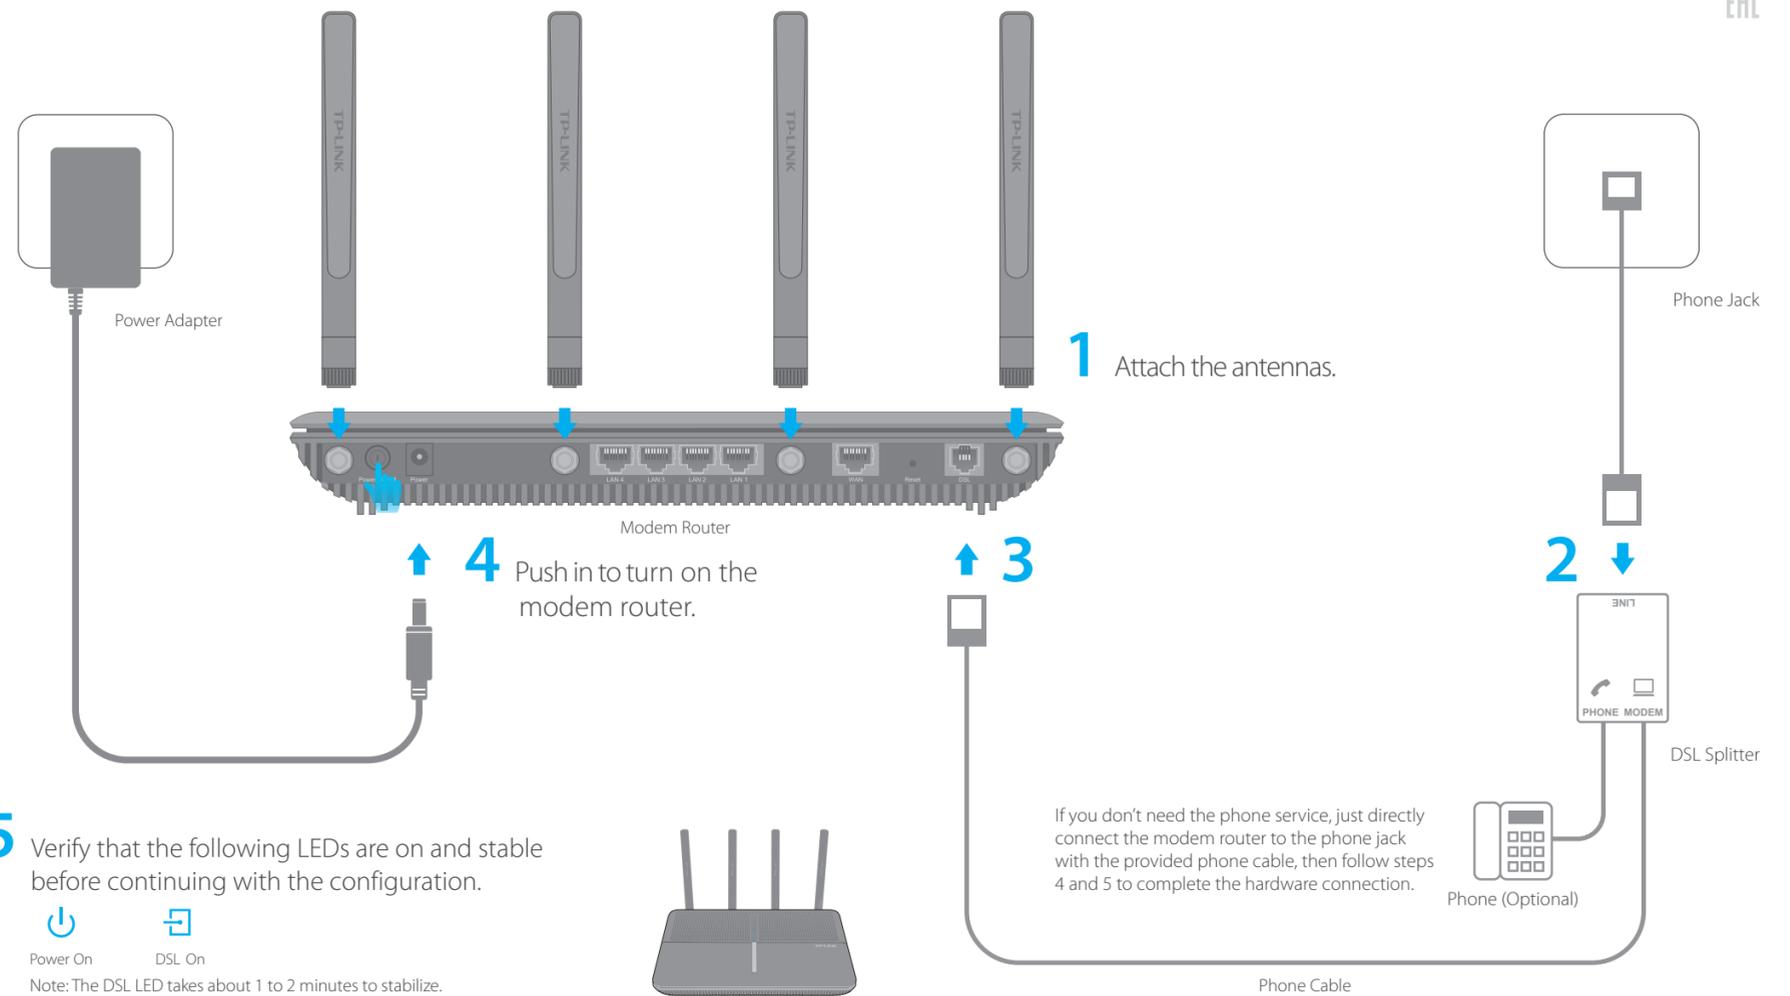

## Configure the Modem Router

**1** Connecting your computer to the modem router via a wired or wireless connection

### Wired

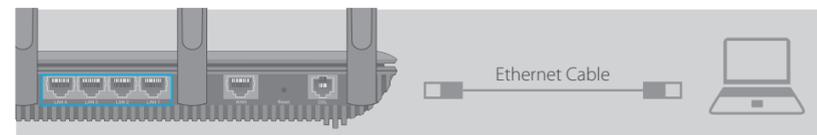

### Wireless


Connect wirelessly by using the SSID (network name) and Wireless Password printed on the product label at the bottom of the modem router.



**2** Configuring the modem router via a web browser

**A** Launch a web browser and type in <http://tplinkmodem.net> or 192.168.1.1. Create a new password (1-15 characters) and click **Save**.

Note: If the login page does not appear, please refer to FAQ->Q1.

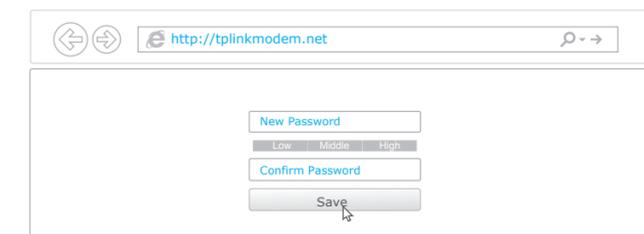

**B** Enter the password you set and click **Log in**.

Note: For subsequent logins, you only need to enter the password that you have set.


**C** Select your **Region** and **Time Zone**, then click **Next**. Follow the step-by-step instructions of the Quick Setup to complete the initial configuration.

## Enjoy the Internet

Now you can enjoy your Internet.

If you want more advanced settings, please refer to the User Guide on TP-LINK official website at [www.tp-link.com](http://www.tp-link.com).

## Button Legend

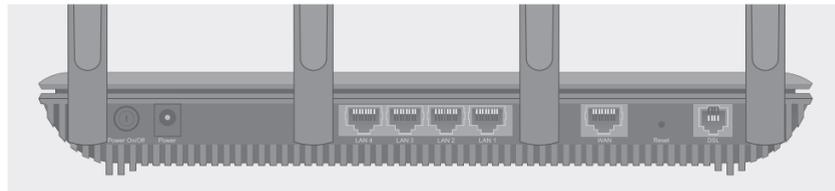

Button	Indication
<b>Power On/Off</b>	Press to power on or off the modem router.
<b>Reset</b>	Press and hold down for 8 seconds to reset the modem router into factory default settings.



Button	Indication
<b>WPS</b>	Press to start a WPS synchronization.
<b>2.4G Wi-Fi</b>	Press to turn 2.4GHz Wi-Fi on or off.
<b>5G Wi-Fi</b>	Press to turn 5GHz Wi-Fi on or off.
<b>LED On/Off</b>	Press to turn all lighted LEDs on or off. LED button is on the front panel, at the end of all LEDs.

## LED Indicators

LED	Status	Indication
<b>Power</b>	On	System initialization complete.
	Flashing	System initializing or firmware upgrading is in process. Do not disconnect or power off the modem router. Power is off.
	Off	Power is off.
<b>DSL</b>	On	DSL line is synchronized and ready to use.
	Flashing	The DSL negotiation is in progress.
	Off	DSL synchronization failed.
<b>Internet</b>	On	Internet connection is available.
	Off	No Internet connection or the modem router is operating in Bridge mode.
<b>Wireless 2.4GHz</b>	On	The 2.4GHz wireless radio band is enabled.
	Off	The 2.4GHz wireless radio band is disabled.
<b>Wireless 5GHz</b>	On	The 5GHz wireless radio band is enabled.
	Off	The 5GHz wireless radio band is disabled.
<b>LAN</b>	On	At least one LAN port is connected.
	Off	No LAN port is connected.
<b>USB</b>	Flashing	The inserted USB device is identified and ready to use. A new USB device is being identified.
	Off	No USB device is plugged into the USB port.
	On/Off	Turns On when a WPS synchronization is established and automatically turns Off about five minutes later.
<b>WPS</b>	On/Off	Turns On when a WPS synchronization is established and automatically turns Off about five minutes later.
	Slow Flashing	A wireless device is trying to connect to the network via WPS. This process may take up to 2 minutes.

Note: You can turn all lighted LEDs on or off by pressing the LED On/Off button.

## Tether App

To manage your network conveniently on your mobile device, scan the QR code to download the Tether App.



## Features

### • Ethernet WAN Connection

Connect an Ethernet cable (RJ45) from your fiber or cable modem to the WAN port of the modem router to use it as a wireless router. Refer to the User Guide for wireless router configuration.

### • 3G/4G Connectivity

Connect a 3G/4G USB mobile broadband modem to the router's USB port to get wireless Internet access through 3G/4G mobile networks. The USB dongle can be configured as the primary Internet connection, or as a backup to enhance network reliability. Refer to the User Guide for instructions.

### • USB Features

USB ports can also be used to share a printer, files and media from USB storage devices over your home network locally, or remotely through the Internet using its built-in FTP server capability.



To learn more about the USB features, visit <http://tp-link.com/app/usb> or scan the QR code.



## FAQ (Frequently Asked Questions)

### Q1. What can I do if the login page does not appear?

- If the computer is set to a static or fixed IP address, change it to obtain an IP address automatically from the modem router.
- Verify <http://tplinkmodem.net> is correctly entered in the web browser and press Enter.
- Use another web browser and try again.
- Reboot your modem router and try again.
- Disable and enable the active network adapter.

### Q2. What can I do if the DSL LED does not turn solid on?

- Check your cables and make sure they are all plugged in correctly, including the telephone lines and power adapter.
- Restore your modem router to its factory default settings.
- Remove the DSL splitter, directly connect the modem router to the phone jack and follow this Quick Installation to reconfigure the modem router.
- Contact your ISP to verify if the DSL line is in good status.
- If you have tried all the suggestions above and the problem still exists, contact our Technical Support.

### Q3. What can I do if I cannot access the Internet?

- Make sure the telephone and Ethernet cables are plugged in correctly.
- Try to log into the web management page of the modem router using the default address at <http://tplinkmodem.net>. If you can, try the following answers. If you cannot, change your computer to obtain an IP address automatically from the modem router.
- Consult your ISP and make sure all the VPI/VCI (or VLAN ID), Connection Type, account username and password are correct. If they are not, please replace them with the correct settings and try again.
- Restore the modem router to its factory default settings and reconfigure the modem router by following the instructions in this Quick Installation Guide.
- Please contact our Technical Support if the problem still exists.


### Q4. What can I do if I forget my password?

- Web Management page password:**  
Restore the modem router to its factory default settings and then set a new password using 1-15 characters.
- Wireless Network password:**  
A1. The default Wireless Password/PIN is printed on the product label of the modem router.

- If the default wireless password has been changed, log into the modem router's web management page and go to **Basic > Wireless** to retrieve or reset your password.

### Q5. How do I restore the modem router to its factory default settings?

- With the modem router powered on, press and hold down the **Reset** button on the rear panel of the modem router for 8 seconds until all LEDs turn off momentarily, then release the button.

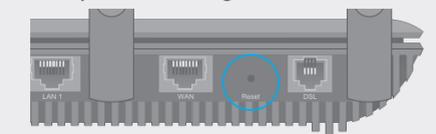

Reset Button Press & Hold for 8 seconds

- Log in to the Web Management page of the modem router, and go to **Advanced > System Tools > Backup & Restore**, click **Factory Restore** and wait until the reset process is complete.