

Quick Installation Guide


300Mbps Wireless N DOCSIS 3.0
Cable Modem Router

TC-W7960



Connect the Hardware

- 1 Connect the coaxial cable and power adapter to the modem router, then power on your modem router.

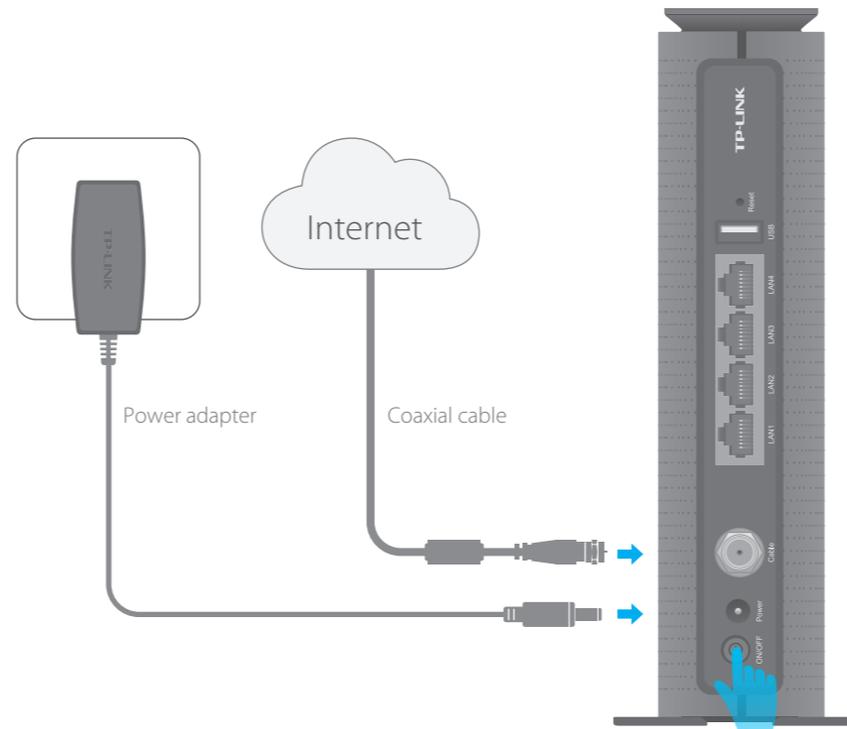


- 2 Connect your computer to the modem router via a wired or wireless connection.

Wired: Connect the computer to the modem router's LAN port via an Ethernet cable.

Wireless: On your computer, select and connect to the modem router's wireless network. The default wireless network name (SSID) and password are printed on the product label at the bottom of the modem router.

Or you can set up a connection via the WPS button , which is on the front panel of the modem router. For more information about WPS, refer to the User Guide at www.tp-link.com.

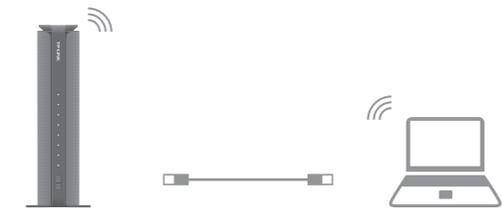

Customize the Wireless Network

- 1 Launch a web browser and type in <http://tplinkmodem.net> or <http://192.168.1.1>. Use **admin** for both username and password, then click **Login**.

- 2 Go to **Basic > Wireless** to personalize your wireless network name (SSID) and password, then click **Save**.

Once done, you will need to reconnect to your wireless network using the new SSID and password.

Note: To enable and customize guest network, go to **Basic > Guest Network**.

USB Features

The USB port can be used for media sharing, storage sharing and printer sharing within your local network. You can also set up an FTP server to access your files remotely through the Internet.



To learn more about the USB features, visit <http://tp-link.com/app/usb>, or simply scan the QR code.




LED Indicators

LED	Status	Indication
(Power)	On/Off	Power is on or off.
(Downstream)	White	The modem router is synchronized with one channel.
	Green	The modem router is synchronized with more than one channel.
(Downstream)	Flashing	The modem router is scanning for downstream channels.
	Off	The initialization is not started, or has failed.
(Upstream)	White	The modem router is synchronized with one channel.
	Green	The modem router is synchronized with more than one channel.
(Upstream)	Flashing	The modem router is synchronizing with upstream channels.
	Off	The initialization is not started, or has failed.
(Internet)	On/Off	Internet service is available or is not available.
	Flashing	The modem router is initializing.
(LAN)	On	At least one LAN port is connected.
	Off	No LAN port is connected.
(USB)	On	The USB device is detected and ready to use.
	Flashing	The USB device is being detected.
	Off	No USB device is plugged into the USB port.
(Wireless)	On/Off	The wireless network is enabled or disabled.
(WPS)	On/Off	The LED stays on for 5 minutes when a WPS connection is established, then turns off.
	Flashing	WPS connection is in progress. This may take up to 2 minutes.

How do I restore the modem router to its factory default settings?

1. With the modem router powered on, press and hold the **Reset** button on the rear panel of the modem router for approximately 8 seconds until all LEDs turn back on, then release the button.
2. Log in to the web management page of the modem router. Go to **Advanced > System tools > Backup & Restore** and click **Reset**. The modem router will restore and reboot automatically.

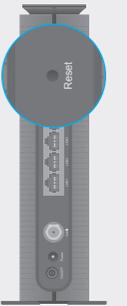

For related User Guide and FAQs, visit <http://www.tp-link.com>.

Safety Information

The product should be connected to cable distribution system that grounded (earthed).