


# Quick Installation Guide

Applicable Model:

TL-WA860RE

- Method ONE: Quick Setup using the WPS Button
- Method TWO: Setup using your Web Browser

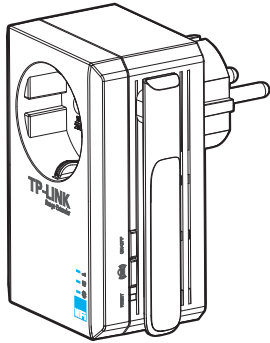

7106504983 REV1.2.1

## LED Explanation



**Off:** TL-WA860RE isn't connected to the router.  
**Flashing Green:** TL-WA860RE is connecting to the router.  
**Solid Green:** TL-WA860RE is connected to the router and is in a good location.  
**Flashing Orange:** TL-WA860RE is connected to the router but is too far away from the router.  
**Solid Orange:** TL-WA860RE is connected to the router but is too close to the router.



**Off:** No device is connected to ETHERNET port.  
**Green:** A device is connected to the ETHERNET port.



**Off:** TL-WA860RE is off.  
**Orange:** TL-WA860RE is booting.  
**Green:** TL-WA860RE is on.

If you push the **ON/OFF** button on the side panel, all **LEDs** will be off as TL-WA860RE is powered off.



For more information, please visit our website: <http://www.tp-link.com>


## Method ONE

### Quick Setup using the WPS Button

Use this if your Router or Access Point (AP) supports WPS

#### 1 Power on

Plug your TL-WA860RE into a power outlet near your Router/AP.

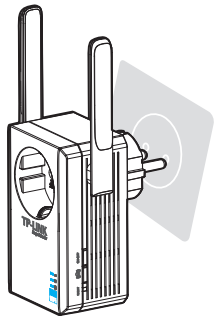

Wait until the '⚙️' LED goes from orange to solid green.

#### 2 Push the two WPS buttons

- Push the WPS button on your Router/AP.
- Immediately push the «Ⓜ» button on your TL-WA860RE.




If the WPS connection fails, please go to **Method TWO**.

The '📶' LED will go from flashing green to solid green, solid orange, or flashing orange in 1 minute, showing that WPS connection has succeeded.  
If '📶' LED turns off, it means WPS connection fails.

#### 3 Relocate

Once your TL-WA860RE is properly configured, you can move it to a more ideal location for optimal signal quality and coverage. Once placed in another power outlet, the extender will **reconnect to the main Router/AP automatically in about 30 seconds**. \* Keep these in mind:

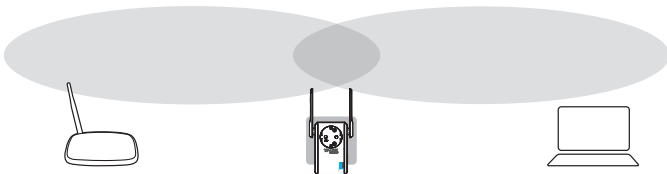

Generally, the ideal location for your extender is **Halfway** between your wireless router and Wi-Fi enabled devices.

Signal (📶) LED	Location
Solid Green	Ideal Location
Solid Orange	Too Close to the Router
Flashing Orange	Too Far from the Router

Signal (📶) LED Status could help you find a more ideal location.




Keep the extender away from devices like cordless phones, Bluetooth devices and Microwave Ovens to minimize wireless interference.

If possible, try to place your extender in **open corridors or spacious locations** rather than a crowded room.

## Enjoy!


The TL-WA860RE **shares** the same Wi-Fi network name (SSID) and Wi-Fi password with your main Router/AP.

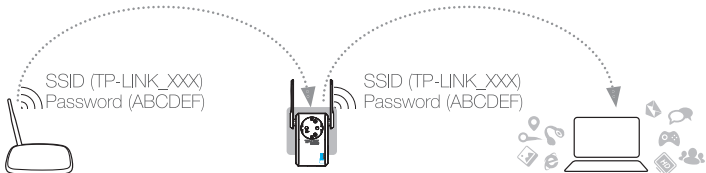

## Frequently Asked Questions (FAQ)

### Q1. How to reset the TL-WA860RE?

A1: While the TL-WA860RE is plugged into a power outlet, press the **RESET** button for 2 seconds. Wait 5 seconds until all the LEDs flash once.  
OR  
A2: Log into the management page via your web browser, then go to "System Tools -> Factory Defaults" and click "Restore". Wait 5 seconds until all of the TL-WA860RE's LEDs flash once.

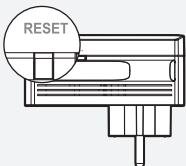

### Q2. I typed <http://tplinkrepeater.net> in the browser URL bar, but why can't I see the quick setup page?

A: First, make sure your computer is connected to the extender network and disconnected from any other network. Second, make sure your computer is set to "Obtain an IP address automatically".


### Q3. What's the technical support hotline?

A: Please visit "[www.tp-link.com](http://www.tp-link.com)", find "Support>Contact Technical Support>Hotline Support" for more information.

## Method TWO Setup using your Web Browser

### 1 Power on


Plug your TL-WA860RE into a power outlet **near** your Router/AP.

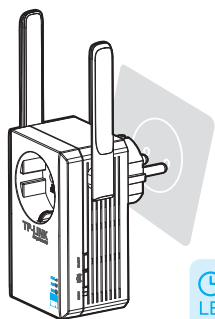

Wait until the 'LED' goes from orange to solid green.

### 2 Connect your computer to the TL-WA860RE

Connecting via **Ethernet Cable**

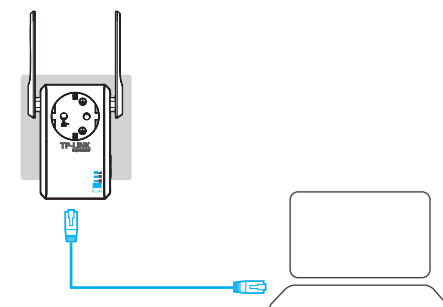


1. Disconnect your computer from all wireless networks.
2. Connect the TL-WA860RE to your computer via an Ethernet cable. Then continue to **Step 3**.

Connecting via **Wireless**




1. Disconnect your Ethernet Connection. Click the **Wireless Network Connection** icon on your desktop.

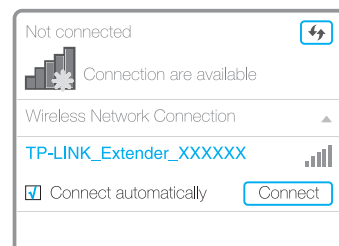

2. Click the **refresh** icon and connect to the TL-WA860RE (the default wireless network name is: **TP-LINK\_Extender\_XXXXXX**) and continue to **Step 3**.


### 3 Configuration via your Web Browser

- 1 Type "http://tplinkrepeater.net" in your Web browser and press **Enter**. Log in to the management page using user name "**admin**" and password "**admin**".

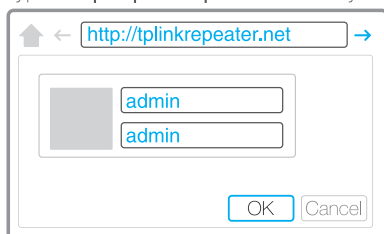


It may take 5 seconds or more for the **login** page to pop up. If it does not pop up, **refresh** the browser, otherwise, please refer to the FAQ > Q2.


- 2 Below are the major steps of the setup process.

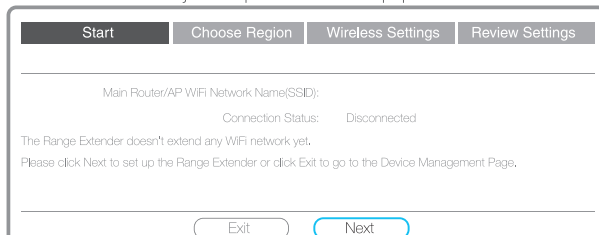


a. After logging in, you will see the **Quick Setup** page.

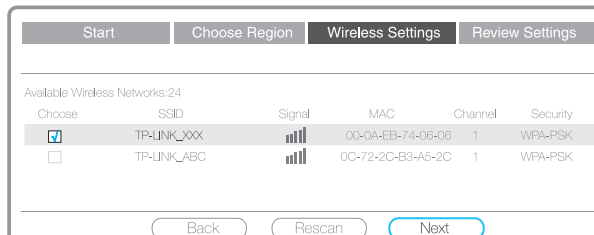

b. Select your Router/AP's **Wi-Fi** network, for example, **TP-LINK\_XXX**.

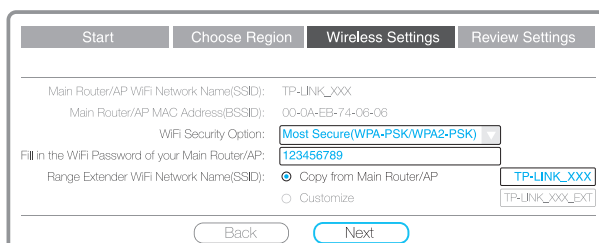

c. Fill in the **Wi-Fi Password** of your main Router/AP. The TL-WA860RE's **Wi-Fi network name (SSID)** can be copied from your main Router/AP name (**TP-LINK\_XXX**) OR BE CUSTOMIZED A NEW ONE (**TP-LINK\_XXX\_EXT**).

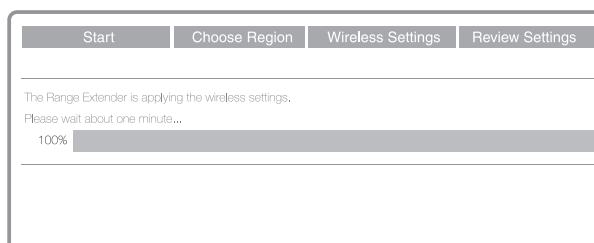

d. After completing the configuration, please check the 'LED' lights. It should be solid green, solid orange or flashing orange.


### 4 Relocate



Flip this piece of paper. Please refer to **Step 3** of **Method ONE**.

**Enjoy!**

Choose TL-WA860RE's **Wi-Fi** network name (TP-LINK\_XXX or TP-LINK\_XXX\_EXT). The TL-WA860RE **shares the same Wi-Fi password** with your main Router/AP.

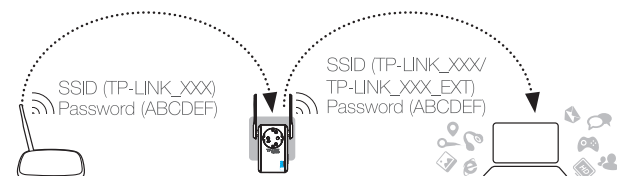

## Entertainment Adapter

The TL-WA860RE's single Ethernet port allows the Range Extender to function as a wireless adapter connecting a wired device like Blu-ray players, game consoles, DVRs and smart TVs. At the same time, the device can share the wireless network. Please follow **Method ONE** or **Method TWO** to set up the TL-WA860RE first and then refer to the connection diagram to connect to **one** Ethernet-enabled device.

