



# Quick Installation Guide

450Mbps Wireless N Gigabit Router


TL-WR1043ND

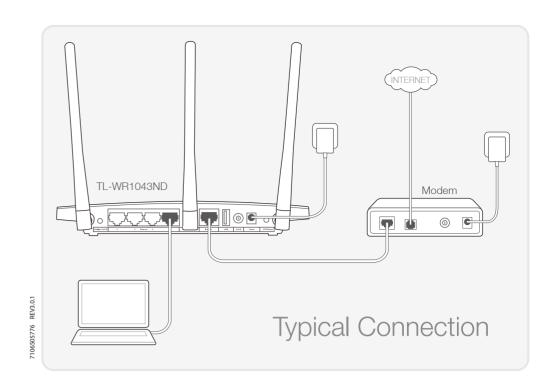

## 1. Connect the Hardware

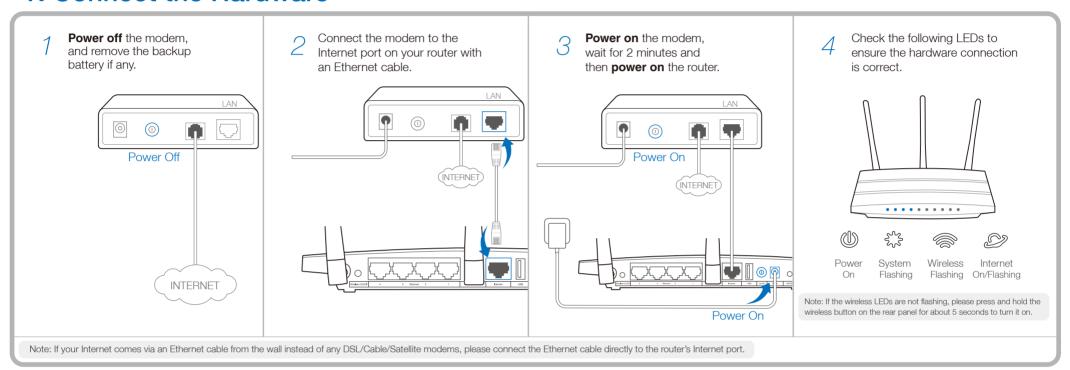

# 2. Configure the Router

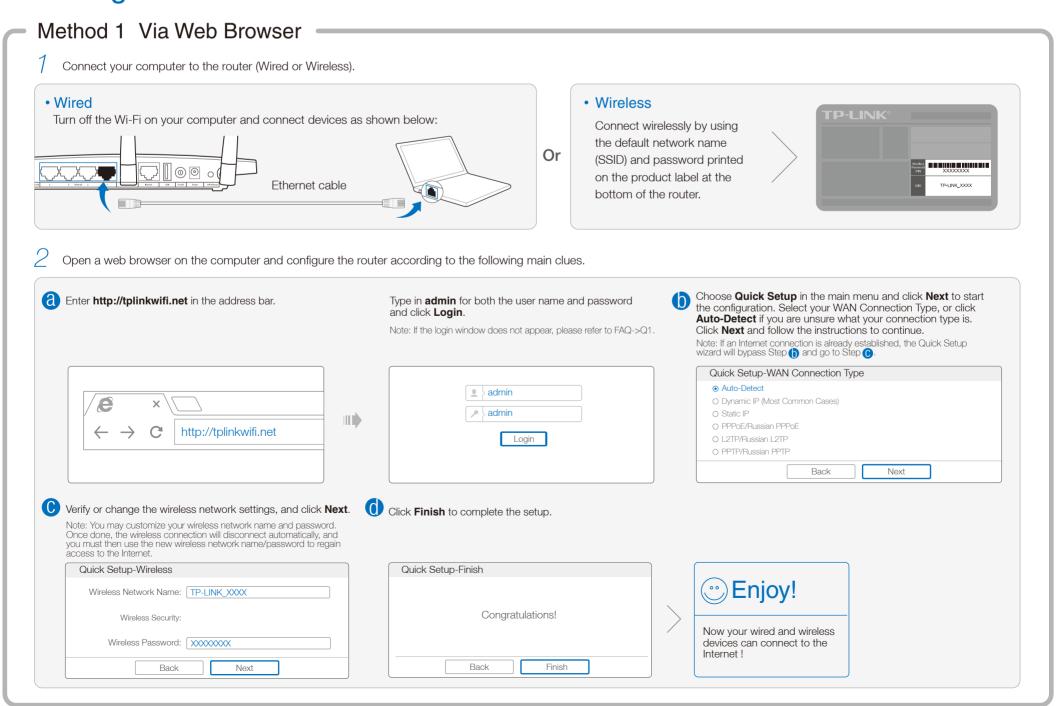

# **Tether App**

TP-LINK's Tether App lets you access the router and:

- View information about the clients on your network.
- Block network access from specific users or devices.
- Set up Parental Control with access time and content restrictions.
- Change the basic wireless network settings easily.

### Then, how to start?

Scan the QR code and download the TP-LINK Tether App from App





 
- Ensure your smart device is wirelessly connected to the router.
- 2 Launch the Tether App, and enjoy the easy management of the router.

### **USB** Features

The USB port can be used for media sharing, storage sharing and print sharing across your local network. You can also set up an FTP server to access your files remotely through the Internet.

Note: To learn more about the USB features, please visit the website http://tp-link.com/app/usb, or simply scan the QR code with your smart devices.















Sharing

# Frequently Asked Questions (FAQ)

### Q1. What can I do if the login window does not appear?

A1. If the computer is set to a static or fixed IP address, change it to obtain an IP address automatically.

A2. Verify that 'http://tplinkwifi.net' is correctly entered in the web browser. Alternatively,

enter 'http://192.168.0.1' in the web browser and press 'Enter'.

A3. Use another web browser and try again. A4. Reboot your router and try again

A5. Disable the network adapter used currently and then enable it again.

### Q2. What can I do if I cannot access the Internet?

A1. Check if the Internet is working properly by connecting a computer directly to the

modem via Ethernet cable. If not, contact your Internet Service Provider. A2. Open a web browser, enter 'http://tplinkwifi.net' and try to set up again

A3. Reboot your router and try again.

 
Note: For cable modern users, reboot the modern first. If the problem still exists, go to Network>MAC Clone, then click Clone MAC Address and Save.



### Q3. How do I restore the router to its factory default settings?

A1. While the TL-WR1043ND is powered on, press and hold the 'WPS/Reset' button on the rear panel of the router for more than 5 seconds and wait until all LEDs flash togheter once.

A2. Log in Web Management page of the router, and go to System tools->Factory Defaults, click Restore, then wait until the progress bar loading finished.



WPS/Reset Button Press & Hold more than 5 seconds

### Q4. What can I do if I forget my password?

• Web Management page password:

A. Restore the router to its factory default settings and then use the default User Name 'admin' and Password 'admin' to log in.

Wireless Network password:

A1. The factory default password can be found on the product label printed on the bottom of the router.

A2. If you have changed your password, log in to the router's Web Management page, go to Wireless>Wireless Security to obtain or reset your password.

Note: If your questions are not answered here, please refer to http://www.tp-link.com/en/support/faq and click Contact Technical Support for further assistance.

# **LED Indicators**

	Name	Status	Indication	
(1)	(Power)	Off	Power is off.	
		On	Power is on.	
47.55 47.50	(System)	Off	The router has a system error.	
		On	The router is initializing or maybe has a system error.	
		Flashing	The router is working properly.	
	(Wireless)	Off	The wireless is disabled.	
		Flashing	The wireless is working properly.	
	(Ethernet)	Off	No device is connected to the corresponding port.	
		On	There is device(s) connected to the corresponding port(s) but no activity.	
D)	(Internet)	Flashing	There is device(s) connected to the corresponding port(s) and active.	
ST	(WPS)	On/Off	It turns on when a wireless device has been successfully connected to the network via WPS.  After about 5 minutes, the WPS LED will turn off.	
		Slow Flash	A wireless device is trying to connect to the network via WPS. This process may take up to 2 minutes.	
ψ̂)	(USB)	Off	No USB device is plugged into the USB port.	
		On	There is a USB device plugged into the USB port.	