

## How To Setup Static And Dynamic Configuration

اول حاجه وصل الكمبيوتر بالراوتر عن طريق توصيل سلك طرفه في اي بورت اصفر من بروتات الراوتر و الطرف الثاني في الكمبيوتر



افتح برنامج الانترنت بتاعك ,, Internet Explorer ,, Google Chrome ,, Firefox و أكتب في شريط المواقع 192.168.1.1 ودوس Enter

حتطلع رساله تطلب منك Username و Password أكتب في الخانتين admin

حتفتح الصفحه دي

- Status
- Quick Setup
- Operation Mode
- Network
- IPTV
- DHCP Server
- Wireless
- Guest Network
- USB Settings
- Route Settings
- IPv6 Route Settings
- Forwarding
- Parent Control
- Firewall
- IPv6 Firewall
- IPv6 Tunnel
- Bandwidth Control
- IP & MAC Binding
- Dynamic DNS

**Basic Status**

---

**Device Information**

Firmware Version: 0.9.1 2.0 v0035.0 Build 150114 Rel.51006n  
 Hardware Version: TD-W8970 v3 00000000  
 System Up Time: 0 day(s) 00:00:06

---

**DSL**

Line Status: Disconnected  
 DSL Modulation Type: Multimode  
 Annex Type: Annex A/L

	Upstream	Downstream
Current Rate (Kbps)	0	0
Max Rate (Kbps)	0	0
SNR Margin (dB)	0	0
Line Attenuation (dB)	0	0
Errors (Pkts)	0	0

---

**WAN**

فتح Network----Lan Settings

- Quick Setup
- Operation Mode
- Network
- WAN Settings
- 3G Settings
- Interface Grouping
- LAN Settings
- IPv6 LAN Settings
- MAC Clone
- ALG Settings
- DSL Settings
- IPSec VPN
- DHCP Server
- Wireless
- USB Settings
- Route Settings
- Forwarding
- Parent Control
- Firewall
- IPv6 Firewall
- IPv6 Tunnel

Note: If the LAN IP address or subnet mask is changed, please make sure the DHCP Address Pool and the static IP assigned by DHCP Server are in the same subnet with the new LAN IP.

Group: **Default**

IP Address: 192.168.1.1  
 Subnet Mask: 255.255.255.0

Enable IGMP Snooping:

Enable Second IP:

IP Address: 0.0.0.0  
 Subnet Mask: 0.0.0.0

DHCP Server:  Disable  Enable  DHCP Relay

Start IP Address: 192.168.1.100  
 End IP Address: 192.168.1.199  
 Leased Time: 1440 minutes (1~2880 minutes, the default value is 1440)

Gateway: 192.168.1.1 (optional)  
 Default Domain: (optional)  
 DNS Server: 0.0.0.0 (optional)  
 Secondary DNS Server: 0.0.0.0 (optional)

علم علي Enable Second IP

حيثفتح خانتيين للـ Subnet Mask , IP Address , Subnet Mask أكتب في الخانتين IP Gateway أو WAN IP و Subnet Mask , الخاصين بـ Static IP

دوس Save

## بعد كده افتح System Tools----Manage Control

- USB Settings
- Route Settings
- Forwarding
- Parent Control
- Firewall
- IPv6 Firewall
- IPv6 Tunnel
- Bandwidth Control
- IP & MAC Binding
- Dynamic DNS
- Diagnostic
- System Tools**
- System Log
- Time Settings
- Manage Control
- CWMP Settings
- SNMP Settings
- Backup & Restore
- Factory Defaults

Host MAC Address: 00.00.00.00.00.00


### Account Management

Old Password:   
New User Name:   
New Password:   
Confirm password:

### Service Configuration

	HTTP Service	Available Host (IP/MAC)
Local Management	Port   80	<input type="text"/>
Remote Management	Enable <input checked="" type="checkbox"/> Port   80	<input type="text"/>

Save

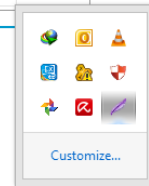

علم علي Enable في خانه Remote Management

دوس Save

اعمل Logut من System Tools حاول من شبكه انترنت تانيه " 3G مثلا " تكتب IP Address اللي حطيتيه علي الراوتر في شريط المواقع حتلاقيه فتح و بيطلب منك Username , Passowrd اكتب في الخانتين Admin