

Quick Installation Guide

Megapixel Surveillance Camera Wireless N Megapixel Surveillance Camera

MODEL NO. TL-SC3230/TL-SC3230N



LED	Status		Description		
	Off		The camera is powered off.		
Power/ Wireless LED	Solid Orange		The camera finishes boot-up and is ready to serve. Power on the camera, the LED will light up and then go off to booting process. After keeping off for several seconds, the LED will be solid orange.		
	Flash Orange *		The camera has been connected to a wireless network.		
	Solid G		No cable is linked to the camera.		
LAN LED Flas		n Green	Data is being transmitted or received.		
Button			Description		
RESET Button re			e the camera is ready, press RESET button for at least 5 seconds and se it. The camera will be restored to default settings and reboot .		

RESET Button

lash Orange status

7106504101

Package Contents

The product model shown in this QIG is TL-SC3230N, as an example.





(*The pictures are for reference only.)

Resource CD

System Requirement

The following operating systems are supported:

• Windows 2000	• Windows 2003	 Windows XP
 Windows Vista 	• Windows 7	

Ethernet Cable

The following browsers are supported:

• Internet Explorer 8 or higher

• Safari	 Firefox 	Chrome
	(*Internet Exp	olore Browser is recommended



• Do not keep the Camera exposed to direct sunlight.



• Do not place the Camera in high humidity environments such as in a kitchen.

there are high temperatures

such as near an oven.

• Do not place the Camera where

- \Box
- · Do not place the Camera near devices that emit radio waves, such as mobile phones.



3 Hardware Connection



[•] It is recommended to mount the Camera where objects often pass, and the direction towards the door or passage is much better, see the illustration below:



Connect the LAN port on Camera to the LAN Port of your router or switch with an Ethernet cable.



2 Connect the power adapter cord to the Power jack.

B Plug the power adapter into the power outlet.

Note:

Before proceeding, confirm that your PC is connected to your Router and can access the Internet.

Make sure that your Router's DHCP feature is enabled. If not, please refer to your Router's instruction to enable it.

4 Software Installation



The Setup Wizard will automatically pop up, then click "IP Search Software".



* If the CD does not automatically run with the installation window appearing, find the CD drive in the "My Computer" space and run it directly there.

3	Softwa	are w	II IP Search indow will app s to install the s	pear. Clie	ck " Next	
	🗑 Setup - T	P-LINK IP	Search			
			Welcome to the TP-LIN Search Setup Wizard	< IP		
			This will install TP-LINK IP Search 3.0.0.8826 computer.	5 on your		
			It is recommended that you close all other a continuing.	pplications before		
		L	Click Next to continue, or Cancel to exit Set	φ.		
			Ment >	Cancel		

Click "Finish" to complete the setup and the icon of "IP 4 Search" will display on the computer's Desktop.



Note:

Surveillance Manager software is provided on the CD for you to manage the camera. For detailed instruction, please refer to its user manual included.

Appendix: Configure the Camera via IP Search

With "IP Search", you can change the IP related parameters of wired interface and connect the camera to the wireless network quickly. Wireless setting is for TL-SC3230N only.

LAN Setting

Select the camera you want to configure and click the "LAN" 1 button. Modify the relative settings of the selected device. Click "<<" button to quit the LAN setting procedure or click ">>" button to move to next page.

LAN: Metwork: OStatic IP ODHCP IP IP Address: 192,168, 1, 103 0 ÷

Change the login password. Tick the box and then key in a 2 new username and password, and click "Submit" button to perform your settings accordingly. Click "<<" button to return to the previous page.

User Name: admir Password: LAN

- Wireless Setting
- Select the camera you want to configure and click the 1 "WIRELESS" button. Click SSID to select your wireless AP or router and key in WEP or WPA key. Click ">>" to confirm wireless setting and then submit your settings.



After taking the steps above, you will be prompted to unplug the Ethernet cable to activate wireless access. And you can select to test wireless settings or finish wireless procedure in the following figure.



5 Access the Camera Using IP Search

Click the icon of IP Search on the computer's Desktop.

Click "SEARCH", the main page will show up and list all active TP-LINK camera devices. Select the camera based on its MAC address, which can be found on its label.

Double click the selected camera and you will link to this camera by browser (or you can click "VIEW" to view the live video on the right corner of the page).

IP-LINK IP Search 1	Version 3.0.0.8826		Interface : 192.168.1.102	0
Device Title	IP Address	Port	MAC	
TL-SC3230N	192.168.1.103	80	00-0E-AE-A2-61-90	
SEARCH O	Camera:		User Name- admin	
VIEW		5C3230N	User Name: admin Password:	
	Model Name: TL-	SC3230N Vired		
	Model Name: TL.			
	Model Name: TL- Network: N DHCP:	Vired		
VIEW O	Model Name: TL- Network: V DHCP: WIFI: Er	Vired ON		

When you are accessing the Camera for the first time, a yellow 2 information bar will appear at the bottom of the web page. Click the "Install" button. Then click "Install" at the prompt.

C	P * B C X @ 101001100	∩ ★ ○
File Balt View Favorites Tools Help		
TP-LINK The header Over		Window Severillence Comera TL SC 1230
(x		
Video Profile		
Dreaming		
127 · · · · · · · · · · · · · · · · · · ·		
topia. •		
N 1000		
<u> </u>		
Max viewers : 20 Connect viewers : 1		
_		
Annual Colorest States and a state of	on intelline an inclusion particular internation	kol

Troubleshooting

- **0** What can I do if the information bar does not show up? Open an IE browser. Click "Tools", then "Internet options". Click "Security" -> "Internet" -> "Custom level...". Find the item "Download signed ActiveX controls" and set to "Prompt (recommended)", then click "OK". Click "Security" -> "Local intranet" -> "Custom level...". Find the item "Download signed ActiveX controls" and set to "Prompt", then click "OK".
- **2** What can I do if I forget the login name and password? Keep the camera powered on, then press and hold the **Reset** button for more than 5 seconds. Afterwards release it, and the camera will be restored to factory defaults after reboot. Both the default name and password are admin.
- **•** What can I do if I can't access the Camera?

Make sure the Power LED is solid orange. If you can't find the IP address through IP Installer, please log into your router and find the camera's IP address in the DHCP Client list. If this still doesn't work, please reset the camera.

O What can I do if the video image flickers?

Wrong power line frequency makes images flicker. Make sure the power frequency of your camera is 50 or 60Hz. If the object is dark, the image will flicker. Make the environment around the camera brighter.

For more details about Troubleshooting and Technical Support contact, please log onto our Technical Support Website.

http://www.tp-link.com/en/support



3 Live video will display in the center of your web browser.



If you want to configure the parameters of the camera, 4 please click "Setting" on the web management page. Enter User name and Password to log onto the configuration page of the camera. (Default is admin / admin)



Note:

If the information bar does not show up, please refer to Troubleshooting

For advanced settings, please refer to the User Guide on the Resource CD.

