

The InstallShield Wizard will install TP-LINK Wireless Configuration Utility and Driver on your computer. To continue, click Next. <Back Next> Cancel Find the appropriate model and choose


Install Driver&Utility TP-LINK Browse CD EXIT

Select Install TP-LINK Wireless Configuration 4 Utility and Driver and then click Next.

етир Туре	
Select the setup type that best suits your needs.	TP-LINK
Dick the type of setup you prefer.	
Install Driver Only	Description
Install TP-LINK: Wireless Configuration Unity and Drive	Choose this option to install TP-LINK Wrieless Configuration Utility and driver. This is the recommended option.
IlShield	

	-	Install TP-LINK Wireless Configu	ration Utility and Driver to:		
		C:\\TP-LINK Wireless Configu	ration Utility	Change	
	InstallShield -				
	Instalioniela -		< Back Ne	ext > Cancel	
6	Click I	nstall to install	the driver a	nd utility for v	our
0	adapt			, , , , , , , , , , , , , , , , , , , ,	
	-				
		reless Configuration Utility and Install the Program	Driver - InstallShield Wiz	ard 💌	
	-	ard is ready to begin installation.		TP-LINK	
	Click Ins	tall to begin the installation.			
	If you wa the wiza	ant to review or change any of you rd.	r installation settings, click B	ack. Click Cancel to exit	
	InstallShield -		< <u>B</u> ack In	stall Cancel	

2

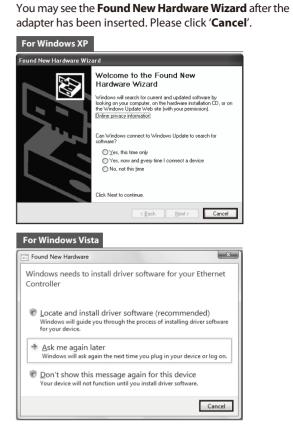

The installation of the driver and utility may take 7 1~2 minutes. . TP-LINK Wireless Configuration Utility and Driver - InstallShield \ Setup Status **TP-LINK** Wizard is installing TP-LINK Wireless Configuration Utility and Installing C:\...\Driver\Windows Vista 32bit\netathr.inf

8

The following screen will then appear. Click Finish to complete the setup.

Cancel

TP-LINK Wireless Configuration	utility and Driver - InstallShield Wizard
	Utility and Driver - InstallShield Wizard InstallShield Wizard Complete InstallShield(R) Wizard has finished Installation. Click Finish to exit the wizard.
	< Back Finish Cancel

3 Connect to Network (You can skip to Appendix: Connect to Wireless Router by WPS to quickly connect to a network if your Router or Access Point features WPS or QSS function.)

After installation, the configuration page will pop up on your desktop.

Status	WPS	Network	Profile	Advanced	
Network Nam			urity -	Channel ~	Signal 🔻
TP-LINK_Netv	vork1	WPA/	WPA2-Personal	4 (2.4G)	lin.
TP-LINK_3521	73C	None		6 (2.4G)	in.
TP-LINK_352	7.	WPA/	/VPA2-Personal	6 (2.4G)	
TP-LINK		WPA2	-Enterprise	5 (2.4G)	100
tplink		None		1 (2.4G)	100
TP-LINK_86A	3E7	WPA2	-Personal	11 (2.4G)	
spark_bro		WPA2	-Personal	1 (2.4G)	100
TP-LINK 86A:	3	WPA2	-Personal	1 (2.4G)	

The icon will appear on your desktop. Double-clicking on the icon can start the utility.

2 Click **Network** in the tools section to display a list of available wireless networks. Highlight the target network name (e.g. TP-LINK_Network1) and then click **Connect** to build a connection.

Status WPS	Network Profile	Advanced	
Network Name(SSID)	Security 👻	Channel 👻	Signal 👻
TP-LINK_Network1	WPA/WPA2-Personal	4 (2.4G)	110.
	Connect automatically	Conn	ect
TP-LINK_35273C	None	6 (2.4G)	in.
TP-LINK_3527	WPA/WPA2-Personal	6 (2.4G)	lin,
TP-LINK	WPA2-Enterprise	5 (2.4G)	
tplink	None	1 (2.4G)	100
TP-LINK_86A3E7	WPA2-Personal	11 (2.4G)	100
spark_bro	WPA2-Personal	1 (2.4G)	

Note

Here we only choose a wireless network with the security type of **WPA/WPA2-Personal** as an example to elaborate the following steps.

If you want to know more about the connection to a wireless network with the security type of **WPA/WPA2-Enterprise**, please refer to the User Guide on the resource CD included.

3 If the network is unsecured, you will directly connect to it. If it is secured (with WPA/WPA2-Personal), there are two ways to connect to it.

Method One:

Input the password into the **Security Key** field and then click **OK** to continue.

Please input the pas	sword:	
Security Key:	****	
	Show characters	
	OK Cancel	

Method Two:

Without entering a key, push the WPS or QSS button on your Router as hinted "You can also connect by pushing the button on the router". Then click **OK** to continue.

A Charles and	
Please input the pas	sword:
Security Key:	
	Show characters
()	You can also connect by pushing the button on the router.
	OK Cancel

Appendix: Connect to Wireless Router by WPS

If your wireless Router features the WPS or QSS function, you can also set up a wireless connection in this way.

Note


For more configuration methods of WPS, please refer to the User Guide on the Resource CD.

1

Push the **WPS/RESET** button on the Router. (Here takes Router TL-WR841ND for example.)



2 Launch the configuration utility and click **WPS** in the tools section. Select **Push the button on my access point or wireless router** and then click **Connect**.

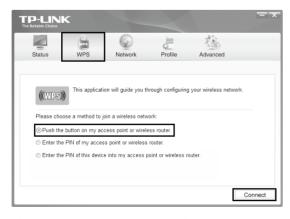


The third option "Enter the PIN of this device into my access point or wireless router" is only available in OS Windows XP and Window Vista, but not in Windows 7/8.

3 Wait for the connection process to complete. The following screen indicates successful connectivity. Click **OK** to finish the WPS connection.

Configuring the	e wireless network.
	(((WPS)))
Successfully o	connected to the network by WPS !
	OK

4

The following screen indicates successful connectivity. Click **Close** to enjoy the Internet.

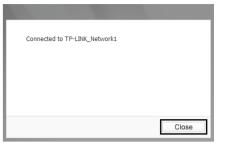

5

To view more information about the network connected, click **Status** in the tools section.

		Q	-		
Status	WPS	Network	Profile	Advanced	
Profile Name:		TP-LINK_Network1			
Network Name(S	SSID):	TP-LINK_Network1			
Network Type:		Infrastructure	Rate:	300Mbps	
Channel:		4 (2.4G)	Encryptio	n Type: AES	
AP MAC:		94-0C-6D-2F-3C-BE	Wireless	Mode: 802.11n	
IP Address:		192.168.1.111			
				100%	Exceller

