

How to upgrade firmware of TP-Link Deco Whole Home Wi-Fi System

Before upgrading



- Please verify the hardware version of your device to ensure compatibility with the firmware version. Improper firmware upgrading may damage your device and void the warranty. You can find the hardware version on the bottom label of the device or in the management interface. For detailed instructions, please refer to [How to find the hardware version on a TP-Link device](#).
- Better back up the configuration to restore it after upgrading. Alternatively, note all the settings you changed from their default values, as you may need to re-enter them manually if the firmware release note indicates that the upgrade will reset your settings. For detailed instructions, please refer to [How to back up and restore the configuration file of TP-Link Deco Whole Home Wi-Fi System](#).

During upgrading


- To avoid wireless disconnect issues during the firmware upgrade process, it's recommended to upload firmware with a wired connection unless there is no LAN/Ethernet port on your TP-Link device.
- Do NOT turn off the power during the upgrade process, as it may cause permanent damage to the product.

Upgrading steps


Step 1. Find and navigate to the zip file from which you want to extract the content. Right-click on the file and select **Extract All** from the context menu. (Google Chrome & Windows system as an example)

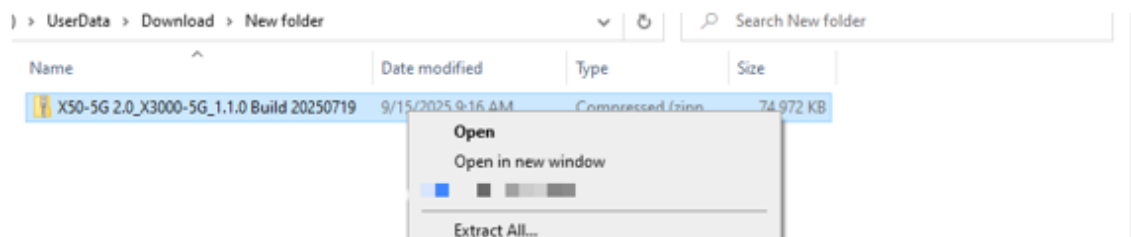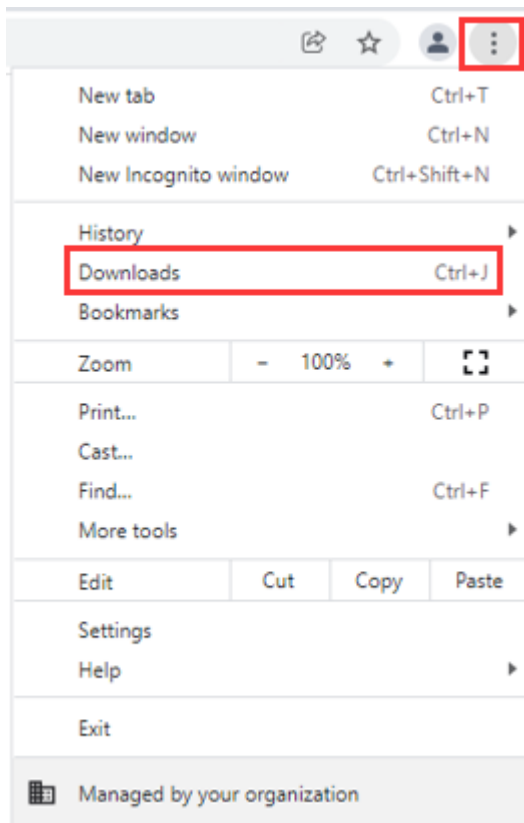



Step 2. Log in to the TP-Link device by typing <http://tplinkdeco.net/> in the address bar of any web browser (such as Chrome or Firefox). When first accessing the system, set a secure administrator password. For some models, the default username and password are admin/admin. Alternatively, you can create a new local password yourself. For detailed instructions, please refer to [How to log in to web management page of TP-Link Deco Mesh Wi-Fi](#)

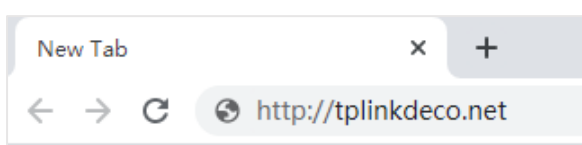

Step 3. Click **Advanced > System > Firmware Upgrade**, then click **BROWSE** to select the firmware you have already extracted from the folder. The firmware type is usually a **BIN File**.

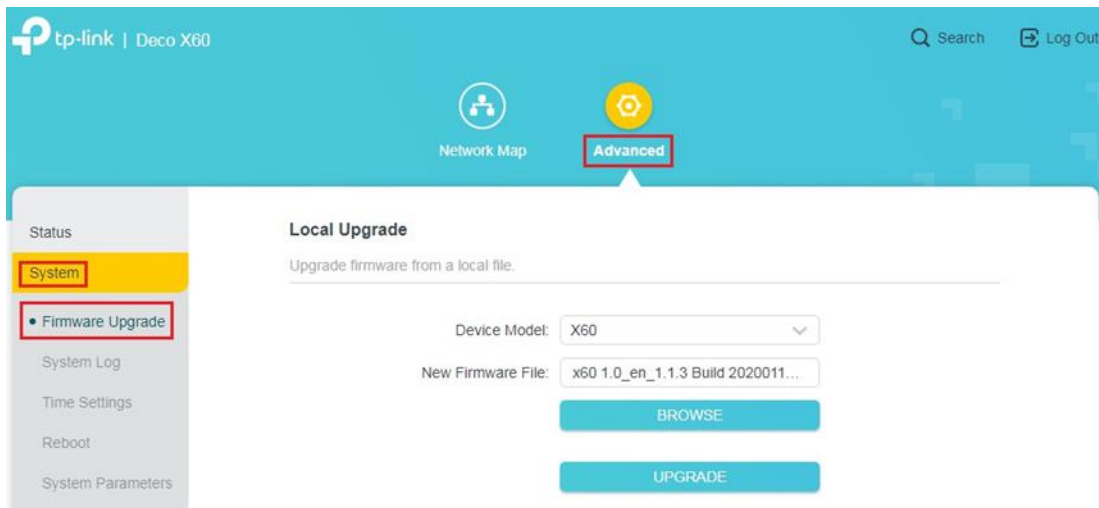

Step 4. Click **UPGRADE**. The device will reboot automatically after upgrade, please wait for about 5 minutes till the LED turns solid green/white.

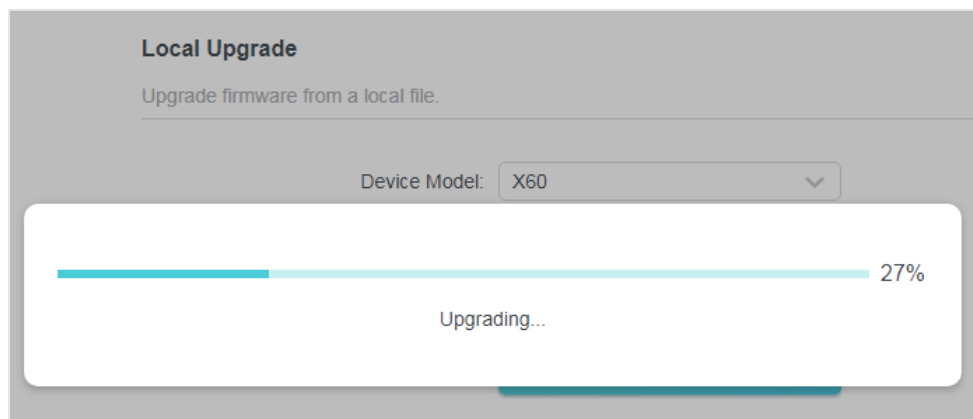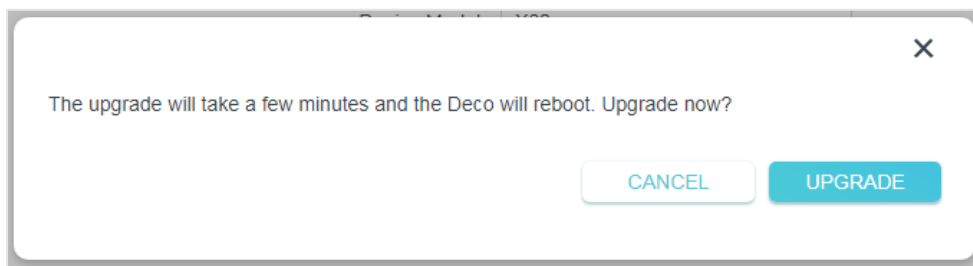

Step 5. Verify that the Deco's firmware has been successfully upgraded on the same page.

Network Map

Advanced

Status

System

Firmware Upgrade

System Log

Time Settings

Reboot

System Parameters

Type	Device Name	Model	Firmware Version	Latest Firmware Version
	kitchen_1	P9(1.0)	1.0.2 Build 20200115 Rel. 04683	
	kitchen_2	P9(1.0)	1.0.2 Build 20200115 Rel. 04683	
	living_room_3	X60(1.0)	1.1.3 Build 20200110 Rel. 63639	
	study_4	X60(1.0)	1.1.3 Build 20200110 Rel. 63639	
	hallway_5	X60(1.0)	1.1.3 Build 20200110 Rel. 63639	