



Product Introduction

Built-in motion and ambient light sensors work together to realize hands-free control. Kasa smart switch automatically turns your lights on and off, saving you effort and electricity bills.

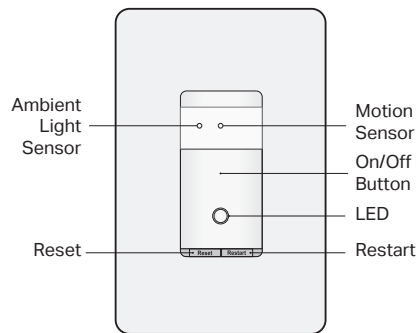

Wire Your Switch


- 1 Turn off the circuit breaker. Remove the old wallplate and label the wires.

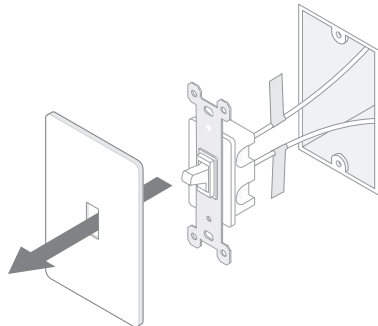

Generally, the **Neutral** wire is white and not connected to the dumb switch; the **Line** and **Load** wires are black and connected to the dumb switch; the **Ground** wire is normally green or copper. If you are unsure, consult a qualified electrician.

- 2 Disconnect the wires.

- 3 Connect the wires to the smart switch as shown below.

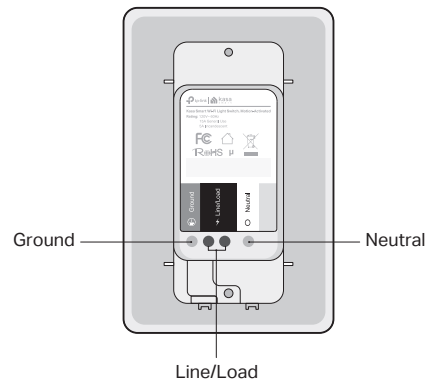

*The smart switch does not differentiate the Line and Load wires.

- 4 Secure the smart switch with screws.

Set Up Your Switch

STEP 1 DOWNLOAD APP

Get the **Kasa Smart** app from the Apple App Store or Google Play.



OR



STEP 2 SET UP

Tap the **+** button in the app and select **Smart Switches**. Then follow the step-by-step app instructions to set up your smart switch.





Need some help?

Visit www.tp-link.com/support

for technical support, user guides, FAQs,
warranty & more

Button Explanations

Reset	Press and hold for about 5s to reset your switch with configuration saved. Press and hold for about 10s to restore your switch to factory default settings.
Restart	Press to restart your switch.

LED Status

Flashing red	Starting up.
Flashing amber & green	Ready for setup.
Solid amber	Your phone is connected to the switch.
Flashing green	Connecting to Wi-Fi.
Stay green for 30s	Connected to Wi-Fi.
Solid red	Disconnected from Wi-Fi.
Flashing amber	The switch is being reset to factory default settings.
White	Light fixture is off.

Specifications

Rating: 120V~ 60Hz

Load: 600W Incandescent, 1/6 HP Motor

Operation temperature: 0~40°C

Safety Notice

Before installing, servicing or removing the switch, read and follow all safety precautions including the following:

- CAUTION – Risk of Electric Shock – More than one disconnect switch may be required to de-energize the equipment before servicing. A circuit breaker which disconnects the Line and Neutral conductor simultaneously is suitable. Ensure power is off at the circuit breaker before removing or installing any switch. Use a non-contact voltage tester to ensure the power is off.
- The Smart Switch must be installed and used in accordance with the National Electric Code (NEC) or your local electrical code. If you are unfamiliar with these codes and requirements, or are uncomfortable performing the installation, consult a qualified electrician.
- Do not install the Smart Switch with wet hands or when standing on wet or damp surfaces.
- Install only in a suitable UL Listed outlet box (suitable dimensions: H > 2.95 in./75 mm, W > 1.81 in./46 mm, D > 2 in./51 mm).



Quick Start Guide

Smart Wi-Fi Light Switch

*Images may differ from your actual product.