

# Quick Installation Guide

Mobile Wi-Fi

\* Images are for demonstration only.

## Screen Display

### Home Screen

Press to enter the menu screen.



Press to turn on or off the screen display.

### Menu Screen

Press to switch between icons.




Press to select an icon.


❗ The screen display will automatically turn off after being idle for a while. To turn it on again, press the **⏻** or **MENU** button.

## 1. Install the SIM Card and Battery


a. Remove the back cover.

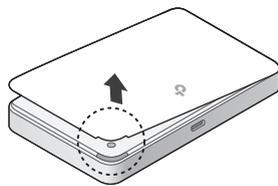


b. Install your SIM card.

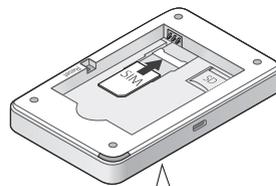

c. Install the provided battery.

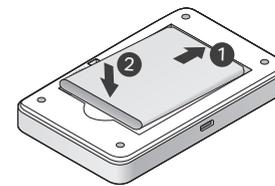

d. Replace the back cover.

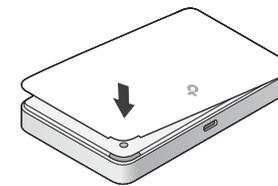

❗ SIM card requirement:

 Standard SIM card ✓	 Micro SIM card + Provided Micro SIM card adapter + Provided sticker ✓	 Nano SIM card + Provided Nano SIM card adapter + Provided sticker ✓	❗ If you have a micro SD card, you can insert it into the SD card slot for storage and media sharing.
----------------------------	---------------------------------------------------------------------------------	-------------------------------------------------------------------------------	-------------------------------------------------------------------------------------------------------

## 2. Connect to the Internet



a. Power on the Mobile Wi-Fi.

Press and hold the Power button **⏻** until the welcome screen appears.



b. Connect your smart device to the Mobile Wi-Fi.

To view the SSID and password, press the **MENU** button to switch to the **Device Info** icon, then press the Power button **⏻** to enter the screen.

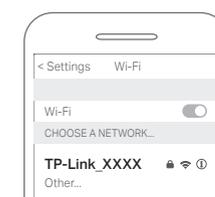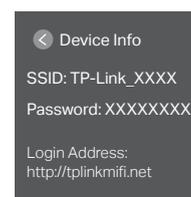

😊 Enjoy the internet!



- ❗ If you cannot access the internet, refer to FAQ > Q1.
- By default, Power Saving is enabled and the Mobile Wi-Fi will turn off Wi-Fi when no wireless devices are connected to it for 10 minutes. To resume the Wi-Fi connection, press the **⏻** or **MENU** button.

# Managing Your Mobile Wi-Fi

Manage your Mobile Wi-Fi using any of the methods below. You can customize Wi-Fi settings, block Wi-Fi devices and more.

## tpMiFi App

1. Get the **tpMiFi** app from App Store or Google Play, or by scanning the QR code.



2. Connect your wireless device to the Mobile Wi-Fi.
3. Launch the **tpMiFi** app and create a password to log in.

## Web Management Page

1. Connect your wireless device to the Mobile Wi-Fi. If it is a computer, make sure it is set to obtain an IP address automatically.
2. Launch a web browser and visit <http://tplinkmifi.net> or <http://192.168.0.1>. Create a password to log in.


- 🕒 For technical support, replacement services, user guides, and other information, please visit <https://www.tp-link.com/support>, or simply scan the QR code.



# Charging Your Mobile Wi-Fi


## Method 1

Via a Wall Outlet (Recommended)

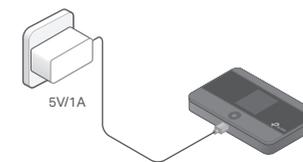

## Method 2

Via a Computer

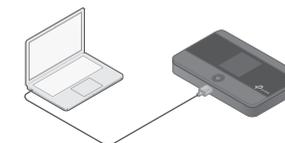

- When ⚡ on the battery icon disappears, the Mobile Wi-Fi is fully charged.
- The power adapter is not provided by TP-Link.

# FAQ (Frequently Asked Questions)

**Q1. What should I do if I cannot access the internet (one of the following messages appears on the home screen)?**

### A1. PIN Required

- Your SIM card is PIN protected. Log in to the web management page (<http://tplinkmifi.net>) on your phone, then enter the PIN provided by your mobile carrier.

### A2. No SIM Card

- Power off the Mobile Wi-Fi and reinstall your SIM card.

### A3. No Service

- Verify that your SIM card is an LTE or WCDMA SIM card.
- Verify that your SIM card is in your carrier's service area and has sufficient credit.
- Log in to the web management page (<http://tplinkmifi.net>) on your phone. Go to **Dial-up**, tap **View profile details**, and verify that the parameters (i.e. APN, username and password) provided by your mobile

carrier are correct. If they are not correct, return to the **Dial-up** page and create a new profile with the correct information.


### A4. **R** icon

- Enter the Menu screen, go to **Data Roaming**, and turn on **Data Roaming**.

**Q2. How do I restore the Mobile Wi-Fi to its factory default settings?**

- A. With the Mobile Wi-Fi powered on, remove the cover, then use a pin to press and hold the Reset button until **"Power Off"** appears on the screen.

**Note:** Restoring the device to its factory defaults will clear all your settings.

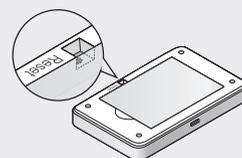

# Safety Information

- Keep the device away from water, fire, humidity or hot environments.
- Do not attempt to disassemble, repair, or modify the device. If you need service, please contact us.
- Do not use the device where wireless devices are not allowed.

### CAUTION!

- Avoid replacement of a battery with an incorrect type that can defeat a safeguard.
- Avoid disposal of a battery into fire or a hot oven, or mechanically crushing or cutting of a battery, that can result in an explosion.
- Do not leave a battery in an extremely high temperature surrounding environment that can result in an explosion or the leakage of flammable liquid or gas. Do not leave a battery subjected to extremely low air pressure that may result in an explosion or the leakage of flammable liquid or gas.

### CAUTION!

- Risk of explosion if the battery is replaced by an incorrect type.