Before You Start

A Tapo Hub is required. Make sure your Tapo Hub is successfully added via the Tapo app.



1 Power Up Your Switch


Remove the battery insulation tab to power up your button. The LED should blink.

Note: If the LED is not blinking, refer to the reverse side for reset instructions.




2 Set Up Your Switch

Open the Tapo app and tap the \oplus button. Select **Switches** and then your model. Follow the app instructions to complete setup.

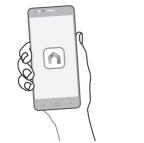

3 Test Your Switch


- a. Press the button to test it in your preferred location.
- b. Refresh the home page on the Tapo app to confirm its status.

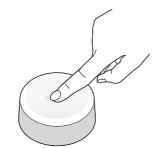

4 Secure Your Wallplate


Option 1: Use Adhesives Provided

Stick the included adhesives to the back panel and stick the wallplate to your preferred location.

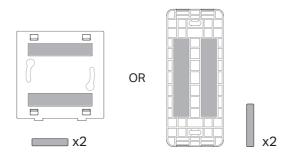


Option 2: Use Screws (Replace Current Wallplate)

a. Remove the previous switch's wallplate and remove the back panel of the new switch.

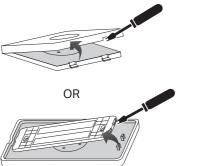


b. Secure the back panel with screws and attach the wallplate to the back panel.

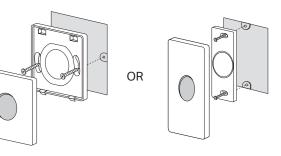


5 Magnetically Attach Button to the Wallplate

a. Attach the non-slip pad to the button (not the wallplate) to keep the button firmly in place.

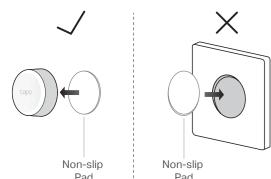


b. Magnetically attach the button to the wallplate.

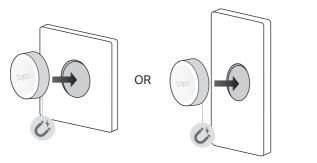


? How to Reset Your Switch


- a. Press and hold the button for 5s. The LED will then turn solid on for 10s.
- b. Quickly press the button 3 times while the LED is solid on.
- c. The LED should start to blink.

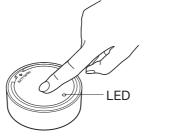


? How to Restart Your Switch or Replace the Battery

  Option 1: By Hand





Option 2: With a Shim

 



Keep the device away from water, fire, humidity or hot environments

cause severe internal burns in just 2 hours and can lead to death.

Do not attempt to disassemble, repair, or modify the device, If you need service, please contact us Do not use the device where wireless devices are not allowed

This product contains a coin / button cell battery. If the coin / button cell battery is swallowed, it can

If the battery compartment does not close securely, stop using the product and keep it away from If you think batteries might have been swallowed or placed inside any part of the body, seek

guarantee that no accidents or damage will occur due to improper use of the device. Please use this product with care and operate at your own risk.

Risk of explosion if the battery is replaced by an incorrect type

Avoid replacement of a battery with an incorrect type that can defeat a safeguard Avoid disposal of a battery into fire or a hot oven, or mechanically crushing or cutting of a battery.

that can result in an explosion an explosion or the leakage of flammable liquid or gas; Do not leave a battery subjected to extremely

TP-Link hereby declares that the device is in compliance with the essential requirements and other relevant provisions of the Radio Equipment Regulations 2017

The original UK declaration of conformity may be found at https://www.tapo.com/support/ukca

Operating Frequency / Nominal Operating Frequency / Max Output Power:

Do not ingest battery. Chemical Burn Hazard

Keep new and used batteries away from children

immediate medical attention



 
For technical support, the user guide and more information, please visit https://www.tapo.com/support/



Quick Start Guide

Smart Remote Dimmer Switch





Scan QR code or visit https://www.tp-link.com/support/ setup-video/#home-smart-switches



7106509743 REV1.1.0

Images may differ from actual products.