

EAL 🛞

Quick Installation Guide

Mobile Wi-Fi

* Images are for demonstration only.

LED Indicators

LED	Status	Explanation
(Wi-Fi)	On/Off	Wi-Fi is enabled or disabled.
(Internet)	On/Off	Internet service is available or unavailable.
(III) (Battery)	Solid Green	Mobile Wi-Fi has enough power or is fully charged.
	Blinking Red	The battery level is lower than 10%.
	Blinking Green	Mobile Wi-Fi is charging.
	Off	Power is off.

The LEDs will turn off automatically after idling for 30 seconds. To check the LED status, press the Power button to turn them on again.



2. Connect to the Internet

- **a.** Press and hold the Power button to power on the Mobile Wi-Fi.
- b. Connect your wireless device to the Mobile Wi-Fi using the default SSID and Wireless Password.











- If you cannot access the internet, refer to FAQ > Q1.
 - By default, Power Saving is enabled and the Mobile Wi-Fi will turn off Wi-Fi when no wireless devices are connected to it for 10 minutes. To resume the Wi-Fi connection, press the Power button.

Managing Your Mobile Wi-Fi

Manage your Mobile Wi-Fi using any of the methods below. You can customize Wi-Fi settings, block Wi-Fi devices and more.

tpMiFi App

1. Get the **tpMiFi** app from App Store or Google Play, or by scanning the QR code.



- 2. Connect your wireless device to the Mobile Wi-Fi.
- 3. Create a password to log in.

Web Management Page

- 1. Connect your wireless device to the Mobile Wi-Fi. If it is a computer, make sure it is set to obtain an IP address automatically.
- 2. Launch a web browser and visit http://tplinkmifi.net or http://192.168.0.1. Create a password to log in.
- For technical support, user manuals and more information, please visit https://www.tp-link.com/support, or simply scan the QR code.

Charging Your Mobile Wi-Fi

Method 2

Via a Wall Outlet (Recommended)

Via a Computer





The Battery LED in will be solid green when the Mobile Wi-Fi is fully charged.
The power adapter is not provided by TP-Link.

FAQ (Frequently Asked Questions)

- Q1. What should I do if I cannot access the internet (the Internet LED O doesn't light up)?
- A. Log into the web management page (http://tplinkmifi.net), and check the following:
- Check PIN status
- If the current SIM card status is **PIN Locked**, your SIM card is PIN protected and you need to unlock it using the PIN code provided by your mobile carrier.
- Verify the mobile carrier parameters

Go to Advanced > Dial-up > Dial-up Settings, then verify that the parameters (i.e. APN, username and password) provided by your mobile carrier are correct. If they are incorrect, enter the correct information or create a new profile, then save the settings. Check the Data Roaming settings

If your SIM card is operated in a roaming service area, go to Advanced > Dial-up > Dial-up Settings, enable Data Roaming and save the settings.

- Check Mobile Data
 Go to Advanced > Dial-up > Dial-up Settings to verify that Mobile Data is
 On. If not, enable it and save the settings.
- Check Data Limit

Go to Advanced > Data Usage Settings to check whether your data usage has exceeded the Total/Monthly allowance.

Q2. How do I restore the Mobile Wi-Fi to its factory default settings?

 A. With the Mobile Wi-Fi powered on, remove the cover, then use a pin to press and hold the Reset button until all LEDs turn on momentarily.
 Note: Restoring the device to its factory defaults will clear all your settings.

Safety Information

- Keep the device away from water, fire, humidity or hot environments.
- Do not attempt to disassemble, repair, or modify the device. If you need service, please contact us.
- Do not use the device where wireless devices are not allowed.

CAUTION!

- Avoid replacement of a battery with an incorrect type that can defeat a safeguard.
- Avoid disposal of a battery into fire or a hot oven, or mechanically crushing or cutting of a battery, that can result in an explosion.
- Do not leave a battery in an extremely high temperature surrounding environment that can result in an explosion or the leakage of flammable liquid or gas. Do not leave a battery subjected to extremely low air pressure that may result in an explosion or the leakage of flammable liquid or gas.

CAUTION!

Risk of explosion if the battery is replaced by an incorrect type.

