

### Kasa App Guide

Kasa Smart Wi-Fi Plugs

## Contents

About This Guide	1
Main Device Controls	2
Favorite Devices	3
Set Schedules	4
Set Timer	6
Set Away Mode	7
Check Runtime	8
Manage Device Settings	9
Reset Your Smart Plug1	0
Grouping1	4
Scenes1	9

Smart Actions	···24
Me Page ·····	33
Manage Your Account	33
Kasa Care	34
Third Party Services	35
Firmware Update	39
Notifications	40
Widgets	…41
Settings	50
Manage Rooms and Homes	51

# **About This Guide**

This guide provides a brief introduction to Kasa Smart Wi-Fi Plugs and the Kasa Smart app, as well as regulatory information.

Please note that features of Kasa Smart Wi-Fi Plugs may vary slightly depending on the model and software version you have, and on your location and language. All images, steps, and descriptions in this guide are only examples and may not reflect your actual experience.

### Conventions

In this guide, the following convention is used:

Convention	Description
Teal	Key information appears in teal, including management page text such as menus, items, buttons and so on.
Underline	Hyperlinks are in teal and underlined. You can click to redirect to a website.

### More Info

- Operating temperature, storage temperature, and other specifications can be found on the product page at <u>https://www.tp-link.com</u>.
- Our Technical Support and troubleshooting information can be found at <a href="https://www.tp-link.com/support/">https://www.tp-link.com/support/</a>.
- A TP-Link Community is provided for you to discuss our products at <u>https://community.tp-link.com</u>.

# Main Device Controls

After you successfully set up your smart plug, you will see the home page of the Kasa Smart app. Here you can view and manage all devices that you've added to Kasa. Tap your smart plug to control and manage it.

#### Home Page

All your Kasa smart devices are listed in the Home page.

#### **Device Status**

Check your device status, or turn on/off your device in the Status page.





### **Favorite Devices**

Gather the devices you use most often to Favorites so you can easily find them.

#### Home Page

Go to the Home page and long press your device. Then tap Favorite.

No SIM 🗢	02:46	<b>L @ </b>
Cancel	1 Device Selected	Done
All Devices	Favorites Living Roon	n 🔳
PLUGS		
	<b>111</b> Home	•
	<b>222</b> Home	•
	<b>333</b> Home	•
	Heater Home	•
	HS105JP2.1 Home	•
	Living Room Plug Home	•
	슈 근 Favorite Reloc	] rate

### **Set Schedules**

Schedule: Set schedules to automatically turn on/off the plug at set times according to your daily routine.



4. You can also choose to turn on/off the light at Sunrise or Sunset. Please note that the Sunrise and Sunset times are based on your location.

SIM 🛜	4:59 PM	• 🛃
$\times$	New Schedule	Save
ACTION		
Turn Off Powe	er	۲
Turn On Powe	r	0
TIME		
Time	Sunrise 58 min	Sunset
	59 min	
	At Sunrise	
	1 min 2 min	
REPEAT		

5. Tap Save and you'll see your schedule listed in the Schedule Page. You can add more schedules following the same steps.



6. You can turn off your schedule any time at the Schedule page.

No SIM 🗢	5:04 PM	۹ 🛃
$\leftarrow$	Schedule	+
() OFF	→ At Sunrise s <b>M T W T F</b> s	
OFF	11:00 pm s m t w t f s	

### Set Timer

Timer: Set the countdown timer and your smart plug will be automatically turned on/off after the time ends.

1. Tap on the Device Status page.

2. Set the time period after which your smart plug will turn on or off automatically. Then tap START.



# Set Away Mode

Away Mode: You can set Away Mode for your smart plug to turn on/off automatically at random intervals while you are away to make the appearance that someone is at home.

1. Tap hon the Device Status page.

2. Set the start and end time during which the light will be automatically turned on and off at random intervals, and the repeating frequency.

e.g. I want the light to turn on and off between 07:00 to 23:50 every Friday and Saturday.



د 🕑 📭

### **Check Runtime**

Runtime: You can view and track the runtime of your smart plug.

1. Tap en the Device Status page.

2. Check the runtime of your smart plug.



# Manage Device Settings

You can change the device settings.

1. Tap 🚺 in the Device Status page.



2. You can view Device Info and change the name and icon of your smart plug.If your plug supports HomeKit, you can see Add to Home and add your plug to the Home app.If your plug has multiple outlets, you can also re-order them.

No SIM 🗢 5:22 PM	۰ ا	No SI	M 🗢 02:29	<b>L</b> @ <b>I</b> ,
← Device Settings		<i>~</i>	- Device Settings	
NAME AND ICON		NA	ME AND ICON	
My Plug-Living Room	>		111 Plug1	>
ADVANCED			222 Plug2	>
Device Info	>		333 Plug3	>
Add to Home	>	BA	SICS	
		Re	e-Order	>
		LE	D Status	
		AD	VANCED	
		Fe	eature Tutorial	>
Remove Device		De	evice Info	>

# **Reset Your Smart Plug**

### There are three ways to reset your smart plug.

#### Method 1

Go to the Home page. Long press your smart plug and then tap 🦲 .



#### Method 2

### 1. Tap 🛟 in the Status page.

#### 2. Tap Remove Device in the bottom.



#### Method 3

Press and hold the power button for about **10 seconds** to factory reset the plug. Press and hold the power button for about **5 seconds** to reset Wi-Fi while keeping previous settings.



		) (	$\bigcirc$	$\bigcirc$	$\bigcirc$	$\bigcirc$	$\bigcirc$			
ъ	5V/2.4A 5000 5V/2.4A						I		Grounded	
	5V/2.4A	Plug 1	Plug 2	Plug 3	Plug 4	Plug 5		Plug 6		

	0	$\bigcirc$			
5V==-2.4A				Protected	
5V2.4A	Plug 1	Plug 2	Plug 3		





# Grouping

A group is a collection of devices that you can tap a single action to control all devices belonging in that group. It is accessible in the home screen just like any other devices.

You can group together smart plugs, smart switches and smart bulbs.

#### 1. Create Groups

Step 1. Tap the  $\oplus$  button in the Home page of the Kasa Smart app, and select Group.



Step2. Name your group and set location for it. Select smart devices you want to add to the group and tap SAVE.



Step3. The created group is listed in the Home page. You can tap ON or OFF to turn on/off the smart devices together in the group.

My home kkk Turn off	✔ at 19:24 →			+
6	3			3
Get Up	252	TV time	Turn on scene	Testing2
All Devices	Favorites	Garden	opis	404 ☰
GROOPS	<b>Group 1</b> Garden		ON	OFF
	<b>Group 11</b> Garden		ON	OFF
	Group 7 Garden		ON	OFF
	Group 81 Study 1	1	ON	OFF
A	Group 9 Garden		ON	OFF
Mome (	Cameras	Smart	Activity	Me

#### 2. Manage the group

1. Tap the group you want to manage.



2. Turn on or off the group in the status page.



3. Tap 🔅 in the top right corner to enter the settings page. Tap Group Name to rename the group and Location for relocate it.

Group Name Bulb & Light Strip Location			
Bulb & Light Strip			
Location			/
			\ \
ues			/
RE	MOVE GRC	UP	

4. Swipe down the status page and tap Group Settings to add/ delete device in the group. Tap Add Device and you can choose the available devices and tap ADD to add devices to your group.

<	Bulb & Light Strip	\$	C Group Settings			
	v uc5		kl130 Shelf		kl430 Shelf	
Devices in This	Group			0		0
kl130 Shelf	C		KL120 Office	0		
Group Setti	ngs	1 >				
Favorite						
				+ Add a Device	TTTT Remove	

5. Back to the Group Settings page, you can choose the device you want to delete and tap Delete to remove devices from the group.

My home kkk Turn off	✔ at 19:24 →			+
8	<b>S</b>			
Get Up	252 T	V time	Turn on scene	Testing2
All Devices	Favorites	Garden	opis	404 ≡
GROUPS				
Ð	Group 1 Garden		ON	OFF
þ	<b>Group 11</b> Garden		ON	OFF
þ	Group 7 Garden		ON	OFF
	Group 811 Study 1		ON	OFF
-	Group 9 Garden		ON	OFF
Home	Cameras	Smart Smart	Activity	Me

#### 3. Delete a Group

Option 1. From device list, long press an individual group until the delete symbol appears on the right. Tap the delete symbol.



Option 2. Tap the gear icon on the Status Page to enter the Group Settings page. Then tap REMOVE GROUP and Remove to remove the device from your group.

<	Group 7	ණ	<	Group 7	Step 2 (හි	<	Se	ttings	
	Garden			Garden		Gr	roup Name		
				^		Lo Ga	arden		
	ON		Devices in This (	Group					
	OFF Tap to turn it on or off		KS220M Garden				Your group All devices remain acce	will be removed. in the group will assible. Remove	
			Group Settin	gs	1 >		Cancel	Now? Step 4	
			Favorite						
	Step 1: Swine up								
						St	ep 3		
Devices in T	nis Group						REMO	VE GROUP	

### Scenes

A scene is a preset group of smart devices that can be programmed, customized and activated simultaneously at the touch of a button from your smartphone or tablet, allowing you to easily set your mood, activity or fit any special occasion. For example, when you are ready for bed, you can turn off your Tapo devices and dim the lights with one tap.

#### 1. Create a Smart Action with Preset

Step 1. Tap state the bottom, then tap Featured Actions and you can see three preset scenes.

Step 2. Select a preset scene as you need.





Good Morning: Turn on all your smart devices.Good Night: Turn off all your smart devices.Movie Night: Dim your lights for movie time.

#### 2. Create Your Own Scene

Step 1. Tap state the bottom, tap Scenes and then tap ADD SCENE. Alternatively, you can tap + and choose Scenes.

Scenes	Smart Acti	ons Feati	ured Actions	+
			)	
Scenes	i let you quic	kly do ever a tap.	ryday tasks v	vith just
	F	NDD SCEN	E	
Home	Carrieras	Street 1	Activity	•

#### Step 2. Tap Add Action to create a new scene.

Step 3. Tap Control Smart Devices to select the smart devices you want to run in the scene.

<	Ne	w Scene	Next
Create a	a scene to action	s you do every d	ay.
+	Add Action		
0	Delay Action		
This act the scer	ion will take plac ne.	e immediately w	hen you run

<	Add Action	
	Enable/Disable Smart Action	>
	Control Smart Devices	>

### Step 4. Then choose the device you want to run in the scene

<	Choose a Device	
Bulbs		
	KL120 Home	>
$\bigcirc$	<b>Ib120</b> 404	>
$\bigcirc$	LB130 Home	>
Light S	trips	
	<b>KL430aa</b> Garden	>
Plugs		
÷	KP125 Garden	>
	<b>plug 2</b> Garden	>
	<b>Plug 3</b> Garden	>
	<b>Plug 4</b> Garden	>

Step 5. Customize the status of the smart device, such as turn on the smart light. Then tap Done.

<	KL120	Done
Turn O Turn on Device S	n to Default State (Found in Settings).	~
Turn O	off	
Turn O Switch t off and	<b>In/Off</b> the device's current status (to on it vice versa).	f it's
Set Lig	ghting	
"On" D	Ouration	
Brightr	ness +	
Brightr	ness -	
Color 1	Temperature +	
Color 1	Temperature -	

Step 6. You can repeat Step 2 to 5 to add more devices/ smart action in the scene. If you hope your scene to run after some time after you tap it, set Delay Action.



Step 7. Give the scene a Name and choose an icon to distinguish your new scene with other existing ones.



Step 8. Finally, tap Done. You can check your set scene on the top of the home page.



#### 3. Manage Your Scene

#### 1. Edit scene

Edit your scenes via Smart > Scenes and tap •••• .



You can rename and delete the scene, add more action and adjust delay action of the scene.



## **Smart Actions**

Smart Actions is a function provided that enables device interconnections and home automations. With Smart Actions, your Kasa devices can work together to create a smarter smart home.

Note: At most three smart actions can be enabled simultaneously.

To use the Smart Action feature, you need to configure

1) Add Trigger: Trigger Time or Trigger Device (Set A Specific Time)

2) Add Action: Run a Sceneor Enable/Disable Smart Action/ Control Smart Devices

< New Smart Action	Next
Automate your smart devices to do what yo when you want.	ou want,
When	
+ Add Trigger	
Then	
+ Add Action	
( Delay Action	
This action will take place as soon as the tr	rigger occurs.

#### 1. Create a Smart Action with Preset

Step 1. Tap 😤 at the bottom, then tap Featured Actions and you can see three preset scenes.

Scenes	Smart Actio	ns Feat	tured Actions	+
Scenes	let you quick	do eve a tap.	eryday tasks v	vith just
	A	DD SCEI	NE	
Home	Cameras	8 Smart	Activity	Me

Step 2. Select a preset smart action as you need.



Motion Sensing: Whenever a Smart camera detects motions, add an action you would like to trigger.

Control With a Switch: Whenever a Smart switch turns on/off, add an action you would like to trigger.

Schedule a Scene: Schedule an action to be turned on automatically at the time specified.

Auto-off Timer: Whenever a Smart device is turned on, turn it off after the designated amount of time.

#### 2. Create Your Own Smart Action

Step 1. Tap  $\underset{\text{smart}}{\overset{\text{op}}{\overset{\text{smart}}}{\overset{\text{smart}}{\overset{\text{smart}}{\overset{\text{smart}}{\overset{\text{smart}}{\overset{\text{smart}}{\overset{\text{smart}}{\overset{\text{smart}}{\overset{\text{smart}}{\overset{\text{smart}}{\overset{\text{smart}}{\overset{\text{smart}}{\overset{smart}}{\overset{smart}}}}}}}}}}}}}}}}}}}$ 



#### Step 2. Tap Add Trigger.



#### Step 3. Choose a trigger for your smart action.

Note: If there are 2 or more triggers added, any trigger will activate the smart action.



Step 4. Choose from Sunrise, Sunset and Custom Time to set the time for your desired timing for the smart action. For Sunrise and Sunset, you can also set offset time.

Note: The time of Sunrise and Sunset will be synchronized according to regional realities.

C Trigger Time Done		< Trigger Time	Done	<	Trigger Tir	ne Done
Sunrise	Ste	Sunrise No offset	Step2	Sunris	e set	<u> </u>
Sunset		Sunset		Sunse		
Custom Time		Custom Time		Custor	n Time	
10 06						
11 07	R	EPEAT		REPEAT		
12 : 08						
13 09						
14 10		Every day		Every day		
REPEAT				Cancel		Done
				0		
Every day				1	hr : 0 n	nin Before
				2	1	After

### Step 5. Set the repeat times and then tap Done.

<	Trigger Time Step 2 Done
$\bigcirc$	Sunrise
$\bigcirc$	Sunset
	Custom Time
	00
	01 : 00
	02 01
Step1	
REPE	EAT
	s M T W T F s
E	very weekday

### Step 6. Tap Add Action.



#### Step 7. Choose the action you want to add.



Step 8. If you hope your action to run after some time when it is triggered, set Delay Action.

Step 9. Name your smart action and set the effective time for it. Tap Done to complete. You can find your newly set Smart Actions via Smart> Smart Actions.

<	New Smart Action	Next
Automat when yo	te your smart devices to do what you wan u want.	t,
Whe	n	
٢	<b>07:00</b> Every weekday	⊗
+	Add Trigger	
Ther	1	
Q	KL120 Turn on	8
+	Add Action	
()	Delay Action 10 minutes	D
	9	
	0 hrs 10 min 0 sec	
	1 11 1	

< New S	mart Action	Done
Smart Action Name		
		]
Effective Time		
<b>00:00 ~ 23:59</b> Every day		>
Set the time for your sma	art actions to take eff	ect.



#### 3. Manage Your Smart Action

Step 1. Find your Smart Actions list via Smart> Smart Actions.



Step 2. You can rename and delete the smart action, and change its effective time, triggers, actions, and delay time.



# Me Page

The Kasa app offers a list of advanced features to fulfill diverse smart home needs.

# Manage Your Account

Launch the Kasa Smart app. Tap Go to the Me page and tap your account or profile. Here you can change your profile picture, password, and login security settings.



# Kasa Care

Kasa Care is a cloud-based service that allows users to view and download activity recordings from a Kasa Cam. When you purchase a Kasa Cam, you can subscribe to our advanced plan to enjoy our Kasa Care cloud service.

To view the Kasa Care plan, from the Kasa Smart App > Tap Me on the bottom> Select Kasa Care. Note: With the Kasa Care service, every Kasa account is eligible to sign up for a free trial for the new Kasa Care plan once.



# **Third Party Services**

Use the Kasa Smart app to pair your Smart devices with Amazon Alexa or Google Home Assistant, and enjoy a full hands-free experience. Kasa helps manage the rest of your smart home too, working with Samsung SmartThings to trigger changes when you arrive home or leave for the day.

Launch the Kasa Smart app. Go to the Me page and tap Third Party Services. You can choose Amazon Alexa / Google Assistant / IFTTT / Samsung SmartThings for detailed instructions.



### 1. Set up Amazon Alexa

#### 1. Tap Amazon Alexa.

#### 2. Tap Connect.

#### 3. Sign in with your amazon account.



#### 3. After sign-in, tap LINK.



4. Your TP-Link ID has been successfully linked with your amazon account. You can use Alexa voice commands to control your Smart Wi-Fi Power Strip.

< Ama	azon Alexa 🗢 14:18	•
~	Account Is Connected	
	Your account is successfully connected with Amazon Alexa.	
	Unlink	

### 2. Set up Google Assistant

1. Tap Google Assistant.

2. Follow instructions to connect your device to your Google Home. Or find the FAQ at <u>https://www.tp-link.com/en/support/faq/1534/</u>.



### Firmware Update

The firmware on TP-Link Kasa smart devices can only be updated by using the TP-Link Kasa App.

To view the updated firmwares, from the Kasa APP > Tap Me on the bottom> Select Firmware Update. If any firmware updates are available, they will be displayed on this page.



### Notifications

Kasa Cam utilizes the push notification of your smart phone to inform you of detected activities by the camera.

To configure notification settings, from the Kasa APP > Tap Me on the bottom > Select Notification.



# Widgets

With widgets, you can tap and send commands to your Kasa devices, such as executing scenes, turning off lights, viewing your Kasa camera clips, and more.

The Kasa app provides three widgets: namely, KASA CAM WIDGET, KASA DEVICES, and KASA SCENES. These three gadgets cover some of the most frequently-used functions, including:

- KASA DEVICES: Display the status of your selected devices and simple commands like turning on/off.
- KASA SCENES: Enable/disable the selected scenes.
- KASA CAM WIDGET: Preview and check your video clips.

Widgets come along with your smart home app and can be activated with some simple steps.

For iOS user, the whole process is divided into two procedures:

- Firstly, select the Kasa Devices, Kasa Scenes, and Kasa Cam that you want to set as a widget on the Kasa app
- Secondly, add the Kasa Widgets on your home screen.

For Android user, you can directly add the Kasa Widgets on your home screen.

Note: Setting steps differ in adding the Kasa Widgets on your home screen in the iOS and Android systems.

#### 1. Select Your Desired Widgets (for iOS)

Step 1 To add widgets, from the Kasa APP > Tap Me on the bottom > Tap Widgets.

			< Notifications
	.net View Account		Promotional Messages
0	Kasa Care	>	When enabled, you will receive push notifications about exclusive offers, VIP giveaways, and new products.
8	Third-Party Services	>	Smart Device Status
	Firmware Update	>	Turn on to receive notifications when your smart device(s) status changes.
$\bigtriangleup$	Notifications	>	
	Widgets	>	
٢	Settings		
Ś	Discover Kasa	>	
?	Help	>	
()	About	>	
Home	Cameras Smart Activity	Me	

### Step 2. Choose the Devices, Scenes and Cameras you want to add in the widgets.

$\leftarrow$		Wie	dget Settin	gs
	Devices		Scenes	Cameras
:	Select and Up	l order de to 12 c	which device evices widget levices can b	es appear in the  e added.
SELE	ECTED			
~		i am	KE100	=
~		kkk		=
~		KL13	80WiFi-jarvis	test
AVAI	LABLE			
~	6190 File	KL43	30aa	
~		KP12	25	
~		KS20	00M	

Step 3. If you want to reorder your devices or scenes, touch and hold the  $\equiv$  next to them and drag them in the order that you want.

←	Widget Settin	ngs
Devices	Scenes	Cameras
Select a	nd order which dev the devices widg	rices appear in get.
SELECTED		
- 6	TP-LINK_Sma	rt Bulb_06 🚃
<ul> <li>I</li> </ul>	Кі430	
<ul> <li>E</li> </ul>	Lab Switch	=
<ul> <li>Image: Image: Ima</li></ul>	Office plug	
<ul> <li>A</li> </ul>	test plug	
</td <td>hs107-2</td> <td></td>	hs107-2	
✓ ['.	HS105	

#### 2. Add to Your Home Screen (for iOS)

Step 1. Swipe right over the Home screen or Lock screen of iPhone, iPad, or iPod touch to see your widgets in the Today View. Scroll to the bottom and tap Edit. If your device is iOS 14 system or above, slide the interface down to the bottom and tap Customize.



Step 2 Add Kasa Devices, Kasa Scenes, and the Kasa Cam Widget.



Step 3. Drag them to your desired spot by tapping and holding the  $\equiv$  next to the apps.

$\leftarrow$		Widget Setting	S
	Devices	Scenes	Cameras
S	elect and	d order which devices	appear in the
		devices widget.	
	Up	to 12 devices can be	added.
SELEC	CTED		
~		i am KE100	=
~		kkk	=
~		KL130WiFi-jarvis t	est
AVAIL	ABLE		
$\checkmark$	6999	KL430aa	
~		KP125	
~		KS200M	
2		1/000014	

Step 4. Now you can control your Kasa Devices, Kasa Cam, and Kasa Scenes widgets from the Today View. Tap > and you can see all of your selected Kasa Devices, Scenes, and Cameras.



For all Kasa devices, you can switch on/off them. For Kasa devices with adjustable brightness and color, you can also adjust the brightness and color. Tap the round icon next to the devices and then you can see the corresponding options.

With the Kasa Cam widget, you can tap Go Live and easily go to the Live Page. Meanwhile, you can View Clips of activity detection.

Q Search	-		ě
🖄 KASA DEVI	2ES		~
💎 abc		💼 кі430	
ON	OFF	ON	OFF
Alex-Tes	st	HS105	
ON	OFF	ON	OFF
hs107		🔘 hs107-2	
ON	OFF	ON	OFF
() hs200		Lab Swite	ch 📃
ON	OFF	ON	
6 Office p	lug		
ON			
Manage,			
KASA SCEN	IES		~



#### Add to Your Home Screen (for Android)

Step 1. Touch and hold an empty area on the home screen to enter home screen editing mode. Tap the Widgets and you can see all of your widgets.



#### Step 2. Find Kasa widget and tap it.



Step 3. There are several Kasa widgets including Kasa Cam, Kasa Device and Kasa scene. Touch and hold a widget and drag it to an empty area on the home screen. You can add widgets you want.

Check that there are enough empty spaces on the home screen for the widget. If there is not enough space, add an empty screen page or free up some space on the current home screen page



# Settings

Kasa Cam utilizes the push notification of your smart phone to inform you of detected activities by the camera.

To view the Kasa Care plan, from the Kasa APP > Tap Me on the bottom > Select Notification.

		< Settings		
.net View Account		Location and Time	>	Adjust location and time settings.
🛆 Kasa Care	>	Email Preferences	>	Configure the settings of emails regarding product releases and promotions.
R Third-Party Services	>	Privacy	>	Enable/ Disable sending anonymous diagnostic and usage information and bug reports to Kasa.
순 Firmware Update	>			
	>			
Hereit Widgets	>			
Settings	>			
🏷 Discover Kasa				
Help	>			
(i) About				
Home Cameras Smart Activity	Me			

### Manage Rooms and Homes

Manage your Kasa smart devices room by room, home by home. It's easier for you to identify your multiple smart devices and control them centrally.

### Manage rooms

1. Tap  $\checkmark$  and choose Home Settings. The default home is my home.



2. Choose a home and add room for it. After adding a room, you can move your devices to the room.



### Manage Homes

1. Tap  $\checkmark$  and choose Home Settings. The default home is my home.



2. Tap + at the top right corner to add a new home. Then you can add rooms to this home.

🖣 App Store 🗢	02:48	<b>C</b> 🕑 🔲	No SIM 🗢			02:47				L @ 🔲
<	Home Settings	$(\oplus)$	<		Add	a Ho	me			
Home Nam My home	e	>	Name							
<b>Total Devic</b> No devices	es									
Rooms										
+ Add Ro	ooms									
			QW	EF	Т	Y	ſ	J		) Р
			Α	S D	F	G	Н	J	к	L
				zx	С	V	В	Ν	Μ	$\overline{\otimes}$
			123	₽		spa	се		d	one

3. Name the scene and choose an icon for it. Tap Done to save all the settings.



4. You can see your scene under the <u>Scenes</u> tab. You can run the scene with a tap.

