Safety Information

- For indoor use only. Plug the device into a suitable outlet
- Purpose of control: Operating control, Type 1.B. action
- Keep the device away from water, fire, humidity or hot environments.



Need some help?

Visit https://www.tp-link.com/support for technical support, user guides, FAQs, warranty & more







DOWNI OAD KASA

Get the **Kasa Smart app** from the App Store or Google Play.





PI UG IN & SFT UP

Plug in your smart plug. Tap the (+) button in the app and select your model (Bluetooth Setup). Follow the instructions in the Kasa Smart app to complete setup.



*Image may differ from actual product.

Appearance



LED Indications

Ready for setup.
Connected to Cloud.
Disconnected from Wi-Fi; Disconnected from Cloud.
Resetting Wi-Fi; Firmware updating.
Restoring to factory default settings.

Reset Button

- Press **once** to turn the plug ON or OFF.
- Press and hold the button on the plug for about 5s to reset your Wi-Fi while keeping other settings.
- Press and hold the button on the plug for about 10s to restore your plug to factory default settings.

Third-Party Services

Kasa works with Alexa, Google Assistant and other third-party services to control your smart plug by voice. Go to **Me > Third-Party Services** in the Kasa Smart app to integrate Third-Party Services.

Common Load Types:

Heater: ≤1500 W Toaster: ≤850 W Humidifier: ≤260 W Tower Fan: ≤50 W Iron: <1500 W