



Let's get started with your new Smart Outdoor Plug.

STEP 1

DOWNLOAD KASA

Get the **Kasa Smart** app from the App Store or Google Play.




STEP 2

POWER UP

Plug in your smart outdoor plug.

Note: Keep the plug at least 12 inches (1 ft) from the ground and keep its socket covered with the weatherproof cover when not in use.

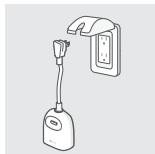

*Image may differ from actual product.

STEP 3

ADD TO KASA

Tap the **+** button in the Kasa Smart app. Select **Smart Plugs** and then your model. Follow the app instructions to complete the setup.



How to Reset the Plug

Reset Wi-Fi Settings Only

Press and hold the Power button for **5 seconds**.

Factory Reset

Press and hold the Power button for **10 seconds**.

Supported Load Types

Load Type	Max Current	Max Power (at 120V~)
Iron	15A	1800W
Kettle	15A	1800W
Heater	15A	1800W
Toaster	15A	1500W
Coffee Maker	15A	1200W
Desk Lamp	1.2A	80W
TV	4A	350W
PC	7A	600W
Motor	4.4A	367W(1/2HP)
Fan	4.4A	367W(1/2HP)
Water Pump	4.4A	367W(1/2HP)
Power Adapter/ USB Charger *	2.4A	200W

Note:

1. *Power Adapters/USB Chargers rated under 75W do not support PFC (Power Factor Correction). PFC can reduce the inrush current generated when the relay is turned on. Therefore, using a 60-75W Power Adapter/USB Charger may damage the device due to inrush currents.
2. Avoid plugging your appliances with a motor/compressor higher than 1/2HP. Frequent on/off switching may damage the compressor. You can check the motor/compressor value listed on your appliances or consult their Support.
3. EV charging is not supported as it demands higher power and a charging current that surpasses the plug's rated capacity.



Visit www.tp-link.com/support
for technical support, user guide, and more