



# User Guide

Festa Gigabit VPN Router

# CONTENTS

## About This Guide

Intended Readers .....	1
Conventions.....	1
More Information .....	1

## Accessing the Router

Determine the Management Method.....	3
Web Interface Access.....	4

## Configuring Network

Overview .....	7
Supported Features.....	7
WAN Configuration .....	8
Configuring the Number of WAN Ports.....	8
Configuring the WAN Connection .....	8
LAN Configuration .....	18
Configuring the IP Address of the LAN Port.....	18
Configuring the DHCP Server.....	19
Configuring the DHCP Relay .....	22
Viewing the DHCP Client List.....	22

## System Tools

Overview .....	25
Overview.....	25
Supported Features .....	25
Management.....	26
Factory Default Restore.....	26
Reboot .....	26
Firmware Upgrade.....	26
Controller Settings.....	28
Enable Cloud-Based Controller Management.....	28
Configure Controller Inform URL .....	28
Diagnostics .....	29
Remote Assistance .....	29

# About This Guide

This User Guide provides information for managing Festa Gigabit VPN Router in standalone mode. The Standalone mode for Festa devices only supports some basic troubleshooting. For device management, please use the Festa Cloud-Based Controller.

## Intended Readers


This Guide is intended for network managers familiar with IT concepts and network terminologies.

## Conventions

When using this guide, notice that features available may vary by model and software version. All images, steps, and descriptions in this guide are only examples and may not reflect your actual experience.

The information in this document is subject to change without notice. Every effort has been made in the preparation of this document to ensure accuracy of the contents, but all statements, information, and recommendations in this document do not constitute the warranty of any kind, express or implied. Users must take full responsibility for their application of any products.

In this Guide, the following conventions are used:

- The symbol  stands for Note. Notes contain suggestions or references that helps you make better use of your device.
- **Menu Name > Submenu Name > Tab** page indicates the menu structure. **Network > LAN > LAN** means the Interface Statistics page under the Traffic Statistics menu option that is located under the Status menu.
- **Bold** font indicates a button, toolbar icon, menu or menu item.

## More Information

- The latest software and documentations can be found at Download Center at <https://www.tp-link.com/support>.
- The Installation Guide (IG) can be found where you find this guide or inside the package of the router.
- Specifications can be found on the product page at <https://www.tp-link.com>.
- To ask questions, find answers, and communicate with TP-Link users or engineers, please visit <https://community.tp-link.com> to join TP-Link Community.
- Our Technical Support contact information can be found at the Contact Technical Support page at <https://www.tp-link.com/support>.

# Part 1

## Accessing the Router

### CHAPTERS

1. Determine the Management Method
2. Web Interface Access

# 1 Determine the Management Method

Before building your network, choose a proper method to manage your router based on your actual network situation. The router supports two configuration options: Standalone Mode or Controller Mode.

Firstly, you should configure the router in Standalone mode to connect it to the internet, then you can manage it in controller mode via Festa SDN Controller.

## ■ Controller Mode

If you want to configure and manage a large-scale network centrally, which consists of mass devices such as access points, switches, and gateways, Controller Mode is recommended. In Controller Mode, the router can be centrally configured and monitored via Festa SDN Controller.

To prepare the router for Festa SDN Controller Management, refer to Controller Settings. For detailed instructions about the network topology in such situations and how to use Festa SDN Controller, refer to the User Guide of Festa SDN Controller. The guide can be found on the download center of our official website: <https://www.tp-link.com/support/download/>.

## ■ Standalone Mode

In Standalone Mode, you can access and manage the router using the GUI (Graphical User Interface, also called web interface in this text).

This User Guide introduces how to configure the router in Standalone Mode.

---

### Note:

The GUI is inaccessible while the router is managed by a controller. To turn the router back to Standalone Mode and access its GUI, you can forget the router on the controller or reset the router.


---

# 2 Web Interface Access

The following example shows how to log in via the web browser.

- 1) Connect a PC to a LAN port of the router with an RJ45 port properly. If your computer is configured with a fixed IP address, change it to "Obtain an IP address automatically".
- 2) Open a web browser and type the default management address `http://192.168.0.1` in the address field of the browser, then press the Enter key.


Figure 2-1 Enter the router's IP Address In the Browser

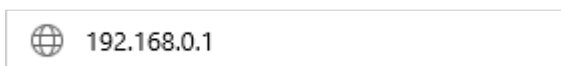

A screenshot of a web browser's address bar. On the left, there is a small globe icon. To its right, the text "192.168.0.1" is entered in the address field.

- 3) Create a username and a password for subsequent login attempts.


Figure 2-2 Create a Username and a Password

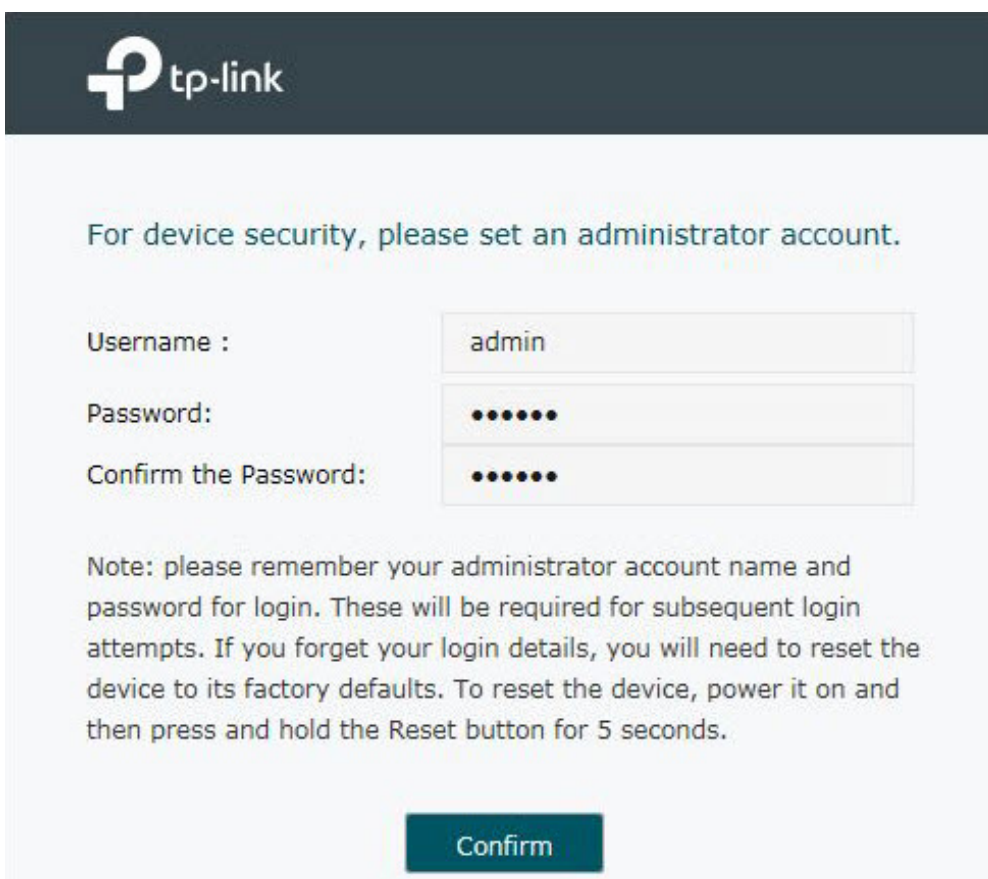

The screenshot shows the TP-Link web interface. At the top, there is a dark header with the TP-Link logo. Below the header, the text "For device security, please set an administrator account." is displayed. There are three input fields: "Username :" with the value "admin", "Password:" with six dots, and "Confirm the Password:" with six dots. Below the input fields, there is a note: "Note: please remember your administrator account name and password for login. These will be required for subsequent login attempts. If you forget your login details, you will need to reset the device to its factory defaults. To reset the device, power it on and then press and hold the Reset button for 5 seconds." At the bottom, there is a "Confirm" button.

- 4) Use the username and password set above to log in to the webpage.

Figure 2-3 Login Authentication

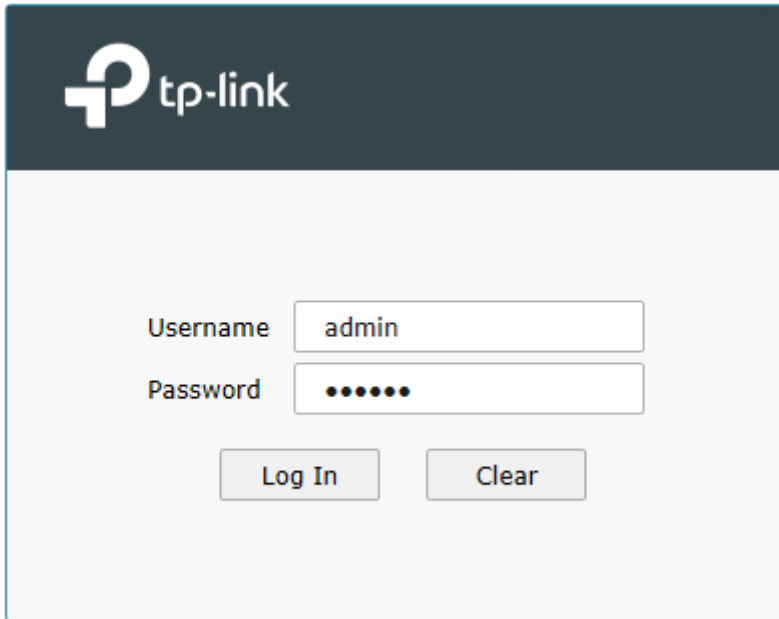

The image shows a screenshot of the TP-Link login page. At the top left, there is the TP-Link logo. Below the logo, there are two input fields: "Username" with the text "admin" and "Password" with seven dots. Below the input fields, there are two buttons: "Log In" and "Clear".

- 5) After a successful login, you can configure the function by clicking the setup menu on the left side of the screen.

# Part 2

## Configuring Network

### CHAPTERS

1. Overview
2. WAN Configuration
3. LAN Configuration

# 1 Overview

The Network module provides basic router functions, including WAN connection and LAN settings.

## 1.1 Supported Features

### WAN

WAN ports connect to the internet. You can configure multiple WAN ports for your network. Each WAN port has its own connection type and parameters, which you should configure according to the requirements of your ISP.

### LAN

When the LAN ports of the router connect to your local network devices, the router functions as the gateway, which allows those devices to connect to the internet.

# 2 WAN Configuration

You can configure multiple WAN ports for your network. Each WAN port can have its own WAN connection, providing link backup and load balancing.

To complete WAN configuration, follow these steps:

- 1) Configure the number of WAN ports.
- 2) Configure the WAN connection.

## 2.1 Configuring the Number of WAN Ports

Choose the menu **Network > WAN > WAN Mode** to load the following page.

Figure 2-1 Configuring the WAN Mode

### WAN Mode

Determine the number of WAN ports according to your needs. To enable a port as WAN port, check the box of the desired port. To configure multiple WAN ports, enable the ports one by one. Only WAN, WAN/LAN, SFP WAN (for certain devices) and USB Modem can function as WAN port.

### Note:

Any change to the number of WAN ports may lead your current configurations to be lost. Make sure you have backed up your configurations before proceeding.

## 2.2 Configuring the WAN Connection

The router supports five connection types: **Static IP, Dynamic IP, PPPoE, L2TP, PPTP**, you can choose one according to the service provided by your ISP.

**Static IP:** If your ISP provides you with a fixed IP address and the corresponding parameters, choose Static IP.

**Dynamic IP:** If your ISP automatically assigns the IP address and the corresponding parameters, choose Dynamic IP.

**PPPoE:** If your ISP provides you with a PPPoE account, choose PPPoE.

**L2TP:** If your ISP provides you with an L2TP account, choose L2TP.

**PPTP:** If your ISP provides you with a PPTP account, choose PPTP.

 **Note:**

The number of configurable WAN ports is decided by **WAN Mode**. To configure **Wan Mode**, refer to [Configuring the Number of WAN Ports](#).

## ■ Configuring the Dynamic IP

Choose the menu **Network > WAN > WAN** to load the following page.

Figure 2-2 Configuring the Dynamic IP

Connection Configuration		Connection Status	
Connection Type:	Dynamic IP ▼	Connection Status	Disconnected
Host Name:	<input type="text"/> (Optional)	IP Address	0.0.0.0
Upstream Bandwidth:	1000000 Kbps (100-1000000)	Subnet Mask	0.0.0.0
Downstream Bandwidth:	1000000 Kbps (100-1000000)	Default Gateway	0.0.0.0
MTU:	1500 (576-1500)	Primary DNS	0.0.0.0
Primary DNS:	<input type="text"/> (Optional)	Secondary DNS	0.0.0.0
Secondary DNS:	<input type="text"/> (Optional)		
Vlan:	10 ▼		
<input type="checkbox"/> Get IP using Unicast DHCP			
<input type="button" value="Save"/> <input type="button" value="Connect"/> <input type="button" value="Disconnect"/>			

In the **Connection Configuration** section, select the connection type as Dynamic IP. Enter the corresponding parameters and click **Save**.

<b>Connection Type</b>	Choose the connection type as Dynamic IP if your ISP automatically assigns the IP address.
<b>Host Name</b>	(Optional) Enter a name for the router. It is null by default.
<b>Upstream Bandwidth</b>	Specify the upstream bandwidth of the WAN port. The value configured here is the upper limit of the "Maximum Upstream Bandwidth" in <b>Bandwidth Control</b> set on the Festa Cloud-Based Controller, to make "Bandwidth Control" take effect, please ensure this parameter is set correctly.
<b>Downstream Bandwidth</b>	Specify the downstream bandwidth of the WAN port. The value configured here is the upper limit of the "Maximum Downstream Bandwidth" in <b>Bandwidth Control</b> set on the Festa Cloud-Based Controller, to make "Bandwidth Control" take effect, please ensure this parameter is set correctly.

<b>MTU</b>	Specify the MTU (Maximum Transmission Unit) of the WAN port.  MTU is the maximum data unit transmitted in the physical network. When Dynamic IP is selected, MTU can be set in the range of 576-1500 bytes. The default value is 1500.
<b>Primary/ Secondary DNS</b>	(Optional) Enter the IP address of the DNS server provided by your ISP.
<b>VLAN</b>	Add the WAN port to a VLAN. Generally, you don't need to manually configure it unless required by your ISP.  By default, the WAN port is automatically assigned to a VLAN, and the egress rule of the VLAN is UNTAG, so the packets are transmitted by the WAN port without VLAN tags. If you want the WAN port to transmit packets with VLAN tag, you need to create the corresponding VLAN first and configure its egress rule as TAG, then manually add the WAN port to that VLAN. To create VLANs, go to <b>Festa Cloud-Based Controller</b> .
<b>Get IP using Unicast DHCP</b>	The broadcasting requirement may not be supported by a few ISPs. Select this option if you can not get the IP address from your ISP even with a normal network connection. This option is not required generally.
<b>Connect/ Disconnect</b>	Click the button to active/terminate the connection.

■ **Configuring the Static IP**

Choose the menu **Network > WAN > WAN** to load the following page.

Figure 2-3 Configuring the Static IP

Connection Configuration		Connection Status	
Connection Type:	Static IP ▼	Connection Status	Disconnected
IP Address:	<input type="text"/>	IP Address	0.0.0.0
Subnet Mask:	<input type="text"/>	Subnet Mask	0.0.0.0
Default Gateway:	<input type="text"/> (Optional)	Default Gateway	0.0.0.0
Upstream Bandwidth:	1000000 Kbps (100-1000000)	Primary DNS	0.0.0.0
Downstream Bandwidth:	1000000 Kbps (100-1000000)	Secondary DNS	0.0.0.0
MTU:	1500 (576-1500)		
Primary DNS:	<input type="text"/> (Optional)		
Secondary DNS:	<input type="text"/> (Optional)		
Vlan:	336 ▼		
<input type="button" value="Save"/>			

In **Connection Configuration** section, select the connection type as Static IP. Enter the corresponding parameters and click **Save**.

<b>Connection Type</b>	Choose the connection type as Static IP if your ISP has offered you a fixed IP address.
------------------------	---

---

IP Address	Enter the IP address provided by your ISP.
Subnet Mask	Enter the subnet mask provided by your ISP.
Default Gateway	Enter the default gateway provided by your ISP.
Upstream Bandwidth	Specify the downstream bandwidth of the WAN port. The value configured here is the upper limit of the "Maximum Downstream Bandwidth" in <b>Bandwidth Control</b> set on the Festa Cloud-Based Controller,, to make "Bandwidth Control" take effect, please ensure this parameter is set correctly.
Downstream Bandwidth	Specify the downstream bandwidth of the WAN port. The value configured here is the upper limit of the "Maximum Downstream Bandwidth" in <b>Bandwidth Control</b> set on the Festa Cloud-Based Controller,, to make "Bandwidth Control" take effect, please ensure this parameter is set correctly.
MTU	<p>Specify the MTU (Maximum Transmission Unit) of the WAN port.</p> <p>MTU is the maximum data unit transmitted in the physical network. When Static IP is selected, MTU can be set in the range of 576-1500 bytes. The default value is 1500.</p>
Primary/ Secondary DNS	(Optional) Enter the IP address of the DNS server provided by your ISP.
VLAN	<p>Add the WAN port to a VLAN. Generally, you don't need to manually configure it unless required by your ISP.</p> <p>By default, the WAN port is automatically assigned to a VLAN, and the egress rule of the VLAN is UNTAG, so the packets are transmitted by the WAN port without VLAN tags. If you want the WAN port to transmit packets with VLAN tag, you need to create the corresponding VLAN first and configure its egress rule as TAG, then manually add the WAN port to that VLAN. To create VLANs, go to <b>Festa Cloud-Based Controller</b>.</p>

---

■ **Configuring the PPPoE**

Choose the menu **Network > WAN > WAN** to load the following page.

Figure 2-4 Configuring the PPPoE

Connection Configuration		Connection Status	
Connection Type:	PPPoE	Connection Status	Disconnected
Username:		IP Address	0.0.0.0
Password:		Subnet Mask	0.0.0.0
Connection Mode:	Connect Automatically	Default Gateway	0.0.0.0
Upstream Bandwidth:	1000000 Kbps (100-1000000)	Primary DNS	0.0.0.0
Downstream Bandwidth:	1000000 Kbps (100-1000000)	Secondary DNS	0.0.0.0
MTU:	1492 (576-1492)	Secondary Connection	
Service Name:	(1-128 characters, optional)	IP Address	0.0.0.0
Primary DNS:	(Optional)	Subnet Mask	0.0.0.0
Secondary DNS:	(Optional)		
Vlan:	10		
Secondary Connection:	<input type="radio"/> None <input type="radio"/> Dynamic IP <input checked="" type="radio"/> Static IP		
IP Address:			
Subnet Mask:			
<input type="button" value="Save"/> <input type="button" value="Connect"/> <input type="button" value="Disconnect"/>			

In the **Connection Configuration** section, select the connection type as PPPoE. Enter the corresponding parameters and click **Save**.

<b>Connection Type</b>	Choose the connection type as PPPoE if your ISP provides you with a PPPoE account.
<b>Username</b>	Enter the PPPoE username provided by your ISP.
<b>Password</b>	Enter the PPPoE password provided by your ISP.
<b>Connection Mode</b>	<p>Choose the connection mode, including <b>Connect Automatically</b>, <b>Connect Manually</b> and <b>Time-Based</b>.</p> <p><b>Connect Automatically:</b> The router will activate the connection automatically when the router reboots or the connection is down.</p> <p><b>Connect Manually:</b> You can manually activate or terminate the connection.</p> <p><b>Time-Based:</b> During the specified period, the router will automatically activate the connection.</p>
<b>Time</b>	Choose the effective time range when the <b>Connection Mode</b> is chosen as <b>Time-Based</b> . To create the time range, go to <b>Festa Cloud-Based Controller</b> .
<b>Upstream Bandwidth</b>	Specify the upstream bandwidth of the WAN port. The value configured here is the upper limit of the "Maximum Upstream Bandwidth" in <b>Bandwidth Control</b> set on the Festa Cloud-Based Controller, to make "Bandwidth Control" take effect, please ensure this parameter is set correctly.

---

Downstream Bandwidth	Specify the downstream bandwidth of the WAN port. The value configured here is the upper limit of the "Maximum Downstream Bandwidth" on <b>Transmission &gt; Bandwidth Control &gt; Bandwidth Control</b> page, to make "Bandwidth Control" take effect, please ensure this parameter is set correctly.
MTU	Specify the MTU (Maximum Transmission Unit) of the WAN port.  MTU is the maximum data unit transmitted in the physical network. When PPPoE is selected, MTU can be set in the range of 576-1492 bytes. The default value is 1492.
Service Name	(Optional) Enter the service name. This parameter is not required unless provided by your ISP. It is null by default.
Primary/ Secondary DNS	(Optional) Enter the IP address of the DNS server provided by your ISP.
VLAN	Add the WAN port to a VLAN. Generally, you don't need to manually configure it unless required by your ISP.  By default, the WAN port is automatically assigned to a VLAN, and the egress rule of the VLAN is UNTAG, so the packets are transmitted by the WAN port without VLAN tags. If you want the WAN port to transmit packets with VLAN tag, you need to create the corresponding VLAN first and configure its egress rule as TAG, then manually add the WAN port to that VLAN. To create VLANs, go to <b>Festa Cloud-Based Controller</b> .
Secondary Connection	Secondary connection is required by some ISPs. Select the connection type required by your ISP.  <b>None:</b> Select this if the secondary connection is not required by your ISP.  <b>Dynamic IP:</b> Select this if your ISP automatically assigns the IP address and subnet mask for the secondary connection.  <b>Static IP:</b> Select this if your ISP provides you with a fixed IP address and subnet mask for the secondary connection.
Connect/ Disconnect	Click the button to active/terminate the connection.

---

■ **Configuring the L2TP**

Choose the menu **Network > WAN > WAN** to load the following page.

Figure 2-5 Configuring the L2TP

Connection Configuration		Connection Status	
Connection Type:	L2TP	Connection Status	Disconnected
Username:		IP Address	0.0.0.0
Password:		Subnet Mask	0.0.0.0
Connection Mode:	Connect Automatically	Default Gateway	0.0.0.0
Upstream Bandwidth:	1000000 Kbps (100-1000000)	Primary DNS	0.0.0.0
Downstream Bandwidth:	1000000 Kbps (100-1000000)	Secondary DNS	0.0.0.0
MTU:	1460 (576-1460)	Secondary Connection	
Primary DNS:	(Optional)	IP Address	0.0.0.0
Secondary DNS:	(Optional)	Subnet Mask	0.0.0.0
Vlan:		Default Gateway	0.0.0.0
Secondary Connection:	<input checked="" type="radio"/> Dynamic IP <input type="radio"/> Static IP	Primary DNS	0.0.0.0
VPN Server IP/Domain Name:		Secondary DNS	0.0.0.0
IP Address:			
Subnet Mask:			
Default Gateway:	(Optional)		
Primary DNS:	(Optional)		
Secondary DNS:	(Optional)		
<input type="button" value="Save"/> <input type="button" value="Connect"/> <input type="button" value="Disconnect"/>			

In the **Connection Configuration** section, select the connection type as L2TP. Enter the corresponding parameters and click **Save**.

<b>Connection Type</b>	Choose the connection type as L2TP if your ISP provides you with an L2TP account.
<b>Username</b>	Enter the L2TP username provided by your ISP.
<b>Password</b>	Enter the L2TP password provided by your ISP.
<b>Connection Mode</b>	<p>Choose the connection mode, including <b>Connect Automatically</b>, <b>Connect Manually</b> and <b>Time-Based</b>.</p> <p><b>Connect Automatically:</b> The router will activate the connection automatically when the router reboots or the connection is down.</p> <p><b>Connect Manually:</b> You can manually activate or terminate the connection.</p> <p><b>Time-Based:</b> During the specified period, the router will automatically activate the connection.</p>
<b>Time</b>	Choose the effective time range when the <b>Connection Mode</b> is chosen as <b>Time-Based</b> . To create the time range, go to <b>Festa Cloud-Based Controller</b> .

<b>Upstream Bandwidth</b>	Specify the upstream bandwidth of the WAN port. The value configured here is the upper limit of the "Maximum Upstream Bandwidth" in <b>Bandwidth Control</b> set on the Festa Cloud-Based Controller, to make "Bandwidth Control" take effect, please ensure this parameter is set correctly.
<b>Downstream Bandwidth</b>	Specify the downstream bandwidth of the WAN port. The value configured here is the upper limit of the "Maximum Downstream Bandwidth" in <b>Bandwidth Control</b> set on the Festa Cloud-Based Controller, to make "Bandwidth Control" take effect, please ensure this parameter is set correctly.
<b>MTU</b>	Specify the MTU (Maximum Transmission Unit) of the WAN port.  MTU is the maximum data unit transmitted in the physical network. When L2TP is selected, MTU can be set in the range of 576-1460 bytes. The default value is 1460.
<b>Primary/Secondary DNS</b>	(Optional) Enter the IP address of the DNS server provided by your ISP.
<b>VLAN</b>	Add the WAN port to a VLAN. Generally, you don't need to manually configure it unless required by your ISP.  By default, the WAN port is automatically assigned to a VLAN, and the egress rule of the VLAN is UNTAG, so the packets are transmitted by the WAN port without VLAN tags. If you want the WAN port to transmit packets with VLAN tag, you need to create the corresponding VLAN first and configure its egress rule as TAG, then manually add the WAN port to that VLAN. To create VLANs, go to <b>Festa Cloud-Based Controller</b> .
<b>Secondary Connection</b>	Select the secondary connection type provided by your ISP. If you select the secondary connection type as Static IP, you need to configure IP Address, Subnet Mask, Default Gateway, Primary/Second DNS.  The secondary connection is required for L2TP connection. The router will get some necessary information after the secondary connection succeeded. These information will be used in the L2TP connection process.
<b>VPN Server/Domain Name</b>	Enter the VPN Server/Domain Name provided by your ISP.
<b>IP Address</b>	Enter the IP address provided by your ISP for the secondary connection.
<b>Subnet Mask</b>	Enter the subnet mask provided by your ISP for the secondary connection.
<b>Default Gateway</b>	Enter the default gateway provided by your ISP for the secondary connection.
<b>Primary/Secondary DNS</b>	Enter the primary/secondary DNS provided by your ISP for the secondary connection.
<b>Connect/Disconnect</b>	Click the button to active/terminate the connection.

■ **Configuring the PPTP**

Choose the menu **Network > WAN > WAN** to load the following page.

Figure 2-6 Configuring the PPTP

Connection Configuration		Connection Status	
Connection Type:	PPTP	Connection Status	Disconnected
Username:		IP Address	0.0.0.0
Password:		Subnet Mask	0.0.0.0
Connection Mode:	Connect Automatically	Default Gateway	0.0.0.0
Upstream Bandwidth:	1000000 Kbps (100-1000000)	Primary DNS	0.0.0.0
Downstream Bandwidth:	1000000 Kbps (100-1000000)	Secondary DNS	0.0.0.0
MTU:	1420 (576-1420)	Secondary Connection	
Primary DNS:	(Optional)	IP Address	0.0.0.0
Secondary DNS:	(Optional)	Subnet Mask	0.0.0.0
Vlan:	---	Default Gateway	0.0.0.0
Secondary Connection:	<input checked="" type="radio"/> Dynamic IP <input type="radio"/> Static IP	Primary DNS	0.0.0.0
VPN Server IP/Domain Name:		Secondary DNS	0.0.0.0
IP Address:			
Subnet Mask:			
Default Gateway:	(Optional)		
Primary DNS:	(Optional)		
Secondary DNS:	(Optional)		
<input type="button" value="Save"/> <input type="button" value="Connect"/> <input type="button" value="Disconnect"/>			

In **Connection Configuration** section, select the connection type as PPTP. Enter the corresponding parameters and click **Save**.

<b>Connection Type</b>	Choose the connection type as PPTP if your ISP provides you with a PPTP account.
<b>Username</b>	Enter the PPTP username provided by your ISP.
<b>Password</b>	Enter the PPTP password provided by your ISP.
<b>Connection Mode</b>	<p>Choose the connection mode, including <b>Connect Automatically</b>, <b>Connect Manually</b> and <b>Time-Based</b>.</p> <p><b>Connect Automatically:</b> The router will activate the connection automatically when the router reboots or the connection is down.</p> <p><b>Connect Manually:</b> You can manually activate or terminate the connection.</p> <p><b>Time-Based:</b> During the specified period, the router will automatically activate the connection.</p>
<b>Time</b>	Choose the effective time range when the <b>Connection Mode</b> is chosen as <b>Time-Based</b> . To create the time range, go to <b>Festa Cloud-Based Controller</b> .

Upstream Bandwidth	Specify the upstream bandwidth of the WAN port. The value configured here is the upper limit of the "Maximum Upstream Bandwidth" in <b>Bandwidth Control</b> set on the Festa Cloud-Based Controller, to make "Bandwidth Control" take effect, please ensure this parameter is set correctly.
Downstream Bandwidth	Specify the downstream bandwidth of the WAN port. The value configured here is the upper limit of the "Maximum Downstream Bandwidth" in <b>Bandwidth Control</b> set on the Festa Cloud-Based Controller, to make "Bandwidth Control" take effect, please ensure this parameter is set correctly.
MTU	Specify the MTU (Maximum Transmission Unit) of the WAN port.  MTU is the maximum data unit transmitted in the physical network. When PPTP is selected, MTU can be set in the range of 576-1420 bytes. The default value is 1420.
Primary/Secondary DNS	(Optional) Enter the IP address of the DNS server provided by your ISP.
VLAN	Add the WAN port to a VLAN. Generally, you don't need to manually configure it unless required by your ISP.  By default, the WAN port is automatically assigned to a VLAN by default, and the egress rule of the VLAN is UNTAG, so the packets are transmitted by the WAN port without VLAN tags. If you want the WAN port to transmit packets with VLAN tag, you need to create the corresponding VLAN first and configure its egress rule as TAG, then manually add the WAN port to that VLAN. To create VLANs, go to <b>Festa Cloud-Based Controller</b> .
Secondary Connection	Select the secondary connection type provided by your ISP. If you select the secondary connection type as Static IP, you need to configure IP Address, Subnet Mask, Default Gateway, Primary/Second DNS.  The secondary connection is required for PPTP connection. The router will get some necessary information after the secondary connection succeeded. These information will be used in the PPTP connection process.
VPN Server/Domain Name	Enter the VPN Server/Domain Name provided by your ISP.
IP Address	Enter the IP address provided by your ISP for the secondary connection.
Subnet Mask	Enter the subnet mask provided by your ISP for the secondary connection.
Default Gateway	Enter the default gateway provided by your ISP for the secondary connection.
Primary/Secondary DNS	Enter the primary/secondary DNS provided by your ISP for the secondary connection.
Connect/Disconnect	Click the button to active/terminate the connection.

# 3 LAN Configuration

The LAN port is used to connect to the LAN clients, and works as the default gateway for these clients. You can configure the DHCP server for the LAN clients, and clients will automatically be assigned to IP addresses if the method of obtaining IP addresses is set as "Obtain IP address automatically".

For LAN configuration, you can:

- Configure the IP address of the LAN port.
- Configure the DHCP server.
- Configure the DHCP relay.
- View the DHCP Client List

## 3.1 Configuring the IP Address of the LAN Port

Choose the menu **Network > LAN > LAN** to load the following page.

Figure 3-1 Configuring the LAN IP Address

Settings

IGMP Proxy:  Enable

IGMP Version: V2 ▼

IGMP Interface: WAN ▼

Save

Note:  
IGMP only takes effect when WAN mode is enabled for port WAN.

Network List

	ID	Name	Vlan	IP Address	Subnet Mask	DHCP Server	DHCP Relay	Operation
<input type="checkbox"/>	1	LAN	1	192.168.0.1	255.255.255.0	Enabled	Disabled	

(Optional) With LAN Settings, you can set up IGMP Proxy.

### IGMP Proxy

Check the box to enable IGMP Proxy.

IGMP Proxy sends IGMP querier packets to the LAN ports to detect if there is any multicast member connected to the LAN ports.

### IGMP Version

Choose the IGMP version as V2 or V3. The default is IGMP V2.

Click the Edit button to load the following page. Enter the IP address of the LAN port, and click **OK**.

Network List								
<input type="checkbox"/>	ID	Name	Vlan	IP Address	Subnet Mask	DHCP Server	DHCP Relay	Operation
--	1	LAN	1	192.168.0.1	255.255.255.0	Enabled	Disabled	

Name:	<input type="text" value="LAN"/>
IP Address:	<input type="text" value="192.168.0.1"/>
Subnet Mask:	<input type="text" value="255.255.255.0"/>
Mode:	<input checked="" type="radio"/> Normal <input type="radio"/> Bridge
Vlan:	<input type="text" value="1"/> (1-4086)

**IP Address** Enter the IP address of the LAN port.

This IP address is the default gateway of the LAN clients, and the IP addresses of all the LAN clients should be in the same subnet with this LAN IP address.

**Subnet Mask** Enter the subnet mask of the LAN port.

**Mode** Specify whether to use a normal VLAN or bridge VLANs. When bridge is selected, you can configure multiple VLANs for devices to access the LAN network.

**Vlan** Specify the VLAN of the LAN port, only the clients in the specified VLAN can access and manage the router.

#### Note:

- Changing the IP address of LAN port will automatically redirect the browser to the new management page. If the redirecting failed, please try to reconnect your PC to the router to automatically get a new IP address, or configure a proper static IP address manually.
- Changing the IP address of the LAN port may affect some related functions, like the IP pool of the DHCP server.

## 3.2 Configuring the DHCP Server

You can configure an IP address pool for the DHCP server to assign IP addresses. When clients send requests to the DHCP server, the server will automatically assign IP addresses and the corresponding parameters to the clients.

Choose the menu **Network > LAN > LAN** to load the following page. Click the **Edit** button in the **Network List** section.

Figure 3-2 Configuring the DHCP Server

**DHCP**

---

DHCP Mode:  DHCP Server  DHCP Relay

Status:  Enable

Starting IP Address:

Ending IP Address:

Lease Time:  minutes (1-2880. The default value is 120)

Default Gateway:  (Optional)

Default Domain:  (Optional)

Primary DNS:  (Optional)

Secondary DNS:  (Optional)

	Name	Code	Type	Value	Operation
<input type="checkbox"/>	--	--	--	--	--

Select **DHCP Server**, and configure the parameters of the DHCP server, then click **Save**.

**Starting/Ending IP Address** Enter the starting IP address and ending IP address of the DHCP server's IP pool. The IP pool defines the IP range that can be assigned to the clients in the LAN.

**Note:** The starting IP address and ending IP address should be in the same subnet with the IP address of the LAN port.

**Lease Time** Specify the lease time for DHCP clients.

Lease time defines how long the clients can use the IP address assigned by the DHCP server. Generally, the client will automatically request the DHCP server for extending the lease time before the lease expired. If the request failed, the client will have to stop using that IP address when the lease finally expired, and try to get a new IP address from the other DHCP servers.

**Default Gateway** (Optional) It is recommended to enter the IP address of the LAN port.

**Default Domain** (Optional) Enter the domain name of your network.

**Primary/Secondary DNS** (Optional) Enter the DNS server address provided by your ISP. If you are not clear, please consult your ISP.

**Status** Check the box to enable the DHCP server.

Click **Advanced Settings** to configure more settings.

⌵ Advanced Settings

DHCP NTP Server:  (Input one or two ip addresses, use "," to divide addresses, Optional)

DHCP Network Boot:  (Optional)

DHCP Time Offset:  (Optional)

DHCP TFTP Server:  (Optional)

DHCP WPAD URL:  (Optional)

Option60:  (Optional)

Option138:  (Optional)

Option150:  (Optional)

Option159:  (Optional)

Option160:  (Optional)

Option176:  (Optional)

Option242:  (Optional)

+ Add - Delete

<input type="checkbox"/>	Name	Code	Type	Value	Operation
<input type="checkbox"/>	--	--	--	--	--

<b>DHCP NTP Server</b>	(Option 42) Enter one or two DHCP NTP Server addresses to get the system time from internet. Use "," to divide addresses.
<b>DHCP Network Boot</b>	(Option 67) Enter the value for DHCP Option 67. It specifies the boot file name.
<b>DHCP Time Offset</b>	(Option 2) Enter the time offset of the DHCP client's subnet in seconds from the UTC time.
<b>DHCP WPAD URL</b>	(Option 252) Enter the DHCP WPAD (Web Proxy Auto-Discovery) URL for the DHCP client to configure its proxy settings.
<b>DHCP TFTP Server</b>	(Option 66) Enter the TFTP server address for file transfer.
<b>Option60</b>	(Optional) Enter the value for DHCP Option 60. DHCP clients use this field to optionally identify the vendor type and configuration of a DHCP client. Mostly, it is used in the scenario where the APs apply for different IP addresses from different servers according to the needs. For detailed information, please consult the vendor. For TP-Link, this entry should be TP-Link.
<b>Option138</b>	(Optional) Enter the value for DHCP Option 138. It is used in discovering the devices by the Omada controller.
<b>Option150</b>	(Optional) Enter the value for DHCP Option 150. It specifies the TFTP server information and supports multiple TFTP server IP addresses.
<b>Option159</b>	(Optional) Enter the value for DHCP Option 159. This option is used to configure a set of ports bound to a shared IPv4 address.

Option160	(Optional) Enter the value for DHCP Option 160. This option is used to configure DHCP captive portal.
Option176	(Optional) Enter the value for DHCP Option 176. This option is used to configure parameters for IP phones.
Option242	(Optional) Enter the value for DHCP Option 242. This option is used to provide the TMS address automatically.
Add	Click to add a DHCP option entry

### 3.3 Configuring the DHCP Relay

If you select DHCP Relay as DHCP Mode, the gateway will relay DHCP requests from LAN clients to the DHCP server in another network. Then the DHCP server will assign IP addresses to the LAN clients. Configure the following parameters.

Choose the menu **Network > LAN > LAN** to load the following page. Click the **Edit** button in the **Network List** section.

Figure 3-3 Configuring the DHCP Relay

**DHCP**

---

DHCP Mode:  DHCP Server  DHCP Relay

Status:  Enable

Server Address:

Select **DHCP Relay**, and configure the parameters of the DHCP replay, then click **Save**.

Status	Check the box to enable DHCP Relay.
Server Address	Enter the IP address of the DHCP server.

### 3.4 Viewing the DHCP Client List

Choose the menu **Network > LAN > DHCP Client List** to load the following page.

Figure 3-4 Viewing the DHCP Client List

DHCP Client List					
Total Clients: 0					Refresh
ID	Client Name	MAC Address	Assigned IP Address	Lease Time	Operation
--	--	--	--	--	--

Here you can view the DHCP client list.

---

Client Name	Displays the name of the client.
MAC Address	Displays the MAC address of the client.
Assigned IP Address	Displays the IP address assigned to the client.
Lease Time	Displays the remaining lease time of the assigned IP address. After the lease expires, the IP address will be re-assigned.

---

# Part 3

## System Tools

### CHAPTERS

1. Overview
2. Management
3. Controller Settings
4. Diagnostics

# 1 Overview

## 1.1 Overview

The System Tools module provides several system management tools for users to manage the router.

## 1.2 Supported Features

### Management

With this function, you can reset the router, reboot the router and upgrade the firmware.

### Controller Settings

Configure your router to be discovered by Festa SDN Controller, then it can be managed centrally via Festa Cloud-Based Controller.

### Diagnostics

Enable the Remote Assistance function to get help from the technicians if you fail to solve your network problem.

# 2 Management


In Management module, you can configure the following features:

- Factory Default Restore
- Reboot
- Firmware Upgrade

## 2.1 Factory Default Restore

Choose the menu **System Tools > Management > Factory Default Restore** to load the following page.

Figure 2-1 Resetting the Device

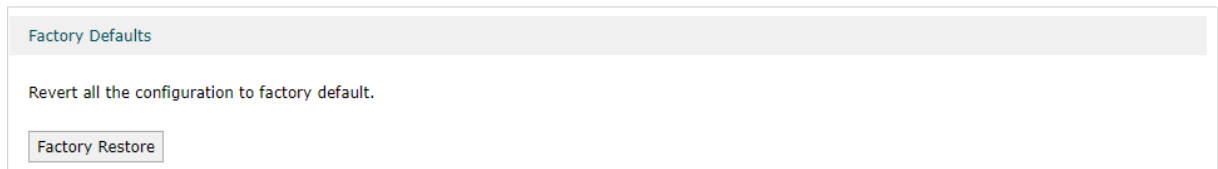


Click **Factory Restore** to reset the device.

## 2.2 Reboot

Choose the menu **System Tools > Management > Reboot** to load the following page.

Figure 2-2 Rebooting the Device

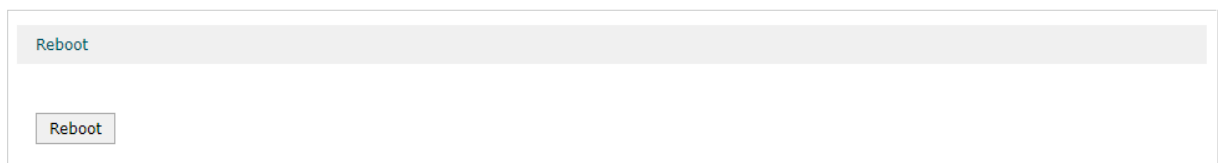


Click **Reboot** to reboot the device.

## 2.3 Firmware Upgrade

Choose the menu **System Tools > Management > Firmware Upgrade** to load the following page.

Figure 2-3 Configure System Settings

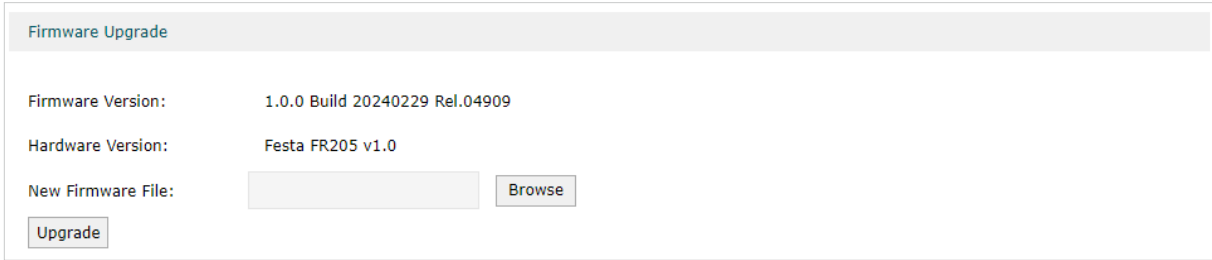

The screenshot shows a web interface for firmware upgrade. It has a header 'Firmware Upgrade' in a grey bar. Below it, there are three rows of information: 'Firmware Version: 1.0.0 Build 20240229 Rel.04909', 'Hardware Version: Festa FR205 v1.0', and 'New Firmware File: [input field] [Browse]'. At the bottom left of the form is an 'Upgrade' button.

Firmware Upgrade	
Firmware Version:	1.0.0 Build 20240229 Rel.04909
Hardware Version:	Festa FR205 v1.0
New Firmware File:	<input type="text"/> <input type="button" value="Browse"/>
<input type="button" value="Upgrade"/>	

Select one firmware file and click **Upgrade** to upgrade the firmware of the device.


# 3 Controller Settings

To make your controller adopt your router, make sure the router is connected to the internet and configure controller Settings enable your router to be discovered by the Festa Cloud-Based Controller.

## 3.1 Enable Cloud-Based Controller Management

Choose the menu **System Tools > Controller Settings** page. In the Cloud-Based Controller Management section, enable Cloud-Based Controller Management and click **Save**. You can check the connection status on this page.

Figure 3-1 Cloud-Based Controller Management

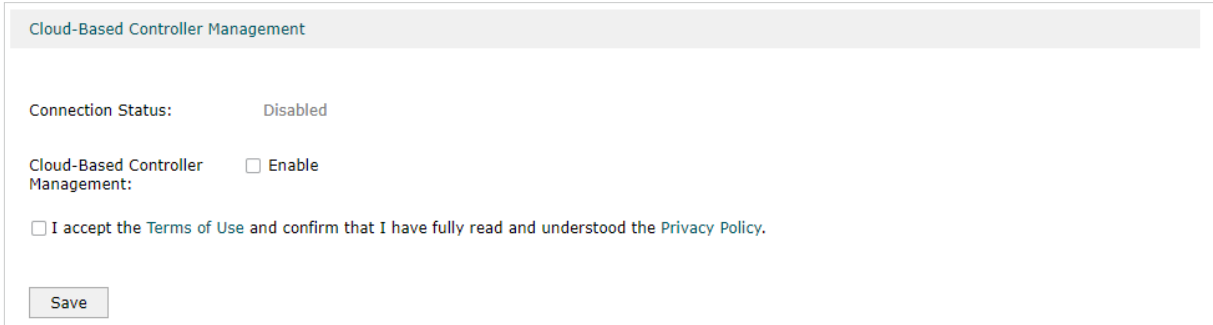


The screenshot shows the 'Cloud-Based Controller Management' settings page. At the top, there is a header 'Cloud-Based Controller Management'. Below it, the 'Connection Status' is displayed as 'Disabled'. Underneath, there is a section for 'Cloud-Based Controller Management' with a checkbox labeled 'Enable' that is currently unchecked. Below this checkbox, there is a line of text: ' I accept the [Terms of Use](#) and confirm that I have fully read and understood the [Privacy Policy](#).' At the bottom of the form, there is a 'Save' button.

## 3.2 Configure Controller Inform URL

Choose the menu **System Tools > Controller Settings** page. In the Controller Inform URL section, inform the router of the controller's URL/IP address, and click **Save**. Then the router makes contact with the controller so that the controller can discover the router.

Figure 3-2 Cloud-Based Controller Management

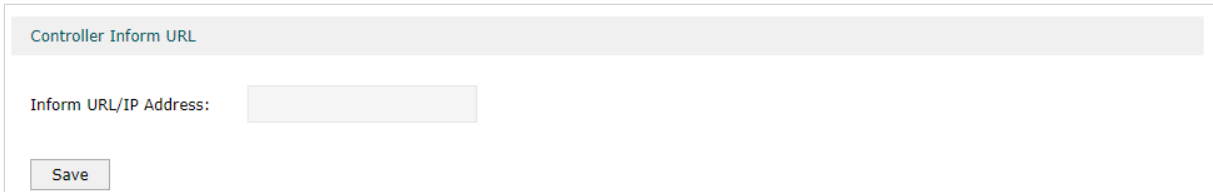

The screenshot shows the 'Controller Inform URL' settings page. At the top, there is a header 'Controller Inform URL'. Below it, there is a label 'Inform URL/IP Address:' followed by an empty text input field. At the bottom of the form, there is a 'Save' button.

# 4 Diagnostics

In Diagnostics module, you can configure the following features:

- Remote Assistance


## 4.1 Remote Assistance

 Note:

Please make contact with the technicians before trying to use this function.

Choose the menu **System Tools > Diagnostics > Remote Assistance** to load the following page.

Figure 4-1 Remote Assistance Page

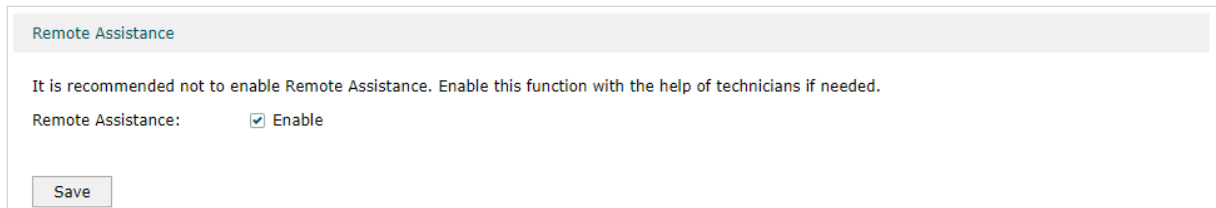

Remote Assistance

It is recommended not to enable Remote Assistance. Enable this function with the help of technicians if needed.

Remote Assistance:  Enable

Save

Check the box and click **Save** to enable the remote assistance function and then the technicians can access your router and help to solve the problems by SSH..