

Quick Start Guide

Indoor/Outdoor Home Security Wi-Fi Camera

Setup Video

 
Scan QR code or visit https://www.tp-link.com/support/ setup-video/#cloud-cameras



7100000061 REV1.2.0 *Images may differ from your actual product.

01 / Set Up Your Camera

1. Firmly plug the USB cable into the camera's type-C port, and connect it to a power outlet.



2. Download the Tapo app from the App Store or Google Play, then log in.



complete setup.



 






02 / Adjust Camera Angle

Loosen the bracket and adjust the shaft to your preferred angle. Tighten the bracket to secure it.






03 / Mount Your Camera

Option 1. Mount to the Ceiling


1. Drill Holes

 Stick the mounting template sticker to the desired mounting place. Drill two holes according to the template.



2. Unscrew the Bracket

 Unscrew the bracket from the base.




3. Secure the Bracket

Insert two anchors into the holes and use the screws to affix the bracket over the anchors.



4. Install the Camera


Screw the camera with the base onto the bracket. Loosen the base to adjust the angle, then tighten to secure.

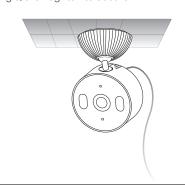

Option 2. Mount to the Wall

1. Remove the Camera

 
Avoid pulling the camera straight along the shaft. Instead, tilt and lift it at an angle for easier removal.






2. Install Over the Back Mounting Hole

Make sure the bracket is secured to the base. Push the shaft into the back mounting hole until it clicks into place.

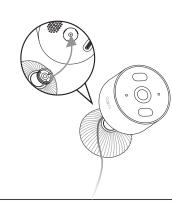


3. Unscrew the Bracket

Unscrew the bracket from the base.

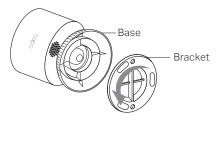


4. Drill Holes

 Stick the mounting template sticker to the desired mounting place. Drill two holes according to the template.



5. Secure the Bracket

Insert two anchors into the holes and use the screws to affix the bracket over the anchors.

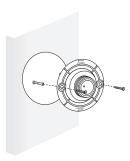

6. Install the Camera

Screw the camera with the base onto the bracket. Loosen the base to adjust the angle, then tighten to secure.




04 / Organize the Cable

Run the cable along the wall and fix it with the provided cable clips. Here's how:

- 1) Drill one hole using the electric drill [6 mm (15/64 in.) Drill Bit], insert an anchor, then use a screw to affix the cable clip over the anchor.
- 2) Repeat the above steps to organize the cable.



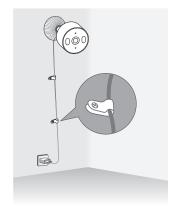



System LED Indications

Solid red	Starting up
Blinking red and green	Ready for setup
Blinking red slowly	Connecting to Wi-Fi
Solid amber	Connected to Wi-Fi
Solid green	Connected to the cloud
Blinking red quickly	Camera resetting
Blinking green quickly	Camera updating


Safety Information

- Do not use damaged charger or USB cable to charge
- Do not use any other chargers than those recommend-
- Do not use the device where wireless devices are not allowed.
- Adapter shall be easily accessible.
- Use only power supplies which are provided by manufacturer and in the original packing of this product. If you have any questions, please don't hesitate to contact us.
- Keep the device away from fire or hot environments. DO NOT immerse in water or any other liquid.
- Do not disassemble, repair or modify the product.
- Do not use the product if the casing has been broken. Danger of electric shock.
- Never touch the product with wet hands.
- Do not place near automatically controlled devices such as fire alarms. Radio waves emitted from this product may cause such devices to malfunction resulting in an accident.
- Observe restrictions on using wireless products in fuel depots, chemical plants or when blasting operations are in progress.
- Do not use liquid to clean the product. Only use a dry
- · Never put metal objects inside the product. If a metal object enters the product, turn off the circuit breaker and contact an authorised electrician.

- This product is not intended to be used when providing medical care. Consult the manufacturer of any personal medical devices, such as pacemakers or hearing aids to determine if they are adequality shielded from external RF (radio frequency) energy.
- Do not use this product in health care facilities. Hospitals or health care facilities may be using equipment that could be sensitive to external RF
- Do not place heavy objects on top of the product. • When you leave the product unused for a long time
- unplug the product from the power outlet.
- This product may interfere with other electronic products such as TV, radios, personal computers, phones or other wireless devices.
- Adapter should be used indoors where the ambient temperature is lower than or equal to 40 °C.
- Operating Temperature: -20 °C ~ 45 °C (-4 °F ~ 113 °F)
- The camera shall be installed no higher than 2 meters.

Please read and follow the above safety information when operating the device. We cannot guarantee that no accidents or damage will occur due to improper use of the device. Please use this product with care and operate at vour own risk.

Appearance

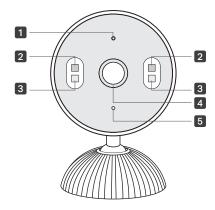

TP-Link hereby declares that the device is in compliance

TP-Link hereby declares that the device is in compliance

provisions of the Radio Equipment Regulations 2017. The

original UK declaration of conformity may be found at

with the essential requirements and other relevant

2011/65/EU and (EU)2015/863. The original EU

declaration of conformity may be found at

https://www.tapo.com/support/ce

https://www.tapo.com/support/ukca/

™(€###

©2025 TP-Link

provisions of directives 2014/53/EU, 2009/125/EC,

with the essential requirements and other relevant

- 1 System LED
- 2 White Lights
- 3 IR Lights
- 4 Lens


5 Microphone

6 Speaker

6

7

7 USB Type-C Power Port

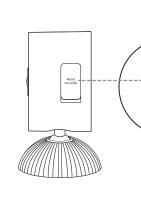

- 8 Reset Button
 - Use a pin to press and hold for 5s: Reset Wi-Fi settings
- Use a pin to press and hold for 10s: Reset to factory settings
- 9 microSD Card Slot

Open the cover, Insert a microSD card (not included) and initialize it on the Tapo app for local recording.



00000

Need some help?

Visit https://www.tapo.com/support/ for technical support, user guides, FAQs, warranty & more





