

I_____

2. Power Up your Deco

Deco can be powered via a power adapter or a PSE device (such as a PoE switch) which complies with Power Source Class 2 (PS2) or Limited Power Source (LPS) and Electrical Energy

Option 2: Via Power Adapter

Plug one end of the provided power adapter into the power port of the Deco and the other end to a standard electrical wall outlet



Option 3: On a Ceiling Tile


The Deco can be installed in a ceiling tile with the screws in the package. Make sure the ceiling tile is larger than the Deco.








Remove the ceiling tile.




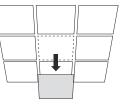

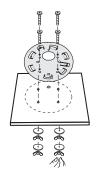

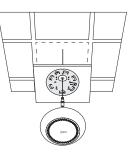

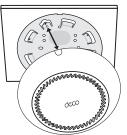

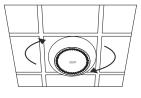

2

Place the mounting bracket in the center of the ceiling tile. Mark four positions for the screw holes and a location for the Ethernet cable hole. Drill four 4 mm (5/32 in) diameter holes for the screws and a 25 mm (63/64 in) diameter hole for the Ethernet cable at the marked positions.

3

Secure the mounting bracket to the ceiling tile using four pan-head screws, washers, and wing nuts.

4

Feed the Ethernet cable through the hole and set the ceiling tile back into place. Then connect the Ethernet cable to the Ethernet port on the Deco.

5

Align the piston on the Deco with the image on the mounting bracket as shown, and attach the Deco to the mounting bracket.

6

Rotate Deco clockwise until it locks into place.