



Business Networking Solution

# Installation Guide

Omada Easy Managed Switch



# About this Installation Guide

This Installation Guide describes the hardware characteristics, installation methods and the points that should be attended to during the installation. This Installation Guide is structured as follows:

## Chapter 1 Introduction

This chapter describes the external components of the switch.

## Chapter 2 Installation

This chapter illustrates how to install the switch.

## Chapter 3 Connection

This chapter illustrates how to do the physical connection of the switch.

## Chapter 4 Configuration

This chapter illustrates how to configure the switch.

## Appendix A Troubleshooting

## Appendix B Specifications

# Audience



This Installation Guide is for:

Network Engineer

Network Administrator

# Conventions

- Some models featured in this guide may be unavailable in your country or region. For local sales information, visit <https://www.omadanetworks.com/>.
- The figures in Chapter 2, Chapter 3 and Chapter 4 are for demonstration purposes only. Your switch may differ in appearance from that depicted.
- PoE budget calculations are based on laboratory testing. Actual PoE power budget is not guaranteed and will vary as a result of client limitations and environmental factors.
- This guide uses the specific formats to highlight special messages. The following table lists the notice icons that are used throughout this guide.

	Remind to be careful. A caution indicates a potential which may result in device damage.
	Remind to take notice. The note contains the helpful information for a better use of the product.

# Related Document

The User Guide of the product are provided on Download Center. To obtain the latest product information, visit the official website: <https://support.omadanetworks.com/document/>

# Contents

---

Chapter 1	Introduction	01
1.1	Product Overview	01
1.2	Appearance	01
Chapter 2	Installation	05
2.1	Package Contents	05
2.2	Safety Precautions	05
2.3	Installation Tools	07
2.4	Product Installation	07
Chapter 3	Connection	09
3.1	Ethernet Port	09
3.2	SFP Slot	09
3.3	Verify Installation	09
3.4	Power On	10
3.5	Initialization	10
Chapter 4	Configuration	11
4.1	Configuration Overview	11
4.2	Standalone Mode	11
4.3	Controller Mode	11
Appendix A	Troubleshooting	12
Appendix B	Specifications	13

# Chapter 1 Introduction

## 1.1 Product Overview

Designed for small business and home office scenarios, the Omada Easy Managed Switch provides wire-speed performance and abundant L2 management features. It provides a variety of service features and multiple powerful functions with high security.

The EIA-standardized framework and smart configuration capacity can provide flexible solutions for a variable scale of networks. QoS and IGMP snooping/filtering optimize voice and video application. Link aggregation increases aggregated bandwidth, optimizing the transport of business critical data. WEB offers abundant management policies. The Omada Easy Managed Switch integrates multiple functions with excellent performance, and is friendly to manage, which can fully meet the need of the users demanding higher networking performance.

ES220GMP/ES228GMP/ES220GP/ES228GP is also a Power Sourcing Equipment (PSE\*). Some of the RJ45 ports on the switch support Power over Ethernet (PoE\*) function, which can automatically detect and supply power to those powered devices (PDs\*) complying with IEEE 802.3af and IEEE 802.3at.

\*PSE: a device (switch or hub for instance) that provides power through an Ethernet cable.

\*PoE: a technology describes a system to transmit electrical power, along with data, to remote devices over standard twisted-pair cable in an Ethernet.


\*PD: a device powered by a PSE and thus consumes energy. Examples include powering network cameras, wireless LAN access points, IP telephones, network hubs, embedded computers etc.

## 1.2 Appearance

### Front Panel


The front panel of ES220GMP is shown as the following figure.

Figure 1-1 Front Panel of ES220GMP

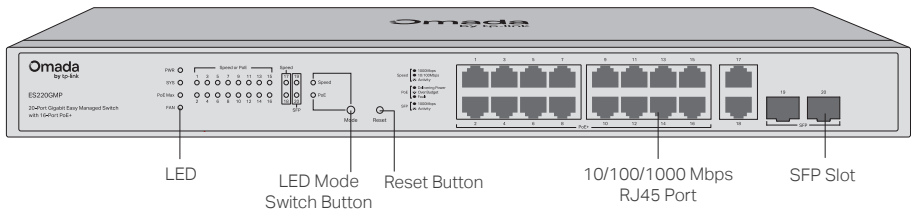


The front panel of ES220GP is shown as the following figure.

Figure 1-2 Front Panel of ES220GP

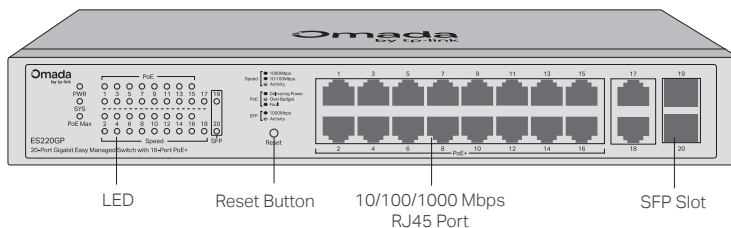


The front panel of ES228GMP is shown as the following figure.

Figure 1-3 Front Panel of ES228GMP

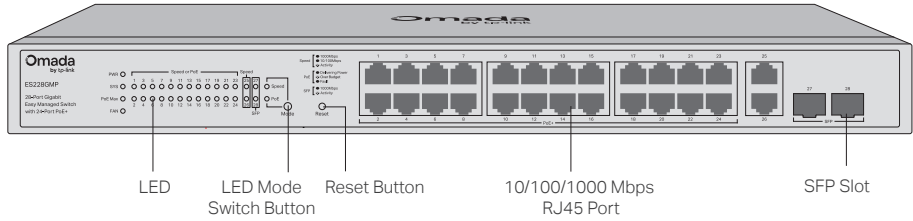

The front panel of ES228GP is shown as the following figure.

Figure 1-4 Front Panel of ES228GP

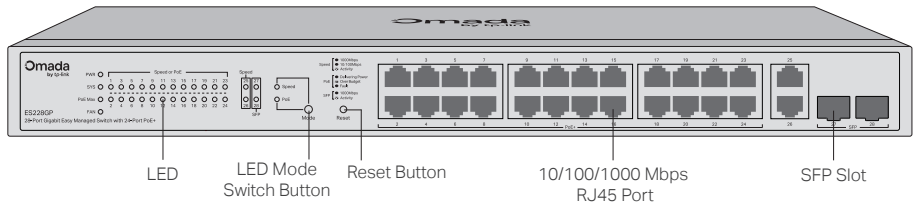

## LEDs

LED	Indication
PWR	<b>On:</b> The switch is powered on. <b>Off:</b> The switch is powered off or power supply is abnormal.
SYS	<b>Flashing:</b> The switch works properly. <b>On or Off:</b> The switch works improperly.
PoE Max	<b>On:</b> The remaining PoE power is $\leq 7$ W. <b>Flashing:</b> The remaining PoE power keeps $\leq 7$ W after this LED is on for 2 minutes. <b>Off:</b> The remaining PoE power is $> 7$ W.
FAN (Not for ES220GP)	<b>Green:</b> All the fans work properly. <b>Yellow:</b> Not all the fans work properly.
Speed	<b>Green On:</b> Running at 1000 Mbps, but no activity. <b>Green Flashing:</b> Running at 1000 Mbps and transmitting or receiving data. <b>Yellow On:</b> Running at 10/100 Mbps, but no activity. <b>Yellow Flashing:</b> Running at 10/100 Mbps and transmitting or receiving data. <b>Off:</b> No device is linked to the corresponding port.
PoE (Only for ES220GP)	<b>Green On:</b> The port is supplying power normally. <b>Green Flashing:</b> The supply power exceeds the corresponding port's maximum power. <b>Yellow On:</b> Overload or short circuit is detected. <b>Off:</b> Not providing PoE power on the port.
Speed or PoE (When the Speed LED is on. Not for ES220GP.)	<b>Green On:</b> Running at 1000 Mbps, but no activity. <b>Green Flashing:</b> Running at 1000 Mbps and transmitting or receiving data. <b>Yellow On:</b> Running at 10/100 Mbps, but no activity. <b>Yellow Flashing:</b> Running at 10/100 Mbps and transmitting or receiving data. <b>Off:</b> No device is linked to the corresponding port.

LED	Indication
Speed or PoE (When the PoE LED is on. Not for ES220GP.)	<p><b>Green On:</b> The port is supplying power normally.</p> <p><b>Green Flashing:</b> The supply power exceeds the corresponding port's maximum power.</p> <p><b>Yellow On:</b> Overload or short circuit is detected.</p> <p><b>Off:</b> Not providing PoE power on the port.</p>
SFP	<p><b>Green On:</b> Running at 1000 Mbps, but no activity.</p> <p><b>Green Flashing:</b> Running at 1000 Mbps and transmitting or receiving data.</p> <p><b>Off:</b> No device is linked to the corresponding port.</p> <p>Note: SFP for port 19–20 of ES220GMP/ES220GP, port 27–28 of ES228GMP/ES228GP.</p>

### LED Mode Switch Button

Press this button to switch the LED status indication between Speed and PoE.

### Reset Button

With the switch powered on, press Reset button for 5 seconds to reset the switch to its factory default settings.

### 10/100/1000 Mbps RJ45 Port

Designed to connect to the device with a bandwidth of 10 Mbps, 100 Mbps or 1000 Mbps.

### SFP Slot

Designed to install the SFP module.


### Port Feature

Model	100M/1000M/10Gbps RJ45 Port	10/100/1000 Mbps RJ45 Port	10/100 Mbps RJ45 Port	SFP Slot	SFP+ Slot
ES220GMP	/	18	/	2	/
ES228GMP	/	26	/	2	/
ES220GP	/	18	/	2	/
ES228GP	/	26	/	2	/

### ▪ Rear Panel

The rear panel is shown as the following figure. The actual product may differ from the figure.

Figure 1-5 Rear Panel

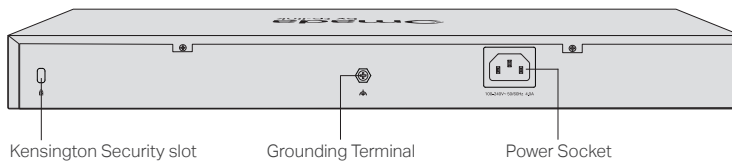

### Kensington Security Slot

Secure the lock (not provided) into the security slot to prevent the device from being stolen.

### Grounding Terminal

The switch already comes with lightning protection mechanism. You can also ground the switch through the PE (Protecting Earth) cable of AC cord or with Ground Cable. For detailed lightning protection measures, refer to the **Lightning Protection Guide** from: <https://support.omadanetworks.com/r/1004/>.

### Power Socket

Connect the female connector of the power cord here, and the male connector to the AC power outlet.

Make sure that the voltage of the power supply meets the requirement of the input voltage (100–240 V~ 50/60 Hz).

---



**Caution:**

You should use the provided power cord.

---


## Chapter 2 Installation

---

### 2.1 Package Contents

---

Make sure that the package contains the following items. If any of the listed items is damaged or missing, please contact your distributor.

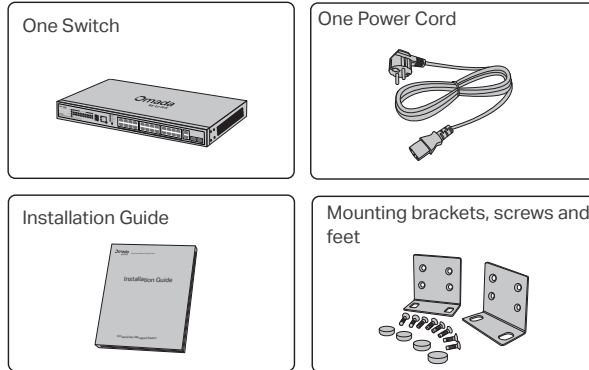

\*Images are for demonstration only. The actual items may differ in appearance and quantity from the depicted.

### 2.2 Safety Precautions

---

To avoid any device damage and bodily injury caused by improper use, you should observe the following rules.

#### ▪ Safety Precautions

- Keep the power off during the installation.
- Wear an ESD-preventive wrist strap, and make sure that the wrist strap has a good skin contact and is well grounded.
- Use only the power cord provided with the switch.
- Make sure that the supply voltage matches the specifications indicated on the rear panel of the switch.
- Ensure that the switch is installed in a well-ventilated environment and its ventilation hole is not blocked.
- Do not open or remove the cover of the switch.
- Before cleaning the device, cut off the power supply. Do not clean it by the damp cloth, and never use any other liquid cleaning method.
- Place the device with its bottom surface downward.

#### ▪ Site Requirements

##### Temperature/Humidity



Keep the equipment room at an appropriate level of temperature and humidity. Too much or too little humidity may lead to bad insulation, leakage of electricity, mechanical property changes, and corrosion. High temperatures may accelerate aging of the insulation materials, significantly shortening the service life of the device. To find out the best temperature and humidity conditions for the device, check the Appendix B Specifications.

 
### Cleanness



The dust accumulated on the switch can be attracted by static electricity and result in poor contact of metal contact points. Some measures have been taken for the device to prevent static electricity, but too strong static electricity can cause deadly damage to the electronic elements on the internal circuit board. To avoid the effect of static electricity on the operation of the switch, attach much importance to the following items:

- Dust the device regularly, and keep the indoor air clean.
- Keep the device well grounded and ensure that the static electricity has been transferred.

### Electromagnetic Interference



Electronic elements including capacitance and inductance on the device can be affected by external interferences, such as conducted emission by capacitance coupling, inductance coupling, and impedance coupling. To decrease the interferences, make sure to take the following measures:

- Use the power supply that can effectively filter interference from the power grid.
- Keep the device far from high-frequency and strong-current devices such as radio transmitting station.
- Use electromagnetic shielding when necessary.

### Lightning Protection



Extremely high voltage currents can be produced instantly when lightning occurs and the air in the electric discharge path can be instantly heated up to 20,000 °C. As this instant current is strong enough to damage electronic devices, more effective lightning protection measures should be taken.


- Ensure that the rack and the device are well earthed.
- Make sure the power socket has a good contact with the ground.
- Keep a reasonable cabling system and avoid induced lightning.
- Use the signal SPD (Surge Protective Device) when wiring outdoor.



**Note:**

For detailed lightning protection measures, refer to the **Lightning Protection Guide** from: <https://support.omadanetworks.com/r/1004/>.

**Installation Site**

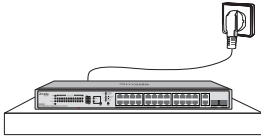

When installing the device on a rack or a flat workbench, attach much importance to the following items:

- The rack or workbench is flat, stable, and sturdy enough to support the weight of 5.5 kg at least.
- The rack or workbench has a good ventilation system. The equipment room is well ventilated.
- The rack is well grounded. Keep the device less than 1.5 meters away from the power socket.

**2.3 Installation Tools**

- Phillips screwdriver
- ESD-preventive wrist wrap
- Cables



**Note:**

These tools are not included with our product. If needed, you can purchase them separately.


**2.4 Product Installation**

▪ **Desktop Installation**

To install the device on the desktop, follow the steps:

1. Set the device on a flat surface which is strong enough to support the entire weight of the device with all fittings.
2. Remove the adhesive backing papers from the feet.
3. Attach the rubber feet to the bottom of the device to prevent it from slipping when placed on a desktop.

Figure 2-1 Desktop Installation

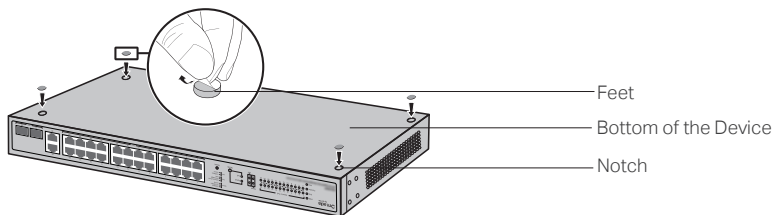


## ▪ Rack Installation

To install the device in an EIA standard-sized, 19-inch rack, follow the instructions described below:


1. Check the efficiency of the grounding system and the stability of the rack.
2. Secure the supplied rack-mounting brackets to each side of the device with supplied screws, as illustrated in the following figure.

Figure 2-2 Bracket Installation

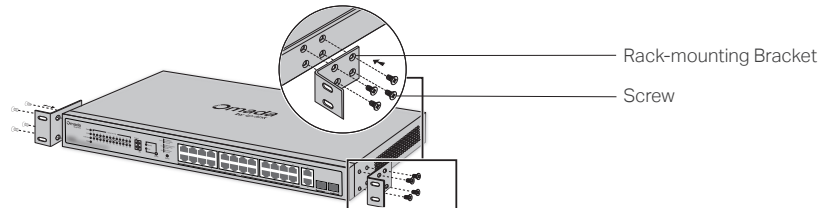

3. After the brackets are attached to the device, use suitable screws (not provided) to secure the brackets to the rack, as illustrated in the following figure.

Figure 2-3 Rack Installation

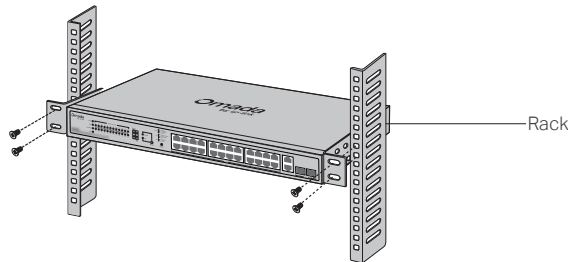

### Caution:

- Leave 5 to 10 cm gaps around the devices for air circulation.
- Avoid placing heavy things on the device.
- Place the device with its bottom facing downwards.
- Mount devices in sequence from the bottom to top of the rack and ensure a certain clearance between devices for the purpose of heat dissipation.

## Chapter 3 Connection


---

### 3.1 Ethernet Port

---

Connect an Ethernet port of the switch to the computer by RJ45 cable as the following figure shows.

Figure 3-1 Connecting the RJ45 Port

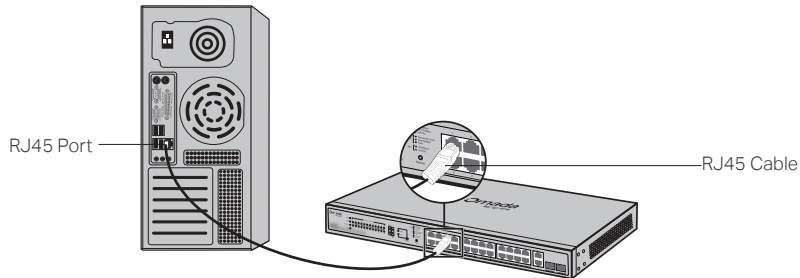


### 3.2 SFP Slot

---

The following figure demonstrates the connection of SFP module to an SFP slot.

Figure 3-2 Inserting the SFP Module

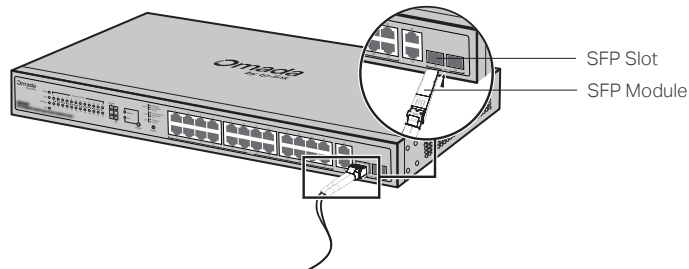

### 3.3 Verify Installation

---


After completing the installation, verify the following items:

- There should be 5 to 10 cm of clearance around the device for ventilation and make sure the air flow is adequate.
- The voltage of the power supply meets the requirement of the input voltage of the device.
- The power socket, device and rack are well grounded.
- The device is correctly connected to other network devices.

### 3.4 Power On

Plug the negative connector of the provided power cord into the power socket of the device and plug the positive connector into a power outlet as the following figure shows.

Figure 3-3 Connecting to Power Supply

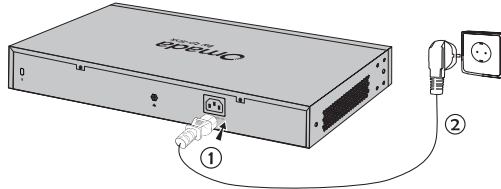

**Note:**

The figure is to illustrate the application and principle. The provided plug and the socket in your region may differ from the figures above.

### 3.5 Initialization

After the device is powered on, the Power LED indicator lights on. After about 10 seconds, all LED indicators turn on and the device begins the Power-On Self-Test. According to different device models, the LED indicators may light on or flash. After the test, the following LED statuses represent a successful initialization:

Model	LED Status
ES220GP	The Power LED indicator is on and the SYS LED indicator flashes.
ES220GMP / ES228GMP / ES228GP	The Power LED indicator is on, the SYS LED indicator flashes, and the FAN and Mode-Speed LED indicators are on.

## Chapter 4 Configuration

---

### 4.1 Configuration Overview

---

The switch supports two configuration options:

- Standalone Mode: Configure and manage the switch singly.
- Controller Mode: Configure and manage the network devices centrally. It is recommended in the large-scale network, which consists of mass devices such as access points, switches, and gateways.



**Note:**

Omada Easy Managed Switches support both Standalone Mode and Controller Mode. When the switch is changed from Standalone Mode to Controller Mode, you should reconfigure the switch.

---

### 4.2 Standalone Mode

---

To set up a standalone switch, scan the QR code or refer to the Standalone Configuration Guide at <https://www.omadanetworks.com/support/faq/4097/>.



*Scan for Standalone Configuration Guide*

### 4.3 Controller Mode

---

To set up a switch with an Omada Controller, scan the QR code or refer to the Omada Controller configuration guide at <https://www.omadanetworks.com/support/faq/4096/>.



*Scan for Controller Configuration Guide*

#### \* Omada App

With the Omada App, you can also manage your controller at a local site or a remote site via your mobile device. You can download and install the Omada app from the App Store or Google Play.



or



Scan for Omada App

Download Omada App

For the detailed configurations, refer to the User Guide of the controller. The guide can be found on the support center of our official website: <https://support.omadanetworks.com/>.

## Appendix A Troubleshooting

---

### Q1. What could I do if I forgot the username and password of the switch?

Press the Reset button for at least 5 seconds to reset the system. The system will be reset to the factory default settings, and you can set a new login username and password.

### Q2. Why does the PWR LED work abnormally?

The PWR LED should be lit up when the power system works normally. If the PWR LED worked abnormally, try the following:

1. Make sure that the power cable is connected properly, and the power contact is normal.
2. Make sure the voltage of the power supply meets the requirement of the input voltage of the switch.

### Q3. What should I do if I cannot access the web management page?

Try the following:

1. Check every port LED on the switch and make sure the Ethernet cable is connected properly.
2. Try another port on the switch and make sure the Ethernet cable is suitable and works normally.
3. Power off the switch and, after a while, power it on again.
4. Make sure the IP address of your PC is set within the subnet of the switch.
5. If you still cannot access the configuration page, please reset the switch to its factory defaults. Then the IP address of your PC should be set as 192.168.0.x ("x" is any number from 2 to 254) and subnet mask as 255.255.255.0.

## Appendix B Specifications

Item	Content
Standard	IEEE 802.3, IEEE 802.3i, IEEE 802.3u, IEEE 802.3ab
	IEEE 802.3z (For ES220GMP/ES228GMP/ES220GP/ES228GP)
	IEEE 802.3x, IEEE 802.1p, IEEE 802.1q
	IEEE 802.3af, IEEE 802.3at (For ES220GMP/ES228GMP/ES220GP/ES228GP)
Transmission Medium	10BASE-T: 2-pair UTP/STP of Cat. 3,4,5 (maximum 100 m)
	100BASE-TX: 2-pair UTP/STP of Cat. 5 or above (maximum 100 m)
	1000BASE-T: 4-pair UTP/STP of Cat. 5e or above (maximum 100 m)
	1000BASE-SX/LX/LX10/BX10: MMF, SMF (For ES220GMP/ES228GMP/ES220GP/ES228GP)
LED	ES220GMP: PWR, SYS, PoE MAX, FAN, Speed or PoE, Speed, PoE, SFP ES228GMP: PWR, SYS, PoE MAX, FAN, Speed or PoE, Speed, PoE, SFP ES220GP: PWR, SYS, PoE MAX, Speed, PoE, SFP ES228GP: PWR, SYS, PoE MAX, FAN, Speed or PoE, Speed, PoE, SFP
Operating Temperature	ES220GP: -5 °C to 40 °C (23 °F to 104 °F) ES228GMP: -5 °C to 45 °C (23 °F to 113 °F) Other models: -5 °C to 50 °C (23 °F to 122 °F)
Storage Temperature	-40 °C to 70 °C (-40 °F to 158 °F)
Operating Humidity	10% to 90%RH Non-condensing
Storage Humidity	5% to 90%RH Non-condensing

## CE Mark Warning



### EU declaration of conformity

TP-Link hereby declares that the switch is in compliance with the essential requirements and other relevant provisions of directives 2014/30/EU, 2014/35/EU, 2011/65/EU and (EU)2015/863.

The original EU declaration of conformity may be found at <https://www.tp-link.com/en/support/ce/>



### UK declaration of conformity

TP-Link hereby declares that the switch is in compliance with the essential requirements and other relevant provisions of the Electromagnetic Compatibility Regulations 2016 and Electrical Equipment (Safety) Regulations 2016.

The original UK declaration of conformity may be found at <https://www.tp-link.com/support/ukca/>



## Safety Information

- Keep the device away from water, fire, humidity or hot environments.
- Do not attempt to disassemble, repair, or modify the device. If you need service, please contact us.
- Place the device with its bottom surface downward.
- The plug on the power supply cord is used as the disconnect device, the socket-outlet shall be easily accessible.
- The socket-outlet shall be installed near the equipment and shall be easily accessible.
- Plug the product into the wall outlets with earthing connection through the power supply cord.
- The PoE ports shall not be used to charge lithium batteries or devices supplied by lithium batteries.

This equipment is not suitable for use in locations  
where children are likely to be present.

Please read and follow the above safety information when operating the device. We cannot guarantee that no accidents or damage will occur due to improper use of the device. Please use this product with care and operate at your own risk.





For technical support, user guides and other information, please visit <https://support.omadanetworks.com/>, or simply scan the QR code.

©2026 TP-Link 7100003199 REV3.0.0

