



## Dual-Antenna Modes

- **Built-in Directional Antennas**  
(No External Antennas Installed)

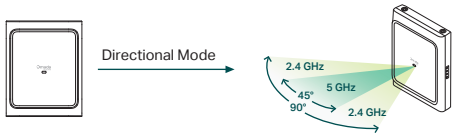

- **External Omnidirectional Antennas**  
(With External Antennas Installed)

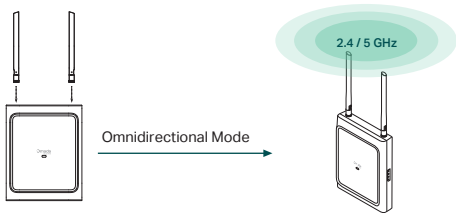

- **Smart Switching: Internal and External Antenna Auto Detection**

By default, the antenna mode automatically switches based on the presence of external antennas. To manually adjust the antenna mode, use Omada Controller version 6.1 or later.

**Note:** Using third-party external antennas is not recommended, as smart switching may not work properly.