



Dual-Antenna Modes

- **Directional Mode**
(No External Antennas Installed)

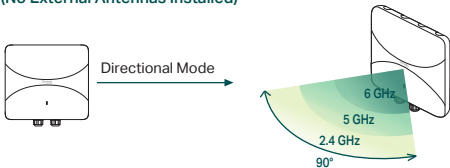

- **Omnidirectional Mode**
(With External Antennas Installed)

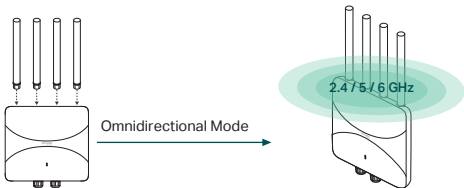

- **Smart Switching: External Antenna Auto Detection**

By default, the antenna mode automatically switches based on the presence of external antennas. To manually adjust the antenna mode, use the management page of the AP or Omada Controller.

Note: Using third-party external antennas is not recommended, as smart switching may not work properly.