
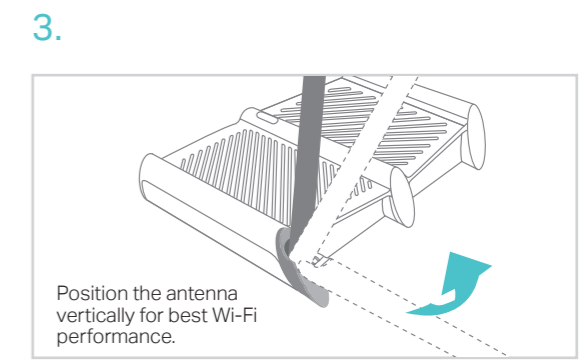
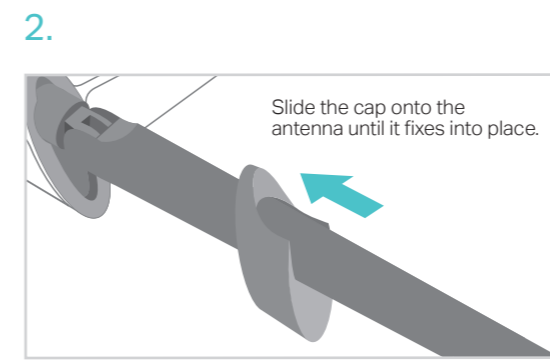


# Faster and Stronger


## Quick Installation Guide

### Archer C58HP

## Install the Antennas

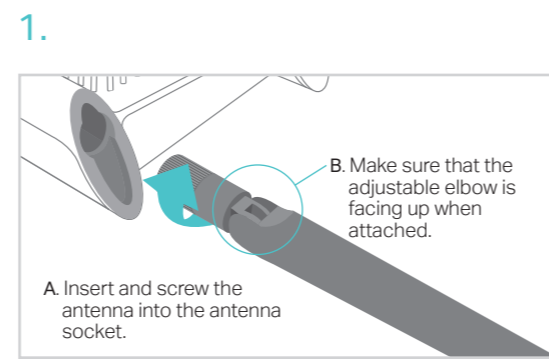

Finish

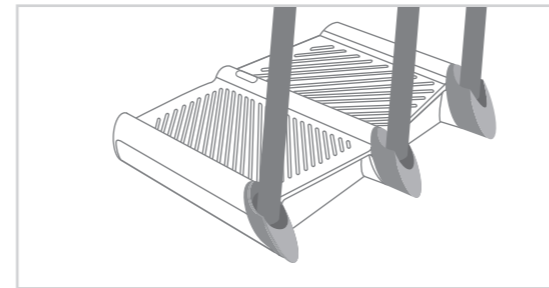


### Before your configuration

Please note that the router provides three working modes: Router, Range Extender and Access Point. You can choose the mode to better suit your network needs and follow the guide to complete the configuration.

## Configure the Router

### Router Mode

This mode enables multiple users to share internet connection via an ADSL/Cable Modem. If your internet connection is through an Ethernet cable directly from the wall instead of through a modem, connect the Ethernet cable to the router's WAN port, and skip Step 1, 2 and 3.

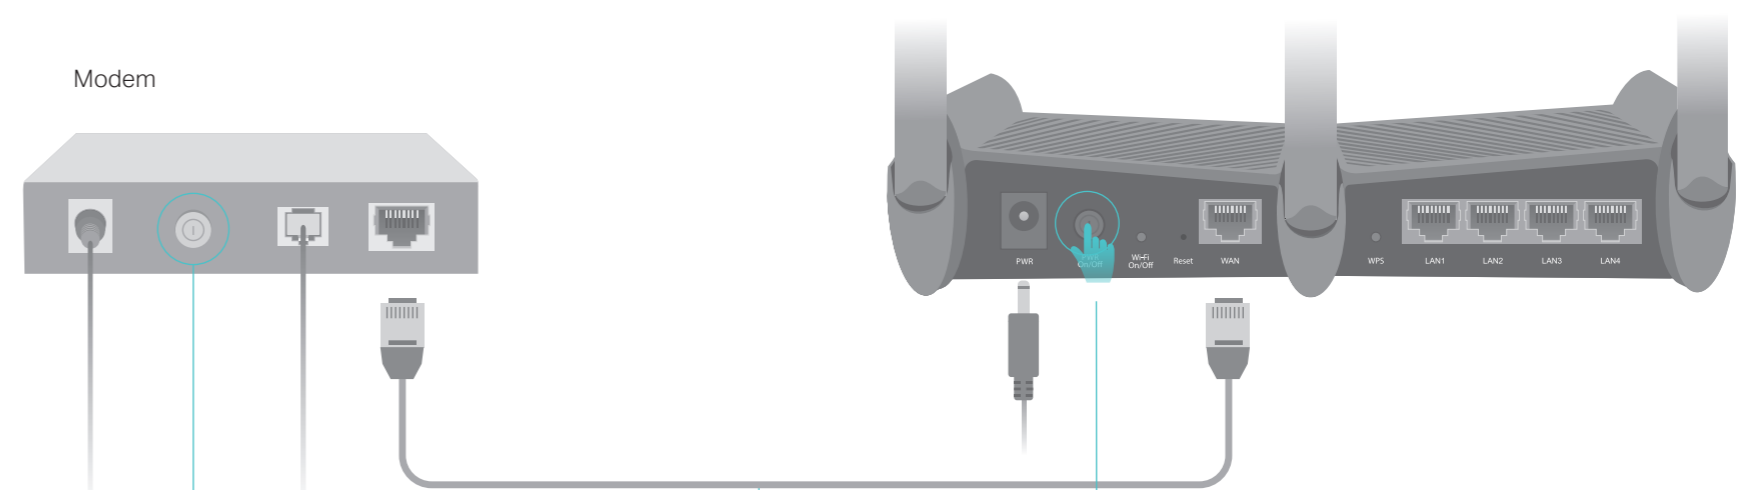

- 1 Turn off the modem, and remove the backup battery if it has one.
- 2 Connect the modem to the router's WAN port via an Ethernet cable.
- 3 Turn on the modem and wait about 2 minutes for it to restart.
- 4 Connect the power adapter to the router and turn on the router.

5 Connect your device to the router and check the LED indicators.

**Wired:**  
Connect your computer to the router's LAN port via an Ethernet cable.

**Wireless:**  
Connect wirelessly by using the SSID (Network Name) and Password printed on the label of the router.



6 Configure the router.  
Launch a web browser and enter <http://tplinkwifi.net> or <http://192.168.0.1> in the address bar. Create a login password for secure management purposes, follow **Quick Setup** and choose **Router** to complete the configuration.




Enjoy!

If you have customized the SSID (network name) and password during the configuration, you have to reconnect your wireless devices to the new wireless network.


# Range Extender Mode

This mode boosts your home wireless coverage.

## 1. Configure

Using the RE button is an easier way to extend your host network. You're recommended to refer to Option One if your host router has a WPS button. The button might look like one of these:  |  | .

### Option One: Using RE Button

1. Press the WPS button on the host router.
2. Within 1 minute, press and hold the  (RE) button on the top panel of the router for about 3 seconds. The router will start to connect to the host router and then reboot if connected.
3. Once rebooted, the RE LED should change from blinking to a solid state, indicating a successful connection.

Note: If WPS connection fails, please refer to Option Two.


### Option Two: Using a Web Browser

1. Connect a computer to the router via an Ethernet cable or wirelessly by using the SSID (network name) and password printed on the label of the router.
2. Launch a web browser and enter <http://tplinkwifi.net> in the address bar.
3. Create a login password for secure management purposes, follow **Quick Setup** and choose **Range Extender** to complete the configuration.

Note: Click **Survey** to find the host network you want to connect to, and then enter its wireless password.

## 2. Relocate


Place the router between your host router and the Wi-Fi "dead" zone. The location you choose must be within the range of your existing host network.

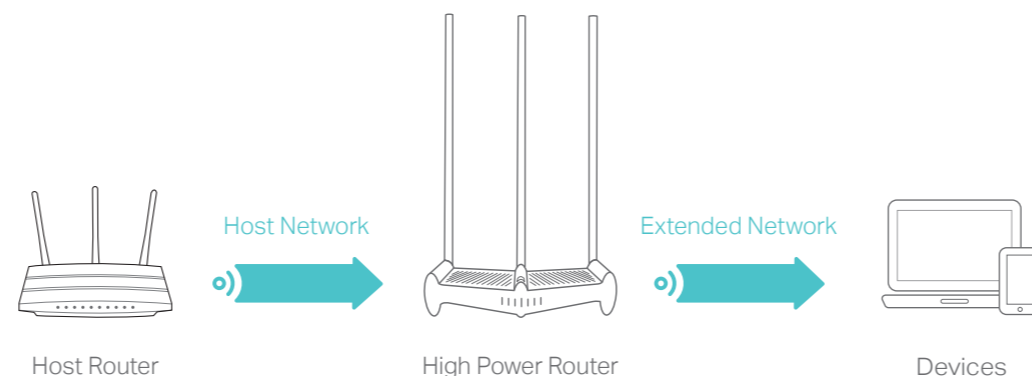


The extended network shares the same SSID (network name) and password as those of your host network.

# Access Point Mode

This mode transforms your existing wired network to a wireless one.

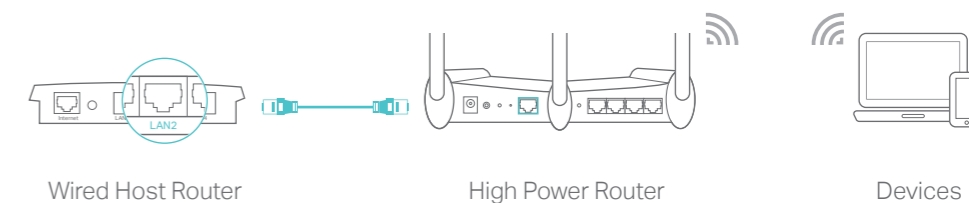

1. Connect the router to your wired host router's LAN port via an Ethernet cable as shown above.
2. Connect a computer to the router via an Ethernet cable or wirelessly by using the SSID (network name) and password printed on the label of the router.
3. Launch a web browser and enter <http://tplinkwifi.net> in the address bar. Create a login password for secure management purposes to log in.
4. Click  in the top-right corner of the web management page, choose **Access Point** and click **Save**. The router will reboot automatically.



Connect to the wireless network by using the SSID (network name) and password of the router.

Note: If you want to change the SSID (network name) and password of the router, please visit <http://tplinkwifi.net> and go to **Settings > Wireless > Wireless Settings** to change them.

# FAQ (Frequently Asked Questions)

### Q1. What should I do if I cannot access the web management page of the router?

- If the computer is set to a static IP address, change its settings to obtain an IP address automatically.
- Verify that <http://tplinkwifi.net> is correctly entered in the web browser. Alternatively, enter <http://192.168.0.1> or <http://192.168.1.1> in the web browser and press **Enter**.
- Use another web browser and try again.
- Reboot your router and try again.
- Disable and enable the network adapter in use.

### Q2. What should I do if I cannot access the internet in Router mode?

- Check if the internet is working normally by connecting a computer directly to the modem via an Ethernet cable. If it is not, contact your internet service provider.
- Log in to the web management page of the router, and go to the **Basic > Network Map** page to check whether the internet IP address is valid or not. If it is, please run the Quick Setup again; otherwise, check the hardware connection.
- Reboot your router and try again.
- For cable modem users, reboot the modem. If the problem persists, log in to the web management page of the router, go to **Advanced > Network > Internet > MAC Clone**, and select **Use Current Computer MAC Address**. Then click **Save**.

### Q3. What should I do if I forget my wireless network password?

- If you have not changed the default wireless password, it can be found on the label of the router.
- Log in to the web management page, and go to **Basic > Wireless** to retrieve or reset your wireless password.

### Q4. How do I restore the router to its factory default settings?

- With the router powered on, press and hold the **Reset** button on the back panel of the router until all the LEDs turn on momentarily.
- Log in to the web management page of the router, go to **Advanced (or Settings) > System Tools > Backup & Restore > Factory Default Restore**, and click **Factory Restore**. The router will restore and reboot automatically.

Note: Restoring the router to its factory defaults will clear all previous settings.





### Q5. What should I do if I forget my web management page password?

- Refer to **FAQ > Q4** to reset the router, and visit <http://tplinkwifi.net> to create a new password.

 For technical support and other information, please visit <http://www.tp-link.com/support>

# Tether App

The TP-Link Tether app provides a simple, intuitive way to access and manage your router.

- |   |   |   |   |
|---|---|---|---|
|  | Block unwelcome users from connecting to your network |  | View information about clients connected to your router |
|  | Change the basic wireless network settings            |  | Set up Parental Controls with access time               |

### How to begin?

1. Download the TP-Link Tether app from the Apple App Store or Google Play Store.
2. Ensure your smart device is wirelessly connected to the home network.
3. Launch the Tether app and start managing your home network.



Scan to download

