TP-LINK®
The Reliable Choice

Quick
Installation Guide

150Mbps Wireless N PCI Express Adapter
MODEL NO. TL-WN781ND
7106505438 REV3.0.0

EAL

For more information, please visit http://www.tp-link.com.

1 Connect to a Computer
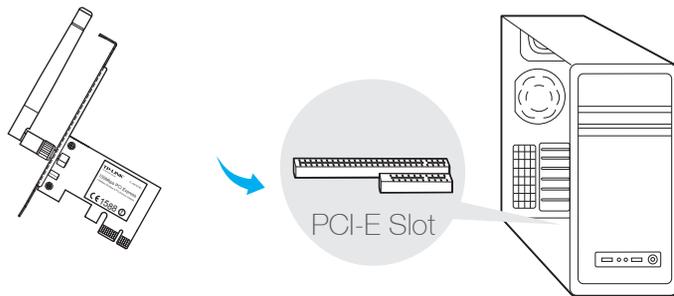
PCI-E Slot

Insert the adapter into your computer by following these steps:

1. Turn off your computer, unplug the power cord and other connected peripheral devices to your computer.
2. Remove the case panel. Locate an available PCI-E slot and remove its slot cover.
3. Carefully insert the adapter into the PCI-E slot and secure it with the retaining screw.
4. Replace the case panel.
5. Reconnect the power cord and turn on your computer.

Note: In Windows XP, a Found New Hardware Wizard window will appear when the adapter is detected. Please click Cancel.

2 Install Driver and Utility

You can also download the driver and utility at www.tp-link.com

A: Insert the CD and run the Autorun.exe from the pop-up Autoplay window.
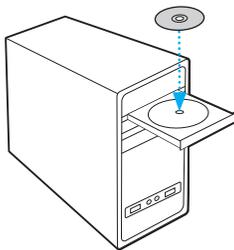
Note: In some operating systems, the CD screen will pop up automatically. Otherwise, run the CD manually.

B: Select TL-WN781ND and click Install Driver and Utility, then follow the InstallShield Wizard to complete the installation.

TP-LINK®
The Reliable Choice
Setup Wizard

TL-WN721N   TL-WN722N   TL-WN781ND
Install Driver and Utility
User Guide

▶ Browse CD   ⓘ EXIT
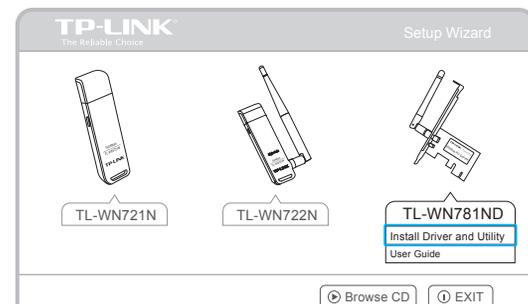
3 Join a Wireless Network

Option 1: Via TP-LINK Utility

Select your Wi-Fi network from the pop-up utility window and click Connect. The symbol indicates a successful connection.

TP-LINK®
The Reliable Choice

Status | WPS | Network | Profile | Advanced

Network Name(SSID) ▼	Security	Channel ▼	Signal ▼
TP-LINK_A	🔒 WPA/WPA2-Personal	6 (2.4G)	
☐ Connect automatically		Connect	
34567_TEST	🔒 WPA/WPA2-Personal	2 (2.4G)	
abcdef_0903	None	9 (2.4G)	
AAAAAA	None	5 (2.4G)	

Network
TP-LINK_A
34567_TF
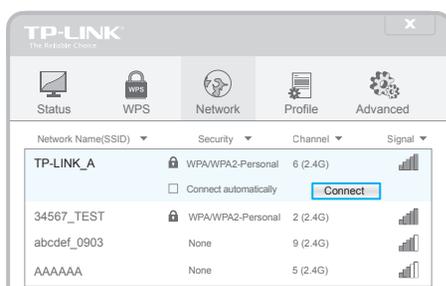
Option 2: Via Windows Wireless Utility

Click (Network icon) on the system tray, select your Wi-Fi network, and click Connect.

Note: In Windows XP, you need to close the TP-LINK Utility before using the Windows Wireless Utility.