User Guide

T2600G Series Switches

T2600G-28TS (TL-SG3424) / T2600G-52TS (TL-SG3452)
T2600G-28MPS (TL-SG3424P) / T2600G-28SQ / T2600G-18TS

1910012455 REV3.1.1

July 2018

CONTENTS

About This Guide

Intended Readers 1
Conventions 1
More Information 2

Accessing the Switch

Overview 4
Web Interface Access 5
- Login 5
- Save the Configuration File 6
- Disable the Web Server 7
- Configure the Switch's IP Address and Default Gateway 7

Command Line Interface Access 10
- Console Login (only for switch with console port) 10
- Telnet Login 12
- SSH Login 13
- Disable Telnet login 17
- Disable SSH login 18
- Copy running-config startup-config 18
- Change the Switch's IP Address and Default Gateway 18

Managing System

System 21
- Overview 21
- Supported Features 21

System Info Configurations 23
- Using the GUI 23
  - Viewing the System Summary 23
  - Configuring the Device Description 27
  - Configuring the System Time 27
  - Configuring the Daylight Saving Time 28
- Using the CLI 29
  - Viewing the System Summary 29
  - Configuring the Device Description 30

Configuring the System Time 32
Configuring the Daylight Saving Time 34
User Management Configurations 37
Using the GUI 37
Creating Accounts 37
Configuring Enable Password 38
Using the CLI 39
Creating Accounts 39
Configuring Enable Password 41
System Tools Configurations 44
Using the GUI 44
Configuring the Boot File 44
Restoring the Configuration of the Switch 46
Backing up the Configuration File 46
Upgrading the Firmware 47
Configuring DHCP Auto Install 47
Rebooting the switch 49
Reseting the Switch 50
Using the CLI 50
Configuring the Boot File 50
Restoring the Configuration of the Switch 52
Backing up the Configuration File 52
Upgrading the Firmware 53
Configuring DHCP Auto Install 53
Rebooting the Switch 55
Reseting the Switch 56
EEE Configuration 57
Using the CLI 57
PoE Configurations 59
Using the GUI 60
Configuring the PoE Parameters Manually 60
Configuring the PoE Parameters Using the Profile 63
Using the CLI 66
Configuring the PoE Parameters Manually 66
Configuring the PoE Parameters Using the Profile 68
SDM Template Configuration 71
Using the GUI 71
Using the CLI 72

Time Range Configuration 75
Using the GUI 75
Adding Time Range Entries 75
Configuring Holiday 77
Using the CLI 78
Adding Time Range Entries 78
Configuring Holiday 79
Example for PoE Configurations 81
Network Requirements 81
Configuring Scheme 81
Using the GUI 81
Using the CLI 84
Appendix: Default Parameters 86

Managing Physical Interfaces

Physical Interface 90
Overview 90
Supported Features 90
Basic Parameters Configurations 91
Using the GUI 91
Using the CLI 92
Port Isolation Configurations 95
Using the GUI 95
Using the CLI 96
Loopback Detection Configuration 98
Using the GUI 98
Using the CLI 100
Configuration Examples 102
Example for Port Isolation 102
Network Requirements 102
Configuration Scheme 102
Using the GUI 102
Using the CLI 104
Example for Loopback Detection 105
Network Requirements 105
Configuration Scheme 105
Using the GUI 106

Using the CLI 107
Appendix: Default Parameters 108

Configuring LAG

LAG 110
Overview 110
Supported Features 110
LAG Configuration 111
Using the GUI 112
Configuring Load-balancing Algorithm 112
Configuring Static LAG or LACP 113
Using the CLI 115
Configuring Load-balancing Algorithm 115
Configuring Static LAG or LACP 116
Configuration Examples 120
Example for Static LAG 120
Network Requirements 120
Configuration Scheme 120
Using the GUI 120
Using the CLI 121
Example for LACP 122
Network Requirements 122
Configuration Scheme 122
Using the GUI 123
Using the CLI 123
Appendix: Default Parameters 126

Configuring DDM

Overview 128
DDM Configuration 129
Using the GUI 129
Configuring DDM Globally 129
Configuring the Threshold 130
Viewing DDM Status 135
Using the CLI 135
Configuring DDM Globally 135
Configuring DDM Shutdown 136

Configuring the Threshold 137
Viewing DDM Configuration 143
Viewing DDM Status 144
Appendix: Default Parameters 145

Managing MAC Address Table

MAC Address Table 147
Overview 147
Supported Features 147
Address Configurations 149
Using the GUI 149
Adding Static MAC Address Entries 149
Modifying the Aging Time of Dynamic Address Entries 151
Adding MAC Filtering Address Entries 152
Viewing Address Table Entries 152
Using the CLI 153
Adding Static MAC Address Entries 153
Modifying the Aging Time of Dynamic Address Entries 154
Adding MAC Filtering Address Entries 155
Security Configurations 157
Using the GUI 157
Configuring MAC Notification Traps 157
Limiting the Number of MAC Addresses Learned in VLANs 158
Using the CLI 160
Configuring MAC Notification Traps 160
Limiting the Number of MAC Addresses in VLANs 162
Example for Security Configurations 164
Network Requirements 164
Configuration Scheme 164
Using the GUI 165
Using the CLI 166
Appendix: Default Parameters 167

Configuring 802.1Q VLAN

Overview 169
802.1Q VLAN Configuration 170
Using the GUI 170

Configuring the PVID of the Port....170
Configuring the VLAN....172
Using the CLI....173
Creating a VLAN....173
Configuring the Port....174
Adding the Port to the Specified VLAN....175
Configuration Example....177
Network Requirements....177
Configuration Scheme....177
Network Topology....178
Using the GUI....178
Using the CLI....181
Appendix: Default Parameters....184

Configuring MAC VLAN

Overview....186
MAC VLAN Configuration....187
Using the GUI....187
Configuring 802.1Q VLAN....187
Binding the MAC Address to the VLAN....187
Enabling MAC VLAN for the Port....188
Using the CLI....189
Configuring 802.1Q VLAN....189
Enabling MAC VLAN for the Port....190
Configuration Example....191
Network Requirements....191
Configuration Scheme....191
Using the GUI....192
Using the CLI....197
Appendix: Default Parameters....201

Configuring Protocol VLAN

Overview....203
Protocol VLAN Configuration....204
Using the GUI....204
Configuring 802.1Q VLAN....204
Creating Protocol Template....205

Configuring Protocol VLAN....206
Using the CLI....207
Configuring 802.1Q VLAN....207
Creating a Protocol Template....207
Configuring Protocol VLAN....208
Configuration Example....211
Network Requirements....211
Configuration Scheme....211
Using the GUI....213
Using the CLI....219
Appendix: Default Parameters....223

Configuring VLAN-VPN

VLAN-VPN....225
Overview....225
Supported Features....226
Basic VLAN-VPN Configuration....227
Using the GUI....227
Configuring 802.1Q VLAN....227
Configuring Basic VLAN-VPN....228
Using the CLI....229
Configuring 802.1Q VLAN....229
Configuring Basic VLAN-VPN....229
Flexible VLAN-VPN Configuration....232
Using the GUI....232
Using the CLI....233
Configuration Examples....235
Example for Basic VLAN VPN....235
Network Requirements....235
Configuration Scheme....235
Using the GUI....236
Using the CLI....242
Example for Flexible VLAN VPN....246
Network Requirements....246
Configuration Scheme....246
Using the GUI....247
Using the CLI....255

Appendix: Default Parameters 258

Configuring GVRP

Overview 260
GVRP Configuration 261
Using the GUI 262
Using the CLI 263
Configuration Example 266
Network Requirements 266
Configuration Scheme 266
Using the GUI 267
Using the CLI 271
Appendix: Default Parameters 275

Configuring Private VLAN

Overview 277
Private VLAN Configurations 279
Using the GUI 279
Using the CLI 280
Creating Private VLAN 280
Configuring the Up-link Port 282
Configuring the Down-link Port 284
Configuration Example 286
Network Requirements 286
Configuration Scheme 286
Network Topology 286
Using the GUI 287
Using the CLI 291
Appendix: Default Parameters 295

Configuring Layer 2 Multicast

Layer 2 Multicast 297
Overview 297
Supported Features 299
IGMP Snooping Configuration 300
Using the GUI 300
Configuring IGMP Snooping Globally 300

Configuring IGMP Snooping for VLANs 301
Configuring IGMP Snooping for Ports 305
Configuring Hosts to Statically Join a Group 305
Configuring IGMP Accounting and Authentication Features 306
Using the CLI 308
Configuring IGMP Snooping Globally 308
Configuring IGMP Snooping for VLANs 309
Configuring IGMP Snooping for Ports 314
Configuring Hosts to Statically Join a Group 315
Configuring IGMP Accounting and Authentication Features 316
MLD Snooping Configuration 319
Using the GUI 319
Configuring MLD Snooping Globally 319
Configuring MLD Snooping for VLANs 320
Configuring MLD Snooping for Ports 323
Configuring Hosts to Statically Join a Group 323
Using the CLI 324
Configuring MLD Snooping Globally 324
Configuring MLD Snooping for VLANs 325
Configuring MLD Snooping for Ports 330
Configuring Hosts to Statically Join a Group 331
MVR Configuration 333
Using the GUI 333
Configuring 802.1Q VLANs 333
Configuring MVR Globally 334
Adding Multicast Groups to MVR 335
Configuring MVR for the Port 336
(Optional) Adding Ports to MVR Groups Statically 337
Using the CLI 338
Configuring 802.1Q VLANs 338
Configuring MVR Globally 338
Configuring MVR for the Ports 340
Multicast Filtering Configuration 343
Using the GUI 343
Creating the Multicast Profile 343
Configure Multicast Filtering for Ports 345
Using the CLI 346
Creating the Multicast Profile 346

Binding the Profile to Ports....349
Viewing Multicast Snooping Information....353
Using the GUI....353
Viewing IPv4 Multicast Table....353
Viewing IPv4 Multicast Statistics on Each Port....354
Viewing IPv6 Multicast Table....355
Viewing IPv6 Multicast Statistics on Each Port....356
Using the CLI....357
Viewing IPv4 Multicast Snooping Information....357
Viewing IPv6 Multicast Snooping Configurations....357
Configuration Examples....358
Example for Configuring Basic IGMP Snooping....358
Network Requirements....358
Configuration Scheme....358
Using the GUI....359
Using the CLI....361
Example for Configuring MVR....363
Network Requirements....363
Network Topology....363
Configuration Scheme....364
Using the GUI....364
Using the CLI....367
Example for Configuring Unknown Multicast and Fast Leave....370
Network Requirement....370
Configuration Scheme....371
Using the GUI....371
Using the CLI....373
Example for Configuring Multicast Filtering....374
Network Requirements....374
Configuration Scheme....374
Network Topology....375
Using the GUI....375
Using the CLI....379
Appendix: Default Parameters....382
Default Parameters for IGMP Snooping....382
Default Parameters for MLD Snooping....383
Default Parameters for MVR....384
Default Parameters for Multicast Filtering....384

Configuring Spanning Tree

Spanning Tree 386
Overview 386
Basic Concepts 386
STP/RSTP Concepts 386
MSTP Concepts 390
STP Security 391
STP/RSTP Configurations 394
Using the GUI 394
Configuring STP/RSTP Parameters on Ports 394
Configuring STP/RSTP Globally 396
Verifying the STP/RSTP Configurations 398
Using the CLI 400
Configuring STP/RSTP Parameters on Ports 400
Configuring Global STP/RSTP Parameters 402
Enabling STP/RSTP Globally 404
MSTP Configurations 406
Using the GUI 406
Configuring Parameters on Ports in CIST 406
Configuring the MSTP Region 409
Configuring MSTP Globally 413
Verifying the MSTP Configurations 415
Using the CLI 416
Configuring Parameters on Ports in CIST 416
Configuring the MSTP Region 418
Configuring Global MSTP Parameters 421
Enabling Spanning Tree Globally 423
STP Security Configurations 426
Using the GUI 426
Using the CLI 427
Configuring the STP Security 427
Configuration Example for MSTP 430
Network Requirements 430
Configuration Scheme 430
Using the GUI 431
Using the CLI 437
Appendix: Default Parameters 444

Configuring LLDP

LLDP....447
Overview....447
Supported Features....447
LLDP Configurations....448
Using the GUI....448
Configuring LLDP Globally....448
Configuring LLDP For the Port....450
Using the CLI....451
Global Config....451
Port Config....453
LLDP-MED Configurations....456
Using the GUI....456
Configuring LLDP Globally....456
Configuring LLDP-MED Globally....456
Configuring LLDP-MED for Ports....457
Using the CLI....459
Global Config....459
Port Config....460
Viewing LLDP Settings....463
Using GUI....463
Viewing LLDP Device Info....463
Viewing LLDP Statistics....466
Using CLI....467
Viewing LLDP-MED Settings....468
Using GUI....468
Using CLI....470
Configuration Examples....471
Example for LLDP....471
Network Requirements....471
Configuration Scheme....471
Using the GUI....471
Using CLI....472
Example for LLDP-MED....478
Network Requirements....478
Configuration Scheme....478
Using the GUI....478

Using CLI 481
Appendix: Default Parameters 484

Configuring L2PT

Overview 486
L2PT Configuration 488
Using the GUI 488
Using the CLI 489
Configuration Example 493
Network Requirements 493
Configuration Scheme 493
Using the GUI 493
Using the CLI 494
Appendix: Default Parameters 496

Configuring PPPoE ID Insertion

Overview 498
PPPoE ID Insertion Configuration 499
Using the GUI 499
Using the CLI 500
Appendix: Default Parameters 503

Configuring Layer 3 Interfaces

Overview 505
Layer 3 Interface Configurations 506
Using the GUI 506
Creating a Layer 3 Interface 506
Configuring IPv4 Parameters of the Interface 508
Configuring IPv6 Parameters of the Interface 509
Viewing Detail Information of the Interface 512
Using the CLI 513
Creating a Layer 3 Interface 513
Configuring IPv4 Parameters of the Interface 515
Configuring IPv6 Parameters of the Interface 516
Configuration Example 519
Network Requirement 519
Configuration Scheme 519

Using the GUI **519**
Using the CLI 520
Appendix: Default Parameters 522

Configuring Routing

Overview 524
IPv4 Static Routing Configuration 525
Using the GUI 525
Using the CLI 526
IPv6 Static Routing Configuration 527
Using the GUI 527
Using the CLI 527
Viewing Routing Table 529
Using the GUI 529
Viewing IPv4 Routing Table 529
Viewing IPv6 Routing Table 530
Using the CLI 530
Viewing IPv4 Routing Table 530
Viewing IPv6 Routing Table 531
Example for Static Routing 532
Network Requirements 532
Configuration Scheme 532
Using the GUI 532
Using the CLI 534

Configuring DHCP Service

DHCP 538
Overview 538
Supported Features 538
DHCP Server Configuration 541
Using the GUI 541
Enabling DHCP Server 541
Configuring DHCP Server Pool 543
Configuring Manual Binding 544
Using the CLI 545
Enabling DHCP Server 545
Configuring DHCP Server Pool 548

Configuring Manual Binding 551
DHCP Relay Configuration 553
Using the GUI 553
Enabling DHCP Relay and Configuring Option 82 553
Configuring DHCP Interface Relay 555
Configuring DHCP VLAN Relay 555
Using the CLI 557
Enabling DHCP Relay 557
(Optional) Configuring Option 82 558
Configuring DHCP Interface Relay 560
Configuring DHCP VLAN Relay 561
DHCP L2 Relay Configuration 563
Using the GUI 563
Enabling DHCP L2 Relay 563
Configuring Option 82 for Ports 564
Using the CLI 565
Enabling DHCP L2 Relay 565
Configuring Option 82 for Ports 566
Configuration Examples 568
Example for DHCP Server 568
Network Requirements 568
Configuration Scheme 568
Using the GUI 568
Using the CLI 569
Example for DHCP Interface Relay 570
Network Requirements 570
Configuration Scheme 571
Using the GUI 571
Using the CLI 579
Example for DHCP VLAN Relay 581
Network Requirements 581
Configuration Scheme 582
Using the GUI 582
Using the CLI 586
Example for DHCP L2 Relay 588
Network Requirements 588
Configuration Scheme 589
Using the GUI 589

Using CLI 591
Appendix: Default Parameters 593

Configuring ARP

Overview 597
Supported Features 597
ARP Configurations 599
Using the GUI 599
Viewing the ARP Entries 599
Adding Static ARP Entries Manually 600
Configuring Gratuitous ARP 600
Configuring Proxy ARP 601
Configuring Local Proxy ARP 602
Using the CLI 603
Configuring the ARP Entry 603
Configuring the Gratuitous ARP 605
Configuring Proxy ARP 608
Appendix: Default Parameters 610

Configuring QoS

QoS 612
Overview 612
Supported Features 612
Class of Service Configuration 614
Using the GUI 615
Configuring Port Priority 615
Configuring 802.1p Priority 617
Configuring DSCP Priority 620
Specifying the Scheduler Settings 624
Using CLI 626
Configuring Port Priority 626
Configuring 802.1p Priority 628
Configuring DSCP Priority 631
Specifying the Scheduler Settings 637
Bandwidth Control Configuration 639
Using the GUI 639
Configuring Rate Limit 639

Configuring Storm Control 640
Using the CLI 641
Configuring Rate Limit 641
Configuring Storm Control 642
Voice VLAN Configuration 645
Using the GUI 645
Configuring OUI Addresses 645
Configuring Voice VLAN Globally 646
Adding Ports to Voice VLAN 647
Using the CLI 648
Auto VoIP Configuration 651
Using the GUI 651
Using the CLI 652
Configuration Examples 656
Example for Class of Service 656
Network Requirements 656
Configuration Scheme 656
Using the GUI 657
Using the CLI 659
Example for Voice VLAN 661
Network Requirements 661
Configuration Scheme 662
Using the GUI 662
Using the CLI 666
Example for Auto VoIP 669
Network Requirements 669
Configuration Scheme 670
Using the GUI 670
Using the CLI 677
Appendix: Default Parameters 682

Configuring Access Security

Access Security 687
Overview 687
Supported Features 687
Access Security Configurations 688
Using the GUI 688

Configuring the Access Control Feature....688
Configuring the HTTP Function....691
Configuring the HTTPS Function....693
Configuring the SSH Feature....696
Configuring the Telnet Function....697
Configuring the Serial Port Parameters....698
Using the CLI....698
Configuring the Access Control....698
Configuring the HTTP Function....700
Configuring the HTTPS Function....702
Configuring the SSH Feature....704
Configuring the Telnet Function....707
Configuring the Serial Port Parameters....707
Appendix: Default Parameters....708

Configuring AAA

Overview....711
AAA Configuration....712
Using the GUI....713
Adding Servers....713
Configuring Server Groups....715
Configuring the Method List....715
Configuring the AAA Application List....717
Configuring Login Account and Enable Password....718
Using the CLI....719
Adding Servers....719
Configuring Server Groups....721
Configuring the Method List....722
Configuring the AAA Application List....724
Configuring Login Account and Enable Password....728
Configuration Examples....730
Network Requirements....730
Configuration Scheme....730
Using the GUI....731
Using the CLI....734
Appendix: Default Parameters....736

Configuring 802.1x

Overview 739
802.1x Configuration 740
Using the GUI 740
Configuring the RADIUS Server 740
Configuring 802.1x Globally 743
Configuring 802.1x on Ports 744
View the Authenticator State 746
Using the CLI 747
Configuring the RADIUS Server 747
Configuring 802.1x Globally 749
Configuring 802.1x on Ports 751
Viewing Authenticator State 753
Configuration Example 755
Network Requirements 755
Configuration Scheme 755
Network Topology 755
Using the GUI 756
Using the CLI 758
Appendix: Default Parameters 761

Configuring Port Security

Overview 763
Port Security Configuration 764
Using the GUI 764
Using the CLI 765
Appendix: Default Parameters 768

Configuring ACL

Overview 770
ACL Configuration 771
Using the GUI 771
Configuring Time Range 771
Creating an ACL 771
Configuring ACL Rules 772
Configuring MAC ACL Rule 772
Configuring IP ACL Rule 776

Configuring Combined ACL Rule....780
Configuring the IPv6 ACL Rule....785
Configuring the Packet Content ACL Rule....789
Configuring ACL Binding....793
Using the CLI....795
Configuring Time Range....795
Configuring ACL....795
Configuring Policy....804
Configuring ACL Binding....806
Viewing ACL Counting....807
Configuration Example for ACL....808
Configuration Example for MAC ACL....808
Network Requirements....808
Configuration Scheme....808
Using the GUI....809
Using the CLI....815
Configuration Example for IP ACL....816
Network Requirements....816
Configuration Scheme....817
Using the GUI....817
Using the CLI....824
Configuration Example for Combined ACL....826
Network Requirements....826
Configuration Scheme....826
Using the GUI....827
Using the CLI....832
Appendix: Default Parameters....834

Configuring IPv4 IMPB

IPv4 IMPB....837
Overview....837
Supported Features....837
IP-MAC Binding Configuration....838
Using the GUI....838
Binding Entries Manually....838
Binding Entries via ARP Scanning....840
Binding Entries via DHCP Snooping....841

Viewing the Binding Entries 843
Using the CLI 844
Binding Entries Manually 844
Binding Entries via DHCP Snooping 846
Viewing Binding Entries 847
ARP Detection Configuration 848
Using the GUI 848
Adding IP-MAC Binding Entries 848
Enabling ARP Detection 848
Configuring ARP Detection on Ports 849
Viewing ARP Statistics 850
Using the CLI 851
Adding IP-MAC Binding Entries 851
Enabling ARP Detection 851
Configuring ARP Detection on Ports 853
Viewing ARP Statistics 854
IPv4 Source Guard Configuration 855
Using the GUI 855
Adding IP-MAC Binding Entries 855
Configuring IPv4 Source Guard 855
Using the CLI 856
Adding IP-MAC Binding Entries 856
Configuring IPv4 Source Guard 856
Configuration Examples 858
Example for ARP Detection 858
Network Requirements 858
Configuration Scheme 858
Using the GUI 859
Using the CLI 861
Example for IP Source Guard 863
Network Requirements 863
Configuration Scheme 863
Using the GUI 863
Using the CLI 865
Appendix: Default Parameters 867

Configuring IPv6 IMPB

IPv6 IMPB 870
Overview 870
Supported Features 870
IPv6-MAC Binding Configuration 872
Using the GUI 872
Binding Entries Manually 872
Binding Entries via ND Snooping 874
Binding Entries via DHCPv6 Snooping 875
Viewing the Binding Entries 877
Using the CLI 878
Binding Entries Manually 878
Binding Entries via ND Snooping 880
Binding Entries via DHCPv6 Snooping 881
Viewing Binding Entries 882
ND Detection Configuration 883
Using the GUI 883
Adding IPv6-MAC Binding Entries 883
Enabling ND Detection 883
Configuring ND Detection on Ports 884
Viewing ND Statistics 884
Using the CLI 885
Adding IPv6-MAC Binding Entries 885
Enabling ND Detection 885
Configuring ND Detection on Ports 886
Viewing ND Statistics 887
IPv6 Source Guard Configuration 888
Using the GUI 888
Adding IPv6-MAC Binding Entries 888
Configuring IPv6 Source Guard 888
Using the CLI 889
Adding IPv6-MAC Binding Entries 889
Configuring IPv6 Source Guard 889
Configuration Examples 891
Example for ND Detection 891
Network Requirements 891
Configuration Scheme 891

Using the GUI 892
Using the CLI 894
Example for IPv6 Source Guard 895
Network Requirements 895
Configuration Scheme 896
Using the GUI 896
Using the CLI 898
Appendix: Default Parameters 899

Configuring DHCP Filter

DHCP Filter 902
Overview 902
Supported Features 902
DHCPv4 Filter Configuration 904
Using the GUI 904
Configuring the Basic DHCPv4 Filter Parameters 904
Configuring Legal DHCPv4 Servers 906
Using the CLI 906
Configuring the Basic DHCPv4 Filter Parameters 906
Configuring Legal DHCPv4 Servers 908
DHCPv6 Filter Configuration 910
Using the GUI 910
Configuring the Basic DHCPv6 Filter Parameters 910
Configuring Legal DHCPv6 Servers 911
Using the CLI 912
Configuring the Basic DHCPv6 Filter Parameters 912
Configuring Legal DHCPv6 Servers 913
Configuration Examples 915
Example for DHCPv4 Filter 915
Network Requirements 915
Configuration Scheme 915
Using the GUI 916
Using the CLI 917
Example for DHCPv6 Filter 918
Network Requirements 918
Configuration Scheme 919

Using the GUI....919
Using the CLI....921
Appendix: Default Parameters....922

Configuring DoS Defend

Overview....924
DoS Defend Configuration....925
Using the GUI....925
Using the CLI....926
Appendix: Default Parameters....929

Monitoring the System

Overview....931
Monitoring the CPU....932
Using the GUI....932
Using the CLI....932
Monitoring the Memory....934
Using the GUI....934
Using the CLI....934

Monitoring Traffic

Traffic Monitor....937
Using the GUI....937
Using the CLI....941
Appendix: Default Parameters....942

Mirroring Traffic

Mirroring....944
Using the GUI....944
Using the CLI....946
Configuration Examples....948
Network Requirements....948
Configuration Scheme....948
Using the GUI....948
Using the CLI....949
Appendix: Default Parameters....951

Configuring sFlow

Overview 953
sFlow Configuration 954
Using the GUI 954
Configuring the sFlow Agent 954
Configuring the sFlow Collector 955
Configuring the sFlow Sampler 955
Using the CLI 957
Configuration Example 960
Network Requirements 960
Configuration Scheme 960
Using the GUI 960
Using the CLI 961
Appendix: Default Parameters 963

Configuring OAM

Ethernet OAM 965
Overview 965
Supported Features 966
Ethernet OAM Configurations 969
Using the GUI 969
Enabling OAM and Configuring OAM Mode 969
Configuring Link Monitoring 970
Configuring RFI 972
Configuring Remote Loopback 973
Viewing OAM Status 974
Using the CLI 976
Enabling OAM and Configuring OAM Mode 976
Configuring Link Monitoring 977
Configuring Remote Failure Indication 983
Configuring Remote Loopback 984
Verifying OAM Connection 985
Viewing OAM Statistics 988
Using the GUI 988
Viewing OAMPDUs 988
Viewing Event Logs 990
Using the CLI 991

Viewing OAMPDUs....991
Viewing Event Logs....993
Configuration Example....995
Network Requirements....995
Configuration Scheme....995
Using the GUI....995
Using the CLI....999
Appendix: Default Parameters....1003

Configuring DLDP

Overview....1005
DLDP Configuration....1006
Using the GUI....1006
Using the CLI....1008
Appendix: Default Parameters....1010

Configuring SNMP & RMON

SNMP....1012
Overview....1012
Basic Concepts....1012
SNMP Configurations....1016
Using the GUI....1016
Enabling SNMP....1016
Creating an SNMP View....1017
Creating SNMP Communities (For SNMP v1/v2c)....1018
Creating an SNMP Group (For SNMP v3)....1019
Creating SNMP Users (For SNMP v3)....1020
Using the CLI....1021
Enabling SNMP....1021
Creating an SNMP View....1023
Creating SNMP Communities (For SNMP v1/v2c)....1024
Creating an SNMP Group (For SNMPv3)....1025
Creating SNMP Users (For SNMPv3)....1027
Notification Configurations....1029
Using the GUI....1029
Configuring the Information of NMS Hosts....1029
Enabling SNMP Traps....1031

Using the CLI 1033
Configuring the NMS Host 1033
Enabling SNMP Traps 1035
RMON 1043
RMON Configurations 1044
Using the GUI 1044
Configuring Statistics Group 1044
Configuring History Group 1045
Configuring Event Group 1046
Configuring Alarm Group 1047
Using the CLI 1049
Configuring Statistics 1049
Configuring History 1051
Configuring Event 1052
Configuring Alarm 1053
Configuration Example 1056
Network Requirements 1056
Configuration Scheme 1057
Using the GUI 1057
Using the CLI 1062
Appendix: Default Parameters 1068

Diagnosing the Device & Network

Diagnosing the Device 1073
Using the GUI 1073
Using the CLI 1074
Diagnosing the Network 1075
Using the GUI 1075
Troubleshooting with Ping Testing 1075
Troubleshooting with Tracert Testing 1076
Using the CLI 1077
Configuring the Ping Test 1077
Configuring the Tracert Test 1078
Appendix: Default Parameters 1079

Configuring System Logs

Overview 1081

System Logs Configurations 1082
Using the GUI 1083
Configuring the Local Logs 1083
Configuring the Remote Logs 1083
Backing up the Logs 1084
Viewing the Log Table 1085
Using the CLI 1086
Configuring the Local Logs 1086
Configuring the Remote Logs 1087
Configuration Example 1089
Network Requirements 1089
Configuration Scheme 1089
Using the GUI 1089
Using the CLI 1090
Appendix: Default Parameters 1091

About This Guide

This Configuration Guide provides information for managing T2600G Series Switches. Please read this guide carefully before operation.

Intended Readers

This Guide is intended for network managers familiar with IT concepts and network terminologies.

Conventions

Some models featured in this guide may be unavailable in your country or region. For local sales information, visit https://www.tp-link.com.

When using this guide, please notice that features of the switch may vary slightly depending on the model and software version you have. All screenshots, images, parameters and descriptions documented in this guide are used for demonstration only.

The information in this document is subject to change without notice. Every effort has been made in the preparation of this document to ensure accuracy of the contents, but all statements, information, and recommendations in this document do not constitute the warranty of any kind, express or implied. Users must take full responsibility for their application of any products.

In this Guide, the following conventions are used:

The symbol  stands for *Note*. Notes contains suggestions or references that helps you make better use of your device.

- For GUI:

Menu Name > Submenu Name > Tab page indicates the menu structure. **SYSTEM > System Info > System Summary** means the System Summary page under the System Info menu option that is located under the SYSTEM menu.

Bold font indicates a button, a toolbar icon, menu or menu item.

- For CLI:

Bold Font	An unalterable keyword. For example: **show logging**

Normal Font	A constant (several options are enumerated and only one can be selected). For example: **no bandwidth** {all | ingress | egress}
{}	Items in braces { } are required.
[]	Items in square brackets [ ] are optional.
|	Alternative items are grouped in braces and separated by vertical bars |. For example: **speed** {10 | 100 | 1000}
Italic Font	A variable (an actual value must be assigned). For example: **bridge aging-time** *aging-time*

Common combination:

{[ ][ ][ ]}	A least one item in the square brackets must be selected. For example: **bandwidth** {[**ingress** *ingress-rate*] [**egress** *egress-rate*]} This command can be used on three occasions: **bandwidth ingress** *ingress-rate* is used to restrict ingress bandwidth. **bandwidth egress** *egress-rate* is used to restrict egress bandwidth. **bandwidth ingress** *ingress-rate* **egress** *egress-rate* is used to restrict ingress and egress bandwidth.

More Information

- The latest software and documentations can be found at Download Center at https://www.tp-link.com/support.
- The Installation Guide (IG) can be found where you find this guide or inside the package of the switch.
- Specifications can be found on the product page at https://www.tp-link.com.
- A Technical Support Forum is provided for you to discuss our products at https://forum.tp-link.com.
- Our Technical Support contact information can be found at the Contact Technical Support page at https://www.tp-link.com/support.

Part 1

Accessing the Switch

CHAPTERS

1. Overview
2. Web Interface Access
3. Command Line Interface Access

1 Overview

You can access and manage the switch using the GUI (Graphical User Interface, also called web interface in this text) or using the CLI (Command Line Interface). There are equivalent functions in the web interface and the command line interface, while web configuration is easier and more visual than the CLI configuration. You can choose the method according to their available applications and preference.

2 Web Interface Access

You can access the switch's web interface through the web-based authentication. The switch uses two built-in web servers, HTTP server and HTTPS server, for user authentication.


The following example shows how to login via the HTTP server.

2.1 Login

To manage your switch through a web browser in the host PC:


1) Make sure that the route between the host PC and the switch is available.
2) Launch a web browser. The supported web browsers include, but are not limited to, the following types:
   - IE 8.0, 9.0, 10.0, 11.0
   - Firefox 26.0, 27.0
   - Chrome 32.0, 33.0
3) Enter the switch's IP address in the web browser's address bar. The switch's default IP address is 192.168.0.1.

   Figure 2-1 Enter the Switch's IP Addresss in the Browser




4) Enter the username and password in the pop-up login window. Use **admin** for both username and password in lower case letters.

   Figure 2-2 Login Authentication

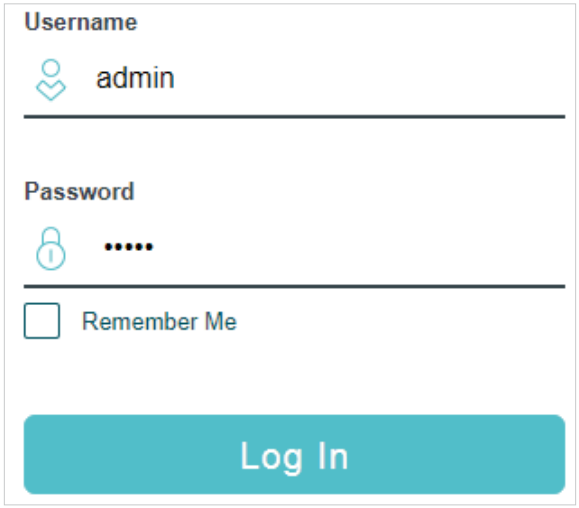

5) The typical web interface displays below. You can view the switch's running status and configure the switch on this interface.

Figure 2-3 Web Interface

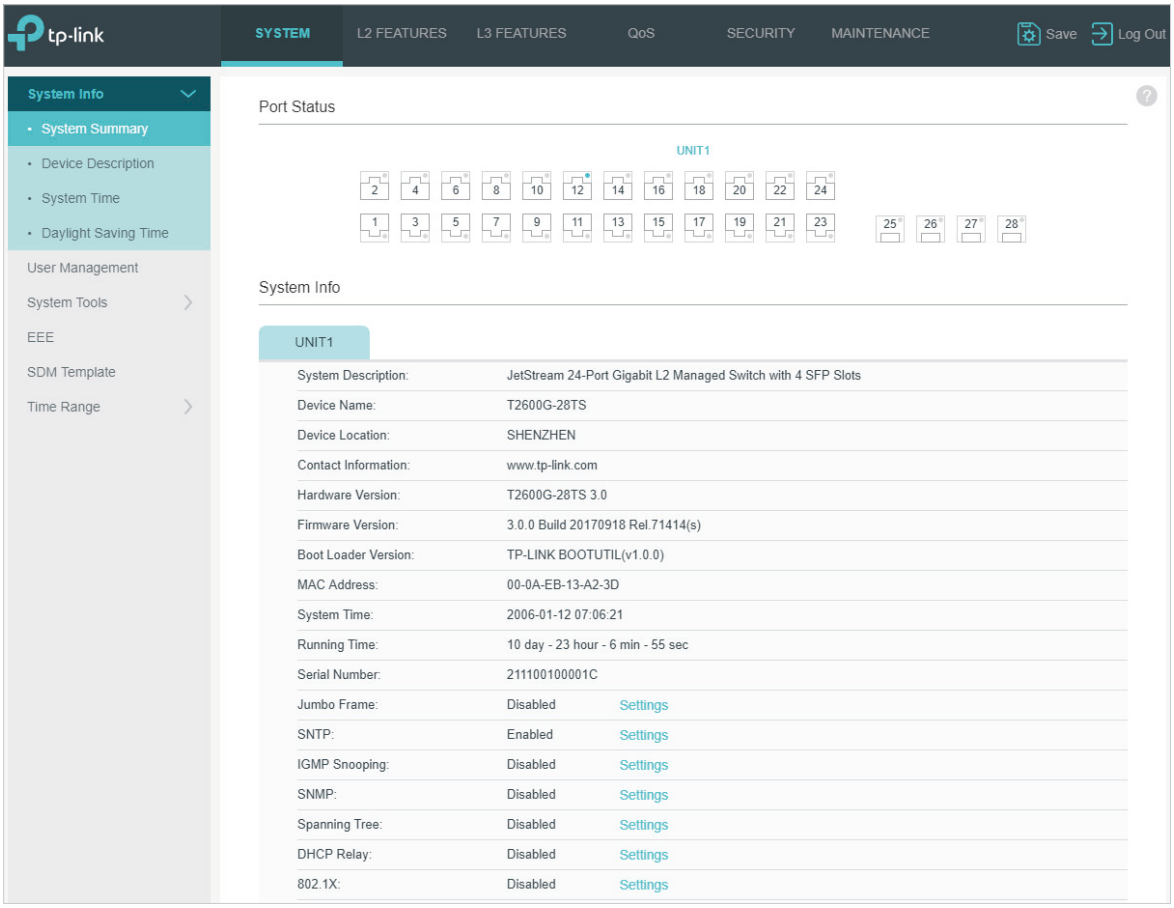


2.2 Save the Configuration File

The switch's configuration files fall into two types: the running configuration file and the start-up configuration file.

After you perform configurations on the sub-interfaces and click **Apply**, the modifications will be saved in the running configuration file. The configurations will be lost when the switch reboots.

If you need to keep the configurations after the switch reboots, please click Save on the main interface to save the configurations in the start-up configuration file.

Figure 2-4 Save the Configuration

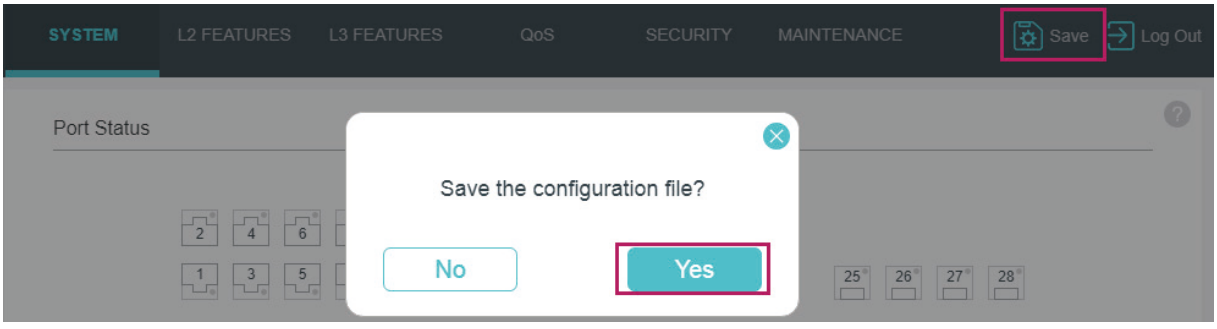


2.3 Disable the Web Server

You can shut down the HTTP server or HTTPS server to block any access to the web interface.

Go to **SECURITY > Access Security > HTTP Config**, disable the HTTP server and click **Apply**.

Figure 2-5 Shut Down HTTP Server

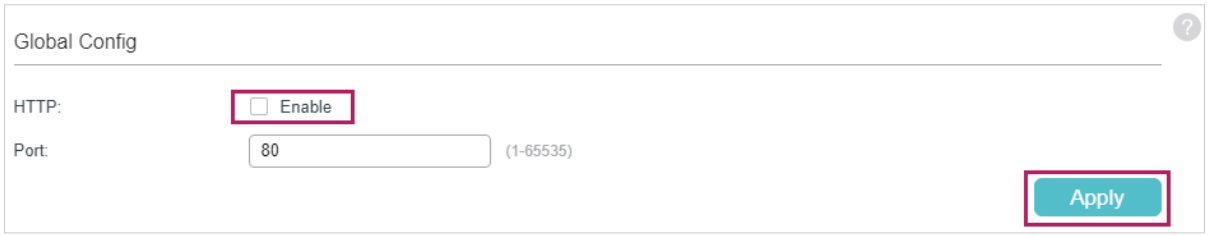

Go to **SECURITY > Access Security > HTTPS Config**, disable the HTTPS server and click **Apply**.

Figure 2-6 Disbale the HTTPS Server



2.4 Configure the Switch's IP Address and Default Gateway


If you want to access the switch via a specified port (hereafter referred to as the access port), you can configure the port as a routed port and specify its IP address, or configure the IP address of the VLAN which the access port belongs to.

- Change the IP Address

By default, all the ports belong to VLAN 1 with the VLAN interface IP 192.168.0.1. The following example shows how to change the switch's default access IP address 192.168.0.1.


1) Go to **L3 FEATURES > Interface**. The default access IP address in VLAN 1 in the Interface List. Click **Edit IPv4** to modify VLAN1's IP address.

Figure 2-7 Change VLAN1's IP Address

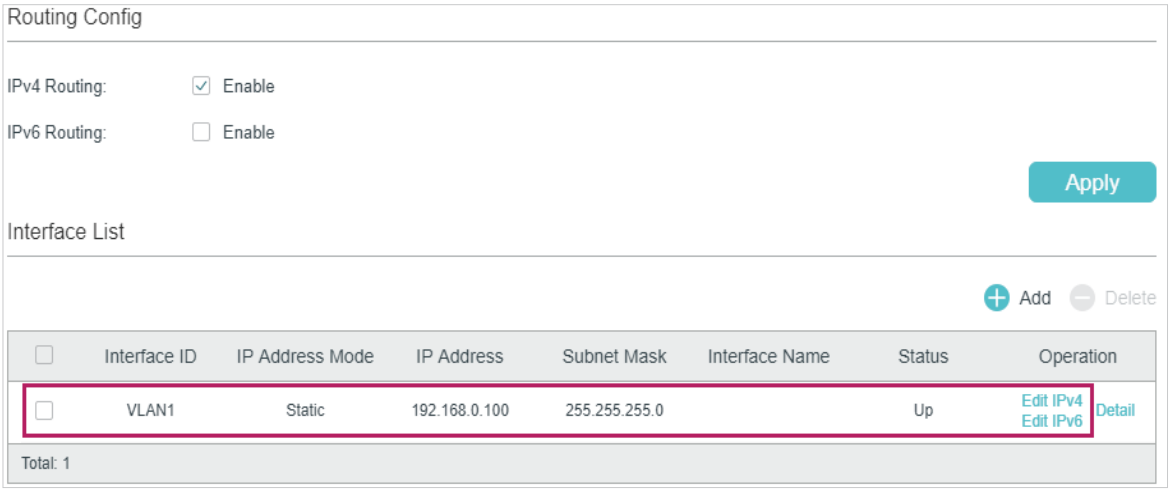

2) Choose the **IP Address Mode** as **Static**. Enter the new access address in the **IP Address** field and click **Apply**. Make sure that the route between the host PC and the switch's new IP address is available.

Figure 2-8 Specify the IP Address

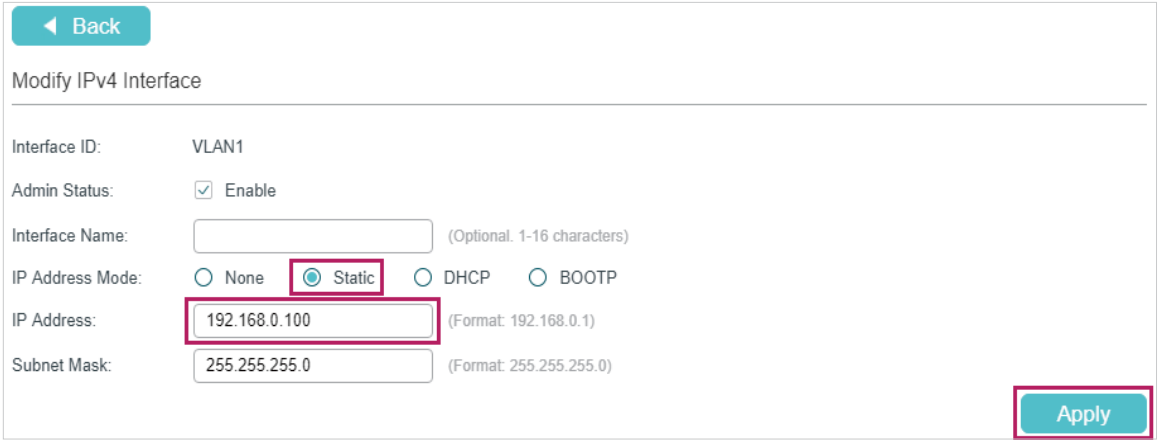

3) Enter the new IP address in the web browser to access the switch.


4) Click Save to save the settings.

- Configure the Default Gateway

The following example shows how to configure the switch's gateway. By default, the switch has no default gateway.

1) Go to page **L3 FEATURES > Static Routing > IPv4 Static Routing Config**. Click Add to load the following page and configure the parameters related to the switch's gateway. Then click **Create**.

Figure 2-9 Configure the Default Gateway

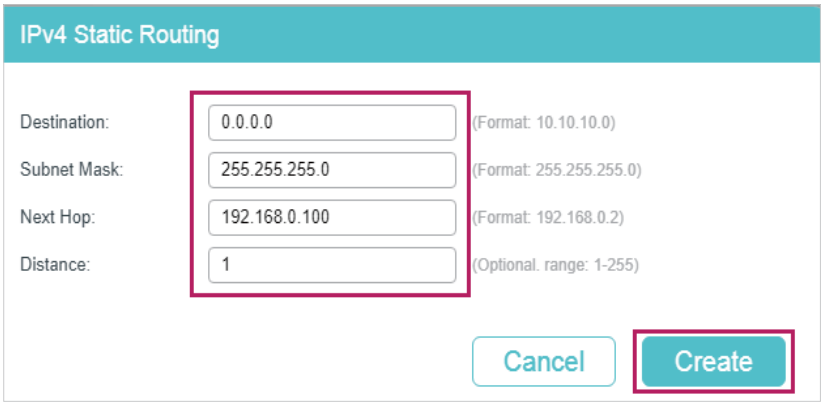


Destination	Specify the destination as 0.0.0.0.
Subnet Mask	Specify the subnet mask as 255.255.255.0.
Next Hop	Configure your desired default gateway as the next hop's IP address.
Distance	Specify the distance as 1.

2) Click Save to save the settings.

3) Check the routing table to verify the default gateway you configured. The entry marked in red box displays the valid default gateway.

Figure 2-10 View the Default Gateway

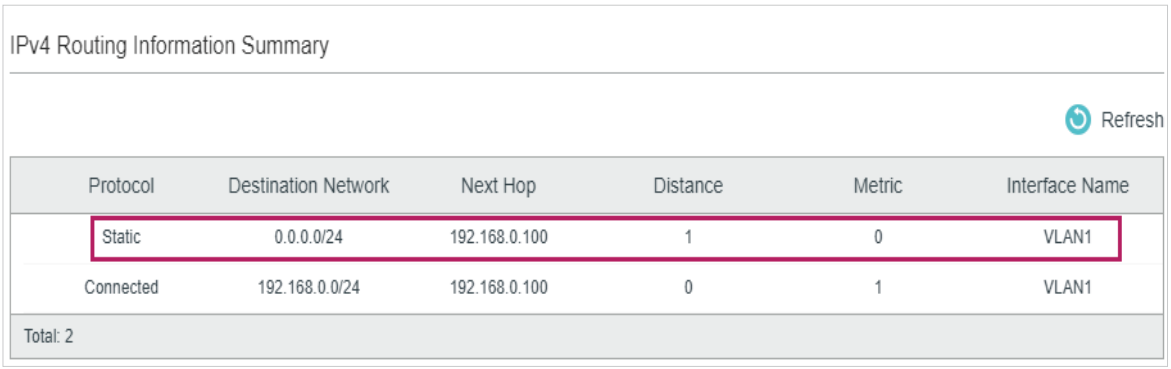

3 Command Line Interface Access

Users can access the switch's command line interface through the console (only for switch with console port), Telnet or SSH connection, and manage the switch with the command lines.

Console connection requires the host PC connecting to the switch's console port directly, while Telnet and SSH connection support both local and remote access.

The following table shows the typical applications used in the CLI access.

Table 3-1 Method list


Method	Using Port	Typical Applications
Console	Console port (connected directly)	Hyper Terminal
Telnet	RJ-45 port	CMD
SSH	RJ-45 port	Putty

3.1 Console Login (only for switch with console port)

Follow these steps to log in to the switch via the Console port:


1) Connect the PC or terminal to the Console port on the switch with the serial cable.
2) Start the terminal emulation program (such as the Hyper Terminal) on the PC and configure the terminal emulation program as follows:
   - Baud Rate: 38400bps
   - Data Bits: 8
   - Parity: None
   - Stop Bits: 1
   - Flow Control: None
3) Press **Enter** in the main window and **Switch>** will appear, indicating that you have successfully logged in to the switch and you can use the CLI now.

Figure 3-1 CLI Main Window

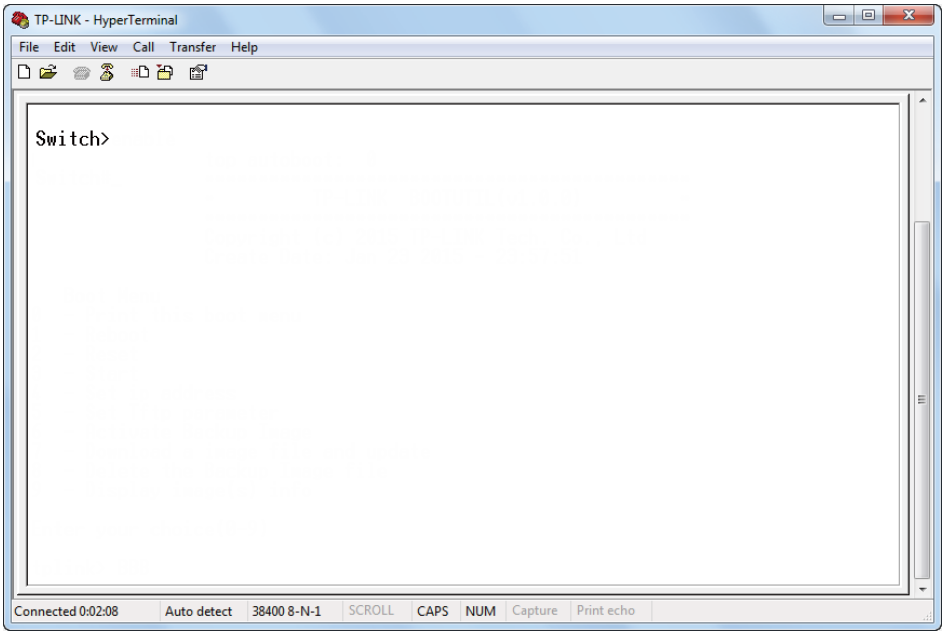

4) Enter **enable** to enter the User EXEC Mode to further configure the switch.

Figure 3-2 User EXEC Mode

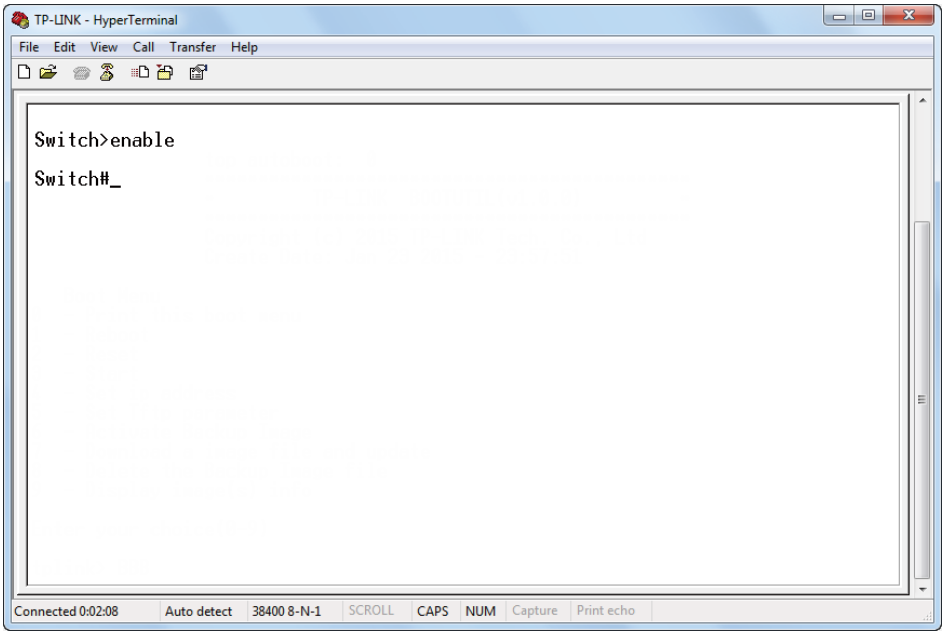

Note:

In Windows XP, go to **Start > All Programs > Accessories > Communications > Hyper Terminal** to open the Hyper Terminal and configure the above settings to log in to the switch.

3.2 Telnet Login

The switch supports Login Local Mode for authentication by default.

Login Local Mode: Username and password are required, which are both admin by default.

The following steps show how to manage the switch via the Login Local Mode:


1) Make sure the switch and the PC are in the same LAN (Local Area Network). Click **Start** and type in **cmd** in the Search bar and press **Enter**.

Figure 3-3 Open the CMD Window




2) Type in **telnet 192.168.0.1** in the CMD window and press **Enter**.

Figure 3-4 Log In to the Switch

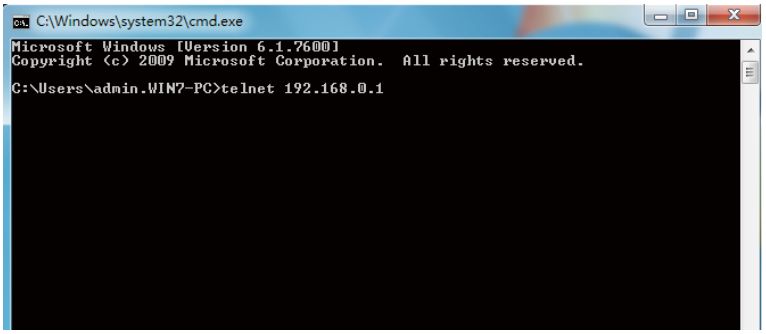


3) Type in the login username and password (both **admin** by default). Press **Enter** and you will enter User EXEC Mode.

Figure 3-5 Enter User EXEC Mode

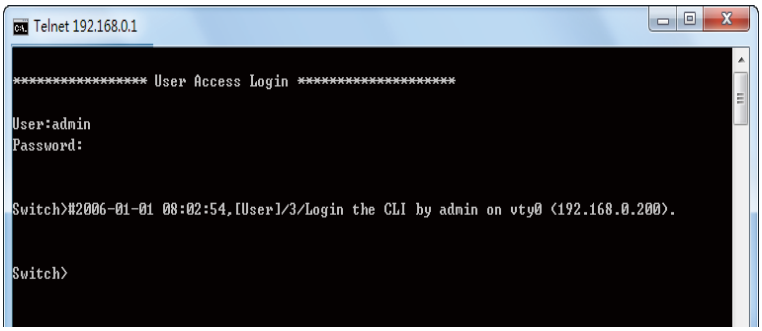

4) Type in **enable** command and you will enter Privileged EXEC Mode. By default no password is needed. Later you can set a password for users who want to access the Privileged EXEC Mode.

Figure 3-6 Enter Privileged EXEC Mode

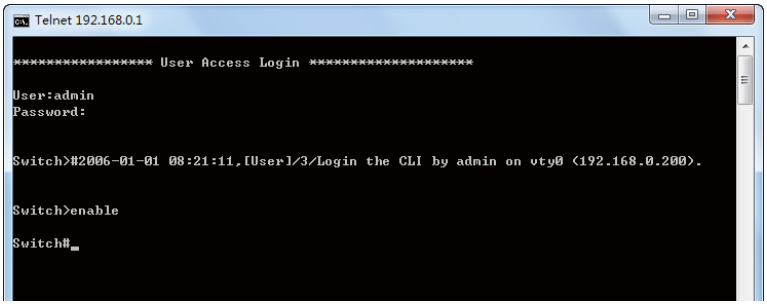

Now you can manage your switch with CLI commands through Telnet connection.


3.3 SSH Login

SSH login supports the following two modes: Password Authentication Mode and Key Authentication Mode. You can choose one according to your needs:

- Password Authentication Mode: Username and password are required, which are both **admin** by default.
- Key Authentication Mode (Recommended): A public key for the switch and a private key for the client software (PuTTY) are required. You can generate the public key and the private key through the PuTTY Key Generator.

Before logging in via SSH, follow the steps below to enable SSH on the terminal emulation program:


Figure 3-7 Enable SSH

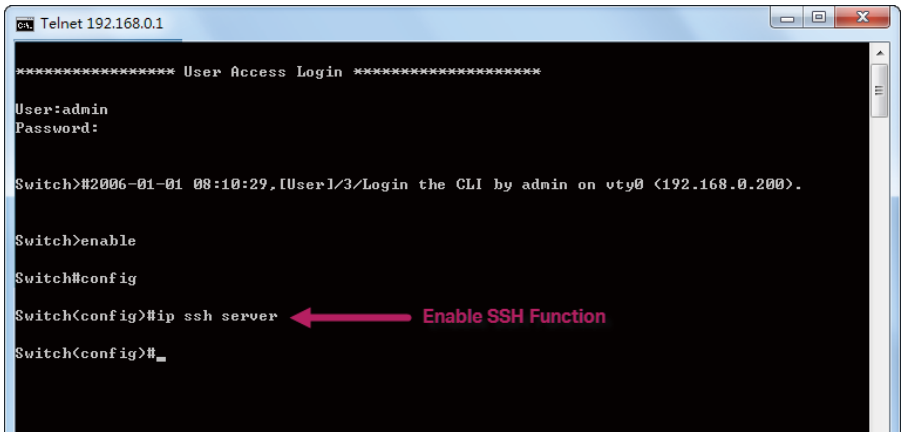

Password Authentication Mode


1) Open PuTTY and go to the Session page. Enter the IP address of the switch in the **Host Name** field and keep the default value 22 in the **Port** field; select **SSH** as the Connection type. Click **Open**.

Figure 3-8 Configurations in PuTTY

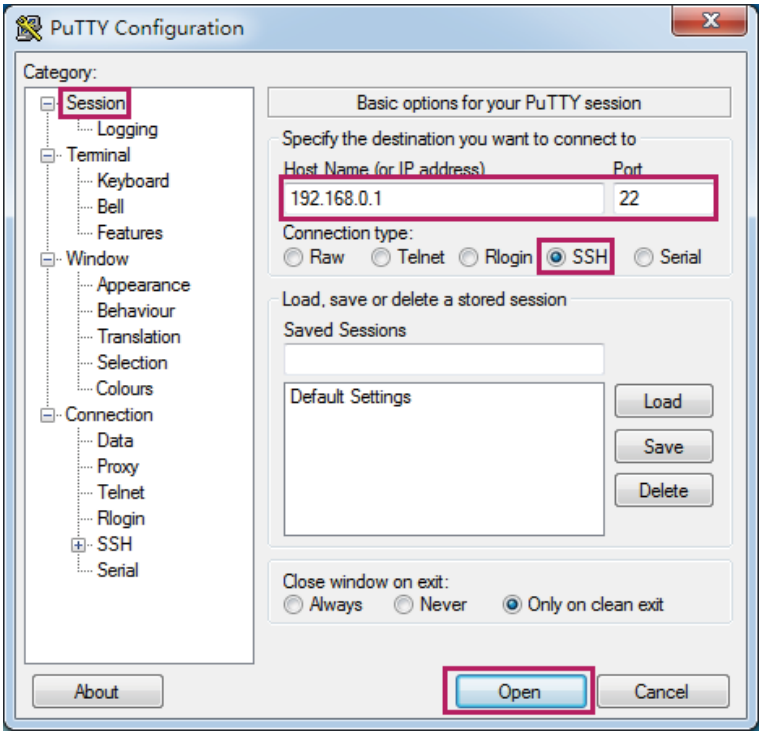

2) Enter the login username and password to log in to the switch, and you can continue to configure the switch.


Figure 3-9 Log In to the Switch

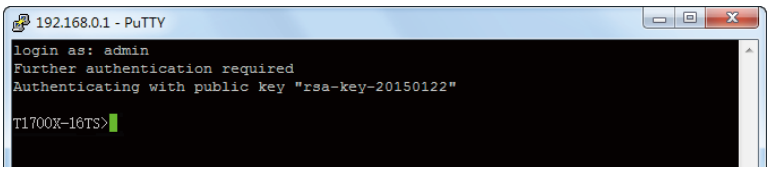

Key Authentication Mode

1) Open the PuTTY Key Generator. In the Parameters section, select the key type and enter the key length. In the **Actions** section, click **Generate** to generate a public/private key pair. In the following figure, an SSH-2 RSA key pair is generated, and the length of each key is 1024 bits.

Figure 3-10 Generate a Public/Private Key Pair

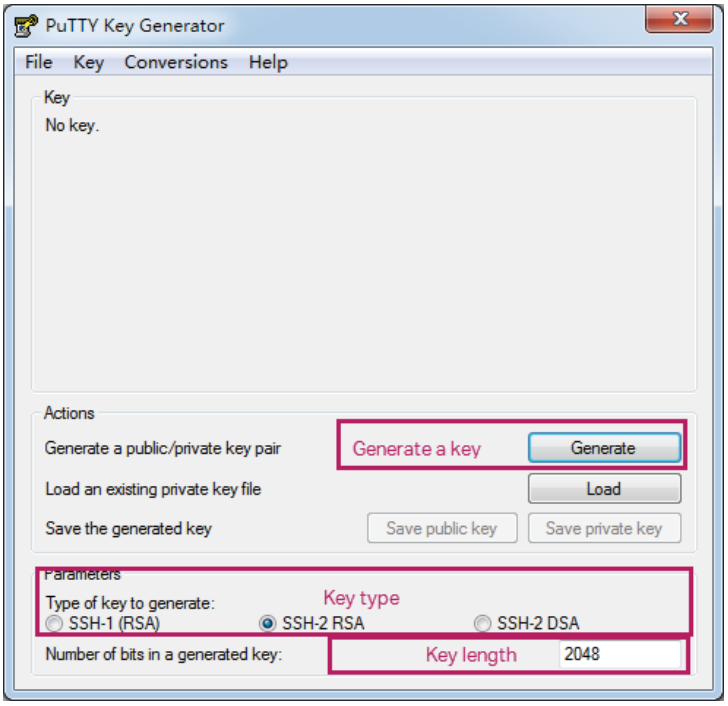


Note:

- The key length should be between 512 and 3072 bits.
- You can accelerate the key generation process by moving the mouse quickly and randomly in the Key section.


2) After the keys are successfully generated, click **Save public key** to save the public key to a TFTP server; click **Save private key** to save the private key to the host PC.

Figure 3-11 Save the Generated Keys

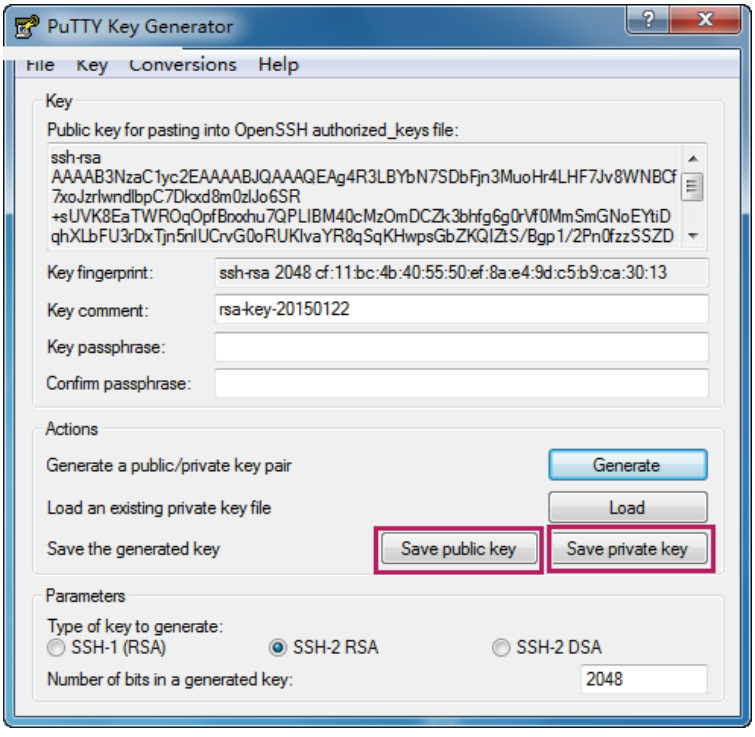

3) On Hyper Terminal, download the public key file from the TFTP server to the switch as shown in the following figure:

Figure 3-12 Download the Public Key to the Switch

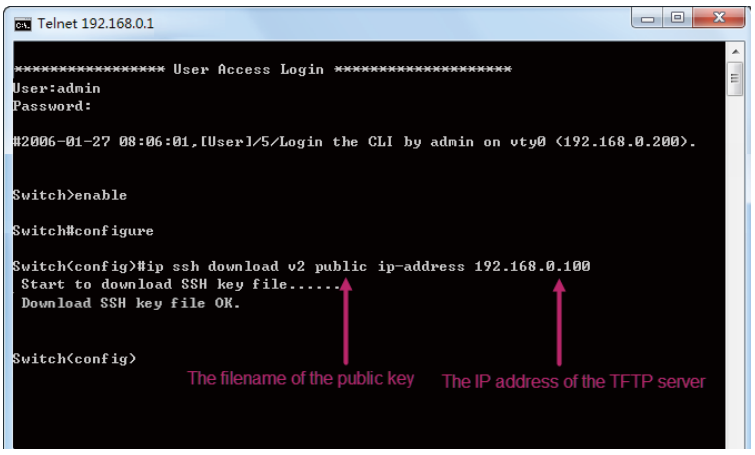


Note:

- The key type should accord with the type of the key file. In the above CLI, v1 corresponds to SSH-1 (RSA), and v2 corresponds to SSH-2 RSA and SSH-2 DSA.
- The key downloading process cannot be interrupted.


4) After the public key is downloaded, open PuTTY and go to the **Session** page. Enter the IP address of the switch and select **SSH** as the Connection type (keep the default value in the Port field).

Figure 3-13 Configure the Host Name and Connection Type

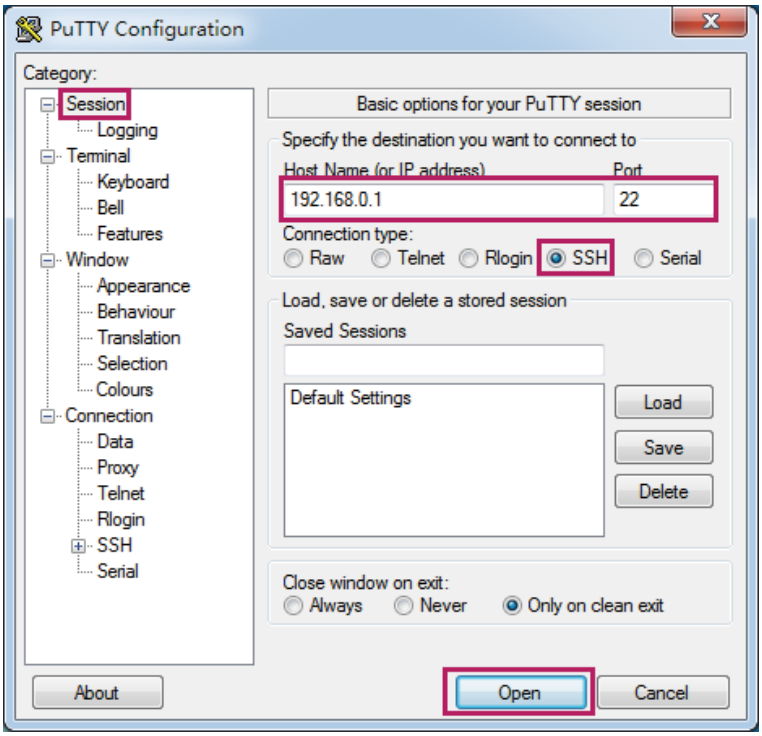


5) Go to **Connection > SSH > Auth**. Click **Browse** to download the private key file to PuTTY. Click **Open** to start the connection and negotiation.

Figure 3-14 Download the Private Key to PuTTY

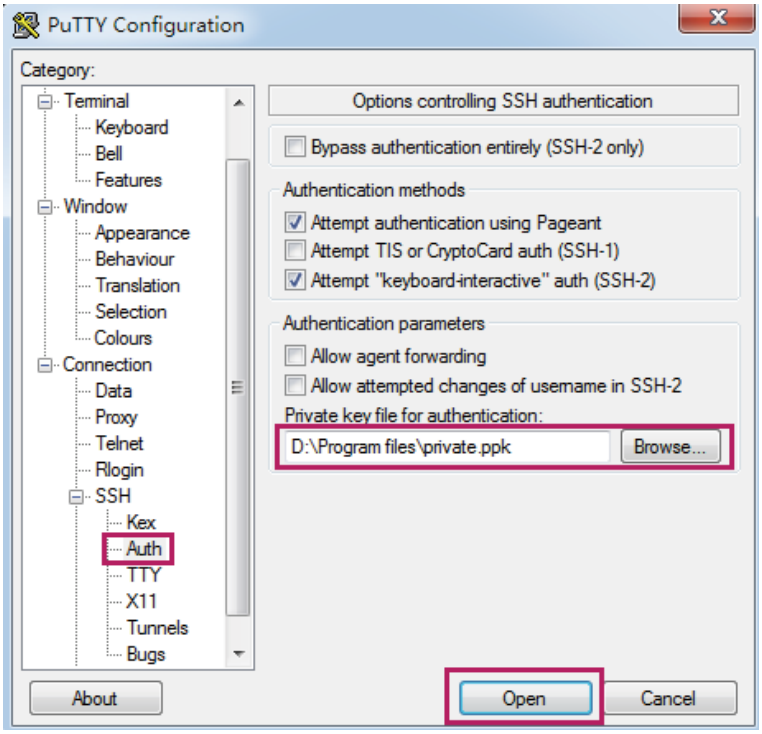

6) After negotiation is completed, enter the username to log in. If you can log in without entering the password, the key authentication completed successfully.

Figure 3-15 Log In to the Switch

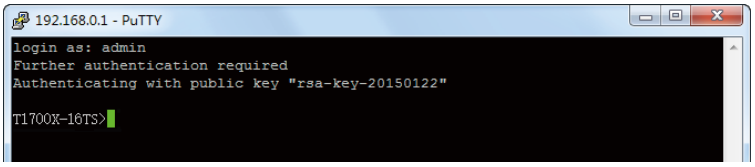


3.4 Disable Telnet login

You can shut down the Telnet function to block any Telnet access to the CLI interface.

- Using the GUI:

Go to **SECURITY > Access Security > Telnet Config**, disable the Telnet function and click **Apply**.

Figure 3-16 Disable Telnet login

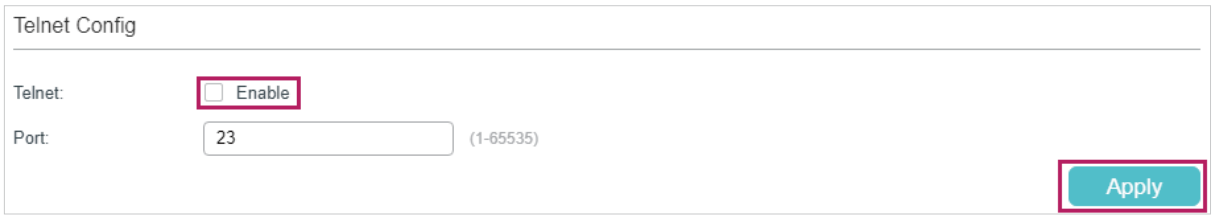

- Using the CLI:

Switch#configure

Switch(config)#telnet disable

3.5 Disable SSH login

You can shut down the SSH server to block any SSH access to the CLI interface.

- Using the GUI:

Go to **SECURITY > Access Security > SSH Config**, disable the SSH server and click **Apply**.

Figure 3-17 Shut down SSH server



- Using the CLI:

Switch#configure

Switch(config)#no ip ssh server

3.6 Copy running-config startup-config

The switch's configuration files fall into two types: the running configuration file and the start-up configuration file.

After you enter each command line, the modifications will be saved in the running configuration file. The configurations will be lost when the switch reboots.

If you need to keep he configurations after the switch reboots, please user the command **copy running-config startup-config** to save the configurations in the start-up configuration file.

Switch(config)#end

Switch#copy running-config startup-config

3.7 Change the Switch's IP Address and Default Gateway

If you want to access the switch via a specified port (hereafter referred to as the access port), you can configure the port as a routed port and specify its IP address, or configure the IP address of the VLAN which the access port belongs to.

- Change the IP Address

By default, all the ports belong to VLAN 1 with the VLAN interface IP 192.168.0.1/24. In the following example, we will show how to replace the switch's default access IP address 192.168.0.1/24 with 192.168.0.10/24.

Switch#configure

Switch(config)#interface vlan 1

Switch(config-if)#ip address 192.168.0.10 255.255.255.0

The connection will be interrupted and you should telnet to the switch's new IP address 192.168.0.10.

C:\Users\Administrator>telnet 192.168.0.10

User:admin

Password:admin

Switch>enable

Switch#copy running-config startup-config

- Configure the Default Gateway

In the following example, we will show how to configure the switch's gateway as 192.168.0.100. By default, the switch has no default gateway.

Switch#configure

Switch(config)#ip route 0.0.0.0 255.255.255.0 192.168.0.100 1

Switch(config)#end

Switch#copy running-config startup-config

Part 2

Managing System

CHAPTERS

1. System
2. System Info Configurations
3. User Management Configurations
4. System Tools Configurations
5. EEE Configuration
6. PoE Configurations
7. SDM Template Configuration
8. Time Range Configuration
9. Example for PoE Configurations
10. Appendix: Default Parameters

1 System

1.1 Overview

In System module, you can view the system information and configure the system parameters and features of the switch.

1.2 Supported Features

System Info

You can view the switch's port status and system information, and configure the device description, system time, and daylight saving time.

User Management

You can manage the user accounts for login to the switch. There are multiple user types which have different access levels, and you can create different user accounts according to your need.

System Tools

You can configure the boot file of the switch, backup and restore the configurations, update the firmware, reset the switch, and reboot the switch.

EEE

EEE (Energy Efficient Ethernet) is used to save power consumption of the switch during periods of low data activity. You can simply enable this feature on ports to allow power reduction.

PoE

Note:

Only T2600G-28MPS supports PoE feature.

Power over Ethernet (PoE) is a remote power supply function. With this function, the switch can supply power to the connected devices over twisted-pair cable.

Some devices such as IP phones, access points (APs) and cameras may be located far away from the AC power source in actual use. PoE can provide power for these devices without requiring to deploy power cables. This allows a single cable to provide both data connection and electric power to devices.

IEEE 802.3af and 802.3at are both PoE standards. The standard process of PoE power supply contains powered-device discovery, power administration, disconnect detection and optional power-device power classification.

- PSE

Power sourcing equipment (PSE) is a device that provides power for PDs on the Ethernet, for example, the PoE switch. PSE can detect the PDs and determine the device power requirements.

- PD

Powered device (PD) is a device receiving power from the PSE, for example, IP phones and access points. According to whether PDs comply with IEEE standard, they can be classified into standard PDs and non-standard PDs. Only standard PDs can be powered via TP-Link PoE switches.

SDM Template

SDM (Switch Database Management) Template is used to prioritize hardware resources for certain features. The switch provides three templates which allocate different hardware resources for different usage, and you can choose one according to your need.

Time Range

With this feature, you can configure a time range and bind it to a PoE port or an ACL rule.

2 System Info Configurations

With system information configurations, you can:

- View the System Summary
- Configure the Device Description
- Configure the System Time
- Configure the Daylight Saving Time

2.1 Using the GUI

2.1.1 Viewing the System Summary

Choose the menu **SYSTEM** > **System Info** > **System Summary** to load the System Summary page. You can view the port status and system information of the switch.

Viewing the Port Status

In the **Port Status** section, you can view the status and bandwidth utilization of each port.

Figure 2-1 Viewing the System Summary




The following table introduces the meaning of each port status:

Port Status	Indication
	Indicates that the corresponding 1000Mbps port is not connected to a device.
	Indicates that the corresponding 1000Mbps port is at the speed of 1000Mbps.
	Indicates that the corresponding 1000Mbps port is at the speed of 10Mbps or 100Mbps.
	Indicates that the corresponding SFP port is not connected to a device.
	Indicates the SFP port is at the speed of 1000Mbps.
	Indicates the SFP port is at the speed of 100Mbps.

You can move your cursor to a port to view the detailed information of the port.


Figure 2-2 Port Information

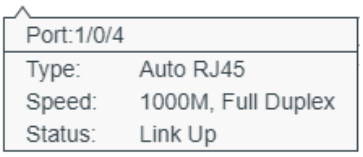

Port Information	Indication
Port	Displays the port number.
Type	Displays the type of the port.
Speed	Displays the maximum transmission rate and duplex mode of the port.
Status	Displays the connection status of the port.

You can click a port to view the bandwidth utilization on this port.

Figure 2-3 Bnadwidth Utilization

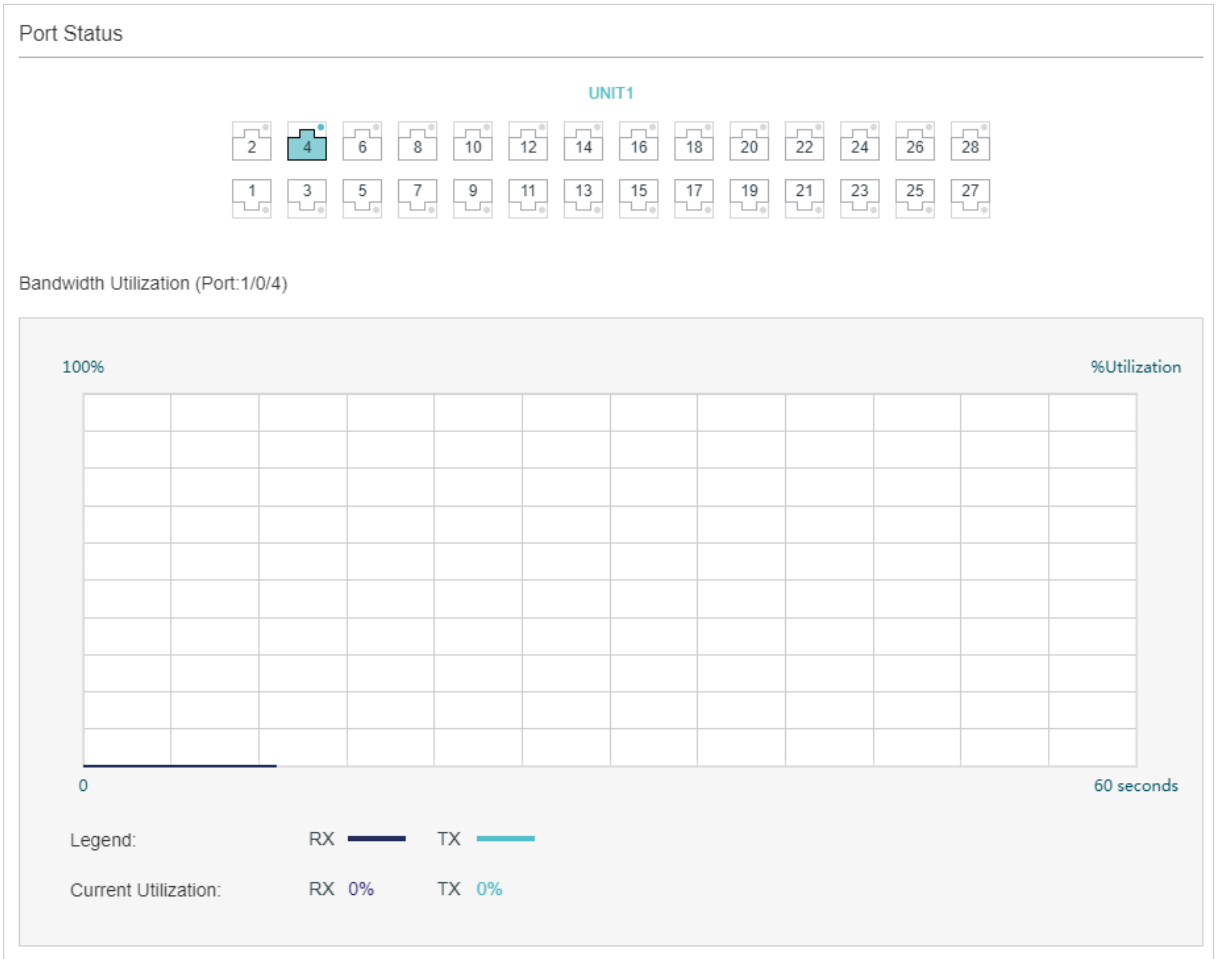


RX	Displays the bandwidth utilization of receiving packets on this port.

TX	Displays the bandwidth utilization of sending packets on this port.

Viewing the System Information

In the **System Info** section, you can view the system information of the switch.

Figure 2-4 System Information

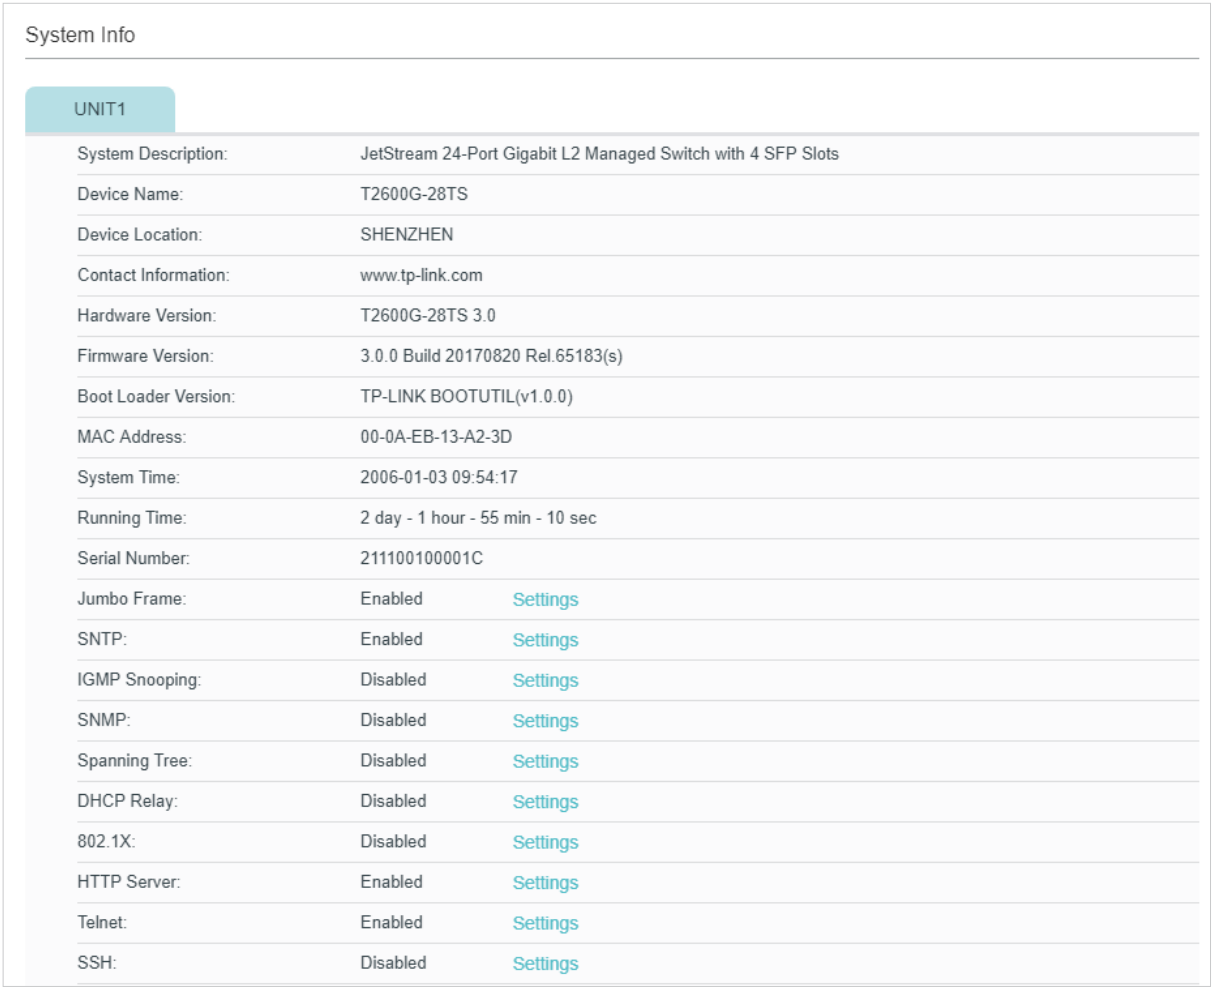

System Description	Displays the system description of the switch.
Device Name	Displays the name of the switch. You can edit it on the Device Description page.
Device Location	Displays the location of the switch. You can edit it on the Device Description page.
Contact Information	Displays the contact information of the switch. You can edit it on the Device Description page.
Hardware Version	Displays the hardware version of the switch.
Firmware Version	Displays the firmware version of the switch.

Boot Loader Version	Displays the boot loader version of the switch.
MAC Address	Displays the MAC address of the switch.
System Time	Displays the system time of the switch.
Running Time	Displays the running time of the switch.
Serial Number	Displays the serial number of the switch.
Jumbo Frame	Displays whether Jumbo Frame is enabled. You can click **Settings** to jump to the Jumbo Frame configuration page.
SNTP	Displays whether the switch gets system time from NTP Server. You can click **Settings** to jump to the System Time configuration page.
IGMP Snooping	Displays whether IGMP Snooping is enabled. You can click **Settings** to jump to the IGMP Snooping configuration page.
SNMP	Displays whether SNMP is enabled. You can click **Settings** to jump to the SNMP configuration page.
Spanning Tree	Displays whether Spanning Tree is enabled. You can click **Settings** to jump to the Spanning Tree configuration page.
DHCP Relay	Displays whether DHCP Relay is enabled. You can click **Settings** to jump to the DHCP Relay configuration page.
802.1x	Displays whether 802.1x is enabled. You can click **Settings** to jump to the 802.1x configuration page.
HTTP Server	Displays whether HTTP server is enabled. You can click **Settings** to jump to the HTTP configuration page.
Telnet	Displays whether Telnet is enabled. You can click **Settings** to jump to the Telnet configuration page.
SSH	Displays whether SSH is enabled. You can click **Settings** to jump to the SSH configuration page.

2.1.2 Configuring the Device Description

Choose the menu **SYSTEM** > **System Info** > **Device Description** to load the following page.

Figure 2-5 Configuring the Device Description



1) In the **Device Description** section, configure the following parameters.


Device Name	Specify a name for the switch.
Device Location	Enter the location of the switch.
System Contact	Enter the contact information.

2) Click **Apply**.

2.1.3 Configuring the System Time

Choose the menu **SYSTEM** > **System Info** > **System Time** to load the following page.

Figure 2-6 Configuring the System Time

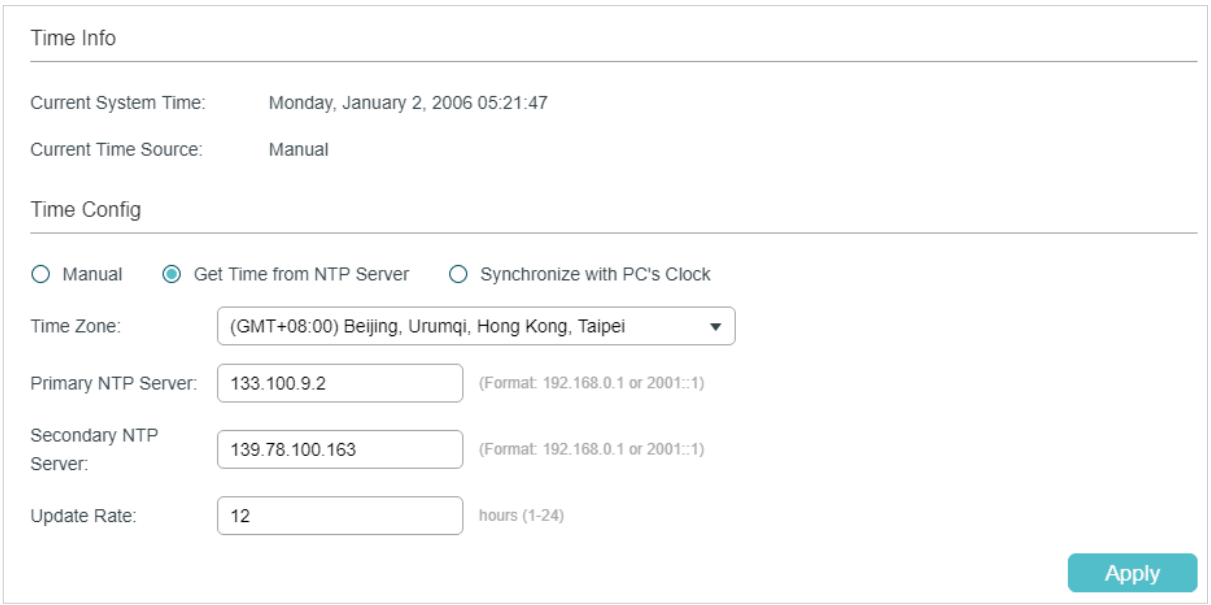

In the **Time Info** section, you can view the current time information of the switch.

Current System Time	Displays the current date and time of the switch.
Current Time Source	Displays how the switch gets the current time.

In the **Time Config** section, follow these steps to configure the system time:

1) Choose one method to set the system time and specify the related parameters.


Manual	Set the system time manually. **Date**: Specify the date of the system. **Time**: Specify the time of the system.
Get Time from NTP Server	Get the system time from an NTP server. Make sure the NTP server is accessible on your network. If the NTP server is on the internet, connect the switch to the internet first. **Time Zone**: Select your local time zone. **Primary Server**: Enter the IP Address of the primary NTP server. **Secondary Server**: Enter the IP Address of the secondary NTP server. Once the primary NTP server is down, the EAP can get the system time from the secondary NTP server. **Update Rate**: Specify the interval the switch fetching time from NTP server, which ranges from 1 to 24 hours.
Synchronize with PC's Clock	Synchronize the system time with the clock of your currently logged-in host.

2) Click **Apply**.

2.1.4 Configuring the Daylight Saving Time

Choose the menu **SYSTEM** > **System Info** > **Daylight Saving Time** to load the following page.

Figure 2-7 Configuring the Daylight Saving Time

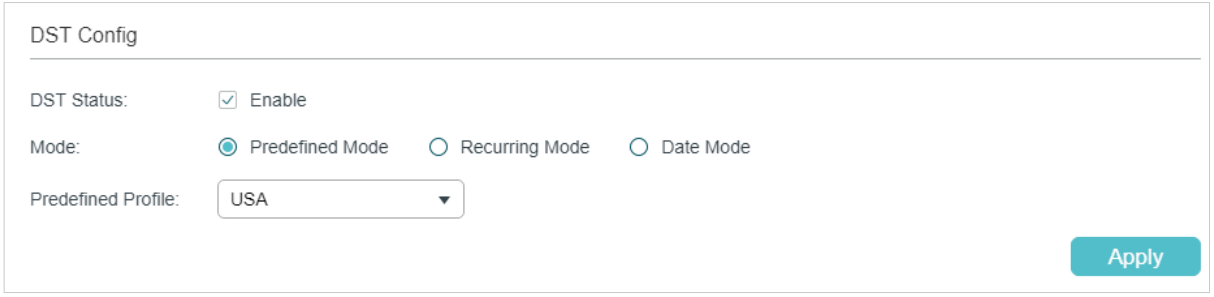

Follow these steps to configure Daylight Saving Time:

1) In the **DST Config** section, enable the Daylight Saving Time function.

2) Choose one method to set the Daylight Saving Time and specify the related parameters.

Predefined Mode	If you select **Predefined Mode**, choose a predefined DST schedule for the switch. **USA**: Select the Daylight Saving Time of the USA. It is from 2: 00 a.m. on the Second Sunday in March to 2:00 a.m. on the First Sunday in November. **Australia**: Select the Daylight Saving Time of Australia. It is from 2:00 a.m. on the First Sunday in October to 3:00 a.m. on the First Sunday in April. **Europe**: Select the Daylight Saving Time of Europe. It is from 1: 00 a.m. on the Last Sunday in March to 1:00 a.m. on the Last Sunday in October. **New Zealand**: Select the Daylight Saving Time of New Zealand. It is from 2: 00 a.m. on the Last Sunday in September to 3:00 a.m. on the First Sunday in April.
Recurring Mode	If you select **Recurring Mode**, specify a cycle time range for the Daylight Saving Time of the switch. This configuration will be used every year. **Offset**: Specify the time to set the clock forward by. **Start Time**: Specify the start time of Daylight Saving Time. The interval between start time and end time should be more than 1 day and less than 1 year(365 days). **End Time**: Specify the end time of Daylight Saving Time. The interval between start time and end time should be more than 1 day and less than 1 year (365 days).
Date Mode	If you select **Date Mode**, specify an absolute time range for the Daylight Saving Time of the switch. This configuration will be used only one time. **Offset**: Specify the time to set the clock forward by. **Start Time**: Specify the start time of Daylight Saving Time. The interval between start time and end time should be more than 1 day and less than 1 year(365 days). **End Time**: Specify the end time of Daylight Saving Time. The interval between start time and end time should be more than 1 day and less than 1 year (365 days).

3) Click **Apply**.

2.2 Using the CLI

2.2.1 Viewing the System Summary

On privileged EXEC mode or any other configuration mode, you can use the following commands to view the system information of the switch:

show interface status [fastEthernet *port* **| gigabitEthernet** *port* **| ten-gigabitEthernet** *port* **]**

View status of the interface.

port: Enter the number of the Ethernet port.

show system-info

View the system information including System Description, Device Name, Device Location, System Contact, Hardware Version, Firmware Version, System Time, Run Time and so on.

The following example shows how to view the interface status and the system information of the switch.

Switch#show interface status

Port	Status	Speed	Duplex	FlowCtrl	Jumbo	Active-Medium
Gi1/0/1	LinkDown	N/A	N/A	N/A	Disable	Copper
Gi1/0/2	LinkDown	N/A	N/A	N/A	Disable	Copper
Gi1/0/3	LinkUp	1000M	Full	Disable	Disable	Copper

...

Switch#show system-info

System Description - JetStream 24-Port Gigabit L2 Managed Switch with 4 SFP Slots

System Name - T2600G-28TS

System Location - SHENZHEN

Contact Information - www.tp-link.com

Hardware Version - T2600G-28TS 3.0

Software Version - 3.0.0 Build 20170820 Rel.65183(s)

Bootloader Version - TP-LINK BOOTUTIL(v1.0.0)

Mac Address - 00-0A-EB-13-A2-3D

Serial Number - 211100100001C

System Time - 2006-01-03 10:10:37

Running Time - 2 day - 2 hour - 11 min - 30 sec

2.2.2 Configuring the Device Description

Follow these steps to configure the device description:

Step 1 **configure**

Enter global configuration mode.

Step 2	**hostname [** *hostname* **]** Specify the system name of the switch. *hostname*: Enter the device name. The length of the name ranges from 1 to 32 characters. By default, it is the model name of the switch.
Step 3	**location [** *location* **]** Specify the system location of the switch. *location*: Enter the device location. It should consist of no more than 32 characters. By default, it is "SHENZHEN".
Step 4	**contact-info [** *contact-info* **]** Specify the system contact Information. *contact-info*: Enter the contact information. It should consist of no more than 32 characters. By default, it is "www.tp-link.com".
Step 5	**show system-info** Verify the system information including system Description, Device Name, Device Location, System Contact, Hardware Version, Firmware Version, System Time, Run Time and so on.
Step 6	**end** Return to privileged EXEC mode.
Step 7	**copy running-config startup-config** Save the settings in the configuration file.

The following example shows how to set the device name as Switch_A, set the location as BEIJING and set the contact information as https://www.tp-link.com.

Switch#configure

Switch(config)#hostname Switch_A

Switch(config)#location BEIJING

Switch(config)#contact-info https://www.tp-link.com

Switch(config)#show system-info

System Description - JetStream 24-Port Gigabit L2 Managed Switch with 4 SFP Slots

System Name - Switch_A

System Location - BEIJING

Contact Information - https://www.tp-link.com

...

Switch(config)#end

Switch#copy running-config startup-config

2.2.3 Configuring the System Time

Follow these steps to configure the system time:

Note:

The mode of Synchronize with PC's Clock does not support CLI command.

Step 1 **configure**

Enter global configuration mode.

Step 2 Use the following command to set the system time manually:

system-time manual *time*

Configure the system time manually.

time: Specify the date and time manually in the format of MM/DD/YYYY-HH:MM:SS. The valid value of the year ranges from 2000 to 2037.

Use the following command to set the system time by getting time from the NTP server. Ensure the NTP server is accessible. If the NTP server is on the internet, connect the switch to the internet first.

system-time ntp { *timezone* **} {** *ntp-server* **} {** *backup-ntp-server* **} {** *fetching-rate* **}**

timezone: Enter your local time-zone, which ranges from UTC-12:00 to UTC+13:00.

The detailed information of each time-zone are displayed as follows:

UTC-12:00 —— TimeZone for International Date Line West.

UTC-11:00 —— TimeZone for Coordinated Universal Time-11.

UTC-10:00 —— TimeZone for Hawaii.

UTC-09:00 —— TimeZone for Alaska.

UTC-08:00 —— TimeZone for Pacific Time (US Canada).

UTC-07:00 —— TimeZone for Mountain Time (US Canada).

UTC-06:00 —— TimeZone for Central Time (US Canada).

UTC-05:00 —— TimeZone for Eastern Time (US Canada).

UTC-04:30 —— TimeZone for Caracas.

UTC-04:00 —— TimeZone for Atlantic Time (Canada).

UTC-03:30 —— TimeZone for Newfoundland.

UTC-03:00 —— TimeZone for Buenos Aires, Salvador, Brasilia.

UTC-02:00 —— TimeZone for Mid-Atlantic.

UTC-01:00 —— TimeZone for Azores, Cape Verde Is.

UTC —— TimeZone for Dublin, Edinburgh, Lisbon, London.

	UTC+01:00 —— TimeZone for Amsterdam, Berlin, Bern, Rome, Stockholm, Vienna. UTC+02:00 —— TimeZone for Cairo, Athens, Bucharest, Amman, Beirut, Jerusalem. UTC+03:00 —— TimeZone for Kuwait, Riyadh, Baghdad. UTC+03:30 —— TimeZone for Tehran. UTC+04:00 —— TimeZone for Moscow, St.Petersburg, Volgograd, Tbilisi, Port Louis. UTC+04:30 —— TimeZone for Kabul. UTC+05:00 —— TimeZone for Islamabad, Karachi, Tashkent. UTC+05:30 —— TimeZone for Chennai, Kolkata, Mumbai, New Delhi. UTC+05:45 —— TimeZone for Kathmandu. UTC+06:00 —— TimeZone for Dhaka,Astana, Ekaterinburg. UTC+06:30 —— TimeZone for Yangon (Rangoon). UTC+07:00 —— TimeZone for Novosibrisk, Bangkok, Hanoi, Jakarta. UTC+08:00 —— TimeZone for Beijing, Chongqing, Hong Kong, Urumqi, Singapore. UTC+09:00 —— TimeZone for Seoul, Irkutsk, Osaka, Sapporo, Tokyo. UTC+09:30 —— TimeZone for Darwin, Adelaide. UTC+10:00 —— TimeZone for Canberra, Melbourne, Sydney, Brisbane. UTC+11:00 —— TimeZone for Solomon Is., New Caledonia, Vladivostok. UTC+12:00 —— TimeZone for Fiji, Magadan, Auckland, Welington. UTC+13:00 —— TimeZone for Nuku'alofa, Samoa. *ntp-server*: Specify the IP address of the primary NTP server. *backup-ntp-server*: Specify the IP address of the backup NTP server. *fetching-rate*: Specify the interval fetching time from the NTP server.
Step 3	Use the following command to verify the system time information. **show system-time** Verify the system time information. Use the following command to verify the NTP mode configuration information. **show system-time ntp** Verify the system time information of NTP mode.
Step 4	**end** Return to privileged EXEC mode.
Step 5	**copy running-config startup-config** Save the settings in the configuration file.

The following example shows how to set the system time by Get Time from NTP Server and set the time zone as UTC+08:00, set the NTP server as 133.100.9.2, set the backup NTP server as 139.78.100.163 and set the update rate as 11.

Switch#configure

Switch(config)#system-time ntp UTC+08:00 133.100.9.2 139.78.100.163 11

Switch(config)#show system-time ntp

Time zone : UTC+08:00

Prefered NTP server: 133.100.9.2

Backup NTP server: 139.78.100.163

Last successful NTP server: 133.100.9.2

Update Rate: 11 hour(s)

Switch(config)#end

Switch#copy running-config startup-config

2.2.4 Configuring the Daylight Saving Time

Follow these steps to configure the Daylight Saving Time:

Step 1	**configure** Enter global configuration mode.
Step 2	Use the following command to select a predefined Daylight Saving Time configuration: **system-time dst predefined [** USA | Australia | Europe | New-Zealand **]** Specify the Daylight Saving Time using a predefined schedule. USA | Australia | Europe | New-Zealand: Select one mode of Daylight Saving Time. **USA**: 02:00 a.m. on the Second Sunday in March ~ 02:00 a.m. on the First Sunday in November. **Australia**: 02:00 a.m. on the First Sunday in October ~ 03:00 a.m. on the First Sunday in April. **Europe**: 01:00 a.m. on the Last Sunday in March ~ 01:00 a.m. on the Last Sunday in October. **New Zealand**: 02:00 a.m. on the Last Sunday in September ~ 03:00 a.m. on the First Sunday in April.

	Use the following command to set the Daylight Saving Time in recurring mode: **system-time dst recurring { *sweek* } { *sday* } { *smonth* } { *stime* } { *eweek* } { *eday* } { *emonth* } { *etime* } [*offset*]** Specify the Daylight Saving Time in Recuring mode. *sweek*: Enter the start week of Daylight Saving Time. There are 5 values showing as follows: first, second, third, fourth, last. *sday*: Enter the start day of Daylight Saving Time. There are 7 values showing as follows: Sun, Mon, Tue, Wed, Thu, Fri, Sat. *smonth*: Enter the start month of Daylight Saving Time. There are 12 values showing as follows: Jan, Feb, Mar, Apr, May, Jun, Jul, Aug, Sep, Oct, Nov, Dec. *stime*: Enter the start time of Daylight Saving Time,in the format of HH:MM. *eweek*: Enter the end week of Daylight Saving Time. There are 5 values showing as follows: first, second, third, fourth, last. *eday*: Enter the end day of Daylight Saving Time. There are 7 values showing as follows: Sun, Mon, Tue, Wed, Thu, Fri, Sat. *emonth*: Enter the end month of Daylight Saving Time. There are 12 values showing as follows: Jan, Feb, Mar, Apr, May, Jun, Jul, Aug, Sep, Oct, Nov, Dec. *etime*: Enter the end time of Daylight Saving Time,in the format of HH:MM. *offset*: Enter the offset of Daylight Saving Time. The default value is 60.
	Use the following command to set the Daylight Saving Time in date mode: **system-time dst date { *smonth* } { *sday* } { *stime* } { *syear* } { *emonth* } { *eday* } { *etime* } { *eyear* } [*offset*]** Specify the Daylight Saving Time in Date mode. *smonth*: Enter the start month of Daylight Saving Time. There are 12 values showing as follows: Jan, Feb, Mar, Apr, May, Jun, Jul, Aug, Sep, Oct, Nov, Dec. *sday*: Enter the start day of Daylight Saving Time, which ranges from 1 to 31. *stime*: Enter the start time of Daylight Saving Time,in the format of HH:MM. *syear*: Enter the start year of Daylight Saving Time. *emonth*: Enter the end month of Daylight Saving Time. There are 12 values showing as follows: Jan, Feb, Mar, Apr, May, Jun, Jul, Aug, Sep, Oct, Nov, Dec. *eday*: Enter the end day of Daylight Saving Time, which ranges from 1 to 31. *etime*: Enter the end time of Daylight Saving Time,in the format of HH:MM. *eyear*: Enter the end year of Daylight Saving Time. *offset*: Enter the offset of Daylight Saving Time. The default value is 60.
Step 3	**show system-time dst** Verify the DST information of the switch.
Step 4	**end** Return to privileged EXEC mode.
Step 5	**copy running-config startup-config** Save the settings in the configuration file.

The following example shows how to set the Daylight Saving Time by Date Mode. Set the start time as 01:00 August 1st, 2017, set the end time as 01:00 September 1st,2017 and set the offset as 50.

Switch#configure

Switch(config)#system-time dst date Aug 1 01:00 2017 Sep 1 01:00 2017 50

Switch(config)#show system-time dst

DST starts at 01:00:00 on Aug 1 2017

DST ends at 01:00:00 on Sep 1 2017

DST offset is 50 minutes

DST configuration is one-off

Switch(config)#end

Switch#copy running-config startup-config

3 User Management Configurations

With User Management, you can create and manage the user accounts for login to the switch.

3.1 Using the GUI


There are four types of user accounts with different access levels: Admin, Operator, Power User and User.

- There is a default Admin account which cannot be deleted. The default username and password of this account are both admin. You can also create more Admin accounts.
- If you create Operator, Power User or User accounts, you need go to the AAA section to create an Enable Password. If needed, these types of users can use the Enable Password to change their access level to Admin.

3.1.1 Creating Accounts

Choose the menu **SYSTEM** > **User Management** > **User Config** to load the following page.


Figure 3-1 User Config Page

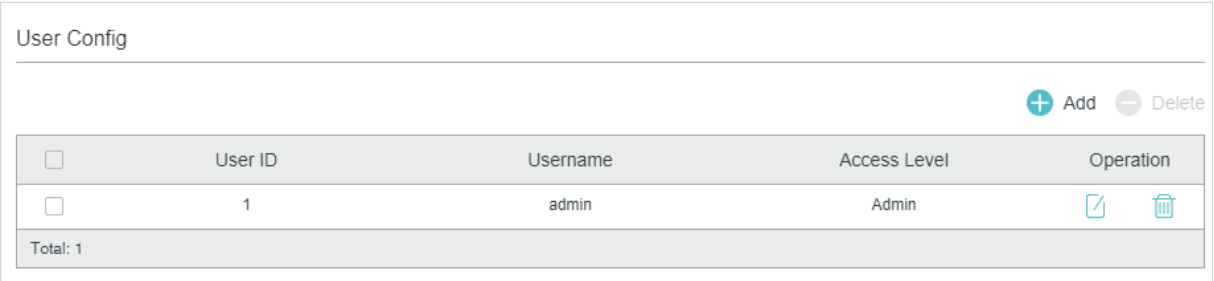

By default, there is a default Admin account in the table. You can click to edit this Admin account but you cannot delete it.

You can create new user accounts. Click Add and the following window will pop up.

Figure 3-2 Adding Account

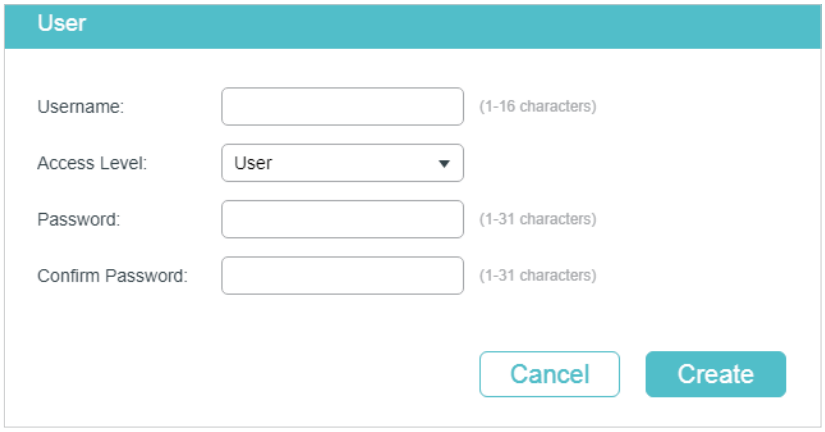

Follow these steps to create a new user account.

1) Configure the following parameters:


Username	Specify a username for the account. It contains 16 characters at most, composed of digits, English letters and underscore only.
Access Level	Select the access level. There are four options provided: **Admin**: Admin can edit, modify and view all the settings of different functions. **Operator**: Operator can edit, modify and view most of the settings of different functions. **Power User**: Power User can edit, modify and view some of the settings of different functions. **User**: User can only view the settings without the right to edit or modify.
Password	Specify a password for the account. It contains 1-31 alphanumeric characters or symbols, composed of digits, English letters (case sensitive), underscore and sixteen special characters only.
Confirm Password	Retype the password.

2) Click **Create**.

3.1.2 Configuring Enable Password

Choose the menu **SECURITY** > **AAA** > **Global Config** to load the following page.

Figure 3-3 Configure Enable Password

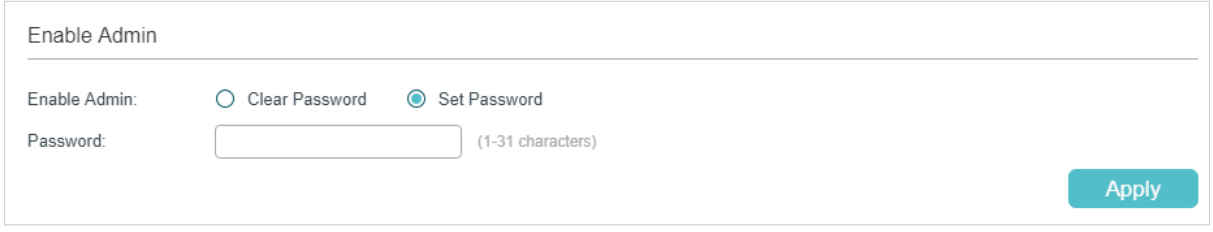

Follow these steps to configure Enable Password:

1) Select **Set Password** and specify the Enable Password in the **Password** field.
2) Click **Apply**.

Tips:

The logged-in users can enter the Enable Password on this page to get the administrative privileges.

3.2 Using the CLI

There are four types of user accounts with different access levels: Admin, Operator, Power User and User.

- There is a default Admin account which cannot be deleted. The default username and password of this account are both admin. You can also create more Admin accounts.
- If you create Operator, Power User or User accounts, you need go to the AAA section to create an Enable Password. If needed, these types of users can use the Enable Password to change their access level to Admin.

3.2.1 Creating Accounts

Follow these steps to create an account:

Step 1	**configure** Enter global configuration mode.

Step 2 Use the following command to create an account unencrypted or symmetric encrypted.

user name *name* **{ privilege** admin | operator | power_user | user **} password {** [0] *password* **|** 7 *encrypted-password* **}**

name: Enter a user name for users' login. It contains 16 characters at most, composed of digits, English letters and underscore only.

admin | operator | power_user | user: Specify the access level for the user. Admin can edit, modify and view all the settings of different functions. Operator can edit, modify and view mostly the settings of different functions. Power User can edit, modify and view some the settings of different functions. User only can view the settings without the right to edit and modify.: Select the access level for the user. Admin can edit, modify and view all the settings of different functions.

0: Specify the encryption type. 0 indicates that the password you entered is unencrypted, and the password is saved to the configuration file unencrypted. By default, the encryption type is 0.

password: Enter a password for users' login. It is a string from 1 to 32 alphanumeric characters or symbols. The password is case sensitive, allows digits, English letters (case sensitive), underlines and sixteen special characters.

7: Specify the encryption type. 7 indicates that the password you entered is symmetric encrypted, and the password is saved to the configuration file symmetric encrypted.

encrypted-password: Enter a symmetric encrypted password with fixed length, which you can copy from another switch's configuration file. After the encrypted password is configured, you should use the corresponding unencrypted password to reenter this mode.

Use the following command to create an account MD5 encrypted.

user name *name* **{ privilege** admin | operator | power_user | user **} secret {** [0] *password* **|** 5 *encrypted-password* **}**

Create an account whose access level is Admin.

name: Enter a user name for users' login. It contains 16 characters at most, composed of digits, English letters and underscore only.

admin | operator | power_user | user: Specify the access level for the user. Admin can edit, modify and view all the settings of different functions. Operator can edit, modify and view mostly the settings of different functions. Power User can edit, modify and view some the settings of different functions. User only can view the settings without the right to edit and modify.: Select the access level for the user. Admin can edit, modify and view all the settings of different functions.

0: Specify the encryption type. 0 indicates that the password you entered is unencrypted, but the password is saved to the configuration file MD5 encrypted. By default, the encryption type is 0.

password: Enter a password for users' login. It is a string from 1 to 32 alphanumeric characters or symbols. The password is case sensitive, allows digits, English letters (case sensitive), underlines and sixteen special characters.

5: Specify the encryption type. 5 indicates that the password you entered is MD5 encrypted, and the password is saved to the configuration file MD5 encrypted.

encrypted-password: Enter a MD5 encrypted password with fixed length, which you can copy from another switch's configuration file.

Step 3 **show user account-list**
Verify the information of the current users.

Step 4	**end** Return to privileged EXEC mode.
Step 5	**copy running-config startup-config** Save the settings in the configuration file.

3.2.2 Configuring Enable Password

Follow these steps to create an account of other type:

Step 1	**configure** Enter global configuration mode.
Step 2	**aaa enable** Globally enable the AAA function.

Step 3	Use the following command to create an enable password unencrypted or symmetric encrypted. **enable admin password { [** 0 **]** *password* | 7 *encrypted-password* **}** Create an Enable Password. It can change the users' access level to Admin. By default, it is empty. 0: Specify the encryption type. 0 indicates that the password you entered is unencrypted, and the password is saved to the configuration file unencrypted. By default, the encryption type is 0. *password*: Enter an enable password. It is a string from 1 to 32 alphanumeric characters or symbols. The password is case sensitive, allows digits, English letters (case sensitive), underlines and sixteen special characters. 7: Specify the encryption type. 7 indicates that the password you entered is symmetric encrypted, and the password is saved to the configuration file symmetric encrypted. *encrypted-password*: Enter a symmetric encrypted password with fixed length, which you can copy from another switch's configuration file. After the encrypted password is configured, you should use the corresponding unencrypted password to reenter this mode. Use the following command to create an enable password unencrypted or MD5 encrypted. **enable admin secret { [** 0 **]** *password* | 5 *encrypted-password* **}** Create an Enable Password. It can change the users' access level to Admin. By default, it is empty. 0: Specify the encryption type. 0 indicates that the password you entered is unencrypted, but the password is saved to the configuration file MD5 encrypted. By default, the encryption type is 0. *password*: Enter an enable password. It is a string from 1 to 32 alphanumeric characters or symbols. The password is case sensitive, allows digits, English letters (case sensitive), underlines and sixteen special characters. 5: Specify the encryption type. 5 indicates that the password you entered is MD5 encrypted, and the password is saved to the configuration file MD5 encrypted. *encrypted-password*: Enter a MD5 encrypted password with fixed length, which you can copy from another switch's configuration file. After the encrypted password is configured, you should use the corresponding unencrypted password to reenter this mode.
Step 4	**show user account-list** Verify the information of the current users.
Step 5	**end** Return to privileged EXEC mode.
Step 6	**copy running-config startup-config** Save the settings in the configuration file.

Tips:

The logged-in users can enter the Enable Password on this page to get the administrative privileges.

The following example shows how to create a uesr with the access level of Operator, set the username as user1 and password as 123, enable AAA function and set the enable password as abc123.

Switch#configure

Switch(config)#user name user1 **privilege** operator **password** 123

Switch(config)#aaa enable

Switch(config)#enable admin password abc123

Switch(config)#show user account-list

Index	User-Name	User-Type
1	user1	Operator
2	admin	Admin

Switch(config)#end

Switch#copy running-config startup-config

4 System Tools Configurations

With System Tools, you can:


- Configure the boot file
- Restore the configuration of the switch
- Back up the configuration file
- Upgrade the firmware
- Configure DHCP Auto Install
- Reboot the switch
- Reset the switch

4.1 Using the GUI

4.1.1 Configuring the Boot File

Choose the menu **SYSTEM** > **System Tools** > **Boot Config** to load the following page.

Figure 4-1 Configuring the Boot File

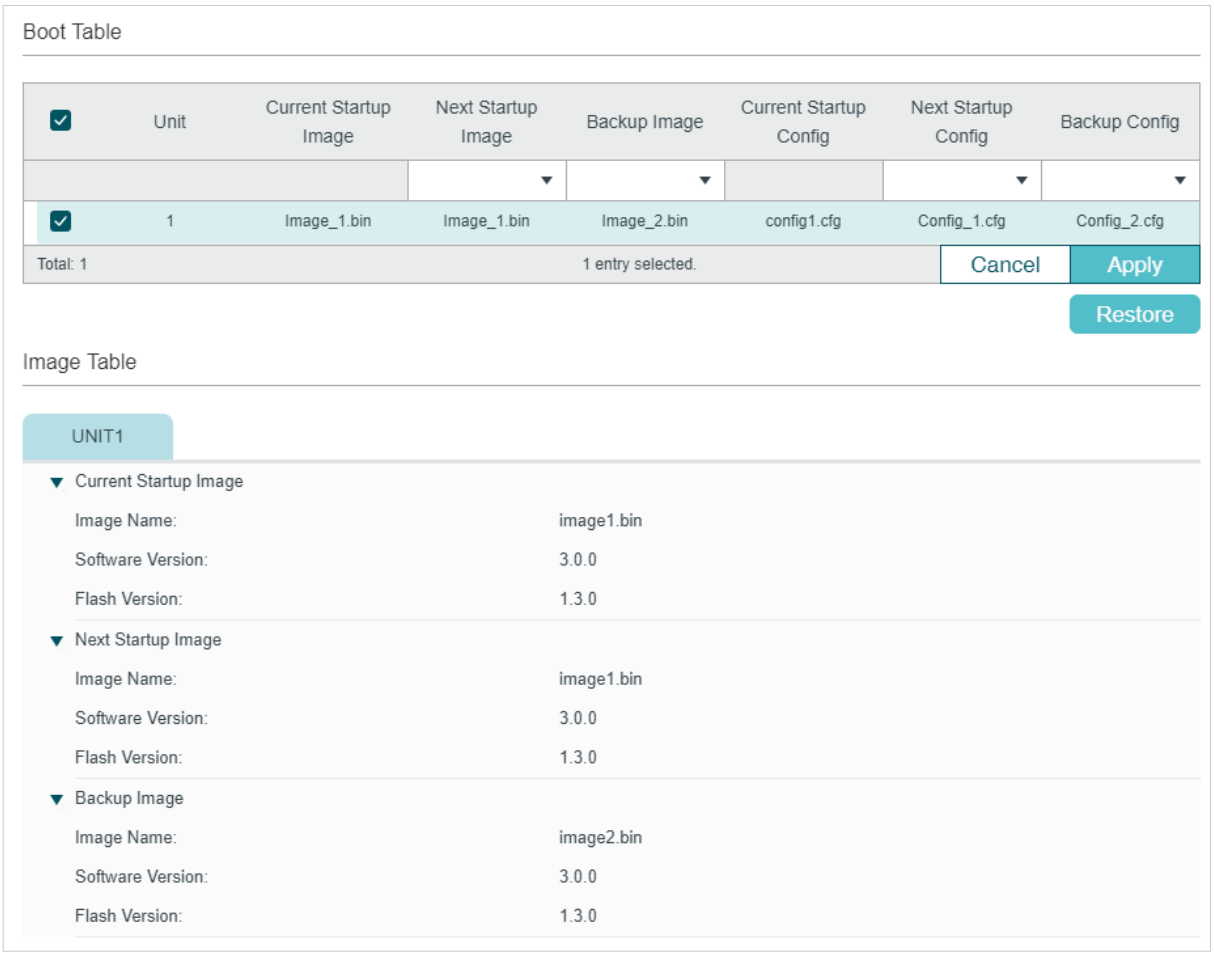

Follow these steps to configure the boot file:

1) In the **Boot Table** section, select one or more units and configure the relevant parameters.

Unit	Displays the number of the unit.
Current Startup Image	Displays the current startup image.
Next Startup Image	Select the next startup image. When the switch is powered on, it will try to start up with the next startup image. The next startup image and backup image should not be the same.
Backup Image	Select the backup image. When the switch fails to start up with the next startup image, it will try to start up with the backup image. The next startup and backup image should not be the same.
Current Startup Config	Displays the current startup configuration.
Next Startup Config	Specify the next startup configuration. When the switch is powered on, it will try to start up with the next startup configuration. The next startup configuration and backup configuration should not be the same.
Backup Config	Specify the backup configuration. When the switch fails to start up with the next startup configuration, it will try to start up with the backup configuration. The next startup and backup configuration should not be the same.

2) Click **Apply**.


In the **Image Table**, you can view the information of the current startup image, next startup image and backup image. The displayed information is as follows:

Image Name	Displays the name of the image.
Software Version	Displays the software version of the image.
Flash Version	Displays the flash version of the image.

4.1.2 Restoring the Configuration of the Switch

Choose the menu **SYSTEM** > **System Tools** > **Restore Config** to load the following page.

Figure 4-2 Restoring the Configuration of the Switch

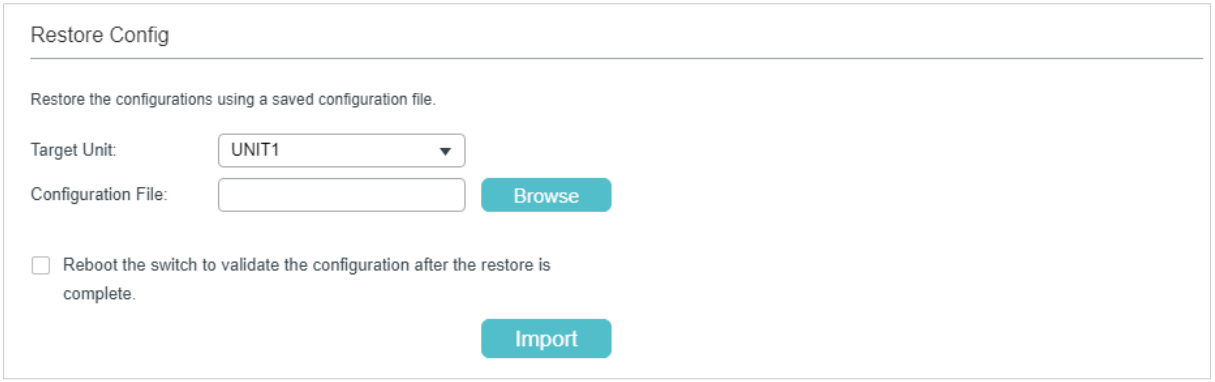

Follow these steps to restore the current configuration of the switch:

1) In the **Restore Config** section, select the unit to be restored.
2) Click **Browse** and select the desired configuration file to be imported.
3) Choose whether to reboot the switch after restoring is completed. Only after the switch is rebooted will the imported image take effect.
4) Click **Import** to import the configuration file.


Note:

It will take some time to restore the configuration. Please wait without any operation.

4.1.3 Backing up the Configuration File

Choose the menu **SYSTEM** > **System Tools** > **Backup Config** to load the following page.

Figure 4-3 Backing up the Configuration File

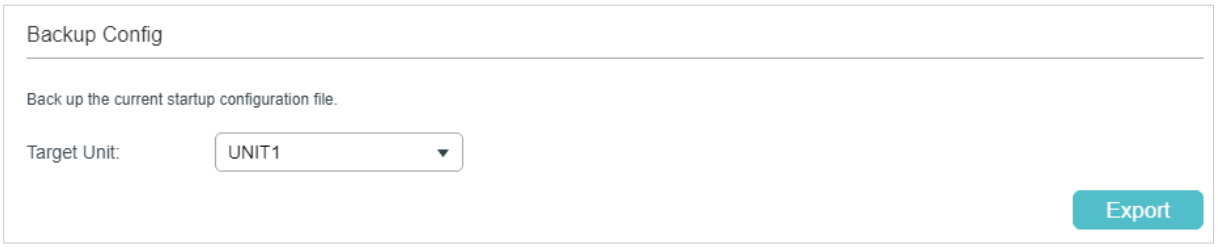

In the **Config Backup** section, select one unit and click **Export** to export the configuration file.


Note:

It will take some time to export the configuration. Please wait without any operation.

4.1.4 Upgrading the Firmware

Choose the menu **SYSTEM** > **System Tools** > **Firmware Upgrade** to load the following page.

Figure 4-4 Upgrading the Firmware

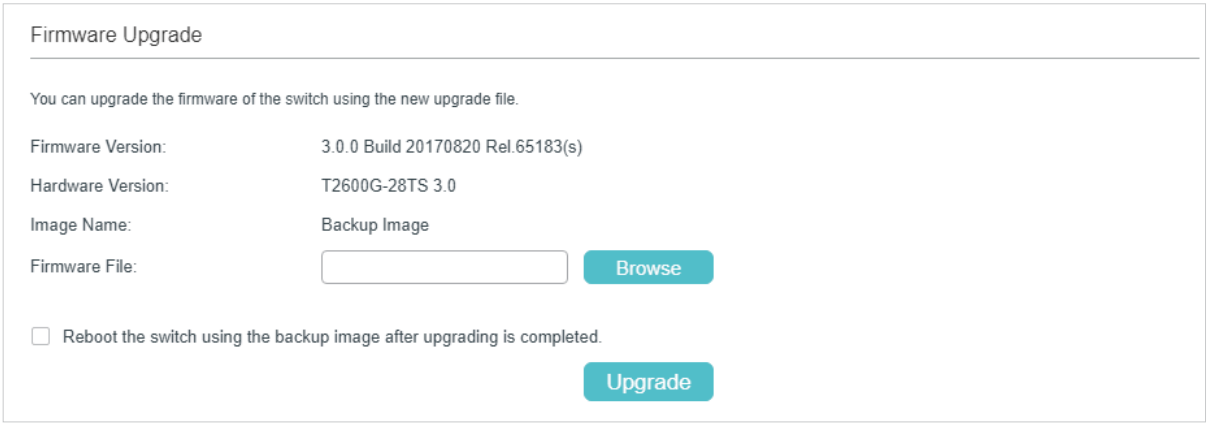

You can view the current firmware information on this page:

Firmware Version	Displays the current firmware version of the system.
Hardware Version	Displays the current hardware version of the system.
Image Name	Displays the image to upgrade. The operation will only affect the image displayed here.

Follow these steps to upgrade the firmware of the switch:

1) Click **Browse** and select the proper firmware upgrade file.
2) Choose whether to reboot the switch after upgrading is completed. Only after the switch is rebooted will the new firmware take effect.
3) Click **Upgrade** to upgrade the system.

Note:

- It will take some time to upgrade the switch. Please wait without any operation.
- It is recommended to backup your configuration before upgrading.


4.1.5 Configuring DHCP Auto Install

This feature is used to download configuration files and images from the TFTP server automatically. It requires a TFTP server and a DHCP server that supports option 67, 125 and 150 on your network. When Auto Install function starts, the switch tries to get

configuration file name, image file path and TFTP server IP address from the DHCP server, and then downloads the new image and configuration file form the TFTP server.

Choose the menu **SYSTEM** > **System Tools** > **DHCP Auto Install** to load the following page.

Figure 4-5 Configuring DHCP Auto Install

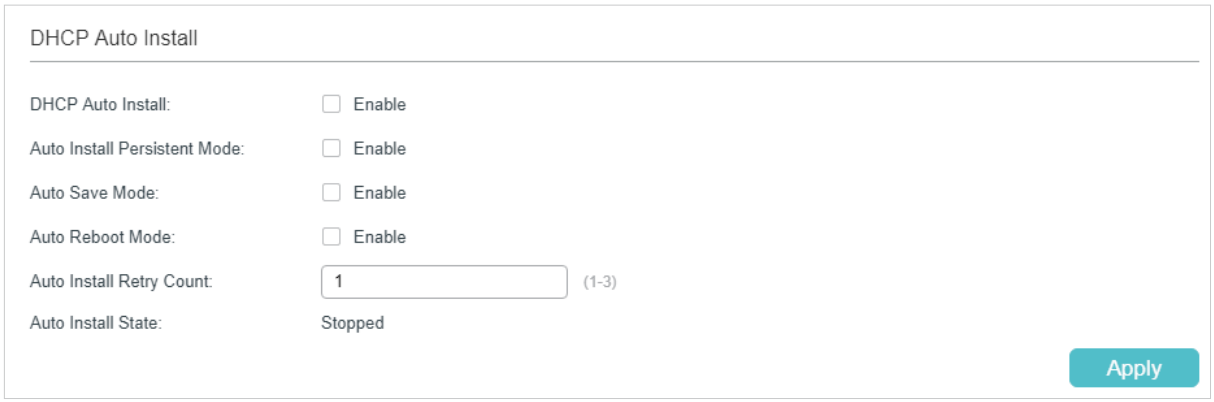

Configure the following parameters and click **Apply**:

DHCP Auto Install	Enable or disable DHCP Auto Install.
Auto Install Persistent Mode	Enable or disable Auto Install Persistent Mode. With this mode enabled, the switch will start Auto Install progress once the switch is rebooted.
Auto Save Mode	Enable or disable Save Mode. With this mode enabled, the downloaded configuration file will be saved as the startup configuration file, which means that the downloaded configuration will take effect after the next reboot.
Auto Reboot Mode	Enable or disable Auto Reboot Mode. With this mode enabled, the switch will reboot automatically once the auto install process is completed.
Auto Install Retry Count	Specify how many times the switch can try to get the configuration file or image file from the TFTP server in one cycle. If the number of tries has reached this limit, the switch will wait for 10 minutes and start to try to get the files again. This process will be repeated until the switch succeeds in getting any of the image file or configuration file, or unless you stop Auto Install manually.
Auto Install State	Displays the status of Auto Install process.

Note:

- The switch will obtain a new IP address from the DHCP server during the process of Auto Install. If you want to access to the switch, you should check the new IP address on the DHCP server.
- If the Auto Install process fails, the switch will restart the process every 10 minutes. You can stop the process manually.


4.1.6 Rebooting the switch

There are two methods to reboot the switch: manually reboot the switch and configure reboot schedule to automatically reboot the switch.

Manually Rebooting the Switch

Choose the menu **SYSTEM** > **System Tools** > **System Reboot > System Reboot** to load the following page.

Figure 4-6 Manually Rebooting the Switch

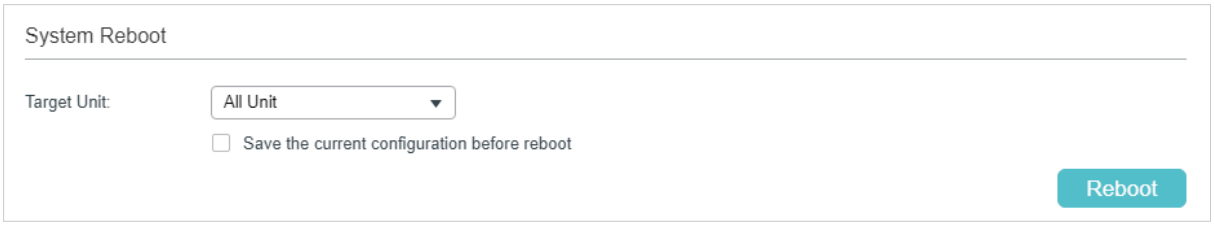


Follow these steps to reboot the switch:

1) In the **System Reboot** section, select the desired unit.
2) Choose whether to save the current configuration before reboot.
3) Click **Reboot**.

Configuring Reboot Schedule

Choose the menu **SYSTEM > System Tools > System Reboot > Reboot Schedule** to load the following page.

Figure 4-7 Configuring the Reboot Schedule

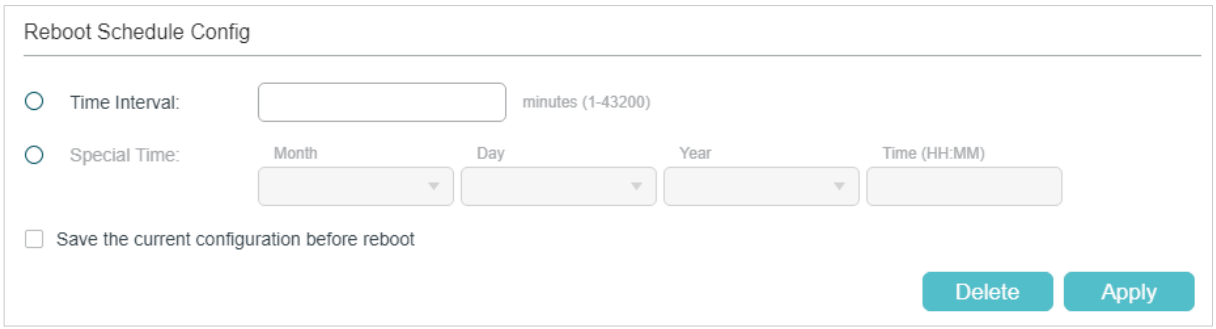

Follow these steps to configure the reboot schedule:

1) In the **Reboot Schedule Config** section, select one method and specify the related parameters.

Time Interval	Specify a period of time. The switch will reboot after this period. Valid values are from 1 to 43200 minutes. To make this schedule recur, you need to click Save to save current configuration or enable the option **Save the current configuration before reboot**.

Special Time	Specify the date and time for the switch to reboot. **Month/Day/Year:** Specify the date for the switch to reboot. **Time (HH:MM)**: Specify the time for the switch to reboot, in the format of HH:MM.

2) Choose whether to save the current configuration before the reboot.
3) Click **Apply**.


Tips:

To delete the reboot schedule configurations, you can click **Delete** and the configurations will be empty.

4.1.7 Reseting the Switch

Choose the menu **SYSTEM** > **System Tools** > **System Reset** to load the following page.

Figure 4-8 Reseting the Switch

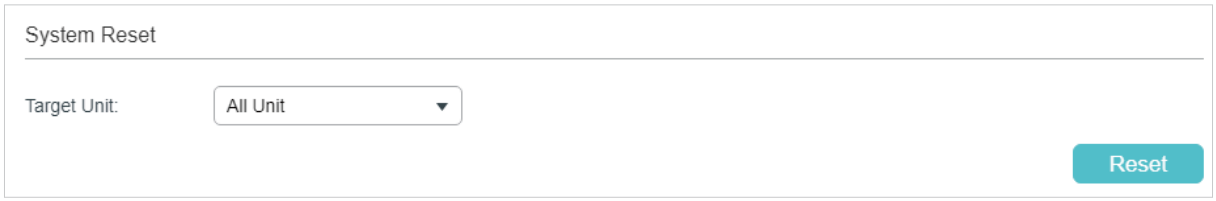

In the **System Reset** section, select the desired unit and click **Reset**. After reset, all configurations of the switch will be reset to the factory defaults.

4.2 Using the CLI

4.2.1 Configuring the Boot File

Follow these steps to configure the boot file:

Step 1	**configure** Enter global configuration mode.
Step 2	**boot application filename {** image1 | image2 **} {** startup | backup **}** Specify the configuration of the boot file. By default, image1.bin is the startup image and image2.bin is the backup image. image1 | image2: Select the image file to be configured. startup | backup: Select the property of the image file.

Step 3	**boot config filename {** config1 | config2 **} {** startup | backup **}** Specify the configuration of the boot file. By default, config1.cfg is the startup configuration file and config2.cfg is the backup configuration file. config1 | config2: Select the configuration file to be configured. startup | backup: Specify the property of the configuration file.
Step 4	**show boot** Verify the boot configuration of the system.
Step 5	**end** Return to privileged EXEC mode.
Step 6	**copy running-config startup-config** Save the settings in the configuration file.

The following example shows how to set the next startup image as image1, the backup image as image2, the next startup configuration file as config1 and the backup configuration file as config2.

Switch#configure

Switch(config)#boot application filename image1 startup

Switch(config)#boot application filename image2 backup

Switch(config)#boot config filename config1 startup

Switch(config)#boot config filename config2 backup

Switch(config)#show boot

Boot config:

Current Startup Image - image2.bin

Next Startup Image - image1.bin

Backup Image - image2.bin

Current Startup Config - config2.cfg

Next Startup Config - config1.cfg

Backup Config - config2.cfg

Switch(config)#end

Switch#copy running-config startup-config

4.2.2 Restoring the Configuration of the Switch

Follow these steps to restore the configuration of the switch:

Step 1	**enable** Enter privileged mode.
Step 2	**copy tftp startup-config ip-address** *ip-addr* **filename** *name* Download the configuration file to the switch from TFTP server. *ip-addr*: Specify the IP address of the TFTP server. Both IPv4 and IPv6 addresses are supported. *name*: Specify the name of the configuration file to be downloaded.

Note:

It will take some time to restore the configuration. Please wait without any operation.

The following example shows how to restore the configuration file named file1 from the TFTP server with IP address 192.168.0.100.

Switch>enable

Switch#copy tftp startup-config ip-address 192.168.0.100 **filename** file1

Start to load user config file.....

Operation OK! Now rebooting system.....

4.2.3 Backing up the Configuration File

Follow these steps to back up the current configuration of the switch in a file:

Step 1	**enable** Enter privileged mode.
Step 2	**copy startup-config tftp ip-address** *ip-addr* **filename** *name* Back up the configuration file to TFTP server. *ip-addr*: Specify the IP address of the TFTP server. Both IPv4 and IPv6 addresses are supported. *name*: Specify the name of the configuration file to be saved.

The following example shows how to backup the configuration file named file2 to TFTP server with IP address 192.168.0.100.

Switch>enable

Switch#copy startup-config tftp ip-address 192.168.0.100 **filename** file2

Start to backup user config file.....

Backup user config file OK.

4.2.4 Upgrading the Firmware

Follow these steps to upgrade the firmware:

Step 1	**enable** Enter privileged mode.
Step 2	**firmware upgrade ip-address** *ip-addr* **filename** *name* Upgrade the switch's backup image via TFTP server. To boot up with the new firmware, you need to choose to reboot the switch with the backup image. *ip-addr*: Specify the IP address of the TFTP server. Both IPv4 and IPv6 addresses are supported. *name*: Specify the name of the desired firmware file.
Step 3	Enter Y to continue and then enter Y to reboot the switch with the backup image.

The following example shows how to upgrade the firmware using the configuration file named file3.bin. The TFTP server is 190.168.0.100.

Switch>enable

Switch#firmware upgrade ip-address 192.168.0.100 **filename** file3.bin

It will only upgrade the backup image. Continue? (Y/N):Y

Operation OK!

Reboot with the backup image? (Y/N): Y

4.2.5 Configuring DHCP Auto Install

This feature is used to download configuration files and images from the TFTP server automatically. It requires a TFTP server and a DHCP server that supports option 67, 125 and 150 on your network. When Auto Install function starts, the switch tries to get configuration file name, image file path and TFTP server IP address from the DHCP server, and then downloads the new image and configuration file form the TFTP server.

Follow these steps to configure the DHCP Auto Install.

Step 1	**configure** Enter global configuration mode.
Step 2	**boot autoinstall persistent-mode** Enable the auto install persistent mode. After saving configuration, the switch will start the Auto Install function automatically during next reboot process.

Step 3	**boot autoinstall auto-save** Enable the auto save mode and the switch will save the configuration file downloaded as startup configuration file automatically.
Step 4	**boot autoinstall auto-reboot** Enable the auto reboot mode and the switch will reboot automatically after the auto install process is completed successfully.
Step 5	**boot autoinstall retry-count** *count* Specify the auto install retry count which ranges from 1 to 3. The default value is 1.
Step 6	**boot autoinstall start** Start the Auto Install process and the switch will download the configuration file and the backup image automatically.
Step 7	**end** Return to privileged EXEC mode.
Step 8	**copy running-config startup-config** Save the settings in the configuration file.

Note:

- The switch will obtain a new IP address from the DHCP server during the process of Auto Install. If you want to access to the switch, you should check the new IP address on the DHCP server.
- If the Auto Install process fails, the switch will restart the process every 10 minutes. You can stop the process manually.

The following example shows how to configure the Auto Install function.

Switch#configure

Switch(config)#boot autoinstall persistent-mode

Switch(config)#boot autoinstall auto-save

Switch(config)#boot autoinstall auto-reboot

Switch(config)#boot autoinstall retry-count 2

Switch(config)#show boot autoinstall

Auto Insatll Mode.....Stop

Auto Insatll Persistent Mode.....Enabled

Auto Save Mode.....Enabled

Auto Reboot Mode.....Enabled

Auto Insatll Retry Count.....2

Auto Insatll sate.....Stopped

4.2.6 Rebooting the Switch

Manually Rebooting the Switch

Follow these steps to reboot the switch:

Step 1	**enable** Enter privileged mode.
Step 2	**reboot** Reboot the switch.

Configuring Reboot Schedule

Follow these steps to configure the reboot schedule:

Step 1	**configure** Enter global configuration mode.
Step 2	Use the following command to set the interval of reboot: **reboot-schedule in** *interval* **[save_before_reboot]** (Optional) Specify the reboot schedule. *interval*: Specify a period of time. The switch will reboot after this period. The valid values are from 1 to 43200 minutes. **save_before_reboot**: Save the configuration file before the switch reboots. To make this schedule recur, you can add this part to the command. Use the following command to set the special time of reboot: **reboot-schedule at** *time* **[** *date* **] [save_before_reboot]** (Optional) Specify the reboot schedule. *time*: Specify the time for the switch to reboot, in the format of HH:MM. *date*: Specify the date for the switch to reboot, in the format of DD/MM/YYYY. The date should be within 30 days. **save_before_reboot**: Save the configuration file before the switch reboots. If no date is specified, the switch will reboot according to the time you have set. If the time you set is later than the time that this command is executed, the switch will reboot later the same day; otherwise the switch will reboot the next day.
Step 3	**end** Return to privileged EXEC mode.
Step 4	**copy running-config startup-config** Save the settings in the configuration file.

The following example shows how to set the switch to reboot at 12:00 on 15/08/2017.

Switch#configure

Switch(config)#reboot-schedule at 12:00 15/08/2017 save_before_reboot

Reboot system at 15/08/2017 12:00. Continue? (Y/N): Y

Reboot Schedule Settings

Reboot schedule at 2017-08-15 12:00 (in 25582 minutes)

Save before reboot: Yes

Switch(config)#end

Switch#copy running-config startup-config

4.2.7 Reseting the Switch


Follow these steps to reset the switch:

Step 1	**enable** Enter privileged mode.
Step 2	**reset** Reset the switch, and all configurations of the switch will be reset to the factory defaults.

5 EEE Configuration

Choose the menu **SYSTEM** > **EEE** to load the following page.

Figure 5-1 Configuring EEE

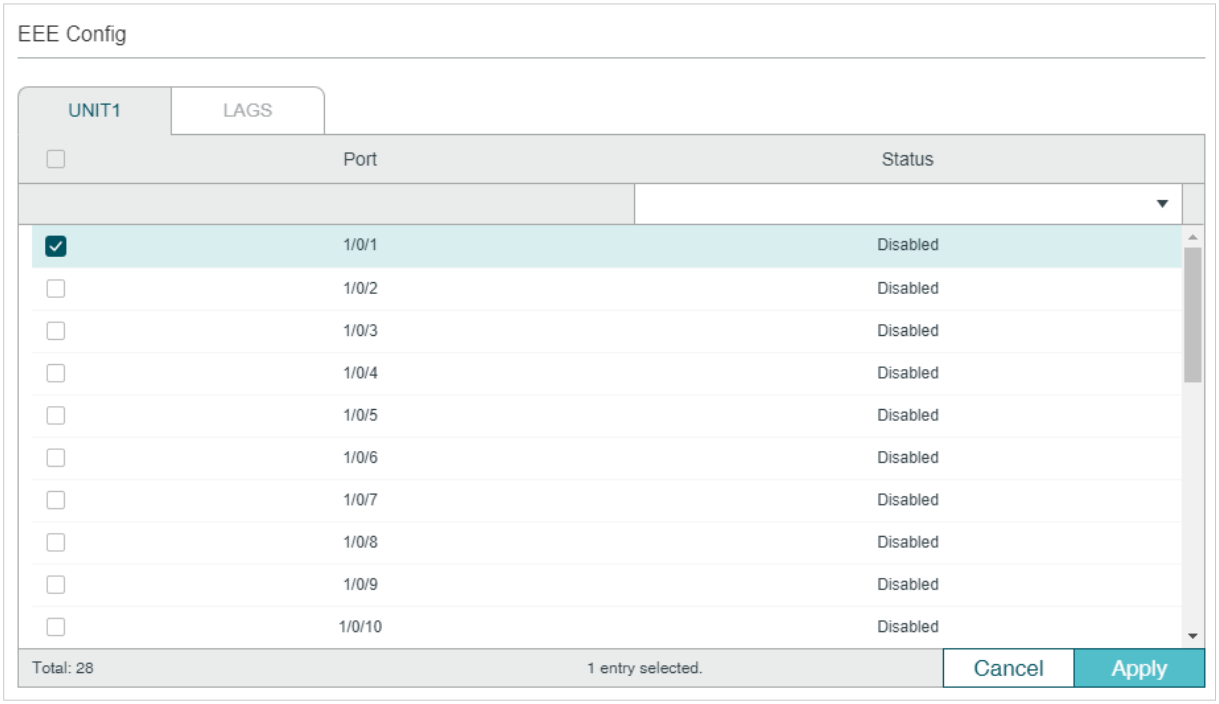

Follow these steps to configure EEE:

1) In the **EEE Config** section, select one or more ports to be configured.
2) Enable or disable EEE on the selected port(s).
3) Click **Apply**.

5.1 Using the CLI

Follow these steps to configure EEE:

Step 1	**configure** Enter global configuration mode.
Step 2	**interface { fastEthernet** *port* **| range fastEthernet** *port-list* **| gigabitEthernet** *port* **| range gigabitEthernet** *port-list* **| ten-gigabitEthernet** *port* **| range ten-gigabitEthernet** *port-list* **}** Enter interface configuration mode.
Step 3	**eee** Enable EEE on the port.

Step 4	**end** Return to privileged EXEC mode.
Step 5	**copy running-config startup-config** Save the settings in the configuration file.

The following example shows how to enable the EEE feature on port 1/0/1.

Switch#config

Switch(config)#interface gigabitEthernet 1/0/1

Switch(config-if)#eee

Switch(config-if)#show interface eee

Port EEE status

Gi1/0/1 Enable

Gi1/0/2 Disable

...

Switch(config-if)#end

Switch#copy running-config startup-config

6 PoE Configurations

Note:

Only T2600G-28MPS supports PoE feature.

With the PoE feature, you can:

- Configure the PoE parameters manually
- Configure the PoE parameters using the profile


You can configure the PoE parameters one by one via configuring the PoE parameters manually. You can also set a profile with the desired parameters and bind the profile to the corresponding ports to quickly configure the PoE parameters.

6.1 Using the GUI

6.1.1 Configuring the PoE Parameters Manually

Choose the menu **SYSTEM > PoE** > **PoE Config** to load the following page.

Figure 6-1 Configuring PoE Parameters Manually

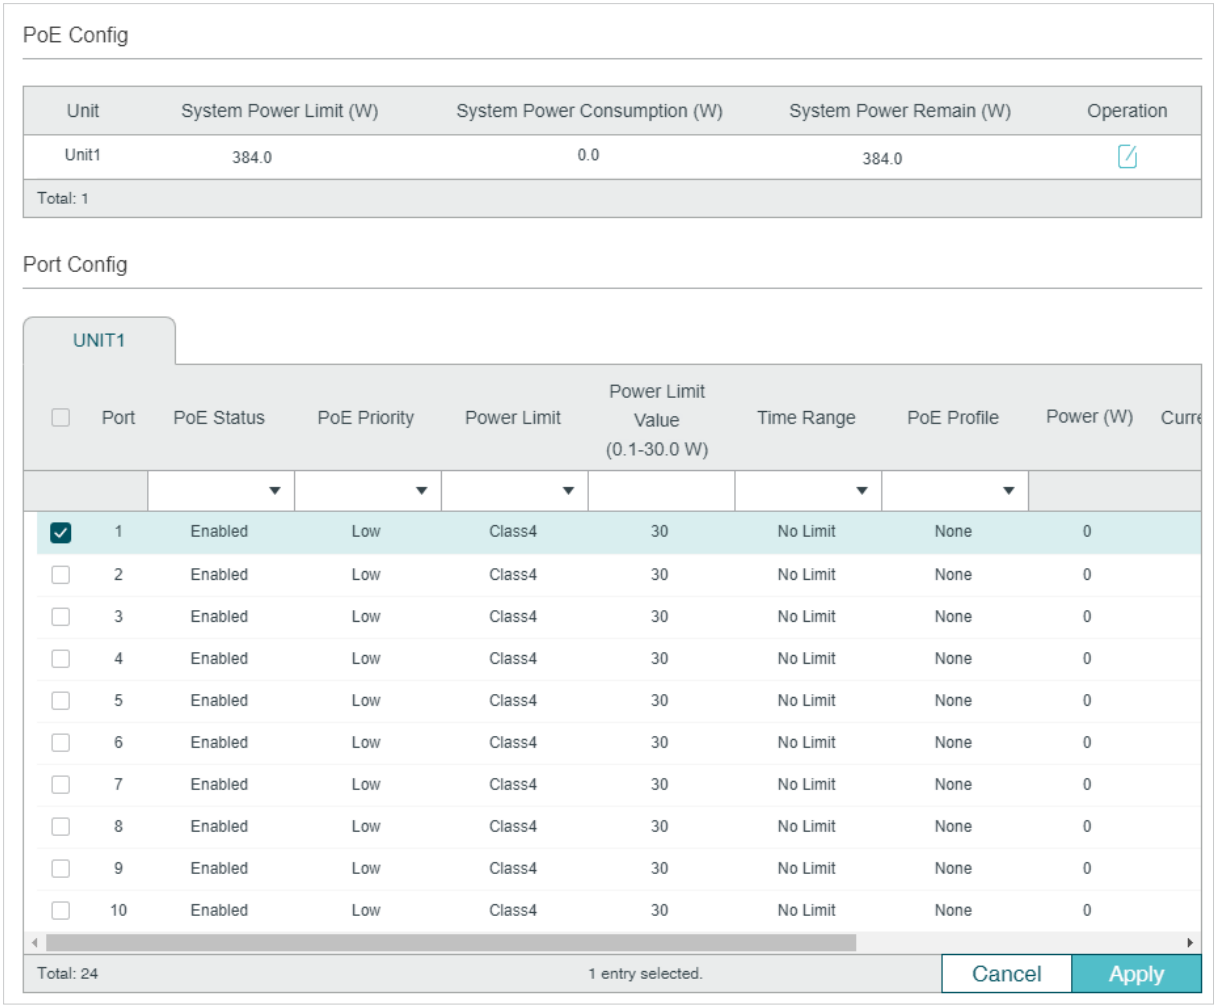

Follow these steps to configure the basic PoE parameters:

1) In the **PoE Config** section, you can view the current PoE parameters.

System Power Limit (w)	Displays the maximum power the PoE switch can supply.
System Power Consumption (w)	Displays the real-time system power consumption of the PoE switch.
System Power Remain (w)	Displays the real-time system remaining power of the PoE switch.

In addition, you can click and configure the System Power Limit. Click **Apply**.

Figure 6-2 Configuring System Power Limit



Unit	Displays the unit number.
System Power Limit	Specify the maximum power the PoE switch can supply.

2) In the **Port Config** section, select the port you want to configure and specify the parameters. Click **Apply**.

PoE Status	Enable or disable the PoE function for on corresponding port. The port can supply power to the PD when its status is enable.
PoE Priority	Select the priority level for the corresponding port. When the supply power exceeds the system power limit, the switch will power off PDs on low-priority ports to ensure stable running of other PDs.
Power Limit	Specify the maximum power the corresponding port can supply. The following options are provided: **Auto**: The switch will allocate a value as the maximum power that the port can supply automatically. **Class1**: The maximum power that the port can supply is 4W. **Class2**: The maximum power that the port can supply is 7W. **Class3**: The maximum power that the port can supply is 15.4W. **Class4**: The maximum power that the port can supply is 30W. **Manual**: You can enter a value manually.
Power Limit Value (0.1w-30w)	If you select **Manual** as Power Limit mode, specify a maximum power supply value in this field. If you select **Class1** to **Class4** as Power Limit mode, you can view the maximum power supply value in this field.
Time Range	Select a time range, then the port will supply power only during the time range. For how to create a time range, refer to *Time Range Configuration*.


PoE Profile	A quick configuration method for the corresponding ports. If one profile is selected, you will not be able to modify PoE status, PoE priority or power limit manually. For how to create a profile, refer to *Configuring the PoE Parameters Using the Profile*.
Power (w)	Displays the port's real-time power supply.
Current (mA)	Displays the port's real-time current.
Voltage (v)	Displays the port's real-time voltage.
PD Class	Displays the class the linked PD belongs to.
Power Status	Displays the port's real-time power status.

6.1.2 Configuring the PoE Parameters Using the Profile

■ Creating a PoE Profile

Choose the menu **SYSTEM > PoE > PoE Profile** and click Add to load the following page.

Figure 6-3 Creating a PoE Profile

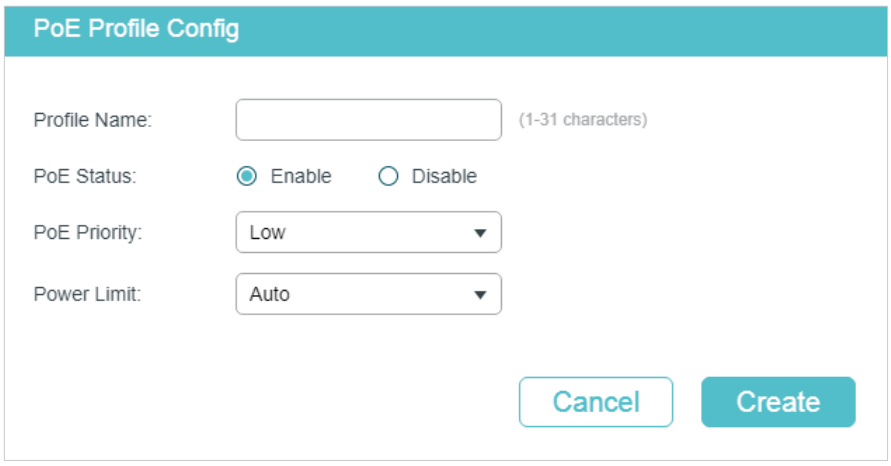

Follow these steps to create a PoE profile:

1) In the **Create PoE Profile** section, specify the desired configurations of the profile.


Profile Name	Specify a name for the PoE profile.
PoE Status	Specify the PoE status for the PoE profile.
PoE Priority	Specify the priority level for the PoE profile. The following options are provided: **High**, **Middle** and **Low**. When the supply power exceeds the system power limit, the switch will power off PDs on low-priority ports to ensure stable running of other PDs.
Power Limit	Specify the maximum power the port can supply for the PoE profile. The following options are provided: **Auto**: The switch will allocate a value as the maximum power that the port can supply automatically. **Class1 (4w)**: The maximum power that the port can supply is 4W. **Class2 (7w)**: The maximum power that the port can supply is 7W. **Class3 (15.4w)**: The maximum power that the port can supply is 15.4W. **Class4 (30w)**: The maximum power that the port can supply is 30W. **Manual**: Enter a value manually.

2) Click **Create**.

Binding the Profile to the Corresponding Ports

Choose the menu **SYSTEM > PoE** > **PoE Config** to load the following page.

Figure 6-4 Binding the Profile to the Corresponding Ports

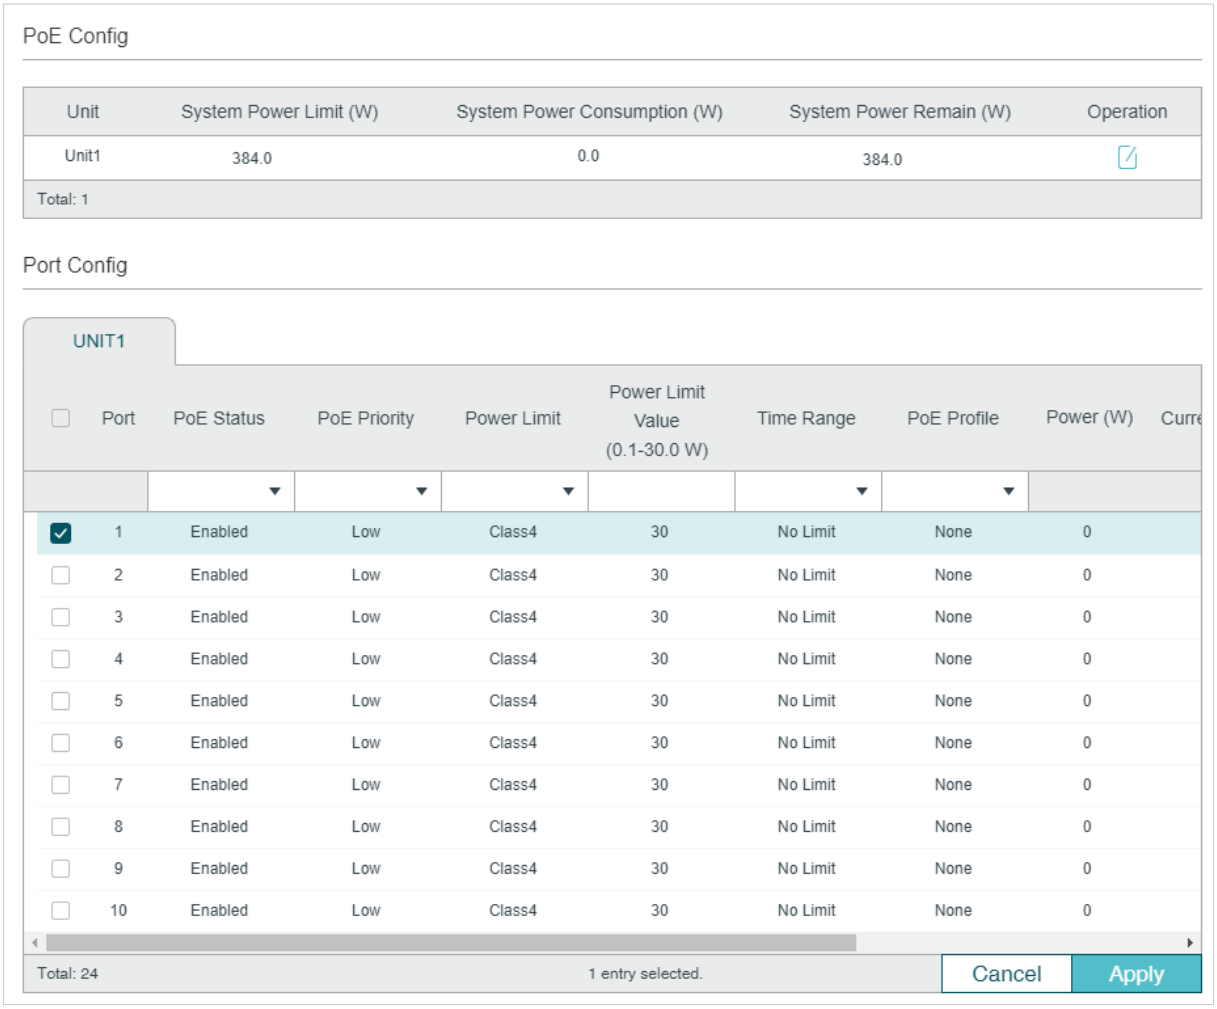

Follow these steps to bind the profile to the corresponding ports:

1) In the **PoE Config** section, you can view the current PoE parameters.

System Power Limit (w)	Displays the maximum power the PoE switch can supply.
System Power Consumption (w)	Displays the real-time system power consumption of the PoE switch.
System Power Remain (w)	Displays the real-time system remaining power of the PoE switch.

In addition, you can click and configure the System Power Limit. Click **Apply**.

Figure 6-5 Configuring System Power Limit



Unit	Displays the unit number.
System Power Limit	Specify the maximum power the PoE switch can supply.

2) In the **Port Config** section, select one or more ports and configure the following two parameters: Time Range and PoE Profile. Click **Apply** and the PoE parameters of the selected PoE Profile, such as PoE Status and PoE Priority, will be displayed in the table.

PoE Status	Displays the PoE function for on corresponding port. The port can supply power to the PD when its status is enable.
PoE Priority	Displays the priority level for the corresponding port. When the supply power exceeds the system power limit, the switch will power off PDs on low-priority ports to ensure stable running of other PDs.
Power Limit	Displays the maximum power the corresponding port can supply.
Power Limit Value (0.1W-30.0W)	Displays the power limit value.
Time Range	Select a time range, then the port will supply power only during the time range. For how to create a time range, refer to *Time Range Configuration*.
PoE Profile	Select the PoE profile for the desired port. If one profile is selected, you will not be able to modify PoE status, PoE priority or power limit manually.
Power (W)	Displays the port's real-time power supply.
Current (mA)	Displays the port's real-time current.
Voltage (V)	Displays the port's real-time voltage.
PD Class	Displays the class the linked PD belongs to.
Power Status	Displays the port's real-time power status.

6.2 Using the CLI

6.2.1 Configuring the PoE Parameters Manually

Follow these steps to configure the basic PoE parameters:

Step 1	**configure** Enter global configuration mode.
Step 2	**power inline consumption** *power-limit* Specify the maximum power the PoE switch can supply globally. *power-limit*: Specify the maximum power the PoE switch can supply. It ranges from 1.0 to 384.0W, and the default value is 384.0W.
Step 3	**interface { fastEthernet** *port* **| range fastEthernet** *port-list* **| gigabitEthernet** *port* **| range gigabitEthernet** *port-list* **| ten-gigabitEthernet** *port* **| range ten-gigabitEthernet** *port-list* **}** Enter Interface Configuration mode. *port*: Specify the Ethernet port number, for example 1/0/1. *port-list:* Specify the list of Ethernet ports, for example 1/0/1-3, 1/0/5.
Step 4	**power inline supply {** enable **|** disable **}** Specify the PoE status for the corresponding port. enable **|** disable: Enable or disable the PoE function. By default, it is enable.
Step 5	**power inline priority {** low **|** middle **|** high **}** Specify the PoE priority for the corresponding port. low **|** middle **|** high: Select the priority level for the corresponding port. When the supply power exceeds the system power limit, the switch will power off PDs on low-priority ports to ensure stable running of other PDs. The default setting is low.
Step 6	**power inline consumption {** *power-limit* **|** auto **|** class1 **|** class2 **|** class3 **|** class4 **}** Specify the maximum power the corresponding port can supply. *power-limit* | auto | class1 | class2 | class3 | class4: Select or enter the maximum power the corresponding port can supply. The following options are provided: Auto represents that the switch will allocate the maximum power that the port can supply automatically. Class1 represents 4W, Class2 represents 7W, Class3 represents 15.4W and Class4 represents 30W, or you can enter a value manually. The value ranges from 1 to 300. It is in the unit of 0.1 watt. For instance, if you want to configure the maximum power as 5W, you should enter 50. By default, it is Class4.
Step 7	**power inline time-range** *name* Specify a time range for the port. Then the port will supply power only during the time range. For how to create a time range, refer to *Time Range Configuration*. *name:* Specify the name of the time range.
Step 8	**show power inline** Verify the global PoE information of the system.

Step 9	**show power inline configuration interface [fastEthernet { *port* | *port-list* } | gigabitEthernet { *port* | *port-list* } | ten-gigabitEthernet { *port* | *port-list* }]** Verify the PoE configuration of the corresponding port. *port*: Specify the Ethernet port number, for example 1/0/1. *port-list*: Specify the list of Ethernet ports, in the format of 1/0/1-3, 1/0/5.
Step 10	**show power inline information interface [fastEthernet { *port* | *port-list* } | gigabitEthernet { *port* | *port-list* } | ten-gigabitEthernet { *port* | *port-list* }]** Verify the real-time PoE status of the corresponding port. *port*: Specify the Ethernet port number, for example 1/0/1. *port-list*: Specify the list of Ethernet ports, in the format of 1/0/1-3, 1/0/5.
Step 11	**end** Return to privileged EXEC mode.
Step 12	**copy running-config startup-config** Save the settings in the configuration file.

The following example shows how to set the system power limit as 160W. Set the priority as middle and set the power limit as class3 for the port 1/0/5.

Switch#configure

Switch(config)#power inline consumption 160

Switch(config)#interface gigabitEthernet 1/0/5

Switch(config-if)#power inline supply enable

Switch(config-if)#power inline priority middle

Switch(config-if)#power inline consumption class3

Switch(config-if)#show power inline

System Power Limit: 160.0w

System Power Consumption: 0.0w

System Power Remain: 160.0w

Switch(config-if)#show power inline configuration interface gigabitEthernet 1/0/5

Interface	PoE-Status	PoE-Prio	Power-Limit(w)	Time-Range	PoE-Profile
Gi1/0/5	Enable	Middle	Class3	No Limit	None

Switch(config-if)#show power inline information interface gigabitEthernet 1/0/5

Interface	Power(w)	Current(mA)	Voltage(v)	PD-Class	Power-Status
Gi1/0/5	1.3	26	53.5	Class 2	ON

Switch(config-if)#end

Switch#copy running-config startup-config

6.2.2 Configuring the PoE Parameters Using the Profile

Follow these steps to configure the PoE profile:

Step 1	**configure** Enter global configuration mode.
Step 2	**power inline consumption** *power-limit* Specify the maximum power the PoE switch can supply globally. *power-limit*: Specify the maximum power the PoE switch can supply. It ranges from 1.0 to 384.0W, and the default value is 384.0W.
Step 3	**power profile** *name* **[supply {** enable **|** disable **} [priority {** low **|** middle **|** high **} [consumption {** *power-limit* **|** auto **|** class1 **|** class2 **|** class3 **|** class4 **}]]]** Create a PoE profile for the switch. In a profile, the PoE status, PoE priority and power limit are configured. You can bind a profile to the corresponding port to quickly configure the PoE function. *name*: Specify a name for the PoE profile. It ranges from 1 to 16 characters. If the name contains spaces, enclose the name in double quotes. enable **|** disable: Specify the PoE status for the profile. By default, it is enable. low	middle	high: Select the priority level for the profile. When the supply power exceeds the system power limit, the switch will power off PDs on low-priority ports to ensure stable running of other PDs. power-limit	auto	class1	class2	class3	class4: Select or enter the maximum power the corresponding port can supply. The following options are provided: Auto represents that the switch will assign a value of maximum power automatically. Class1 represents 4W, Class2 represents 7W, Class3 represents 15.4W and Class4 represents 30W or you can enter a value manually. The value ranges from 1 to 300. It is in the unit of 0.1 watt. For instance, if you want to configure the maximum power as 5W, you should enter 50.
Step 4	**interface { fastEthernet** *port* **| range fastEthernet** *port-list* **| gigabitEthernet** *port* **| range gigabitEthernet** *port-list* **| ten-gigabitEthernet** *port* **| range ten-gigabitEthernet** *port-list* **}** Enter Interface Configuration mode. *port*: Specify the Ethernet port number, for example 1/0/1. *port-list:* Specify the list of Ethernet ports, for example 1/0/1-3, 1/0/5.

Step 5	**power inline profile** *name* Bind a PoE profile to the desired port. If one profile is selected, you will not be able to modify PoE status, PoE priority or power limit manually. *name*: Specify the name of the PoE profile. If the name contains spaces, enclose the name in double quotes.
Step 6	**power inline time-range** *name* Specify a time range for the port. Then the port will supply power only during the time range. For how to create a time range, refer to *Time Range Configuration*. *name:* Specify the name of the time range.
Step 7	**show power profile** Verify the defined PoE profile.
Step 8	**show power inline configuration interface [fastEthernet {** *port* **|** *port-list* **}	gigabitEthernet {** *port* **|** *port-list* **}	ten-gigabitEthernet {** *port* **|** *port-list* **}]** Verify the PoE configuration of the corresponding port. *port*: Specify the Ethernet port number, for example 1/0/1. *port-list*: Specify the list of Ethernet ports, in the format of 1/0/1-3, 1/0/5.
Step 9	**show power inline information interface [fastEthernet {** *port* **|** *port-list* **}	gigabitEthernet {** *port* **|** *port-list* **}	ten-gigabitEthernet {** *port* **|** *port-list* **}]** Verify the real-time PoE status of the corresponding port. *port*: Specify the Ethernet port number, for example 1/0/1. *port-list*: Specify the list of Ethernet ports, in the format of 1/0/1-3, 1/0/5.
Step 10	**end** Return to privileged EXEC mode.
Step 11	**copy running-config startup-config** Save the settings in the configuration file.

The following example shows how to create a profile named profile1and bind the profile to the port 1/0/6.

Switch#configure

Switch(config)#power profile profile1 **supply** enable **priority** middle **consumption** class2

Switch(config)#show power profile

Index	Name	Status	Priority	Power-Limit(w)
1	profile1	Enable	Middle	Class2

Switch(config)#interface gigabitEthernet 1/0/6

Switch(config-if)#power inline profile profile1

Switch(config-if)#show power inline configuration interface gigabitEthernet 1/0/6

Interface	PoE-Status	PoE-Prio	Power-Limit(w)	Time-Range	PoE-Profile
Gi1/0/6	Enable	Middle	Class2	No Limit	profile1

Switch(config-if)#end

Switch#copy running-config startup-config

7 SDM Template Configuration

7.1 Using the GUI

Choose the menu **SYSTEM** > **SDM Template** to load the following page.

Figure 7-1 Configuring SDM Template (For T2600G-28TS/T2600G-28MPS/T2600G-28SQ/T2600G-52TS)


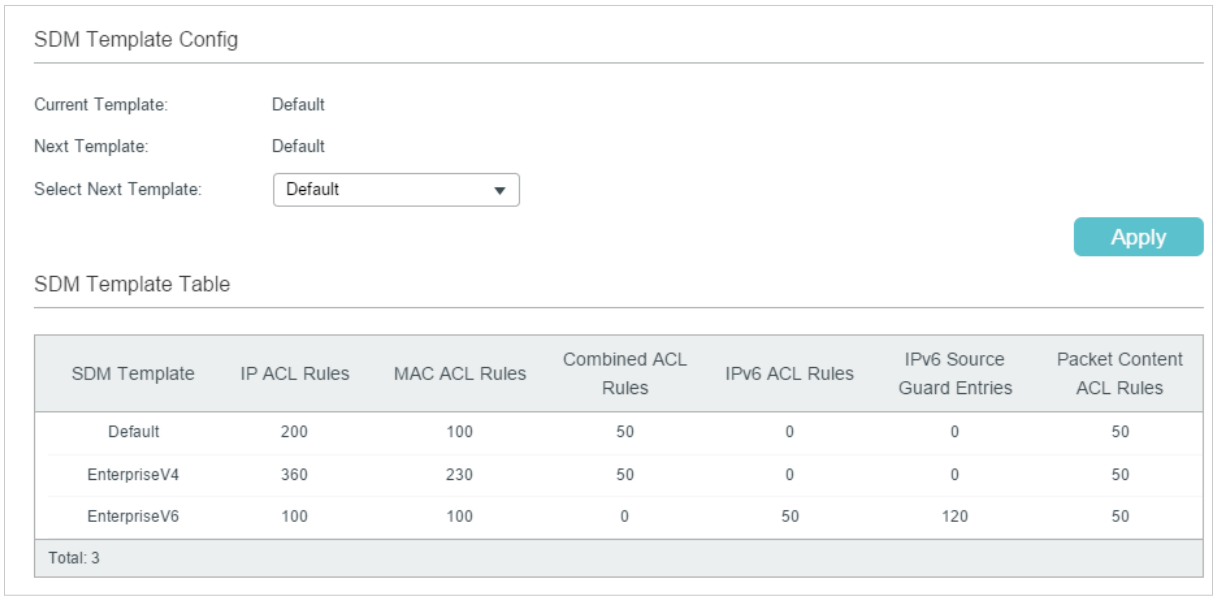


Figure 7-2 Configuring SDM Template (For T2600G-18TS)

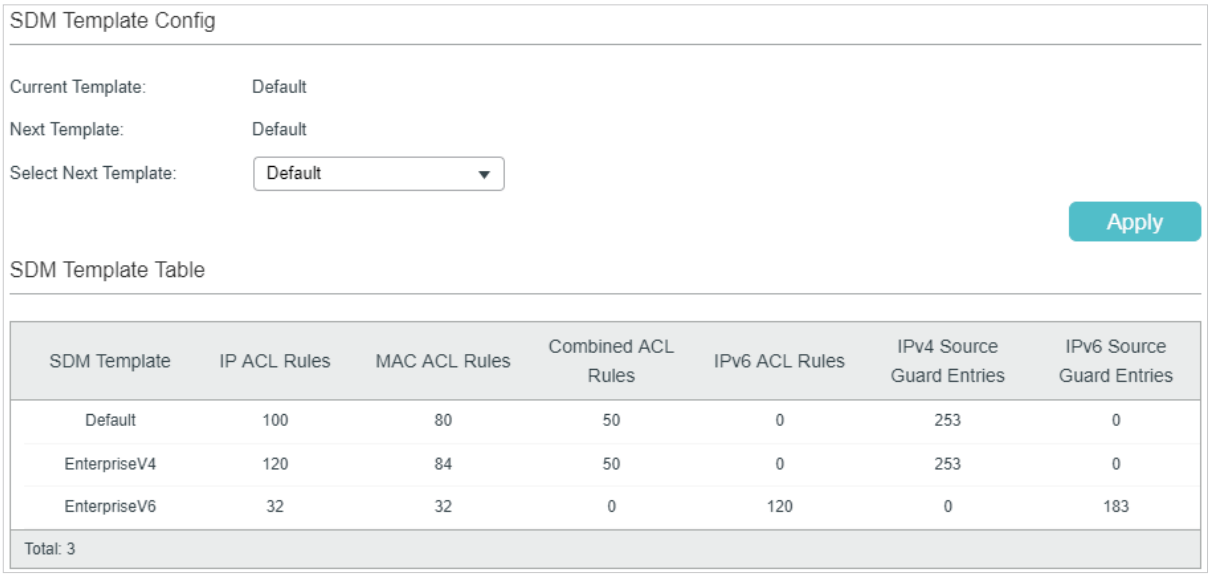

In **SDM Template Config** section, select one template and click **Apply**. The setting will be effective after the switch is rebooted.

Current Template	Displays the template currently in effect.

Next Template	Displays the template that will be effective after the reboot.
Select Next Template	Select the template that will be effective after the next reboot. **Default**: Select the template of default. It gives balance to the IP ACL rules, MAC ACL rules and ARP detection entries. **EnterpriseV4**: Select the template of enterpriseV4. It maximizes system resources for IP ACL rules and MAC ACL rules. **EnterpriseV6**: Select the template of enterpriseV6. It allocates resources to IPv6 ACL rules.

The Template Table displays the resources allocation of each template. The values are different for different switch models.

SDM Template	Displays the name of the templates.
IP ACL Rules	Displays the number of IP ACL Rules including Layer 3 ACL Rules and Layer 4 ACL Rules.
MAC ACL Rules	Displays the number of Layer 2 ACL Rules.
Combined ACL Rules	Displays the number of combined ACL rules.
IPv6 ACL Rules	Displays the number of IPv6 ACL rules.
ARP Detection Entries	Displays the number of TCAM entries for ARP defend.
IPv4 Source Guard Entries	Displays the number of IPv4 source guard entries. Note: IPv4 Source Guard Entries is only available for T2600G-18TS.
IPv6 Source Guard Entries	Displays the number of IPv6 source guard entries.
Packet Content ACL Rules	Displays the number of packet content ACL rules. Note: Packet Content ACL Rules is not available for T2600G-18TS.

7.2 Using the CLI

Follow these steps to configure the SDM template:

Step 1	**configure** Enter global configuration mode.

Step 2	**show sdm prefer {** used | default | enterpriseV4 | enterpriseV6 **}** View the template table. It will help you determine which template is suitable for your network. used: Displays the resource allocation of the current template. default: Displays the resource allocation of the default template. enterpriseV4: Displays the resource allocation of the enterpriseV4 template. enterpriseV6: Displays the resource allocation of the enterpriseV6 template.
Step 3	**sdm prefer {** default | enterpriseV4 | enterpriseV6 **}** Select the template that will be effective after the switch is rebooted. default: Select the template of default. It gives balance to the IP ACL rules, MAC ACL rules and ARP detection entries. enterpriseV4: Select the template of enterpriseV4. It maximizes system resources for IP ACL rules and MAC ACL rules. enterpriseV6: Select the template of enterpriseV4. It allocates resources to IPv6 ACL rules.
Step 4	**end** Return to privileged EXEC mode.
Step 5	**copy running-config startup-config** Save the settings in the configuration file.

The following example shows how to set the SDM template as enterpriseV4.

Switch#config

Switch(config)#show sdm prefer enterpriseV4

“enterpriseV4” template:

number of IP ACL Rules : 360

number of MAC ACL Rules : 230

number of Combined ACL Rules : 0

number of IPV6 ACL Rules : 0

number of IPV6 Source Guard Entries : 0

number of ARP Detection Entries : 7

number of Packet Content ACL Rules : 0

Switch(config)#sdm prefer enterpriseV4

Switch to “enterpriseV4” tempale.

Changes to the running SDM preferences have been stored, but cannot take effect until reboot the switch.

Switch(config)#end

Switch#copy running-config startup-config

8 Time Range Configuration

To complete Time Range configuration, follow these steps:


1) Add time range entries.
2) Configure Holiday time range.

8.1 Using the GUI

8.1.1 Adding Time Range Entries

Choose the menu **SYSTEM** > **Time Range > Time Range Config** and click Add to load the following page.

Figure 8-1 Configuring Time Range

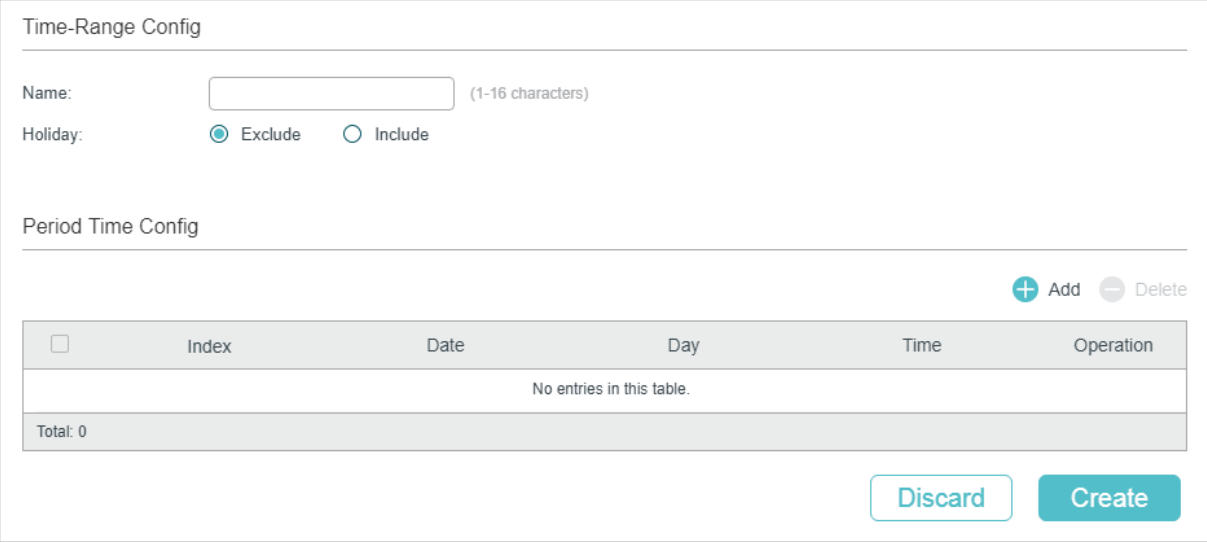


Follow these steps to add time range entries:

1) In the **Time-Range Config** section, specify a name for the entry and select the Holiday mode.

Name	Specify a name for the entry.
Holiday	Select to include or exclude the holiday in the time range. **Exclude:** The time range will not take effect on holiday. **Include:** The time range will not be affected by holiday. To configure Holiday, refer to *Configuring Holiday*.

2) In the **Period Time Config** section, click Add and the following window will pop up.

Figure 8-2 Adding Period Time

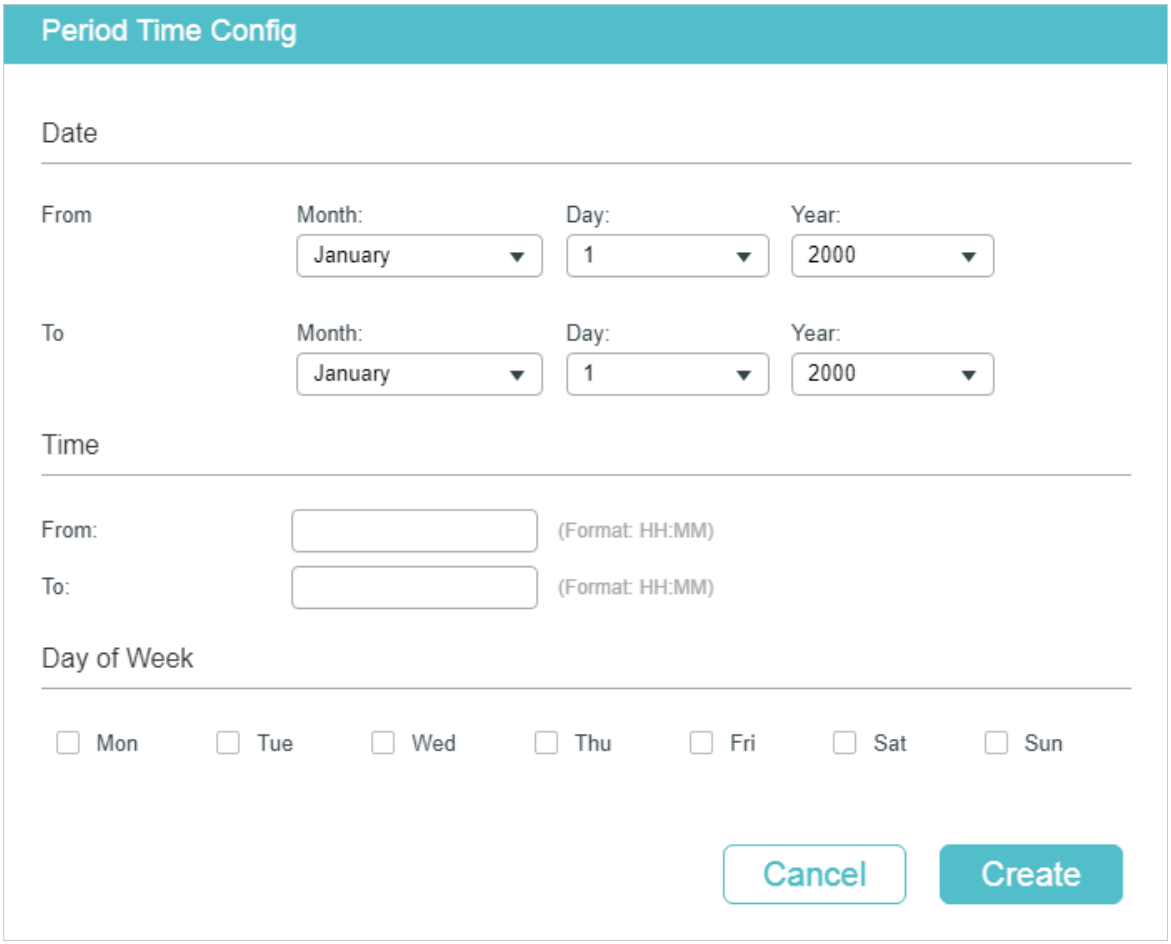


Configure the following parameters and click **Create**:

Date	Specify the start date and end date of this time range.
Time	Specify the start time and end time of a day.
Day of Week	Select days of a week as the period of this time range.

3) Similarly, you can add more entries of period time according to your needs. The final period time is the sum of all the periods in the table. Click **Create**.


Figure 8-3 View Configruation Result

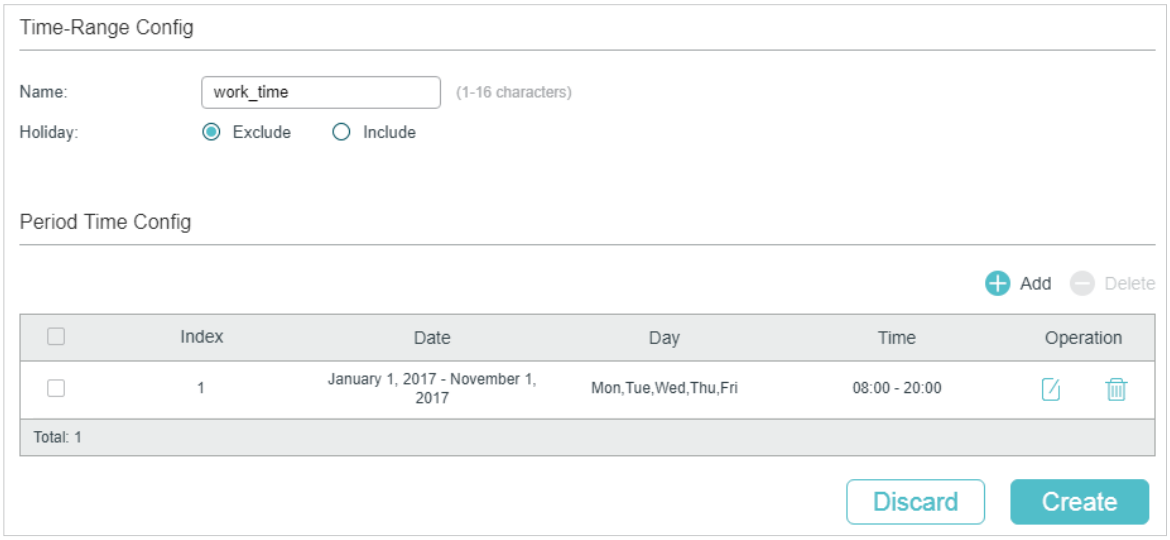

8.1.2 Configuring Holiday

Choose the menu **SYSTEM** > **Time Range** > **Holiday Config** and click Add to load the following page.

Figure 8-1 Configuring Holiday

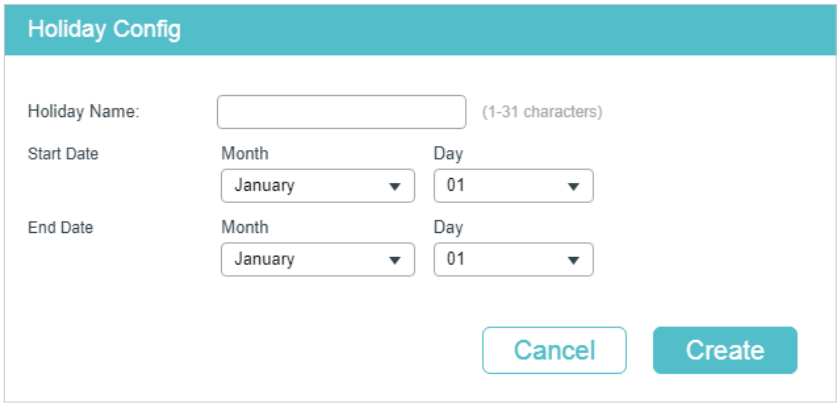

Configure the following parameters and click **Create** to add a Holiday entry.

Holiday Name	Specify a name for the entry.
Start Date	Specify the start date of the Holiday time range.
End Date	Specify the end date of the Holiday time range.

Similarly, you can add more Holiday entries. The final Holiday time range is the sum of all the entries.

8.2 Using the CLI

8.2.1 Adding Time Range Entries

Follow these steps to add time range entries:

Step 1	**configure** Enter global configuration mode.
Step 2	**time-range** *name* Create a time-range entry. *name*: Specify a name for the entry.
Step 3	**holiday {** exclude | include **}** Include or exclude the holiday in the time range. exclude: The time range will not take effect on holiday. include: The time range will not be affected by holiday. To configure Holiday, refer to *Configuring Holiday*.
Step 4	**absolute from** *start-date* **to** *end-date* Specify the start date and end date of this time range. *start-date*: Specify the start date in the format MM/DD/YYYY. *end-date*: Specify the end date in the format MM/DD/YYYY.
Step 5	**periodic start** *start-time* **end** *end-time* **day-of-the-week** *week-day* Specify days of a week as the period of this time range. *start-time*: Specify the start end time of a day in the format HH:MM. *end-time*: Specify the end time and end time of a day in the format HH:MM. *week-day*: Specify the days of week in the format of 1-3, 7. The numbers 1-7 respectively represent Monday, Tuesday, Wednesday, Thursday, Friday, Saturday and Sunday.
Step 6	**show time-range** View the configuration of Time Range.
Step 7	**end** Return to privileged EXEC mode.
Step 8	**copy running-config startup-config** Save the settings in the configuration file.

The following example shows how to create a time range entry and set the name as time1, holiday mode as exclude, absolute time as 10/01/2017 to 10/31/2017 and periodic time as 8:00 to 20:00 on every Monday and Tuesday:

Switch#config

Switch(config)#time-range time1

Switch(config-time-range)#holiday exclude

Switch(config-time-range)#absolute from 10/01/2017 **to** 10/31/2017

Switch(config-time-range)#periodic start 08:00 **end** 20:00 **day-of-the-week** 1,2

Switch(config-time-range)#show time-range

Time-range entry: 12 (Inactive)

Time-range entry: time1 (Inactive)

holiday: exclude

number of time slice: 1

01 - 10/01/2017 to 10/31/2017

- 08:00 to 20:00 on 1,2

Switch(config-time-range)#end

Switch#copy running-config startup-config

8.2.2 Configuring Holiday

Follow these steps to configure Holiday time range:

Step 1	**configure** Enter global configuration mode.
Step 2	**holiday** *name* **start-date** *start-date* **end-date** *end-date* Create a holiday entry. *name*: Specify a name for the entry. *start-date* : Specify the start date in the format MM/DD. *end-date*: Specify the end date in the format MM/DD.
Step 3	**show holiday** View the configuration of Holiday.
Step 4	**end** Return to privileged EXEC mode.

Step 8	**copy running-config startup-config** Save the settings in the configuration file.

The following example shows how to create a holiday entry and set the entry name as holiday1 and set start date and end date as 07/01 and 09/01:

Switch#config

Switch(config)#holiday holiday1 **start-date** 07/01 **end-date** 09/01

Switch(config)#show holiday

Index Holiday Name Start-End

----- ------------ ---------

1 holiday1 07.01-09.01

Switch(config)#end


Switch#copy running-config startup-config

9 Example for PoE Configurations

9.1 Network Requirements

The network topology of a company is shown as below. Camera1 and Camera2 work for the security of the company and cannot be power off all the time. AP1 and AP2 provide the internet service and only work in the office time.

Figure 9-1 Network Topology

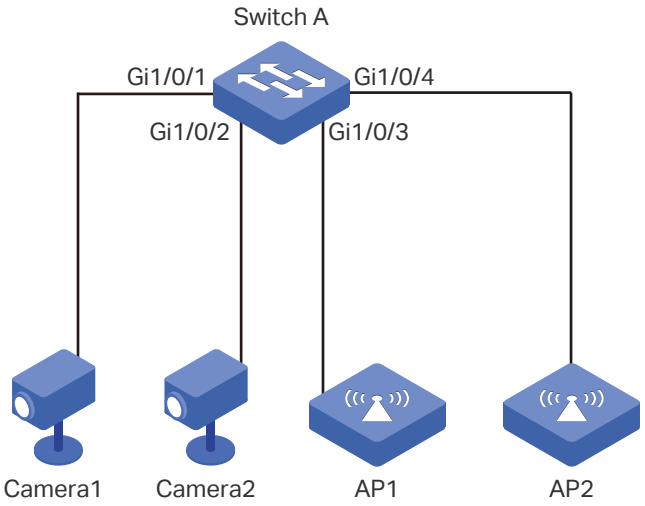

9.2 Configuring Scheme


To implement this requirement, you can set a PoE time-range as the office time, for example, from 08:30 to 18:00 on work days. Then apply the settings to port 1/0/3 and 1/0/4. Port 1/0/1 and port1/0/2 need to supply power all the time, so the time range configurations can be left as the default settings here.

9.3 Using the GUI

The configurations of port 1/0/4 is similar with the configurations of port 1/0/3. Here we take port 1/0/3 for example.


1) Choose the menu **SYSTEM** > **Time Range** > **Time Range Create** and click Add to load the following page.

Figure 9-2 Creating Time Range

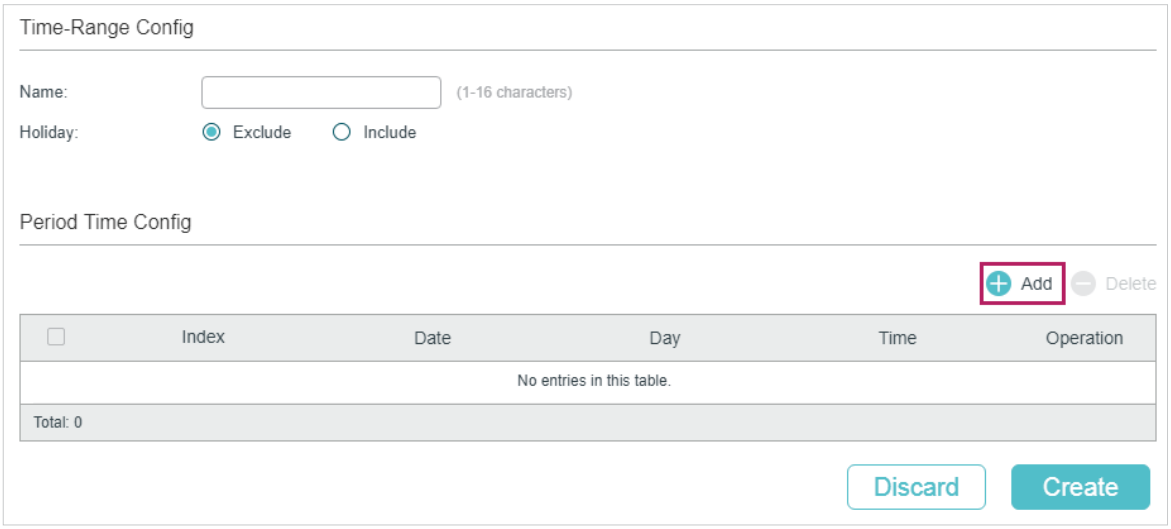


2) Click Add and the following window will pop up. Set **Date, Time** and **Day** of Week as the following figure shows. Click **Create**.

Figure 9-3 Creating a Periodic Time

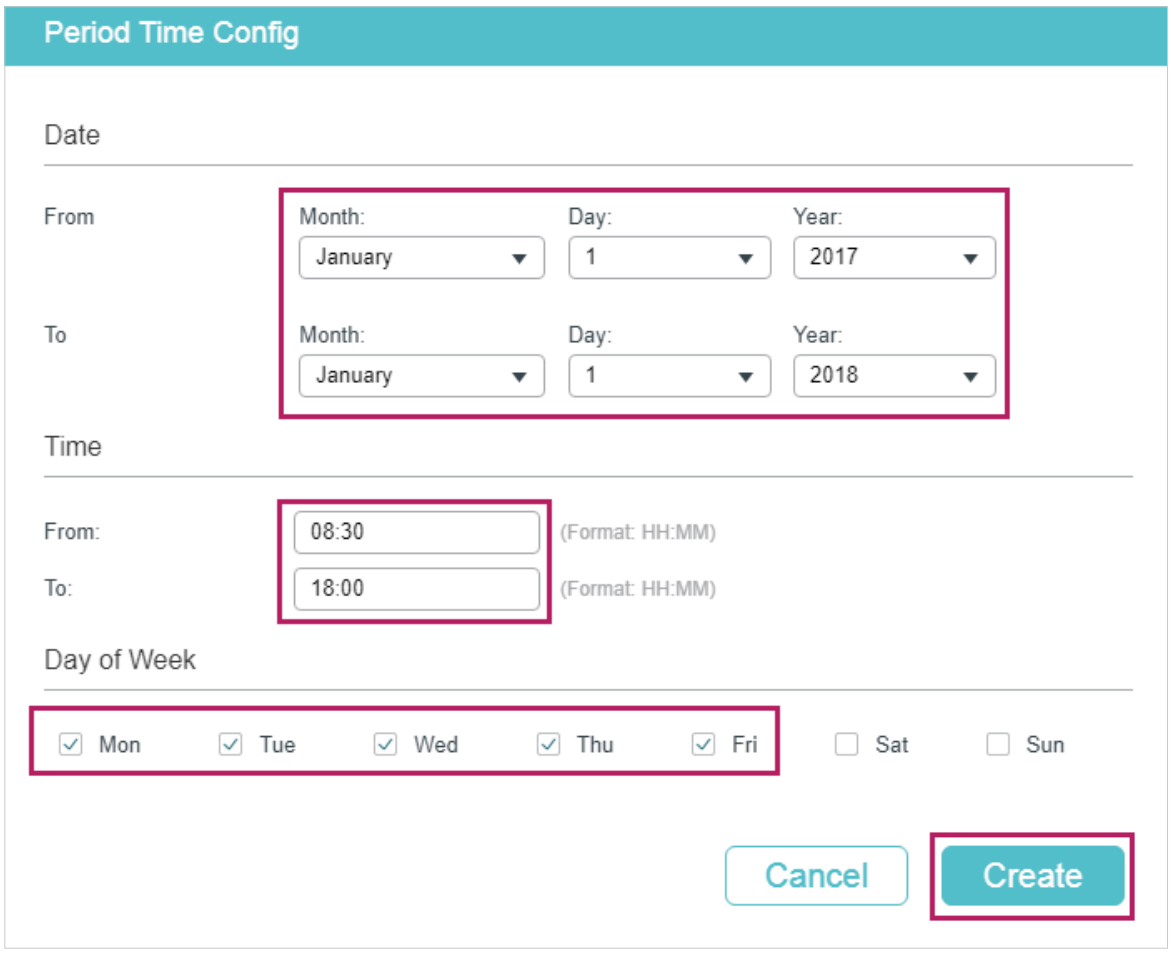


3) Specify a name for the time range. Click **Create**.

Figure 9-4 Configuring Time Range

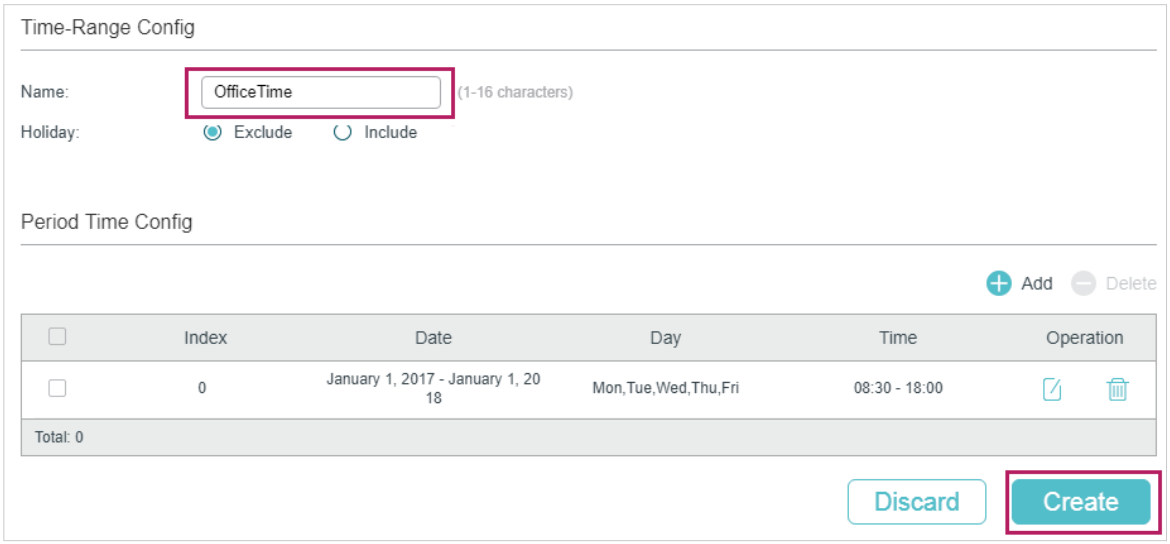

4) Choose the menu **SYSTEM** > **PoE** > **PoE Config** to load the following page. Select port 1/0/3 and set the **Time Range** as OfficeTime. Click **Apply**.

Figure 9-5 Configure the Port

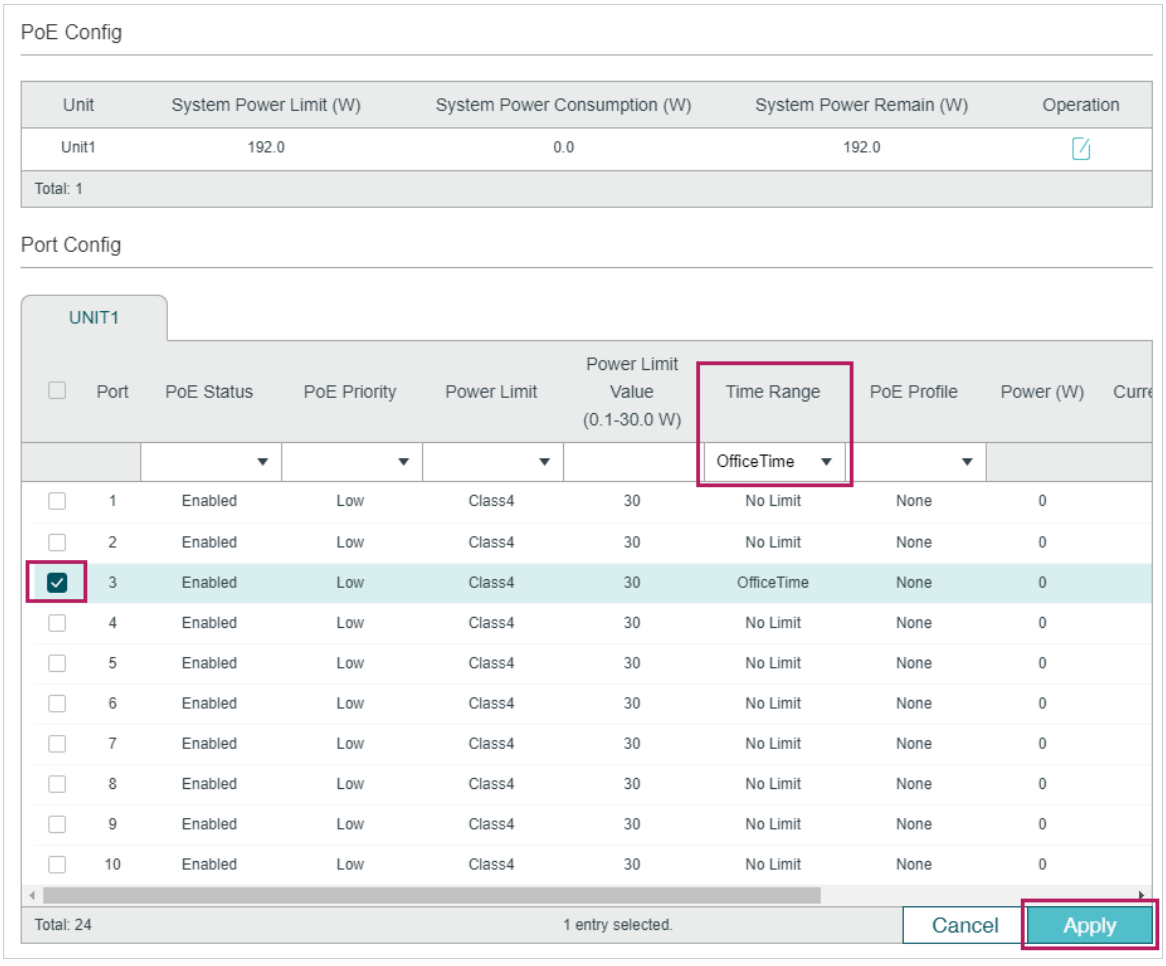

5) Click Save to save the settings.

9.4 Using the CLI

The configurations of Port1/0/4 is similar with the configuration of port 1/0/3. Here we take port 1/0/3 for example.

1) Create a time-range.

   Switch_A#config

   Switch_A(config)#time-range office-time

   Switch_A(config-time-range)#holiday exclude

   Switch_A(config-time-range)#absolute from 01/01/2017 to 01/01/2018

   Switch_A(config-time-range)#periodic start 08:30 end 18:00 day-of-the-week 1-5

   Switch_A(config-time-range)#exit

2) Enable the PoE function on the port 1/0/3. Specify the basic parameters for the port 1/0/3 and bind the time-range "office time" to the port.

   Switch_A(config)#interface gigabitEthernet 1/0/3

   Switch_A(config-if)#power inline supply enable

   Switch_A(config-if)#power inline time-range office-time

   Switch_A(config-if)#end

   Switch_A#copy running-config startup-config

Verify the Configuration

Verify the configuration of the time-range:

Switch_A#show time-range

Time-range entry: office-time (Active)

holiday: exclude

number of time slice: 1

01 - 01/01/2017 to 01/01/2018

- 08:00 to 18:00 on 1,2,3,4,5

Verify the configuration of the PoE basic parameters:

Switch_A#show power inline configuration interface gigabitEthernet 1/0/3

Interface	PoE-Status	PoE-Prio	Power-Limit(w)	Time-Range	PoE-Profile
Gi1/0/3	Enable	Low	Class4	office-time	None

10 Appendix: Default Parameters

Default settings of System Info are listed in the following tables.

Table 10-1 Default Settings of Device Description Configuration

Parameter	Default Setting
Device Name	The model name of the switch.
Device Location	SHENZHEN
System Contact	www.tp-link.com

Table 10-2 Default Settings of System Time Configuration

Parameter	Default Setting
Time Source	Manual

Table 10-3 Default Settings of Daylight Saving Time Configuration

Parameter	Default Setting
DST status	Disabled

Default settings of User Management are listed in the following table.

Table 10-4 Default Settings of User Configuration

Parameter	Default Setting
User Name	admin
Password	admin
Access Level	Admin

Default settings of System Tools are listed in the following table.

Table 10-5 Default Settings of Boot Configuration

Parameter	Default Setting
Current Startup Image	image1.bin
Next Startup Image	image1.bin
Backup Image	image2.bin
Current Startup Config	config1.cfg
Next Startup Config	config1.cfg

Parameter	Default Setting
Backup Config	config2.cfg

Default setting of EEE is listed in the following table.

Table 10-6 Default Settings of EEE Configuration

Parameter	Default Setting
Status	Disabled

Default settings of PoE is listed in the following table.

Table 10-7 Default Settings of PoE Configuration

Parameter	Default Setting
PoE Config	
System Power Limit	384.0W
Port Config	
PoE Status	Enable
PoE Priority	Low
Power Limit (0.1w-30.0w)	Class 4
Time Range	No Limit
PoE Profile	None
Profile Config	
Profile Name	None
PoE Status	Enable
PoE Priority	Low
Power Limit	Auto

Default settings of SDM Template are listed in the following table.

Table 10-8 Default Settings of SDM Template Configuration

Parameter	Default Setting
Current Template ID	Default
Next Template ID	Default

Default settings of Time Range are listed in the following table.

Table 10-9 Default Settings of Time Range Configuration

Parameter	Default Setting
Holiday	Include

Part 3

Managing Physical Interfaces

CHAPTERS

1. Physical Interface
2. Basic Parameters Configurations
3. Port Isolation Configurations
4. Loopback Detection Configuration
5. Configuration Examples
6. Appendix: Default Parameters

1 Physical Interface

1.1 Overview

Interfaces are used to exchange data and interact with interfaces of other network devices. Interfaces are classified into physical interfaces and layer 3 interfaces.

- Physical interfaces are the ports on the switch panel. They forward packets based on MAC address table.
- Layer 3 interfaces are used to forward IPv4 and IPv6 packets using static or dynamic routing protocols. You can use Layer 3 interfaces for IP routing and inter-VLAN routing.

This chapter introduces the configurations for physical interfaces.

1.2 Supported Features

The switch supports the following features about physical interfaces:

Basic Parameters

You can configure port status, speed mode, duplex mode, flow control and other basic parameters for ports.

Port Isolation

You can use this feature to restrict a specific port to send packets to only the ports in the forwarding port list that you configure.

Loopback Detection


This function allows the switch to detect loops in the network. When a loop is detected on a port or VLAN, the switch will display an alert on the management interface and block the corresponding port or VLAN according to your configurations.

2 Basic Parameters Configurations

2.1 Using the GUI

Choose the menu **L2 FEATURES > Switching > Port > Port Config** to load the following page.

Figure 2-1 Configuring Basic Parameters

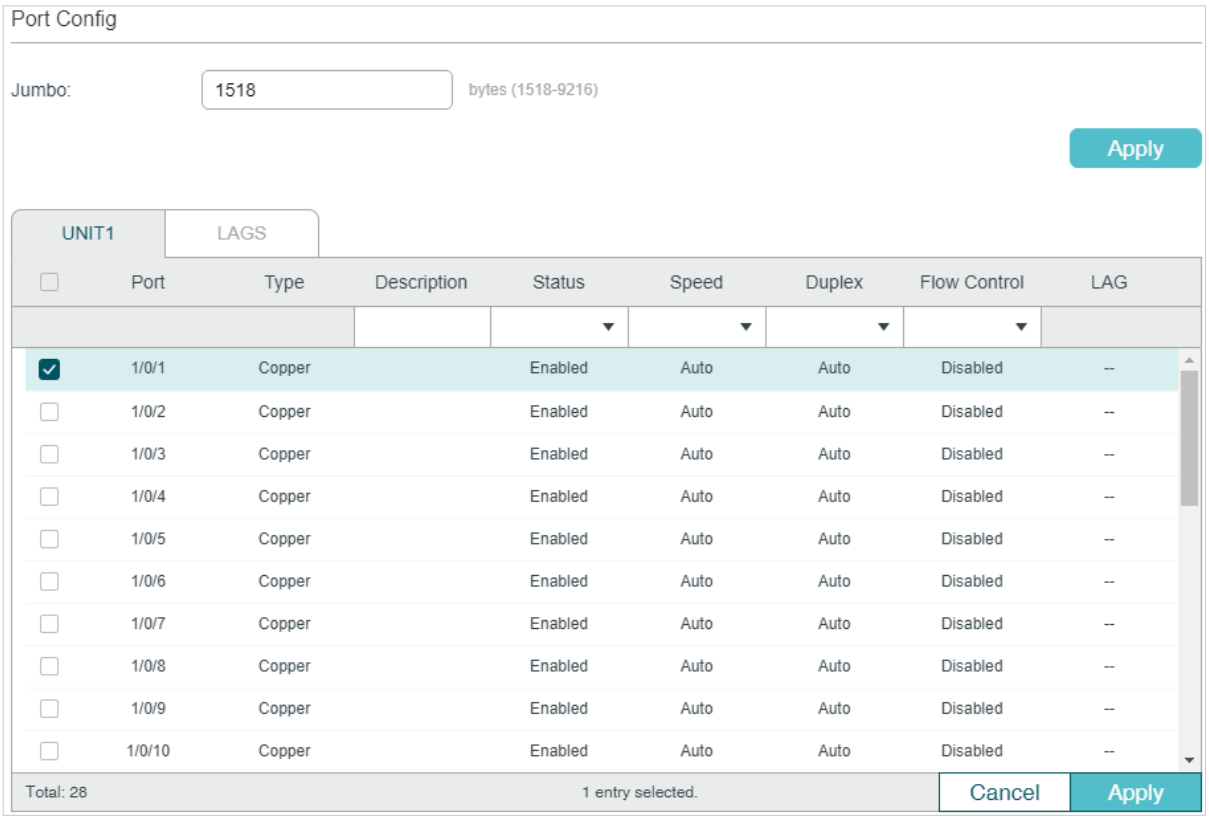

Follow these steps to configure basic parameters for the ports:

1) Configure the MTU size of jumbo frames for all the ports, then click **Apply**.

Jumbo	Configure the size of jumbo frames. By default, it is 1518 bytes. Generally, the MTU (Maximum Transmission Unit) size of a normal frame is 1518 bytes. If you want the switch supports to transmit frames of which the MTU size is greater than 1518 bytes, you can configure the MTU size manually here.

2) Select one or more ports to configure the basic parameters. Then click **Apply**.

UNIT/LAGS	Click the **UNIT** number to configure physical ports. Click **LAGS** to configure LAGs.
Type	Displays the port type. **Copper** indicates an Ethernet port, and **Fiber** indicates an SFP port.

Description	(Optional) Enter a description for the port.
Status	With this option enabled, the port forwards packets normally. Otherwise, the port cannot work. By default, it is enabled.
Speed	Select the appropriate speed mode for the port. When **Auto** is selected, the port automatically negotiates speed mode with the neighbor device. The default setting is **Auto**. It is recommended to select **Auto** if both ends of the link support auto-negotiation.
Duplex	Select the appropriate duplex mode for the port. There are three options: **Half**, **Full** and **Auto**. The default setting is **Auto**. **Half**: The port can send and receive packets, but only one-way at a time. **Full**: The port can send and receive packets simultaneously. **Auto**: The port automatically negotiates duplex mode with the peer device.
Flow Control	With this option enabled, when a device gets overloaded it will send a PAUSE frame to notify the peer device to stop sending data for a specified period of time, thus avoiding the packet loss caused by congestion. By default, it is disabled.

Note:

We recommend that you set the ports on both ends of a link as the same speed and duplex mode.

2.2 Using the CLI

Follow these steps to set basic parameters for the ports.

Step 1	**configure** Enter global configuration mode.
Step 2	**jumbo-size** *size* Change the MTU (Maximum Transmission Unit) size to support jumbo frames. The default MTU size for frames received and sent on all ports is 1518 bytes. To transmit jumbo frames, you can manually configure MTU size of frames up to 9216 bytes. *size*: Configure the MTU size of jumbo frames. The value ranges from 1518 to 9216bytes.
Step 3	**interface { fastEthernet** *port* **| range fastEthernet** *port-list* **| gigabitEthernet** *port* **| range gigabitEthernet** *port-list* **| ten-gigabitEthernet** *port* **| ten-range gigabitEthernet** *port-list* **| port-channel** *port-channel* **| range port-channel** *port-channel-list* **|}** Enter interface configuration mode.

Step 4	Configure basic parameters for the port: **description** *string* Give a port description for identification. *string*: Content of a port description, ranging from 1 to 16 characters. **shutdown** **no shutdown** Use **shutdown** to disable the port, and use **no shutdown** to enable the port. When the status is enabled, the port can forward packets normally, otherwise it will discard the received packets. By default, all ports are enabled. **speed {** 10 | 100 | 1000 | 10000 | auto **}** Set the appropriate speed mode for the port. 10 | 100 | 1000 | 10000 | auto: Speed mode of the port. The options are subject to your actual product. The device connected to the port should be in the same speed and duplex mode with the port. When auto is selected, the speed mode will be determined by auto-negotiation. **duplex {** auto | full | half **}** Set the appropriate duplex mode for the port. auto | full | half: Duplex mode of the port. The device connected to the port should be in the same speed and duplex mode with the port. When auto is selected, the duplex mode will be determined by auto-negotiation. **flow-control** Enable the switch to synchronize the data transmission speed with the peer device, avoiding the packet loss caused by congestion. By default, it is disabled.
Step 5	**show interface configuration [fastEthernet** *port* **| gigabitEthernet** *port* **| | ten-gigabitEthernet** *port* **| port-channel** *port-channel-id* **]** Verify the configuration of the port or LAG.
Step 6	**end** Return to privileged EXEC mode.
Step 7	**copy running-config startup-config** Save the settings in the configuration file.

The following example shows how to implement the basic configurations of port1/0/1, including setting a description for the port, configuring the jumbo frame, making the port automatically negotiate speed and duplex with the neighboring port, and enabling the flow-control:

Switch#configure

Switch#jumbo-size 9216

Switch(config)#interface gigabitEthernet 1/0/1

Switch(config-if)#no shutdown

Switch(config-if)#description router connection

Switch(config-if)#speed auto

Switch(config-if)#duplex auto

Switch(config-if)#flow-control

Switch(config-if)#show interface configuration gigabitEthernet 1/0/1

Port	State	Speed	Duplex	FlowCtrl	Jumbo	Description
Gi1/0/1	Enable	Auto	Auto	Enable	Disable	router connection

Switch(config-if)#show jumbo-size

Global jumbo size : 9216

Switch(config-if)#end

Switch#copy running-config startup-config


3 Port Isolation Configurations

3.1 Using the GUI

Port Isolation is used to limit the data transmitted by a port. The isolated port can only send packets to the ports specified in its forwarding Port list.


Choose the menu **L2 FEATURES > Switching > Port > Port Isolation** to load the following page.

Figure 3-1 Port Isolation List

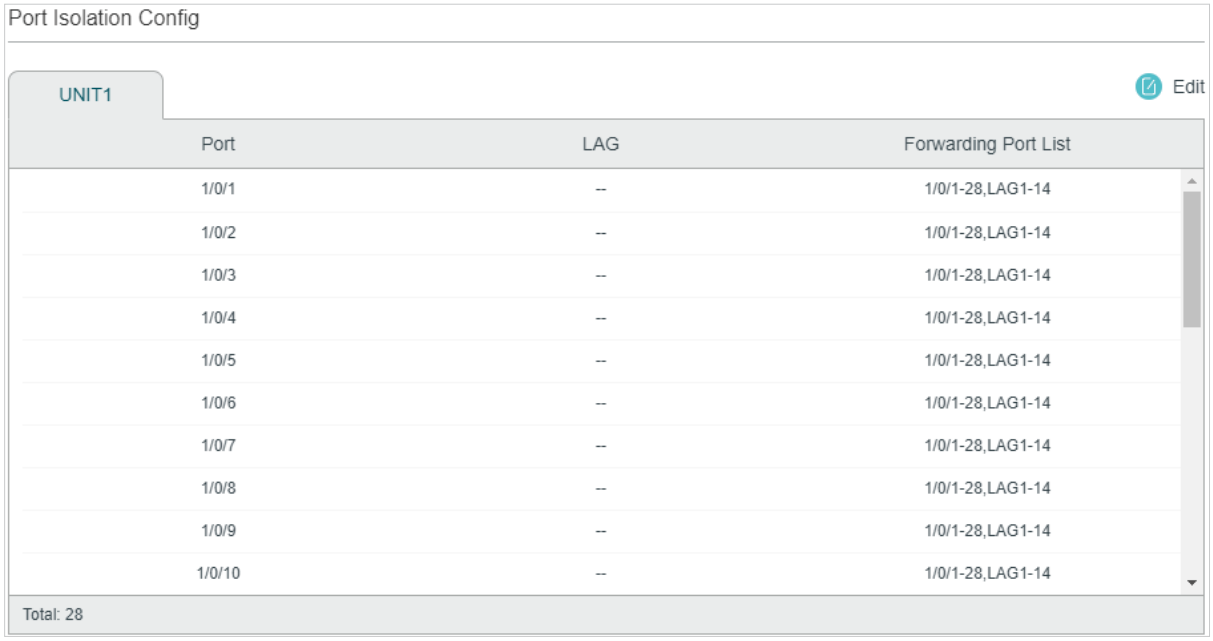

The above page displays the port isolation list. Click Edit to configure Port Isolation on the following page.

Figure 3-2 Port Isolation

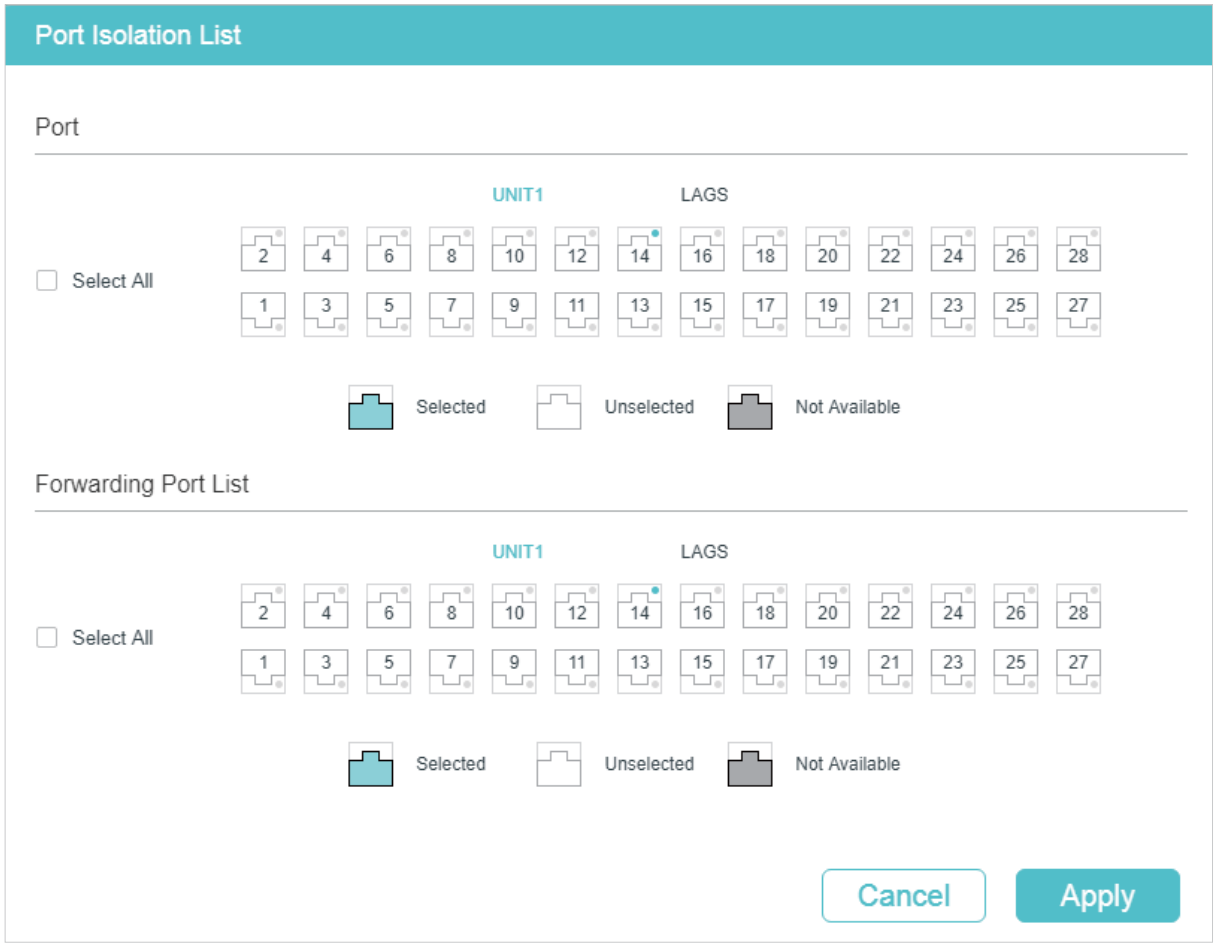

Follow these steps to configure Port Isolation:

1) In the **Port** section, select one or multiple ports to be isolated.
2) In the **Forwarding Port List** section, select the forwarding ports or LAGs which the isolated ports can only communicate with. It is multi-optional.
3) Click **Apply**.

3.2 Using the CLI

Follow these steps to configure Port Isolation:

Step 1	**configure** Enter global configuration mode.
Step 2	**interface { fastEthernet** *port* **| range fastEthernet** *port-list* **| gigabitEthernet** *port* **| range gigabitEthernet** *port-list* **| ten-gigabitEthernet** *port* **| ten-range gigabitEthernet** *port-list* **| port-channel** *port-channel* **| range port-channel** *port-channel-list* **|}** Specify the port to be isolated and enter interface configuration mode.

Step 3	**port isolation { [fa-forward-list** *fa-forward-list*] **[gi-forward-list** *gi-forward-list*] **[te-forward-list** *te-forward-list*] **[po-forward-list** *po-forward-list* **] }** Add ports or LAGs to the forwarding port list of the isolated port. It is multi-optional. *fa-forward-list / gi-forward-list / te-forward-list*: Specify the forwarding Ethernet ports. *po-forward-list:* Specify the forwarding LAGs.
Step 4	**show port isolation interface { fastEthernet** *port* **| gigabitEthernet** *port* **| ten-gigabitEthernet** *port* **| port-channel** *port-channel* **}** Verify the Port Isolation configuration of the specified port.
Step 5	**end** Return to privileged EXEC mode.
Step 6	**copy running-config startup-config** Save the settings in the configuration file.

The following example shows how to add ports 1/0/1-3 and LAG 4 to the forwarding list of port 1/0/5:

Switch#configure

Switch(config)#interface gigabitEthernet 1/0/5

Switch(config-if)#port isolation gi-forward-list 1/0/1-3 **po-forward-list** 4

Switch(config-if)#show port isolation interface gigabitEthernet 1/0/5

Port LAG Forward-List

---- --- ----------

Gi1/0/5 N/A Gi1/0/1-3,Po4

Switch(config-if)#end

Switch#copy running-config startup-config


4 Loopback Detection Configuration

4.1 Using the GUI

To avoid broadcast storm, we recommend that you enable storm control before loopback detection is enabled. For detailed introductions about storm control, refer to *Configuring QoS*.

Choose the menu **L2 FEATURES > Switching > Port > Loopback Detection** to load the following page.

Figure 4-1 Configuring Loopback Detection

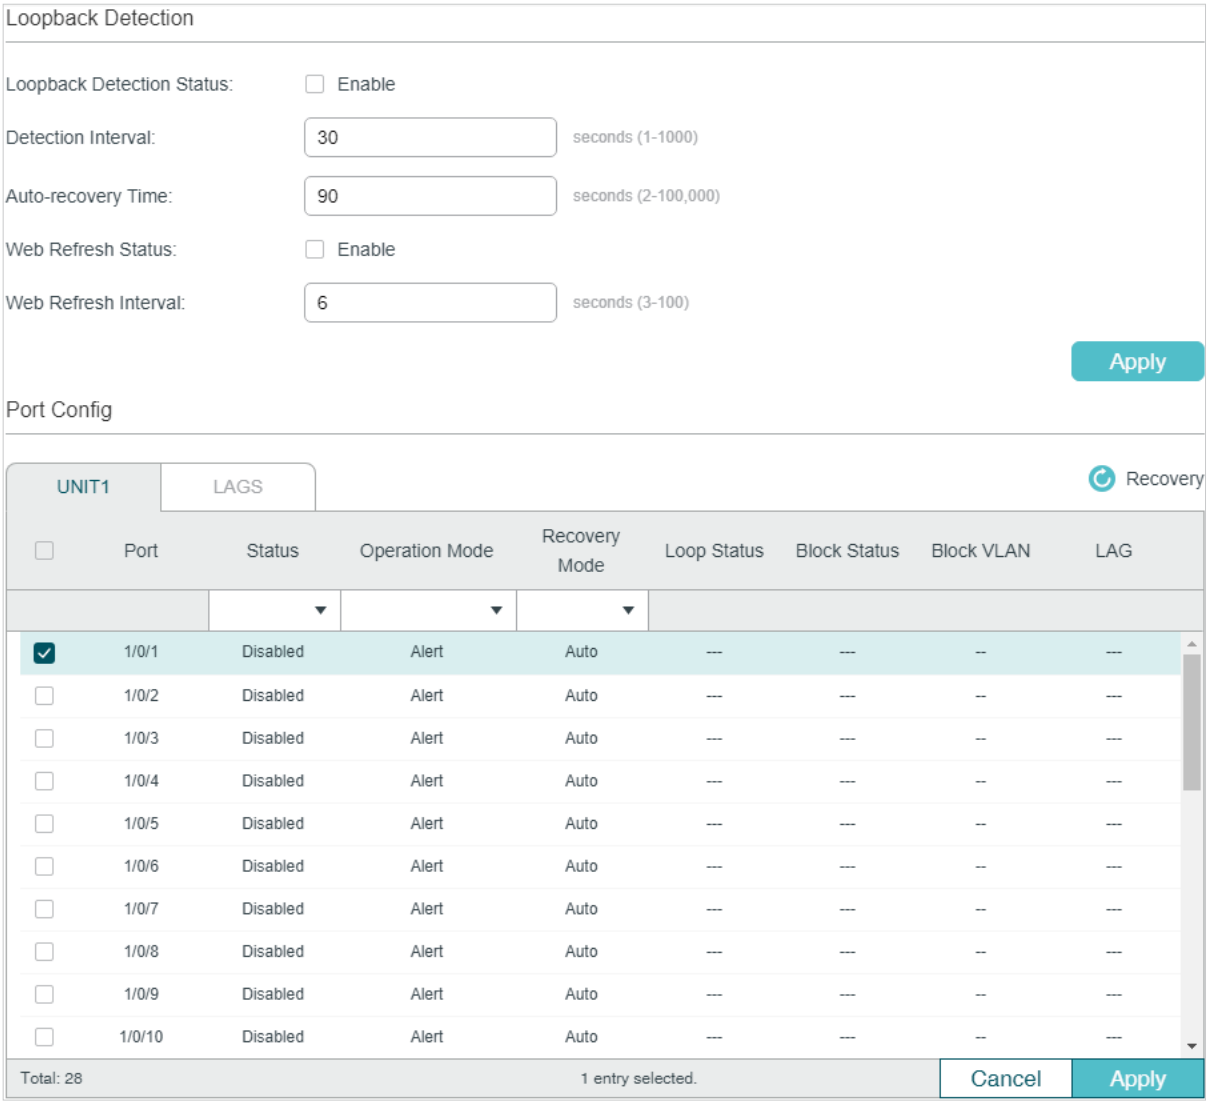

Follow these steps to configure loopback detection:

1) In the **Loopback Detection** section, enable loopback detection and configure the global parameters. Then click **Apply**.

Loopback Detection Status	Enable loopback detection globally.
Detection Interval	Set the interval of sending loopback detection packets in seconds. The valid value ranges from 1 to 1000 and the default value is 30.
Auto-recovery Time	Set the recovery time globally. The blocked port in Auto Recovery mode will automatically be recovered to normal status after the Auto-recovery Time expires. The value ranges from 2 to 100,000 in seconds, and the default value is 90.
Web Refresh Status	With this option enabled, the switch will refresh the web timely. By default, it is disabled.
Web Refresh Interval	If you enabled web refresh status, set the refresh interval in seconds between 3 and 100. The default value is 6.

2) In the **Port Config** section, select one or more ports to configure the loopback detection parameters. Then click **Apply**.

Status	Enable loopback detection for the port.
Operation Mode	Select the operation mode when a loopback is detected on the port: **Alert**: The Loop Status will display whether there is a loop detected on the corresponding port. It is the default setting. **Port Based**: In addition to displaying alerts, the switch will block the port on which the loop is detected. **VLAN-Based**: If a loop is detected in a VLAN on that port, in addition to displaying alerts, the switch will block that VLAN. The traffic of the other VLANs can still be normally forwarded by the port.
Recovery Mode	If you select **Port Based** or **VLAN-Based** as the operation mode, you also need to configure the recovery mode for the blocked port: **Auto**: The blocked port will automatically be recovered to normal status after the automatic recovery time expires. It is the default setting. **Manual**: You need to manually release the blocked port. Click **Recovery** to release the selected port.

3) (Optional) View the loopback detection information.

Loop Status	Displays whether a loop is detected on the port.
Block Status	Displays whether the port is blocked.
Block VLAN	Displays the blocked VLANs.

4.2 Using the CLI

Follow these steps to configure loopback detection:

Step 1	**configure** Enter global configuration mode.
Step 2	**loopback-detection** Enable the loopback detection feature globally. By default, it is disabled.
Step 3	**loopback-detection interval** *interval-time* Set the interval of sending loopback detection packets which is used to detect the loops in the network. *interval-time:* The interval of sending loopback detection packets. The valid values are from 1 to 1000 seconds. By default, the value is 30 seconds.
Step 4	**loopback-detection recovery-time** *recovery-time* Set the auto-recovery time, after which the blocked port in Auto Recovery mode can automatically be recovered to normal status. *recovery-time*: Specify the detection interval, ranging from 2 to 100,000 seconds. The default value is 90.
Step 5	**interface { fastEthernet** *port* **| range fastEthernet** *port-list* **| gigabitEthernet** *port* **| range gigabitEthernet** *port-list* **| ten-gigabitEthernet** *port* **| ten-range gigabitEthernet** *port-list* **| port-channel** *port-channel* **| range port-channel** *port-channel-list* **|}** Enter interface configuration mode.
Step 6	**loopback-detection** Enable loopback detection for the port. By default, it is disabled.
Step 7	**loopback-detection config process-mode {** alert | port-based | vlan-based **} recovery-mode {** auto | manual **}** Set the process mode when a loopback is detected on the port. There are three modes: alert: The switch will only display alerts when a loopback is detected. It is the default setting. port-based: In addition to displaying alerts, the switch will block the port on which the loop is detected. vlan-based: In addition to displaying alerts, the switch will block the VLAN of the port in which the loop is detected. Set the recovery mode for the blocked port. There are two modes: auto: After the recovery time expires, the blocked port will automatically recover to normal status and restart to detect loops in the network. manual: The blocked port can only be released manually. You can use the command 'loopback-detection recover' to recover the blocked port to normal status.
Step 9	**show loopback-detection global** Verify the global configuration of Loopback Detection.

Step 10	**show loopback-detection interface { fastEthernet** *port* **| gigabitEthernet** *port* **| ten-gigabitEthernet** *port* **| port-channel** *port-channel* **}** Verify the Loopback Detection configuration of the specified port.
Step 11	**end** Return to privileged EXEC mode.
Step 12	**copy running-config startup-config** Save the settings in the configuration file.

The following example shows how to enable loopback detection globally (keep the default parameters):

Switch#configure

Switch(config)#loopback-detection

Switch(config)#show loopback-detection global

Loopback detection global status : enable

Loopback detection interval : 30s

Loopback detection recovery time : 3 intervals

Switch(config-if)#end

Switch#copy running-config startup-config

The following example shows how to enable loopback detection of port 1/0/3 and set the process mode as alert and recovery mode as auto:

Switch#configure

Switch(config)#interface gigabitEthernet 1/0/3

Switch(config-if)#loopback-detection

Switch(config-if)#loopback-detection config process-mode alert **recovery-mode** auto

Switch(config-if)#show loopback-detection interface gigabitEthernet 1/0/3

Port	Enable	Process Mode	Recovery Mode	Loopback	Block	LAG
----	------	----------	----------	--------	-----	----
Gi1/0/3	enable	alert	auto	N/A	N/A	N/A

Switch(config-if)#end

Switch#copy running-config startup-config


5 Configuration Examples

5.1 Example for Port Isolation

5.1.1 Network Requirements

As shown below, three hosts and a server are connected to the switch and all belong to VLAN 10. Without changing the VLAN configuration, Host A is not allowed to communicate with the other hosts except the server, even if the MAC address or IP address of Host A is changed.

Figure 5-1 Network Topology

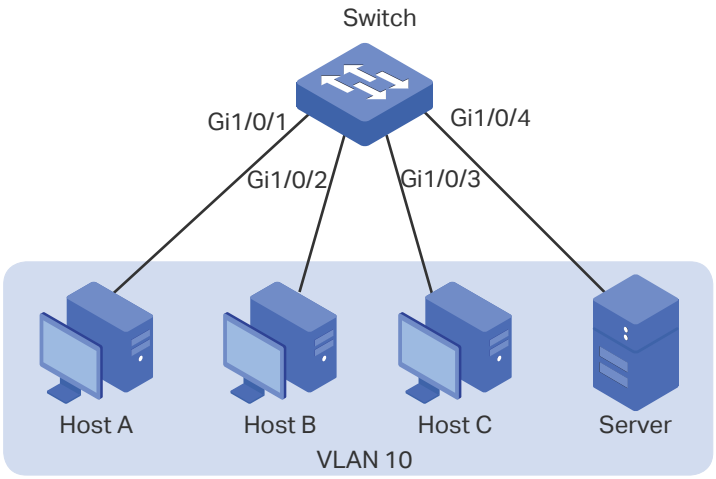

5.1.2 Configuration Scheme

You can configure port isolation to implement the requirement. Set port 1/0/4 as the only forwarding port for port 1/0/1, thus forbidding Host A to forward packets to the other hosts.


Since communications are bidirectional, if you want Host A and the server to communicate normally, you also need to add port 1/0/1 as the forwarding port for port 1/0/4.

Demonstrated with T2600G-28TS, the following sections provide configuration procedure in two ways: using the GUI and using the CLI.

5.1.3 Using the GUI


1) Choose the menu **L2 FEATURES > Switching > Port > Port Isolation** to load the following page. It displays the port isolation list.

Figure 5-2 Port Isolation List

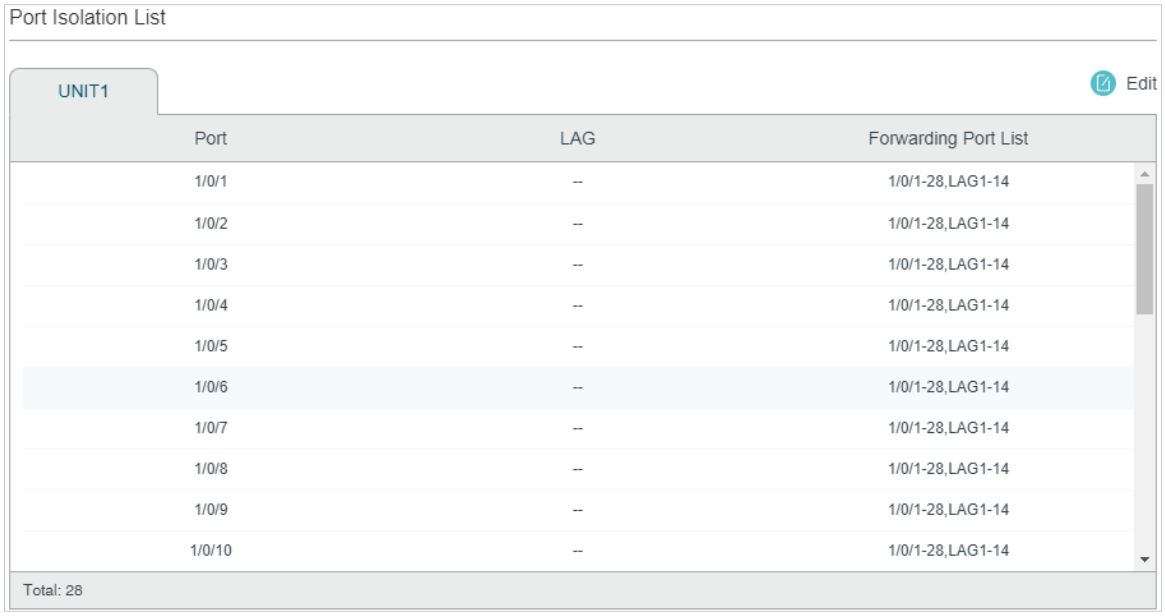


2) Click **Edit** on the above page to load the following page. Select port 1/0/1 as the port to be isolated, and select port 1/0/4 as the forwarding port. Click **Apply**.

Figure 5-3 Port Isolation Configuration

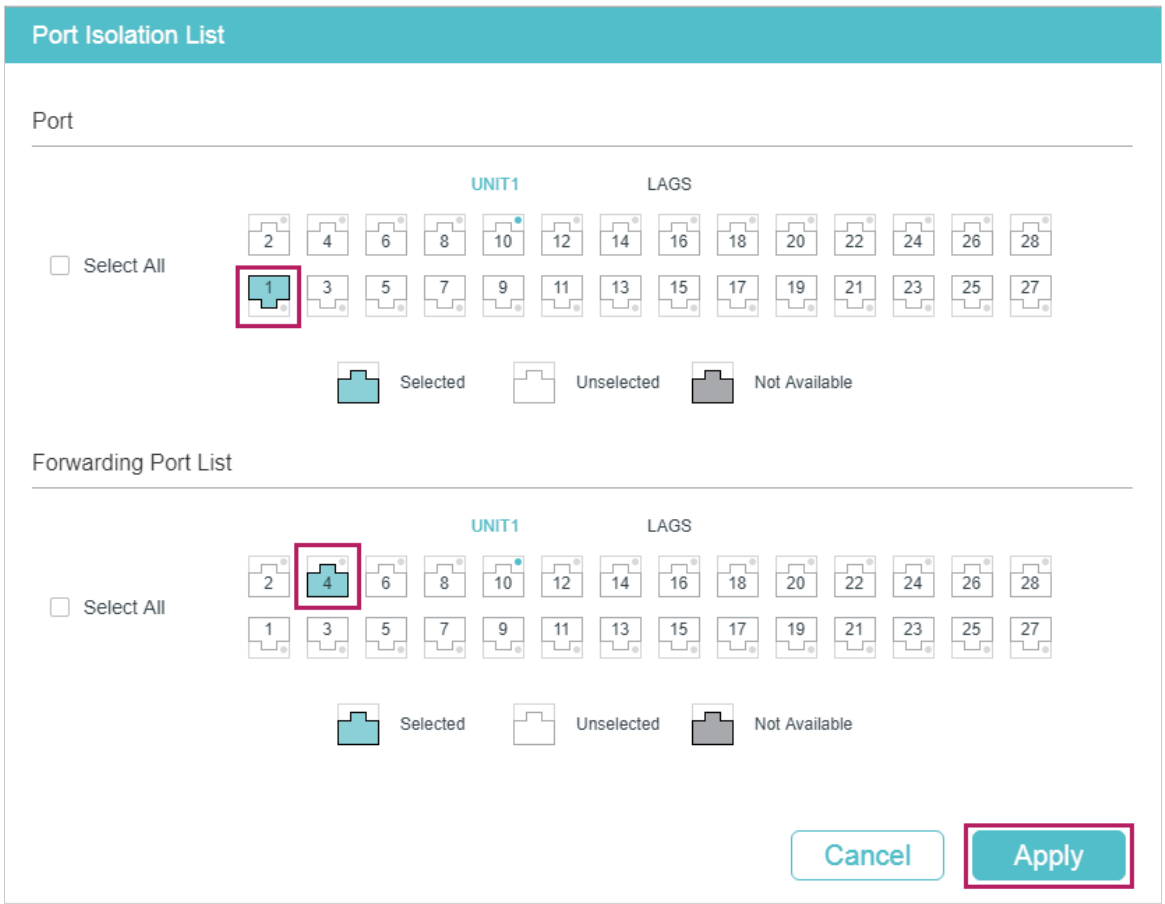

3) Select port 1/0/4 as the port to be isolated, and select port 1/0/1 as the forwarding port. Click **Apply**.

Figure 5-4 Port Isolation Configuration

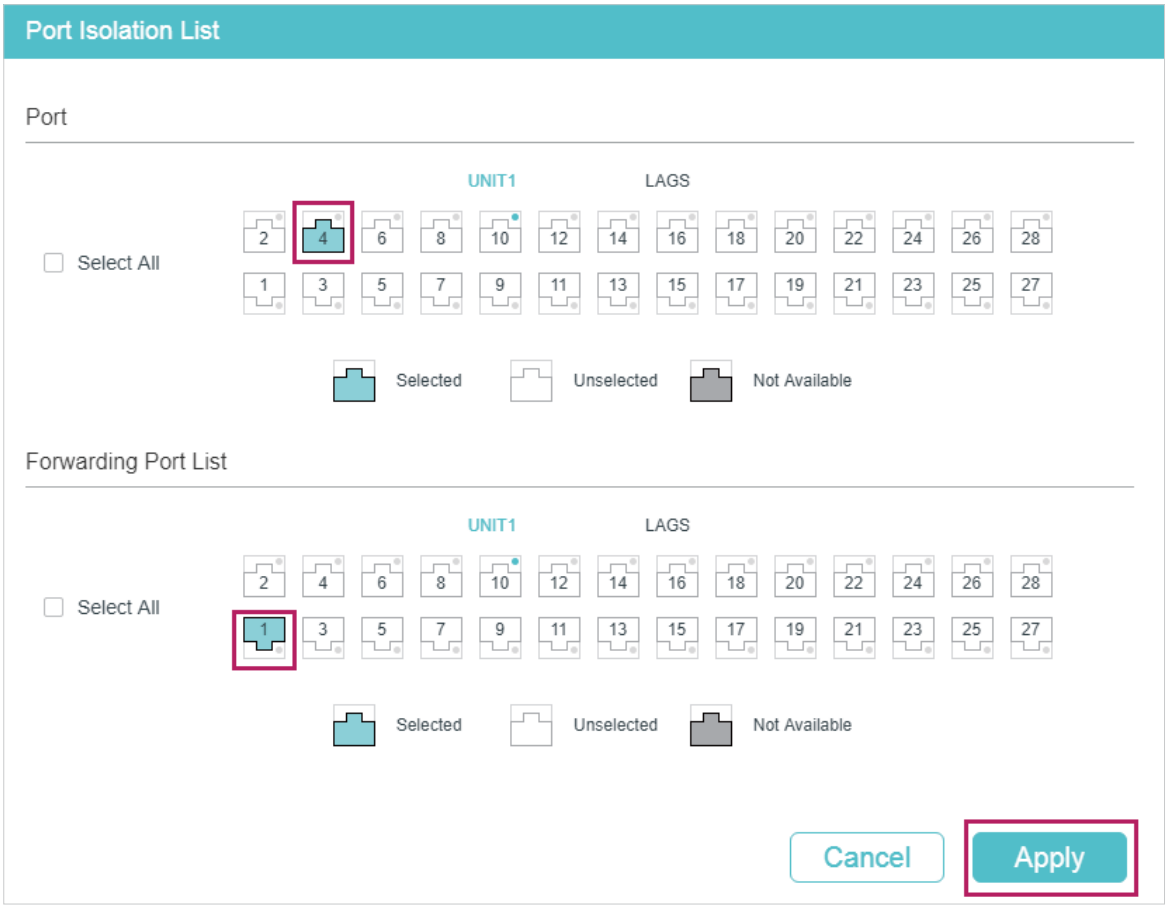

4) Click Save to save the settings.

5.1.4 Using the CLI

Switch#configure

Switch(config)#interface gigabitEthernet 1/0/1

Switch(config-if)#port isolation gi-forward-list 1/0/4

Switch(config-if)#exit

Switch(config)#interface gigabitEthernet 1/0/4

Switch(config-if)#port isolation gi-forward-list 1/0/1

Switch(config-if)#end

Switch#copy running-config startup-config

Verify the Configuration

Switch#show port isolation interface

Port	LAG	Forward-List
Gi1/0/1	N/A	Gi1/0/4

Gi1/0/2 N/A Gi1/0/1-28,Po1-14

Gi1/0/3 N/A Gi1/0/1-28,Po1-14

Gi1/0/4 N/A Gi1/0/1

...


5.2 Example for Loopback Detection

5.2.1 Network Requirements

As shown below, Switch A is a convergence-layer switch connecting to several access-layer switches. Loops can be easily caused in case of misoperation on the access-layer switches. If there is a loop on an access-layer switch, broadcast storms will occur on Switch A or even in the entire network, creating excessive traffic and degrading the network performance.

To reduce the impacts of broadcast storms, users need to detect loops in the network via Switch A and timely block the port on which a loop is detected.

Figure 5-5 Network Topology

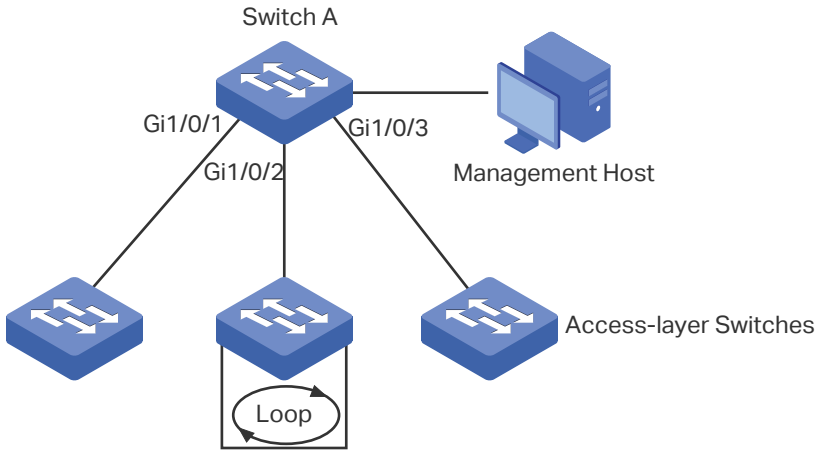

5.2.2 Configuration Scheme

Enable loopback detection on ports 1/0/1-3 and configure SNMP to receive the trap notifications. For detailed instructions about SNMP, refer to *Configuring SNMP & RMON*. Here we introduce how to configure loopback detection and monitor the detection result on the management interface of the switch.


Demonstrated with T2600G-28TS, the following sections provide configuration procedure in two ways: using the GUI and using the CLI.

5.2.3 Using the GUI

1) Choose the menu **L2 FEATURES > Switching > Port > Loopback Detection** to load the configuration page.


2) In the **Loopback Detection** section, enable loopback detection and web refresh globally. Keep the other parameters as default values and click **Apply**.

Figure 5-6 Global Configuration

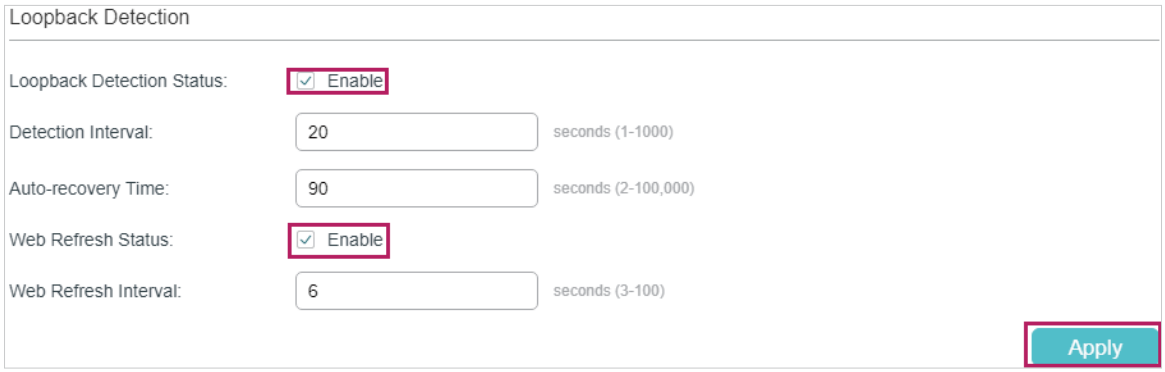

3) In the **Port Config** section, enable ports 1/0/1-3, select the operation mode as **Port -Based** so that the port will be blocked when a loop is detected, and keep the recovery mode as **Auto** so that the port will automatically be recovered to normal status after the auto-recovery time. Click **Apply**.

Figure 5-7 Port Configuration

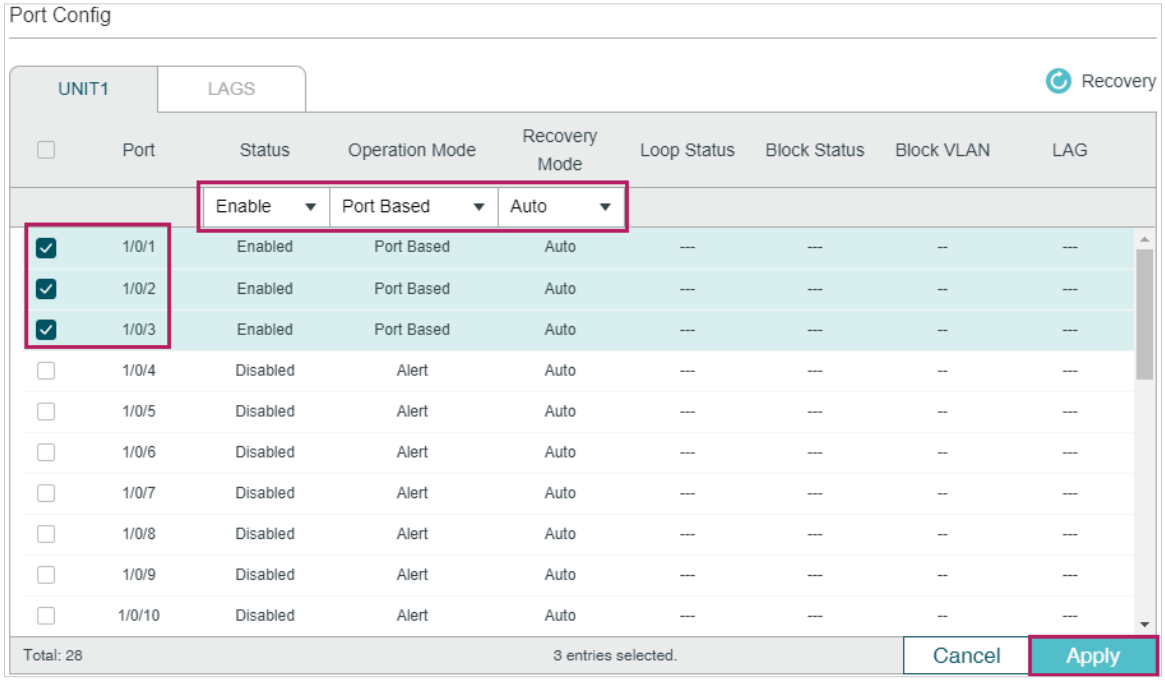

4) Monitor the detection result on the above page. The **Loop status** and **Block status** are displayed on the right side of ports.

5.2.4 Using the CLI

1) Enable loopback detection globally and configure the detection interval and recovery time.

   Switch#configure

   Switch(config)#loopback-detection

   Switch(config)#loopback-detection interval 30

   Switch(config)#loopback-detection recovery-time 3

2) Enable loopback detection on ports 1/0/1-3 and set the process mode and recovery mode.

   Switch(config)#interface range gigabitEthernet 1/0/1-3

   Switch(config-if-range)#loopback-detection

   Switch(config-if-range)#loopback-detection config process-mode port-based recovery-mode auto

   Switch(config-if-range)#end

   Switch#copy running-config startup-config

Verify the Configuration

Verify the global configuration:

Switch#show loopback-detection global

Loopback detection global status : enable

Loopback detection interval: 30 s

Loopback detection recovery time : 90 s

Verify the loopback detection configuration on ports:

Switch#show loopback-detection interface

Port	Enable	Process Mode	Recovery Mode	Loopback	Block	LAG
----	--------	----------	----------	----------	-- ----	-----
Gi1/0/1	enable	port-based	auto	N/A	N/A	N/A
Gi1/0/2	enable	port-based	auto	N/A	N/A	N/A
Gi1/0/3	enable	port-based	auto	N/A	N/A	N/A

6 Appendix: Default Parameters

Default settings of Switching are listed in th following tables.

Table 6-1 Configurations for Ports

Parameter	Default Setting
Port Config	
Jumbo	1518 bytes
Type	Copper (For RJ45 Ports) Fiber (For SFP Ports)
Status	Enabled
Speed	Auto (For RJ45 Ports) 1000M (For SFP Ports)
Duplex	Auto (For RJ45 Ports) Full (For SFP Ports)
Flow Control	Disabled
Loopback Detection	
Loopback Detection Status	Disabled
Detection Interval	30 seconds
Auto-recovery Time	90 seconds
Web Refresh Status	Disabled
Web Refresh Interval	6 seconds
Port Status	Disable
Operation mode	Alert
Recovery mode	Auto

Part 4

Configuring LAG

CHAPTERS

1. LAG
2. LAG Configuration
3. Configuration Example
4. Appendix: Default Parameters

1 LAG

1.1 Overview

With LAG (Link Aggregation Group) function, you can aggregate multiple physical ports into a logical interface, increasing link bandwidth and providing backup ports to enhance the connection reliability.

1.2 Supported Features

You can configure LAG in two ways: static LAG and LACP (Link Aggregation Control Protocol).

Static LAG

The member ports are manually added to the LAG.

LACP

The switch uses LACP to implement dynamic link aggregation and disaggregation by exchanging LACP packets with its peer device. LACP extends the flexibility of the LAG configuration.

2 LAG Configuration

To complete LAG configuration, follow these steps:

1) Configure the global load-balancing algorithm.
2) Configure Static LAG or LACP.

Configuration Guidelines


- Ensure that both ends of the aggregation link work in the same LAG mode. For example, if the local end works in LACP mode, the peer end should also be set as LACP mode.
- Ensure that devices on both ends of the aggregation link use the same number of physical ports with the same speed, duplex, jumbo and flow control mode.
- A port cannot be added to more than one LAG at the same time.
- LACP does not support half-duplex links.
- One static LAG supports up to eight member ports. All the member ports share the bandwidth evenly. If an active link fails, the other active links share the bandwidth evenly.
- One LACP LAG supports multiple member ports, but at most eight of them can work simultaneously, and the other member ports are backups. Using LACP protocol, the switches negotiate parameters and determine the working ports. When a working port fails, the backup port with the highest priority will replace the faulty port and start to forward data.
- For the functions like IGMP Snooping, 802.1Q VLAN, MAC VLAN, Protocol VLAN, VLAN-VPN, GVRP, Voice VLAN, STP, QoS, DHCP Snooping and Flow Control, the member pot of an LAG follows the configuration of the LAG but not its own. The configurations of the port can take effect only after it leaves the LAG.
- The port enabled with Port Security, Port Mirror, MAC Address Filtering or 802.1X cannot be added to an LAG, and the member port of an LAG cannot be enabled with these functions.

2.1 Using the GUI

2.1.1 Configuring Load-balancing Algorithm

Choose the menu **L2 FEATURES > Switching > LAG > LAG Table** to load the following page.

Figure 2-1 Global Config

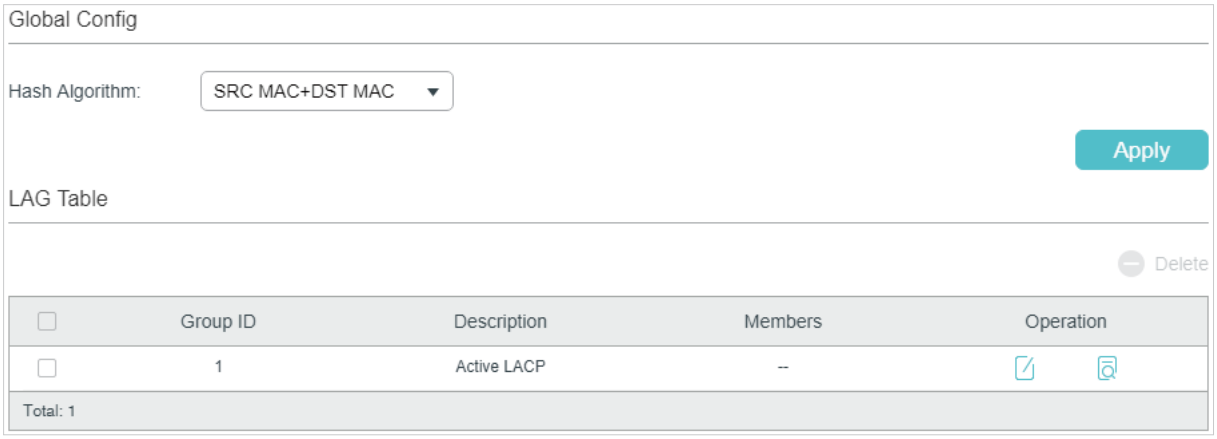

In the **Global Config** section, select the load-balancing algorithm (Hash Algorithm), then click **Apply**.


Hash Algorithm	Select the Hash Algorithm, based on which the switch can choose the port to forward the received packets. In this way, different data flows are forwarded on different physical links to implement load balancing. There are six options: **SRC MAC**: The computation is based on the source MAC addresses of the packets. **DST MAC**: The computation is based on the destination MAC addresses of the packets. **SRC MAC+DST MAC**: The computation is based on the source and destination MAC addresses of the packets. **SRC IP**: The computation is based on the source IP addresses of the packets. **DST IP**: The computation is based on the destination IP addresses of the packets. **SRC IP+DST IP**: The computation is based on the source and destination IP addresses of the packets.

Tips:

- Load-balancing algorithm is effective only for outgoing traffic. If the data stream is not well shared by each link, you can change the algorithm of the outgoing interface.
- Please properly choose the load-balancing algorithm to avoid data stream transferring only on one physical link. For example, Switch A receives packets from several hosts and forwards them to the Server with the fixed MAC address, you can set the algorithm

as "SRC MAC" to allow Switch A to determine the forwarding port based on the source MAC addresses of the received packets.

Figure 2-2 Hash Algorithm Configuration

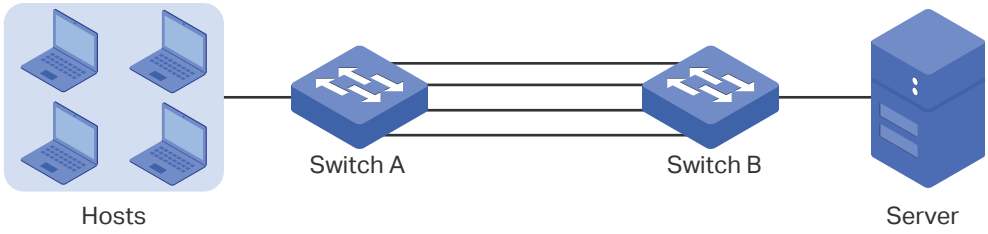


2.1.2 Configuring Static LAG or LACP

For one port, you can choose only one LAG mode: Static LAG or LACP. And make sure both ends of a link use the same LAG mode.

■ Configuring Static LAG

Choose the menu **L2 FEATURES > Switching > LAG > Static LAG** to load the following page.

Figure 2-3 Static LAG

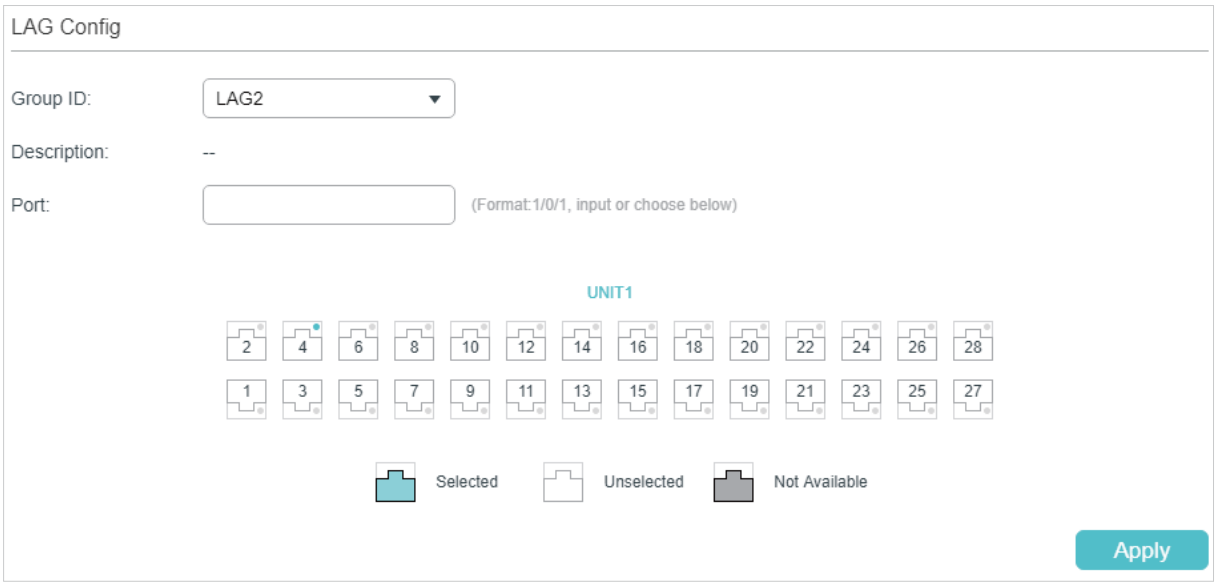

Follow these steps to configure the static LAG:

1) Select an LAG for configuration.

Group ID	Select an LAG for static LAG configuration.
Description	Displays the LAG mode.

2) Select the member ports for the LAG. It is multi-optional.

3) Click **Apply**.


Note:

Clearing all member ports will delete the LAG.

Configuring LACP

Choose the menu **L2 FEATURES > Switching > LAG > LACP** to load the following page.

Figure 2-4 LACP Config

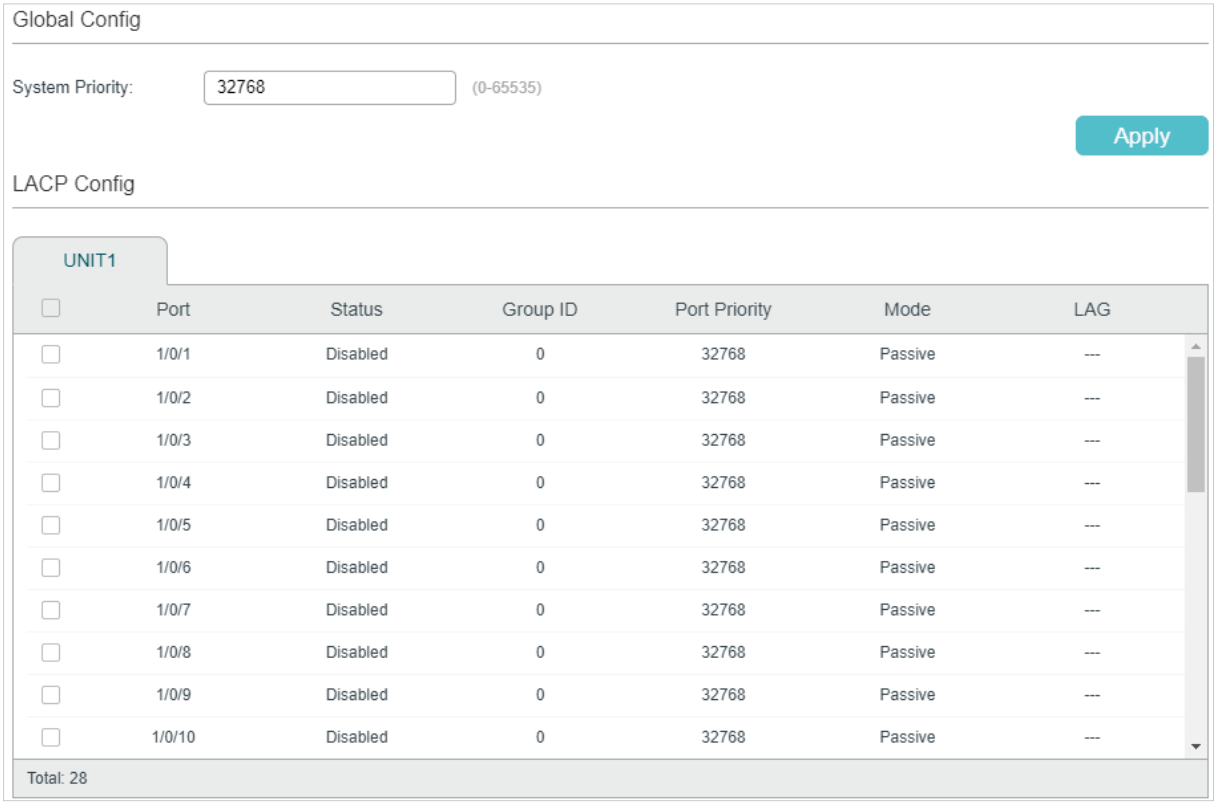

Follow these steps to configure LACP:

1) Specify the system priority for the switch and click **Apply**.

System Priority	Specify the system priority for the switch. A smaller value means a higher priority. To keep active ports consistent at both ends, you can set the system priority of one device to be higher than that of the other device. The device with higher priority will determine its active ports, and the other device can select its active ports according to the selection result of the device with higher priority. If the two ends have the same system priority value, the device with a smaller MAC address has the higher priority.

2) Select member ports for the LAG and configure the related parameters. Click **Apply**.

Group ID	Specify the group ID of the LAG. Note that the group ID of other static LAGs cannot be set as this value. The valid value of the Group ID is determined by the maximum number of LAGs supported by your switch. For example, if your switch supports up to 14 LAGs, the valid value ranges from 1 to 14.
Port Priority (0-65535)	Specify the Port Priority. A smaller value means a higher port priority. The port with higher priority in an LAG will be selected as the working port to forward data, and at most eight ports can work simultaneously. If two ports have the same priority value, the port with a smaller port number has the higher priority.
Mode	Select the LACP mode for the port. In LACP, the switch uses LACPDU (Link Aggregation Control Protocol Data Unit) to negotiate the parameters with the peer end. In this way, the two ends select active ports and form the aggregation link. The LACP mode determines whether the port will take the initiative to send the LACPDU. There are two modes: **Passive**: The port will not send LACPDU before receiving the LACPDU from the peer end. **Active**: The port will take the initiative to send LACPDU.
Status	Enable the LACP function of the port. By default, it is disabled.

2.2 Using the CLI

2.2.1 Configuring Load-balancing Algorithm

Follow these steps to configure the load-balancing algorithm:

Step 1	**configure** Enter global configuration mode.

Step 2	**port-channel load-balance {** src-mac | dst-mac | src-dst-mac | src-ip | dst-ip | src-dst-ip **}** Select the Hash Algorithm. The switch will choose the ports to transfer the packets based on the Hash Algorithm. In this way, different data flows are forwarded on different physical links to implement load balancing. src-mac: The computation is based on the source MAC addresses of the packets. dst-mac: The computation is based on the destination MAC addresses of the packets. src-dst-mac: The computation is based on the source and destination MAC addresses of the packets. src-ip: The computation is based on the source IP addresses of the packets. dst-ip: The computation is based on the destination IP addresses of the packets. src-dst-ip: The computation is based on the source and destination IP addresses of the packets.
Step 3	**show etherchannel load-balance** Verify the configuration of load-balancing algorithm.
Step 4	**end** Return to privileged EXEC mode.
Step 5	**copy running-config startup-config** Save the settings in the configuration file.

The following example shows how to set the global load-balancing mode as src-dst-mac:

Switch#configure

Switch(config)#port-channel load-balance src-dst-mac

Switch(config)#show etherchannel load-balance

EtherChannel Load-Balancing Configuration: src-dst-mac

EtherChannel Load-Balancing Addresses Used Per-Protocol:

Non-IP: Source XOR Destination MAC address

IPv4: Source XOR Destination MAC address

IPv6: Source XOR Destination MAC address

Switch(config)#end

Switch#copy running-config startup-config

2.2.2 Configuring Static LAG or LACP

You can choose only one LAG mode for a port: Static LAG or LACP. And make sure both ends of a link use the same LAG mode.

Configuring Static LAG

Follow these steps to configure static LAG:

Step 1	**configure** Enter global configuration mode.
Step 2	**interface {fastEthernet** *port* **| range fastEthernet** *port-list* **| gigabitEthernet** *port* **| range gigabitEthernet** *port-list* **| ten-gigabitEthernet** *port* **| range ten-gigabitEthernet** *port-list* **}** Enter interface configuration mode.
Step 3	**channel-group** *num* **mode on** Add the port to a static LAG. *num*: The group ID of the LAG.
Step 4	**show etherchannel** *num* **summary** Verify the configuration of the static LAG. *num*: The group ID of the LAG.
Step 5	**end** Return to privileged EXEC mode.
Step 6	**copy running-config startup-config** Save the settings in the configuration file.

The following example shows how to add ports1/0/5-8 to LAG 2 and set the mode as static LAG:

Switch#configure

Switch(config)#interface range gigabitEthernet 1/0/5-8

Switch(config-if-range)#channel-group 2 **mode** on

Switch(config-if-range)#show etherchannel 2 **summary**

Flags: D - down P - bundled in port-channel U - in use

I - stand-alone H - hot-standby(LACP only) s - suspended

R - layer3 S - layer2 f - failed to allocate aggregator

u - unsuitable for bundling w - waiting to be aggregated d - default port

Group	Port-channel	Protocol	Ports
2	Po2(S)	-	Gi1/0/5(D) Gi1/0/6(D) Gi1/0/7(D) Gi1/0/8(D)

Switch(config-if-range)#end

Switch#copy running-config startup-config

Configuring LACP

Follow these steps to configure LACP:

Step 1	**configure** Enter global configuration mode.
Step 2	**lacp system-priority** *pri* Specify the system priority for the switch. To keep active ports consistent at both ends, you can set the priority of one device to be higher than that of the other device. The device with higher priority will determine its active ports, and the other device can select its active ports according to the selection result of the device with higher priority. If the two ends have the same system priority value, the end with a smaller MAC address has the higher priority. pri: System priority. The valid values are from 0 to 65535, and the default value is 32768. A smaller value means a higher device priority.
Step 3	**interface {fastEthernet** *port* **| range fastEthernet** *port-list* **| gigabitEthernet** *port* **| range gigabitEthernet** *port-list* **| ten-gigabitEthernet** *port* **| range ten-gigabitEthernet** *port-list* **}** Enter interface configuration mode.
Step 4	**channel-group** *num* **mode {** active | passive **}** Add the port to an LAG and set the mode as LACP. *num*: The group ID of the LAG. **mode**: LAG mode. Here you need to select LACP mode: active or passive. In LACP, the switch uses LACPDU (Link Aggregation Control Protocol Data Unit) to negotiate the parameters with the peer end. In this way, the two ends select active ports and form the aggregation link. The LACP mode determines whether the port will take the initiative to send the LACPDU. passive: The port will not send LACPDU before receiving the LACPDU from the peer end. active: The port will take the initiative to send LACPDU.
Step 5	**lacp port-priority** *pri* Specify the Port Priority. The port with higher priority in an LAG will be selected as the working port. If two ports have the same priority value, the port with a smaller port number has the higher priority. pri: Port priority. The valid values are from 0 to 65535, and the default value is 32768. A smaller value means a higher port priority.
Step 6	**show lacp sys-id** Verify the global system priority.
Step 7	**show lacp internal** Verify the LACP configuration of the local switch.
Step 8	**end** Return to privileged EXEC mode.

Step 9	**copy running-config startup-config** Save the settings in the configuration file.

The following example shows how to specify the system priority of the switch as 2:

Switch#configure

Switch(config)#lacp system-priority 2

Switch(config)#show lacp sys-id

2, 000a.eb13.2397

Switch(config)#end

Switch#copy running-config startup-config

The following example shows how to add ports 1/0/1-4 to LAG 6, set the mode as LACP, and select the LACPDU sending mode as active:

Switch#configure

Switch(config)#interface range gigabitEthernet 1/0/1-4

Switch(config-if-range)#channel-group 6 **mode** active

Switch(config-if-range)#show lacp internal

Flags: S - Device is requesting Slow LACPDUs

F - Device is requesting Fast LACPDUs

A - Device is in active mode

P - Device is in passive mode

Channel group 6

Port	Flags	State	LACP Port Priority	Admin Key	Oper Key	Port Number	Port State
Gi1/0/1	SA	Up	32768	0x6	0x4b1	0x1	0x7d
Gi1/0/2	SA	Down	32768	0x6	0	0x2	0x45
Gi1/0/3	SA	Down	32768	0x6	0	0x3	0x45
Gi1/0/4	SA	Down	32768	0x6	0	0x4	0x45

Switch(config-if-range)#end

Switch#copy running-config startup-config


3 Configuration Examples

3.1 Example for Static LAG

3.1.1 Network Requirements

As shown below, hosts and servers are connected to switch A and switch B, and heavy traffic is transmitted between the two switches. To achieve high speed and reliability of data transmission, users need to improve the bandwidth and redundancy of the link between the two switches.

Figure 3-1 Network Topology

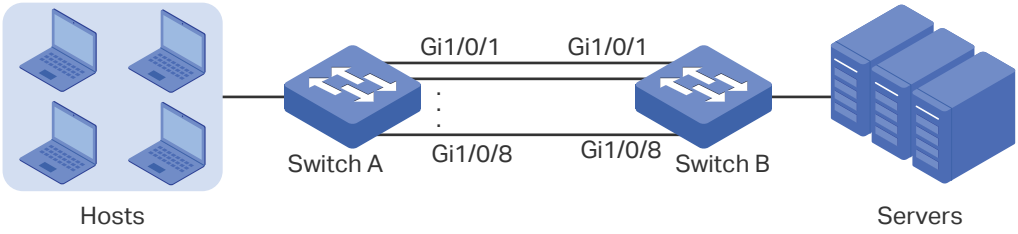

3.1.2 Configuration Scheme

LAG function can bundle multiple physical ports into one logical interface to increase bandwidth and improve reliability. In this case we can configure static LAG to meet the requirement.

The overview of the configuration is as follows:

1) Considering there are multiple devices on each end, configure the load-balancing algorithm as 'SRC MAC+DST MAC'.
2) Add ports 1/0/1-8 to a static LAG.

Demonstrated with T2600G-28TS, the following sections provide configuration procedure in two ways: using the GUI and using the CLI.

3.1.3 Using the GUI

The configurations of switch A and switch B are similar. The following introductions take switch A as an example.


1) Choose the menu **L2 FEATURES > Switching > LAG > LAG Table** to load the following page. Select the hash algorithm as 'SRC MAC+DST MAC'.

Figure 3-2 Global Configuration



2) Choose the menu **L2 FEATURES > Switching > LAG > Static LAG** to load the following page. Select LAG 1 and add ports 1/0/1-8 to LAG 1.

Figure 3-3 System Priority Configuration

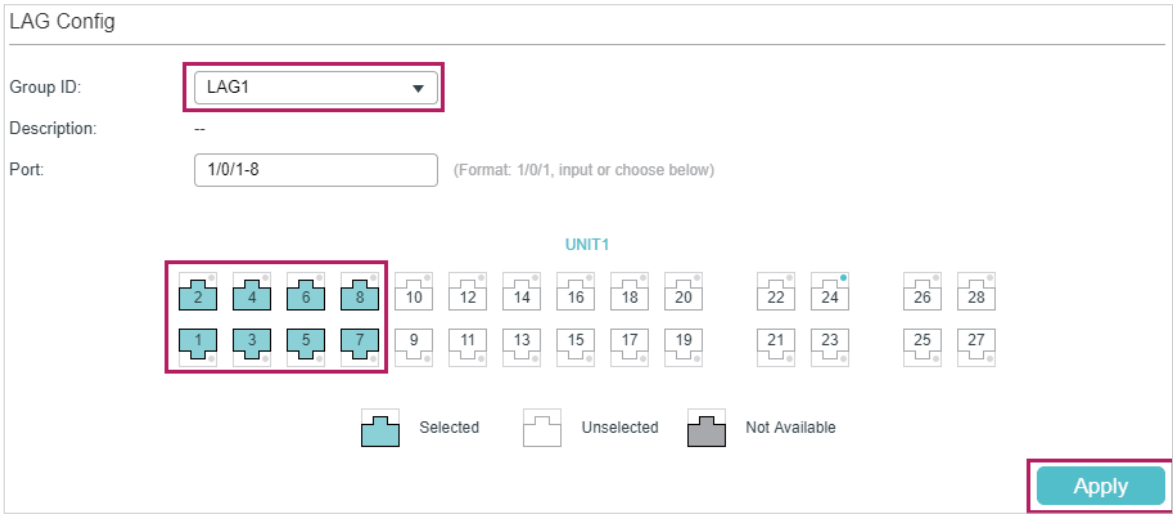

3) Click Save to save the settings.

3.1.4 Using the CLI

The configurations of switch A and switch B are similar. The following introductions take switch A as an example.

1) Configure the load-balancing algorithm as “src-dst-mac”.

```
Switch#configure
Switch(config)#port-channel load-balance src-dst-mac
```

2) Add ports 1/0/1-8 to static LAG 1.

```
Switch(config)#interface range gigabitEthernet 1/0/1-8
Switch(config-if-range)#channel-group 1 mode on
Switch(config-if)#end
Switch#copy running-config startup-config
```

Verify the Configuration

```
Switch#show etherchannel 1 summary
Flags: D - down        P - bundled in port-channel      U - in use
       I - stand-alone  H - hot-standby(LACP only)      s - suspended
```


```
                R - layer3          S - layer2          f - failed to allocate aggregator
                u - unsuitable for bundling    w - waiting to be aggregated    d - default port
Group   Port-channel   Protocol      Ports
-----   ---------      -------       -------------------------------
1       Po2(S)         -             Gi1/0/1(D)  Gi1/0/2(D)  Gi1/0/3(D)  Gi1/0/4(D)
                                     Gi1/0/5(D)  Gi1/0/6(D)  Gi1/0/7(D)  Gi1/0/8(D)
```

3.2 Example for LACP

3.2.1 Network Requirements

As shown below, hosts and servers are connected to switch A and switch B, and heavy traffic is transmitted between the two switches. To achieve high speed and reliability of data transmission, users need to improve the bandwidth and redundancy of the link between the two switches.

Figure 3-4 Network Topology

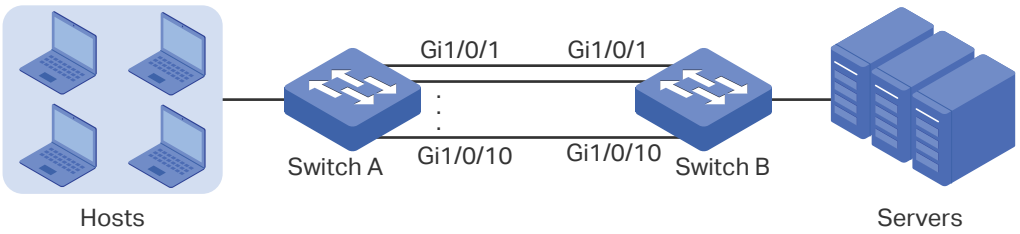

3.2.2 Configuration Scheme

LAG function can bundle multiple physical ports into one logical interface to increase bandwidth and improve reliability. We can configure LACP to meet the requirement.

The overview of the configuration is as follows:

1) Considering there are multiple devices on each end, configure the load-balancing algorithm as 'SRC MAC+DST MAC'.
2) Specify the system priority for the switches. Here we choose switch A as the dominate device and specify a higher system priority for it.
3) Add ports 1/0/1-10 to the LAG and set the mode as LACP.
4) Specify a lower port priority for ports 1/0/9-10 to set them as the backup ports. When any of ports 1/0/1-8 is down, the backup ports will automatically be enabled to transmit data.

Demonstrated with T2600G-28TS, the following sections provide configuration procedure in two ways: using the GUI and using the CLI.

3.2.3 Using the GUI

The configurations of switch A and switch B are similar. The following introductions take switch A as an example.


1) Choose the menu **L2 FEATURES > Switching > LAG > LAG Table** to load the following page. Select the hash algorithm as 'SRC MAC+DST MAC'.

Figure 3-5 Global Configuration




2) Choose the menu **L2 FEATURES > Switching > LAG > LACP Config** to load the following page. In the **Global Config** section, specify the system priority of Switch A as **0** and Click **Apply**. Remember to ensure that the system priority value of Switch B is bigger than 0.

Figure 3-6 System Priority Configuration

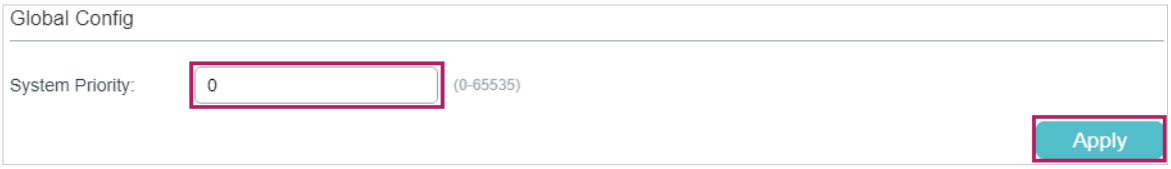

3) In the **LACP Config** section, select ports 1/0/1-10, and respectively set the status, group ID, port priority and mode for each port as follows.

Figure 3-7 LACP Configuration

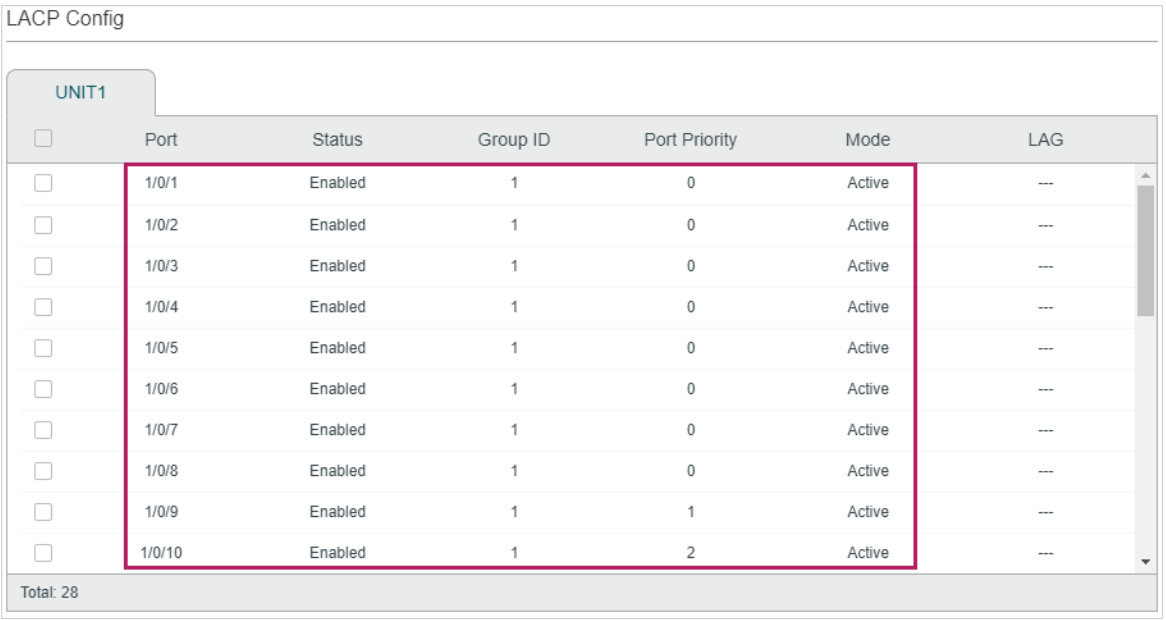

4) Click Save to save the settings.

3.2.4 Using the CLI

The configurations of switch A and switch B are similar. The following introductions take switch A as an example.

1) Configure the load-balancing algorithm as “src-dst-mac”.

   Switch#configure

   Switch(config)#port-channel load-balance src-dst-mac

2) Specify the system priority of Switch A as 0. Remember to ensure that the system priority value of Switch B is bigger than 0.

   Switch(config)#lacp system-priority 0

3) Add ports 1/0/1-8 to LAG 1 and set the mode as LACP. Then specify the port priority as 0 to make them active.

   Switch(config)#interface range gigabitEthernet 1/0/1-8

   Switch(config-if-range)#channel-group 1 mode active

   Switch(config-if-range)#lacp port-priority 0

   Switch(config-if-range)#exit

4) Add port 1/0/9 to LAG 1 and set the mode as LACP. Then specify the port priority as 1 to set it as a backup port. When any of the active ports is down, this port will be preferentially selected to work as an active port.

   Switch(config)#interface gigabitEthernet 1/0/9

   Switch(config-if)#channel-group 1 mode active

   Switch(config-if)#lacp port-priority 1

   Switch(config-if)#exit

5) Add port 1/0/10 to LAG 1 and set the mode as LACP. Then specify the port priority as 2 to set it as a backup port. The priority of this port is lower than port 1/0/9.

   Switch(config)#interface gigabitEthernet 1/0/10

   Switch(config-if)#channel-group 1 mode active

   Switch(config-if)#lacp port-priority 2

   Switch(config-if)#end

   Switch#copy running-config startup-config

Verify the Configuration

Verify the system priority:

   Switch#show lacp sys-id

   0, 000a.eb13.2397

Verify the LACP configuration:

   Switch#show lacp internal

Flags: S - Device is requesting Slow LACPDUs

F - Device is requesting Fast LACPDUs

A - Device is in active mode

P - Device is in passive mode

Channel group 1

Port	Flags	State	LACP Port Priority	Admin Key	Oper Key	Port Number	Port State
Gi1/0/1	SA	Down	0	0x1	0	0x1	0x45
Gi1/0/2	SA	Down	0	0x1	0	0x2	0x45
Gi1/0/3	SA	Down	0	0x1	0	0x3	0x45
Gi1/0/4	SA	Down	0	0x1	0	0x4	0x45
Gi1/0/5	SA	Down	0	0x1	0	0x5	0x45
Gi1/0/6	SA	Down	0	0x1	0	0x6	0x45
Gi1/0/7	SA	Down	0	0x1	0	0x7	0x45
Gi1/0/8	SA	Down	0	0x1	0	0x8	0x45
Gi1/0/9	SA	Down	1	0x1	0	0x9	0x45
Gi1/0/10	SA	Down	2	0x1	0	0xa	0x45

4 Appendix: Default Parameters

Default settings of Switching are listed in the following tables.

Table 4-1 Default Settings of LAG

Parameter	Default Setting
LAG Table	
Hash Algorithm	SRC MAC+DST MAC
LACP Config	
System Priority	32768
Admin Key	0
Port Priority	32768
Mode	Passive
Status	Disable

Part 5

Configuring DDM

CHAPTERS

1. Overview
2. DDM Configuration
3. Appendix: Default Parameters

Note:

Only T2600G-18TS, T2600G-28TS and T2600G-28SQ support DDM function.

1 Overview

The DDM (Digital Diagnostic Monitoring) function is used to monitor the status of the SFP modules inserted into the SFP ports on the switch. The user can choose to shut down the monitored SFP port automatically when the specified parameter exceeds the alarm threshold or warning threshold. The monitored parameters include: Temperature, Voltage, Bias Current, Tx Power and Rx Power.

2 DDM Configuration

To complete DDM configuration, follow these steps:


1) Enable DDM on the SFP port and configure the shutdown condition.
2) Configure the specified value for warning or alarm threshold.

2.1 Using the GUI

2.1.1 Configuring DDM Globally

Choose the menu **L2 FEATURES > Switching > DDM > DDM Config** and select the desired SFP port to load the following page.

Figure 2-1 Configure DDM Globally

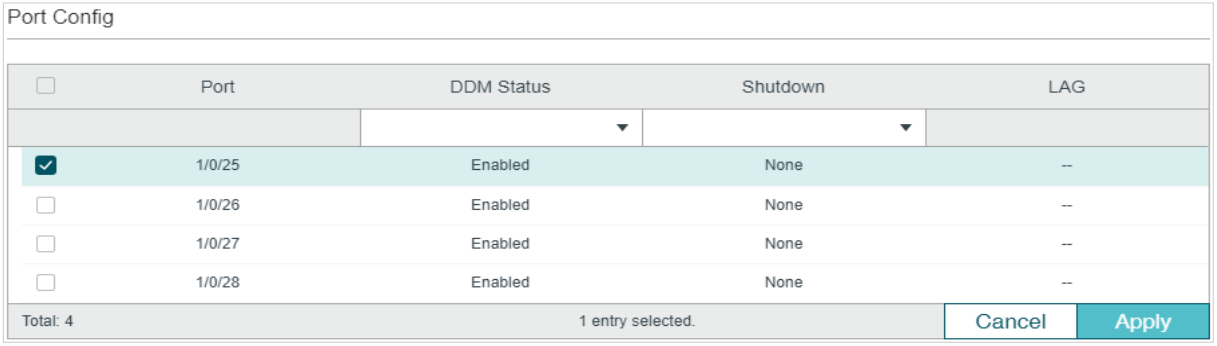

Follow these steps to configure the DDM parameters on SFP ports:

1) In the **Port Config** section, select one or multiple SFP ports to configure DDM parameters.

DDM Status	Enable or disable DDM feature on the SFP port.
Shutdown	Specify whether to shut down the port when the alarm threshold or warning threshold is exceeded. **Alarm**: Shut down the port when the alarm threshold is exceeded. **Warning**: Shut down the port when the warning threshold is exceeded. **None**: The port will not be shut down even if the alarm threshold or warning threshold is exceeded. This is the default option.
LAG	Displays the LAG number which the port belongs to.

2) Click **Apply**.

2.1.2 Configuring the Threshold


Note:

The value of threshold parameters should conform to the following rule: High Alarm ≥ High Warning ≥ Low Warning ≥ Low Alarm.

Choose the menu **L2 FEATURES > Switching > DDM > Threshold Config** to load the following page.

- Configuring the Temperature Threshold

Figure 2-2 Configure Temperature Threshold

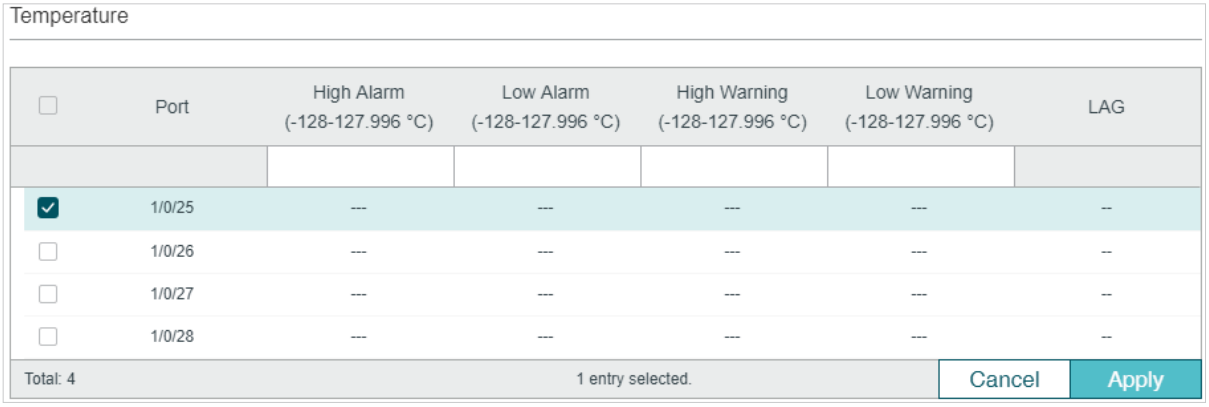

Follow these steps to configure DDM's temperature threshold:


1) In the **Temperature** table, select one or more SFP ports to configure temperature threshold of the SFP ports.

High Alarm	Specify the high temperature threshold for the alarm. When the operating parameter rises above this value, action associated with the alarm will be taken. The valid values are from -128 to 127.996.
Low Alarm	Specify the low temperature threshold for the alarm. When the operating parameter falls below this value, action associated with the alarm will be taken. The valid values are from -128 to 127.996.
High Warning	Specify the high temperature threshold for the warning. When the operating parameter rises above this value, action associated with the warning will be taken. The valid values are from -128 to 127.996.
Low Warning	Specify the low temperature threshold for the warning. When the operating parameter falls below this value, action associated with the warning will be taken. The valid values are from -128 to 127.996.
LAG	Displays the LAG number which the port belongs to.

2) Click **Apply**.

Configuring the Voltage Threshold

Figure 2-3 Configure Voltage Threshold

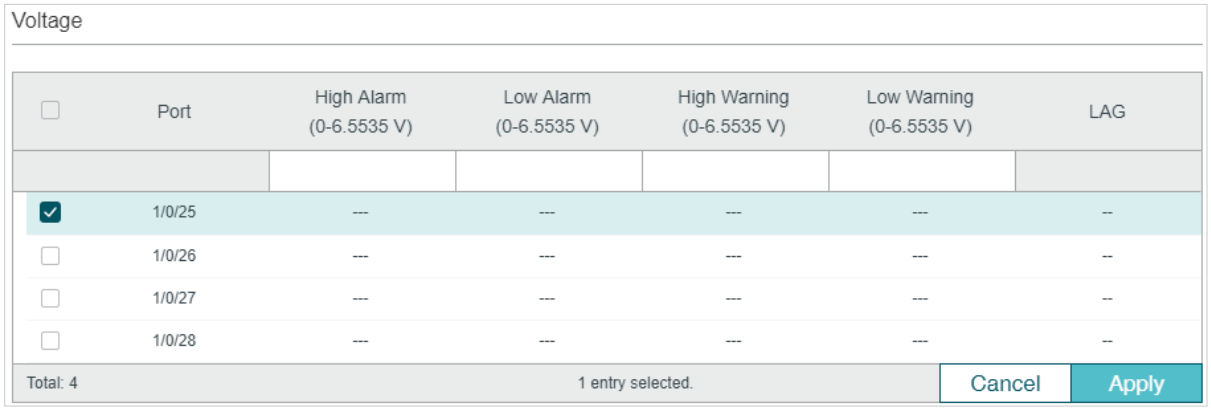

Follow these steps to configure DDM's voltage threshold:


1) In the **Voltage** table, select one or more SFP ports to configure voltage threshold on the SFP ports.

High Alarm	Specify the high voltage threshold for the alarm. When the operating parameter rises above this value, action associated with the alarm will be taken. The valid values are from 0 to 6.5535.
Low Alarm	Specify the low voltage threshold for the alarm. When the operating parameter falls below this value, action associated with the alarm will be taken. The valid values are from 0 to 6.5535.
High Warning	Specify the high voltage threshold for the warning. When the operating parameter rises above this value, action associated with the warning will be taken. The valid values are from 0 to 6.5535.
Low Warning	Specify the low voltage threshold for the warning. When the operating parameter falls below this value, action associated with the warning will be taken. The valid values are from 0 to 6.5535.
LAG	Displays the LAG number which the port belongs to.

2) Click **Apply**.

Configuring the Bias Current Threshold

Figure 2-4 Configure Bias Current Threshold

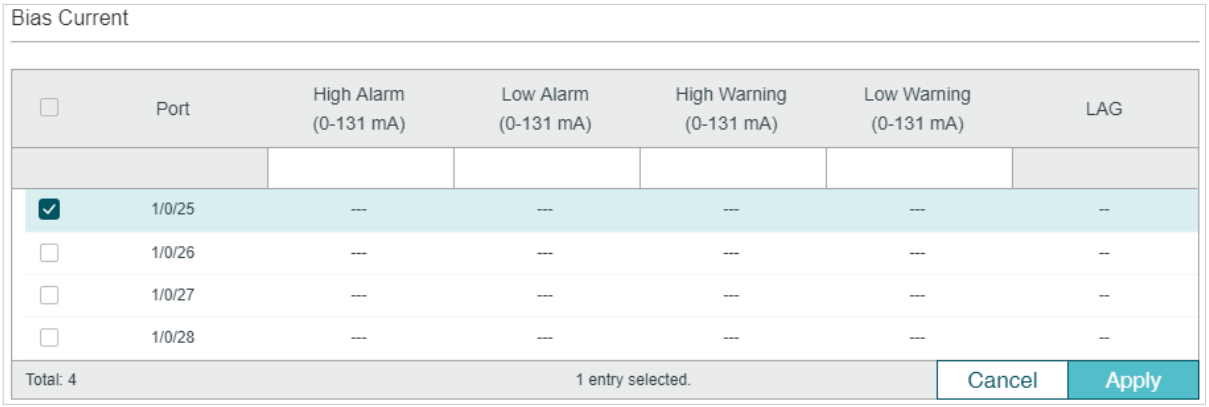

Follow these steps to configure DDM's bias current threshold:


1) In the **Bias Current** table, select one or more SFP ports to configure bias current threshold on the SFP ports.

High Alarm	Specify the high bias current threshold for the alarm. When the operating parameter rises above this value, action associated with the alarm will be taken. The valid values are from 0 to 131.
Low Alarm	Specify the low bias current threshold for the alarm. When the operating parameter falls below this value, action associated with the alarm will be taken. The valid values are from 0 to 131.
High Warning	Specify the high bias current threshold for the warning. When the operating parameter rises above this value, action associated with the warning will be taken. The valid values are from 0 to 131.
Low Warning	Specify the low bias current threshold for the warning. When the operating parameter falls below this value, action associated with the warning will be taken. The valid values are from 0 to 131.
LAG	Displays the LAG number which the port belongs to.

2) Click **Apply**.

Configuring the Rx Power Threshold

Figure 2-5 Configure Rx Power Threshold

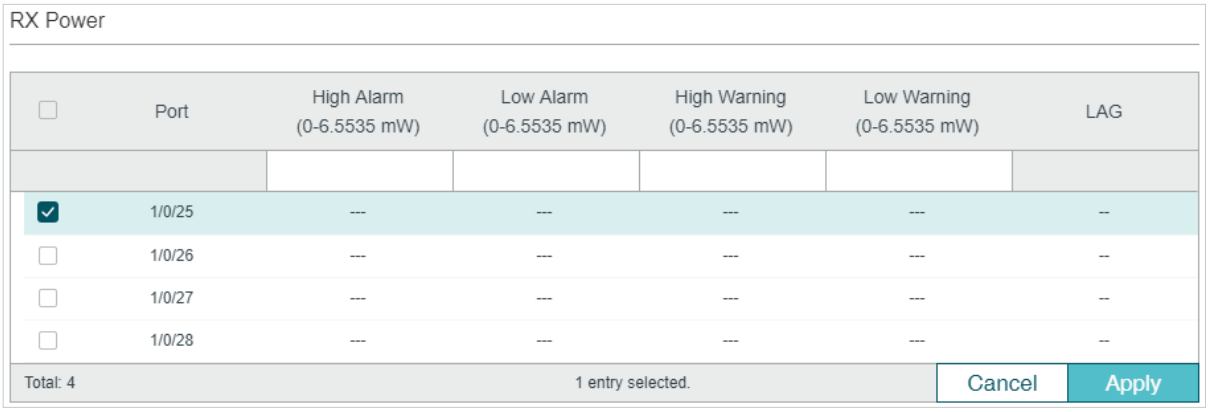

Follow these steps to configure DDM's Rx power threshold:


1) In the **RX Power** table, select one or more SFP ports to configure Rx power threshold on the SFP ports.

High Alarm	Specify the high Rx power threshold for the alarm. When the operating parameter rises above this value, action associated with the alarm will be taken. The valid values are from 0 to 6.5535.
Low Alarm	Specify the low Rx power threshold for the alarm. When the operating parameter falls below this value, action associated with the alarm will be taken. The valid values are from 0 to 6.5535.
High Warning	Specify the high Rx power threshold for the warning. When the operating parameter rises above this value, action associated with the warning will be taken. The valid values are from 0 to 6.5535.
Low Warning	Specify the low Rx power threshold for the warning. When the operating parameter falls below this value, action associated with the warning will be taken. The valid values are from 0 to 6.5535.
LAG	Displays the LAG number which the port belongs to.

2) Click **Apply**.

Configuring the Tx Power Threshold

Figure 2-6 Configure Tx Power Threshold

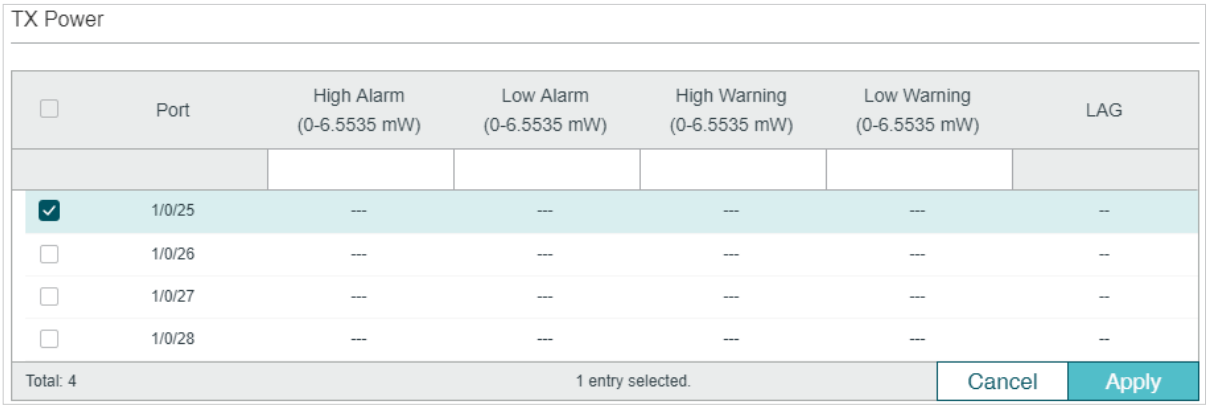

Follow these steps to configure DDM's Tx power threshold:

1) In the **TX Power** table, select one or more SFP ports to configure Tx power threshold on the SFP ports.


High Alarm	Specify the high Tx power threshold for the alarm. When the operating parameter rises above this value, action associated with the alarm will be taken. The valid values are from 0 to 6.5535.
Low Alarm	Specify the low Tx power threshold for the alarm. When the operating parameter falls below this value, action associated with the alarm will be taken. The valid values are from 0 to 6.5535.
High Warning	Specify the high Tx power threshold for the warning. When the operating parameter rises above this value, action associated with the warning will be taken. The valid values are from 0 to 6.5535.
Low Warning	Specify the low Tx power threshold for the warning. When the operating parameter falls below this value, action associated with the warning will be taken. The valid values are from 0 to 6.5535.
LAG	Displays the LAG number which the port belongs to.

2) Click **Apply**.

2.1.3 Viewing DDM Status

Choose the menu **L2 FEATURES > Switching > DDM > DDM Status** to load the following page.

Figure 2-7 View DDM Status

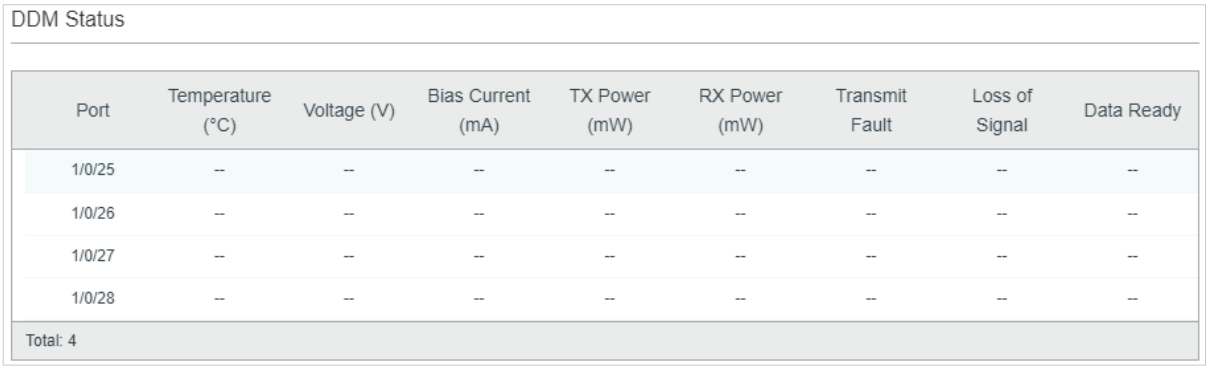

In the **Port Config** table, view the current operating parameters for the SFP modules inserted into the SFP ports.

Temperature	The current temperature of the SFP module inserted into this port.
Voltage	The current voltage of the SFP module inserted into this port.
Bias Current	The current bias current of the SFP module inserted into this port.
Tx Power	The current Tx power of the SFP module inserted into this port.
Rx Power	The current Rx power of the SFP module inserted into this port.
Data Ready	Indicates whether SFP module is operational. The values are True and False.
Loss of Signal	Reports local SFP module signal loss. The values are True and False.
Transmit Fault	Reports remote SFP module signal loss. The values are True, False and No Signal.

2.2 Using the CLI

2.2.1 Configuring DDM Globally

Follow these steps to enable DDM on specified SFP ports:

Step 1	**configure** Enter global configuration mode.
Step 2	**interface { fastEthernet** *port* **| range fastEthernet** *port-list* **| gigabitEthernet** *port* **| range gigabitEthernet** *port-list* **| ten-gigabitEthernet** *port* **| range ten-gigabitEthernet** *port-list* **}** Enter interface configuration mode.

Step 3	**ddm state enable** Enable DDM on this SFP port.
Step 4	**show ddm configuration** state Display the DDM state of the SFP ports.
Step 5	**end** Return to Privileged EXEC Mode.
Step 6	**copy running-config startup-config** Save the settings in the configuration file.

The following example shows how to enable DDM status on SFP port 1/0/25:

Switch#configure

Switch(config)#interface gigabitEthernet 1/0/25

Switch(config-if)#ddm state enable

Switch(config-if)#show ddm configuration state

	DDM Status	Shutdown
Gi1/0/25	Enable	None

...

Switch(config-if)#end

Switch#copy running-config startup-config

2.2.2 Configuring DDM Shutdown

Follow these steps to configure settings for shutting down SFP ports when the alarm threshold or warning threshold is exceeded:

Step 1	**configure** Enter global configuration mode.
Step 2	**interface { fastEthernet** *port* **| range fastEthernet** *port-list* **| gigabitEthernet** *port* **| range gigabitEthernet** *port-list* **| ten-gigabitEthernet** *port* **| range ten-gigabitEthernet** *port-list* **}** Enter interface configuration mode.
Step 3	**ddm shutdown {** none | warning | alarm **}** none: The port will not be shut down if the alarm threshold or warning threshold is exceeded. warning: Shut down the port when the warning threshold is exceeded. alarm: Shut down the port when the alarm threshold is exceeded.

Step 4	**show ddm configuration** state Display the DDM state of the SFP ports.
Step 5	**end** Return to Privileged EXEC Mode.
Step 6	**copy running-config startup-config** Save the settings in the configuration file.

The following example shows how to set SFP port 1/0/25 to shut down when the warning threshold is exceeded.

Switch#configure

Switch(config)#interface gigabitEthernet 1/0/25

Switch(config-if)#ddm shutdown warning

Switch(config-if)#show ddm configuration state

	DDM Status	Shutdown
Gi1/0/25	Enable	Warning

...

Switch(config-if)#end

Switch#copy running-config startup-config

2.2.3 Configuring the Threshold

- Configuring Temperature Threshold

Follow these steps to configure the threshold of the DDM temperature on the specified SFP port.

Step 1	**configure** Enter global configuration mode.
Step 2	**interface { fastEthernet** *port* **| range fastEthernet** *port-list* **| gigabitEthernet** *port* **| range gigabitEthernet** *port-list* **| ten-gigabitEthernet** *port* **| range ten-gigabitEthernet** *port-list* **}** Enter interface configuration mode.

Step 3	**ddm temperature_threshold {** high_alarm | high_warning | low_alarm | low_warning **}** *value* high_alarm: Specify the high threshold for the alarm. When the operating parameter rises above this value, action associated with the alarm will be taken. high_warning: Specify the high threshold for the warning. When the operating parameter rises above this value, action associated with the warning will be taken. low_alarm: Specify the low threshold for the alarm. When the operating parameter falls below this value, action associated with the alarm will be taken. low_warning: Specify the low threshold for the warning. When the operating parameter falls below this value, action associated with the warning will be taken. *value*: Enter the threshold value in Celsius. The valid values are from -128 to 127.996.
Step 4	**show ddm configuration** temperature Display the DDM temperature threshold on the SFP ports.
Step 5	**end** Return to Privileged EXEC Mode.
Step 6	**copy running-config startup-config** Save the settings in the configuration file.

The following example shows how to set SFP port 1/0/27's high alarm temperature threshold as 110 Celsius.

Switch#configure

Switch(config)#interface gigabitEthernet 1/0/27

Switch(config-if)#ddm temperature_threshold high_alarm 110

Switch(config-if)#show ddm configuration temperature

Temperature Threshold(Celsius) :

	High Alarm	Low Alarm	High Warning	Low Warning
Gi1/0/27	110.000000	--	--	--

...

Switch(config-if)#end

Switch#copy running-config startup-config

Configuring Voltage Threshold

Follow these steps to configure the threshold of the DDM voltage on the specified SFP port.

Step 1	**configure** Enter global configuration mode.
Step 2	**interface { fastEthernet** *port* **| range fastEthernet** *port-list* **| gigabitEthernet** *port* **| range gigabitEthernet** *port-list* **| ten-gigabitEthernet** *port* **| range ten-gigabitEthernet** *port-list* **}** Enter interface configuration mode.
Step 3	**ddm voltage_threshold {** high_alarm | high_warning | low_alarm | low_warning **}** *value* high_alarm: Specify the high threshold for the alarm. When the operating parameter rises above this value, action associated with the alarm will be taken. high_warning: Specify the high threshold for the warning. When the operating parameter rises above this value, action associated with the warning will be taken. low_alarm: Specify the low threshold for the alarm. When the operating parameter falls below this value, action associated with the alarm will be taken. low_warning: Specify the low threshold for the warning. When the operating parameter falls below this value, action associated with the warning will be taken. *value*: Enter the threshold value in V. The valid values are from 0 to 6.5535.
Step 4	**show ddm configuration** voltage Display the DDM voltage threshold of the SFP ports.
Step 5	**end** Return to Privileged EXEC Mode.
Step 6	**copy running-config startup-config** Save the settings in the configuration file.

The following example shows how to set SFP port 1/0/27's high alarm threshold voltage as 5 V.

Switch#configure

Switch(config)#interface gigabitEthernet 1/0/27

Switch(config-if)#ddm vlotage_threshold high_alarm 5

Switch(config-if)#show ddm configuration voltage

Voltage Threshold(V) :

	High Alarm	Low Alarm	High Warning	Low Warning
Gi1/0/27	5.000000	--	--	--

...

Switch(config-if)#end

Switch#copy running-config startup-config

■ Configuring Bias Current Threshold

Follow these steps to configure the threshold of the DDM bias current on the specified SFP port.

Step 1	**configure** Enter global configuration mode.
Step 2	**interface { fastEthernet** *port* **| range fastEthernet** *port-list* **| gigabitEthernet** *port* **| range gigabitEthernet** *port-list* **| ten-gigabitEthernet** *port* **| range ten-gigabitEthernet** *port-list* **}** Enter interface configuration mode.
Step 3	**ddm bias_current_threshold {** high_alarm | high_warning | low_alarm | low_warning **}** *value* high_alarm: Specify the high threshold for the alarm. When the operating parameter rises above this value, action associated with the alarm will be taken. high_warning: Specify the high threshold for the warning. When the operating parameter rises above this value, action associated with the warning will be taken. low_alarm: Specify the low threshold for the alarm. When the operating parameter falls below this value, action associated with the alarm will be taken. low_warning: Specify the low threshold for the warning. When the operating parameter falls below this value, action associated with the warning will be taken. *value*: Enter the threshold value in mA. The valid values are from 0 to 131.
Step 4	**show ddm configuration** bias_current Display the DDM bias current threshold of the SFP ports.
Step 5	**end** Return to Privileged EXEC Mode.
Step 6	**copy running-config startup-config** Save the settings in the configuration file.

The following example shows how to set SFP port 1/0/27's high alarm threshold bias current as 120 mA.

Switch#configure

Switch(config)#interface gigabitEthernet 1/0/17

Switch(config-if)#ddm vlotage_threshold high_alarm 120

Switch(config-if)#show ddm configuration bias_current

Voltage Threshold(V) :

High Alarm	Low Alarm	High Warning	Low Warning

Gi1/0/27 120.000000 -- -- --

...

Switch(config-if)#end

Switch#copy running-config startup-config

Configuring Rx Power Threshold

Follow these steps to configure the threshold of the DDM Rx power on the specified SFP port.

Step 1	**configure** Enter global configuration mode.
Step 2	**interface { fastEthernet** *port* **| range fastEthernet** *port-list* **| gigabitEthernet** *port* **| range gigabitEthernet** *port-list* **| ten-gigabitEthernet** *port* **| range ten-gigabitEthernet** *port-list* **}** Enter interface configuration mode.
Step 3	**ddm rx_power_threshold {** high_alarm | high_warning | low_alarm | low_warning **}** *value* high_alarm: Specify the high threshold for the alarm. When the operating parameter rises above this value, action associated with the alarm will be taken. high_warning: Specify the high threshold for the warning. When the operating parameter rises above this value, action associated with the warning will be taken. low_alarm: Specify the low threshold for the alarm. When the operating parameter falls below this value, action associated with the alarm will be taken. low_warning: Specify the low threshold for the warning. When the operating parameter falls below this value, action associated with the warning will be taken. *value*: Enter the threshold value in mW. The valid values are from 0 to 6.5535.
Step 4	**show ddm configuration** rx_power Display the DDM rx power threshold on the SFP ports.
Step 5	**end** Return to Privileged EXEC Mode.
Step 6	**copy running-config startup-config** Save the settings in the configuration file.

The following example shows how to set SFP port 1/0/27's high alarm threshold Rx power as 6 mW.

Switch#configure

Switch(config)#interface gigabitEthernet 1/0/27

Switch(config-if)#ddm rx_power_threshold high_alarm 6

Switch(config-if)#show ddm configuration rx_power

Rx Power Threshold(mW) :

	High Alarm	Low Alarm	High Warning	Low Warning
Gi1/0/27	6.000000	--	--	--

...

Switch(config-if)#end

Switch#copy running-config startup-config

Configuring Tx Power Threshold

Follow these steps to configure the threshold of the DDM Tx power on the specified SFP port.

Step 1	**configure** Enter global configuration mode.
Step 2	**interface { fastEthernet** *port* **| range fastEthernet** *port-list* **| gigabitEthernet** *port* **| range gigabitEthernet** *port-list* **| ten-gigabitEthernet** *port* **| range ten-gigabitEthernet** *port-list* **}** Enter interface configuration mode.
Step 3	**ddm tx_power_threshold {** high_alarm | high_warning | low_alarm | low_warning **}** *value* high_alarm: Specify the high threshold for the alarm. When the operating parameter rises above this value, action associated with the alarm will be taken. high_warning: Specify the high threshold for the warning. When the operating parameter rises above this value, action associated with the warning will be taken. low_alarm: Specify the low threshold for the alarm. When the operating parameter falls below this value, action associated with the alarm will be taken. low_warning: Specify the low threshold for the warning. When the operating parameter falls below this value, action associated with the warning will be taken. *value*: Enter the threshold value in mW. The valid values are from 0 to 6.5535.
Step 4	**show ddm configuration** tx_power Display the DDM tx power threshold on the SFP ports.
Step 5	**end** Return to Privileged EXEC Mode.
Step 6	**copy running-config startup-config** Save the settings in the configuration file.

The following example shows how to set SFP port 1/0/27's high alarm threshold Tx power as 6 mW.

Switch#configure

Switch(config)#interface gigabitEthernet 1/0/27

Switch(config-if)#ddm tx_power_threshold high_alarm 6

Switch(config-if)#show ddm configuration tx_power

Tx Power Threshold(mW) :

	High Alarm	Low Alarm	High Warning	Low Warning
Gi1/0/27	6.000000	--	--	--

...

Switch(config-if)#end

Switch#copy running-config startup-config

2.2.4 Viewing DDM Configuration

Follow these steps to view the DDM configuration.

Step 1	**configure** Enter global configuration mode.
Step 2	**show ddm configuration {** state | temperature | voltage | bias_current | tx_power | rx_power**}** state: Displays the DDM configuration state. temperature: Displays the threshold of the DDM temperature value. voltage: Displays the threshold of the DDM voltage value. bias_current: Displays the threshold of the DDM bias current value. tx_power: Displays the threshold of the DDM Tx Power value. rx_power: Displays the threshold of the DDM Rx Power value.
Step 3	**end** Return to Privileged EXEC Mode.
Step 4	**copy running-config startup-config** Save the settings in the configuration file.

The following example shows how to view SFP ports' Rx power threshold.

Switch#configure

Switch(config)#show ddm configuration rx_power

Rx Power Threshold(mW) :

	High Alarm	Low Alarm	High Warning	Low Warning
Gi1/0/27	6.000000	--	--	--

Gi1/0/28 -- -- -- --

Switch(config)#end

2.2.5 Viewing DDM Status

Follow these steps to view the DDM status, which is the digital diagnostic monitoring status of SFP modules inserted into the switch's SFP ports.

Step 1	**configure** Enter global configuration mode.
Step 2	**show ddm status** Displays all the monitoring status of SFP modules.
Step 3	**end** Return to Privileged EXEC Mode.

The following example shows how to view SFP ports' DDM status.

Switch#configure

Switch(config)#show ddm status

	Temperature(C)	Voltage(V)	Bias Current(mA)	Tx Power(mW)	Rx Power(mW)	Data Ready	Rx Los	Tx Fault
Gi1/0/27	--	--	--	--	--	--	--	--
Gi1/0/28	--	--	--	--	--	--	--	--

Switch(config)#end

3 Appendix: Default Parameters

Default settings of DDM are listed in the following table.

Table 3-1 Default Settings of DDM

Parameter	Default Setting
DDM Status	Enabled. All the SFP ports are being monitored.
Shutdown	None. The port will not be shut down even if the alarm or warning threshold is exceeded.

Part 6

Managing MAC Address Table

CHAPTERS

1. MAC Address Table
2. Address Configurations
3. Security Configurations
4. Example for Security Configurations
5. Appendix: Default Parameters

1 MAC Address Table

1.1 Overview

The MAC address table contains address information that the switch uses to forward packets. As shown below, the table lists map entries of MAC addresses, VLAN IDs and ports. These entries can be manually added or automatically learned by the switch. Based on the MAC-address-to-port mapping in the table, the switch can forward packets only to the associated port.

Table 1-1 The MAC Address Table

MAC Address	VLAN ID	Port	Type	Aging Status
00:00:00:00:00:01	1	1	Dynamic	Aging
00:00:00:00:00:01	1	2	Static	No-Aging
...				

1.2 Supported Features

The address table of the switch contains dynamic addresses, static addresses and filtering addresses. You can add or remove these entries according to your needs. Furthermore, you can configure notification traps and limit the number of MAC addresses in a VLAN for traffic safety.

Address Configurations

- Dynamic address

Dynamic addresses are addresses learned by the switch automatically, and the switch regularly ages out those that are not in use. That is, the switch removes the MAC address entries related to a network device if no packet is received from the device within the aging time. And you can specify the aging time if needed.

- Static address

Static addresses are manually added to the address table and do not age. For some relatively fixed connection, for example, frequently visited server, you can manually set the MAC address of the server as a static entry to enhance the forwarding efficiency of the switch.

- Filtering address

Filtering addresses are manually added and determine the packets with specific source or destination MAC addresses that will should dropped by the switch.

Security Configurations

- Configuring MAC Notification Traps

You can configure traps and SNMP (Simple Network Management Protocol) to monitor and receive notifications of the usage of the MAC address table and the MAC address change activity. For example, you can configure the switch to send notifications when a new MAC address is learned, so the administrator knows a new users accesses the network.

- Limiting the Number of MAC Addresses in VLANs

You can configure VLAN Security to limit the number of MAC addresses that can be learned in specified VLANs. The switch will not learn addresses when the number of learned addresses has reached the limit, preventing the address table from being used up by broadcasting packets of MAC address attacks.

2 Address Configurations

With MAC address table, you can:

- Add static MAC address entries
- Change the address aging time
- Add filtering address entries
- View address table entries

2.1 Using the GUI


2.1.1 Adding Static MAC Address Entries

You can add static MAC address entries by manually specifying the desired MAC address or binding dynamic MAC address entries.

- Adding MAC Addresses Manually

Choose the menu **L2 FEATURES > Switching > MAC Address > Static Address** and click Add to load the following page.

Figure 2-1 Adding MAC Addresses Manually

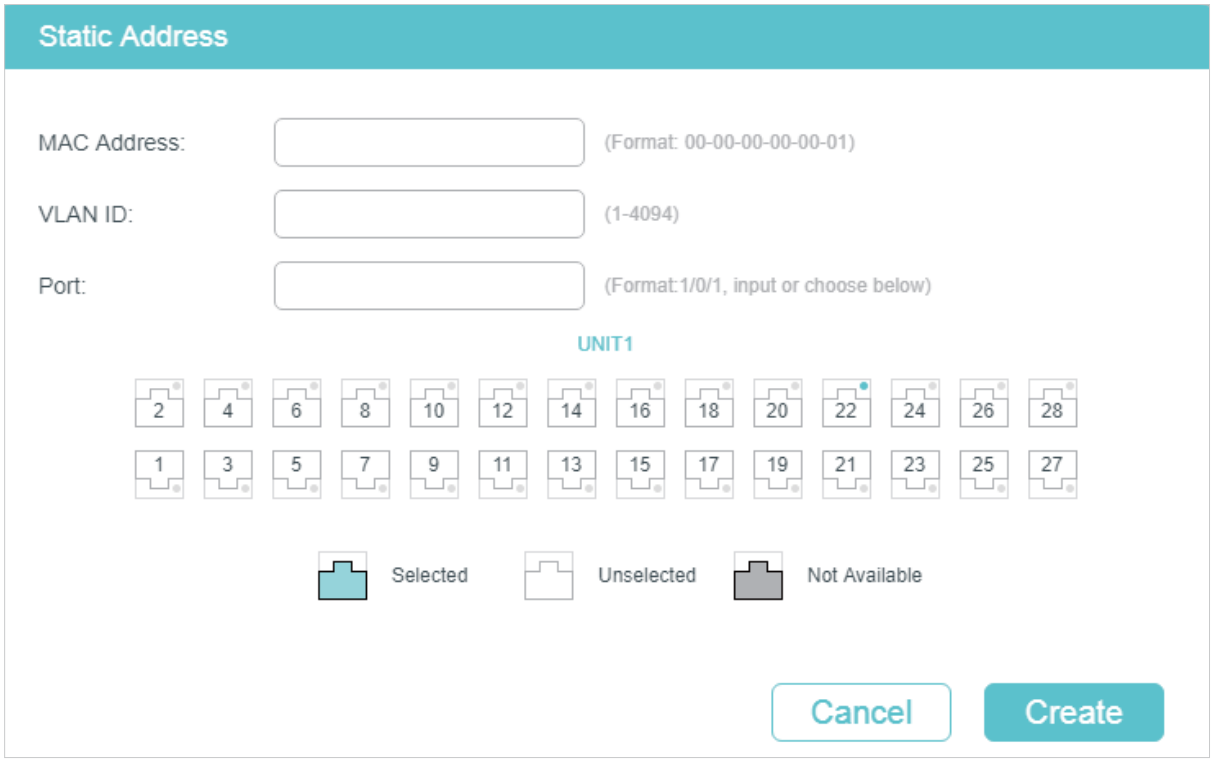

Follow these steps to add a static MAC address entry:

1) Enter the MAC address, VLAN ID and select a port to bind them together as an address entry.

MAC Address	Enter the static MAC address to be added to the static MAC address entry.
VLAN ID	Specify an existing VLAN in which packets with the specific MAC address are received.
Port	Specify a port to which packets with the specific MAC address are forwarded. The port must belong to the specified VLAN. After you have added the static MAC address, if the corresponding port number of the MAC address is not correct, or the connected port (or the device) has been changed, the switch cannot forward the packets correctly. Please reset the static address entry appropriately.


2) Click **Create**.

■ Binding Dynamic Address Entries

If some dynamic address entries are frequently used, you can bind these entries as static entries.

Choose the menu **L2 FEATURES > Switching > MAC Address > Dynamic Address** to load the following page.

Figure 2-2 Binding Dynamic MAC Address Entries

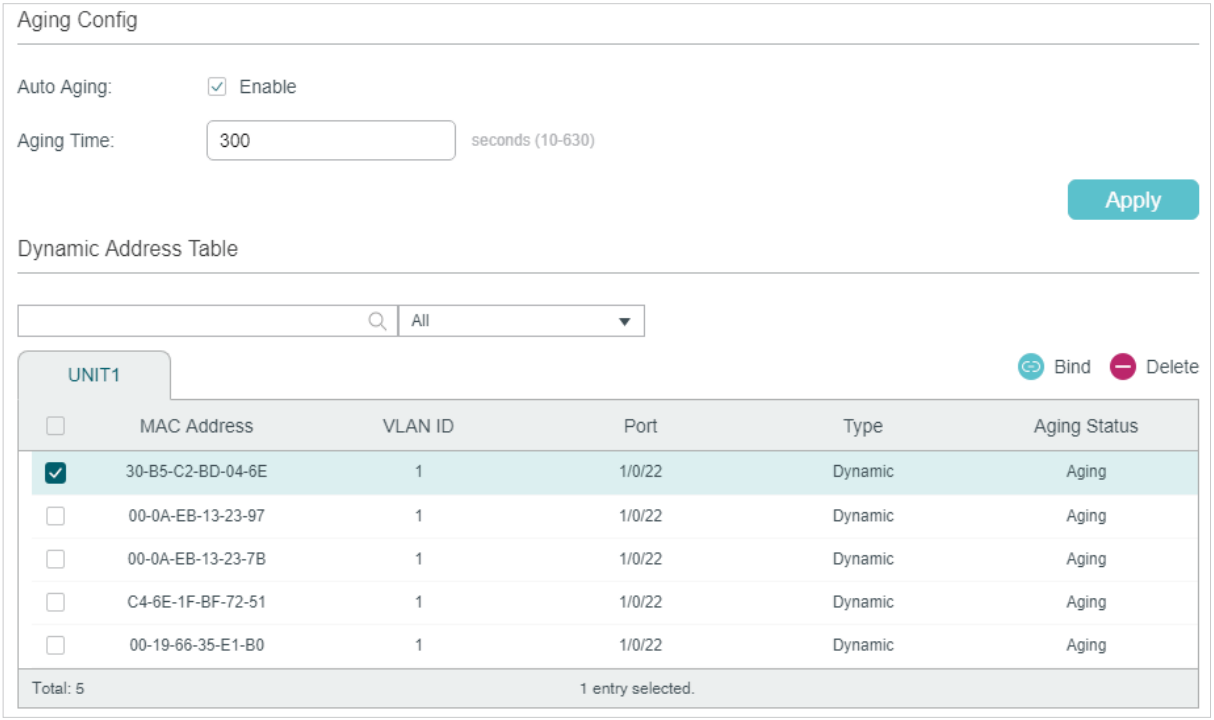

Follow these steps to bind dynamic MAC address entries:

1) In the **Dynamic Address Table**section, Select your desired MAC address entries.
2) Click **Bind**, and then the selected entries will become static MAC address entries.


Note:

- In the same VLAN, once an address is configured as a static address, it cannot be set as a filtering address, and vice versa.
- Multicast or broadcast addresses cannot be set as static addresses.
- Ports in LAGs (Link Aggregation Group) are not supported for static address configuration.

2.1.2 Modifying the Aging Time of Dynamic Address Entries

Choose the menu **L2 FEATURES > Switching > MAC Address > Dynamic Address** to load the following page.

Figure 2-3 Modifying the Aging Time of Dynamic Address Entries

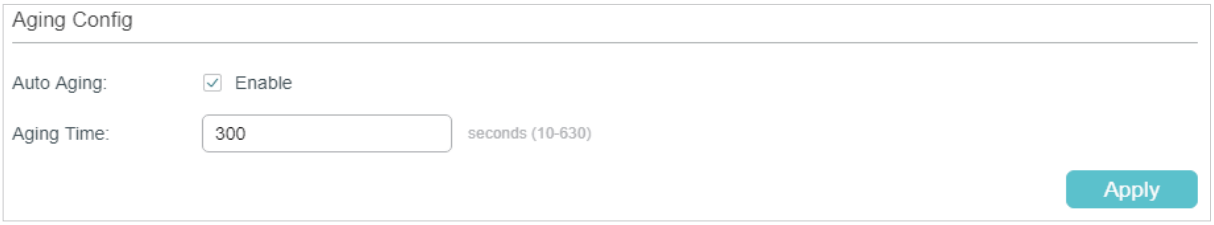

Follow these steps to modify the aging time of dynamic address entries:

1) In the **Aging Config** section, enable Auto Aging, and enter your desired length of time.


Auto Aging	Enable Auto Aging, then the switch automatically updates the dynamic address table with the aging mechanism. By default, it is enabled.
Aging Time	Set the length of time that a dynamic entry remains in the MAC address table after the entry is used or updated. The valid values are from 10 to 630 seconds, and the default value is 300. A short aging time is applicable to networks where network topology changes frequently, and a long aging time is applicable to stable networks. We recommend that you keep the default value if you are unsure about settings in your case.

2) Click **Apply.**

2.1.3 Adding MAC Filtering Address Entries

Choose the menu **L2 FEATURES > Switching > MAC Address > Filtering Address** and click Add to load the following page.

Figure 2-4 Adding MAC Filtering Address Entries

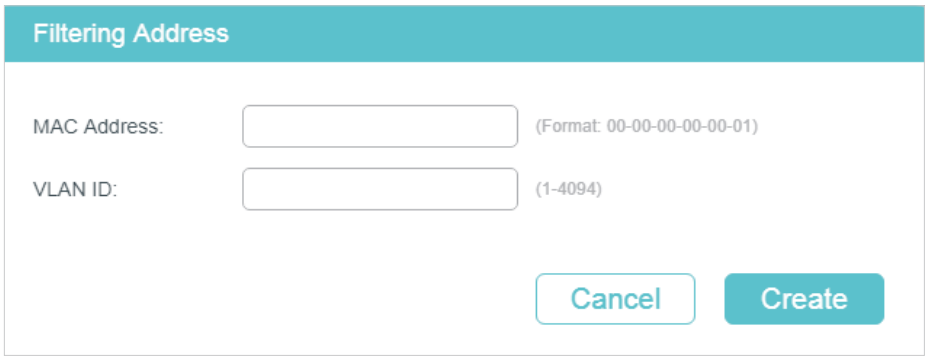

Follow these steps to add MAC filtering address entries:

1) Enter the MAC Address and VLAN ID.

MAC Address	Specify the MAC address to be used by the switch to filter the received packets.
VLAN ID	Specify an existing VLAN in which packets with the specific MAC address are dropped.

2) Click **Create**.

Note:


- In the same VLAN, once an address is configured as a filtering address, it cannot be set as a static address, and vice versa.
- Multicast or broadcast addresses cannot be set as filtering addresses .

2.1.4 Viewing Address Table Entries

You can view entries in MAC address table to check your former operations and address information.

Choose the menu **L2 FEATURES > Switching > MAC Address > Address Table** and click Search to load the following page.

Figure 2-5 Viewing Address Table Entries

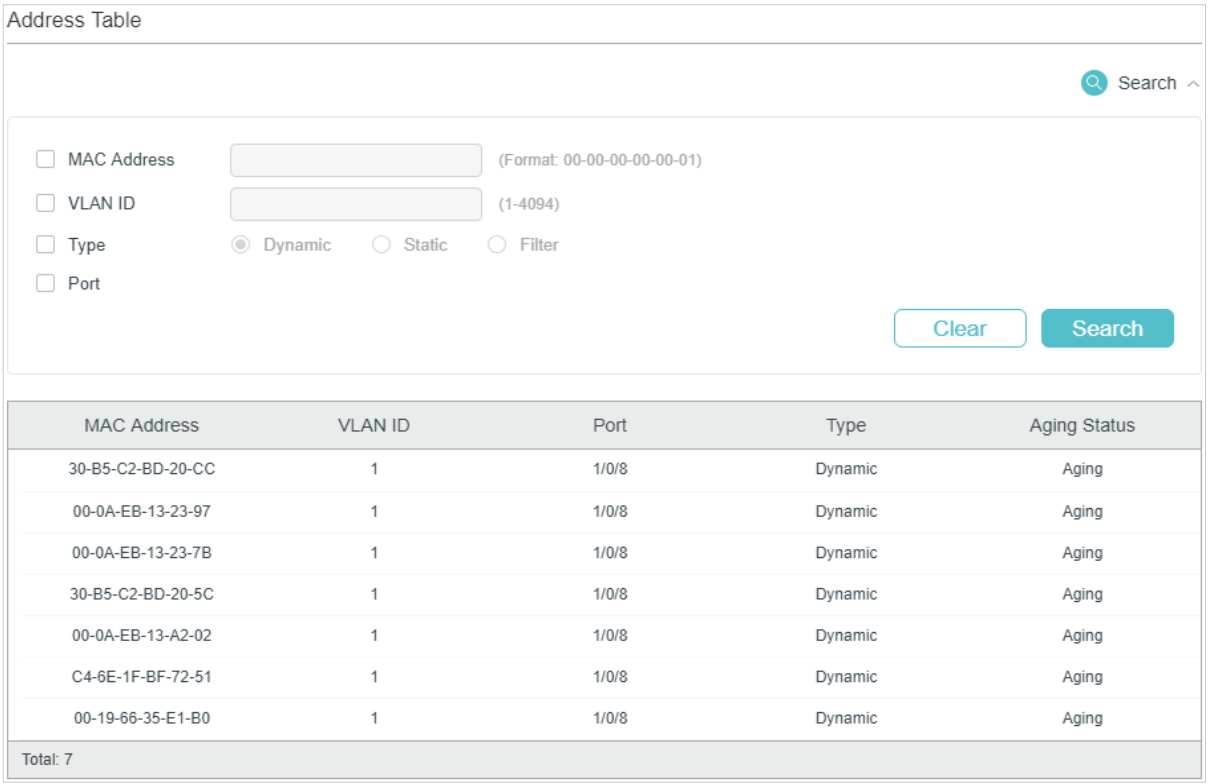

2.2 Using the CLI

2.2.1 Adding Static MAC Address Entries

Follow these steps to add static MAC address entries:

Step 1	**configure** Enter global configuration mode.
Step 2	**mac address-table static** *mac-addr* **vid** *vid* **interface { fastEthernet** *port* **| gigabitEthernet** *port* **| ten-gigabitEthernet** *port* **}** Bind the MAC address, VLAN and port together to add a static address to the VLAN. *mac-addr*: Enter the MAC address, and packets with this destination address received in the specified VLAN are forwarded to the specified port. The format is xx:xx:xx:xx:xx:xx, for example, 00:00:00:00:00:01. *vid*: Specify an existing VLAN in which packets with the specific MAC address are received. *port:* Specify a port to which packets with the specific MAC address are forwarded. The port must belong to the specified VLAN.

Step 3	**end** Return to privileged EXEC mode.
Step 4	**copy running-config startup-config** Save the settings in the configuration file.

Note:

- In the same VLAN, once an address is configured as a static address, it cannot be set as a filtering address, and vice versa.
- Multicast or broadcast addresses cannot be set as static addresses.
- Ports in LAGs (Link Aggregation Group) are not supported for static address configuration.

The following example shows how to add a static MAC address entry with MAC address 00:02:58:4f:6c:23, VLAN 10 and port 1. When a packet is received in VLAN 10 with this address as its destination, the packet will be forwarded only to port 1/0/1.

Switch#configure

Switch(config)# mac address-table static 00:02:58:4f:6c:23 **vid** 10 **interface gigabitEthernet** 1/0/1

Switch(config)#show mac address-table static

MAC Address Table

MAC	VLAN	Port	Type	Aging
00:02:58:4f:6c:23	10	Gi1/0/1	config static	no-aging

Total MAC Addresses for this criterion: 1

Switch(config)#end

Switch#copy running-config startup-config

2.2.2 Modifying the Aging Time of Dynamic Address Entries

Follow these steps to modify the aging time of dynamic address entries:

Step 1	**configure** Enter global configuration mode.

Step 2	**mac address-table aging-time** *aging-time* Set your desired length of address aging time for dynamic address entries. *aging-time:* Set the length of time that a dynamic entry remains in the MAC address table after the entry is used or updated. The valid values are from10 to 630. Value 0 means the Auto Aging function is disabled. The default value is 300 and we recommend you keep the default value if you are unsure.
Step 3	**end** Return to privileged EXEC mode.
Step 4	**copy running-config startup-config** Save the settings in the configuration file.

The following example shows how to modify the aging time to 500 seconds. A dynamic entry remains in the MAC address table for 500 seconds after the entry is used or updated.

Switch#configure

Switch(config)# mac address-table aging-time 500

Switch(config)#show mac address-table aging-time

Aging time is 500 sec.

Switch(config)#end

Switch#copy running-config startup-config

2.2.3 Adding MAC Filtering Address Entries

Follow these steps to add MAC filtering address entries:

Step 1	**configure** Enter global configuration mode.
Step 2	**mac address-table filtering** *mac-addr* **vid** *vid* Add the filtering address to the VLAN. *mac-addr:* Specify a MAC address to be used by the switch to filter the received packets. The switch will drop packets of which the source address or destination address is the specified MAC address. The format is xx:xx:xx:xx:xx:xx, for example, 00:00:00:00:00:01. *vid:* Specify an existing VLAN in which packets with the specific MAC address will be dropped.
Step 3	**end** Return to privileged EXEC mode.
Step 4	**copy running-config startup-config** Save the settings in the configuration file.

Note:

- In the same VLAN, once an address is configured as a filtering address, it cannot be set as a static address, and vice versa.
- Multicast or broadcast addresses cannot be set as filtering addresses .

The following example shows how to add the MAC filtering address 00:1e:4b:04:01:5d to VLAN 10. Then the switch will drop the packet that is received in VLAN 10 with this address as its source or destination.

Switch#configure

Switch(config)# mac address-table filtering 00:1e:4b:04:01:5d **vid** 10

Switch(config)#show mac address-table filtering

MAC Address Table

MAC	VLAN	Port	Type	Aging
---	------	----	----	-----
00:1e:4b:04:01:5d	10		filter	no-aging

Total MAC Addresses for this criterion: 1

Switch(config)#end

Switch#copy running-config startup-config

3 Security Configurations

With security configurations of the MAC address table, you can:


- Configure MAC notification traps
- Limit the number of MAC addresses in VLANs

3.1 Using the GUI

3.1.1 Configuring MAC Notification Traps

Choose the menu **L2 FEATURES > Switching > MAC Address > MAC Notification** to load the following page.

Figure 3-1 Configuring MAC Notification Traps

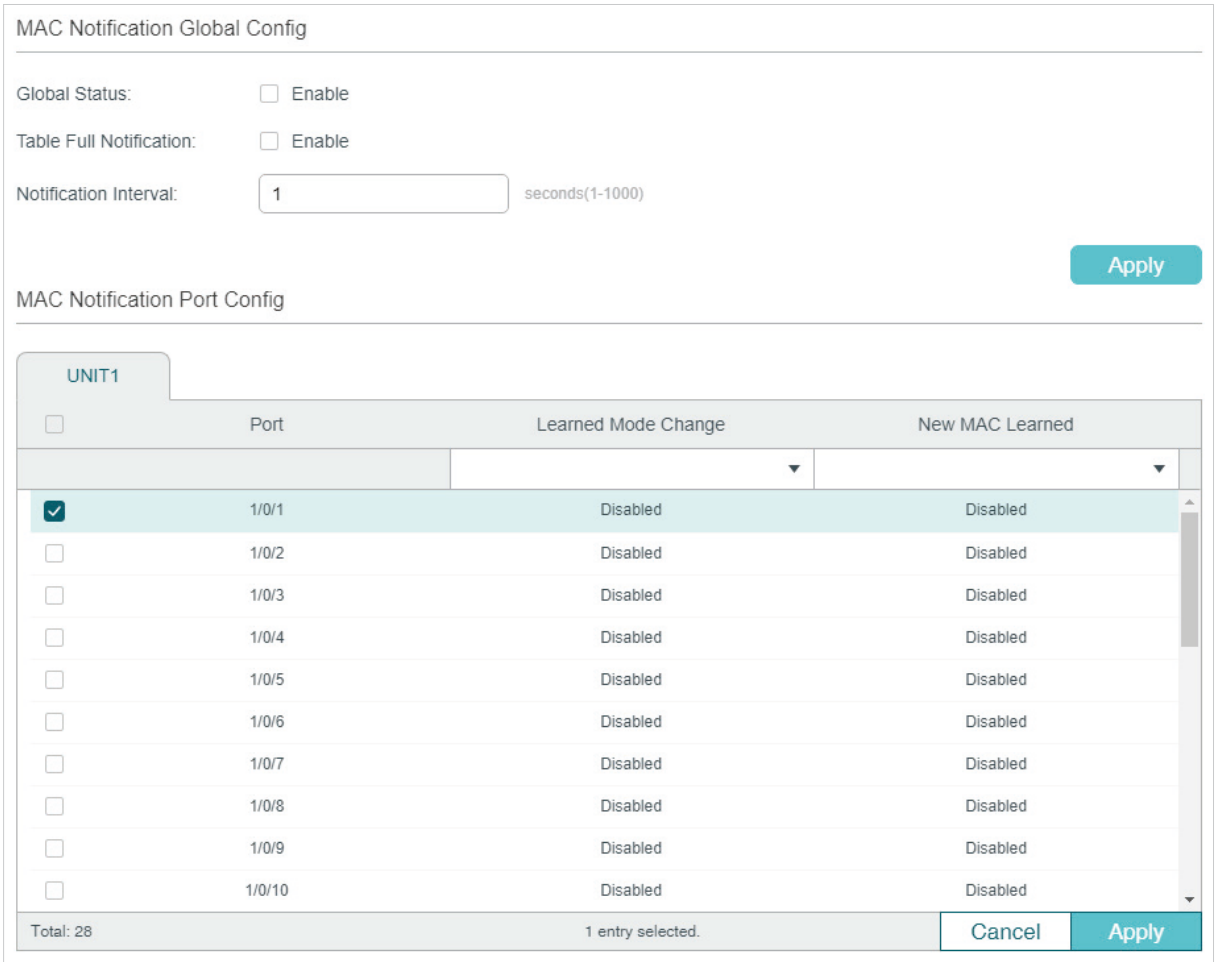

Follow these steps to configure MAC notification traps:

1) In the **MAC Notification Global Config** section, enable this feature, configure the relevant options, and click **Apply**.

Global Status	Enable MAC notification feature globally.
Table Full Notification	Enable Table Full Notification, and when address table is full, a notification will be generated and sent to the management host.
Notification Interval	Specify the time value of Notification Interval. Notification Interval is the interval at which the New MAC Learned notifications are continuously sent.

2) In the **MAC Notification Port Config** section, select one or more ports to configure the notification status. Click **Apply**.

Learned Mode Change	Enable Learned Mode Change, and when the learned mode of the specified port is changed, a notification will be generated and sent to the management host.
New MAC Learned	Enable New MAC Learned, and when the specified port learns a new MAC address, a notification will be generated and sent to the management host.


3) Configure SNMP and set a management host. For detailed SNMP configurations, please refer to *Configuring SNMP & RMON*.

3.1.2 Limiting the Number of MAC Addresses Learned in VLANs

- For T2600G-18TS

Choose the menu **L2 FEATURES > Switching > MAC Address > MAC VLAN Security** to load the following page.

Figure 3-2 Configuring the MAC VLAN Security Mode

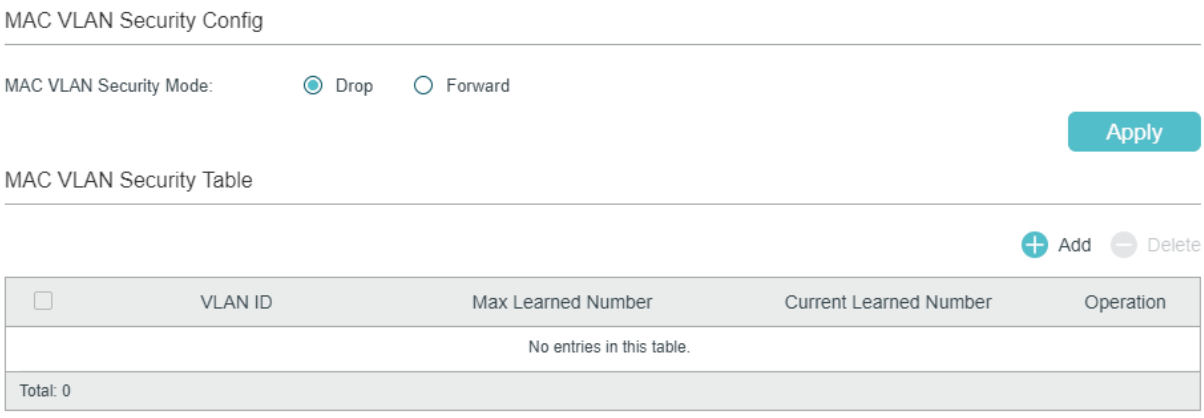

Follow these steps to limit the number of MAC addresses in VLANs:


1) In the **MAC VLAN Security Config** section, select the security mode for all VLANs.

Drop	Packets with new source MAC addresses in the VLAN will be dropped when the maximum number of MAC addresses is exceeded.

Forward	Packets of new source MAC addresses will be forwarded but the addresses will not be learned when the maximum number of MAC addresses is exceeded.

2) In the **MAC VLAN Security Table** section, click Add to load the following page. Enter the VLAN ID and the Max Learned Number to limit the number of MAC addresses that can be learned in the specified VLAN.

Figure 3-3 Limiting the Number of MAC Addresses in VLANs

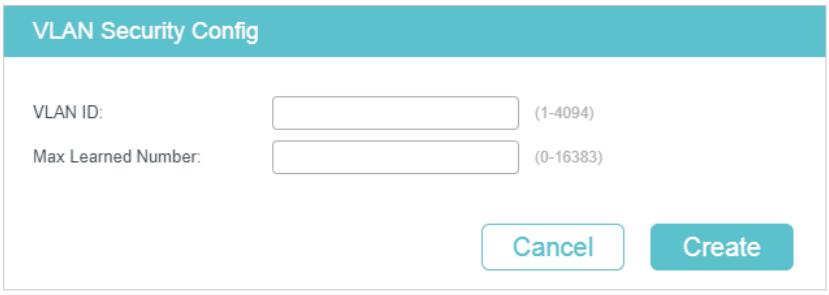


VLAN ID	Specify an existing VLAN in which you want to limit the number of MAC addresses.
Max Learned Number	Set the maximum number of MAC addresses in the specific VLAN. It ranges from 0 to 16383. You can control the available address table space by setting maximum learned MAC number for VLANs. However, an improper maximum number can cause unnecessary floods in the network or a waste of address table space. Therefore, before you set the number limit, please be sure you are familiar with the network topology and the switch system configuration.

3) Click **Create**.

- For T2600G-28TS/T2600G-52TS/T2600G-28MPS/T2600G-28SQ

Choose the menu **L2 FEATURES > Switching > MAC Address > MAC VLAN Security** and click Add to load the following page.

Figure 3-4 Limiting the Number of MAC Addresses in VLANs

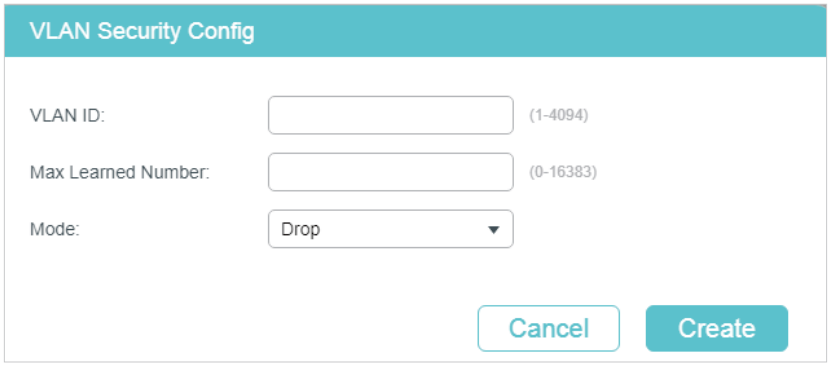

Follow these steps to limit the number of MAC addresses in VLANs:

1) Enter the VLAN ID to limit the number of MAC addresses that can be learned in the specified VLAN.

VLAN ID	Specify an existing VLAN in which you want to limit the number of MAC addresses.

2) Enter your desired value in **Max Learned Number** to set a threshold.

Max Learned Number	Set the maximum number of MAC addresses in the specific VLAN. It ranges from 0 to 16383. You can control the available address table space by setting maximum learned MAC number for VLANs. However, an improper maximum number can cause unnecessary floods in the network or a waste of address table space. Therefore, before you set the number limit, please be sure you are familiar with the network topology and the switch system configuration.

3) Choose the mode that the switch adopts when the maximum number of MAC addresses in the specified VLAN is exceeded.

Drop	Packets with new source MAC addresses in the VLAN will be dropped when the maximum number of MAC addresses in the specified VLAN is exceeded.
Forward	Packets of new source MAC addresses will be forwarded but the addresses will not be learned when the maximum number of MAC addresses in the specified VLAN is exceeded.

4) Click **Create**.

3.2 Using the CLI

3.2.1 Configuring MAC Notification Traps

Follow these steps to configure MAC notification traps:

Step 1	**configure** Enter global configuration mode.
Step 2	**mac address-table notification global-status {**enable | disable**}** Enable MAC Notification globally. enable | disable: Enable or disable MAC Notification globally.
Step 3	**mac address-table notification table-full-status [**enable | disable**]** (Optional) Enable Table Full Notification. enable | disable: With Table Full Notification enabled, when address table is full, a notification will be generated and sent to the management host.
Step 4	**mac address-table notification interval** *time* Specify the time value of Notification Interval. Notification Interval is the interval at which the New MAC Learned notifications are continuously sent. *time:* Specify the Notification Interval in seconds between 1to 1000. By default, it is 1 second.

Step 5	**interface { fastEthernet** *port* **| range fastEthernet** *port-list* **| gigabitEthernet** *port* **| range gigabitEthernet** *port-list* **| ten-gigabitEthernet** *port* **| ten-range gigabitEthernet** *port-list* **}** Configure notification traps on the specified port. *port/ port-list:* The number or the list of the Ethernet port that you want to configure notification traps.
Step 6	**mac address-table notification {[learn-mode-change** enable | disable] **[new-mac-learned** enable | disable]**}** Enable learn-mode-change, exceed-max-learned, or new-MAC-learned notification traps on the specified port. enable | disable:Enable or disable learn-mode-change, exceed-max-learned, or new-MAC-learned notification traps on the specified port. **learn-mode-change**: With learn-mode-change enabled, when the learned mode of the specified port is changed, a notification will be generated and sent to the management host. **new-mac-learned**: With new-mac-learned enabled, when the specified port learns a new MAC address, a notification will be generated and sent to the management host.
Step 7	**end** Return to privileged EXEC mode.
Step 8	**copy running-config startup-config** Save the settings in the configuration file.

Now you have configured MAC notification traps. To receive notifications, you need to further enable SNMP and set a management host. For detailed SNMP configurations, please refer to *Configuring SNMP & RMON*.

The following example shows how to enable new-MAC-learned trap on port 1, and set the interval time as 10 seconds. After you have further configured SNMP, the switch will bundle notifications of new addresses in every 10 seconds and send to the management host.

Switch#configure

Switch(config)#mac address-table notification global-status enable

Switch(config)#mac address-table notification interval 10

Switch(config)#interface gigabitEthernet 1/0/1

Switch(config-if)#mac address-table notification new-mac-learned enable

Switch(config-if)#show mac address-table notification interface gigabitEthernet 1/0/1

Mac Notification Global Config

Notification Global Status : enable

Table Full Notification Status: disable

Notification Interval : 10

Port LrnMode Change New Mac Learned

---- ---------- ----------

Gi1/0/1 disable enable

Switch(config-if)#end

Switch#copy running-config startup-config

3.2.2 Limiting the Number of MAC Addresses in VLANs

- For T2600G-18TS

Follow these steps to limit the number of MAC addresses in VLANs:

Step 1	**configure** Enter global configuration mode.
Step 2	**mac address-table vlan-security mode {**drop	forward**}** Specify the VLAN security mode for all the VLANs. drop	forward: The mode that the switch adopts when the maximum number of MAC addresses in the specified VLAN is exceeded. drop: Packets of new source MAC addresses in the VLAN will be dropped when the maximum number of MAC addresses in the specified VLAN is exceeded. forward: Packets of new source MAC addresses will be forwarded but the addresses not learned when the maximum number of MAC addresses in the specified VLAN is exceeded.
Step 3	**mac address-table vlan-security vid** *vid* **max-learn** *num* Configure the maximum number of MAC addresses in the specified VLAN and select a mode for the switch to adopt when the maximum number is exceeded. *vid*: Specify an existing VLAN in which you want to limit the number of MAC addresses. *num*: Set the maximum number of MAC addresses in the specific VLAN. It ranges from 0 to 16383.
Step 4	**end** Return to privileged EXEC mode.
Step 5	**copy running-config startup-config** Save the settings in the configuration file.

The following example shows how to limit the number of MAC addresses to 100 in VLAN 10, and configure the switch to drop packets of new source MAC addresses when the limit is exceeded.

Switch#configure

Switch(config)#mac address-table vlan-security mode drop

Switch(config)#mac address-table vlan-security vid 10 **max-learn** 100

Switch(config)#show mac address-table vlan-security vid 10

VlanId Max-learn Current-learn Status

------ --------- ------------- ------

10 100 0 Drop

Switch(config)#end

Switch#copy running-config startup-config

- For T2600G-28TS/T2600G-52TS/T2600G-28MPS/T2600G-28SQ

Follow these steps to limit the number of MAC addresses in VLANs:

Step 1	**configure** Enter global configuration mode.
Step 2	**mac address-table security vid** *vid* **max-learn** *num* **{**drop | forward**}** Configure the maximum number of MAC addresses in the specified VLAN and select a mode for the switch to adopt when the maximum number is exceeded. *vid*: Specify an existing VLAN in which you want to limit the number of MAC addresses. *num*: Set the maximum number of MAC addresses in the specific VLAN. It ranges from 0 to 16383. drop | forward: The mode that the switch adopts when the maximum number of MAC addresses in the specified VLAN is exceeded. drop: Packets of new source MAC addresses in the VLAN will be dropped when the maximum number of MAC addresses in the specified VLAN is exceeded. forward: Packets of new source MAC addresses will be forwarded but the addresses not learned when the maximum number of MAC addresses in the specified VLAN is exceeded.
Step 3	**end** Return to privileged EXEC mode.
Step 4	**copy running-config startup-config** Save the settings in the configuration file.

The following example shows how to limit the number of MAC addresses to 100 in VLAN 10, and configure the switch to drop packets of new source MAC addresses when the limit is exceeded.

Switch#configure

Switch(config)#mac address-table security vid 10 **max-learn** 100 drop

Switch(config)#show mac address-table security vid 10

VlanId	Max-learn	Current-learn	Status
10	100	0	Drop

Switch(config)#end

Switch#copy running-config startup-config


4 Example for Security Configurations

4.1 Network Requirements

Several departments are connected to the company network as shown in Figure 4-1. Now the Marketing Department that is in VLAN 10 has network requirements as follows:

- Free the network system from illegal accesses and MAC address attacks by limiting the number of access users in this department to 100.
- Assist the network manager supervising the network with notifications of any new access users.

Figure 4-1 The Network Topology

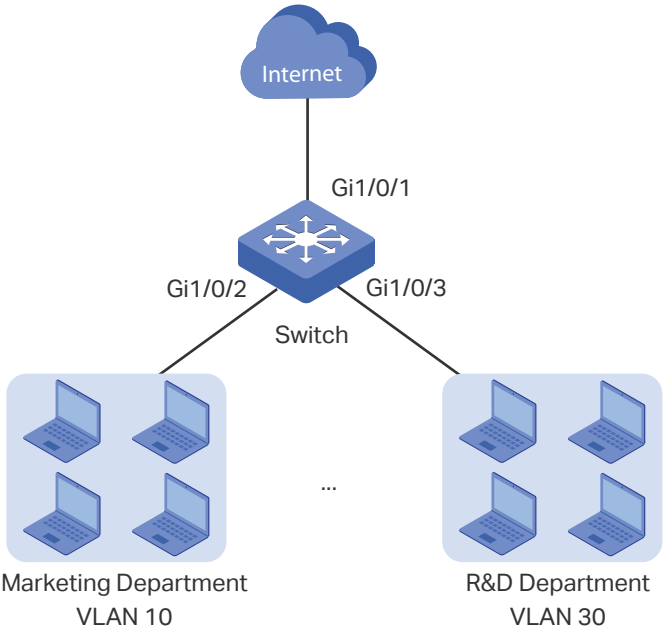

4.2 Configuration Scheme

VLAN Security can be configured to limit the number of access users and in this way to prevent illegal accesses and MAC address attacks.


MAC Notification and SNMP can be configured to monitor the interface which is used by the Marketing Department. Enable the new-MAC-learned notification and the SNMP, then the network manager can get notifications when new users access the network.

Demonstrated with T2600G-28TS, this chapter provides configuration procedures in two ways: using the GUI and using the CLI.

4.3 Using the GUI


1) Choose the menu **L2 FEATURES > Switching > MAC Address > MAC VLAN Security** and click **Add** to load the following page. Set the maximum number of MAC address in VLAN 10 as 100, choose drop mode and click **Create**.

Figure 4-2 Configuring VLAN Security

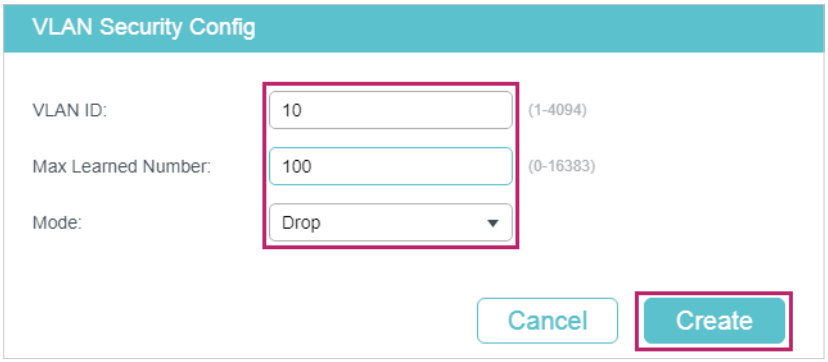

2) Choose the menu **L2 FEATURES > Switching > MAC Address > MAC Notification** to load the following page. Enable Global Status, set notification interval as 10 seconds, and click **Apply**. Then, enable new-mac-learned trap on port 1/0/2 and click **Apply**.

Figure 4-3 Configuring New-MAC-learned Traps

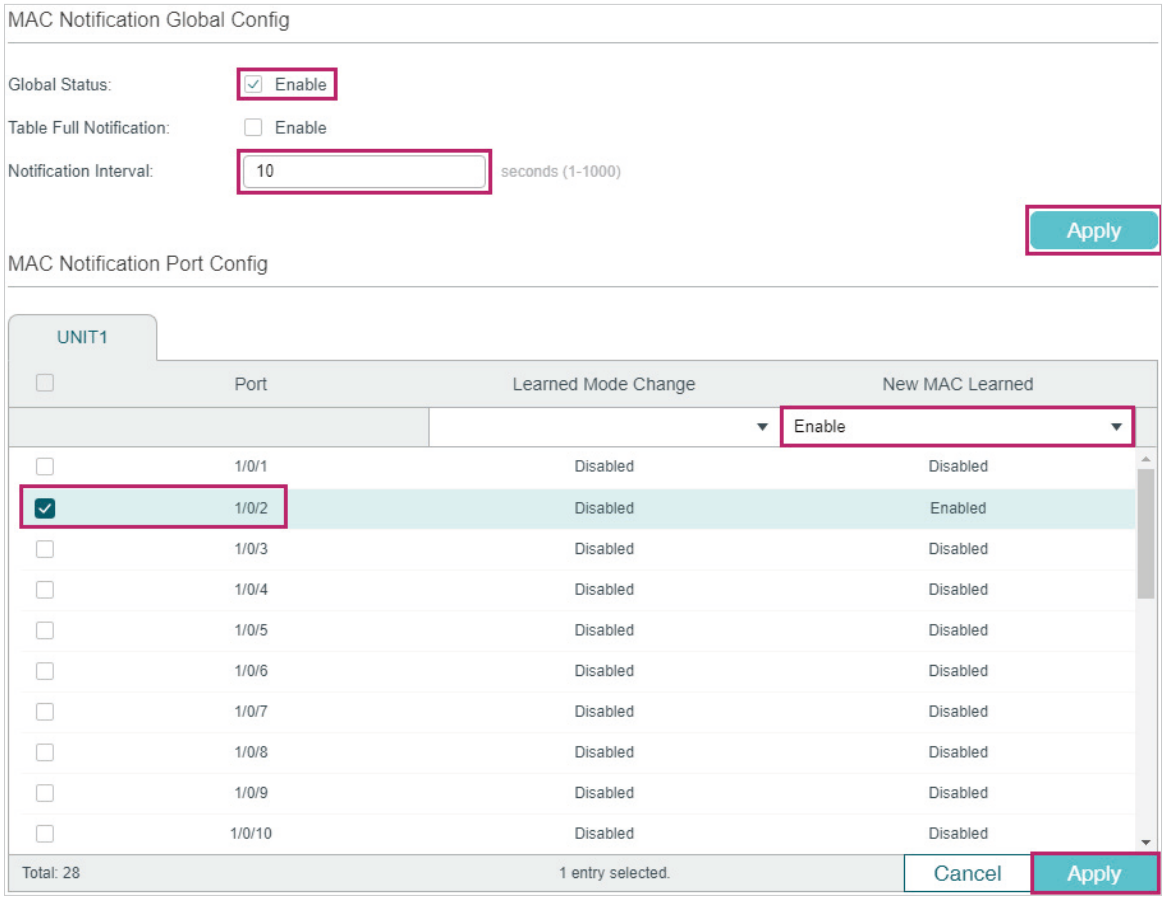

3) Click Save to save the settings.

4) Enable SNMP and set a management host. For detailed SNMP configurations, please refer to *Configuring SNMP & RMON*.

4.4 Using the CLI

1) Set the maximum number of MAC address in VLAN 10 as 100, and choose drop mode.

   Switch#configure

   Switch(config)#mac address-table security vid 10 max-learn 100 drop

2) Configure the new-MAC-learned trap on port 1/0/2 and set notification interval as 10 seconds.

   Switch(config)#mac address-table notification global-status enable

   Switch(config)#mac address-table notification interval 10

   Switch(config)#interface gigabitEthernet 1/0/2

   Switch(config-if)#mac address-table notification new-mac-learned enable

   Switch(config-if)#end

   Switch#copy running-config startup-config

3) Configure SNMP and set a management host. For detailed SNMP configurations, please refer to *Configuring SNMP & RMON*.

Verify the Configurations

Verify the configuration of VLAN Security.

Switch#show mac address-table security vid 10

VlanId	Max-learn	Current-learn	Status
10	100	0	Drop

Verify the configuration of MAC Notification on port 1/0/2.

Switch#show mac address-table notification interface gigabitEthernet 1/0/2

Port	LrnMode Change	New Mac Learned
Gi1/0/2	disable	enable

5 Appendix: Default Parameters

Default settings of the MAC Address Table are listed in the following tables.

Table 5-1 Entries in the MAC Address Table

Parameter	Default Setting
Static Address Entries	None
Dynamic Address Entries	Auto-learning
Filtering Address Entries	None

Table 5-2 Default Settings of Dynamic Address Table

Parameter	Default Setting
Auto Aging	Enable
Aging Time	300 seconds

Table 5-3 Default Settings of MAC Notification

Parameter	Default Setting
Global Status	Disable
Table Full Notification	Disable
Notification Interval	1 Second
Learned Mode Change Notification	Disable
Exceed Max Learned Notification	Disable
New MAC Learned Notification	Disable

Part 7

Configuring 802.1Q VLAN

CHAPTERS

1. Overview
2. 802.1Q VLAN Configuration
3. Configuration Example
4. Appendix: Default Parameters

1 Overview

VLAN (Virtual Local Area Network) is a network technique that solves broadcasting issues in local area networks. It is usually applied in the following occasions:

- To restrict broadcast domain: VLAN technique divides a big local area network into several VLANs, and all VLAN traffic remains within its VLAN. It reduces the influence of broadcast traffic in Layer 2 network to the whole network.

- To enhance network security: Devices from different VLANs cannot achieve Layer 2 communication, and thus users can group and isolate devices to enhance network security.

- For easier management: VLANs group devices logically instead of physically, so devices in the same VLAN need not be located in the same place. It eases the management of devices in the same work group but located in different places.

2 802.1Q VLAN Configuration

To complete 802.1Q VLAN configuration, follow these steps:


1) Configure the port parameters;
2) Configure the VLAN, including creating a VLAN and adding the configured port to the VLAN.

2.1 Using the GUI

2.1.1 Configuring the PVID of the Port

Choose the menu **L2 FEATURES > VLAN > 802.1Q VLAN > Port Config** to load the following page.

Figure 2-1 Configuring the Port

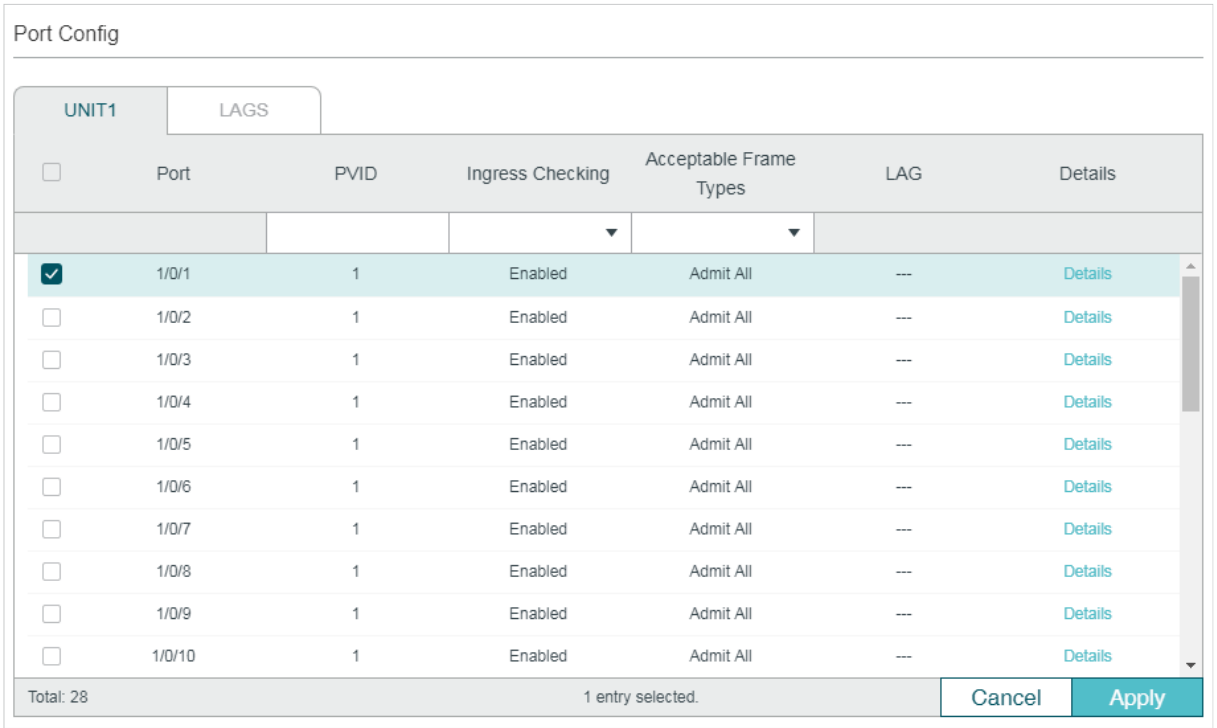

Select a port and configure the parameters. Click **Apply**.


PVID	Set the default VLAN ID of the port. Valid values are from 1 to 4094. It is used mainly in the following two ways: When the port receives an untagged packet, the switch inserts a VLAN tag to the packet based on the PVID.

Ingress Checking	Enable or disable Ingress Checking. With this function enabled, the port will accept the packet of which the VLAN ID is in the port's VLAN list and discard others. With this function disabled, the port will forward the packet directly.
Acceptable Frame Types	Select the acceptable frame type for the port and the port will perform this operation before Ingress Checking. **Admit All:** The port will accept both the tagged packets and the untagged packets. **Tagged Only:** The port will accept the tagged packets only.
LAG	Displays the LAG (Link Aggregation Group) which the port belongs to.
Details	Click the Details button to view the VLANs to which the port belongs.

2.1.2 Configuring the VLAN

Choose the menu **L2 FEATURES > VLAN > 802.1Q VLAN > VLAN Config** and click Add to load the following page.

Figure 2-2 Configuring VLAN

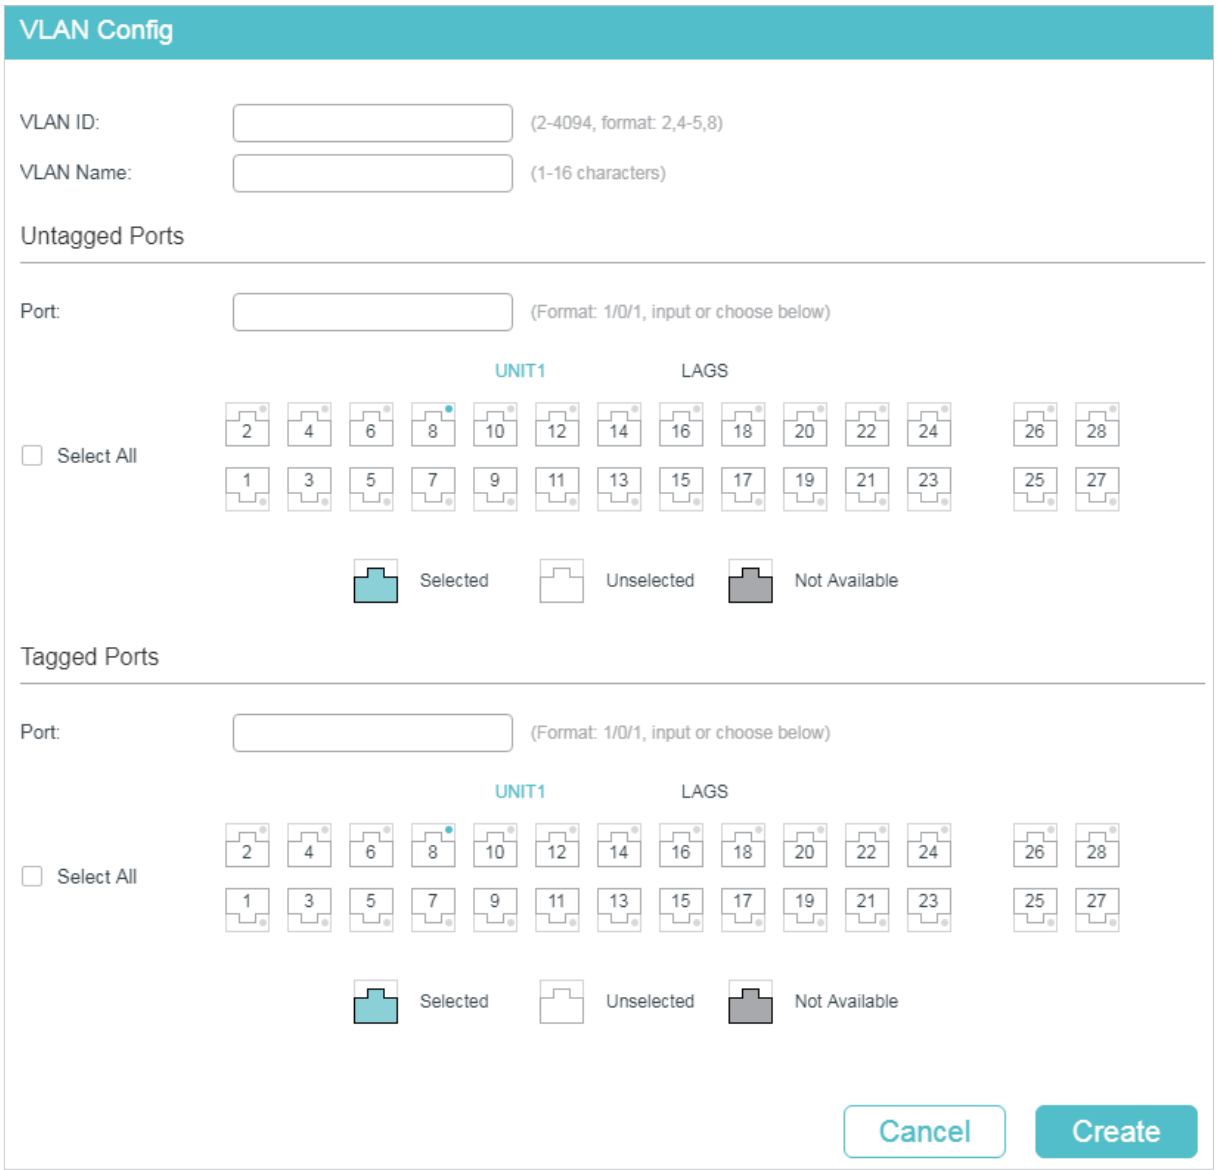

Follow these steps to configure VLAN:

1) Enter a VLAN ID and a description for identification to create a VLAN.

VLAN ID	Enter a VLAN ID for identification with the values between 2 and 4094.
VLAN Name	Give a VLAN description for identification with up to 16 characters.

2) Select the untagged port(s) and the tagged port(s) respectively to add to the created VLAN based on the network topology.

Untagged port	The selected ports will forward untagged packets in the target VLAN.

Tagged port	The selected ports will forward tagged packets in the target VLAN.

3) Click **Apply**.

2.2 Using the CLI

2.2.1 Creating a VLAN

Follow these steps to create a VLAN:

Step 1	**configure** Enter global configuration mode.
Step 2	**vlan** *vlan-list* When you enter a new VLAN ID, the switch creates a new VLAN and enters VLAN configuration mode; when you enter an existing VLAN ID, the switch directly enters VLAN configuration mode. *vlan-list*: Specify the ID or the ID list of the VLAN(s) for configuration. Valid values are from 2 to 4094, for example, 2-3,5.
Step 3	**name** *descript* (Optional) Specify a VLAN description for identification. *descript*: The length of the description should be 1 to 16 characters.
Step 4	**show vlan** [id *vlan-list*] Show the global information of the specified VLAN(s). When no VLAN is specified, this command shows global information of all 802.1Q VLANs. *vlan-list*: Specify the ID or the ID list of the VLAN(s) to show information. Valid values are from 1 to 4094.
Step 5	**end** Return to privileged EXEC mode.
Step 6	**copy running-config startup-config** Save the settings in the configuration file.

The following example shows how to create VLAN 2 and name it as RD :

Switch#configure

Switch(config)#vlan 2

Switch(config-vlan)#name RD

Switch(config-vlan)#show vlan id 2

VLAN	Name	Status	Ports
2	RD	active	

Switch(config-vlan)#end

Switch#copy running-config startup-config

2.2.2 Configuring the Port

Follow these steps to configure the port:

Step 1	**configure** Enter global configuration mode.
Step 2	**interface {fastEthernet** *port* **| range fastEthernet** *port-list* **| gigabitEthernet** *port* **| range gigabitEthernet** *port-list* **| ten-gigabitEthernet** *port* **| range ten-gigabitEthernet** *port-list* **| port-channel** *port-channel-id* **| range port-channel** *port-channel-list***}** Enter interface configuration mode.
Step 3	**switchport pvid** *vlan-id* Configure the PVID of the port(s). By default, it is 1. *vlan-id*: The default VLAN ID of the port with the values between 1 and 4094.
Step 4	**switchport check ingress** Enable or disable Ingress Checking. With this function enabled, the port will accept the packet of which the VLAN ID is in the port's VLAN list and discard others. With this function disabled, the port will forward the packet directly.
Step 5	**switchport acceptable frame {**all **|** tagged**}** Select the acceptable frame type for the port and the port will perform this operation before Ingress Checking. all: The port will accept both the tagged packets and the untagged packets. tagged: The port will accept the tagged packets only.
Step 6	**end** Return to privileged EXEC mode.
Step 7	**copy running-config startup-config** Save the settings in the configuration file.

The following example shows how to configure the PVID of port 1/0/5 as 2, enable the ingress checking and set the acceptable frame type as all:

Switch#configure

Switch(config)#interface gigabitEthernet 1/0/5

Switch(config-if)#switchport pvid 2

Switch(config-if)#switchport check ingress

Switch(config-if)#switchport acceptable frame all

Switch(config-if)#show interface switchport gigabitEthernet 1/0/5

Port Gi1/0/5:

PVID: 2

Acceptable frame type: All

Ingress Checking: Enable

Member in LAG: N/A

Link Type: General

Member in VLAN:

Vlan	Name	Egress-rule
----	----------	----------
1	System-VLAN	Untagged

Switch(config-if)#end

Switch#copy running-config startup-config

2.2.3 Adding the Port to the Specified VLAN

Follow these steps to add the port to the specified VLAN:

Step 1	**configure** Enter global configuration mode.
Step 2	**interface {fastEthernet** *port* **| range fastEthernet** *port-list* **| gigabitEthernet** *port* **| range gigabitEthernet** *port-list* **| ten-gigabitEthernet** *port* **| range ten-gigabitEthernet** *port-list* **| port-channel** *port-channel-id* **| range port-channel** *port-channel-list***}** Enter interface configuration mode.
Step 3	**switchport general allowed vlan** *vlan-list* **{** tagged **|** untagged **}** Add ports to the specified VLAN. *vlan-list:* Specify the ID or ID list of the VLAN(s) that the port will be added to. The ID ranges from 1 to 4094. tagged **|** untagged: Select the egress rule for the port.
Step 4	**show interface switchport [fastEthernet** *port* **| gigabitEthernet** *port* **| ten-gigabitEthernet** *port* **| port-channel** *lag-id***]** Verify the information of the port.
Step 5	**end** Return to privileged EXEC mode.
Step 6	**copy running-config startup-config** Save the settings in the configuration file.

The following example shows how to add the port 1/0/5 to VLAN 2, and specify its egress rule as tagged:

Switch#configure

Switch(config)#interface gigabitEthernet 1/0/5

Switch(config-if)#switchport general allowed vlan 2 tagged

Switch(config-if)#show interface switchport gigabitEthernet 1/0/5

Port Gi1/0/5:

PVID: 2

Acceptable frame type: All

Ingress Checking: Enable

Member in LAG: N/A

Link Type: General

Member in VLAN:

Vlan	Name	Egress-rule
----	----------	----------
1	System-VLAN	Untagged
2	RD	Tagged

Switch(config-if)#end

Switch#copy running-config startup-config

3 Configuration Example

3.1 Network Requirements

- Offices of Department A and Department B in the company are located in different places, and some computers in different offices connect to the same switch.
- It is required that computers can communicate with each other in the same department but not with computers in the other department.


3.2 Configuration Scheme

- Divide computers in Department A and Department B into two VLANs respectively so that computers can communicate with each other in the same department but not with computers in the other department.
- Terminal devices like computers usually do not support VLAN tags. Add untagged ports to the corresponding VLANs and specify the PVID.
- The intermediate link between two switches carries traffic from two VLANs simultaneously. Add the tagged ports to both VLANs.

3.3 Network Topology

The figure below shows the network topology. Host A1 and Host A2 are in Department A, while Host B1 and Host B2 are in Department B. Switch 1 and Switch 2 are located in two different places. Host A1 and Host B1 are connected to port 1/0/2 and port 1/0/3 on Switch 1 respectively, while Host A2 and Host B2 are connected to port 1/0/6 and port 1/0/7 on Switch 2 respectively. Port 1/0/4 on Switch 1 is connected to port 1/0/8 on Switch 2.

Figure 3-1 Network Topology

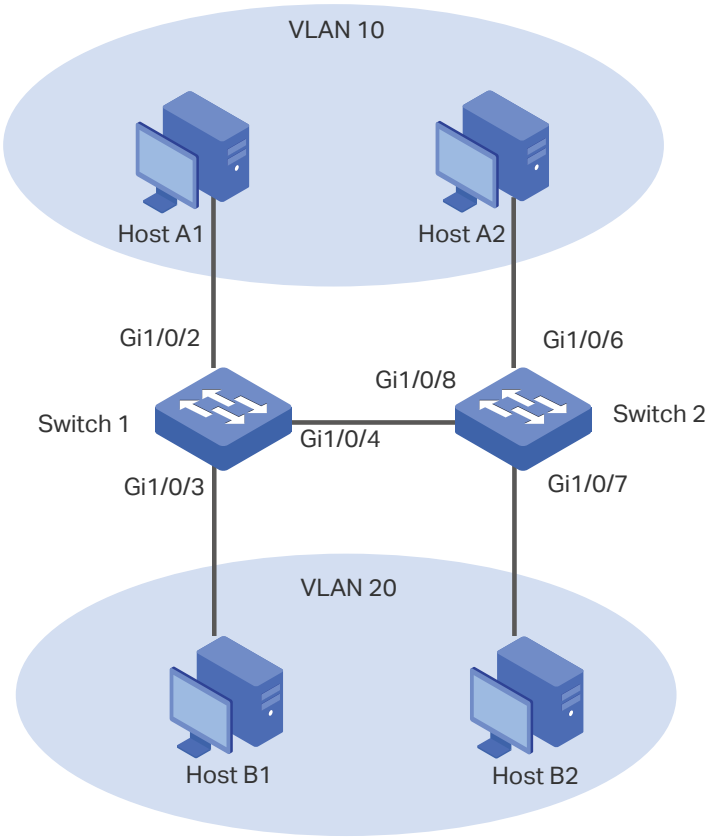


Demonstrated with T2600G-28TS, the following sections provide configuration procedure in two ways: using the GUI and using the CLI.

3.4 Using the GUI

The configurations of Switch 1 and Switch 2 are similar. The following introductions take Switch 1 as an example.


1) Choose the menu **L2 FEATURES > VLAN > 802.1Q VLAN > VLAN Config** and click Add to load the following page. Create VLAN 10 with the description of Department_A. Add port 1/0/2 as an untagged port and port 1/0/4 as a tagged port to VLAN 10. Click **Create**.

Figure 3-2 Creating VLAN 10 for Department A

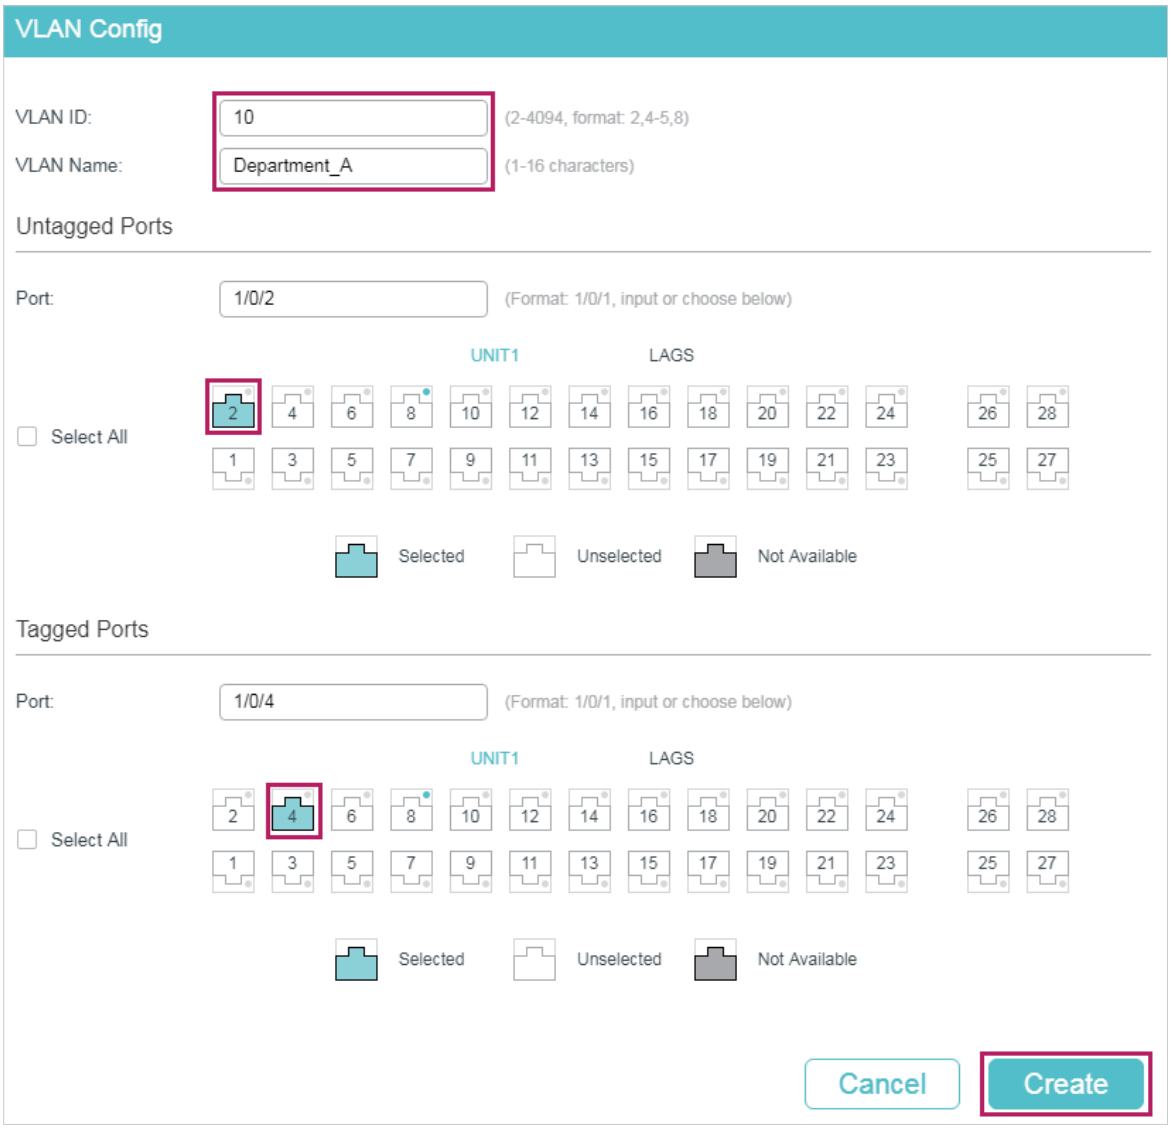


2) Choose the menu **L2 FEATURES > VLAN > 802.1Q VLAN > VLAN Config** and click Add to load the following page. Create VLAN 20 with the description of Department_B. Add port 1/0/3 as an untagged port and port 1/0/4 as a tagged port to VLAN 20. Click **Create**.

Figure 3-3 Creating VLAN 20 for Department B

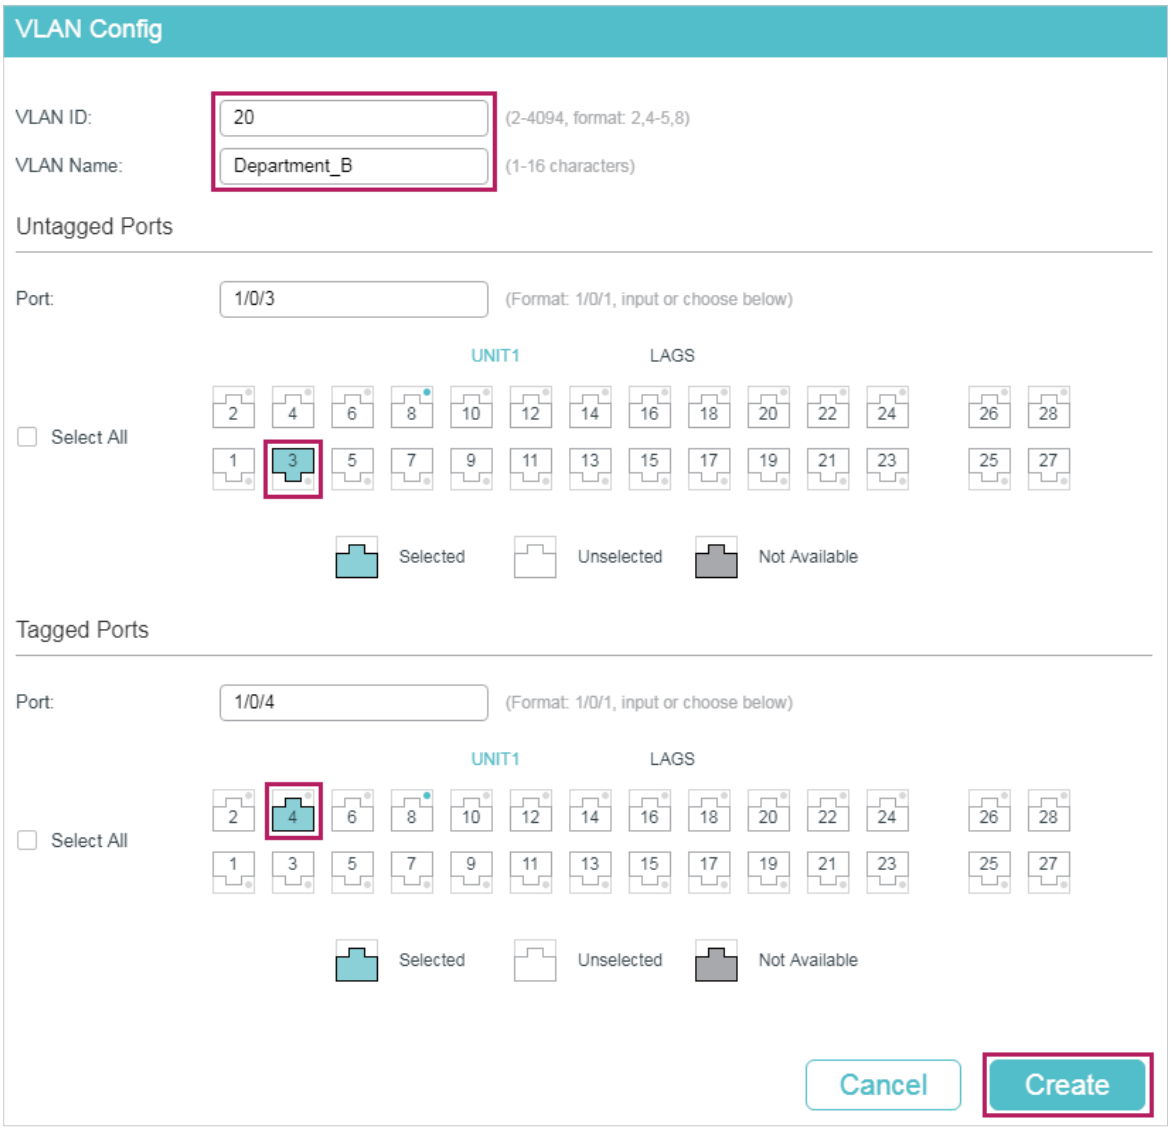

3) Choose the menu **L2 FEATURES > VLAN > 802.1Q VLAN > Port Config** to load the following page. Set the PVID of port 1/0/2 as 10 and click **Apply**. Set the PVID of port 1/0/3 as 20 and click **Apply**.

Figure 3-4 Specifying the PVID for the ports

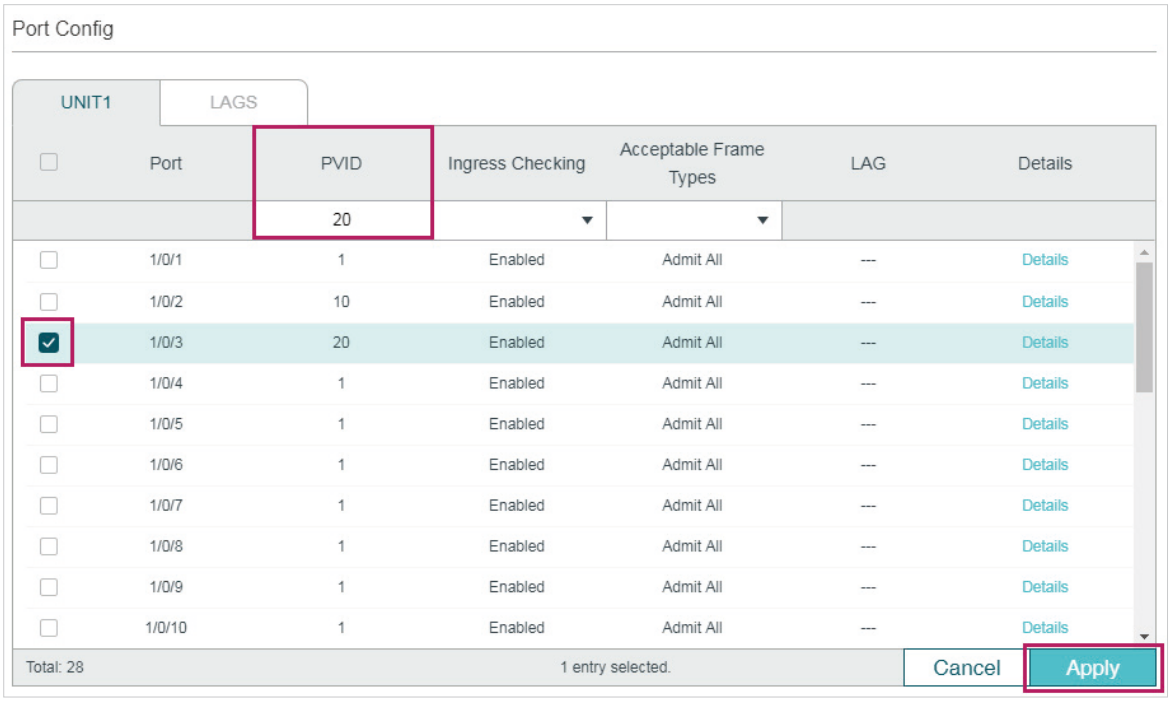

4) Click Save to save the settings.

3.5 Using the CLI

The configurations of Switch 1 and Switch 2 are similar. The following introductions take Switch 1 as an example.

1) Create VLAN 10 for Department A, and configure the description as Department-A. Similarly, create VLAN 20 for Department B, and configure the description as Department-B.

```
Switch_1#configure
Switch_1(config)#vlan 10
Switch_1(config-vlan)#name Department-A
Switch_1(config-vlan)#exit
Switch_1(config)#vlan 20
Switch_1(config-vlan)#name Department-B
Switch_1(config-vlan)#exit
```

2) Add untagged port 1/0/2 and tagged port 1/0/4 to VLAN 10. Add untagged port 1/0/3 and tagged port 1/0/4 to VLAN 20.

```
Switch_1(config)#interface gigabitEthernet 1/0/2
Switch_1(config-if)#switchport general allowed vlan 10 untagged
Switch_1(config-if)#exit
```

```
Switch_1(config)#interface gigabitEthernet 1/0/3
Switch_1(config-if)#switchport general allowed vlan 20 untagged
Switch_1(config-if)#exit
Switch_1(config)#interface gigabitEthernet 1/0/4
Switch_1(config-if)#switchport general allowed vlan 10 tagged
Switch_1(config-if)#switchport general allowed vlan 20 tagged
Switch_1(config-if)#exit
```

3) Set the PVID of port 1/0/2 as 10, and set the PVID of port 1/0/3 as 20.

```
Switch_1(config)#interface gigabitEthernet 1/0/2
Switch_1(config-if)#switchport pvid 10
Switch_1(config-if)#exit
Switch_1(config)#interface gigabitEthernet 1/0/3
Switch_1(config-if)#switchport pvid 20
Switch_1(config-if)#end
Switch_1#copy running-config startup-config
```

Verify the Configurations

Verify the VLAN configuration:

```
Switch_1#show vlan
VLAN   Name                Status     Ports
-----  ------------------- ---------  ---------------------------------------
1      System-VLAN         active     Gi1/0/1, Gi1/0/2, Gi1/0/3, Gi1/0/4,
                                      Gi1/0/5, Gi1/0/6, Gi1/0/7, Gi1/0/8,
                                      Gi1/0/9, Gi1/0/10, Gi1/0/11, Gi1/0/12,
                                      Gi1/0/13, Gi1/0/14, Gi1/0/15, Gi1/0/16,
                                      Gi1/0/17, Gi1/0/18, Gi1/0/19, Gi1/0/20,
                                      Gi1/0/21, Gi1/0/22, Gi1/0/23, Gi1/0/24,
                                      Gi1/0/25, Gi1/0/26, Gi1/0/27, Gi1/0/28
10     Department-A        active     Gi1/0/2, Gi1/0/4
20     Department-B        active     Gi1/0/3, Gi1/0/4
Primary  Secondary  Type          Ports
```

```
-------     ---------       ----------     ---------------------
```

Verify the VLAN configuration:

```
Switch_1(config)#show interface switchport
Port        LAG     Type        PVID    Acceptable frame type    Ingress Checking
-------     ---     ----        ----    ---------------------    ----------------
Gi1/0/1     N/A     General     1       All                      Enable
Gi1/0/2     N/A     General     10      All                      Enable
Gi1/0/3     N/A     General     20      All                      Enable
Gi1/0/4     N/A     General     1       All                      Enable
Gi1/0/5     N/A     General     1       All                      Enable
.....
```

4 Appendix: Default Parameters

Default settings of 802.1Q VLAN are listed in the following table.

Table 4-1 Default Settings of 802.1Q VLAN

Parameter	Default Setting
VLAN ID	1
PVID	1
Ingress Checking	Enabled
Acceptable Frame Types	Admit All

Part 8

Configuring MAC VLAN

CHAPTERS


1. Overview
2. MAC VLAN Configuration
3. Configuration Example
4. Appendix: Default Parameters

1 Overview

VLAN is generally divided by ports. It is a common way of division but isn't suitable for those networks that require frequent topology changes. With the popularity of mobile office, at different times a terminal device may access the network via different ports. For example, a terminal device that accessed the switch via port 1 last time may change to port 2 this time. If port 1 and port 2 belong to different VLANs, the user has to re-configure the switch to access the original VLAN. Using MAC VLAN can free the user from such a problem. It divides VLANs based on the MAC addresses of terminal devices. In this way, terminal devices always belong to their MAC VLANs even when their access ports change.

The figure below shows a common application scenario of MAC VLAN.

Figure 1-1 Common Application Scenario of MAC VLAN

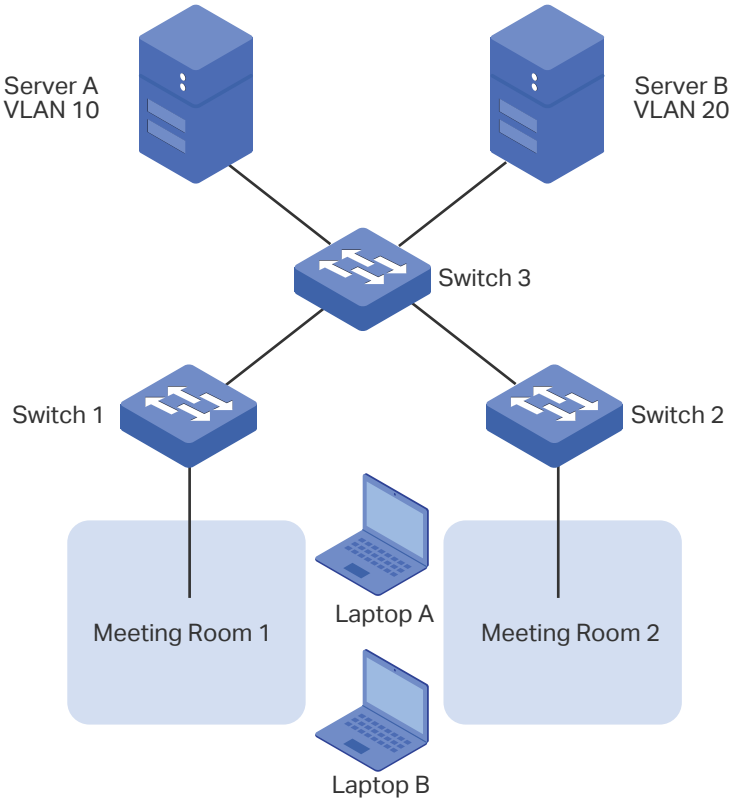

Two departments share all the meeting rooms in the company, but use different servers and laptops. Department A uses Server A and Laptop A, while Department B uses Server B and Laptop B. Server A is in VLAN 10 while Server B is in VLAN 20. It is required that Laptop A can only access Server A and Laptop B can only access Server B, no matter which meeting room the laptops are being used in. To meet this requirement, simply bind the MAC addresses of the laptops to the corresponding VLANs respectively. In this way, the MAC address determines the VLAN each laptop joins. Each laptop can access only the server in the VLAN it joins.

2 MAC VLAN Configuration

To complete MAC VLAN configuration, follow these steps:

1) Configure 802.1Q VLAN.
2) Bind the MAC address to the VLAN.
3) Enable MAC VLAN for the port.

Configuration Guidelines

When a port in a MAC VLAN receives an untagged data packet, the switch will first check whether the source MAC address of the data packet has been bound to the MAC VLAN. If yes, the switch will insert the corresponding tag to the data packet and forward it within the VLAN. If no, the switch will continue to match the data packet with the matching rules of other VLANs (such as the protocol VLAN). If there is a match, the switch will forward the data packet. Otherwise, the switch will process the data packet according to the processing rule of the 802.1 Q VLAN. When the port receives a tagged data packet, the switch will directly process the data packet according to the processing rule of the 802.1 Q VLAN.

2.1 Using the GUI


2.1.1 Configuring 802.1Q VLAN

Before configuring MAC VLAN, create an 802.1Q VLAN and set the port type according to network requirements. For details, refer to *Configuring 802.1Q VLAN.*

2.1.2 Binding the MAC Address to the VLAN

Choose the menu **L2 FEATURES > VLAN > MAC VLAN** and click Add to load the following page.

Figure 2-1 Creating MAC VLAN

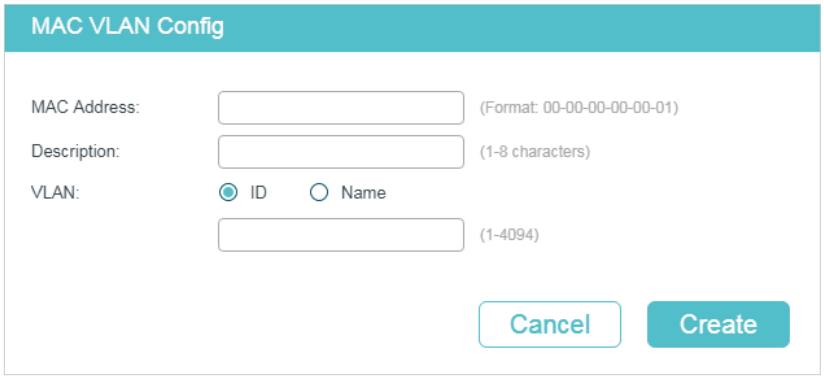

Follow these steps to bind the MAC address to the 802.1Q VLAN:

1) Enter the MAC address of the device, give it a description, and enter the VLAN ID to bind it to the VLAN.

MAC Address	Enter the MAC address of the device in the format of 00-00-00-00-00-01.
Description	Give a MAC address description for identification with up to 8 characters.
VLAN ID/Name	Enter the ID number or name of the 802.1Q VLAN that will be bound to the MAC VLAN..

2) Click **Create**.

Note:


One MAC address can be bound to only one VLAN.

2.1.3 Enabling MAC VLAN for the Port

By default, MAC VLAN is disabled on all ports. You need to enable MAC VLAN for your desired ports manually.

Choose the menu **L2 FEATURES > VLAN > MAC VLAN** to load the following page.

Figure 2-2 Enabling MAC VLAN for the Port

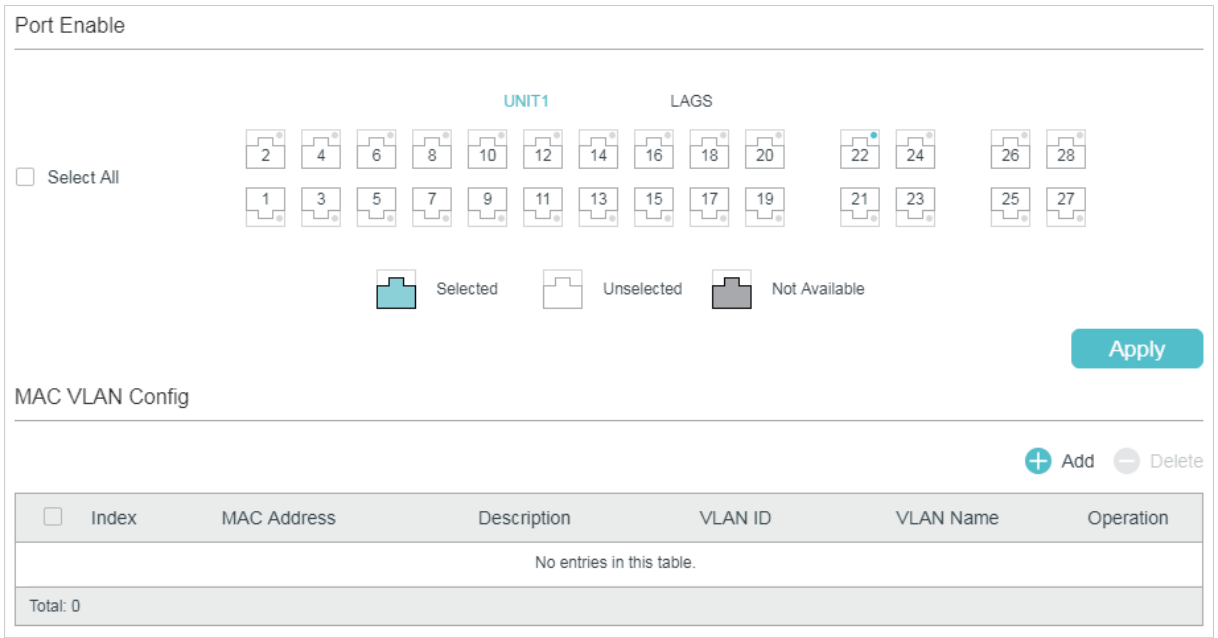

In the **Port Enable** section, select the desired ports to enable MAC VLAN, and click **Apply**.

Note:

The member port of an LAG (Link Aggregation Group) follows the configuration of the LAG and not its own. The configurations of the port can take effect only after it leaves the LAG.

2.2 Using the CLI

2.2.1 Configuring 802.1Q VLAN

Before configuring MAC VLAN, create an 802.1Q VLAN and set the port type according to network requirements. For details, refer to *Configuring 802.1Q VLAN.*

Binding the MAC Address to the VLAN

Follow these steps to bind the MAC address to the VLAN:

Step 1	**configure** Enter global configuration mode.
Step 2	**mac-vlan mac-address** *mac-addr* **vlan** *vlan-id* **[description** *descript***]** Bind the MAC address to the VLAN. *mac-addr*: Specify the MAC address of the device in the format of xx:xx:xx:xx:xx:xx. *vlan-id*: Enter the ID number of the 802.1Q VLAN that will be bound to the MAC VLAN. *descript*: Specify the MAC address description for identification, with up to 8 characters.
Step 3	**show mac-vlan { all | mac-address** *mac-addr* **| vlan** *vlan-id* **}** Verify the configuration of MAC VLAN. *vid*: Specify the MAC VLAN to be displayed.
Step 4	**end** Return to privileged EXEC mode.
Step 5	**copy running-config startup-config** Save the settings in the configuration file.

The following example shows how to bind the MAC address 00:19:56:8A:4C:71 to VLAN 10, with the address description as Dept.A.

Switch#configure

Switch(config)#mac-vlan mac-address 00:19:56:8a:4c:71 **vlan** 10 **description** Dept.A

Switch(config)#show mac-vlan vlan 10

MAC-Addr	Name	VLAN-ID
00:19:56:8A:4C:71	Dept.A	10

Switch(config)#end

Switch#copy running-config startup-config

2.2.2 Enabling MAC VLAN for the Port

Follow these steps to enable MAC VLAN for the port:

Step 1	**configure** Enter global configuration mode.
Step 2	**interface {fastEthernet** *port* **| range fastEthernet** *port-list* **| gigabitEthernet** *port* **| range gigabitEthernet** *port-list* **| ten-gigabitEthernet** *port* **| range ten-gigabitEthernet** *port-list* **| port-channel** *port-channel-id* **| range port-channel** *port-channel-list***}** Enter interface configuration mode.
Step 3	**mac-vlan** Enable MAC VLAN for the port.
Step 4	**show mac-vlan interface** Verify the configuration of MAC VLAN on each interface.
Step 5	**end** Return to privileged EXEC mode.
Step 6	**copy running-config startup-config** Save the settings in the configuration file.

The following example shows how to enable MAC VLAN for port 1/0/1.

Switch#configure

Switch(config)#interface gigabitEthernet 1/0/1

Switch(config-if)#mac-vlan

Switch(config-if)#show mac-vlan interface

Port STATUS

------- -----------

Gi1/0/1 Enable

Gi1/0/2 Disable

...

Switch(config-if)#end


Switch#copy running-config startup-config

3 Configuration Example

3.1 Network Requirements

Two departments share all the meeting rooms in the company, but use different servers and laptops. Department A uses Server A and Laptop A, while Department B uses Server B and Laptop B. Server A is in VLAN 10 while Server B is in VLAN 20. It is required that Laptop A can only access Server A and Laptop B can only access Server B, no matter which meeting room the laptops are being used in. The figure below shows the network topology.

Figure 3-1 Network Topology

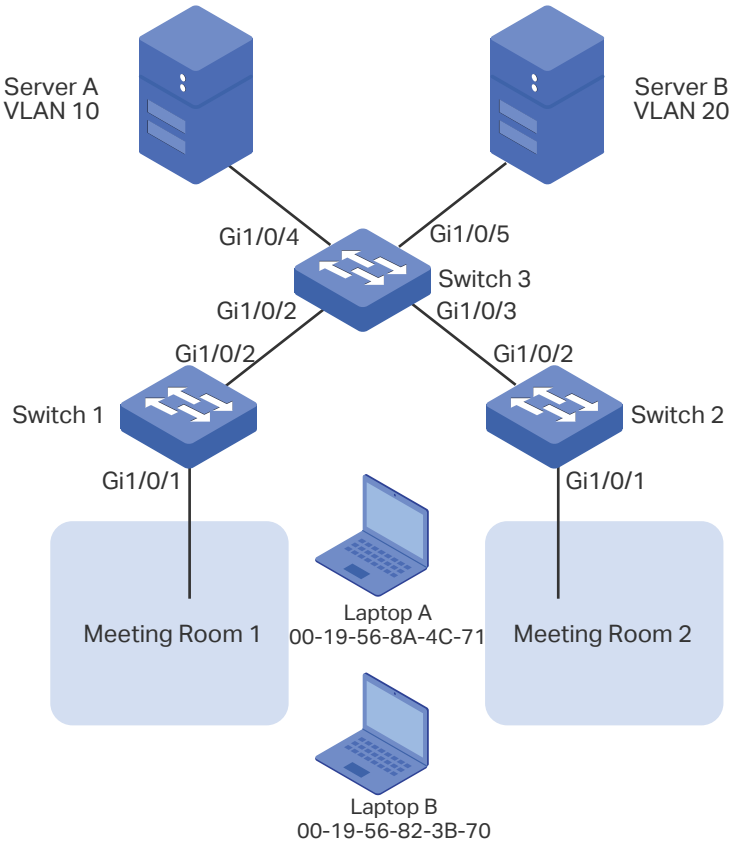

3.2 Configuration Scheme

You can configure MAC VLAN to meet this requirement. On Switch 1 and Switch 2, bind the MAC addresses of the laptops to the corresponding VLANs respectively. In this way, each laptop can access only the server in the VLAN it joins, no matter which meeting room the laptops are being used in. The overview of the configuration is as follows:

1) Create VLAN 10 and VLAN 20 on each of the three switches and add the ports to the VLANs based on the network topology. For the ports connecting to the laptops, set the

egress rule as Untagged; for the ports connecting to other switches, set the egress rule as Tagged.

2) On Switch 1 and Switch 2, bind the MAC addresses of the laptops to their corresponding VLANs, and enable MAC VLAN for the ports.

Demonstrated with T2600G-28TS, the following sections provide configuration procedure in two ways: using the GUI and using the CLI.


3.3 Using the GUI

- Configurations for Switch 1 and Switch 2

The configurations of Switch 1 and Switch 2 are similar. The following introductions take Switch 1 as an example.


1) Choose the menu **L2 FEATURES > VLAN > 802.1Q VLAN > VLAN Config** and click Add to load the following page. Create VLAN 10, and add untagged port 1/0/1 and tagged port 1/0/2 to VLAN 10. Click **Create**.

Figure 3-2 Creating VLAN 10

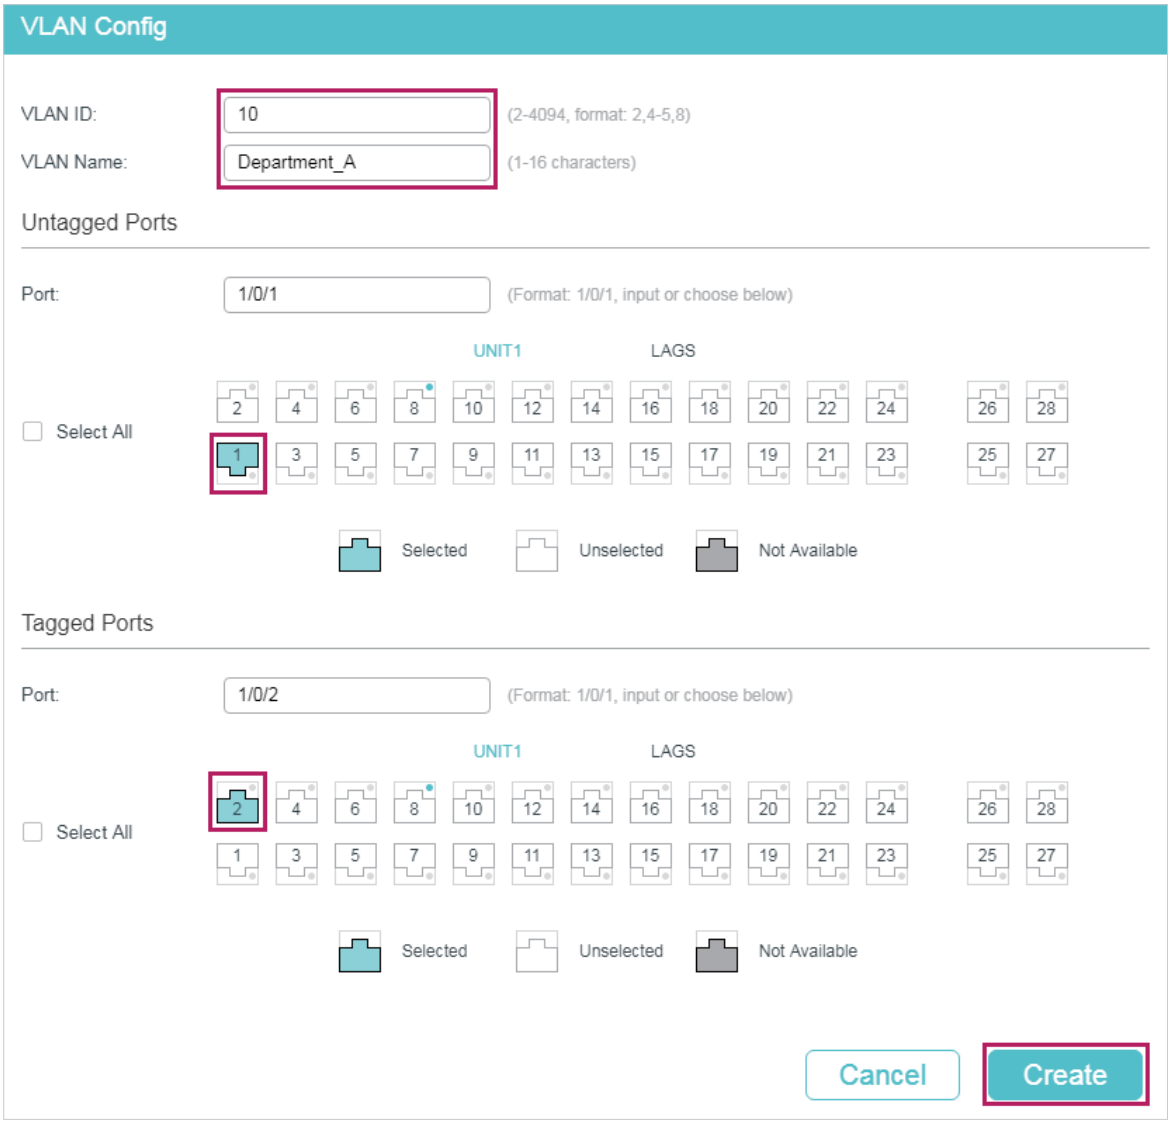


2) Choose the menu **L2 FEATURES > VLAN > 802.1Q VLAN > VLAN Config** and click Add to load the following page. Create VLAN 20, and add untagged port 1/0/1 and tagged port 1/0/2 to VLAN 20. Click **Create**.

Figure 3-3 Creating VLAN 20

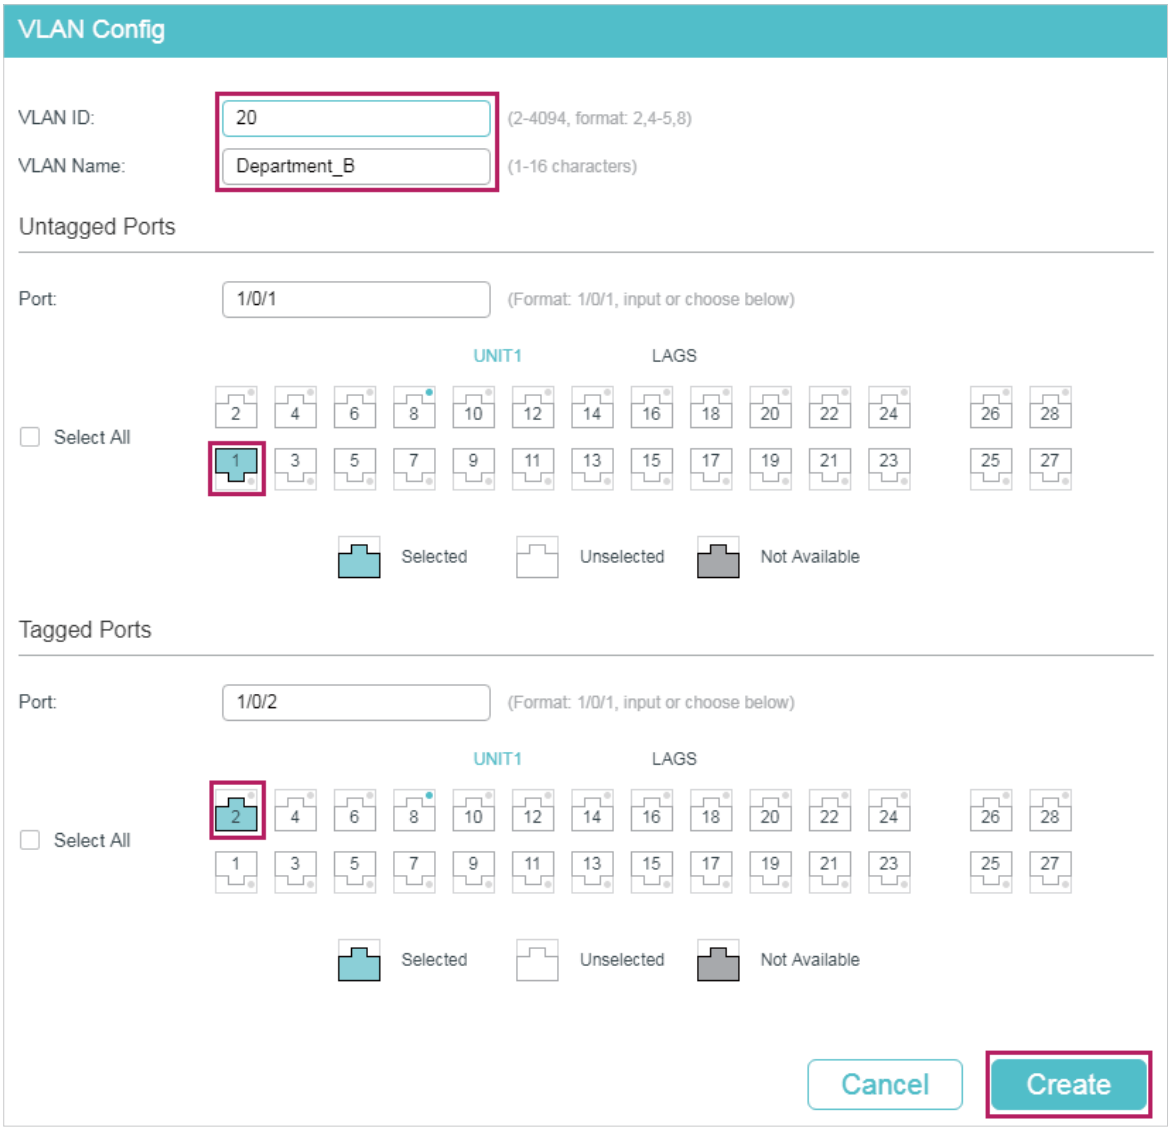


3) Choose the menu **L2 FEATURES > VLAN > MAC VLAN** and click Add to load the following page. Specify the corresponding parameters and click **Create** to bind the MAC address of Laptop A to VLAN 10 and bind the MAC address of Laptop B to VLAN 20.

Figure 3-4 Creating MAC VLAN

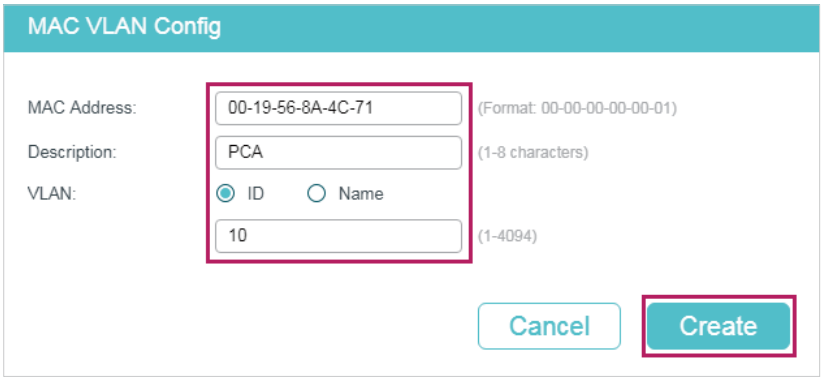

4) Choose the menu **L2 FEATURES > VLAN > MAC VLAN** to load the following page. In the **Port Enable** section select port 1/0/1 and click **Apply** to enable MAC VLAN.

Figure 3-5 Enabing MAC VLAN for the Port

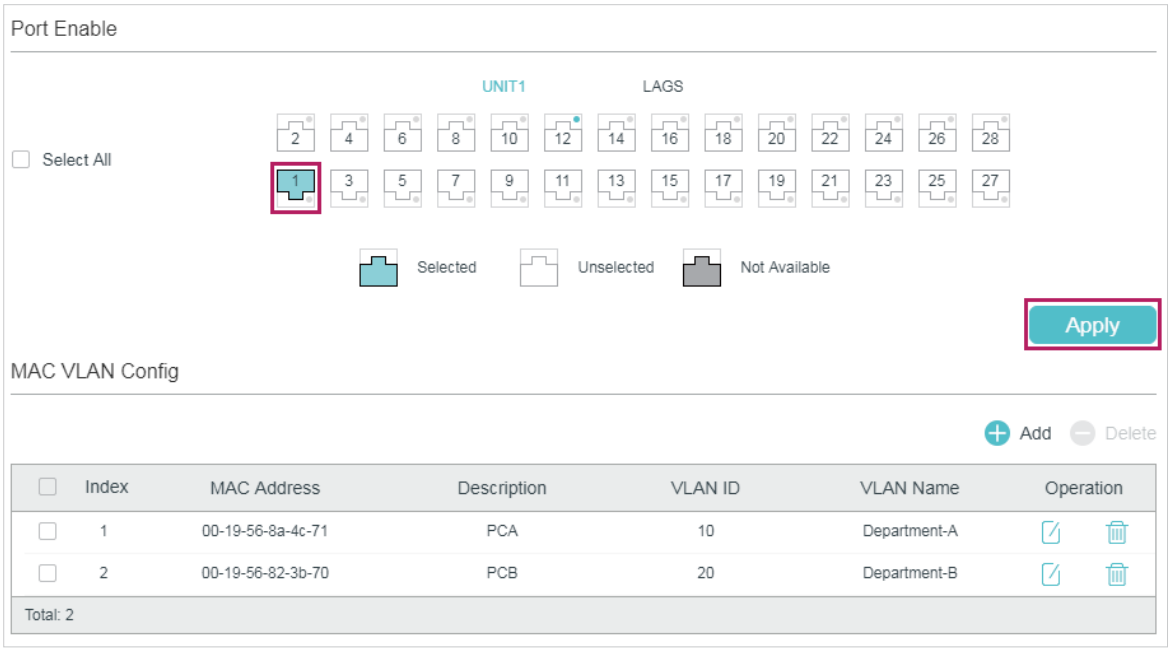


5) Click Save to save the settings.

Configurations for Switch 3


1) Choose the menu **L2 FEATURES > VLAN > 802.1Q VLAN > VLAN Config** and click Add to load the following page. Create VLAN 10, and add untagged port 1/0/4 and tagged ports 1/0/2-3 to VLAN 10. Click **Create**.

Figure 3-6 Creating VLAN 10

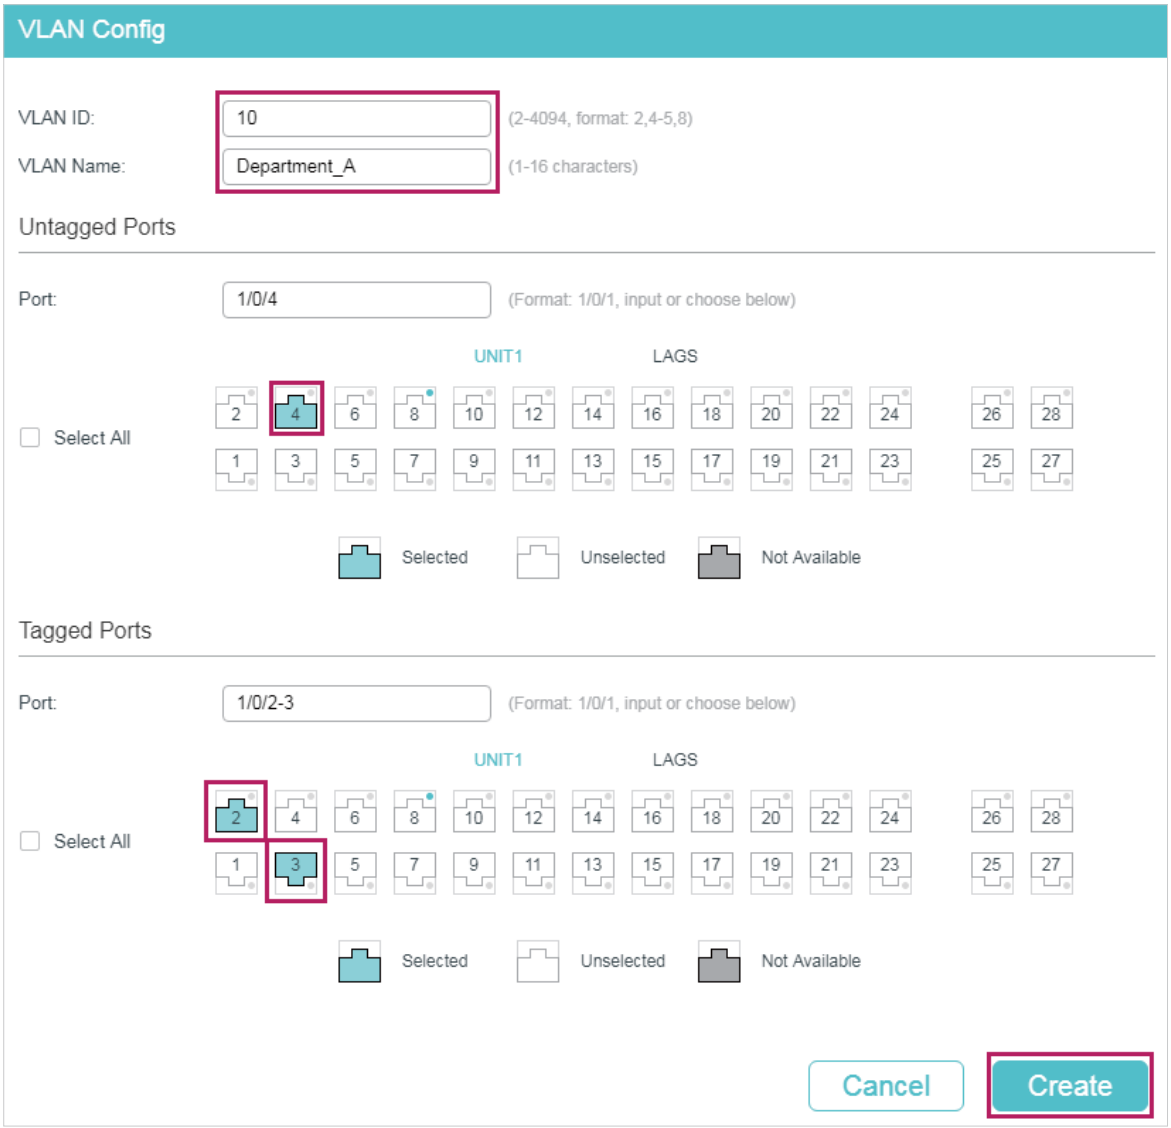

2) Click **Create** to load the following page. Create VLAN 20, and add untagged port 1/0/5 and tagged ports 1/0/2-3 to VLAN 20. Click **Create**.

Figure 3-7 Creating VLAN 20

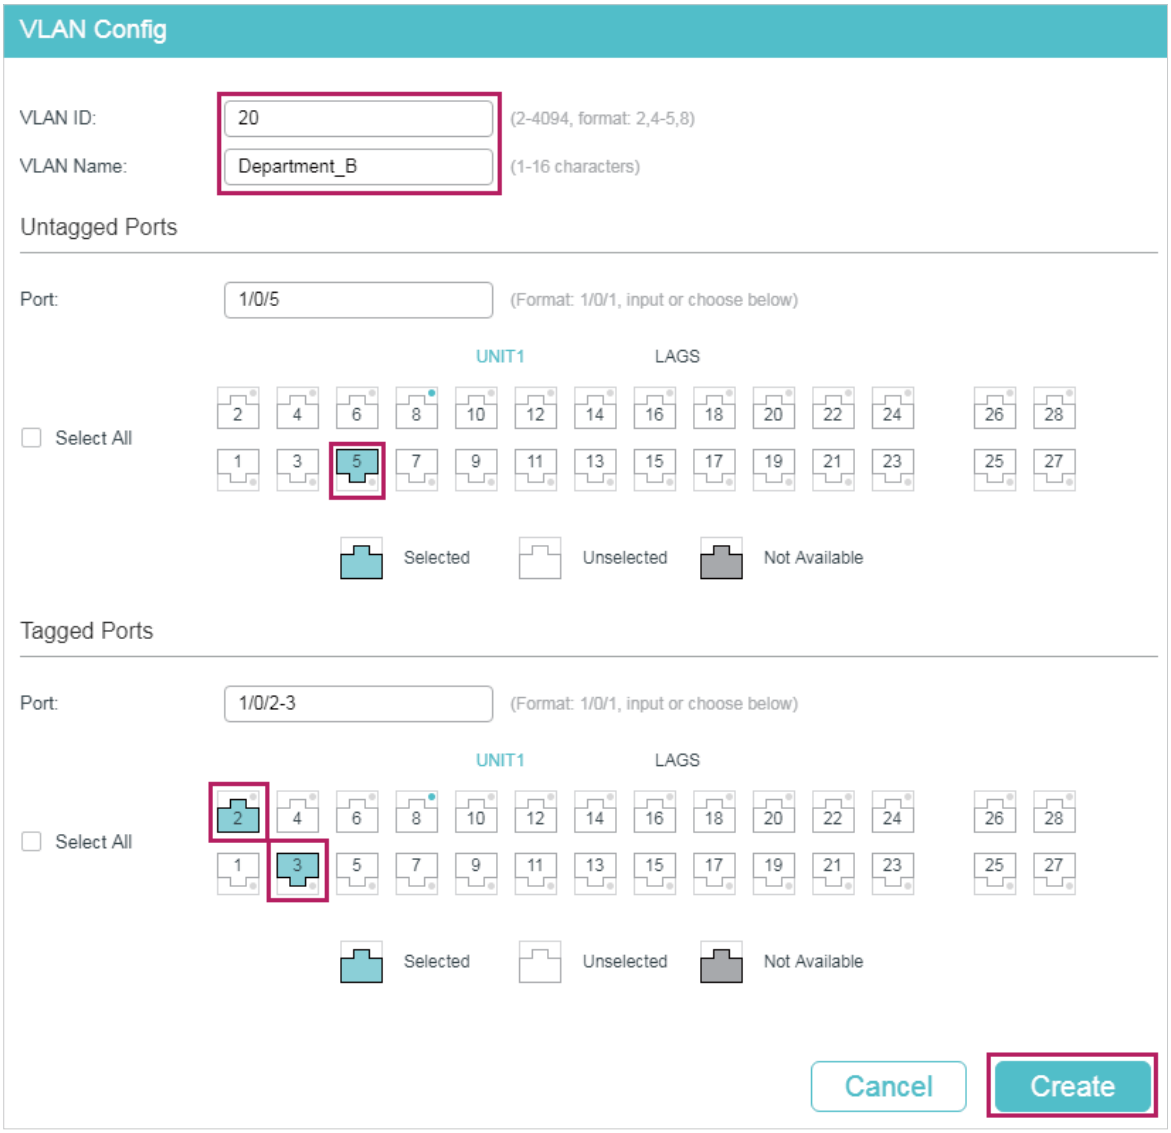

3) Click Save to save the settings.

3.4 Using the CLI

- Configurations for Switch 1 and Switch 2

The configurations of Switch 1 and Switch 2 are the same. The following introductions take Switch 1 as an example.

1) Create VLAN 10 for Department A and create VLAN 20 for Department B.

Switch_1#configure

Switch_1(config)#vlan 10

Switch_1(config-vlan)#name deptA

Switch_1(config-vlan)#exit

Switch_1(config)#vlan 20

Switch_1(config-vlan)#name deptB

Switch_1(config-vlan)#exit

2) Add tagged port 1/0/2 and untagged port 1/0/1 to both VLAN 10 and VLAN 20. Then enable MAC VLAN on port 1/0/1.

Switch_1(config)#interface gigabitEthernet 1/0/2

Switch_1(config-if)#switchport general allowed vlan 10,20 tagged

Switch_1(config-if)#exit

Switch_1(config)#interface gigabitEthernet 1/0/1

Switch_1(config-if)#switchport general allowed vlan 10,20 untagged

Switch_1(config-if)#mac-vlan

Switch_1(config-if)#exit

3) Bind the MAC address of Laptop A to VLAN 10 and bind the MAC address of Laptop B to VLAN 20.

Switch_1(config)#mac-vlan mac-address 00:19:56:8A:4C:71 vlan 10 description PCA

Switch_1(config)#mac-vlan mac-address 00:19:56:82:3B:70 vlan 20 description PCB

Switch_1(config)#end

Switch_1#copy running-config startup-config

- Configurations for Switch 3

1) Create VLAN 10 for Department A and create VLAN 20 for Department B.

Switch_3#configure

Switch_3(config)#vlan 10

Switch_3(config-vlan)#name deptA

Switch_3(config-vlan)#exit

Switch_3(config)#vlan 20

Switch_3(config-vlan)#name deptB

Switch_3(config-vlan)#exit

2) Add tagged port 1/0/2 and port 1/0/3 to both VLAN 10 and VLAN 20.

Switch_3(config)#interface gigabitEthernet 1/0/2

Switch_3(config-if)#switchport general allowed vlan 10,20 tagged

Switch_3(config-if)#exit

```
Switch_3(config)#interface gigabitEthernet 1/0/3
Switch_3(config-if)#switchport general allowed vlan 10,20 tagged
Switch_3(config-if)#exit
```

3) Add untagged port 1/0/4 to VLAN 10 and untagged port 1/0/5 to VLAN 20.

```
Switch_3(config)#interface gigabitEthernet 1/0/4
Switch_3(config-if)#switchport general allowed vlan 10 untagged
Switch_3(config-if)#exit
Switch_3(config)#interface gigabitEthernet 1/0/5
Switch_3(config-if)#switchport general allowed vlan 20 untagged
Switch_3(config-if)#end
Switch_3#copy running-config startup-config
```

Verify the Configurations

- Switch 1

```
Switch_1#show mac-vlan all
MAC Add              Name              VLAN-ID
-------------------- ----------------- ----------
00:19:56:8A:4C:71    PCA               10
00:19:56:82:3B:70    PCB               20
------------------------------------------------------------------------
```

- Switch 2

```
Switch_2#show mac-vlan all
MAC Address          Description       VLAN
-------------------- ----------------- -----------
00:19:56:8A:4C:71    PCA               10
00:19:56:82:3B:70    PCB               20
------------------------------------------------------------------------
```

- Switch 3

  Switch_3#show vlan

VLAN	Name	Status	Ports
1	System-VLAN	active	Gi1/0/1, Gi1/0/2, Gi1/0/3, Gi1/0/4, Gi1/0/5, Gi1/0/6, Gi1/0/7, Gi1/0/8 ...
10	DeptA	active	Gi1/0/2, Gi1/0/3, Gi1/0/4
20	DeptB	active	Gi1/0/2, Gi1/0/3, Gi1/0/5

4 Appendix: Default Parameters

Default settings of MAC VLAN are listed in the following table.

Table 4-1 Default Settings of MAC VLAN

Parameter	Default Setting
MAC Address	None
Description	None
VLAN ID	None
Port Enable	Disabled

Part 9

Configuring Protocol VLAN

CHAPTERS


1. Overview
2. Protocol VLAN Configuration
3. Configuration Example
4. Appendix: Default Parameters

1 Overview

Protocol VLAN is a technology that divides VLANs based on the network layer protocol. With the protocol VLAN rule configured on the basis of the existing 802.1Q VLAN, the switch can analyze specific fields of received packets, encapsulate the packets in specific formats, and forward the packets with different protocols to the corresponding VLANs. Since different applications and services use different protocols, network administrators can use protocol VLAN to manage the network based on specific applications and services.

The figure below shows a common application scenario of protocol VLAN. With protocol VLAN configured, Switch 2 can forward IPv4 and IPv6 packets from different VLANs to the IPv4 and IPv6 networks respectively.

Figure 1-1 Common Application Scenario of Protocol VLAN

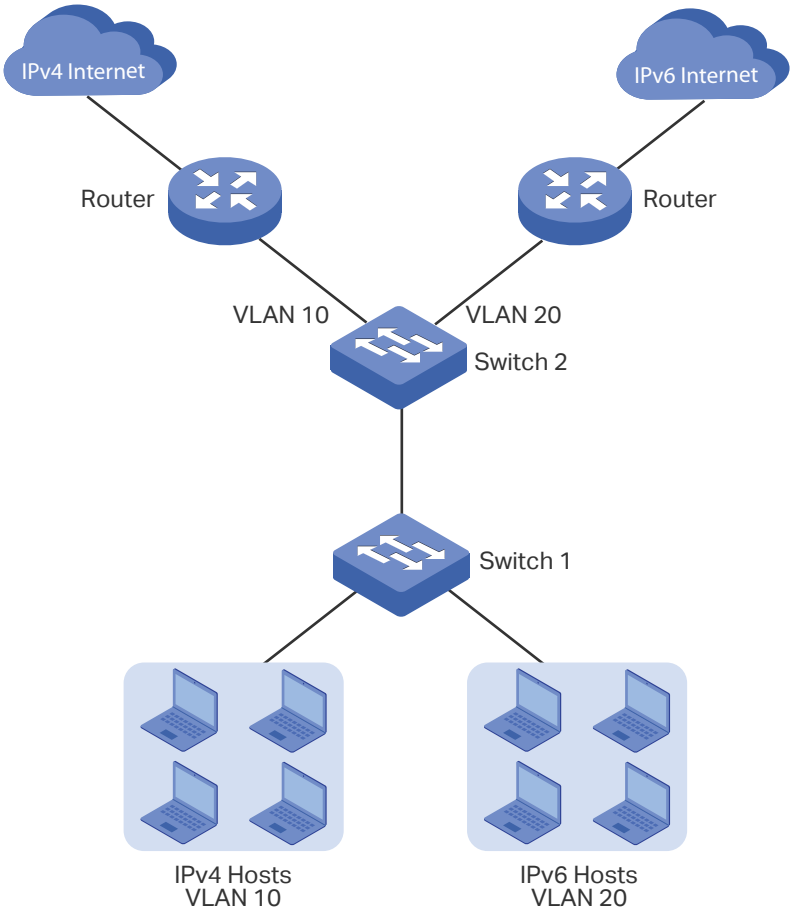

2 Protocol VLAN Configuration

To complete protocol VLAN configuration, follow these steps:

1) Configure 802.1Q VLAN.
2) Create protocol template.
3) Configure Protocol VLAN.

Configuration Guidelines

- You can use the IP, ARP, RARP, and other protocol templates provided by TP-Link switches, or create new protocol templates.

- In a protocol VLAN, when a port receives an untagged data packet, the switch will first search for the protocol VLAN matching the protocol type value of the packet. (If MAC VLAN is also configured, the switch will first process MAC VLAN.) If there is a match, the switch will insert the corresponding VLAN tag to the data packet and forward it within the VLAN. Otherwise, the switch will forward the data packet to the default VLAN based on the PVID (Port VLAN ID) of the receiving port. When the port receives a tagged data packet, the switch will directly process the data packet according to the processing rule of the 802.1 Q VLAN.

2.1 Using the GUI


2.1.1 Configuring 802.1Q VLAN

Before configuring protocol VLAN, create an 802.1Q VLAN and set the port type according to network requirements. For details, refer to *Configuring 802.1Q VLAN.*

2.1.2 Creating Protocol Template

Choose the menu **L2 FEATURES > VLAN > Protocol VLAN > Protocol Template** to load the following page.


Figure 2-1 Check the Protocol Template

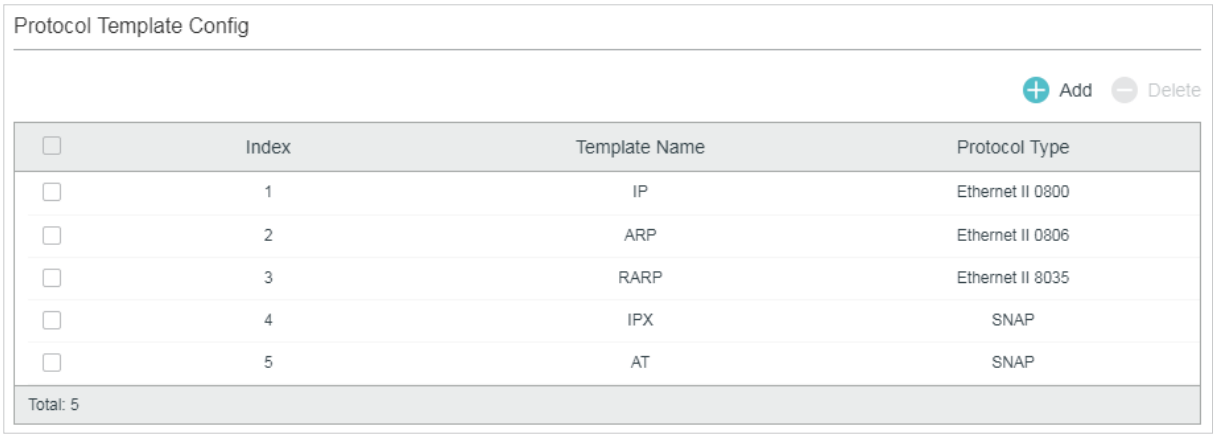

Follow these steps to create a protocol template:

1) Check whether your desired template already exists in the **Protocol Template Config** section. If not, click Add to create a new template.

Figure 2-2 Creating a Protocol Template

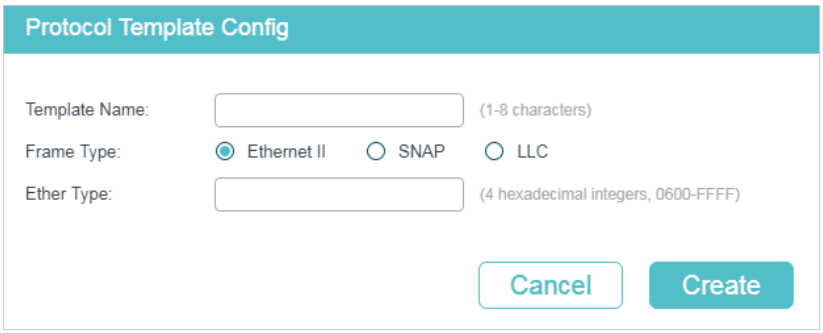

Template Name	Give a protocol name to identify the protocol template.
Frame Type	Select the frame type of the new protocol template. **Ethernet II:** A common Ethernet frame format. Select to specify the Frame Type by entering the Ether Type. **SNAP:** An Ethernet 802.3 frame format based on IEEE 802.3 and IEEE 802.2 SNAP. Select to specify the Frame Type by entering the Ether Type. **LLC:** An Ethernet 802.3 frame format based on IEEE 802.3 and IEEE 802.2 LLC. Select to specify the Frame Type by entering the DSAP and SSAP.
Ether Type	Enter the Ethernet protocol type value for the protocol template. It is available when **Ethernet II** and **SNAP** is selected. It is the Ether Type field in the frame and is used to identify the data type of the frame.

DSAP	Enter the DSAP value for the protocol template. It is available when **LLC** is selected. It is the DSAP field in the frame and is used to identify the data type of the frame.
SSAP	Enter the SSAP value for the protocol template. It is available when **LLC** is selected. It is the SSAP field in the frame and is used to identify the data type of the frame.

2) Click **Create**.


Note:

A protocol template that is bound to a VLAN cannot be deleted.

2.1.3 Configuring Protocol VLAN

Choose the menu **L2 FEATURES > VLAN > Protocol VLAN > Protocol VLAN Group** and click Add to load the following page.

Figure 2-3 Configure the Protocol VLAN Group

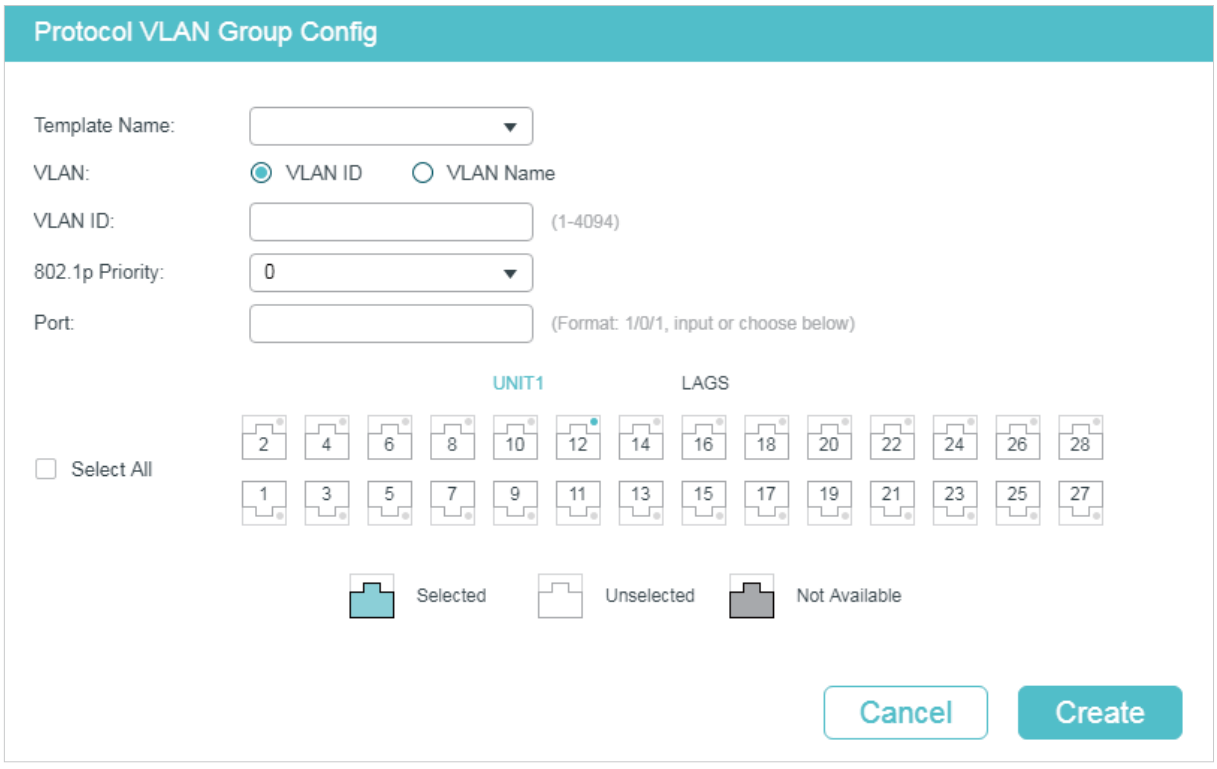

Follow these steps to configure the protocol group:

1) In the **Protocol Group Config** section, specify the following parameters.

Template Name	Select the previously defined protocol template.
VLAN ID/Name	Enter the ID number or name of the 802.1Q VLAN that will be bound to the Protocol VLAN..

802.1p Priority	Specify the 802.1p priority for the packets that belong to the protocol VLAN. The switch will determine the forwarding sequence according this value. The packets with larger value of 802.1p priority have the higher priority.

2) Select the desired ports. Click **Create**.

Note:

The member port of an LAG (Link Aggregation Group) follows the configuration of the LAG and not its own. The configurations of the port can take effect only after it leaves the LAG.

2.2 Using the CLI

2.2.1 Configuring 802.1Q VLAN

Before configuring protocol VLAN, create an 802.1Q VLAN and set the port type according to network requirements. For details, refer to *Configuring 802.1Q VLAN.*

2.2.2 Creating a Protocol Template

Follow these steps to create a protocol template:

Step 1	**configure** Enter global configuration mode.
Step 2	**protocol-vlan template name** *protocol-name* **frame { ether_2 ether-type** *type* **| snap ether-type** *type* **| llc dsap** *dsap_type* **ssap** *ssap_type* **}** Create a protocol template. *protocol-name:* Specify the protocol name with 1 to 8 characters. *type*: Enter4 hexadecimal numbers as the Ethernet protocol type for the protocol template. It is the Ether Type field in the frame and is used to identify the data type of the frame. *dsap_type*: Enter 2 hexadecimal numbers as the DSAP value for the protocol template. It is the DSAP field in the frame and is used to identify the data type of the frame. *ssap_type*: Enter 2 hexadecimal numbers as the SSAP value for the protocol template. It is the SSAP field in the frame and is used to identify the data type of the frame.
Step 3	**show protocol-vlan template** Verify the protocol templates.
Step 4	**end** Return to Privileged EXEC Mode.
Step 5	**copy running-config startup-config** Save the settings in the configuration file.

The following example shows how to create an IPv6 protocol template:

Switch#configure

Switch(config)#protocol-vlan template name IPv6 **frame ether_2 ether-type** 86dd

Switch(config)#show protocol-vlan template

Index	Protocol Name	Protocol Type
1	IP	EthernetII ether-type 0800
2	ARP	EthernetII ether-type 0806
3	RARP	EthernetII ether-type 8035
4	IPX	SNAP ether-type 8137
5	AT	SNAP ether-type 809B
6	IPv6	EthernetII ether-type 86DD

Switch(config)#end

Switch#copy running-config startup-config

2.2.3 Configuring Protocol VLAN

Follow these steps to configure protocol VLAN:

Step 1	**configure** Enter global configuration mode.
Step 2	**show protocol-vlan template** Check the index of each protocol template.
Step 3	**protocol-vlan vlan** *vid* **priority** *priority* **template** *index* Bind the protocol template to the VLAN. *vid* : Enter the ID number of the 802.1Q VLAN that will be bound to the Protocol VLAN. *priority* : Specify the 802.1p priority for the packets that belong to the protocol VLAN. The switch will determine the forwarding sequence according this value. The packets with larger value of 802.1p priority have the higher priority. *index* : Specify the protocol template index.
Step 4	**show protocol-vlan vlan** Check the protocol VLAN index (entry-id) of each protocol group.

Step 5	**interface {fastEthernet** *port* **| range fastEthernet** *port-list* **| gigabitEthernet** *port* **| range gigabitEthernet** *port-list* **| ten-gigabitEthernet** *port* **| range ten-gigabitEthernet** *port-list* **| port-channel** *port-channel-id* **| range port-channel** *port-channel-list***}** Enter interface configuration mode.
Step 6	**protocol-vlan group** *entry-id* Add the specified port to the protocol group. *entry-id:* Protocol VLAN index.
Step 7	**end** Return to Privileged EXEC Mode.
Step 8	**copy running-config startup-config** Save the settings in the configuration file.

The following example shows how to bind the IPv6 protocol template to VLAN 10 and add port 1/0/2 to protocol VLAN:

Switch#configure

Switch(config)#show protocol-vlan template

Index	Protocol Name	Protocol Type	
1	IP	EthernetII	ether-type 0800
2	ARP	EthernetII	ether-type 0806
3	RARP	EthernetII	ether-type 8035
4	IPX	SNAP	ether-type 8137
5	AT	SNAP	ether-type 809B
6	IPv6	EthernetII	ether-type 86DD

Switch(config)#protocol-vlan vlan 10 **priority** 5 **template** 6

Switch(config)#show protocol-vlan vlan

Index	Protocol-Name	VID	Priority	Member
1	IPv6	10	0	

Switch(config)#interface gigabitEthernet 1/0/2

Switch(config-if)#protocol-vlan group 1

Switch(config-if)#show protocol-vlan vlan

```
Index   Protocol-Name    VID     Priority   Member
------  ---------------  ------  --------   ------------
1       IPv6             10      5          Gi1/0/2
```

Switch(config-if)#end

Switch#copy running-config startup-config


3 Configuration Example

3.1 Network Requirements

A company uses both IPv4 and IPv6 hosts, and these hosts access the IPv4 network and IPv6 network respectively via different routers. It is required that IPv4 packets are forwarded to the IPv4 network, IPv6 packets are forwarded to the IPv6 network, and other packets are dropped.

The figure below shows the network topology. The IPv4 host belongs to VLAN 10, the IPv6 host belongs to VLAN 20, and these hosts access the network via Switch 1. Switch 2 is connected to two routers to access the IPv4 network and IPv6 network respectively. The routers belong to VLAN 10 and VLAN 20 respectively.

Figure 3-1 Network Topology

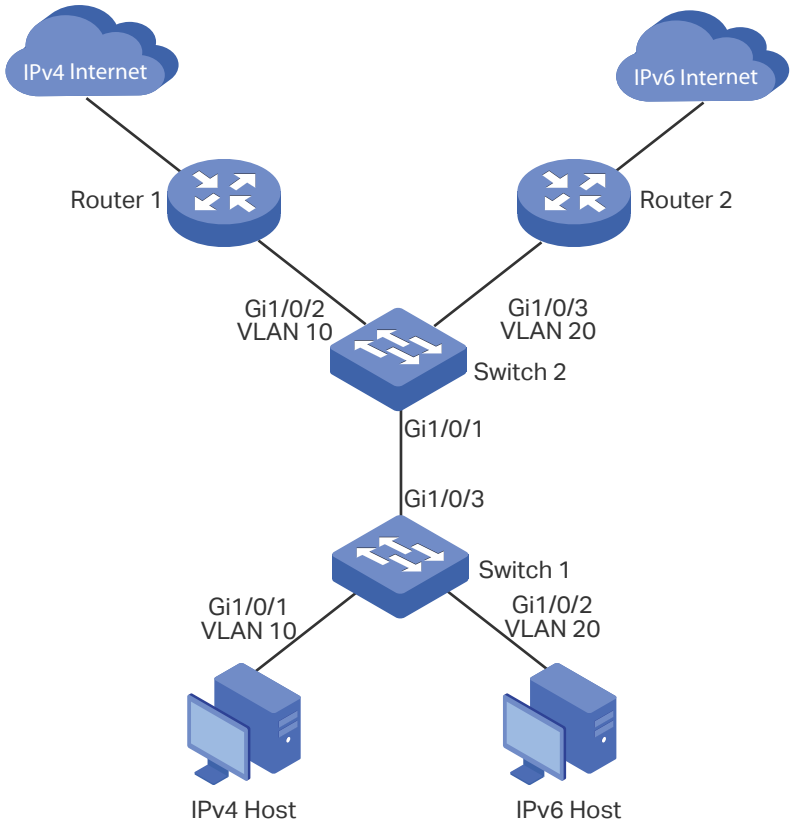

3.2 Configuration Scheme

You can configure protocol VLAN on port 1/0/1 of Switch 2 to meet this requirement. When this port receives packets, Switch 2 will forward them to the corresponding VLANs according to their protocol types. The overview of the configuration on Switch 2 is as follows:

1) Create VLAN 10 and VLAN 20 and add each port to the corresponding VLAN.
2) Use the IPv4 protocol template provided by the switch, and create the IPv6 protocol template.
3) Bind the protocol templates to the corresponding VLANs to form protocol groups, and add port 1/0/1 to the groups.

For Switch 1, configure 802.1Q VLAN according to the network topology.


Demonstrated with T2600G-28TS, this chapter provides configuration procedures in two ways: using the GUI and using the CLI.

3.3 Using the GUI

- Configurations for Switch 1


1) Choose the menu **L2 FEATURES > VLAN > 802.1Q VLAN > VLAN Config** and click Add to load the following page. Create VLAN 10, and add untagged port 1/0/1 and untagged port 1/0/3 to VLAN 10. Click **Create**.

Figure 3-2 Create VLAN 10

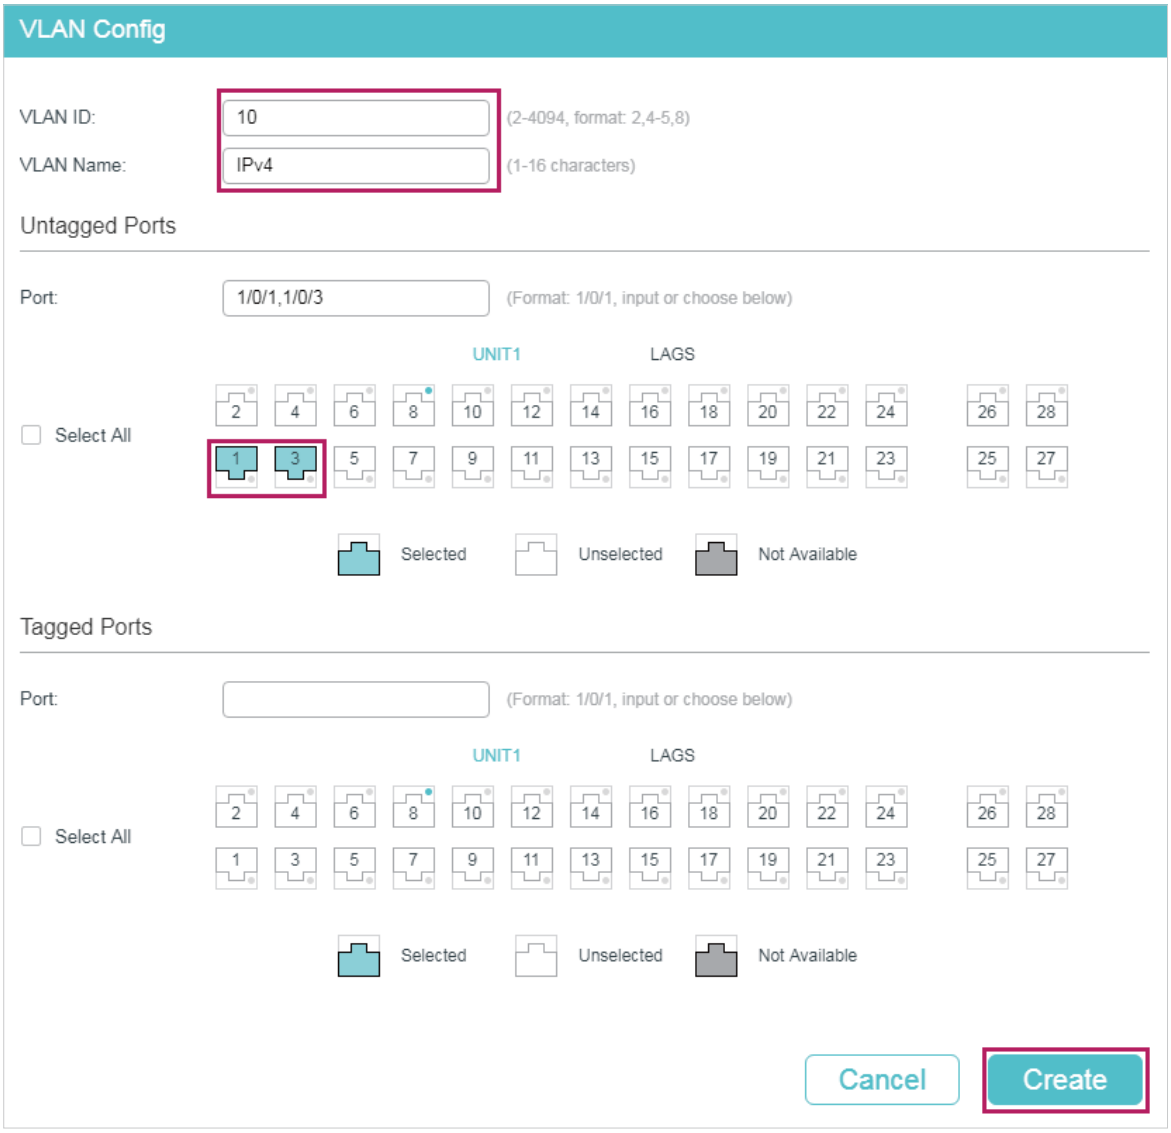

2) Click Add to load the following page. Create VLAN 20, and add untagged ports 1/0/2-3 to VLAN 20. Click **Create**.

Figure 3-3 Create VLAN 20

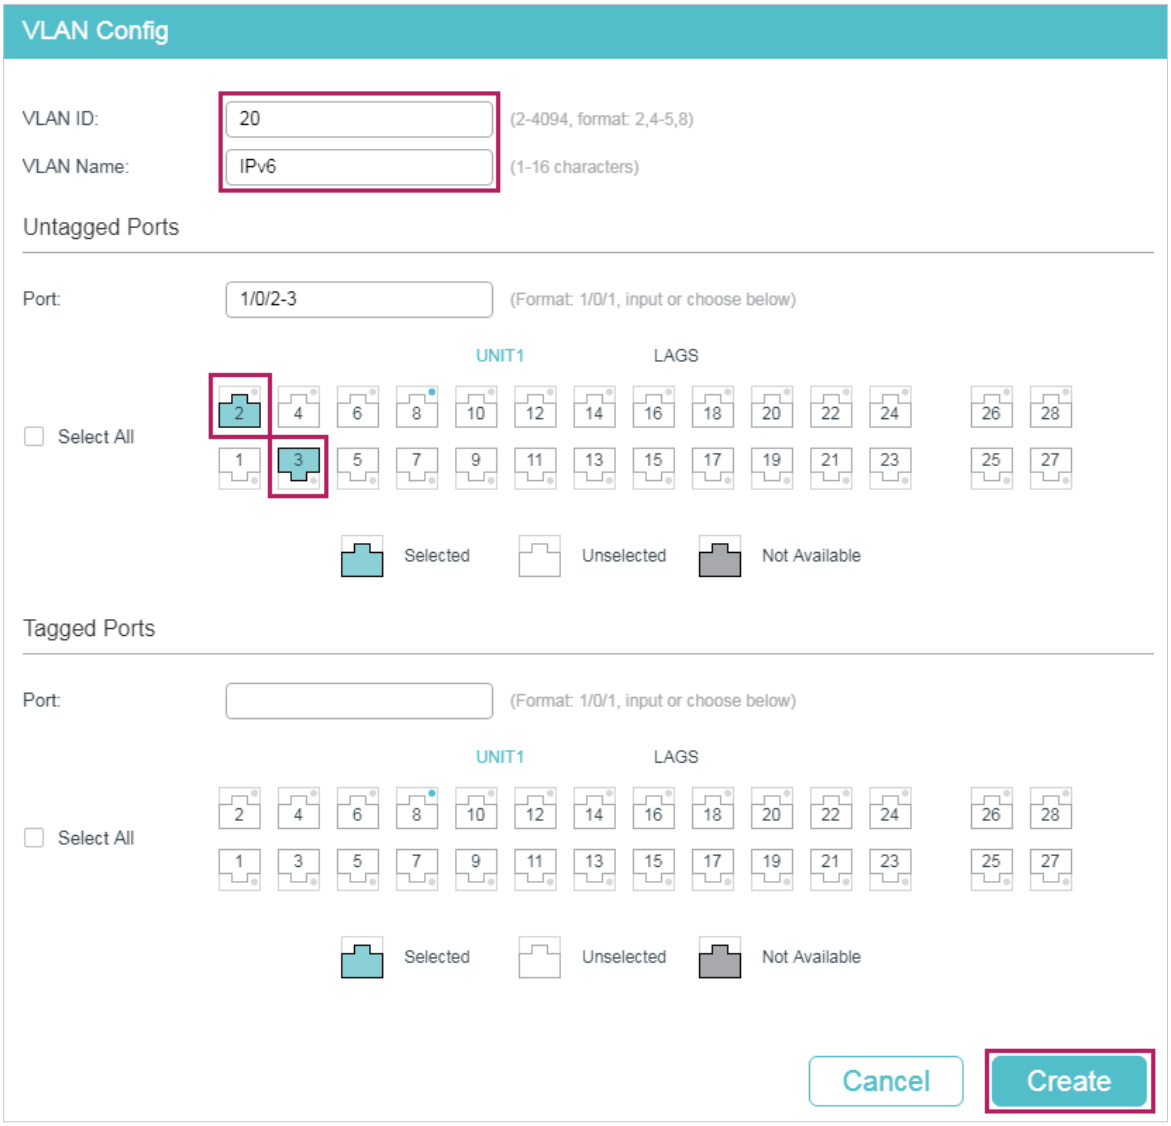


3) Click Save to save the settings.

Configurations for Switch 2


1) Choose the menu **L2 FEATURES > VLAN > 802.1Q VLAN > VLAN Config** and click Add to load the following page. Create VLAN 10, and add tagged port 1/0/1 and untagged port 1/0/2 to VLAN 10. Click **Create**.

Figure 3-4 Create VLAN 10

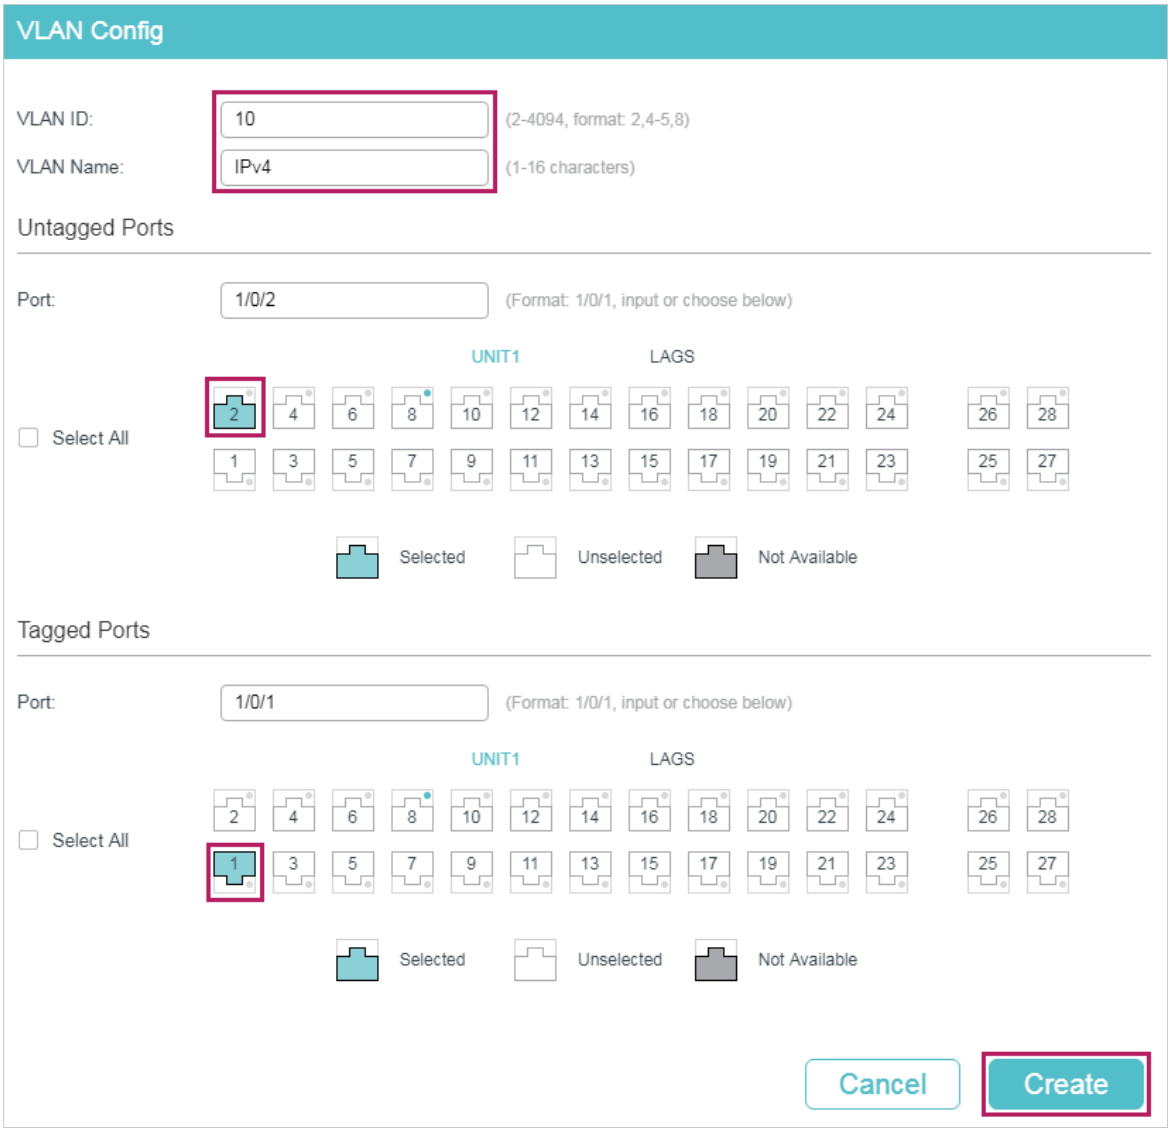


2) Click Add to load the following page. Create VLAN 20, and add tagged port 1/0/1 and untagged port 1/0/3 to VLAN 20. Click **Create**.

Figure 3-5 Create VLAN 20

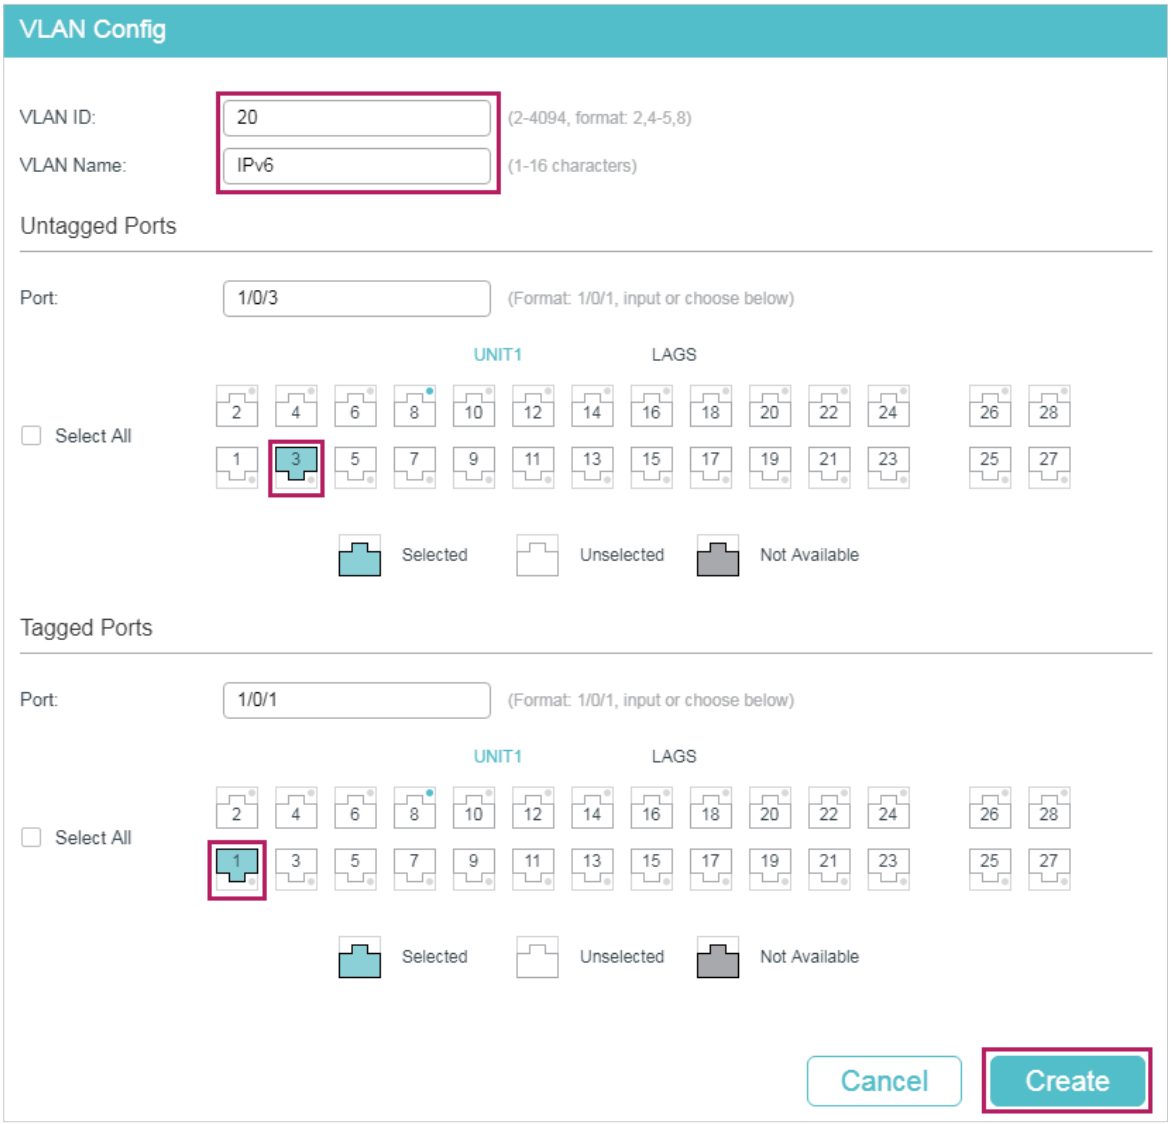

3) Choose the menu **L2 FEATURES > VLAN > 802.1Q VLAN > Port Config** to load the following page. Set the PVID of port 1/0/2 and port 1/0/3 as 10 and 20 respectively . Click **Apply**.


Figure 3-6 Port Configuration

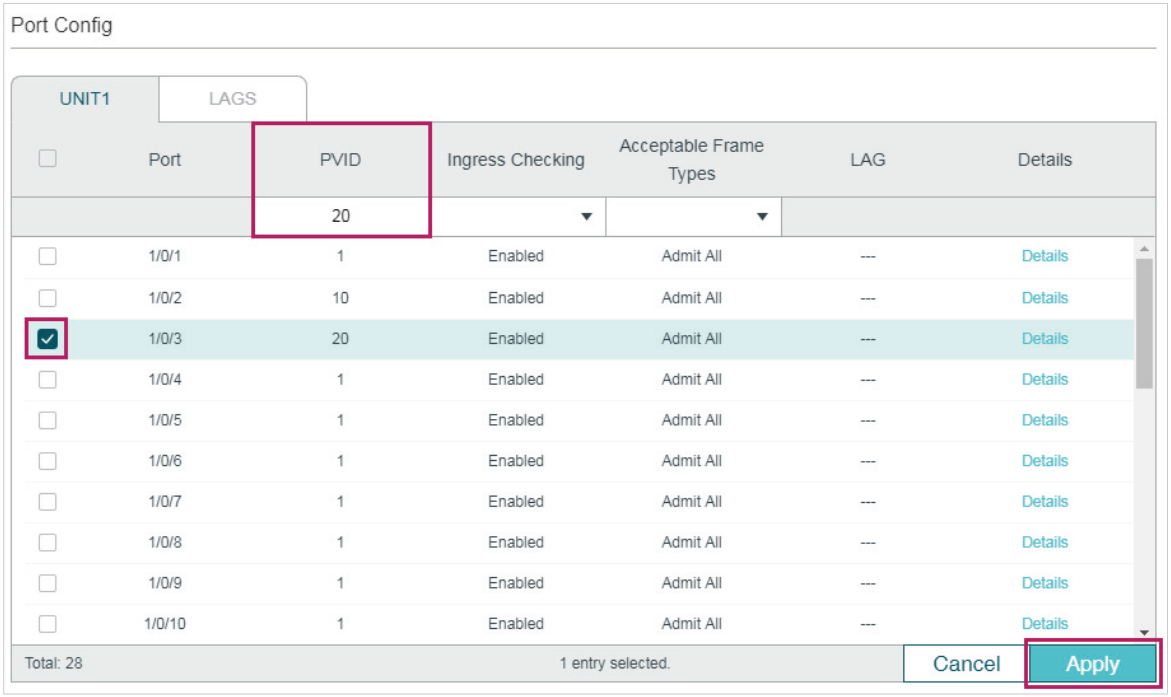

4) Choose the menu **L2 FEATURES > VLAN > Protocol VLAN > Protocol Template** and click Add to load the following page. Enter **IPv6** in the protocol name, select the **Ethernet II** frame type, enter **86DD** in the Ether Type field, and click **Create** to create the IPv6 protocol template.

Tips: The IPv4 protocol template is already provided by the switch. You only need to create the IPv6 protocol template.

Figure 3-7 Create the IPv6 Protocol Template

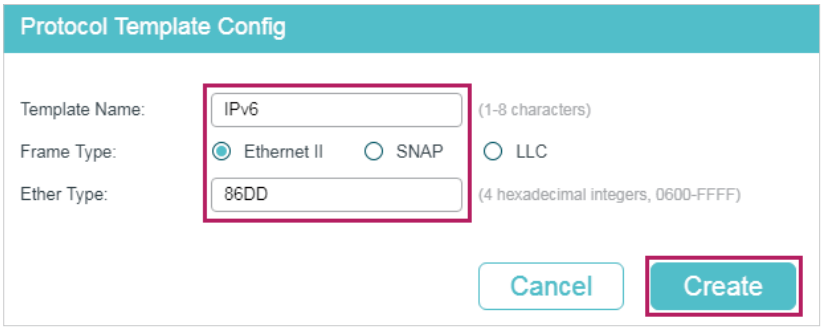

5) Choose the menu **L2 FEATURES > VLAN > Protocol VLAN > Protocol VLAN Group** and click Add to load the following page. Select the IP protocol name (that is the IPv4 protocol template), enter VLAN ID 10, select port 1, and click **Create**. Select the IPv6 protocol name, enter VLAN ID 20, select port 1, and click **Create**.

Figure 3-8 Configure the IPv4 Protocol Group


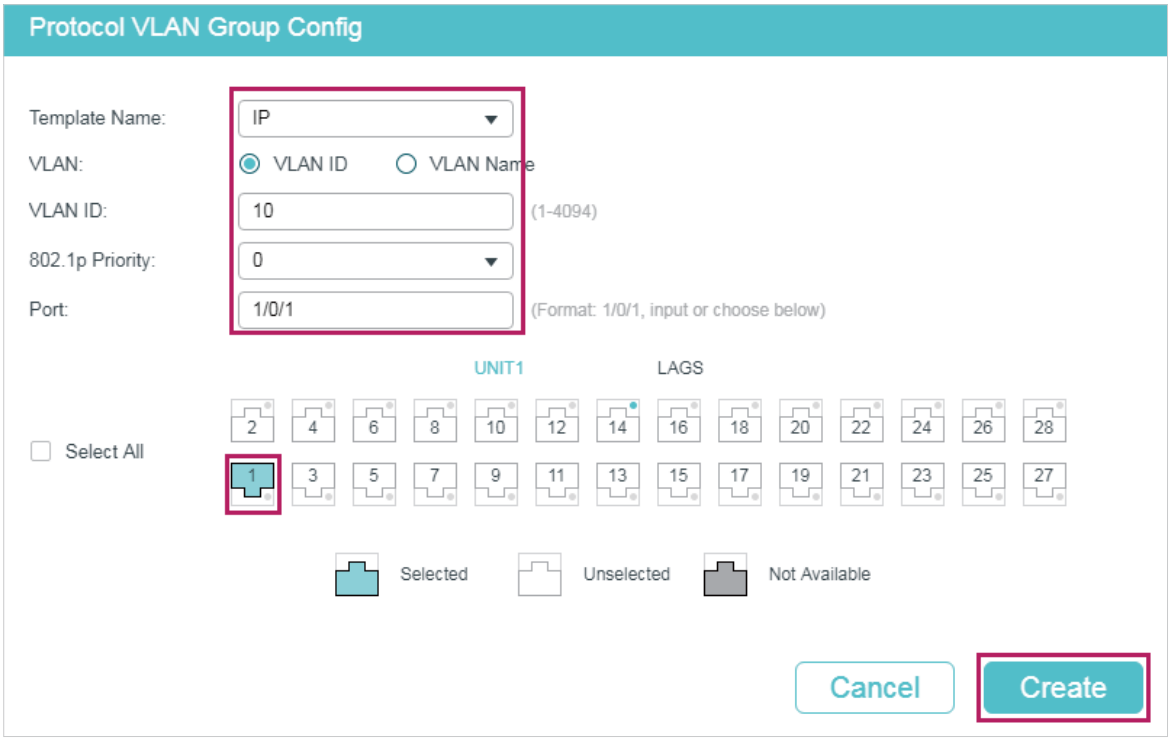


Figure 3-9 Configure the IPv6 Protocol Group

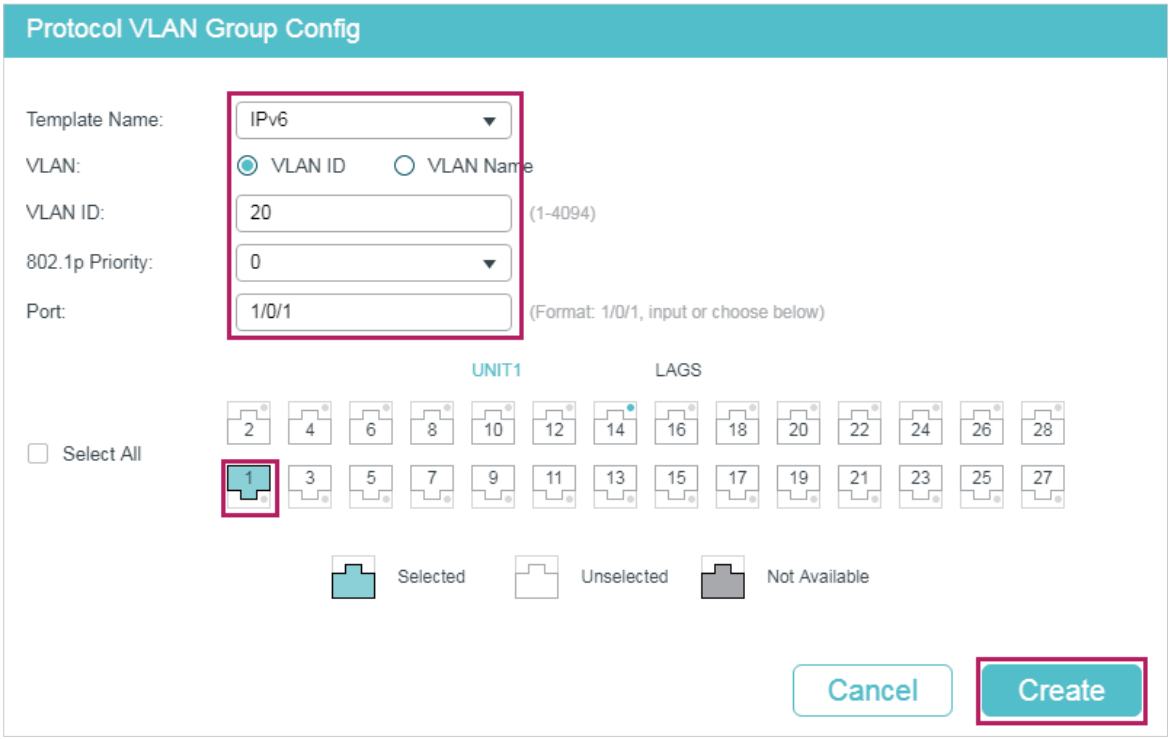

6) Click Save to save the settings.

3.4 Using the CLI

- Configurations for Switch 1

1) Create VLAN 10 and VLAN 20.

```
Switch_1#configure
Switch_1(config)#vlan 10
Switch_1(config-vlan)#name IPv4
Switch_1(config-vlan)#exit
Switch_1(config)#vlan 20
Switch_1(config-vlan)#name IPv6
Switch_1(config-vlan)#exit
```

2) Add untagged port 1/0/1 to VLAN 10. Add untagged port 1/0/2 to VLAN 20. Add untagged port 1/0/3 to both VLAN10 and VLAN 20.

```
Switch_1(config)#interface gigabitEthernet 1/0/1
Switch_1(config-if)#switchport general allowed vlan 10 untagged
Switch_1(config-if)#exit
Switch_1(config)#interface gigabitEthernet 1/0/2
Switch_1(config-if)#switchport general allowed vlan 20 untagged
Switch_1(config-if)#exit
Switch_1(config)#interface gigabitEthernet 1/0/3
Switch_1(config-if)#switchport general allowed vlan 10,20 untagged
Switch_1(config-if)#end
Switch_1#copy running-config startup-config
```

- Configurations for Switch 2

1) Create VLAN 10 and VLAN 20.

```
Switch_2#configure
Switch_2(config)#vlan 10
Switch_2(config-vlan)#name IPv4
Switch_2(config-vlan)#exit
Switch_2(config)#vlan 20
```

Switch_2(config-vlan)#name IPv6

Switch_2(config-vlan)#exit

2) Add tagged port 1/0/1 to both VLAN 10 and VLAN 20. Specify the PVID of untagged port 1/0/2 as 10 and add it to VLAN 10. Specify the PVID of untagged port 1/0/3 as 20 and add it to VLAN 20.

Switch_2(config)#interface gigabitEthernet 1/0/1

Switch_2(config-if)#switchport general allowed vlan 10,20 tagged

Switch_2(config-if)#exit

Switch_2(config)#interface gigabitEthernet 1/0/2

Switch_2(config-if)#switchport pvid 10

Switch_2(config-if)#switchport general allowed vlan 10 untagged

Switch_2(config-if)#exit

Switch_2(config)#interface gigabitEthernet 1/0/3

Switch_2(config-if)#switchport mode general

Switch_2(config-if)#switchport pvid 20

Switch_2(config-if)#switchport general allowed vlan 20 untagged

Switch_2(config-if)#exit

3) Create the IPv6 protocol template.

Switch_2(config)#protocol-vlan template name IPv6 frame ether_2 ether-type 86dd

Switch_2(config)#show protocol-vlan template

Index	Protocol Name	Protocol Type
1	IP	EthernetII ether-type 0800
2	ARP	EthernetII ether-type 0806
3	RARP	EthernetII ether-type 8035
4	IPX	SNAP ether-type 8137
5	AT	SNAP ether-type 809b
6	IPv6	Ethernet II ether-type 86dd

4) Configure the protocol groups.

Switch_2(config)#protocol-vlan vlan 10 priority 0 template 1

Switch_2(config)#protocol-vlan vlan 20 priority 0 template 6

5) Add port 1/0/1 to the protocol groups.

```
Switch_2(config)#show protocol-vlan vlan
Index      Protocol-Name     VID          Member
----       ---------------   ----------   -------------
 1         IP                10
 2         IPv6              20
Switch_2(config)#interface gigabitEthernet 1/0/1
Switch_2(config-if)#protocol-vlan group 1
Switch_2(config-if)#protocol-vlan group 2
Switch_2(config-if)#exit
Switch_2(config)#end
Switch_2#copy running-config startup-config
```

Verify the Configurations

- Switch 1

  Verify 802.1Q VLAN configuration:

```
Switch_1#show vlan
VLAN        Name             Status       Ports
--------    -------------    ---------    ----------------------------------------
1           System-VLAN      active       Gi1/0/1, Gi1/0/2, Gi1/0/3, Gi1/0/4
                                          ...
                                          Gi1/0/25, Gi1/0/26, Gi1/0/27, Gi1/0/28
10          IPv4             active       Gi1/0/1, Gi1/0/3
20          IPv6             active       Gi1/0/2, Gi1/0/3
```

- Switch 2

  Verify 802.1Q VLAN configuration:

```
Switch_2#show vlan
VLAN        Name             Status       Ports
-------     -------------    ----------   ----------------------------------------
1           System-VLAN      active       Gi1/0/1, Gi1/0/2, Gi1/0/3, Gi1/0/4
```

			...
			Gi1/0/25, Gi1/0/26, Gi1/0/27, Gi1/0/28
10	IPv4	active	Gi1/0/1, Gi1/0/2
20	IPv6	active	Gi1/0/1, Gi1/0/3

Verify protocol group configuration:

Switch_2#show protocol-vlan vlan

Index	Protocol-Name	VID	Priority	Member
1	IP	10	0	Gi1/0/1
2	IPv6	20	0	Gi1/0/1

4 Appendix: Default Parameters

Default settings of Protocol VLAN are listed in the following table.

Table 4-1 Default Settings of Protocol VLAN

Parameter	Default Setting		
Protocol Template Table	1	IP	Ethernet II ether-type 0800
	2	ARP	Ethernet II ether-type 0806
	3	RARP	Ethernet II ether-type 8035
	4	IPX	SNAP ether-type 8137
	5	AT	SNAP ether-type 809B

Part 10

Configuring VLAN-VPN

CHAPTERS

1. VLAN-VPN
2. Basic VLAN-VPN Configuration
3. Flexible VLAN-VPN Configuration
4. Configuration Example
5. Appendix: Default Parameters

1 VLAN-VPN


1.1 Overview

VLAN-VPN (Virtual Private Network) is an easy-to-implement layer 2 VLAN technology, and it is usually deployed at the edge of the ISP (Internet Service Provider) network.

With VLAN-VPN, when forwarding packets from the customer network to the ISP network, the switch adds an outer tag to the packets with outer VLAN ID. Thus, packets can be transmitted through ISP networks with double VLAN tags. In the ISP network, packets are forwarded according to the outer VLAN tag (VLAN tag of the ISP network), while the inner VLAN tag is treated as part of the payload. When forwarding packets from the ISP network to the customer network, the switch remove the outer VLAN tag of the packets. Thus, packets are forwarded according to the inner VLAN tag (VLAN tag of the customer network) in the customer network.

The following figure shows the typical application scenario of VLAN-VPN. To realize the communication between two customer VLANs across the ISP network, you can configure VLAN-VPN at the ISP edge switches to allow packets from customer VLAN 100 and VLAN 200 to be forwarded through the ISP network with the outer tag of VLAN 1050.

Figure 1-1 Application Scenario of VLAN-VPN

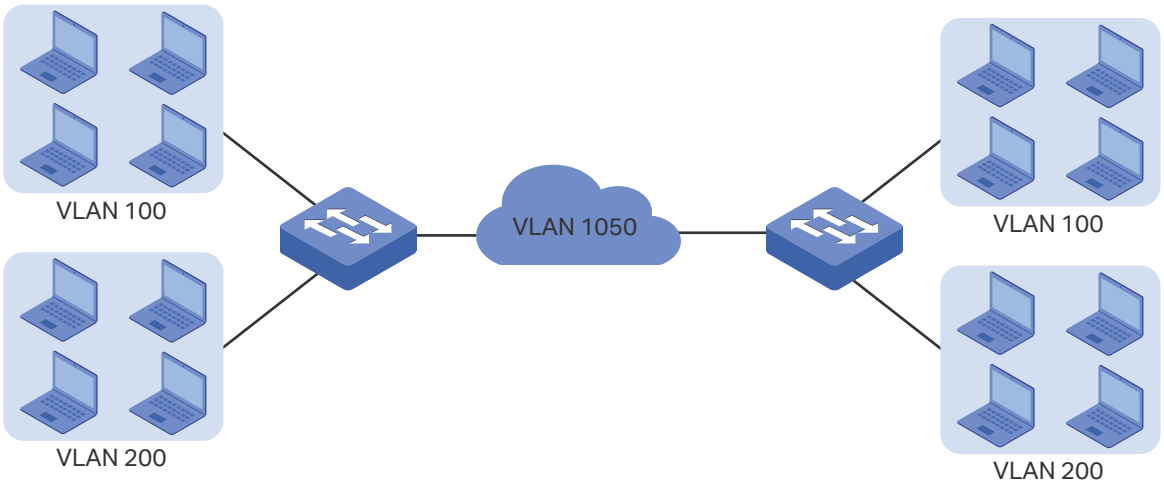

1.2 Supported Features

The VLAN-VPN function includes: basic VLAN-VPN and flexible VLAN-VPN (VLAN mapping).

Basic VLAN-VPN

All packets from customer VLANs are encapsulated with the same VLAN tag of the ISP network, and sent to the ISP network. Additionally, you can set the TPID (Tag Protocol Identifier) for compatibility with devices in the ISP network.

Flexible VLAN-VPN

You can configure different VLANs in the customer network to map to different VLANs in the ISP network.

When the switch receives a packet with the customer network tag, the switch will check the VLAN Mapping List. If a match is found, the switch encapsulates the packet with the corresponding VLAN tag of the ISP network, and forwards it to the corresponding port. If no match is found, the switch process the packet in rules of MAC VLAN, Protocol VLAN and 802.1Q VLAN. For untagged packets, the switch directly processes them in rules of MAC VLAN, Protocol VLAN and 802.1Q VLAN.

2 Basic VLAN-VPN Configuration

To complete the basic VLAN-VPN configuration, follow these steps:

1) Configure 802.1Q VLAN.
2) Configure NNI ports and UNI ports.
3) Enable VLAN-VPN globally.

Configuration Guidelines

- The TPID preset by the switch is 0x8100. If the devices in the ISP network do not support this value, you should change it to ensure VLAN-VPN packets sent to the ISP network can be recognized and forwarded by devices of other manufacturers.
- You can go to 802.1Q VLAN section to specify the Ingress Checking feature according to your needs. If the Ingress Checking is enabled, the port will perform this operation first then process the packets based on the VLAN-VPN configuration. If Ingress Checking is disabled, the port will process the packets directly based on the VLAN-VPN configuration.

2.1 Using the GUI


2.1.1 Configuring 802.1Q VLAN

Before configuring VLAN-VPN, create 802.1Q VLAN add ports to corresponding VLANs and configure Ingress Checking on ports according to your needs. For details, refer to *Configuring 802.1Q VLAN*.

2.1.2 Configuring Basic VLAN-VPN

Choose the menu **L2 FEATURES > VLAN > VLAN VPN > VPN Config** to load the following page.

Figure 2-1 Basic VPN Configuration

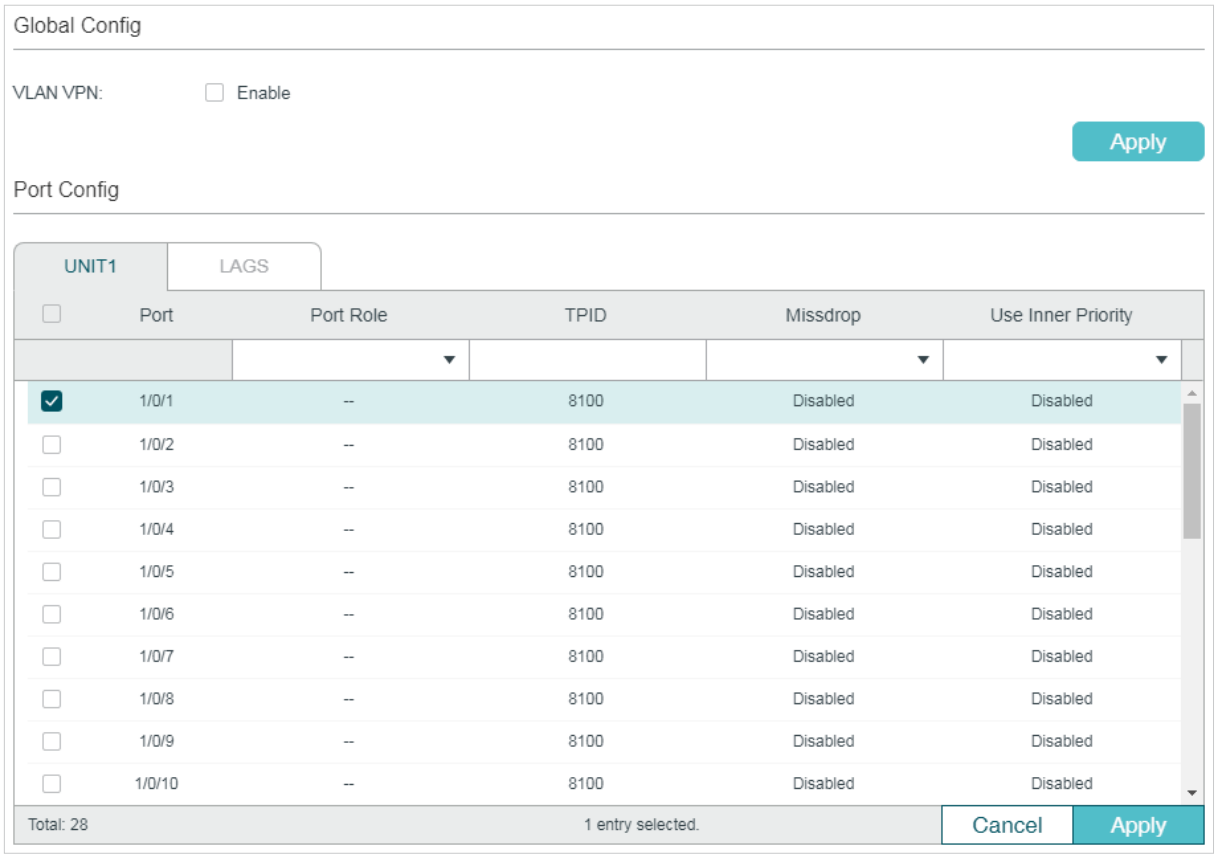

Follow these steps to configure the basic VLAN-VPN parameters:

1) In the **Global Config** section, enable VLAN-VPN globally, and click **Apply**.

VLAN-VPN	Enable the VLAN VPN function globally.

2) In the **VPN Port Config** section, select on or more ports and configure the corresponding parameters. Click **Apply**.

Port Role	Select the port role that will take effect in the VLAN-VPN function. **NNI:** NNI ports are usually connected to the ISP network, and the packets forwarded by these port have outer VLAN tags. **UNI:** UNI ports are usually connected to the customer network. The outer VLAN tags will be added or removed when the packets are forwarded by the VPN port. *Note:* The direct shift between ports modes UNI and NNI is not supported. To switch from the current mode to another mode, you can change the port tole to "--" first.

TPID	Specify the value of TPID. TPID is a field of VLAN tag and is modified to make the double tagged packets identifiable to devices from different vendors.
Missdrop	Enable the Missdrop feature. This option only can take effect on tagged packets. With Missdrop enabled, the tagged packets that don't match the VLAN Mapping entries will be dropped. *Note:* For T2600G-28TS/T2600G-28MPS/T2600G-28SQ/T2600G-52TS, Missdrop can only be enabled on UNI ports. For T2600G-18TS, Missdrop can only be enabled on NNI ports.
Use Inner Priority	Enable this function and the switch will determine the forwarding sequence of the packets according to the 802.1p priority of the inner VLAN tag. It is available only when the port role is UNI.

Note:

- The PVID of the UNI port should be specified as the VLAN ID of the ISP VLAN.
- The member port of an LAG (Link Aggregation Group) follows the configuration of the LAG and not its own. The configurations of the port can take effect only after it leaves the LAG.

2.2 Using the CLI

2.2.1 Configuring 802.1Q VLAN

Before configuring VLAN-VPN, create 802.1Q VLAN, add ports to corresponding VLANs and configure Ingress Checking on ports according to your needs. For details, refer to *Configuring 802.1Q VLAN*.

2.2.1 Configuring Basic VLAN-VPN

Follow these steps to configure basic VLAN-VPN:

Step 1	**configure** Enter global configuration mode.
Step 2	**dot1q-tunnel** Enable the VLAN-VPN feature globally.
Step 3	**interface {fastEthernet** *port* **| range fastEthernet** *port-list* **| gigabitEthernet** *port* **| range gigabitEthernet** *port-list* **| ten-gigabitEthernet** *port* **| range ten-gigabitEthernet** *port-list* **| port-channel** *port-channel-id* **| range port-channel** *port-channel-list***}** Enter interface configuration mode.

Step 4	**switchport dot1q-tunnel mode** { nni | uni } Select the port role that will take effect in the VLAN-VPN function. *nni* : NNI ports are usually connected to the ISP network, and the packets forwarded by these port have outer VLAN tags. *uni* : UNI ports are usually connected to the customer network. The outer VLAN tags will be added or removed when the packets are forwarded by the VPN port. *Note:* The direct shift between ports modes uni and nni is not supported. To switch from the current mode to another mode, you can use **no switchport dot1q-tunnel mode** to disable the current mode.
Step 5	**switchport dot1q-tunnel tpid** *tpid* Specify the value of TPID. TPID is a field of VLAN tag and is modified to make the double tagged packets identifiable to devices from different vendors. *tpid:* Enter the IPID for the port. It must be 4 Hex integers. By default, it is 8100.
Step 6	**switchport dot1q-tunnel missdrop** Enable the Missdrop feature. This option only can take effect on tagged packets. With Missdrop enabled, the tagged packets that don't match the VLAN Mapping entries will be dropped. By default, it is disabled. *Note:* For T2600G-28TS/T2600G-28MPS/T2600G-28SQ/T2600G-52TS, Missdrop can only be enabled on UNI ports. For T2600G-18TS, Missdrop can only be enabled on NNI ports.
Step 7	**switchport dot1q-tunnel use_inner_priority** Enable this function and the switch will determine the forwarding sequence of the packets according to the 802.1p priority of the inner VLAN tag. By default, it is disabled. It is available only when the port mode is UNI.
Step 8	**show dot1q-tunnel** Verify the global configuration of VLAN-VPN.
Step 9	**show dot1q-tunnel interface** Verify the interface configuration of basic VLAN-VPN.
Step 10	**end** Return to privileged EXEC mode.
Step 11	**copy running-config startup-config** Save the settings in the configuration file.

The following example shows how to enable the VLAN-VPN feature globally, set port 1/0/1 of switch as the UNI port and 1/0/2 as the NNI port:

Switch#configure

Switch(config)#dot1q-tunnel

Switch(config)#interface gigabitEthernet 1/0/1

Switch(config-if)#switchport dot1q-tunnel mode uni

Switch(config-if)#exit

Switch(config)#interface gigabitEthernet 1/0/2

Switch(config-if)#switchport dot1q-tunnel mode nni

Switch(config-if)#show dot1q-tunnel

VLAN-VPN Mode: Enabled

Mapping Mode: Disabled

Switch(config-if)#show dot1q-tunnel interface

Port	Type	Tpid	Use Inner Priority	LAG
---	---	---	---	---
Gi1/0/1	UNI	0x8100	Disable	N/A
Gi1/0/2	NNI	0x8100	Enable	N/A

...

Switch(config-if)#end

Switch#copy running-config startup-config

3 Flexible VLAN-VPN Configuration

To complete the flexible VLAN-VPN configuration, follow these steps:

1) Configure 802.1Q VLAN and basic VLAN-VPN.
2) Configure VLAN mapping.

Configuration Guidelines

- Before you start, configure 802.1Q VLAN and the basic VLAN-VPN.
- You can specify the PVID of the UNI port according to your needs. The untagged packets and the tagged packets that don't the VLAN mapping entry may be added the outer VLAN tag with this PVID according to your configuration.

3.1 Using the GUI

Choose the menu **L2 FEATURES > VLAN > VLAN VPN > VLAN Mapping** to load the following page.


Figure 3-1 Enable Flexible VLAN-VPN



Follow these steps to configure flexible VLAN-VPN:

1) In the **Global Config** section, enable VLAN mapping globally and click **Apply**.
2) In the **VLAN Mapping Config** section, click Add to load the following page. Configure the following parameters.

Figure 3-2 Create VLAN Mapping Entry

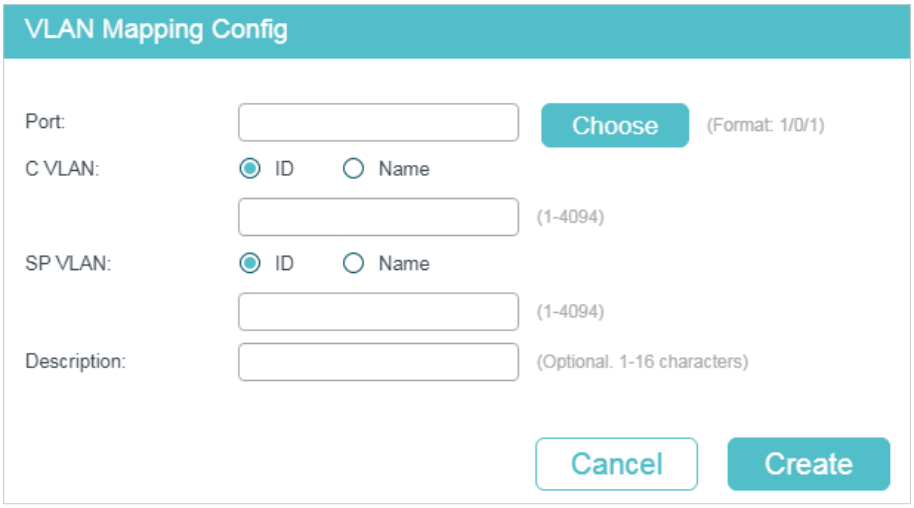

Port	For T2600G-28TS/T2600G-28MPS/T2600G-28SQ/T2600G-52TS, choose a UNI port to enable VLAN mapping. For T2600G-18TS, choose a NNI port to enable VLAN mapping.
C VLAN	Specify the customer VLAN of the UNI port by entering the VLAN ID or VLAN Name.
SP VLAN	Specify the ISP VLAN of the UNI port by entering the VLAN ID or VLAN Name.
Description	Give a description to identify the VLAN Mapping.

3) Click **Create**.

3.2 Using the CLI

Follow these steps to configure flexible VLAN-VPN:

Step 1	**configure** Enter global configuration mode.
Step 2	**dot1q-tunnel mapping** Enable VLAN mapping globally.
Step 3	**interface {fastEthernet** *port* **| range fastEthernet** *port-list* **| gigabitEthernet** *port* **| range gigabitEthernet** *port-list* **| ten-gigabitEthernet** *port* **| range ten-gigabitEthernet** *port-list* **| port-channel** *port-channel-id* **| range port-channel** *port-channel-list***}** For T2600G-28TS/T2600G-28MPS/T2600G-28SQ/T2600G-52TS, choose a UNI port to enable VLAN mapping. For T2600G-18TS, choose a NNI port to enable VLAN mapping.

Step 4	**switchport dot1q-tunnel mapping** *c-vlan sp-vlan [descript]* Set VLAN mapping entries for the specified port. *c vlan:* Enter VLAN ID of the customer network. *sp vlan:* Enter VLAN ID of the ISP network. *descript:* Give a description to identify the VLAN Mapping.
Step 5	**end** Return to privileged EXEC mode.
Step 6	**copy running-config startup-config** Save the settings in the configuration file.

The following example shows how to enable VLAN mapping and set a VLAN mapping entry named mapping1 on port 1/0/3 to map customer network VLAN 15 to ISP network VLAN 1040:

Switch#configure

Switch(config)#dot1q-tunnel mapping

Switch(config)#show dot1q-tunnel

VLAN-VPN Mode: Enabled

Mapping Mode: Enabled

Switch(config)#interface gigabitEthernet 1/0/3

Switch(config-if)#switchport dot1q-tunnel mapping 15 1040 mapping1

Switch(config-if)#show dot1q-tunnel mapping

Port	C-VLAN	SP-VLAN	Name
Gi1/0/3	15	1040	mapping1

Switch(config-if)#end

Switch#copy running-config startup-config

4 Configuration Examples


4.1 Example for Basic VLAN VPN

4.1.1 Network Requirements

A company has two stations, and the computers belong to VLAN 100 and VLAN 200 respectively. The ISP VLAN is VLAN 1050 and the TPID adopted by the ISP network is 0x9100.

The two stations need to communicate with each other through the ISP network. And it is required that the traffic from VLAN 100 and VLAN 200 should be transmitted in VLAN 1050.

Figure 4-1 Network Topology

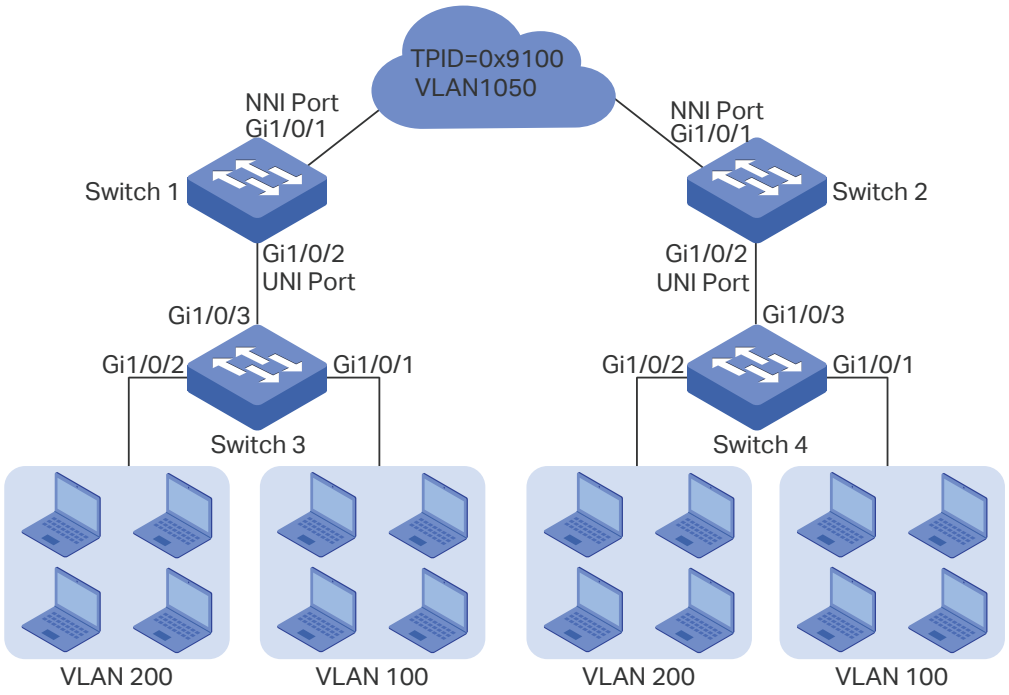

4.1.2 Configuration Scheme

To meet the requirement that all the traffic from VLAN 100 and VLAN 200 should be transmitted through VLAN 1050, users can configure basic VLAN VPN on Switch 1 and Switch 2 to allow packets sent with double VLAN tags, and thus ensure the communication between them. The general configuration procedure is as follows:

Here we only introduce the configuration schemes on switch 1 and switch 3, for the configurations on switch 2 are the same as those on switch 1, and the configurations on switch 4 are the same as those on switch 3.

1) Configure 802.1Q VLAN on switch 1. The parameters are shown below:

	VLAN 100	VLAN 200	VLAN 1050	PVID
Port 1/0/1	-	-	Tagged	1
Port 1/0/2	Tagged	Tagged	Untagged	1050

2) Configure 802.1Q VLAN on switch 3. The parameters are shown below:

	VLAN 100	VLAN 200	PVID
Port 1/0/1	-	Untagged	100
Port 1/0/2	Untagged	-	200
Port 1/0/3	Tagged	Tagged	1

3) Configure VLAN VPN on switch 1. Set port 1/0/1 as NNI port and port 1/0/2 as UNI port; configure the TPID as 0x9100.

Demonstrated with T2600G-28TS, this chapter provides configuration procedures in two ways: using the GUI and using the CLI.

4.1.3 Using the GUI

- Configuring Switch 1:

1) Go to **L2 FEATURES > VLAN > 802.1Q VLAN** to create VLAN 100, VLAN 200 and VLAN 1050. Configure the egress rule of port 1/0/2 in VLAN 100 and VLAN 200 as Tagged, and in VLAN 1050 as Untagged; Configure the egress rule of port 1/0/1 in VLAN 1050 as Tagged.

Figure 4-2 Create VLAN 100

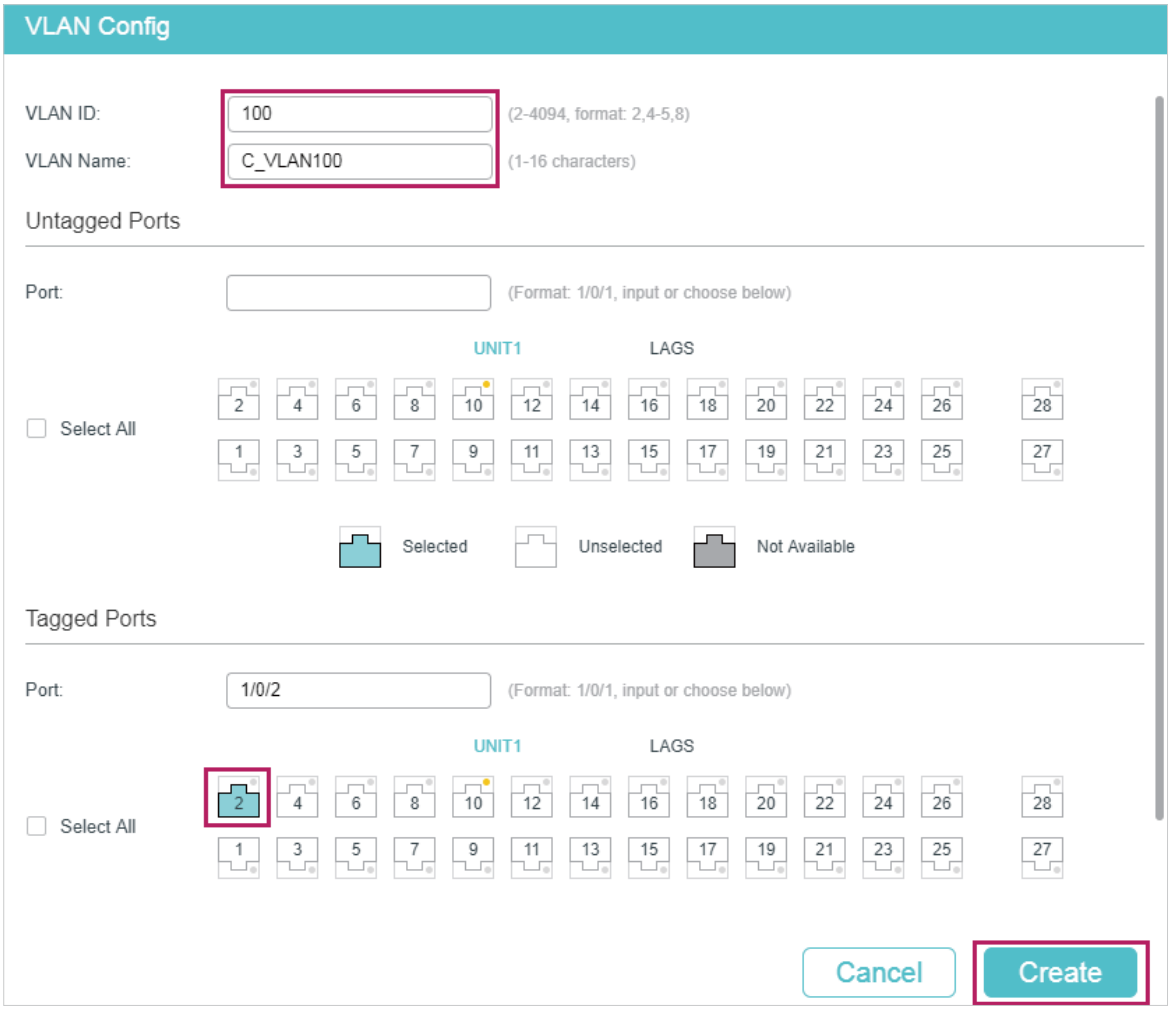


Figure 4-3 Create VLAN 200



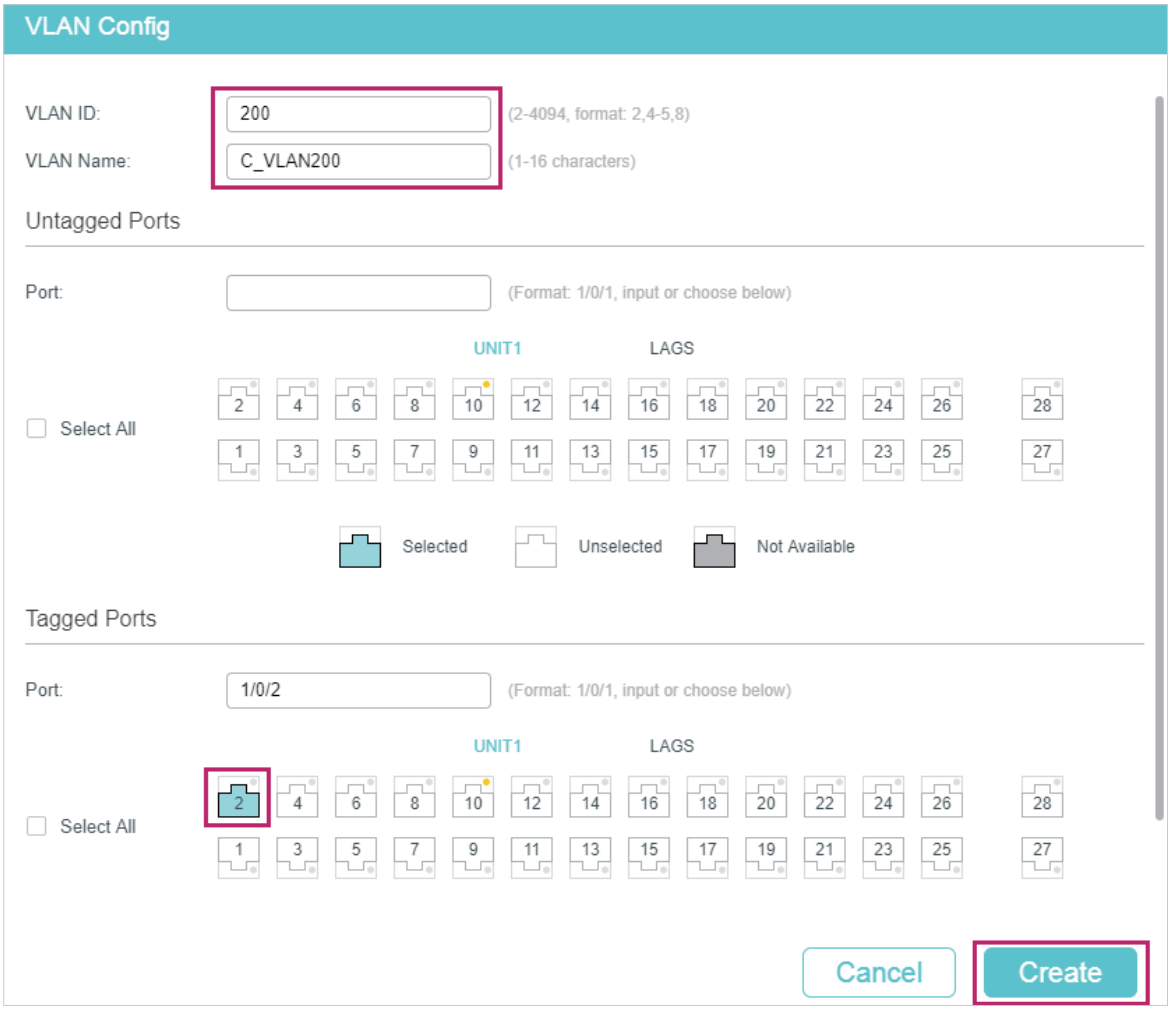


Figure 4-4 Create VLAN 1050

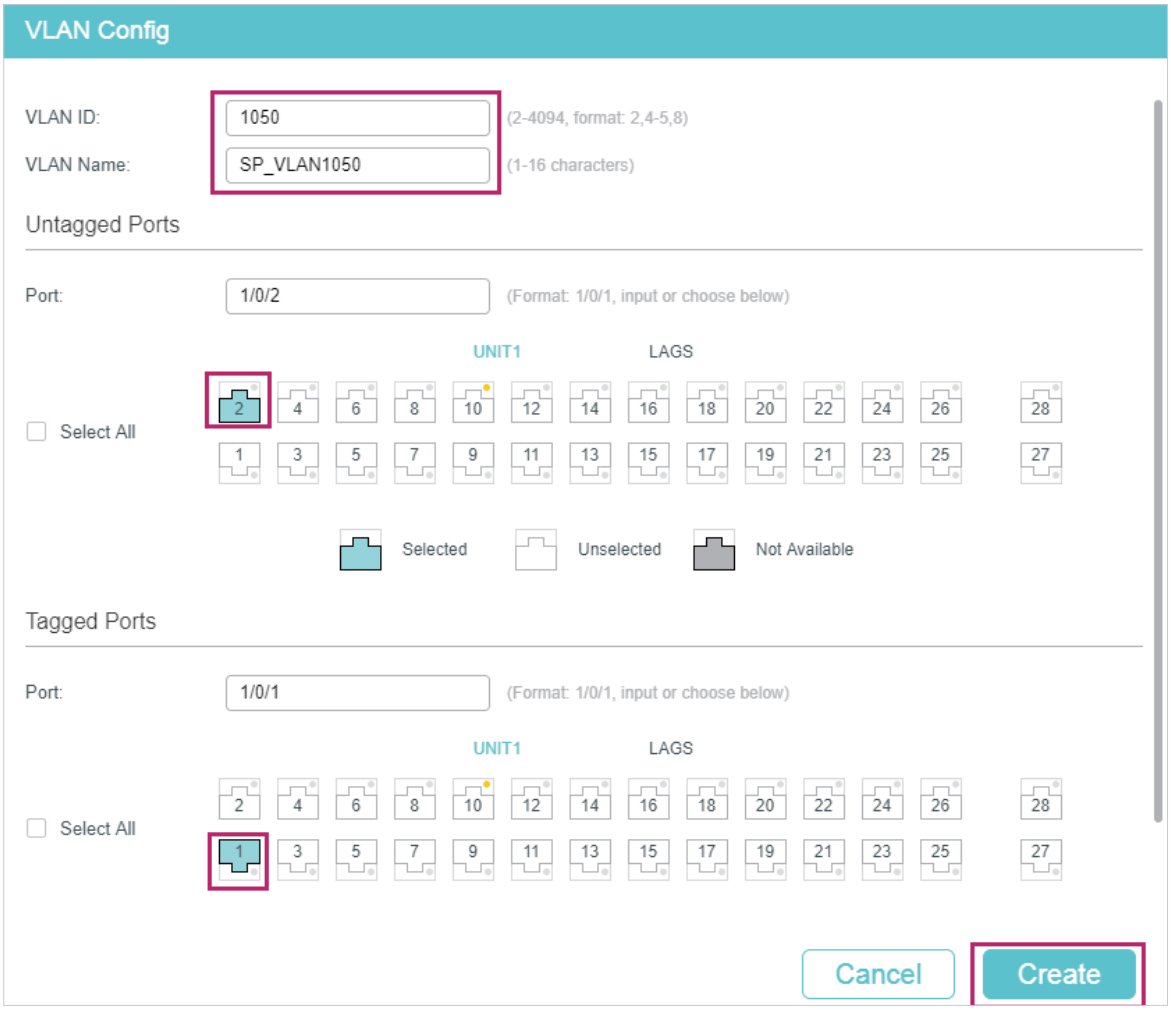


2) Go to **L2 FEATURES > VLAN > Port Config** to set the PVID as 1050 for port 1/0/2 and leave the default vaule 1 for port 1/0/1.

Figure 4-5 Configuring PVID

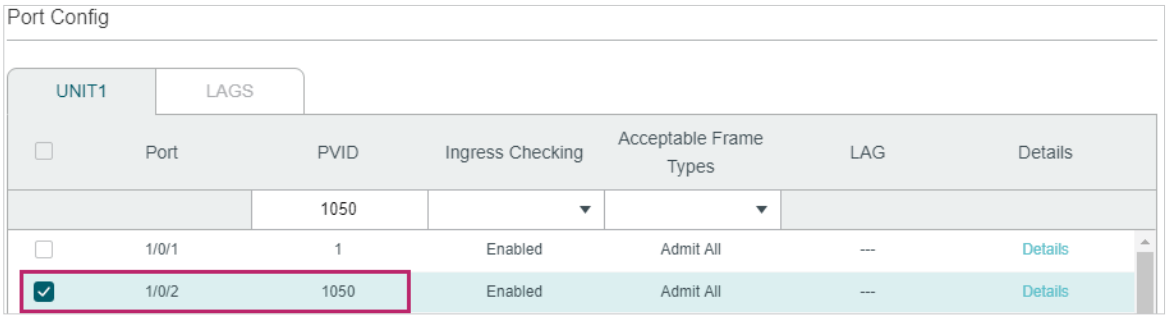

3) Go to **L2 FEATURES > VLAN > VLAN VPN > VPN Config**, enable VLAN VPN globally; set port 1/0/1 as NNI port and port /1/0/2 as UNI port. Specify the TPID of port 1/0/1 as 9100.

Figure 4-6 Enabling VLAN VPN Globally and Configuring the Ports

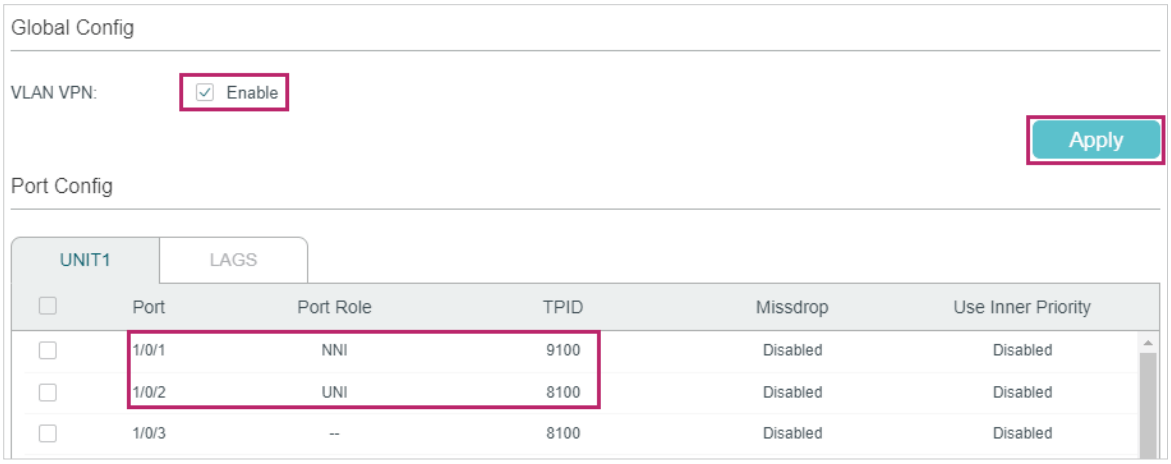

4) Click Save to save the settings.

- Configuring Switch 3:

1) Go to **L2 FEATURES > VLAN > 802.1Q VLAN** to create VLAN 100 and VLAN 200. Configure the egress rules of port 1/0/1 in VLAN 100 as Untagged; egress rules of port 1/0/2 in VLAN 200 as Untagged; egress rule of port 1/0/3 in VLAN 100 and VLAN 200 as Tagged.

Figure 4-7 Creating VLAN 100



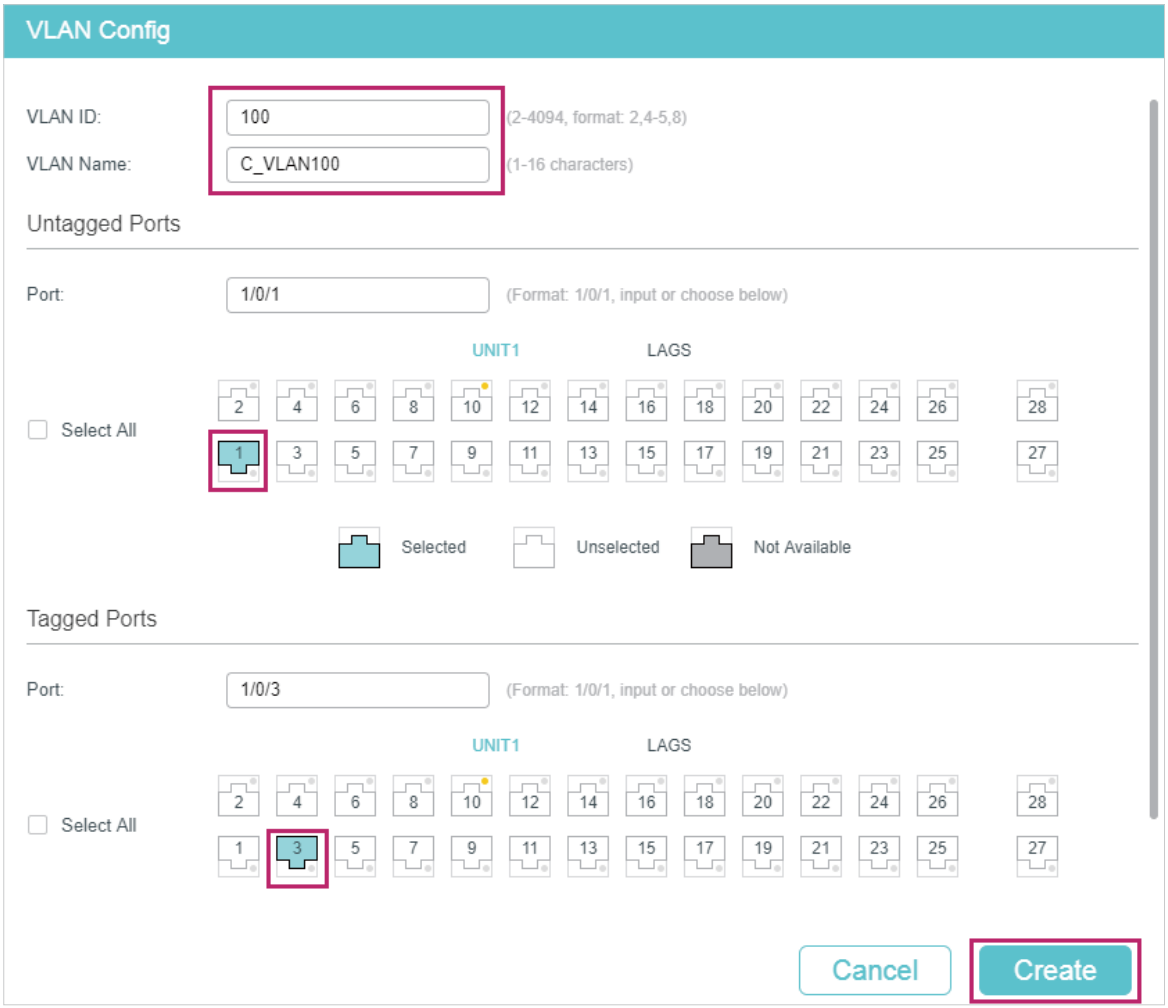


Figure 4-8 Creating VLAN 200

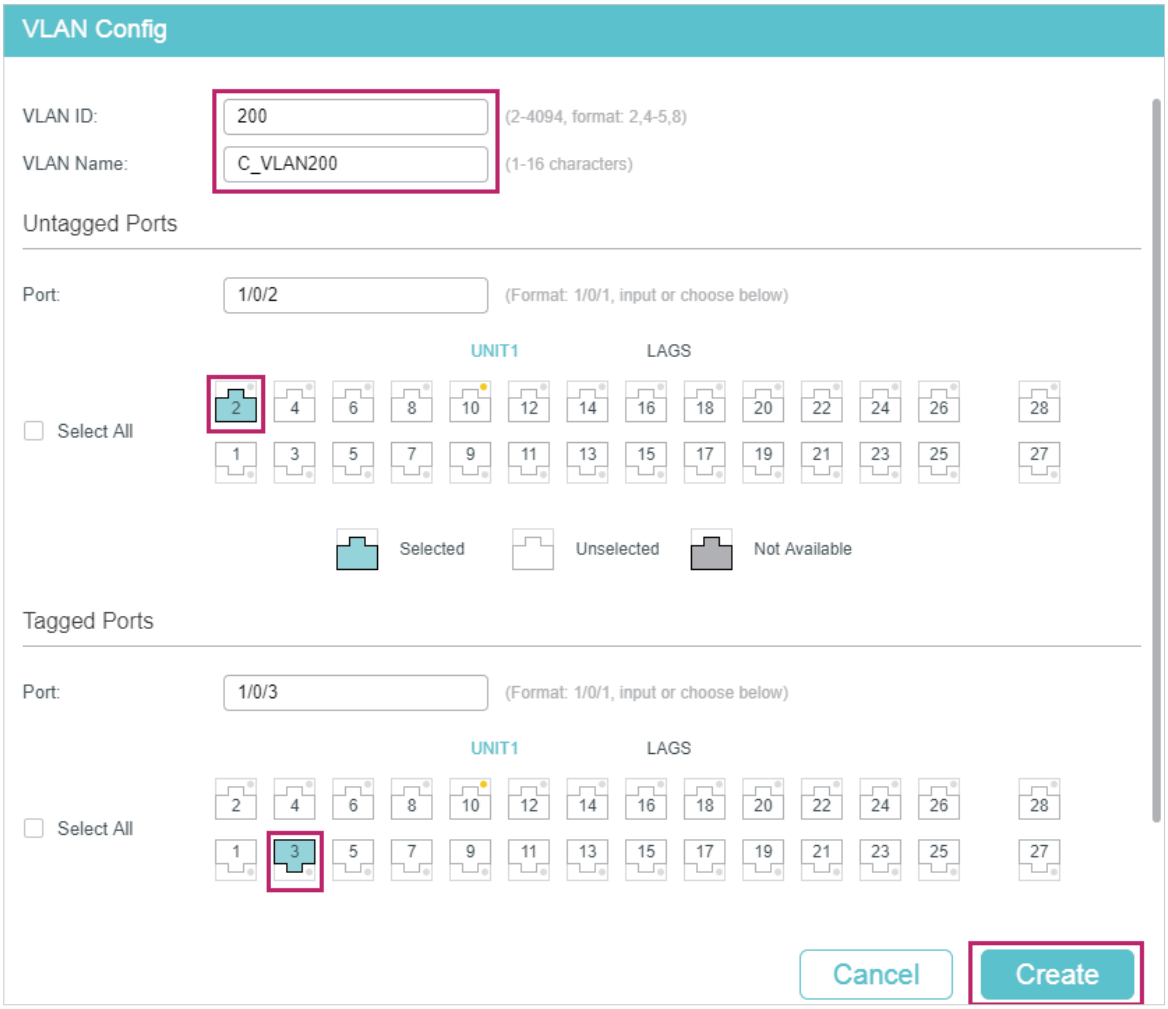

2) Go to **L2 FEATURES > VLAN > Port Config** to set the PVID as 100 for port 1/0/1 and 200 for port 1/0/2.

Figure 4-9 Configuring PVID

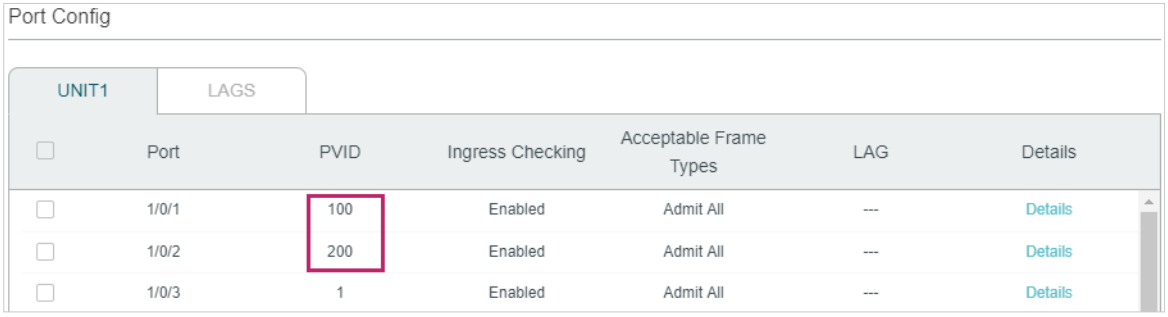

3) Click Save to save the settings.

4.1.4 Using the CLI

The configurations of Switch 1 and Switch 2 are similar. The following introductions take Switch 1 as an example.

1) Create VLAN 1050, VLAN 100 and VLAN 200.

```
Switch_1#configure
```

Switch_1(config)#vlan 1050

Switch_1(config-vlan)#name SP_VLAN

Switch_1(config-vlan)#exit

Switch_1(config)#vlan 100

Switch_1(config-vlan)#name C_VLAN100

Switch_1(config-vlan)#exit

Switch_1(config)#vlan 200

Switch_1(config-vlan)#name C_VLAN200

Switch_1(config-vlan)#exit

2) Add port 1/0/1 to VLAN 1050 as tagged port, modify PVID as 1050, set the port as NNI port and specify the TPID as 9100.

Switch_1(config)#interface gigabitEthernet 1/0/1

Switch_1(config-if)#switchport general allowed vlan 1050 tagged

Switch_1(config-if)#switchport pvid1050

Switch_1(config-if)#switchport dot1q-tunnel mode nni

Switch_1(config-if)#switchport dot1q-tunnel tpid 9100

Switch_1(config-if)#exit

3) Add port 1/0/2 to VLAN 1050 as untagged port, and add it to VLAN 100 and VLAN 200 as tagged port. Modify PVID of the port as 1050. Set the port as the UNI port.

Switch_1(config)#interface gigabitEthernet 1/0/2

Switch_1(config-if)#switchport general allowed vlan 1050 untagged

Switch_1(config-if)#switchport general allowed vlan 100,200 tagged

Switch_1(config-if)#switchport pvid 1050

Switch_1(config-if)#switchport dot1q-tunnel mode uni

Switch_1(config-if)#exit

4) Enable VLAN VPN globally

Switch_1(config)#dot1q-tunnel

Switch_1(config)#end

Switch_1#copy running-config startup-config

- Configuring Switch 3

1) Create VLAN 100 and VLAN 200.

Switch_3#configure

Switch_3(config)#vlan 100

Switch_3(config-vlan)#name C_VLAN100

Switch_3(config-vlan)#exit

Switch_3(config)#vlan 200

Switch_3(config-vlan)#name C_VLAN200

Switch_3(config-vlan)#exit

2) Add port 1/0/1 to VLAN 100 and port 1/0/2 to VLAN 200 as untagged ports; add port 1/0/3 to VLAN 100 and VLAN 200 as tagged ports. Configure the PVID as 100 for port 1/0/1 and 200 for port 1/0/2.

Switch_3(config)#interface gigabitEthernet 1/0/1

Switch_3(config-if)#switchport general allowed vlan 100 untagged

Switch_3(config-if)#switchport pvid 100

Switch_3(config-if)#exit

Switch_3(config)#interface gigabitEthernet 1/0/2

Switch_3(config-if)#switchport general allowed vlan 200 untagged

Switch_3(config-if)#switchport pvid 200

Switch_3(config-if)#exit

Switch_3(config)#interface gigabitEthernet 1/0/3

Switch_3(config-if)#switchport general allowed vlan 100,200 tagged

Switch_3(config-if)#end

Switch_3#copy running-config startup-config

Verify the VLAN VPN Configurations on Switch 1

Verify the configurations of global VLAN VPN:

Switch_3#show dot1q-tunnel

VLAN VPN Mode: Enabled

Mapping Mode: Disabled

Verify the configurations of VPN up-link port and VPN port:

Switch_3#show dot1q-tunnel interface

Port Type Tpid Use Inner Priority LAG

Gi1/0/1	NNI	0x9100	Disable	N/A
Gi1/0/2	UNI	0x8100	Enable	N/A
Gi1/0/3	NONE	0x8100	Disable	N/A
Gi1/0/4	NONE	0x8100	Disable	N/A

...

Verify the port configuration:

Switch_3#show interface switchport gigabitEthernet 1/0/1

Port Gi1/0/1:

PVID: 1050

Acceptable frame type: All

Ingress Checking: Enable

Member in LAG: N/A

Link Type: General

Member in VLAN:

Vlan	Name	Egress-rule
1	System-VLAN	Untagged
1050	SP_VLAN	Tagged

Switch_3#show interface switchport gigabitEthernet 1/0/2

Port Gi1/0/2:

PVID: 1050

Acceptable frame type: All

Ingress Checking: Enable

Member in LAG: N/A

Link Type: General

Member in VLAN:

Vlan	Name	Egress-rule

1	System-VLAN	Untagged
100	C_VLAN100	Tagged
200	C_VLAN200	Tagged
1050	SP_VLAN	Untagged


4.2 Example for Flexible VLAN VPN

4.2.1 Network Requirements

A company has two stations, and the computers belong to VLAN 100 and VLAN 200 respectively. The ISP VLAN is VLAN 1050 and VLAN 1060, and the TPID adopted by the ISP network is 0x9100.

The two stations need to communicate with each other through the ISP network. And it is required that the traffic from VLAN 100 should be transmitted in VLAN 1050, while the traffic from VLAN 200 should be transmitted in VLAN 1060.

Figure 4-10 Network Topology

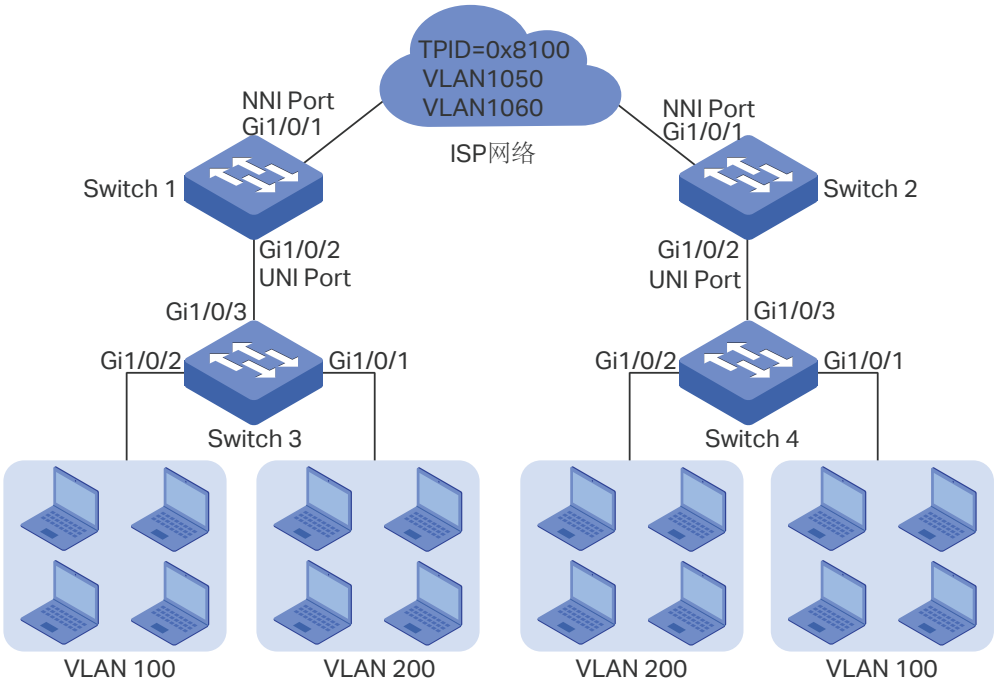

4.2.2 Configuration Scheme

To meet the requirement that all the traffic from VLAN 100 and VLAN 200 need to be transmitted through different ISP VLANs, users can configure flexible VLAN VPN on Switch 1 and Switch 2 to map VLAN 100 to VLAN 1050 and VLAN 200 to VLAN 1060, so packets from VLAN 100 and VLAN 200 will be transmitted through VLAN 1050 and VLAN 1060 respectively.

Here we only introduce the configuration scheme on switch 1 and switch 3, for the configurations on switch 2 are the same as that on switch 1, and the configurations on switch 4 are the same as that on switch 3.

1) Configure 802.1Q VLAN on switch 1. The parameters are shown below:

	VLAN 100	VLAN 200	VLAN 1050	VLAN 1060	PVID
Port 1/0/1	-	-	Tagged	Tagged	1
Port 1/0/2	Tagged	Tagged	Untagged	Untagged	1050

2) Configure 802.1Q VLAN on switch 3. The parameters are shown below:

	VLAN 100	VLAN 200	PVID
Port 1/0/1	-	Untagged	100
Port 1/0/2	Untagged	-	200
Port 1/0/3	Tagged	Tagged	1

3) Configure VLAN VPN on switch 1. Set port 1/0/1 as NNI port and port 1/0/2 as UNI port; configure the TPID as 0x9100; map VLAN 100 to VLAN 1050 and VLAN 200 to VLAN 1060.

Demonstrated with T2600G-28TS, this chapter provides configuration procedures in two ways: using the GUI and using the CLI.

4.2.3 Using the GUI

- Configuring Switch 1:

1) Go to **L2 FEATURES > VLAN > 802.1Q VLAN** to create VLAN 100, VLAN 200, VLAN 1050 and VLAN 1060. Configure the egress rule of port 1/0/2 in VLAN 100 and VLAN 200 as Tagged, and Untagged in VLAN 1050 and VLAN 1060; Configure the egress rule of port 1/0/1 in VLAN 1050 and VLAN 1060 as Tagged.

Figure 4-11 Create VLAN 100

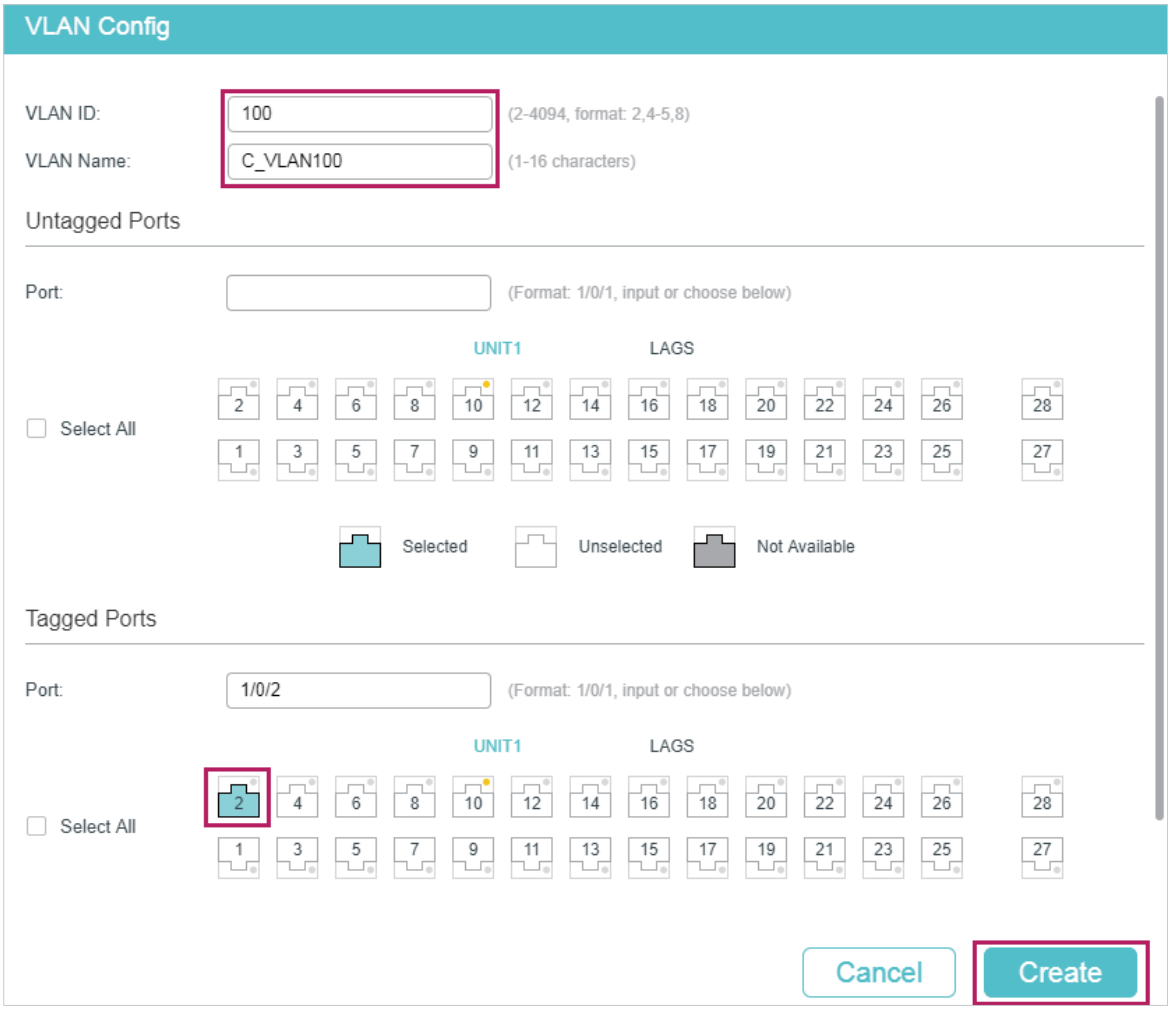


Figure 4-12 Create VLAN 200

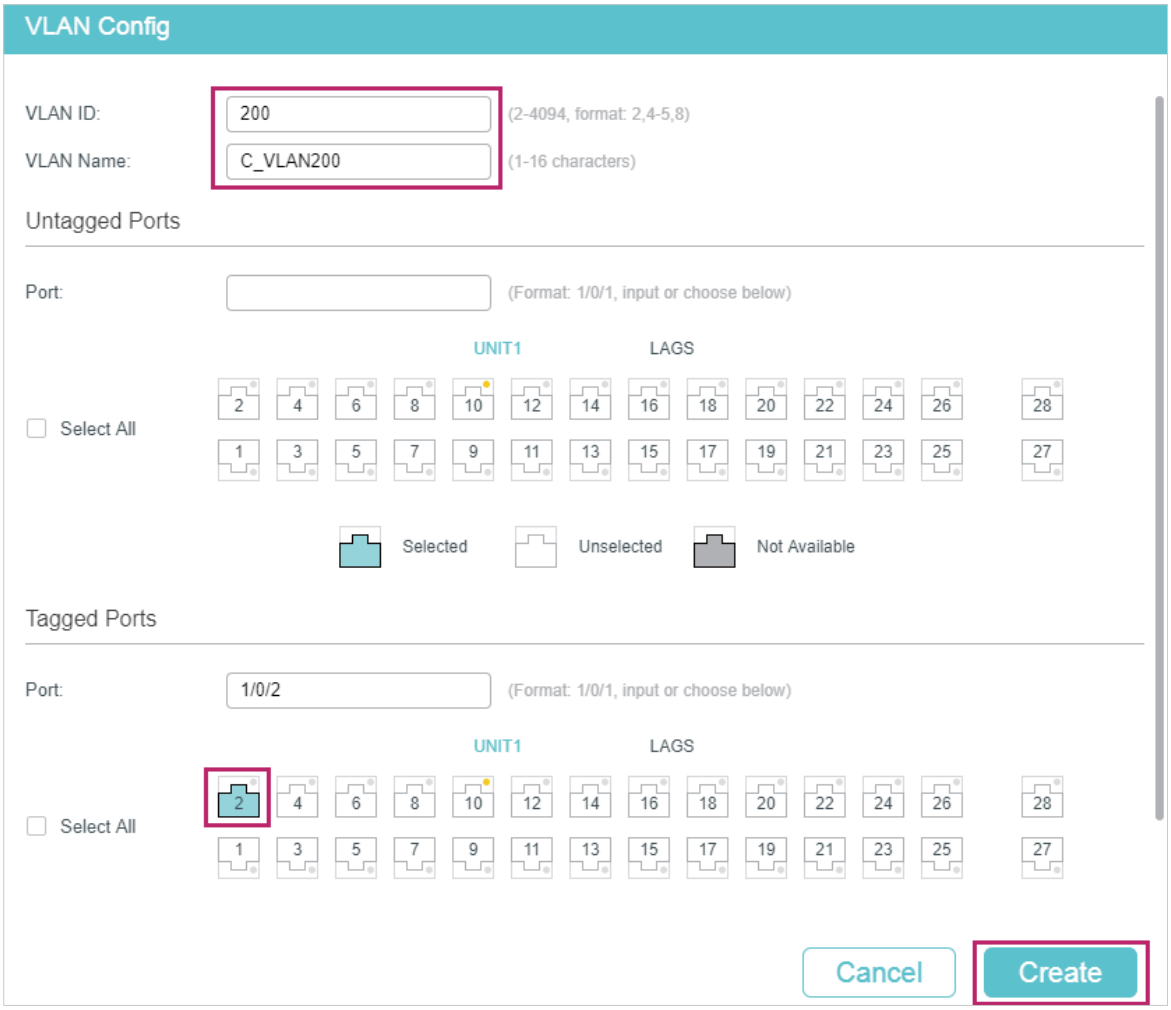


Figure 4-13 Create VLAN 1050



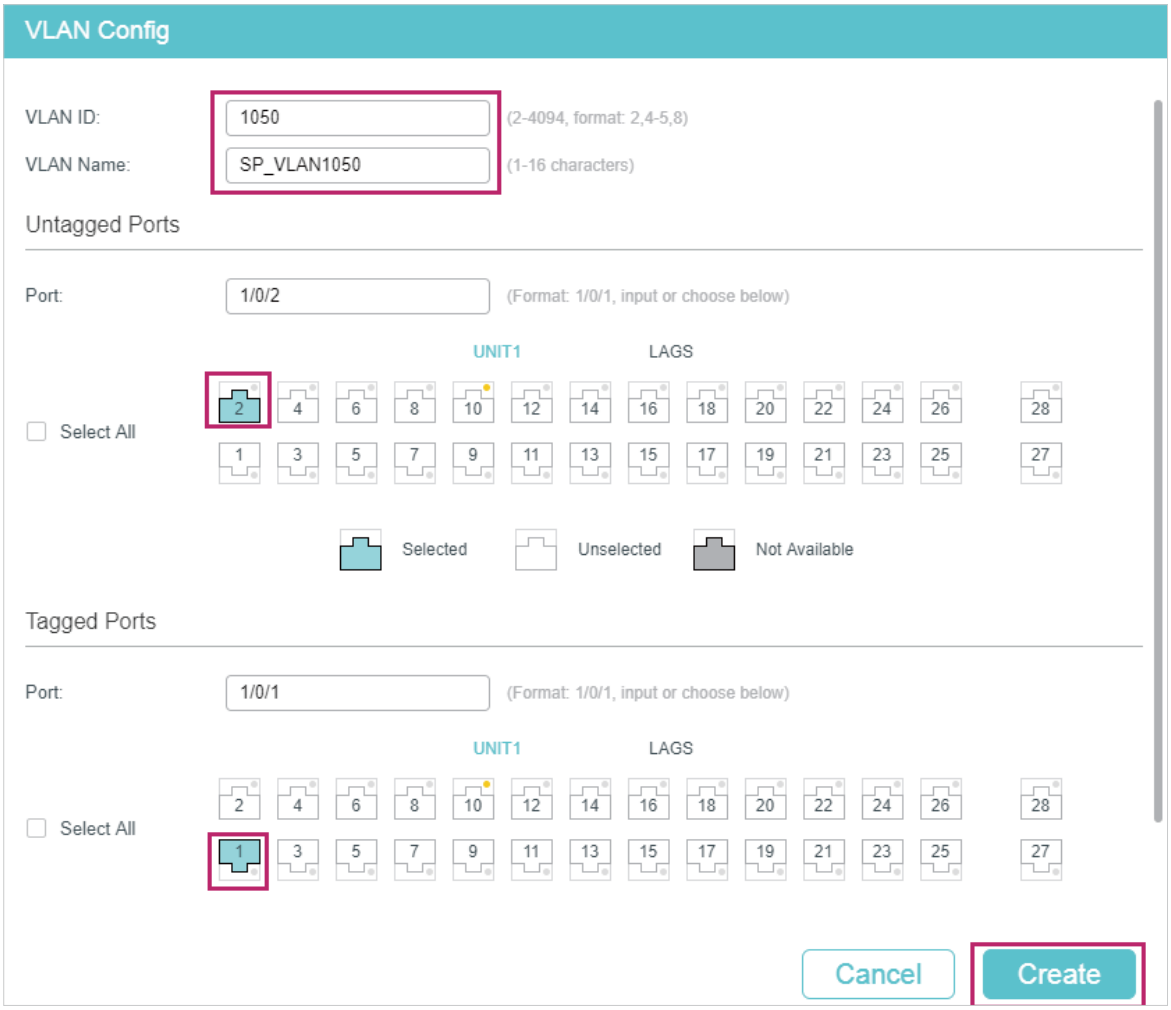


Figure 4-14 Create VLAN 1060

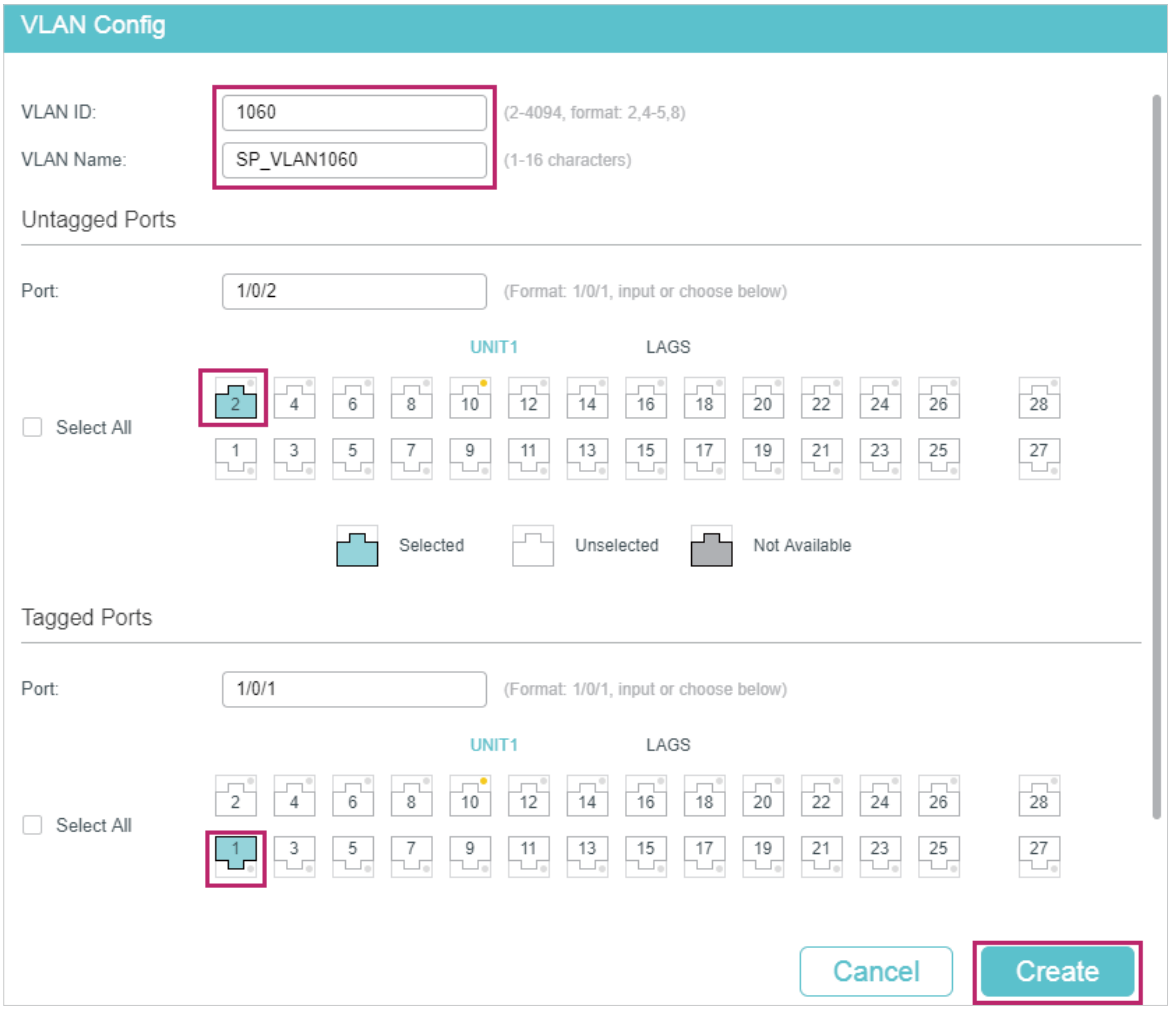


2) Go to **L2 FEATURES > VLAN > Port Config** to set the PVID as 1050 for port 1/0/2 and leave the default vaule 1 for port 1/0/1.

Figure 4-15 Configuring PVID

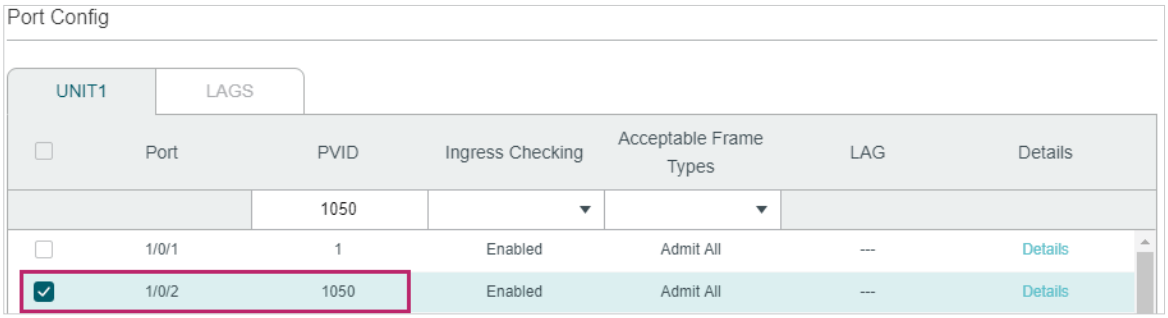

3) Go to **L2 FEATURES > VLAN > VLAN VPN > VPN Config**, enable VLAN VPN globally; set port 1/0/1 as NNI port and port /1/0/2 as UNI port. Specify the TPID of port 1/0/1 as 9100.

Figure 4-16 Enabling VLAN VPN Globally and Configuring the Ports

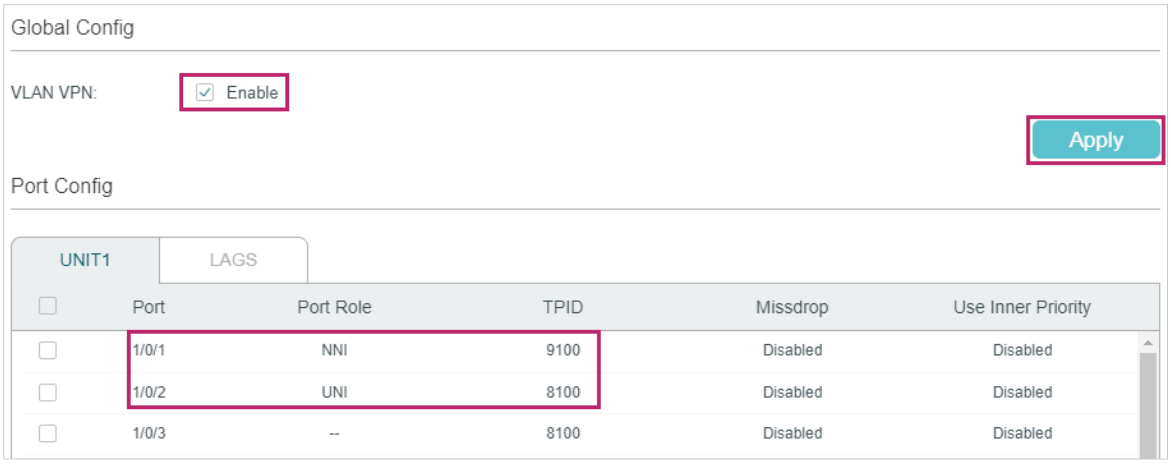

4) Go to **L2 FEATURES > VLAN > VLAN VPN > VLAN Mapping**, enable VLAN Mapping globally. Then configure VLAN mapping for the UNI port 1/0/2.

Figure 4-17 Mapping VLAN 100 to VLAN 1050


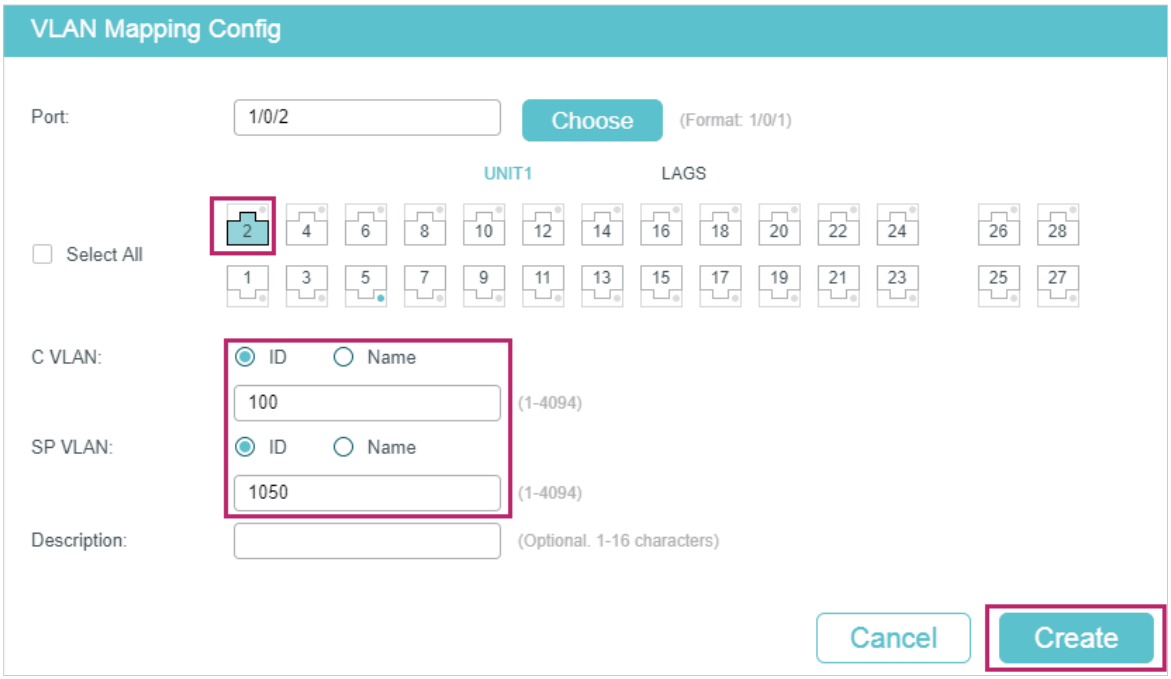


Figure 4-18 Mapping VLAN 200 to VLAN 1060

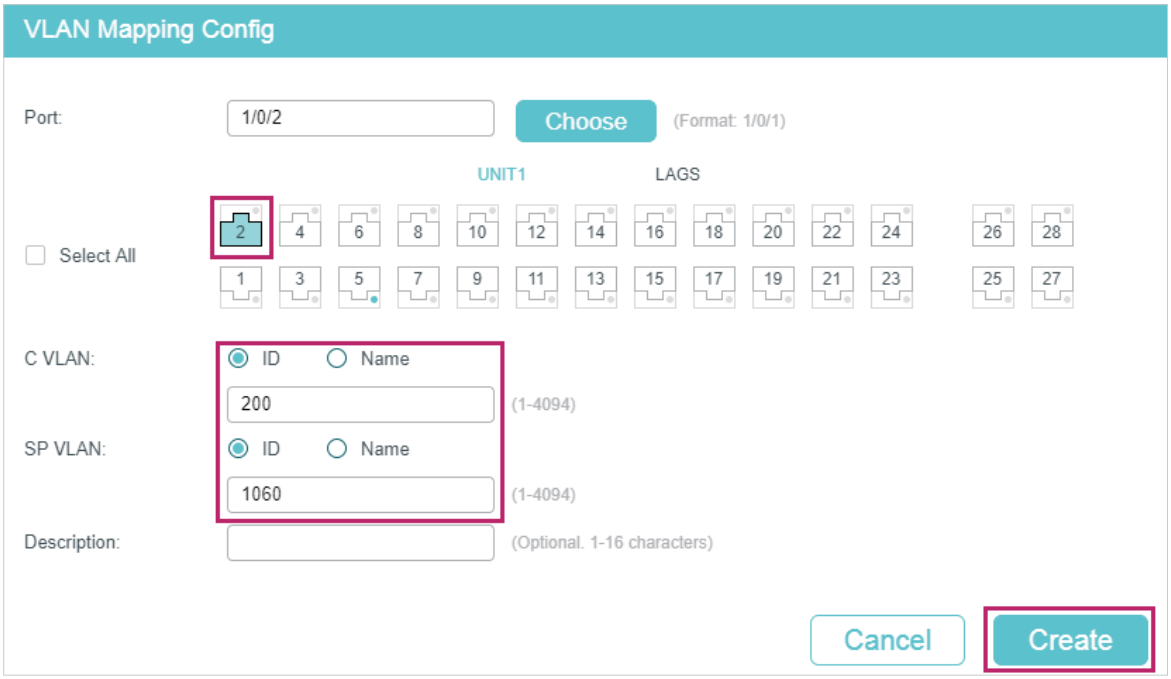

5) Click Save to save the settings.

- Configuring Switch 3:

1) Go to **L2 FEATURES > VLAN > 802.1Q VLAN** to create VLAN 100 and VLAN 200. Configure the egress rules of port 1/0/1 in VLAN 100 as Untagged; egress rules of port 1/0/2 in VLAN 200 as Untagged; egress rule of port 1/0/3 in VLAN 100 and VLAN 200 as Tagged.

Figure 4-19 Creating VLAN 100



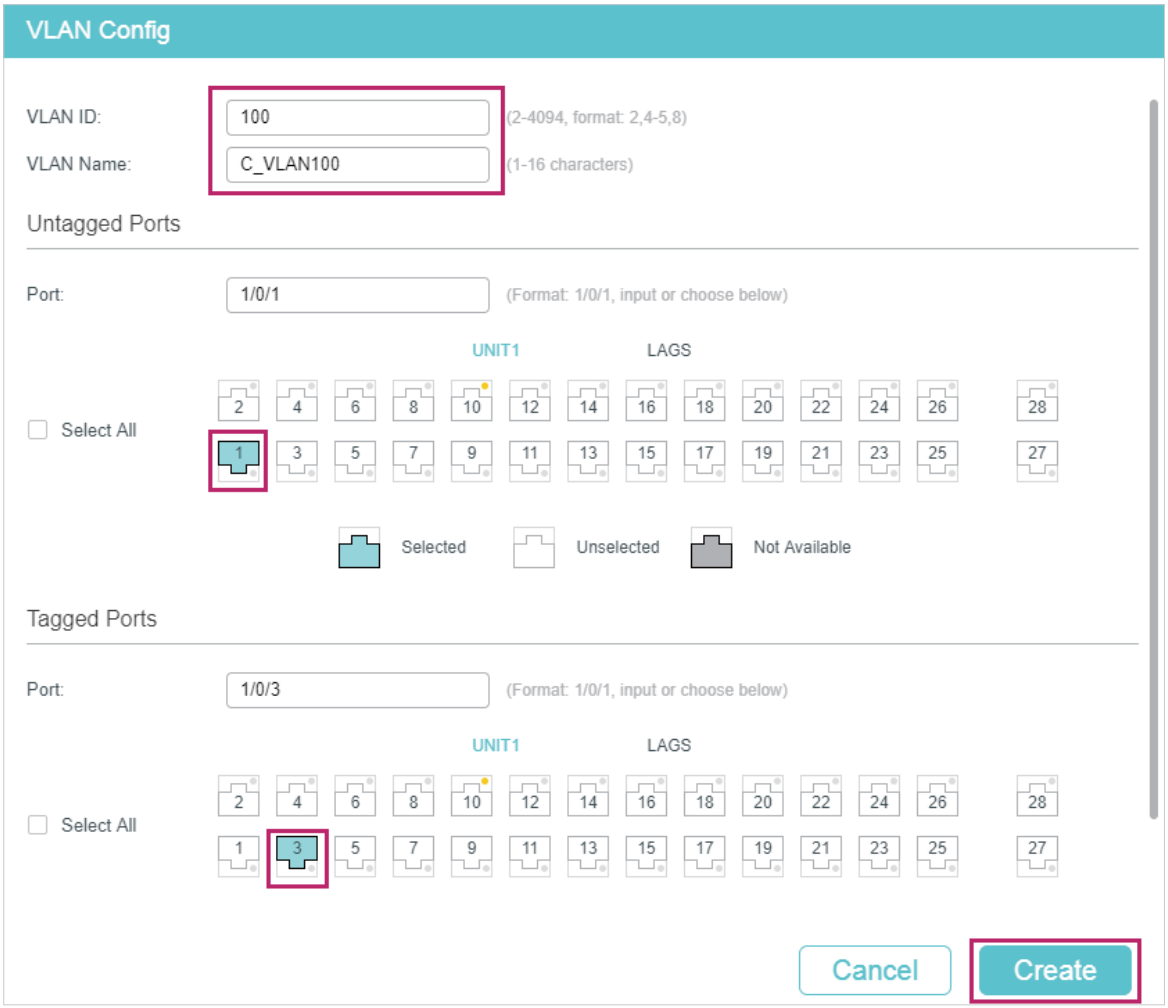


Figure 4-20 Creating VLAN 200

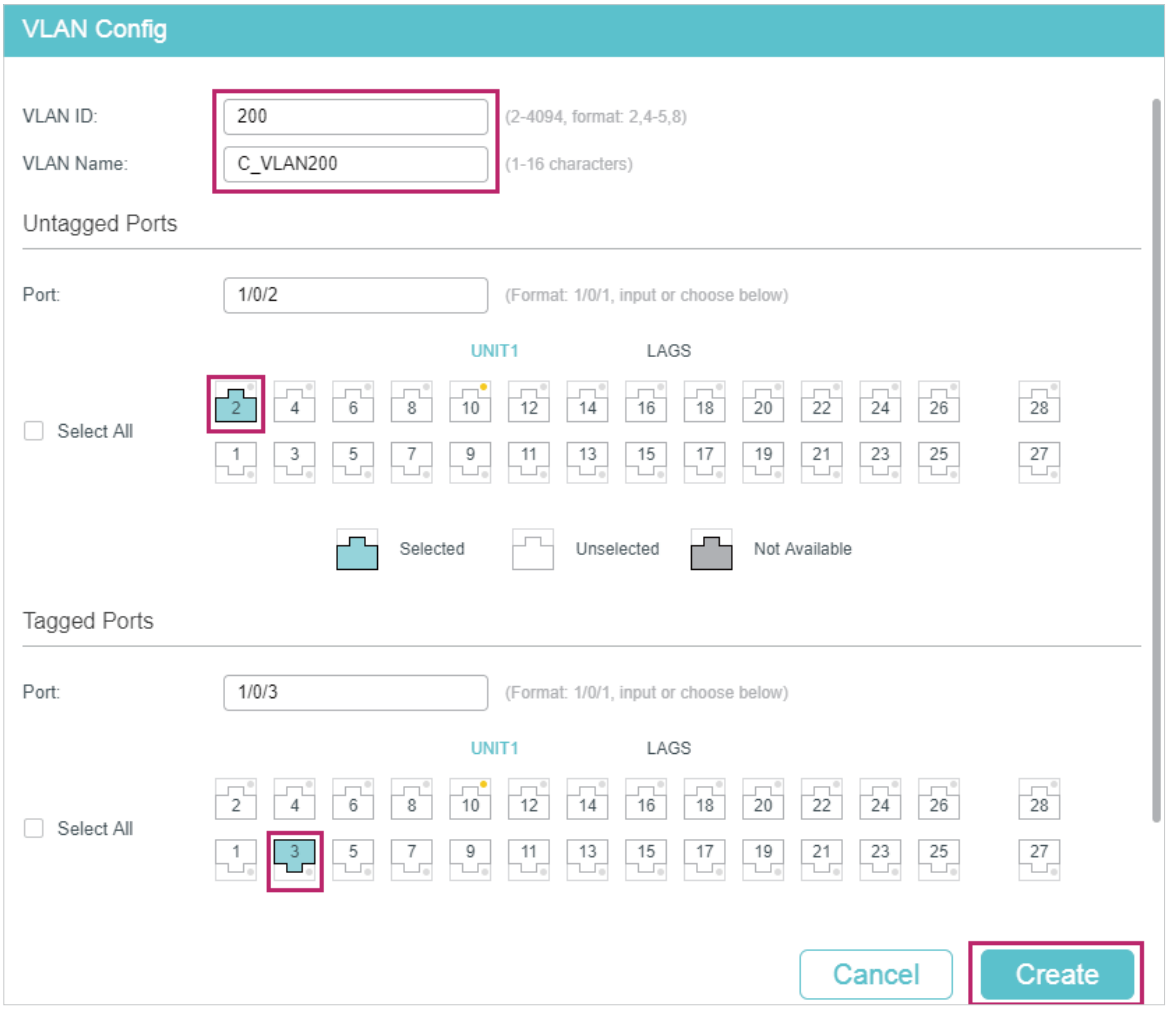

2) Go to **L2 FEATURES > VLAN > Port Config** to set the PVID as 100 for port 1/0/1 and 200 for port 1/0/2.

Figure 4-21 Configuring PVID

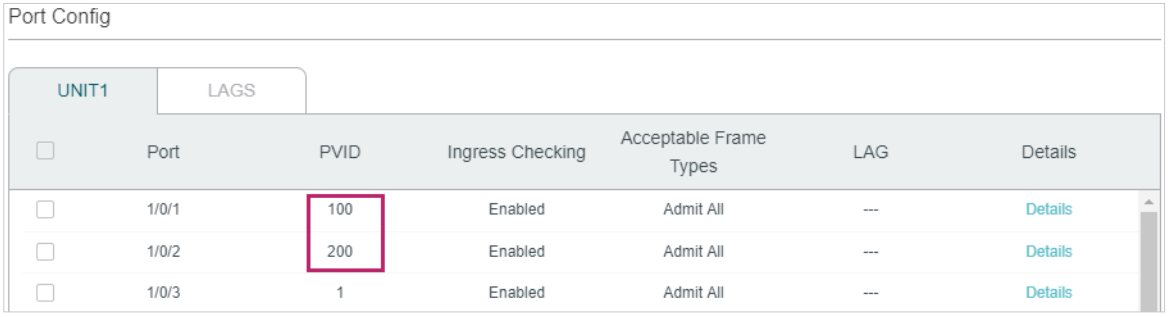

3) Click Save to save the settings.

4.2.4 Using the CLI

- Configuring Switch 1

1) Create VLAN 100, VLAN 200, VLAN 1050 and VLAN 1060.

Switch_1#configure

Switch_1(config)#vlan 1050

Switch_1(config-vlan)#name SP_VLAN1050

Switch_1(config-vlan)#exit

Switch_1(config)#vlan 1060

Switch_1(config-vlan)#name SP_VLAN1060

Switch_1(config-vlan)#exit

Switch_1(config)#vlan 100

Switch_1(config-vlan)#name C_VLAN100

Switch_1(config-vlan)#exit

Switch_1(config)#vlan 200

Switch_1(config-vlan)#name C_VLAN200

Switch_1(config-vlan)#exit

2) Add port 1/0/1 to VLAN 1050 and VLAN 1060 as tagged port, modify PVID as 1050, set the port as NNI port and specify the TPID as 9100.

Switch_1(config)#interface gigabitEthernet 1/0/1

Switch_1(config-if)#switchport general allowed vlan 1050,1060 tagged

Switch_1(config-if)#switchport pvid1050

Switch_1(config-if)#switchport dot1q-tunnel mode nni

Switch_1(config-if)#switchport dot1q-tunnel tpid 9100

Switch_1(config-if)#exit

3) Add port 1/0/2 to VLAN 1050 and VLAN 1060 as untagged port, and add it to VLAN 100 and VLAN 200 as tagged port. Modify the PVID as 1050. Set the port as the UNI port.

Switch_1(config)#interface gigabitEthernet 1/0/2

Switch_1(config-if)#switchport general allowed vlan 1050,1060 untagged

Switch_1(config-if)#switchport general allowed vlan 100,200 tagged

Switch_1(config-if)#switchport pvid 1050

Switch_1(config-if)#switchport dot1q-tunnel mode uni

Switch_1(config-if)#exit

4) Enable VLAN mapping. Map VLAN 100 to VLAN 1050 and VLAN 200 to VLAN 1060 for port 1/0/2.

Switch_1(config)#dot1q-tunnel mapping

Switch_1(config)#interface gigabitEthernet 1/0/2

Switch_1(config-if)#switchport dot1q-tunnel mapping 100 1050 mapping

Switch_1(config-if)#switchport dot1q-tunnel mapping 200 1060 mapping

Switch_1(config-if)#exit

5) Enable VLAN VPN globally

Switch_1(config)#dot1q-tunnel

Switch_1(config)#end

Switch_1#copy running-config startup-config

- Configuring Switch 3

1) Create VLAN 100 and VLAN 200.

Switch_3#configure

Switch_3(config)#vlan 100

Switch_3(config-vlan)#name C_VLAN100

Switch_3(config-vlan)#exit

Switch_3(config)#vlan 200

Switch_3(config-vlan)#name C_VLAN200

Switch_3(config-vlan)#exit

2) Add port 1/0/1 to VLAN 100 and port 1/0/2 to VLAN 200 as untagged ports; add port 1/0/3 to VLAN 100 and VLAN 200 as tagged ports. Configure the PVID as 100 for port 1/0/1 and 200 for port 1/0/2.

Switch_3(config)#interface gigabitEthernet 1/0/1

Switch_3(config-if)#switchport general allowed vlan 100 untagged

Switch_3(config-if)#switchport pvid 100

Switch_3(config-if)#exit

Switch_3(config)#interface gigabitEthernet 1/0/2

Switch_3(config-if)#switchport general allowed vlan 200 untagged

Switch_3(config-if)#switchport pvid 200

Switch_3(config-if)#exit

Switch_3(config)#interface gigabitEthernet 1/0/3

Switch_3(config-if)#switchport general allowed vlan 100,200 tagged

Switch_3(config-if)#end

Switch_3#copy running-config startup-config

5 Appendix: Default Parameters

Default settings of VLAN VPN are listed in the following table.

Table 5-1 Default Settings of VLAN VPN

Parameter	Default Setting
Global VLAN VPN	Disabled
Port Role	None
Global TPID	0x8100
Missdrop	Disabled
Use Inner Priority	Disabled
VLAN Mapping	Disabled

Part 11

Configuring GVRP

CHAPTERS


1. Overview
2. GVRP Configuration
3. Configuration Example
4. Appendix: Default Parameters

1 Overview

GVRP (GARP VLAN Registration Protocol) is a GARP (Generic Attribute Registration Protocol) application that allows registration and deregistration of VLAN attribute values and dynamic VLAN creation.


Without GVRP operating, configuring the same VLAN on a network would require manual configuration on each device. As shown in Figure 1-1, Switch A, B and C are connected through trunk ports. VLAN 10 is configured on Switch A, and VLAN 1 is configured on Switch B and Switch C. Switch C can receive messages sent from Switch A in VLAN 10 only when the network administrator has manually created VLAN 10 on Switch B and Switch C.

Figure 1-1 VLAN Topology

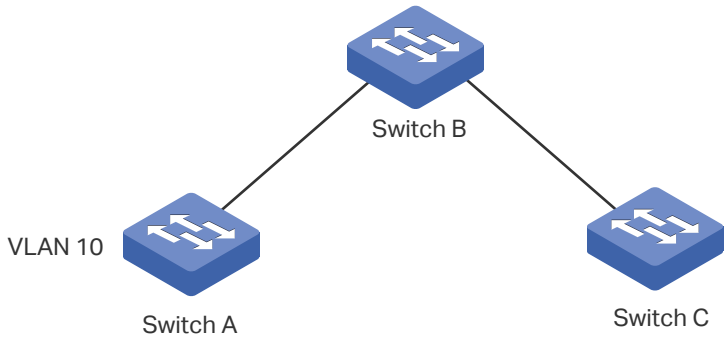

The configuration may seem easy in this situation. However, for a larger or more complex network, such manual configuration would be time-costing and fallible. GVRP can be used to implement dynamic VLAN configuration. With GVRP, the switch can exchange VLAN configuration information with the adjacent GVRP switches and dynamically create and manage the VLANs. This reduces VLAN configuration workload and ensures correct VLAN configuration.

Figure 1-2 GVRP Topology

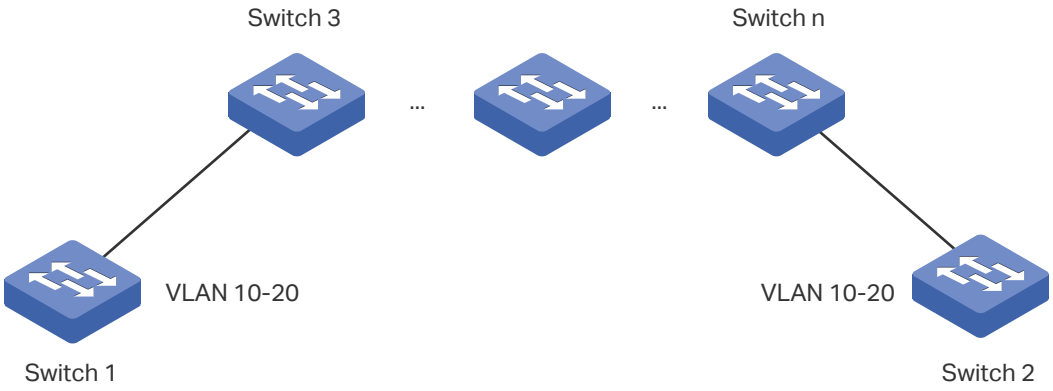

2 GVRP Configuration

To complete GVRP configuration, follow these steps:

1) Create a VLAN.
2) Enable GVRP globally.
3) Enable GVRP on each port and configure the corresponding parameters.


Configuration Guidelines

To dynamically create a VLAN on all ports in a network link, you must configure the same static VLAN on both ends of the link.

We call manually configured 802.1Q VLAN as static VLAN and VLAN created through GVRP as dynamic VLAN. Ports in a static VLAN can initiate the sending of GVRP registration message to other ports. And a port registers VLANs only when it receives GVRP messages. As the messages can only be sent from one GVRP participant to another, two-way registration is required to configure a VLAN on all ports in a link. To implement two-way registration, you need to manually configure the same static VLAN on both ends of the link.

As shown in the figure below, VLAN registration from Switch A to Switch C adds Port 2 to VLAN 2. And VLAN registration from Switch C to Switch A adds Port 3 to VLAN 2.

Figure 2-1

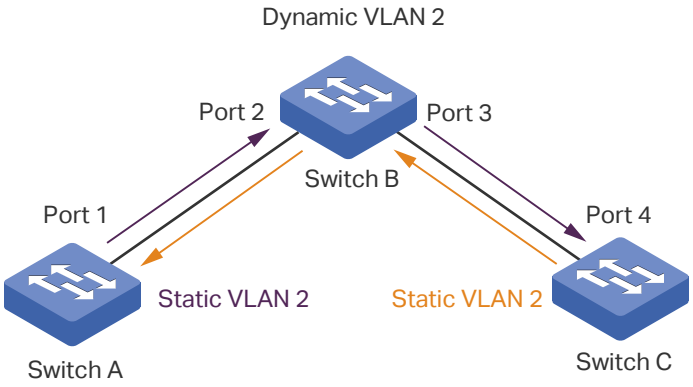


Similarly, if you want to delete a VLAN from the link, two-way deregistration is required. And you need to manually delete the static VALN on both ends of the link.

2.1 Using the GUI

Choose the menu **L2 FEATURES > VLAN > GVRP > GVRP Config** to load the following page.

Figure 2-1 GVRP Config

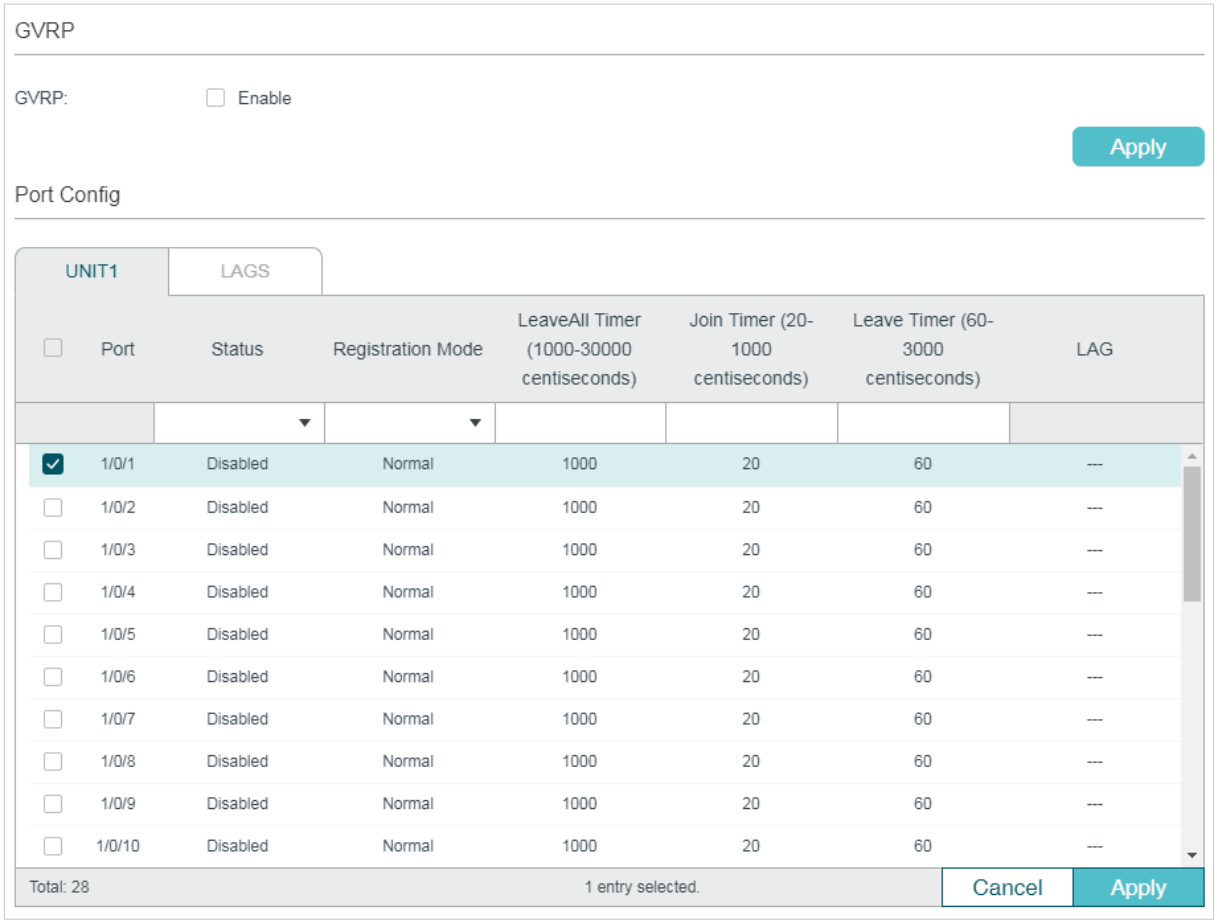

Follow these steps to configure GVRP:

1) In the **GVRP** section, enable GVRP globally, then click **Apply**.
2) In the **Port Config** section, select one or more ports, set the status as Enable and configure the related parameters according to your needs.

Port	Select the desired port for GVRP configuration. It is multi-optional.
Status	Enable or disable GVRP on the port. By default, it is disabled.
Registration Mode	Select the GVRP registration mode for the port. **Normal**: In this mode, the port can dynamically register and deregister VLANs, and transmit both dynamic and static VLAN registration information. **Fixed**: In this mode, the port is unable to dynamically register and deregister VLANs, and can transmit only the static VLAN registration information. **Forbidden**: In this mode, the port is unable to dynamically register and deregister VLANs, and can transmit only information of VLAN 1.

LeaveAll Timer (centisecond)	When a GARP participant is enabled, the LeaveAll timer will be started. When the LeaveAll timer expires, the GARP participant will send LeaveAll messages to request other GARP participants to re-register all its attributes. After that, the participant restarts the LeaveAll timer. The timer ranges from 1000 to 30000 centiseconds. The default value is 1000 centiseconds.
Join Timer (centisecond)	Join timer controls the sending of Join messages. A GVRP participant starts the Join timer after sending the first Join message. If the participant does not receive any response, it will send the second Join message when the Join timer expires to ensures that the Join message can be sent to other participants. The timer ranges from 20 to 1000 centiseconds. The default value is 20 centiseconds.
Leave Timer (centisecond)	The Leave timer controls attribute deregistration. A participant will send a Leave message if it wants other participants to deregister some of its attributes. The participant receiving the message starts the Leave timer. If the participant does not receive any Join message of the corresponding attribute before the Leave timer expires, the participant deregisters the attribute. The timer ranges from 60 to 3000 centiseconds. The default value is 60 centiseconds.
LAG	Displays the LAG the port is in.

3) Click **Apply**.

Note:

- The member port of an LAG follows the configuration of the LAG and not its own. The configurations of the port can take effect only after it leaves the LAG.
- The egress rule of the ports dynamically added to the VLAN is tagged.
- The egress rule of the fixed port should be tagged.
- When setting the timer values, make sure the values are within the required range. The configuration value for LeaveAll should be greater than or equal to ten times the Leave value. The value for Leave should be greater than or equal to two times the Join value.

2.2 Using the CLI

Step 1	**configure** Enter global configuration mode.
Step 2	**gvrp** Enable GVRP globally.

Step 3	**interface {fastEthernet** *port* **| range fastEthernet** *port-list* **| gigabitEthernet** *port* **| range gigabitEthernet** *port-list* **| ten-gigabitEthernet** *port* **| range ten-gigabitEthernet** *port-list* **| port-channel** *port-channel-id* **| range port-channel** *port-channel-list***}** Enter interface configuration mode.
Step 4	**gvrp** Enable GVRP on the port.
Step 5	**gvrp registration** { normal | fixed | forbidden } Configure the GVRP registration mode for the port. By default, it is normal. normal: In this mode, the port can dynamically register and deregister VLANs, and transmit both dynamic and static VLAN registration information. fixed: n this mode, the port is unable to dynamically register and deregister VLANs, and can transmit only the static VLAN registration information. forbidden: In this mode, the port is unable to dynamically register and deregister VLANs, and can transmit only information of VLAN 1.
Step 6	**gvrp timer** { leaveall | join | leave } *value* Set the GARP timers according to your needs. leaveall: When a GARP participant is enabled, the LeaveAll timer will be started. When the LeaveAll timer expires, the GARP participant will send LeaveAll messages to request other GARP participants to re-register all its attributes. After that, the participant restarts the LeaveAll timer. join: Join timer controls the sending of Join messages. A GVRP participant starts the Join timer after sending the first Join message. If the participant does not receive any response, it will send the second Join message when the Join timer expires to ensures that the Join message can be sent to other participants. leave: The Leave timer controls attribute deregistration. A participant will send a Leave message if it wants other participants to deregister some of its attributes. The participant receiving the message starts the Leave timer. If the participant does not receive any Join message of the corresponding attribute before the Leave timer expires, the participant deregisters the attribute. *value*: Set a value for the timer. For LeaveAll timer, the valid values are from 1000 to 30000 centiseconds and the default value is 1000 centiseconds. For Join timer, the valid values are from 20 to 1000 centiseconds and the default value is 20 centiseconds. For Leave timer, the valid values are from 60 to 3000 centiseconds and the default value is 60 centiseconds.
Step 7	**show gvrp global** Verify the global configurations of GVRP.
Step 8	**show gvrp interface [fastEthernet** *port* **| gigabitEthernet** *port* **| ten-gigabitEthernet** *port* **| port-channel** *port-channel-id* **]** Verify the GVRP configuration of the specified port or LAG.

Step 9	**end** Return to privileged EXEC mode.
Step 10	**copy running-config startup-config** Save the settings in the configuration file.

Note:

- The member port of an LAG follows the configuration of the LAG and not its own. The configurations of the port can take effect only after it leaves the LAG.
- The egress rule of the ports dynamically added to the VLAN is tagged.
- The egress rule of the fixed port should be tagged.
- When setting the timer values, make sure the values are within the required range. The value for LeaveAll should be greater than or equal to ten times the Leave value. The value for Leave should be greater than or equal to two times the Join value.

The following example shows how to enable GVRP globally and on port 1/0/1, configure the GVRP registration mode as fixed and keep the values of timers as default:

Switch#configure

Switch(config)#gvrp

Switch(config)#interface gigabitEthernet 1/0/1

Switch(config-if)#gvrp

Switch(config-if)#gvrp registration fixed

Switch(config-if)#show gvrp global

GVRP Global Status

Enabled

Switch(config-if)# show gvrp interface gigabitEthernet 1/0/1

Port	Status	Reg-Mode	LeaveAll	JoinIn	Leave	LAG
----	------	--------	--------	------	-----	---
Gi1/0/1	Enabled	Fixed	1000	20	60	N/A

Switch(config-if)#end


Switch#copy running-config startup-config

3 Configuration Example

3.1 Network Requirements

Department A and Department B of a company are connected using switches. Offices of one department are distributed on different floors. As shown in Figure 3-1, the network topology is complicated. Configuration of the same VLAN on different switches is required so that computers in the same department can communicate with each other.

Figure 3-1 Network Topology

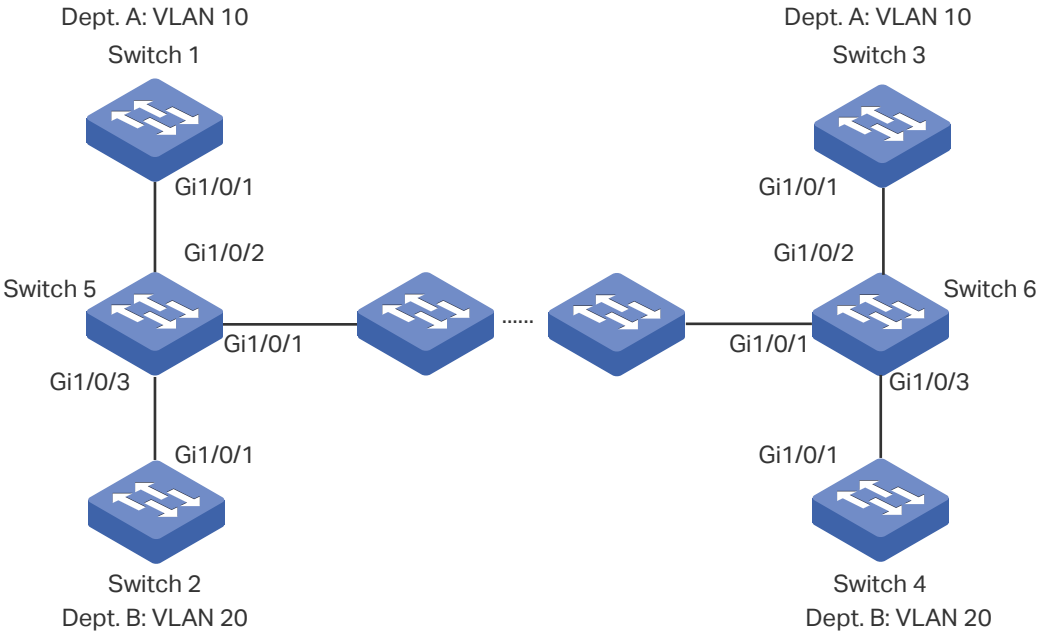

3.2 Configuration Scheme

To reduce manual configuration and maintenance workload, GVRP can be enabled to implement dynamic VLAN registration and update on the switches.

When configuring GVRP, please note the following:

- The two departments are in separate VLANs. To make sure the switches only dynamically create VLAN of their own department, you need to set the registration mode for ports on Switch 1 to Switch 4 as Fixed to prevents dynamic registration and deregistration of VLANs and allow the port to transmit only the static VLAN registration information.
- To configure dynamic VLAN creation on other switches, set the registration mode of the corresponding ports as Normal to allow dynamic registration and deregistration of VLANs.

Demonstrated with T2600G-28TS, the following sections provide configuration procedure in two ways: using the GUI and using the CLI.

3.3 Using the GUI


GVRP configuration for Switch 3 is the same as Switch 1, and Switch 4 the same as Switch 2. Other switches share similar configurations.

The following configuration procedures take Switch 1, Switch 2 and Switch 5 as example.

- Configurations for Switch 1


1) Choose the menu **L2 FEATURES > VLAN > 802.1Q VLAN > VLAN Config** and click Add to load the following page. Create VLAN 10 and add tagged port 1/0/1 to it. Click **Create**.

Figure 3-2 Create VLAN 10

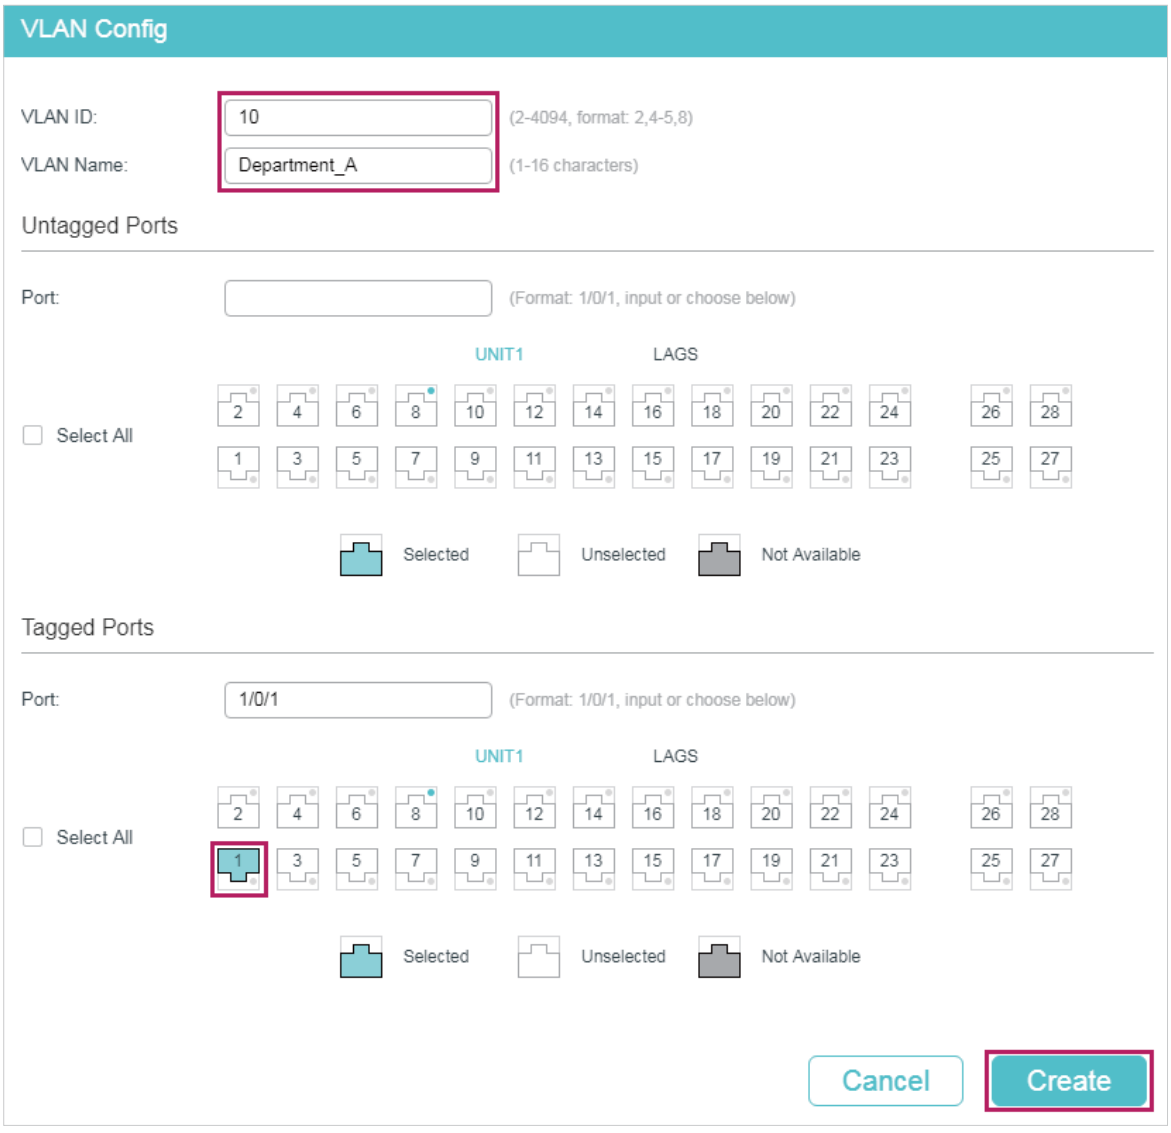

2) Choose the menu **L2 FEATURES > VLAN > GVRP** to load the following page. Enable GVRP globally, then click **Apply**. Select port 1/0/1, set Status as Enable, and set Registration Mode as Fixed. Keep the values of the timers as default. Click **Apply**.

Figure 3-3 GVRP Configuration

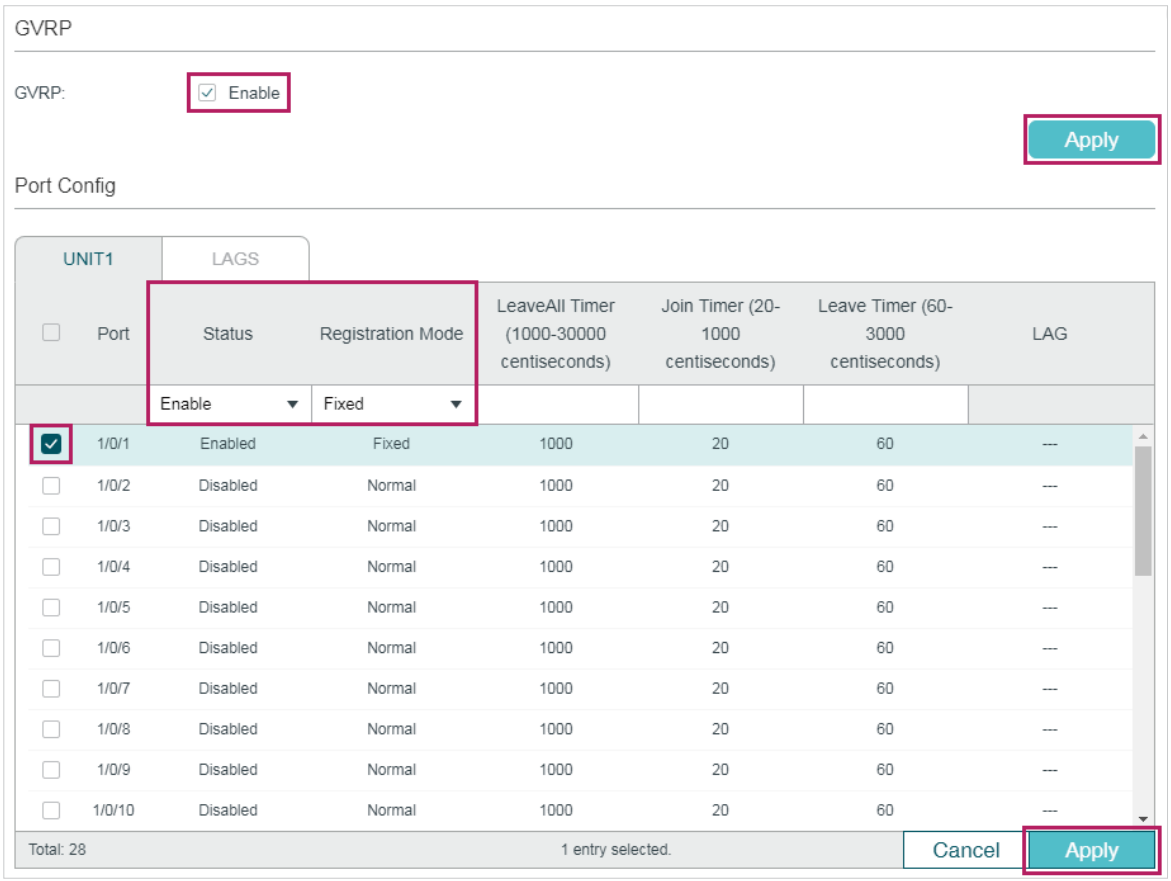


3) Click Save to save the settings.

Configurations for Switch 2


1) Choose the menu **L2 FEATURES > VLAN > 802.1Q VLAN > VLAN Config** and click Add to load the following page. Create VLAN 20 and add tagged port 1/0/1 to it. Click **Create**.

Figure 3-4 Create VLAN 20

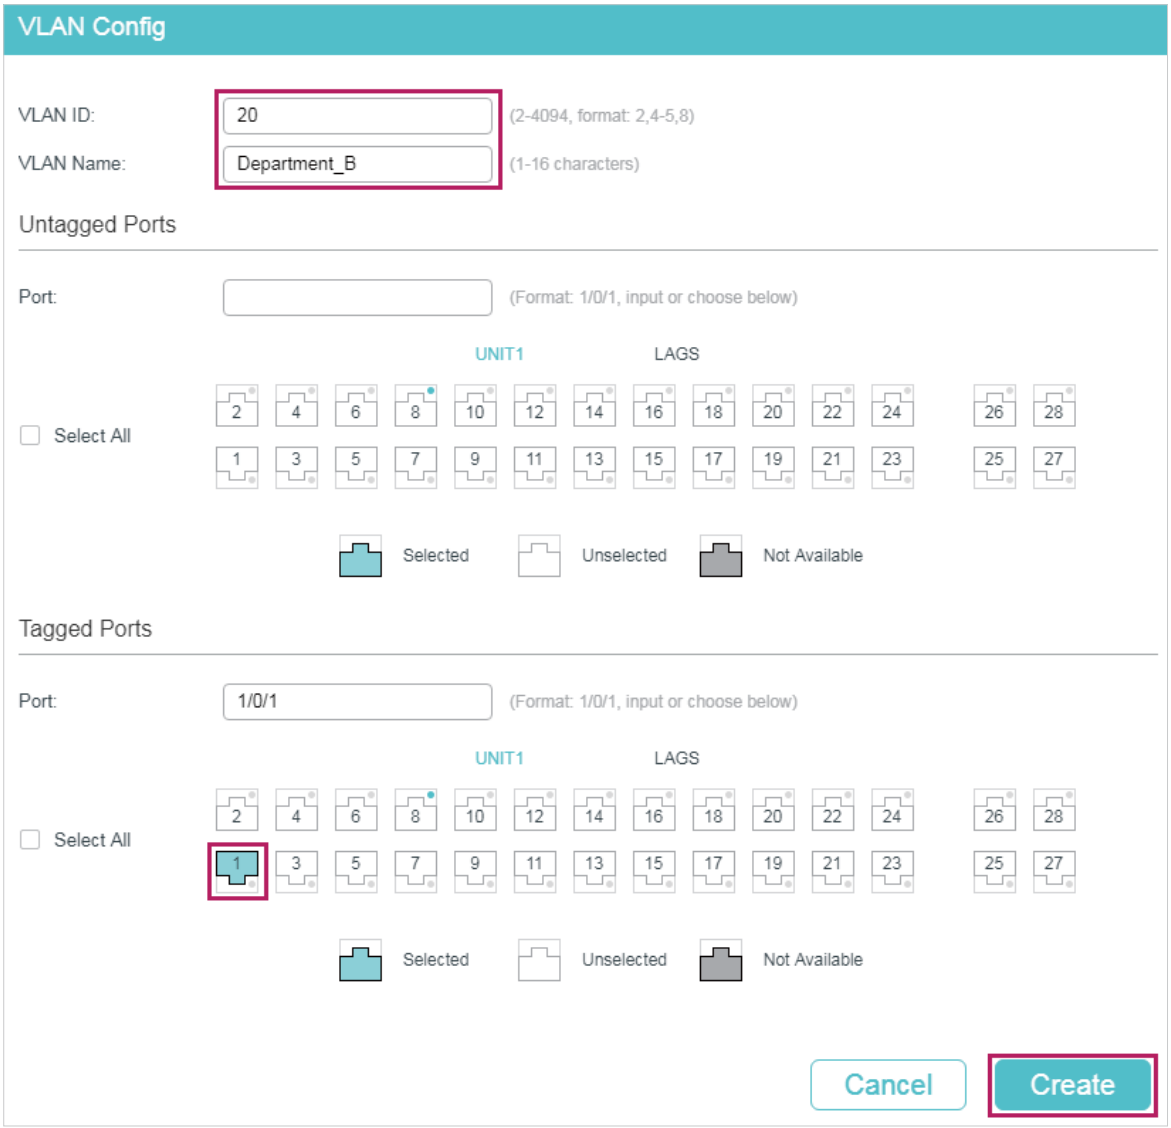

2) Choose the menu **L2 FEATURES > VLAN > GVRP** to load the following page. Enable GVRP globally, then click **Apply**. Select port 1/0/1, set Status as Enable, and set Registration Mode as Fixed. Keep the values of the timers as default. Click **Apply**.

Figure 3-5 GVRP Configuration

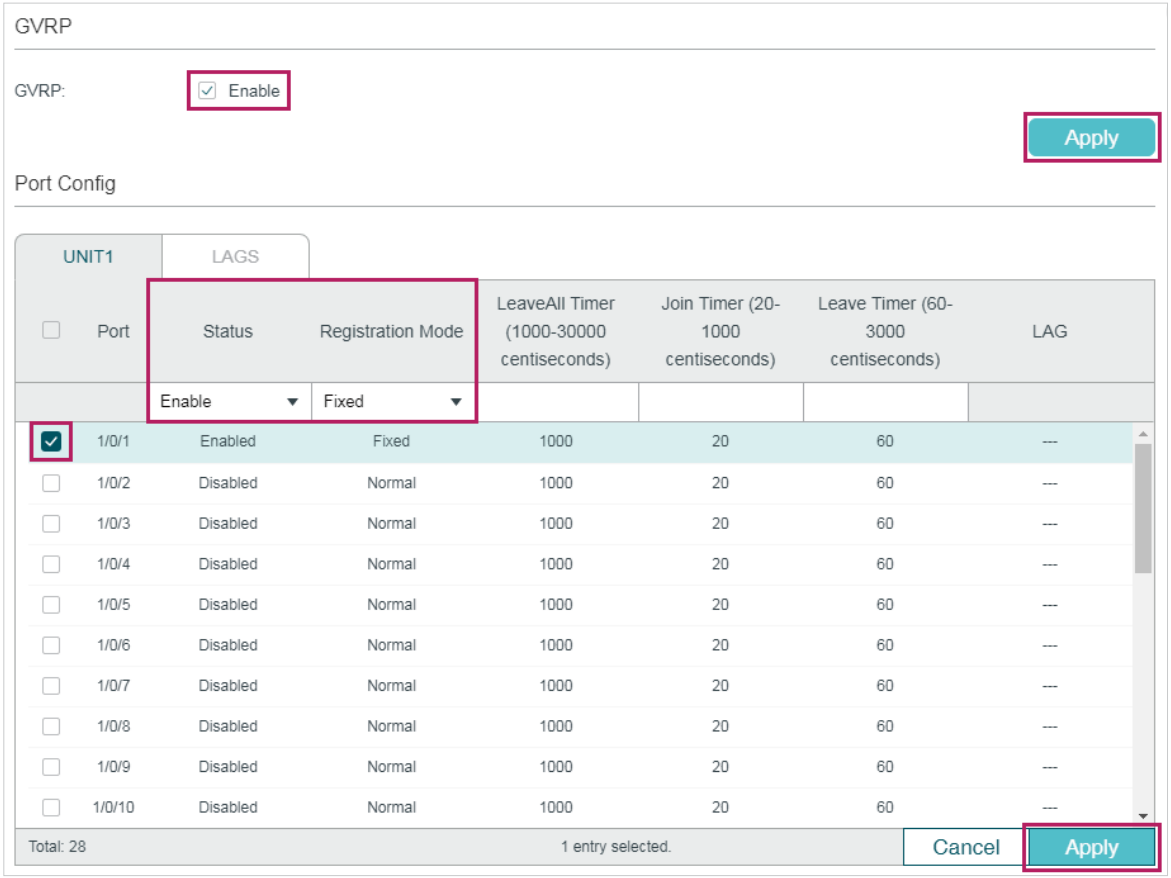


3) Click Save to save the settings.

Configurations for Switch 5

1) Choose the menu **L2 FEATURES > VLAN > GVRP** to load the following page. Enable GVRP globally, then click **Apply**. Select ports 1/0/1-3, set Status as Enable, and keep the Registration Mode and the values of the timers as default. Click **Apply**.

Figure 3-6 GVRP Configuration

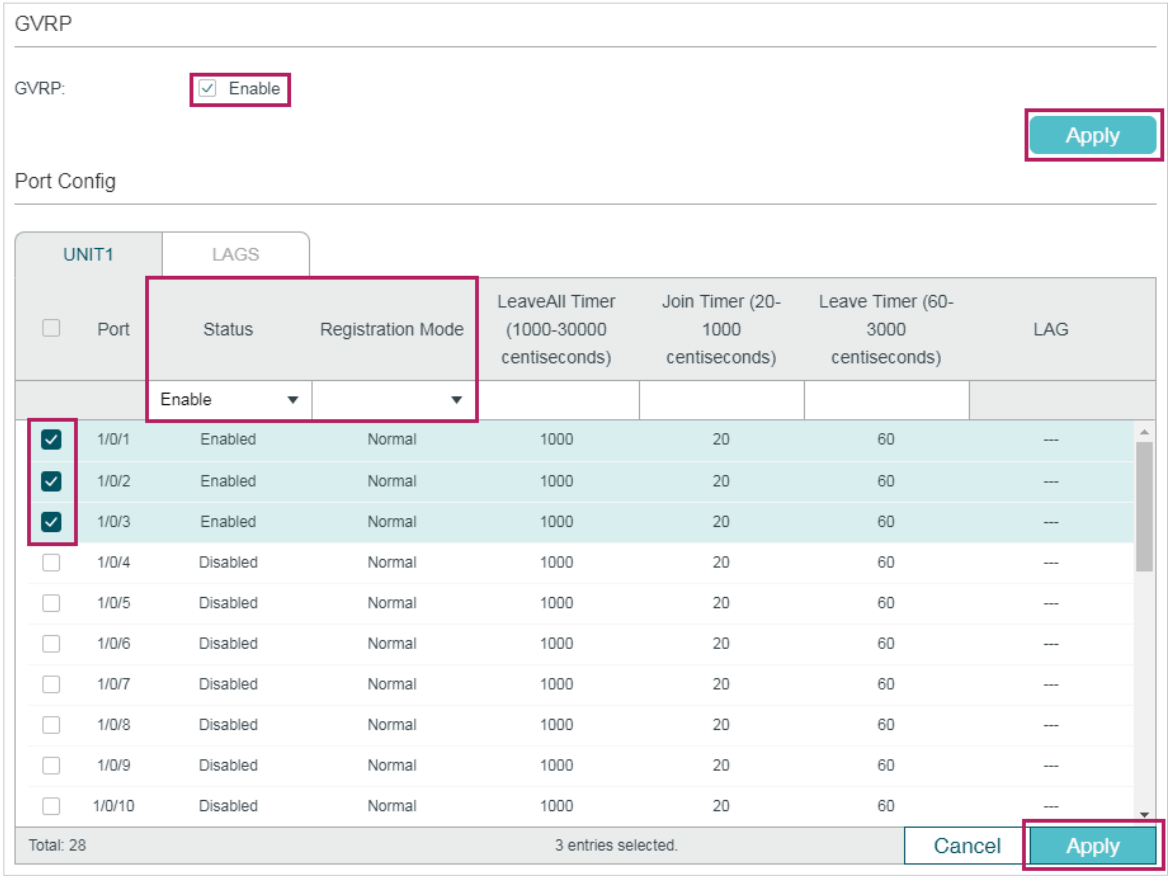

2) Click Save to save the settings.

3.4 Using the CLI

GVRP configuration for Switch 3 is the same as Switch 1, and Switch 4 the same as Switch 2. Other switches share similar configurations.

The following configuration procedures take Switch 1, Switch 2 and Switch 5 as example.

- Configurations for Switch 1

1) Enable GVRP globally.

```
Switch_1#configure
Switch_1(config)#gvrp
```

2) Create VLAN 10.

```
Switch_1(config)#vlan 10
Switch_1(config-vlan)#name Department A
Switch_1(config-vlan)#exit
```

3) Add tagged port 1/0/1 to VLAN 10. Enable GVRP on port and set the registration mode as Fixed.

Switch_1(config)#interface gigabitEthernet 1/0/1

Switch_1(config-if)#switchport general allowed vlan 10 tagged

Switch_1(config-if)#gvrp

Switch_1(config-if)#gvrp registration fixed

Switch_1(config-if)#end

Switch_1#copy running-config startup-config

- Configurations for Switch 2

1) Enable GVRP globally.

Switch_2#configure

Switch_2(config)#gvrp

2) Create VLAN 20.

Switch_2(config)#vlan 20

Switch_2(config-vlan)#name Department B

Switch_2(config-vlan)#exit

3) Add tagged port 1/0/1 to VLAN 20. Enable GVRP on the port and set the registration mode as Fixed.

Switch_2(config)#interface gigabitEthernet 1/0/1

Switch_2(config-if)#switchport general allowed vlan 20 tagged

Switch_2(config-if)#gvrp

Switch_2(config-if)#gvrp registration fixed

Switch_2(config-if)#end

Switch_2#copy running-config startup-config

- Configurations for Switch 5

1) Enable GVRP globally.

Switch_5#configure

Switch_5(config)#gvrp

2) Enable GVRP on ports 1/0/1-3.

Switch_5(config)#interface range gigabitEthernet 1/0/1-3

Switch_5(config-if-range)#gvrp

Switch_5(config-if-range)#end

Switch_5#copy running-config startup-config

Verify the Configuration

- Switch 1

  Verify the global GVRP configuration:

  Switch_1#show gvrp global

  GVRP Global Status

  Enabled

  Verify GVRP configuration for port 1/0/1:

  Switch_1#show gvrp interface

Port	Status	Reg-Mode	LeaveAll	JoinIn	Leave	LAG
Gi1/0/1	Enabled	Fixed	1000	20	60	N/A
Gi1/0/2	Disabled	Normal	1000	20	60	N/A

  ...

- Switch 2

  Verify the global GVRP configuration:

  Switch_2#show gvrp global

  GVRP Global Status

  Enabled

  Verify GVRP configuration for port 1/0/1:

  Switch_2#show gvrp interface

Port	Status	Reg-Mode	LeaveAll	JoinIn	Leave	LAG
Gi1/0/1	Enabled	Fixed	1000	20	60	N/A

Gi1/0/2 Disabled Normal 1000 20 60 N/A

...

- Switch 5

  Verify global GVRP configuration:

  GVRP Global Status

  Enabled

  Verify GVRP configuration for ports 1/0/1-3:

  Switch_5#show gvrp interface

Port	Status	Reg-Mode	LeaveAll	JoinIn	Leave	LAG
Gi1/0/1	Enabled	Normal	1000	20	60	N/A
Gi1/0/2	Enabled	Normal	1000	20	60	N/A
Gi1/0/3	Enabled	Normal	1000	20	60	N/A
Gi1/0/4	Disabled	Normal	1000	20	60	N/A

...

4 Appendix: Default Parameters

Default settings of GVRP are listed in the following tables.

Table 4-1 Default Settings of GVRP

Parameter	Default Setting
Global Config	
GVRP	Disabled
Port Config	
Status	Disabled
Registration Mode	Normal
LeaveAll Timer	1000 centiseconds
Join Timer	20 centiseconds
Leave Timer	60 centiseconds

Part 12

Configuring Private VLAN

CHAPTERS

1. Overview
2. Private VLAN Configurations
3. Configuration Example
4. Appendix: Default Parameters

Note:

T2600G-18TS does not support Private VLAN.


1 Overview

Common large networks such as ISP networks generally isolate users by VLANs. However, with the increasing number of users, upper-layer devices have to create large amount of VLANs to manage all the users. According to IEEE 802.1Q protocol, each upper-layer device can create no more than 4094 VLANs, which means upper-layer devices in backbone networks will face shortage of VLANs. By creating primary VLAN and secondary VLAN, private VLAN is an effective solution to this problem.

Based on 802.1Q VLAN, private VLAN pairs a secondary VLAN with a primary VLAN. A primary VLAN can pair with more than one secondary VLANs to compose several private VLANs. In a private VLAN, Layer 2 isolation can be achieved between end users with secondary VLANs, while upper-layer devices only need to recognize primary VLANs, which solves the problem of VLAN shortage. Meanwhile, private VLAN resolves the conflicts triggered when users' need of VLANs is different from what the ISP can provide.


The network models of traditional VLAN and private VLAN are shown in Figure 1-1 and Figure 1-2 respectively. In the network model of traditional VLAN, isolation between users is achieved by creating VLAN2, VLAN3 and VLAN4. In this case, the upper-layer device, Switch A, needs to recognize 3 VLANs including VLAN2, VLAN3 and VLAN4.

Figure 1-1 Topology of Traditional VLAN

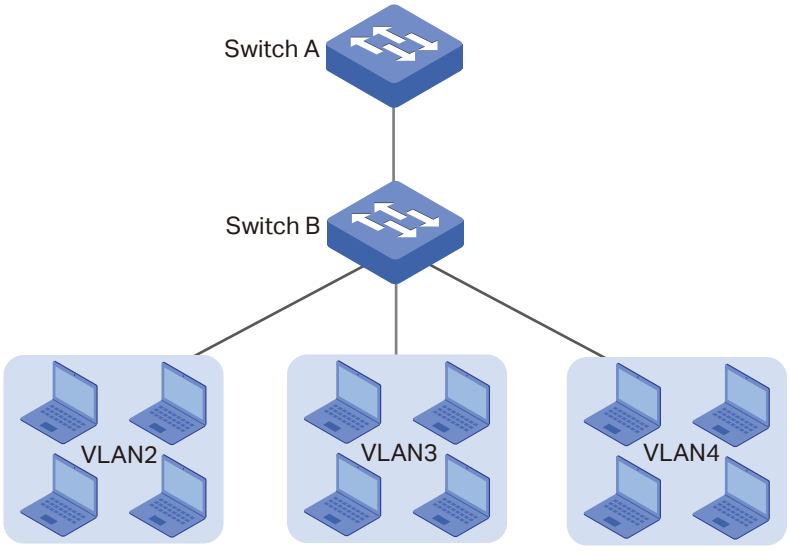

If private VLAN is configured on Switch B, Switch A only needs to recognize primary VLAN, VLAN5; and end users can be isolated by secondary VLANs, VLAN2, VLAN3 and VLAN4, saving VLAN resources for Switch A.

Figure 1-2 Topology of Private VLAN

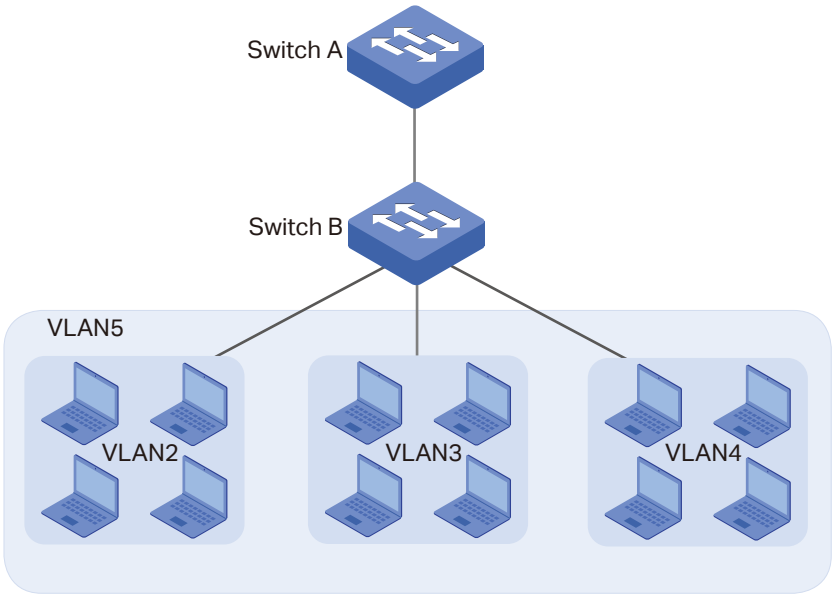

2 Private VLAN Configurations


2.1 Using the GUI

Note:

If you need to create a private VLAN with existing VLANs, delete all member ports of the existing VLANs before creating the private VLAN.

Choose the menu **L2 FEATURES > VLAN** > **Private VLAN** and click Add to load the following page.

Figure 2-1 Configuring Private VLAN

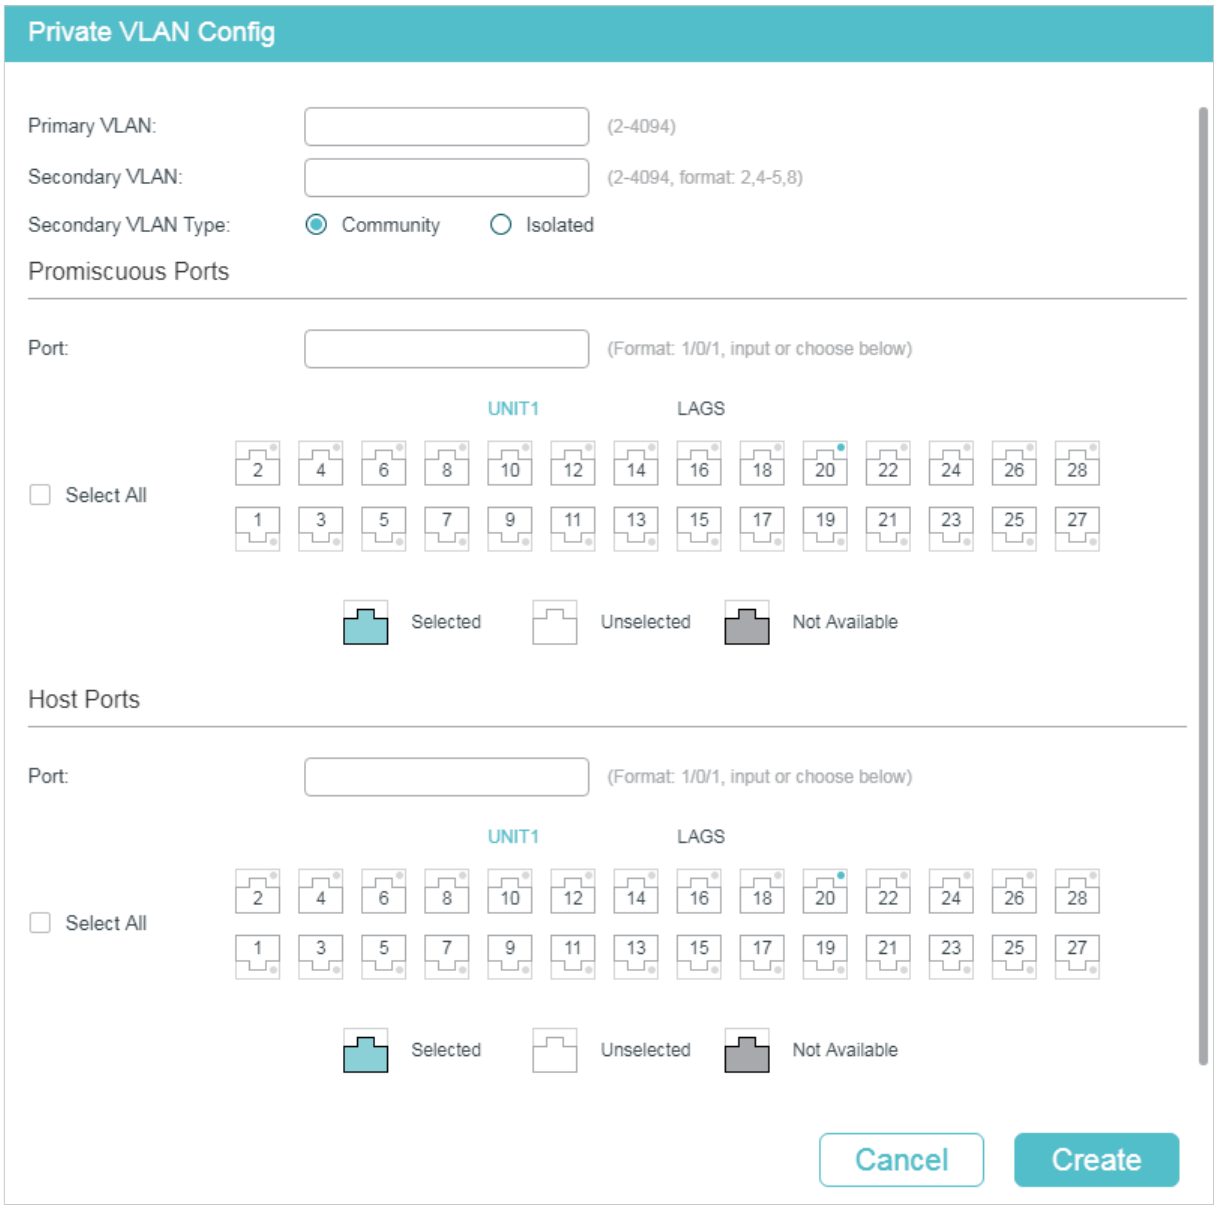

1) Enter the IDs of Primary VLAN and Secondary VLAN, and select Secondary VLAN Type.

Primary VLAN	Enter an ID for Primary VLAN. A primary VLAN can pair with more than one secondary VLANs to compose several private VLANs.
Secondary VLAN	Enter an ID or an ID list for Secondary VLAN. A secondary VLAN can pair with only one primary VLAN to compose one private VLAN. To avoid long response time of the switch, you are recommended to create less than 10 secondary VLANs at a time.
Secondary VLAN Type	Select the Secondary VLAN Type. **Isolated**: Select this option and users in the same isolated VLAN cannot communicate with each other. **Community**: Select this option and users in the same community VLAN can communicate with each other.

2) Select promiscuous ports and host ports to be added to the private VLAN.

Promiscuous Ports	Select promiscuous ports to be added to the VLAN. The port type of up-link port in a primary VLAN must be Promiscuous. This type of port is used to connect upper-layer devices or connect the switch with other switches. The PVID of this port is its primary VLAN ID and the egress rule is untagged.
Host Ports	Select host ports to be added to the VLAN. The port type of down-link port in a secondary VLAN must be Host. This type of port is used to connect to end users and shield information from upper-layer devices. The PVID of this port is its secondary VLAN ID and the egress rule is untagged.

3) Click **Create**.

Note:

When configuring the up-link port, you only need to add the port to one private VLAN and set the port type as Promiscuous. The switch will automatically add the port to private VLANs with the same primary VLAN.

2.2 Using the CLI

2.2.1 Creating Private VLAN

Note:

If you need to create a private VLAN with existing VLANs, delete all member ports of the existing VLANs before creating the private VLAN.

Follow these steps to create Private VLAN:

Step 1	**configure** Enter global configuration mode.

Step 2	**vlan** *vlan-list* Specify Primary VLAN ID, and enter VLAN configuration mode. *vlan-list*: Specify the ID or the ID list of the VLAN(s) for configuration. The ID ranges from 2 to 4094, for example, 2-3,5.
Step 3	**private-vlan primary** Specify the VLAN to be the primary VLAN.
Step 4	**exit** Exit VLAN configuration mode.
Step 5	**vlan** *vlan-list* Specify Primary VLAN ID, and enter VLAN configuration mode. *vlan-list*: Specify the ID or the ID list of the VLAN(s) for configuration. The ID ranges from 2 to 4094, for example, 2-3,5.
Step 6	**private-vlan {** community **|** isolated **}** Specify the VLAN to be the secondary VLAN, and configure the secondary VLAN type. community: Set the secondary VLAN type as Community. Users in the same isolated VLAN cannot communicate with each other. isolated: Set the secondary VLAN type as Isolated. Users in the same community VLAN can communicate with each other.
Step 7	**exit** Exit VLAN configuration mode.
Step 8	**vlan** *vlan-id* Specify the primary VLAN ID, and enter VLAN configuration mode.
Step 9	**private-vlan association** *vlan-list* Specify the ID or the ID list of the secondary VLAN(s) to pair with this primary VLAN. To avoid long response time of the switch, you are recommended to pair less than 10 secondary VLANs with the primary VLAN at a time. *vlan-list*: Specify the ID or the ID list of the secondary VLAN(s).
Step 10	**show vlan private-vlan** Verify configurations of private VLAN.
Step 11	**end** Return to Privileged EXEC Mode.
Step 12	**copy running-config startup-config** Save the settings in the configuration file.

The following example shows how to create primary VLAN 6 and secondary VLAN 5, set the secondary VLAN type as community, and pair primary VLAN 6 with secondary VLAN 5 as a private VLAN.

Switch#configure

Switch(config)#vlan 6

Switch(config-vlan)#private-vlan primary

Switch(config-vlan)#exit

Switch(config)#vlan 5

Switch(config-vlan)#private-vlan community

Switch(config-vlan)#exit

Switch(config)#vlan 6

Switch(config-vlan)#private-vlan association 5

Switch(config-vlan)#exit

Switch(config)#show vlan private-vlan

Primary	Secondary	Type	Ports
6	5	Community	

Switch(config)#end

Switch#copy running-config startup-config

2.2.2 Configuring the Up-link Port

Follow these steps to add up-link ports to Private VLAN:

Step 1	**configure** Enter global configuration mode.
Step 2	**interface {fastEthernet** *port* **| range fastEthernet** *port-list* **| gigabitEthernet** *port* **| range gigabitEthernet** *port-list* **| ten-gigabitEthernet** *port* **| range ten-gigabitEthernet** *port-list* **| port-channel** *port-channel-id* **| range port-channel** *port-channel-list***}** Enter interface configuration mode.
Step 3	**switchport private-vlan** promiscuous Configure the port type as Promiscuous. The port type of up-link port in a primary VLAN must be Promiscuous. This type of port is used to connect upper-layer devices or connect the switch with other switches. The PVID of this port is its primary VLAN ID.

Step 4	**switchport private-vlan mapping** *primary-vlan-id secondary-vlan-id* Add the specified port(s) to the private VLAN. *primary-vlan-id*: Specify the ID of the primary VLAN. The ID ranges from 2 to 4094. *secondary-vlan-id*: Specify the ID of the secondary VLAN. The ID ranges from 2 to 4094.
Step 5	**show vlan private-vlan** Verify configurations of private VLAN.
Step 6	**show vlan private-vlan interface [fastEthernet** *port* **| gigabitEthernet** *port* **| ten-gigabitEthernet** *port* **| port-channel** *lag-id***]** Verify private VLAN configurations of ports. *port*: Specify the ID of the port to show information. *lag-id*: Specify the ID of the LAG to show information.
Step 7	**end** Return to Privileged EXEC Mode.
Step 8	**copy running-config startup-config** Save the settings in the configuration file.

Note:

When configuring the up-link port, you only need to add the port to one private VLAN and set the port type as Promiscuous. The switch will automatically add the port to private VLANs with the same primary VLAN.

The following example shows how to configure the port type of port 1/0/2 as Promiscuous, and add it to the private VLAN composed of primary VLAN 6 and secondary VLAN 5.

Switch#configure

Switch(config)#interface gigabitEthernet 1/0/2

Switch(config-if)#switchport private-vlan promiscuous

Swtich(config-if)#switchport private-vlan mapping 6 5

Switch(config-if)#exit

Switch(config)#show vlan private-vlan

Primary	Secondary	Type	Ports
6	5	Community	Gi1/0/2

Switch(config)#show vlan private-vlan interface gigabitEthernet 1/0/2

Port	type

Gi1/0/2 Promiscuous

Switch(config)#end

Switch#copy running-config startup-config

2.2.3 Configuring the Down-link Port

Follow these steps to add down-link ports to Private VLAN:

Step 1	**configure** Enter global configuration mode.
Step 2	**interface {fastEthernet** *port* **| range fastEthernet** *port-list* **| gigabitEthernet** *port* **| range gigabitEthernet** *port-list* **| ten-gigabitEthernet** *port* **| range ten-gigabitEthernet** *port-list* **| port-channel** *port-channel-id* **| range port-channel** *port-channel-list***}** Enter interface configuration mode.
Step 3	**switchport private-vlan** host Configure the port type as host. The port type of down-link port in a secondary VLAN must be Host. This type of port is used to connect to end users and shield information from upper-layer devices. The PVID of this port is its secondary VLAN ID.
Step 4	**switchport private-vlan host-association** *primary-vlan-id secondary-vlan-id vlantype* Add the specified port(s) to the private VLAN. *primary-vlan-id*: Specify the ID of the primary VLAN. The ID ranges from 2 to 4094. *secondary-vlan-id*: Specify the ID of the secondary VLAN. The ID ranges from 2 to 4094. *vlantype*: Specify the secondary VLAN type, either community or isolated.
Step 5	**show vlan private-vlan** Verify configurations of private VLAN.
Step 6	**show vlan private-vlan interface [fastEthernet** *port* **| gigabitEthernet** *port* **| ten-gigabitEthernet** *port* **| port-channel** *lag-id***]** Verify private VLAN configurations of ports. *port*: Specify the ID of the port to show information. *lag-id*: Specify the ID of the LAG to show information.
Step 7	**end** Return to Privileged EXEC Mode.
Step 8	**copy running-config startup-config** Save the settings in the configuration file.

The following example shows how to configure the port type of port 1/0/3 as Host, and add it to the private VLAN composed of primary VLAN 6 and secondary VLAN 5.

Switch#configure

Switch(config)#interface gigabitEthernet 1/0/3

Switch(config-if)#switchport private-vlan host

Swtich(config-if)#switchport private-vlan host-association 6 5 community

Switch(config-if)#exit

Switch(config)#show vlan private-vlan

Primary	Secondary	Type	Ports
6	5	Community	Gi1/0/3

Switch(config)#show vlan private-vlan interface gigabitEthernet 1/0/3

Port	type
Gi1/0/3	Host

Switch(config)#end

Switch#copy running-config startup-config

3 Configuration Example

3.1 Network Requirements

Usually, an ISP divides its network into subnets to differentiate different areas by using VLAN. Company A belongs to Area VI which is marked as VLAN 6 by the ISP. It is required that departments in Company A can achieve Layer 2 isolation by using VLAN and users in the same department can communicate with each other.

3.2 Configuration Scheme

You can create primary VLAN and secondary VLAN and pair them into private VLAN. This allows upper-layer switch to recognize only the primary VLAN instead of all the secondary VLANs. Also, Company A can achieve Layer 2 isolation by using secondary VLAN.


Since it is required that users in the same department can communicate with each other, secondary VLAN type should be configured as Community.

3.3 Network Topology

As shown in the following figure, Switch C is the ISP's central switch, and Switch A is in Company A. To meet the requirement, configure private VLAN on Switch A. This chapter provides configuration procedures in two ways: using the GUI and using the CLI.

Demonstrated with T2600G-28TS, this chapter provides configuration procedures in two ways: using the GUI and using the CLI.

Figure 3-1 Network Topology

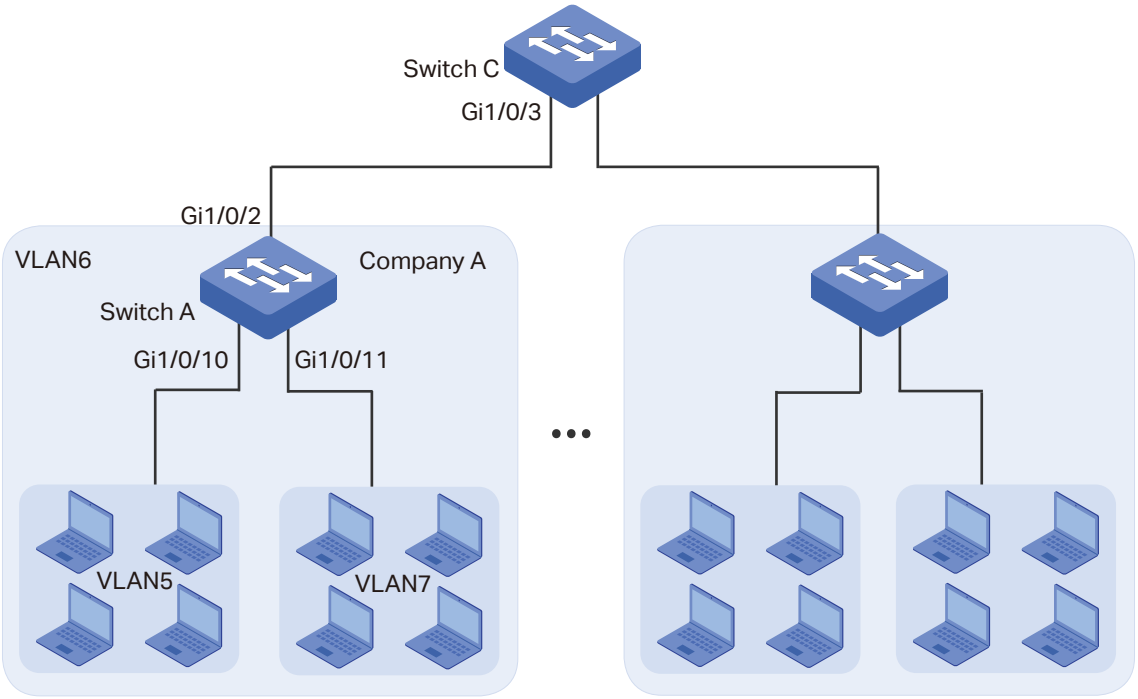


3.4 Using the GUI

- Configurations for Switch A


1) Choose the menu **L2 FEATURES > VLAN** > **Private VLAN** and click Add to load the following page. Create primary VLAN 6 and secondary VLAN 5, select Community as the Secondary VLAN Type. Add promiscuous port 1/0/2 and host port 1/0/10 to private VLAN.

Figure 3-2 Creating Primary VLAN 6 and Secondary VLAN 5

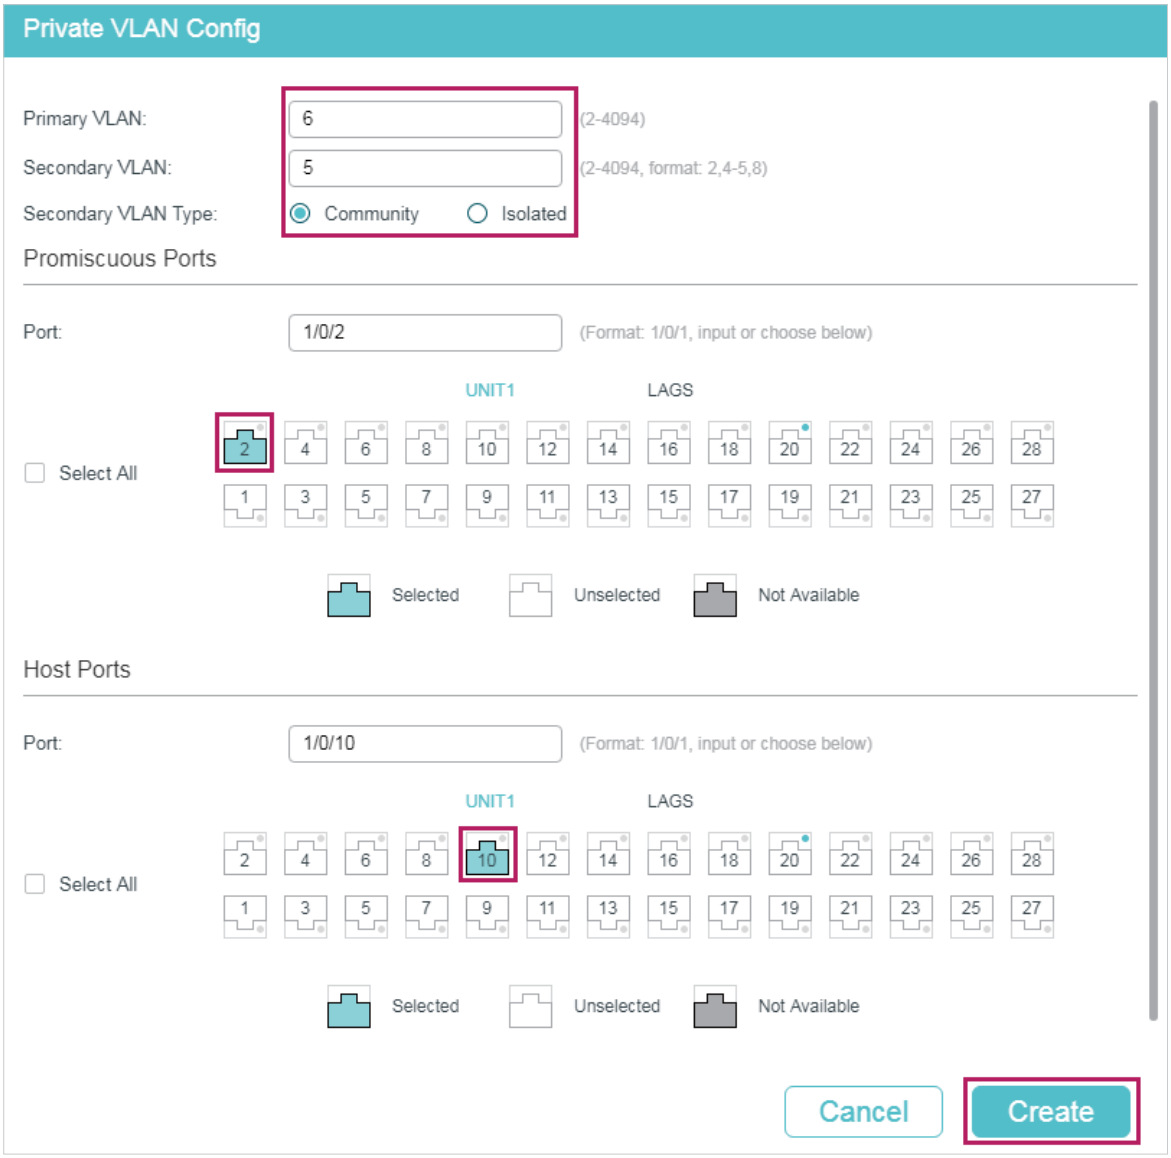

2) Choose the menu **L2 FEATURES > VLAN** > **Private VLAN** and click Add to load the following page. Create primary VLAN 6 and secondary VLAN 7, select Community as the Secondary VLAN Type. Add promiscuous port 1/0/2 and host port 1/0/11 to private VLAN.

Figure 3-3 Creating Primary VLAN 6 and Secondary VLAN 7

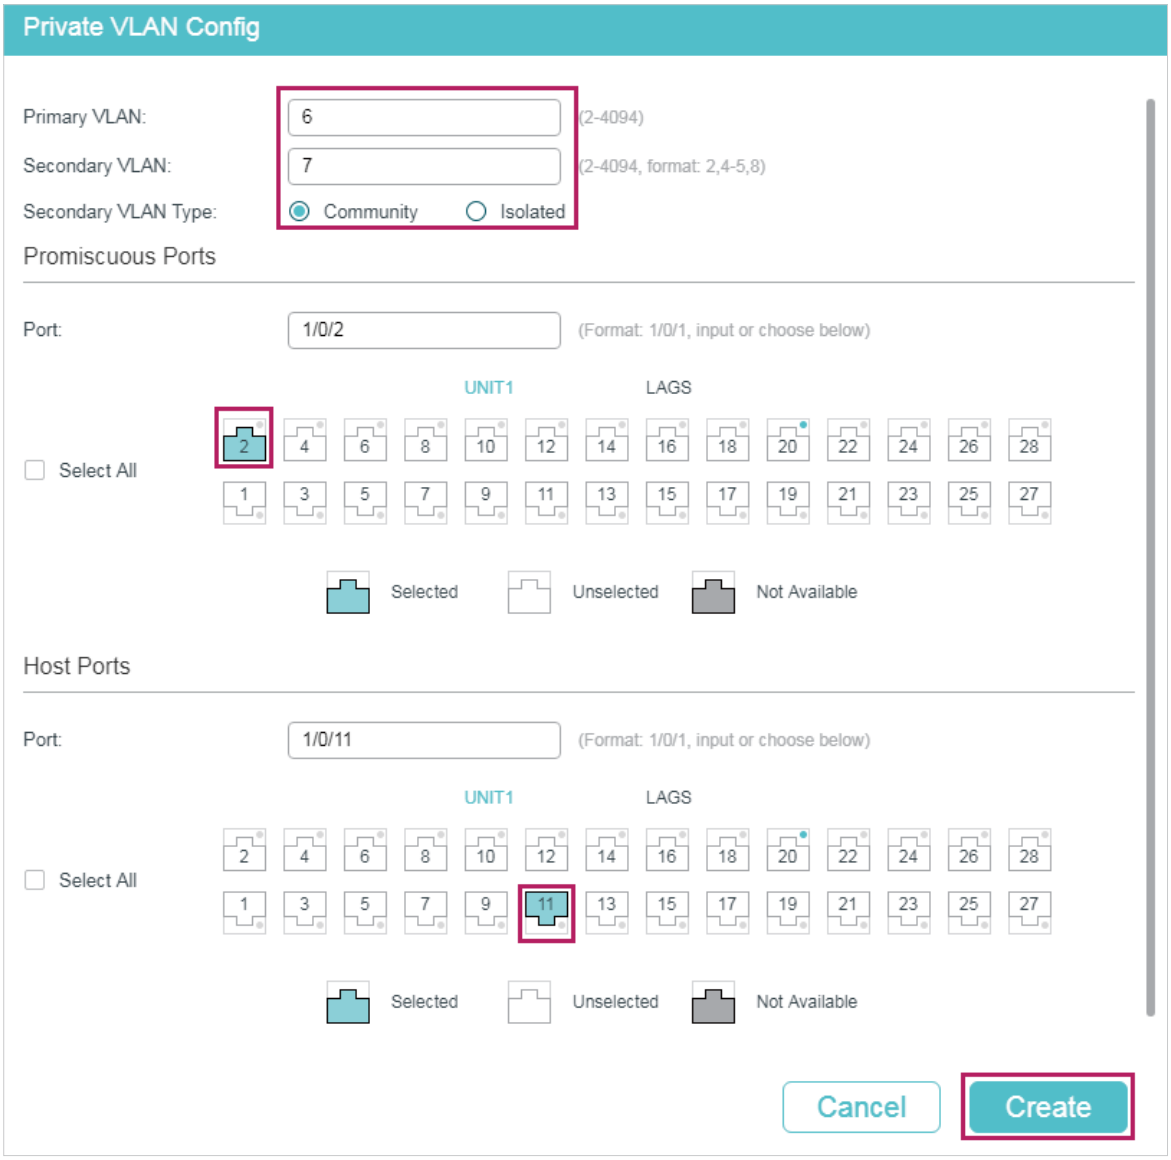


3) Click Save to save the settings.

Configurations for Switch C


1) Choose the menu **L2 FEATURES > VLAN** > **802.1Q VLAN > VLAN Config** and click Add to load the following page. Create VLAN 6 and add untagged port 1/0/3 to VLAN 6. Click **Create**.

Figure 3-4 Creating VLAN 6

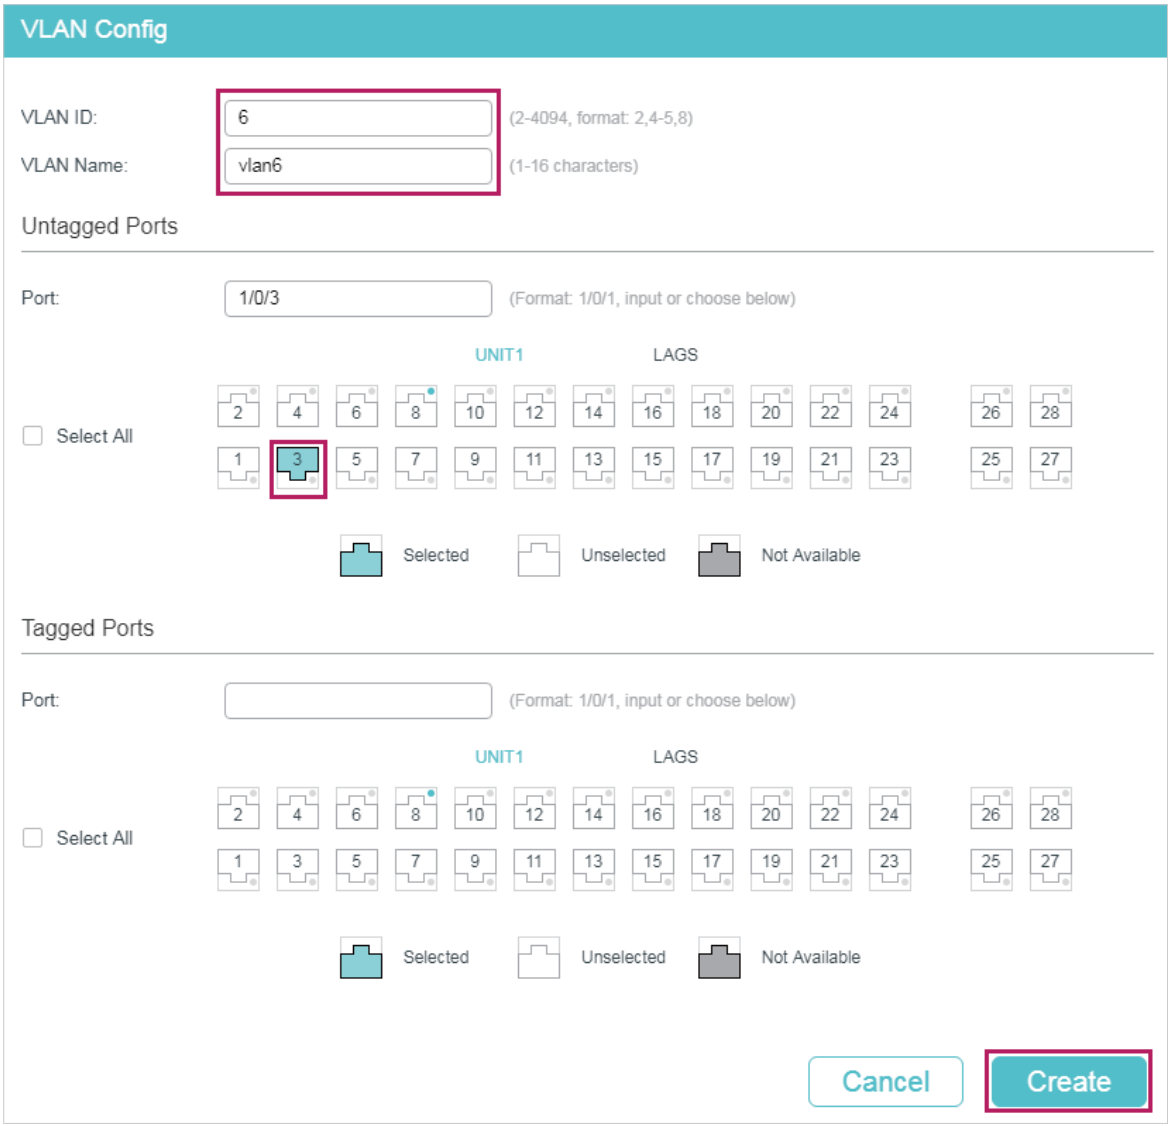

2) Choose the menu **L2 FEATURES > VLAN** > **802.1Q VLAN > Port Config** to load the following page. Set the PVID of port 1/0/3 as 6. Click **Apply**.

Figure 3-5 Cpecifying the PVID

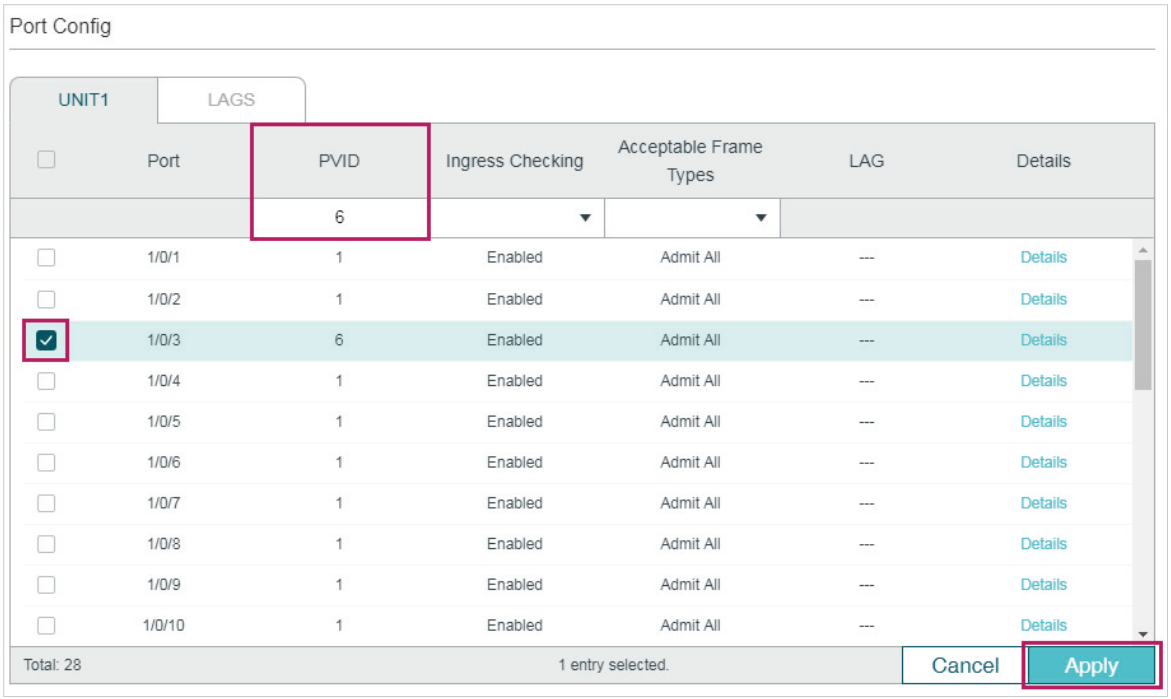

3) Click Save to save the settings.

3.5 Using the CLI

- Configurations for Switch A

1) Enter global configuration mode.

```
Switch_A>enable
Switch_A#configure
```

2) Create primary VLAN 6 and secondary VLAN 5, and pair them into a private VLAN.

```
Switch_A(config)#vlan 6
Switch_A(config-vlan)#private-vlan primary
Switch_A(config-vlan)#exit
Switch_A(config)#vlan 5
Switch_A(config-vlan)#private-vlan community
Switch_A(config-vlan)#exit
Switch_A(config)#vlan 6
Switch_A(config-vlan)#private-vlan association 5
Switch_A(config-vlan)#exit
```

3) Create secondary VLAN 7, and pair it with primary VLAN 6 into a private VLAN.

Switch_A(config)#vlan 7

Switch_A(config-vlan)#private-vlan community

Switch_A(config-vlan)#exit

Switch_A(config)#vlan 6

Switch_A(config-vlan)#private-vlan association 7

Switch_A(config-vlan)#exit

4) Add up-link port to the corresponding private VLAN and configure the port type as Promiscuous.

Switch_A(config)#interface gigabitEthernet 1/0/2

Switch_A(config-if)#switchport private-vlan promiscuous

Switch_A(config-if)#switchport private-vlan mapping 6 5

Switch_A(config-if)#exit

5) Add down-link port to the corresponding private VLAN and configure the port type as Host.

Switch_A(config)#interface gigabitEthernet 1/0/10

Switch_A(config-if)#switchport private-vlan host

Switch_A(config-if)#switchport private-vlan host-association 6 5 community

Switch_A(config-if)#exit

Switch_A(config)#interface gigabitEthernet 1/0/11

Switch_A(config-if)#switchport private-vlan host

Switch_A(config-if)#switchport private-vlan host-association 6 7 community

Switch_A(config-if)#end

Switch_A#copy running-config startup-config

- Configurations for Switch C

1) Enter global configuration mode.

Switch_C>enable

Switch_C#configure

2) Create VLAN 6, add port 1/0/3 to VLAN 6 and set the PVID of port 1/0/3 as 6.

Switch_C(config)#vlan 6

Switch_C(config-vlan)#name vlan6

Switch_C(config-vlan)#exit

```
Switch_C(config)#interface gigabitEthernet 1/0/3
Switch_C(config-if)#switchport pvid 6
Switch_C(config-if)#switchport general allowed vlan 6 untagged
Switch_C(config-if)#end
Switch_C#copy running-config startup-config
```

Verify the Configurations

- Switch A

  Verify the configuration of private VLAN:

```
Switch_A#show vlan private-vlan
Primary   Secondary   Type            Ports
--------- ----------- --------------- --------------
6         5           Community       Gi1/0/2,1/0/10
6         7           Community       Gi1/0/2,1/0/11
```

  Verify the configuration of ports:

```
Swtich_A#show vlan private-vlan interface
Port        type
--------- ----------
Gi1/0/1     Normal
Gi1/0/2     Promiscuous
Gi1/0/3     Normal
Gi1/0/4     Normal
Gi1/0/5     Normal
Gi1/0/6     Normal
Gi1/0/7     Normal
Gi1/0/8     Normal
Gi1/0/9     Normal
Gi1/0/10    Host
Gi1/0/11    Host
Gi1/0/12    Normal
```

...

- Switch C

  Verify the configuration of 802.1Q VLAN:

  Switch_C#show vlan

VLAN	Name	Status	Ports
1	System-VLAN	active	Gi1/0/1, Gi1/0/2, Gi1/0/3, Gi1/0/4, Gi1/0/5, Gi1/0/6, Gi1/0/7, Gi1/0/8, Gi1/0/9, Gi1/0/10, Gi1/0/11, Gi1/0/12, Gi1/0/13, Gi1/0/14, Gi1/0/15, Gi1/0/16, Gi1/0/17, Gi1/0/18, Gi1/0/19, Gi1/0/20, Gi1/0/21, Gi1/0/22, Gi1/0/23, Gi1/0/24, Gi1/0/25, Gi1/0/26, Gi1/0/27, Gi1/0/28
6	vlan6	active	Gi1/0/3

Primary	Secondary	Type	Ports

4 Appendix: Default Parameters

Default settings of Private VLAN are listed in the following tables.

Table 4-1 Default Settings of Private VLAN

Parameter	Default Setting
Primary VLAN	None
Secondary VLAN	None
Secondary VLAN Type	Community

Part 13

Configuring Layer 2 Multicast

CHAPTERS

1. Layer 2 Multicast
2. IGMP Snooping Configuration
3. MLD Snooping Configuration
4. MVR Configuration
5. Multicast Filtering Configuration
6. Viewing Multicast Snooping Information
7. Configuration Examples
8. Appendix: Default Parameters

1 Layer 2 Multicast

1.1 Overview

In a point-to-multipoint network, packets can be sent in three ways: unicast, broadcast and multicast. With unicast, many copies of the same information will be sent to all the receivers, occupying a large bandwidth.

With broadcast, information will be sent to all users in the network no matter they need it or not, wasting network resources and impacting information security.

Multicast, however, solves all the problems caused by unicast and broadcast. With multicast, the source only need to send one piece of information, and all and only the users who need the information will receive copies of the information. In a point-to-multipoint network, multicast technology not only transmits data with high efficiency, but also saves a large bandwidth and reduces network load.


In practical applications, Internet information provider can provide value-added services such as Online Live, IPTV, Distance Education, Telemedicine, Internet Radio and Real-time Video Conferences more conveniently using multicast.

Layer 2 Multicast allows Layer 2 switches to listen for IGMP (Internet Group Management Protocol) packets between IGMP Querier and user hosts to establish multicast forwarding table and to manage and control transmission of packets.

Take IGMP Snooping as an example. When IGMP Snooping is disabled on the Layer 2 device, multicast packets will be broadcast in the Layer 2 network; when IGMP Snooping is enabled on the Layer 2 device, multicast data from a known multicast group will be transmitted to the designated receivers instead of being broadcast in the Layer 2 network.

Demonstrated as below:

Figure 1-1 IGMP Snooping

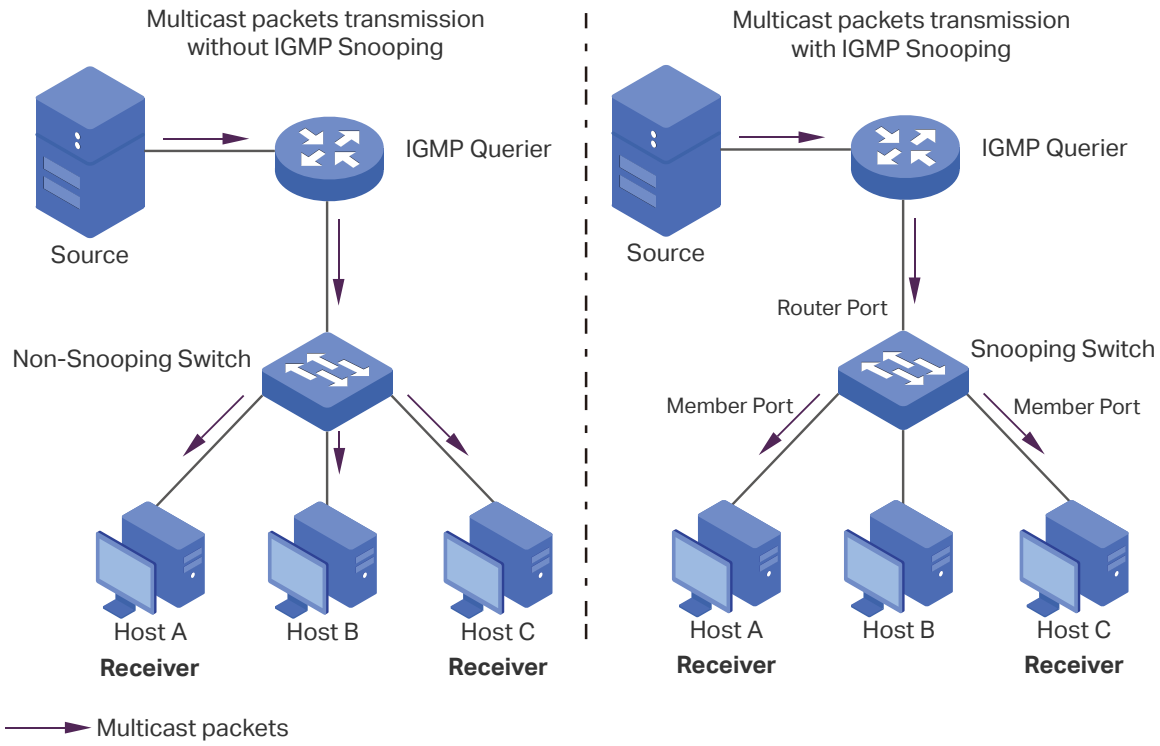

The following basic concepts of IGMP Snooping will be introduced: IGMP querier, snooping switch, router port and member port.

IGMP Querier

An IGMP querier is a multicast router (a router or a Layer 3 switch) that sends query messages to maintain a list of multicast group memberships for each attached network, and a timer for each membership.

Normally only one device acts as querier per physical network. If there are more than one multicast router in the network, a querier election process will be implemented to determine which one acts as the querier.

Snooping Switch

A snooping switch indicates a switch with IGMP Snooping enabled. The switch maintains a multicast forwarding table by snooping on the IGMP transmissions between the host and the querier. With the multicast forwarding table, the switch can forward multicast data only to the ports that are in the corresponding multicast group, so as to constrain the flooding of multicast data in the Layer 2 network.

Router Port

A router port is a port on snooping switch that is connecting to the IGMP querier.

Member Port

A member port is a port on snooping switch that is connecting to the host.

1.2 Supported Features

Layer 2 Multicast protocol for IPv4: IGMP Snooping

On the Layer 2 device, IGMP Snooping transmits data on demand on data link layer by analyzing IGMP packets between the IGMP querier and the users, to build and maintain Layer 2 multicast forwarding table.

Layer 2 Multicast protocol for IPv6: MLD Snooping

On the Layer 2 device, MLD Snooping (Multicast Listener Discovery Snooping) transmits data on demand on data link layer by analyzing MLD packets between the MLD querier and the users, to build and maintain Layer 2 multicast forwarding table.

Multicast VLAN Registration (MVR)

MVR allows a single multicast VLAN to be shared for multicast member ports in different VLANs in IPv4 network. In IGMP Snooping, if member ports are in different VLANs, a copy of the multicast streams is sent to each VLAN that has member ports. While MVR provides a dedicated multicast VLAN to forward multicast traffic over the Layer 2 network, to avoid duplication of multicast streams for clients in different VLANs. Clients can dynamically join or leave the multicast VLAN without interfering with their relationships in other VLANs.

There are two types of MVR modes:

- Compatible Mode

In compatible mode, the MVR switch does not forward report or leave messages from the hosts to the IGMP querier. So the IGMP querier cannot learn the multicast groups membership information from the MVR switch. You have to statically configure the IGMP querier to transmit all the required multicast streams to the MVR switch via the multicast VLAN.

- Dynamic Mode

In dynamic mode, after receiving report or leave messages from the hosts, the MVR switch will forward them to the IGMP querier via the multicast VLAN (with appropriate translation of the VLAN ID). So the IGMP querier can learn the multicast groups membership information through the report and leave messages, and transmit the multicast streams to the MVR switch via the multicast VLAN according to the multicast forwarding table.

Multicast Filtering

Multicast Filtering allows you to control the set of multicast groups to which a host can belong. You can filter multicast joins on a per-port basis by configuring IP multicast profiles (IGMP profiles or MLD profiles) and associating them with individual switch ports.

2 IGMP Snooping Configuration

To complete IGMP Snooping configuration, follow these steps:

1) Enable IGMP Snooping globally and configure the global parameters.
2) Configure IGMP Snooping for VLANs.
3) Configure IGMP Snooping for ports.
4) (Optional) Configure the advanced IGMP Snooping features:
   - Configure hosts to statically join a group.
   - Configure IGMP accounting and authentication features.

Note:


IGMP Snooping takes effect only when it is enabled globally, in the corresponding VLAN and port at the same time.

2.1 Using the GUI

2.1.1 Configuring IGMP Snooping Globally

Choose the menu **L2 FEATURES > Multicast > IGMP Snooping > Global Config** to load the following page.

Figure 2-1 Configure IGMP Snooping Globally

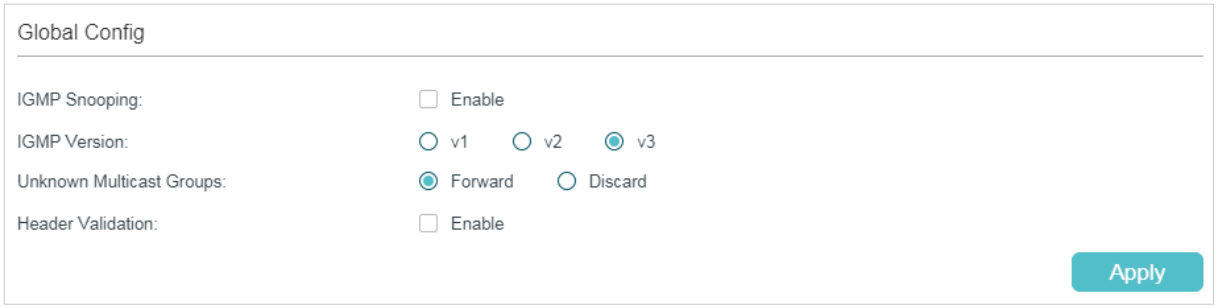

Follow these steps to configure IGMP Snooping globally:

1) In the **Global Config** section, enable IGMP Snooping globally and configure the global parameters.

IGMP Snooping	Enable or disable IGMP Snooping globally.

IGMP Version	Specify the IGMP version. **v1**: The switch works as an IGMPv1 Snooping switch. It can only process IGMPv1 messages from the host. Messages of other versions are ignored. **v2**: The switch works as an IGMPv2 Snooping switch. It can process both IGMPv1 and IGMPv2 messages from the host. IGMPv3 messages are ignored. **v3**: The switch works as an IGMPv3 Snooping switch. It can process IGMPv1, IGMPv2 and IGMPv3 messages from the host.
Unknown Multicast Groups	Set the way in which the switch processes data that are sent to unknown multicast groups as Forward or Discard. By default, it is Forward. Unknown multicast groups are multicast groups that do not match any of the groups announced in earlier IGMP membership reports, and thus cannot be found in the multicast forwarding table of the switch. *Note:* IGMP Snooping and MLD Snooping share the setting of Unknown Multicast Groups, so you have to enable MLD Snooping globally on the **L2 FEATURES > Multicast > MLD Snooping > Global Config** page at the same time.
Header Validation	Enable or disable Header Validation. By default, it is disabled. Generally, for IGMP packets, the TTL value should be 1, ToS field should be 0xC0, and Router Alert option should be 0x94040000. The fields to be validated depend on the IGMP version being used. IGMPv1 only checks the TTL field. IGMPv2 checks the TTL field and the Router Alert option. IGMPv3 checks TTL field, ToS field and Router Alert option. Packets that fail the validation process will be dropped.

2) Click **Apply**.


2.1.2 Configuring IGMP Snooping for VLANs

Before configuring IGMP Snooping for VLANs, set up the VLANs that the router ports and the member ports are in. For details, please refer to *Configuring 802.1Q VLAN*.

The switch supports configuring IGMP Snooping on a per-VLAN basis. After IGMP Snooping is enabled globally, you also need to enable IGMP Snooping and configure the corresponding parameters for the VLANs that the router ports and the member ports are in.

Choose the menu **L2 FEATURES > Multicast > IGMP Snooping > Global Config,** and click in your desired VLAN entry in the **IGMP VLAN Config** section to load the following page.

Figure 2-2 Configure IGMP Snooping for VLAN

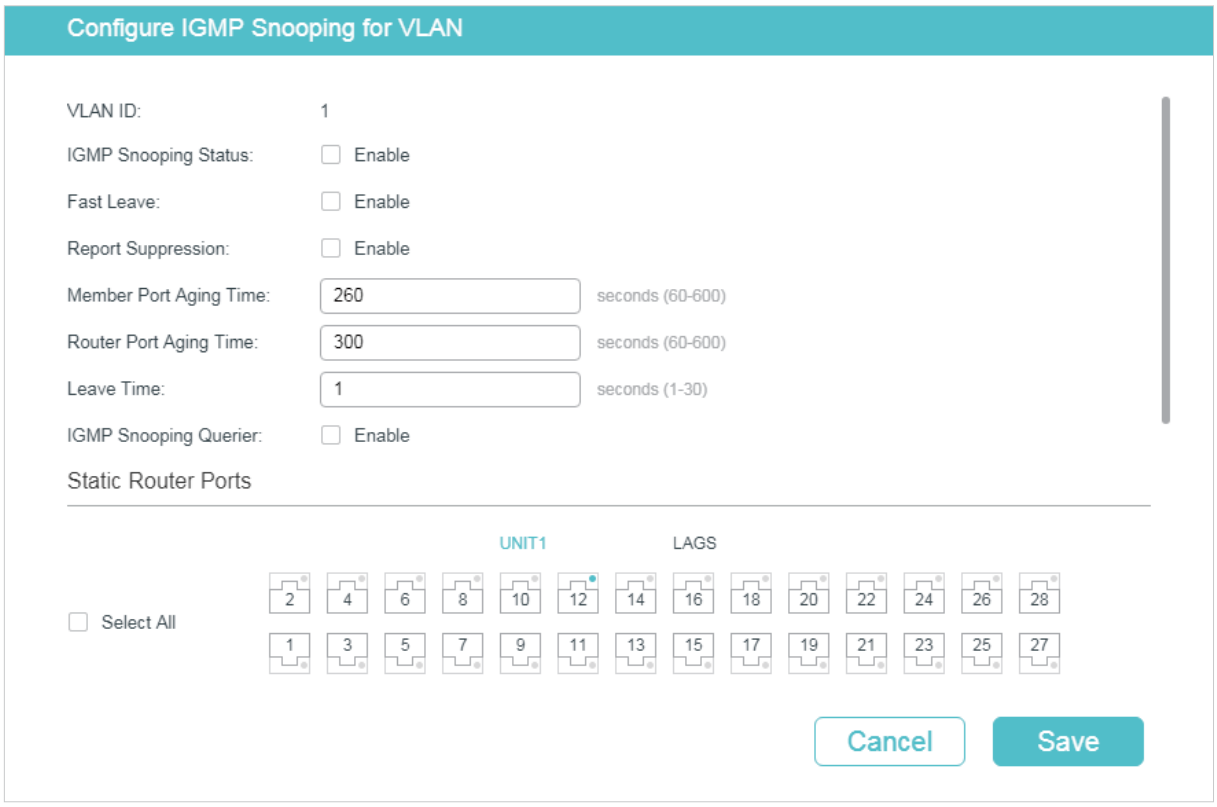

Follow these steps to configure IGMP Snooping for a specific VLAN:

1) Enable IGMP Snooping for the VLAN, and configure the corresponding parameters.

VLAN ID	Displays the VLAN ID.
IGMP Snooping Status	Enable or disable IGMP Snooping for the VLAN.

Fast Leave	Enable or disable Fast Leave for the VLAN. IGMPv1 does not support Fast Leave. Without Fast Leave, after a receiver sends an IGMP leave message to leave a multicast group, the switch will forward the leave message to the Layer 3 device (the querier). From the point of view of the querier, the port connecting to the switch is a member port of the corresponding multicast group. After receiving the leave message from the switch, the querier will send out a configured number (Last Member Query Count) of group-specific queries on that port with a configured interval (Last Member Query Interval), and wait for IGMP group membership reports. If there are other receivers connecting to the switch, they will response to the queries before the Last Member Query Interval expires. If no reports are received after the response time of the last query expires, the querier will remove the port from the forwarding list of the corresponding multicast group. That is, if there are other receivers connecting to the switch, the one sent leave message have to wait until the port ages out from the switch's forwarding list of the corresponding multicast group (the maximum waiting time is decided by the Member Port Aging Time). With Fast Leave enabled on a VLAN, the switch will remove the (Multicast Group, Port, VLAN) entry from the multicast forwarding table before forwarding the leave message to the querier. This helps to reduce bandwidth waste since the switch no longer sends the corresponding multicast streams to the VLAN of the port as soon as the port receives a leave message from the VLAN.
Report Suppression	Enable or disable Report Suppression for the VLAN. When enabled, the switch will only forward the first IGMP report message for each multicast group to the IGMP querier and suppress subsequent IGMP report messages for the same multicast group during one query interval. This feature prevents duplicate report messages from being sent to the IGMP querier.
Member Port Aging Time	Specify the aging time of the member ports in the VLAN. Once the switch receives an IGMP membership report message from a port, the switch adds this port to the member port list of the corresponding multicast group. Member ports that are learned in this way are called dynamic member ports. If the switch does not receive any IGMP membership report messages for a specific multicast group from a dynamic member port, it will no longer consider this port as a member port of this multicast group and delete it from the multicast forwarding table.
Router Port Aging Time	Specify the aging time of the router ports in the VLAN. Once the switch receives an IGMP general query message from a port, the switch adds this port to the router port list. Router ports that are learned in this way are called dynamic router ports. If the switch does not receive any IGMP general query message from a dynamic router port within the router port aging time, the switch will no longer consider this port as a router port and delete it from the router port list.


Leave Time	Specify the leave time for the VLAN. When the switch receives a leave message from a port to leave a multicast group, it will wait for a leave time before removing the port from the multicast group. During the period, if the switch receives any report messages from the port, the port will not be removed from the multicast group. Exceptions are as follows: • If the member port ages out before the Leave Time ends and no report messages are received, the port will be removed from the multicast group once its Member Port Aging Time ends. • The Leave Time mechanism will not take effect when Fast Leave takes effect. A proper leave time value can avoid other hosts connecting to the same port of the switch being mistakenly removed from the multicast group when only some of them want to leave.
IGMP Snooping Querier	Enable or disable the IGMP Snooping Querier for the VLAN. When enabled, the switch acts as an IGMP Snooping Querier for the hosts in this VLAN. A querier periodically sends a general query on the network to solicit membership information, and sends group-specific queries when it receives leave messages from hosts.
Query Interval	With IGMP Snooping Querier enabled, specify the interval between general query messages sent by the switch.
Maximum Response Time	With IGMP Snooping Querier enabled, specify the host's maximum response time to general query messages.
Last Member Query Interval	With IGMP Snooping Querier enabled, when the switch receives an IGMP leave message, it obtains the address of the multicast group that the host wants to leave from the message. Then the switch sends out group-specific queries to this multicast group through the port receiving the leave message. This parameter determines the interval between group-specific queries.
Last Member Query Count	With IGMP Snooping Querier enabled, specify the number of group-specific queries to be sent. If specified count of group-specific queries are sent and no report message is received, the switch will delete the multicast address from the multicast forwarding table.
General Query Source IP	With IGMP Snooping Querier enabled, specify the source IP address of the general query messages sent by the switch. It should be a unicast address.
Static Router Ports	Select one or more ports to be the static router ports in the VLAN. Static router ports do not age. Multicast streams and IGMP packets to all groups in this VLAN will be forwarded through the static router ports. Multicast streams and IGMP packets to the groups that have dynamic router ports will be also forwarded through the corresponding dynamic router ports.
Forbidden Router Ports	Select ports to forbid them from being router ports in the VLAN.

2) Click **Save**.

2.1.3 Configuring IGMP Snooping for Ports

Choose the menu **L2 FEATURES > Multicast > IGMP Snooping > Port Config** to load the following page.

Figure 2-3 Configure IGMP Snooping for Ports

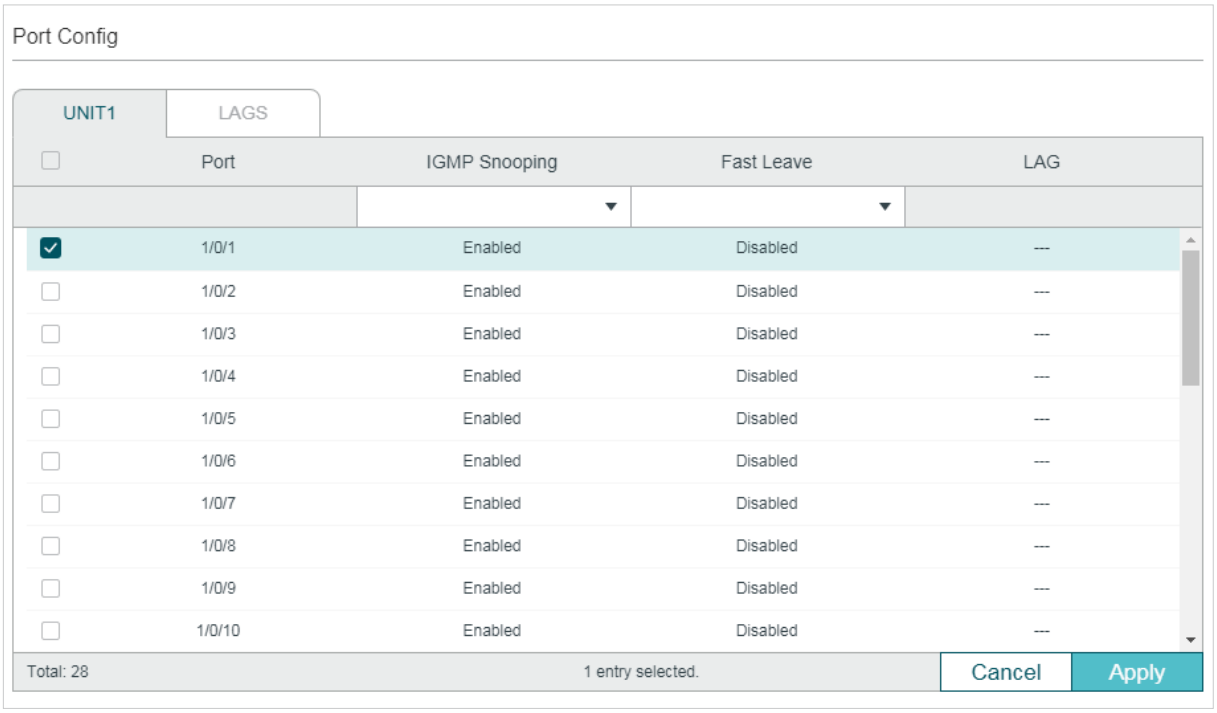

Follow these steps to configure IGMP Snooping for ports:

1) Enable IGMP Snooping for the port and enable Fast Leave if there is only one receiver connected to the port.

IGMP Snooping	Enable or disable IGMP Snooping for the port.
Fast Leave	Enable or disable Fast Leave for the port. IGMPv1 does not support fast leave. Fast Leave can be enabled on a per-port basis or per-VLAN basis. When enabled on a per-port basis, the switch will remove the port from the corresponding multicast group of all VLANs before forwarding the leave message to the querier. You should only use Fast Leave for a port when there is a single receiver connected to the port. For more details about Fast Leave, see *2.1.2 Configuring IGMP Snooping for VLANs*.
LAG	Displays the LAG the port belongs to.


2) Click **Apply**.

2.1.4 Configuring Hosts to Statically Join a Group

Hosts or Layer 2 ports normally join multicast groups dynamically, but you can also configure hosts to statically join a group.

Choose the menu **L2 FEATURES > Multicast > IGMP Snooping > Static Group Config** and click Add to load the following page.

Figure 2-4 Configure Hosts to Statically Join a Group

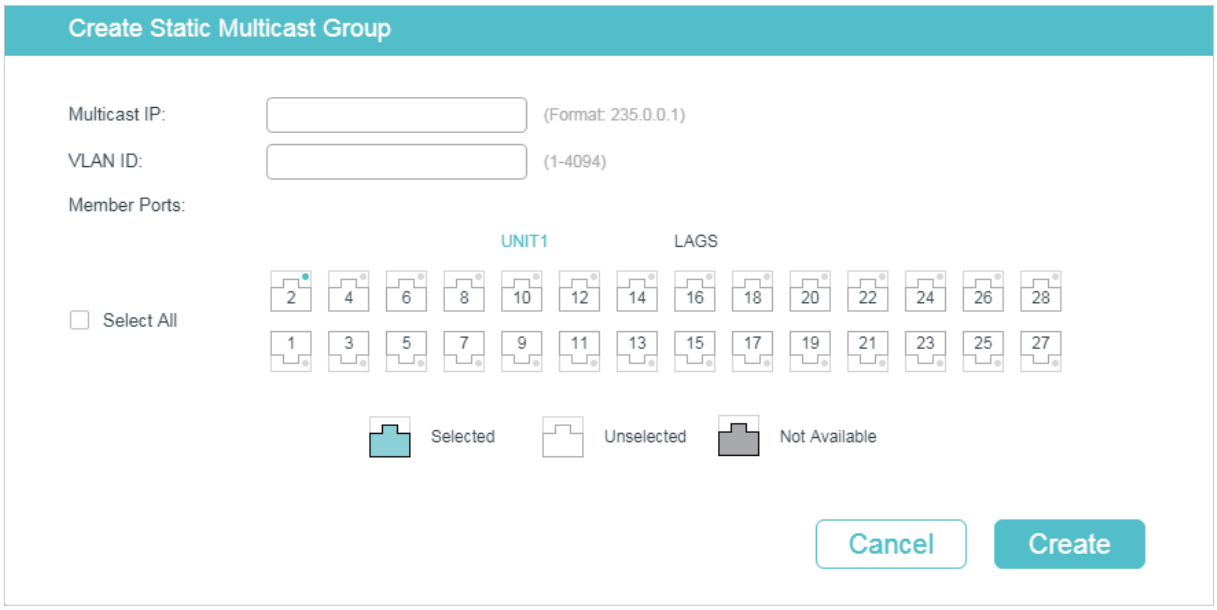

Follow these steps to configure hosts to statically join a group:

1) Specify the multicast IP address, VLAN ID. Select the ports to be the static member ports of the multicast group.

Multicast IP	Specify the address of the multicast group that the hosts need to join.
VLAN ID	Specify the VLAN that the hosts are in.
Member Ports	Select the ports that the hosts are connected to. These ports will become the static member ports of the multicast group and will never age.

2) Click **Create**.


2.1.5 Configuring IGMP Accounting and Authentication Features

You can enable IGMP accounting and authentication according to your need. IGMP accounting is configured globally, and IGMP authentication can be enabled on a per-port basis.

To use these features, you should also set up a RADIUS server and go to **SECURITY > AAA > RADIUS Config** to configure RADIUS server for the switch.

Choose the menu **L2 FEATURES > Multicast > IGMP Snooping > IGMP Authentication** to load the following page.

Figure 2-5 Configure IGMP Accounting and Authentication

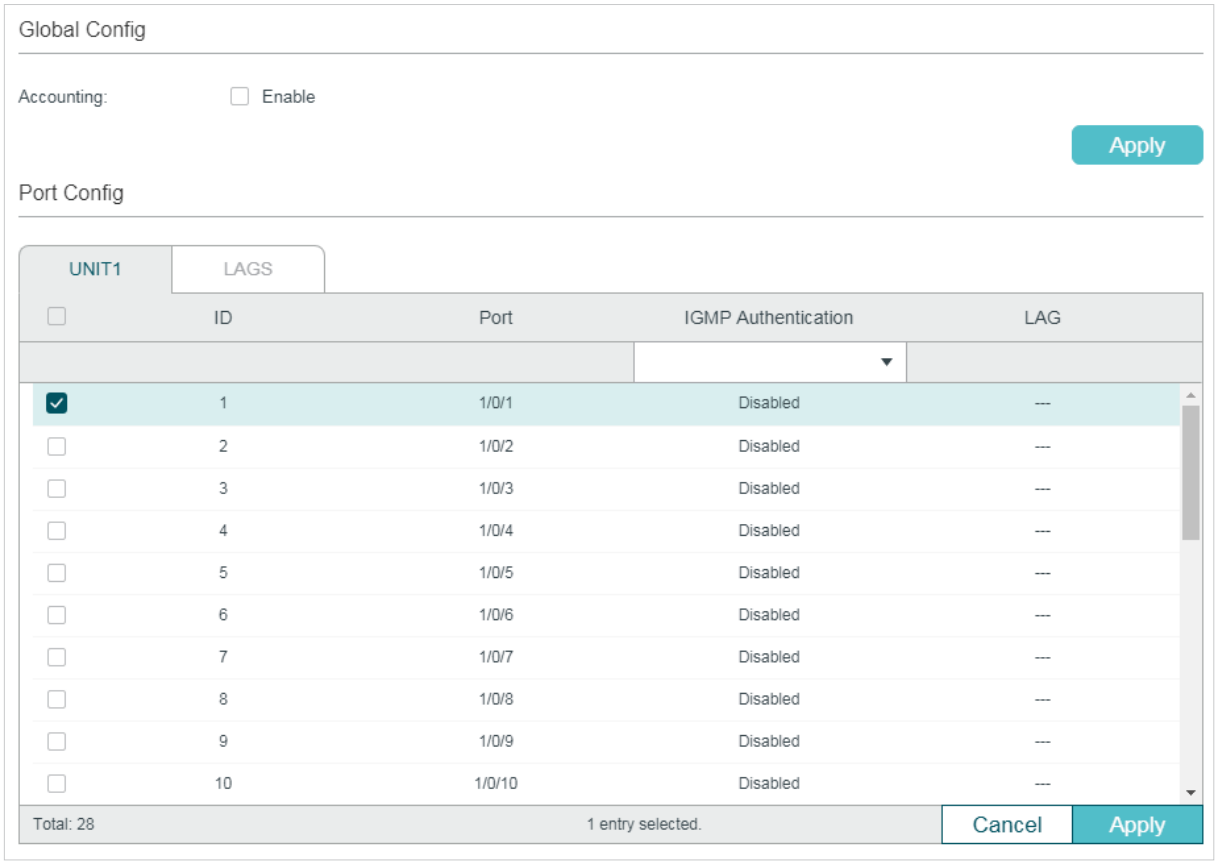

Follow these steps to enable IGMP accounting:

1) In the **Global Config** section, enable IGMP Accounting globally.

Accounting	Enable or disable IGMP Accounting.

2) Click **Apply**.

Follow these steps to configure IGMP Authentication on ports:

1) In the **Port Config** section, select the ports and enable IGMP Authentication.

IGMP Authentication	Enable or disable IGMP Authentication for the port.

2) Click **Apply**.

2.2 Using the CLI

2.2.1 Configuring IGMP Snooping Globally

Follow these steps to configure IGMP Snooping globally:

Step 1	**configure** Enter global configuration mode.
Step 2	**ip igmp snooping** Enable IGMP Snooping Globally.
Step 3	**ip igmp snooping version {**v1 | v2 | v3**}** Configure the IGMP version. v1:The switch works as an IGMPv1 Snooping switch. It can only process IGMPv1 report messages from the host. Report messages of other versions are ignored. v2: The switch works as an IGMPv2 Snooping switch. It can process both IGMPv1 and IGMPv2 report messages from the host. IGMPv3 report messages are ignored. v3: The switch works as an IGMPv3 Snooping switch. It can process IGMPv1, IGMPv2 and IGMPv3 report messages from the host.
Step 4	**ip igmp snooping drop-unknown** (Optional) Configure the way how the switch processes multicast streams that are sent to unknown multicast groups as Discard. By default, it is Forward. Unknown multicast groups are multicast groups that do not match any of the groups announced in earlier IGMP membership reports, and thus cannot be found in the multicast forwarding table of the switch. *Note:* IGMP Snooping and MLD Snooping share the setting of Unknown Multicast Groups, you need to ensure MLD Snooping is enabled globally. To enable MLD Snooping globally, use the **ipv6 mld snooping** command in global configuration mode.
Step 5	**ip igmp snooping header-validation** (Optional) Enable header validation. Generally, for IGMP packets, the TTL value should be 1, ToS field should be 0xC0, and Router Alert option should be 0x94040000. The fields validated depend on the IGMP version being used. IGMPv1 only checks the TTL field. IGMPv2 checks the TTL field and the Router Alert option. IGMPv3 checks TTL field, ToS field and Router Alert option. Packets that fail the validation process will be dropped.
Step 6	**show ip igmp snooping** Show the basic IGMP Snooping configuration.
Step 7	**end** Return to privileged EXEC mode.
Step 8	**copy running-config startup-config** Save the settings in the configuration file.

The following example shows how to enable IGMP Snooping and header validation globally, and specify the IGMP Snooping version as IGMPv3, the way how the switch processes multicast streams that are sent to unknown multicast groups as discard.

Switch#configure

Switch(config)#ip igmp snooping

Switch(config)#ip igmp snooping version v3

Switch(config)#ipv6 mld snooping

Switch(config)#ip igmp snooping drop-unknown

Switch(config)#ip igmp snooping header-validation

Switch(config)#show ip igmp snooping

IGMP Snooping	:Enable
IGMP Version	:V3
Unknown Multicast	:Discard
Header Validation	:Enable

...

Switch(config)#end

Switch#copy running-config startup-config

2.2.2 Configuring IGMP Snooping for VLANs

Before configuring IGMP Snooping for VLANs, set up the VLANs that the router ports and the member ports are in. For details, please refer to *Configuring 802.1Q VLAN*.

The switch supports configuring IGMP Snooping on a per-VLAN basis. After IGMP Snooping is enabled globally, you also need to enable IGMP Snooping and configure the corresponding parameters for the VLANs that the router ports and the member ports are in.

Follow these steps to configure IGMP Snooping for VLANs:

Step 1	**configure** Enter global configuration mode.

Step 2 **ip igmp snooping vlan-config** *vlan-id-list* **mtime** *member-time*

Enable IGMP Snooping for the specified VLANs, and specify the member port aging time for the VLANs.

vlan-id-list: Specify the ID or the ID list of the VLAN(s).

member-time: Specify the aging time of the member ports in the specified VLANs. Valid values are from 60 to 600 seconds. By default, it is 260 seconds.

Once the switch receives an IGMP membership report message from a port, the switch adds this port to the member port list of the corresponding multicast group. Member ports that are learned in this way are called dynamic member ports.

If the switch does not receive any IGMP membership report message for a specific multicast group from a dynamic member port, it will no longer consider this port as a member port of this multicast group and delete it from the multicast forwarding table.

Step 3 **ip igmp snooping vlan-config** *vlan-id-list* **rtime** *router-time*

Specify the router port aging time for the VLANs.

vlan-id-list: Specify the ID or the ID list of the VLAN(s).

router-time: Specify the aging time of the router ports in the specified VLANs. Valid values are from 60 to 600 seconds. By default, it is 300 seconds.

Once the switch receives an IGMP general query message from a port, the switch adds this port to the router port list. Router ports that are learned in this way are called dynamic router ports.

If the switch does not receive any IGMP general query message from a dynamic router port within the router port aging time, the switch will no longer consider this port as a router port and delete it from the router port list.

Step 4 **ip igmp snooping vlan-config** *vlan-id-list* **ltime** *leave-time*

Specify the router port aging time for the VLANs.

vlan-id-list: Specify the ID or the ID list of the VLAN(s).

leave-time: Specify the leave time for the VLAN(s). Valid values are from 1 to 30 in seconds, and the default value is 1 second.

When the switch receives a leave message from a port to leave a multicast group, it will wait for a leave time before removing the port from the multicast group. During the period, if the switch receives any report messages from the port, the port will not be removed from the multicast group. Exceptions are as follows:

- If the member port ages out before the Leave Time ends and no report messages are received, the port will be removed from the multicast group once its Member Port Aging Time ends.
- The Leave Time mechanism will not take effect when Fast Leave takes effect.

A proper leave time value can avoid other hosts connecting to the same port of the switch being mistakenly removed from the multicast group when only some of them want to leave.

Step 5 **ip igmp snooping vlan-config** *vlan-id-list* **report-suppression**

(Optional) Enable the Report Suppression for the VLANs. By default, it is disabled.

When enabled, the switch will only forward the first IGMP report message for each multicast group to the IGMP querier and suppress subsequent IGMP report messages for the same multicast group during one query interval. This feature prevents duplicate report messages from being sent to the IGMP querier.

vlan-id-list: Specify the ID or the ID list of the VLAN(s).

Step 6 **ip igmp snooping vlan-config** *vlan-id-list* **immediate-leave**

(Optional) Enable the Fast Leave for the VLANs. By default, it is disabled. IGMPv1 does not support fast leave.

Without Fast Leave, after a receiver sends an IGMP leave message to leave a multicast group, the switch will forward the leave message to the Layer 3 device (the querier).

From the point of view of the querier, the port connecting to the switch is a member port of the corresponding multicast group. After receiving the leave message from the switch, the querier will send out a configured number (Last Member Query Count) of group-specific queries on that port with a configured interval (Last Member Query Interval), and wait for IGMP group membership reports. If there are other receivers connecting to the switch, they will response to the queries before the Last Member Query Interval expires. If no reports are received after the response time of the last query expires, the querier will remove the port from the forwarding list of the corresponding multicast group.

That is, if there are other receivers connecting to the switch, the one sent leave message have to wait until the port ages out from the switch's forwarding list of the corresponding multicast group (the maximum waiting time is decided by the Member Port Aging Time).

With Fast Leave enabled on a VLAN, the switch will remove the (Multicast Group, Port, VLAN) entry from the multicast forwarding table before forwarding the leave message to the querier. This helps to reduce bandwidth waste since the switch no longer sends the corresponding multicast streams to the VLAN of the port as soon as the port receives a leave message from the VLAN.

vlan-id-list: Specify the ID or the ID list of the VLAN(s).

Step 7 **ip igmp snooping vlan-config** *vlan-id-list* **rport interface { fastEthernet** *port-list* **| gigabitEthernet** *port-list* **| ten-gigabitEthernet** *port-list*| **port-channel** *lag-list* **}**

(Optional) Specify the static router ports for the VLANs. Static router ports do not age.

vlan-id-list: Specify the ID or the ID list of the VLAN(s).

port-list: The number or the list of the Ethernet port that need to be configured as static router ports.

lag-list: The ID or the list of the LAG that need to be configured as static router ports.

Step 8 **ip igmp snooping vlan-config** *vlan-id-list* **router-ports-forbidden interface { fastEthernet** *port-list* **| gigabitEthernet** *port-list* **| ten-gigabitEthernet** *port-list*| **port-channel** *lag-list* **}**

(Optional) Specify the ports to forbid them from being router ports in the VLANs.

vlan-id-list: Specify the ID or the ID list of the VLAN(s).

port-list: The number or the list of the Ethernet port that need to be forbidden from being router ports.

lag-list: The ID or the list of the LAG that need to be forbidden from being router ports.

Step 9	**ip igmp snooping vlan-config** *vlan-id-list* **querier** (Optional) Enable the IGMP Snooping Querier for the VLAN. By default, it is disabled. When enabled, the switch acts as an IGMP Snooping Querier for the hosts in this VLAN. A querier periodically sends a general query on the network to solicit membership information, and sends group-specific queries when it receives leave messages from hosts. *vlan-id-list:* Specify the ID or the ID list of the VLAN(s). After enabling IGMP Snooping Querier feature, you need to specify the corresponding parameters including the Last Member Query Count, Last Member Query Interval, Maximum Response Time, Query Interval and General Query Source IP. Use the command below in global configuration mode to configure the parameters: **ip igmp snooping vlan-config** *vlan-id-list* **querier { max-response-time** *response-time* **| query-interval** *interval* **| general-query source-ip** *ip-addr* **| last-member-query-count** *num* **| last-member-query-interval** *interval* **}** *vlan-id-list:* Specify the ID or the ID list of the VLAN(s). *response-time:* Specify the host's maximum response time to general query messages. Valid values are from 1 to 25 seconds, and the default value is 10 seconds. **query-interval** *interval:* Specify the interval between general query messages sent by the switch. Valid values are from 10 to 300 seconds, and the default value is 60 seconds. *ip-addr:* Specify the source IP address of the general query messages sent by the switch. It should be a unicast address. By default, it is 0.0.0.0. *num:* Specify the number of group-specific queries to be sent. With IGMP Snooping Querier enabled, when the switch receives an IGMP leave message, it obtains the address of the multicast group that the host wants to leave from the message. Then the switch sends out group-specific queries to this multicast group through the port receiving the leave message. If specified count of group-specific queries are sent and no report message is received, the switch will delete the multicast address from the multicast forwarding table. Valid values are from 1 to 5, and the default value is 2. **last-member-query-interval** *interval:* Specify the interval between group-specific queries. Valid values are from 1 to 5 seconds, and the default value is 1 second.
Step 10	**show ip igmp snooping vlan** *vlan-id* Show the basic IGMP Snooping configuration in the specified VLAN.
Step 11	**end** Return to privileged EXEC mode.
Step 12	**copy running-config startup-config** Save the settings in the configuration file.

The following example shows how to enable IGMP Snooping for VLAN 1, and configure the member port aging time as 300 seconds, the router port aging time as 320 seconds, and then enable Fast Leave and Report Suppression for the VLAN:

Switch#configure

Switch(config)#ip igmp snooping vlan-config 1 **mtime** 300

Switch(config)#ip igmp snooping vlan-config 1 **rtime** 320

Switch(config)#ip igmp snooping vlan-config 1 **immediate-leave**

Switch(config)#ip igmp snooping vlan-config 1 **report-suppression**

Switch(config)#show ip igmp snooping vlan 1

Vlan Id: 1

Vlan IGMP Snooping Status: Enable

Fast Leave: Enable

Report Suppression: Enable

Router Time:320

Member Time: 300

Querier: Disable

...

Switch(config)#end

Switch#copy running-config startup-config

The following example shows how to enable IGMP Snooping querier for VLAN 1, and configure the query interval as 100 seconds, the maximum response time as 15 seconds, the last member query interval as 2 seconds, the last member query count as 3, and the general query source IP as 192.168.0.5:

Switch#configure

Switch(config)#ip igmp snooping vlan-config 1 **querier**

Switch(config)#ip igmp snooping vlan-config 1 **querier query-interval** 100

Switch(config)#ip igmp snooping vlan-config 1 **querier max-response-time** 15

Switch(config)#ip igmp snooping vlan-config 1 **querier last-member-query-interval** 2

Switch(config)#ip igmp snooping vlan-config 1 **querier last-member-query-count** 3

Switch(config)#ip igmp snooping vlan-config 1 **querier general-query source-ip**192.168.0.5

Switch(config)#show ip igmp snooping vlan 1

Vlan Id: 1

...

Querier:

Maximum Response Time: 15

Query Interval: 100

Last Member Query Interval: 2

Last Member Query Count: 3

General Query Source IP: 192.168.0.5

...

Switch(config)#end

Switch#copy running-config startup-config

2.2.3 Configuring IGMP Snooping for Ports

Follow these steps to configure IGMP Snooping for ports:

Step 1	**configure** Enter global configuration mode.
Step 2	**interface {fastEthernet** *port* **| range fastEthernet** *port-list* **| gigabitEthernet** *port* **| range gigabitEthernet** *port-list* **| ten-gigabitEthernet** *port* **| range ten-gigabitEthernet** *port-list***| port-channel** *port-channel-id* **| range port-channel** *port-channel-list***}** Enter interface configuration mode**.**
Step 3	**ip igmp snooping** Enable IGMP Snooping for the port. By default, it is enabled.
Step 4	**ip igmp snooping immediate-leave** (Optional) Enable Fast Leave on the specified port. Fast Leave can be enabled on a per-port basis or per-VLAN basis. When enabled on a per-port basis, the switch will remove the port from the corresponding multicast group of all VLANs before forwarding the leave message to the querier. You should only use Fast Leave for a port when there is a single receiver connected to the port. For more details about Fast Leave, see *2.2.2 Configuring IGMP Snooping for VLANs*.
Step 5	**show ip igmp snooping interface [fastEthernet** [*port-list*] | **gigabitEthernet** [*port-list*] **| ten-gigabitEthernet** [*port-list*] **| port-channel** [*port-channel-list*] **] basic-config** Show the basic IGMP Snooping configuration on the specified port(s) or of all the ports.
Step 6	**end** Return to privileged EXEC mode.
Step 7	**copy running-config startup-config** Save the settings in the configuration file.

The following example shows how to enable IGMP Snooping and fast leave for port 1/0/1-3:

Switch#configure

Switch(config)#interface range gigabitEhternet 1/0/1-3

Switch(config-if-range)#ip igmp snooping

Switch(config-if-range)#ip igmp snooping immediate-leave

Switch(config-if-range)#show ip igmp snooping interface gigabitEthernet 1/0/1-3

Port	IGMP-Snooping	Fast-Leave
Gi1/0/1	enable	enable
Gi1/0/2	enable	enable
Gi1/0/3	enable	enable

Switch(config-if-range)#end

Switch#copy running-config startup-config

2.2.4 Configuring Hosts to Statically Join a Group

Hosts or Layer 2 ports normally join multicast groups dynamically, but you can also configure hosts to statically join a group.

Follow these steps to configure hosts to statically join a group:

Step 1	**configure** Enter global configuration mode.
Step 2	**ip igmp snooping vlan-config** *vlan-id-list* **static** *ip* **interface { fastEthernet** *port-list* **| gigabitEthernet** *port-list* **| ten-gigabitEthernet** *port-list*| **port-channel** *lag-list* **}** *vlan-id-list:* Specify the ID or the ID list of the VLAN(s). *ip:* Specify the IP address of the multicast group that the hosts want to join. *port-list* / *lag-list:* Specify the ports that is connected to the hosts. These ports will become static member ports of the group.
Step 3	**show ip igmp snooping groups static** Show the static MLD Snooping configuration.
Step 4	**end** Return to privileged EXEC mode.
Step 5	**copy running-config startup-config** Save the settings in the configuration file.

The following example shows how to configure port 1/0/1-3 in VLAN 2 to statically join the multicast group 239.1.2.3:

Switch#configure

Switch(config)#ip igmp snooping vlan-config 2 **static** 239.1.2.3 **interface gigabitEthernet** 1/0/1-3

Switch(config)#show ip igmp snooping groups static

Multicast-ip	VLAN-id	Addr-type	Switch-port
----------	-------	---------	----------
239.1.2.3	2	static	Gi1/0/1-3

Switch(config)#end

Switch#copy running-config startup-config

2.2.5 Configuring IGMP Accounting and Authentication Features

You can enable IGMP accounting and authentication according to your need. IGMP accounting is configured globally, and IGMP authentication can be enabled on a per-port basis.

To use these features, you need to set up a RADIUS server and configure add the RADIUS server for the switch.

Follow these steps to add the RADIUS server and enable IGMP accounting globally:

Step 1	**configure** Enter global configuration mode.
Step 2	**radius-server host** *ip-address* **[auth-port** *port-id* **] [acct-port** *port-id* **] [timeout** *time* **] [retransmit** *number* **] [nas-id** *nas-id* **] key { [** 0 **]** *string* | 7 *encrypted-string* **}** Add the RADIUS server and configure the related parameters as needed. **host** *ip-address:* Enter the IP address of the server running the RADIUS protocol. **auth-port** *port-id:* Specify the UDP destination port on the RADIUS server for authentication requests. The default setting is 1812. **acct-port** *port-id:* Specify the UDP destination port on the RADIUS server for accounting requests. The default setting is 1813. Usually, it is used in the 802.1X feature. **timeout** *time:* Specify the time interval that the switch waits for the server to reply before resending. The valid values are from 1 to 9 seconds and the default setting is 5 seconds. **retransmit** *number:* Specify the number of times a request is resent to the server if the server does not respond. The valid values are from 1 to 3 and the default setting is 2. **nas-id** *nas-id:* Specify the name of the NAS (Network Access Server) to be contained in RADIUS packets for identification. It ranges from 1 to 31 characters. The default value is the MAC address of the switch. Generally, the NAS indicates the switch itself. **key {** [0] *string* **|** 7 *encrypted-string* **}**: Specify the shared key. 0 and 7 represent the encryption type. 0 indicates that an unencrypted key will follow. 7 indicates that a symmetric encrypted key with a fixed length will follow. By default, the encryption type is 0. *string* is the shared key for the switch and the server, which contains 31 characters at most. *encrypted-string* is a symmetric encrypted key with a fixed length, which you can copy from the configuration file of another switch. The key or encrypted-key you configure here will be displayed in the encrypted form.

Step 3	**ip igmp snooping accouting** Enable IGMP accounting globally.
Step 4	**show ip igmp snooping** Show the basic IGMP Snooping configuration.
Step 5	**end** Return to privileged EXEC mode.
Step 6	**copy running-config startup-config** Save the settings in the configuration file.

Follow these steps to enable IGMP authentication for ports:

Step 1	**configure** Enter global configuration mode.
Step 2	**interface {fastEthernet** *port* **| range fastEthernet** *port-list* **| gigabitEthernet** *port* **| range gigabitEthernet** *port-list* **| ten-gigabitEthernet** *port* **| range ten-gigabitEthernet** *port-list*| **port-channel** *port-channel-id* **| range port-channel** *port-channel-list***}** Enter interface configuration mode**.**
Step 3	**ip igmp snooping authentication** Enable IGMP Snooping authentication for the port. By default, it is enabled.
Step 4	**show ip igmp snooping interface [fastEthernet** [*port-list*] | **gigabitEthernet** [*port-list*] **| ten-gigabitEthernet** [*port-list*] **| port-channel** [*port-channel-list*] **] authentication** Show the basic IGMP Snooping configuration on the specified port(s) or of all the ports.
Step 5	**end** Return to privileged EXEC mode.
Step 6	**copy running-config startup-config** Save the settings in the configuration file.

The following example shows how to enable IGMP accounting globally:

Switch#configure

Switch(config)#ip igmp snooping accounting

Switch(config)#show ip igmp snooping

...

Global Authentication Accounting: Enable

Enable Port: Gi1/0/1-28, Po1-14

Enable VLAN:

Switch(config)#end

Switch#copy running-config startup-config

The following example shows how to enable IGMP authentication on port 1/0/1-3:

Switch#configure

Switch(config)#interface range gigabitEhternet 1/0/1-3

Switch(config-if-range)#ip igmp snooping authentication

Switch(config-if-range)#show ip igmp snooping interface gigabitEthernet 1/0/1-3 **authentication**

Port	IGMP-Authentication
----------	----------
Gi1/0/1	enable
Gi1/0/2	enable
Gi1/0/3	enable

Switch(config)#end

Switch#copy running-config startup-config

3 MLD Snooping Configuration

To complete MLD Snooping configuration, follow these steps:

1) Enable MLD Snooping globally and configure the global parameters.
2) Configure MLD Snooping for VLANs.
3) Configure MLD Snooping for ports.
4) (Optional) Configure hosts to statically join a group.

Note:


MLD Snooping takes effect only when it is enabled globally, in the corresponding VLAN and port at the same time.

3.1 Using the GUI

3.1.1 Configuring MLD Snooping Globally

Choose the menu **L2 FEATURES > Multicast > MLD Snooping > Global Config** to load the following page.

Figure 3-1 Configure MLD Snooping Globally

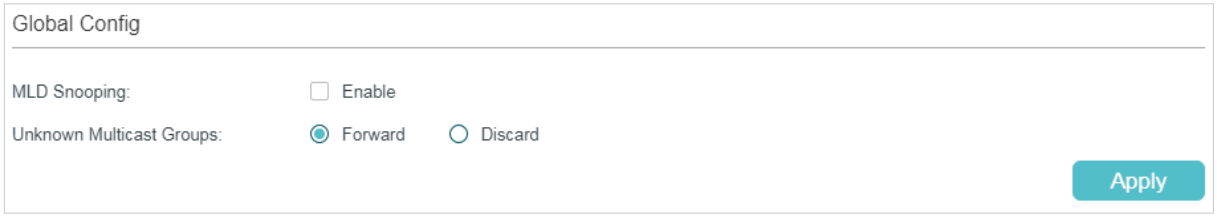

Follow these steps to configure MLD Snooping globally:

1) In the **Global Config** section, enable MLD Snooping and configure the Unknown Multicast Groups feature globally.

MLD Snooping	Enable or disable MLD Snooping globally.
Unknown Multicast Groups	Configure the way in which the switch processes data that are sent to unknown multicast groups as Forward or Discard. By default, it is Forward. Unknown multicast groups are multicast groups that do not match any of the groups announced in earlier IGMP membership reports, and thus cannot be found in the multicast forwarding table of the switch. *Note:* IGMP Snooping and MLD Snooping share the setting of Unknown Multicast Groups, so you have to enable IGMP Snooping globally on the **L2 FEATURES > Multicast > IGMP Snooping > Global Config** page at the same time.

2) Click **Apply**.


3.1.2 Configuring MLD Snooping for VLANs

Before configuring MLD Snooping for VLANs, set up the VLANs that the router ports and the member ports are in. For details, please refer to *Configuring 802.1Q VLAN*.

The switch supports configuring MLD Snooping on a per-VLAN basis. After MLD Snooping is enabled globally, you also need to enable MLD Snooping and configure the corresponding parameters for the VLANs that the router ports and the member ports are in.

Choose the menu **L2 FEATURES > Multicast > MLD Snooping > Global Config,** and click in your desired VLAN entry in the **MLD VLAN Config** section to load the following page.

Figure 3-2 Configure MLD Snooping for VLAN

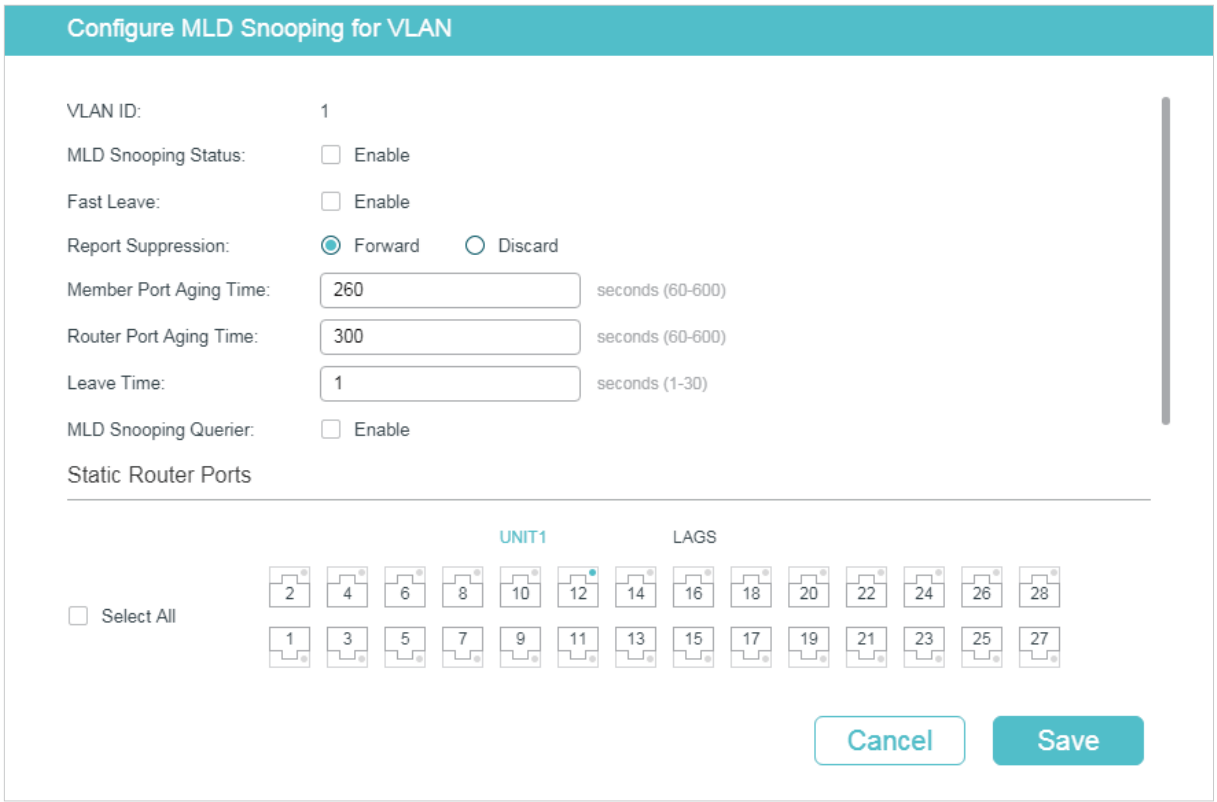

Follow these steps to configure MLD Snooping for a specific VLAN:

1) Enable MLD Snooping for the VLAN, and configure the corresponding parameters.

VLAN ID	Displays the VLAN ID.
MLD Snooping Status	Enable or disable MLD Snooping for the VLAN.

Fast Leave	Enable or disable Fast Leave for the VLAN. Without Fast Leave, after a receiver sends an MLD done message (equivalent to an IGMP leave message) to leave a multicast group, the switch will forward the done message to the Layer 3 device (the querier). From the point of view of the querier, the port connecting to the switch is a member port of the corresponding multicast group. After receiving the done message from the switch, the querier will send out a configured number (Last Listener Query Count) of Multicast-Address-Specific Queries (MASQs) on that port with a configured interval (Last Listener Query Interval), and wait for MLD reports. If there are other receivers connecting to the switch, they will response to the MASQs before the Last Listener Query Interval expires. If no reports are received after the response time of the last query expires, the querier will remove the port from the forwarding list of the corresponding multicast group. That is, if there are other receivers connecting to the switch, the one sent done message have to wait until the port ages out from the switch's forwarding list of the corresponding multicast group (the maximum waiting time is decided by the Member Port Aging Time). With Fast Leave enabled on a VLAN, the switch will remove the (Multicast Group, Port, VLAN) entry from the multicast forwarding table before forwarding the done message to the querier. This helps to reduce bandwidth waste since the switch no longer sends the corresponding multicast streams to the VLAN of the port as soon as the port receives a done message from the VLAN.
Report Suppression	Enable or disable Report Suppression for the VLAN. When enabled, the switch will only forward the first MLD report message for each multicast group to the MLD querier and suppress subsequent MLD report messages for the same multicast group during one query interval. This feature prevents duplicate report messages from being sent to the MLD querier.
Member Port Aging Time	Specify the aging time of the member ports in the VLAN. Once the switch receives an MLD report message from a port, the switch adds this port to the member port list of the corresponding multicast group. Member ports that are learned in this way are called dynamic member ports. If the switch does not receive any MLD report messages for a specific multicast group from a dynamic member port, it will no longer consider this port as a member port of this multicast group and delete it from the multicast forwarding table.
Router Port Aging Time	Specify the aging time of the router ports in the VLAN. Once the switch receives an MLD general query message from a port, the switch adds this port to the router port list. Router ports that are learned in this way are called dynamic router ports. If the switch does not receive any MLD general query messages from a dynamic router port within the router port aging time, the switch will no longer consider this port as a router port and delete it from the router port list.


Leave Time	Specify the leave time for the VLAN. When the switch receives a done message from a port to leave a multicast group, it will wait for a leave time before removing the port from the multicast group. During the period, if the switch receives any report messages from the port, the port will not be removed from the multicast group. Exceptions are as follows: • If the member port ages out before the Leave Time ends and no report messages are received, the port will be removed from the multicast group once its Member Port Aging Time ends. • The Leave Time mechanism will not take effect when Fast Leave takes effect. A proper leave time value can avoid other hosts connecting to the same port of the switch being mistakenly removed from the multicast group when only some of them want to leave.
MLD Snooping Querier	Enable or disable the MLD Snooping Querier for the VLAN. When enabled, the switch acts as an MLD Snooping Querier for the hosts in this VLAN. A querier periodically sends a general query on the network to solicit membership information, and sends MASQs when it receives done messages from hosts.
Query Interval	With MLD Snooping Querier enabled, specify the interval between general query messages sent by the switch.
Maximum Response Time	With MLD Snooping Querier enabled, specify the host's maximum response time to general query messages.
Last Listener Query Interval	With MLD Snooping Querier enabled, when the switch receives a done message, it obtains the address of the multicast group that the host wants to leave from the message. Then the switch sends out MASQs to this multicast group through the port receiving the done message. This parameter determines the interval between MASQs.
Last Listener Query Count	With MLD Snooping Querier enabled, specify the number of MASQs to be sent. If specified count of MASQs are sent and no report message is received, the switch will delete the multicast address from the multicast forwarding table.
General Query Source IP	With MLD Snooping Querier enabled, specify the source IPv6 address of the general query messages sent by the switch. It should be an IPv6 link-local address..
Static Router Ports	Select one or more ports to be the static router ports in the VLAN. Static router ports do not age. Multicast streams and MLD packets to all groups in this VLAN will be forwarded through the static router ports. Multicast streams and MLD packets to the groups that have dynamic router ports will be also forwarded through the corresponding dynamic router ports.
Forbidden Router Ports	Select the ports to forbid them from being router ports in the VLAN.

2) Click **Save**.

3.1.3 Configuring MLD Snooping for Ports

Choose the menu **L2 FEATURES > Multicast > MLD Snooping > Port Config** to load the following page.

Figure 3-3 Configure MLD Snooping for Ports

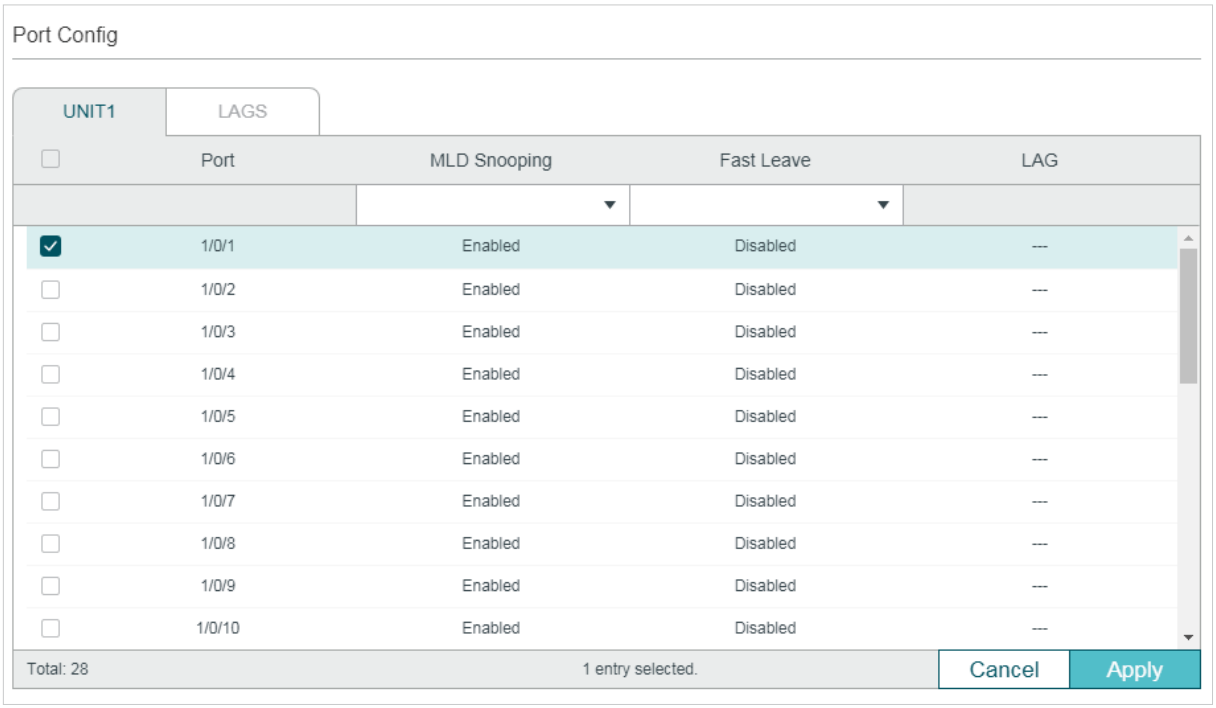

Follow these steps to configure MLD Snooping for ports:

1) Enable MLD Snooping for the port and enable Fast Leave if there is only one receiver connected to the port.

MLD Snooping	Enable or disable MLD Snooping for the port.
Fast Leave	Enable or disable Fast Leave for the port. Fast Leave can be enabled on a per-port basis or per-VLAN basis. When enabled on a per-port basis, the switch will remove the port from the corresponding multicast group of all VLANs before forwarding the done message to the querier. You should only use Fast Leave for a port when there is a single receiver connected to the port. For more details about Fast Leave, see *3.1.2 Configuring MLD Snooping for VLANs*.
LAG	Displays the LAG the port belongs to.


2) Click **Apply**.

3.1.4 Configuring Hosts to Statically Join a Group

Hosts or Layer 2 ports normally join multicast groups dynamically, but you can also configure hosts to statically join a group.

Choose the menu **L2 FEATURES > Multicast > MLD Snooping > Static Group Config** and click Add to load the following page.

Figure 3-4 Configure Hosts to Statically Join a Group

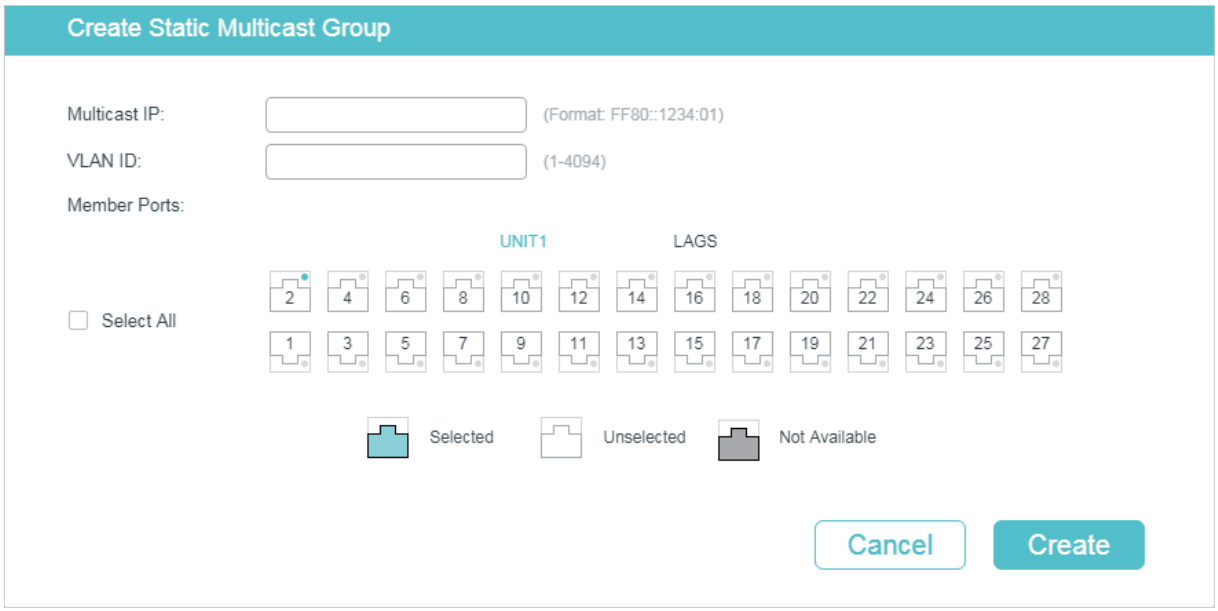

Follow these steps to configure hosts to statically join a group:

1) Specify the multicast IP address, VLAN ID. Select the ports to be the static member ports of the multicast group.

Multicast IP	Specify the IPv6 address of the multicast group that the hosts need to join.
VLAN ID	Specify the VLAN that the hosts are in.
Member Ports	Select the ports that the hosts are connected to. These ports will become the static member ports of the multicast group and will never age.

2) Click **Create**.

3.2 Using the CLI

3.2.1 Configuring MLD Snooping Globally

Follow these steps to configure MLD Snooping globally:

Step 1	**configure** Enter global configuration mode.
Step 2	**ipv6 mld snooping** Enable MLD Snooping Globally.

Step 3	**ipv6 mld snooping drop-unknown** (Optional) Configure the way how the switch processes multicast streams that are sent to unknown multicast groups as Discard. By default, it is Forward. Unknown multicast groups are multicast groups that do not match any of the groups announced in earlier IGMP membership reports, and thus cannot be found in the multicast forwarding table of the switch. *Note:* IGMP Snooping and MLD Snooping share the setting of Unknown Multicast Groups, you need to ensure IGMP Snooping is enabled globally. To enable IGMP Snooping globally, use the **ip igmp snooping** command in global configuration mode.
Step 4	**show ipv6 mld snooping** Show the basic IGMP Snooping configuration.
Step 5	**end** Return to privileged EXEC mode.
Step 6	**copy running-config startup-config** Save the settings in the configuration file.

The following example shows how to enable MLD Snooping globally, and the way how the switch processes multicast streams that are sent to unknown multicast groups as discard.

Switch#configure

Switch(config)#ipv6 mld snooping

Switch(config)#ip igmp snooping

Switch(config)#ipv6 mld snooping drop-unknown

Switch(config)#show ipv6 mld snooping

MLD Snooping :Enable

Unknown Multicast :Discard

...

Switch(config)#end

Switch#copy running-config startup-config

3.2.2 Configuring MLD Snooping for VLANs

Before configuring MLD Snooping for VLANs, set up the VLANs that the router ports and the member ports are in. For details, please refer to *Configuring 802.1Q VLAN*.

The switch supports configuring MLD Snooping on a per-VLAN basis. After MLD Snooping is enabled globally, you also need to enable MLD Snooping and configure the corresponding parameters for the VLANs that the router ports and the member ports are in.

Follow these steps to configure MLD Snooping for VLANs:

Step 1 **configure**

Enter global configuration mode.

Step 2 **ipv6 mld snooping vlan-config** *vlan-id-list* **mtime** *member-time*

Enable MLD Snooping for the specified VLANs, and specify the member port aging time for the VLANs.

vlan-id-list: Specify the ID or the ID list of the VLAN(s).

member-time: Specify the aging time of the member ports in the specified VLANs. Valid values are from 60 to 600 seconds. By default, it is 260 seconds.

Once the switch receives an MLD report message from a port, the switch adds this port to the member port list of the corresponding multicast group. Member ports that are learned in this way are called dynamic member ports.

If the switch does not receive any MLD report message for a specific multicast group from a dynamic member port, it will no longer consider this port as a member port of this multicast group and delete it from the multicast forwarding table.

Step 3 **ipv6 mld snooping vlan-config** *vlan-id-list* **rtime** *router-time*

Specify the router port aging time for the VLANs.

vlan-id-list: Specify the ID or the ID list of the VLAN(s).

router-time: Specify the aging time of the router ports in the specified VLANs. Valid values are from 60 to 600 seconds. By default, it is 300 seconds.

Once the switch receives an MLD general query message from a port, the switch adds this port to the router port list. Router ports that are learned in this way are called dynamic router ports.

If the switch does not receive any MLD general query message from a dynamic router port within the router port aging time, the switch will no longer consider this port as a router port and delete it from the router port list.

Step 4 **ipv6 mld snooping vlan-config** *vlan-id-list* **ltime** *leave-time*

Specify the router port aging time for the VLANs.

vlan-id-list: Specify the ID or the ID list of the VLAN(s).

leave-time: Specify the leave time for the VLAN(s). Valid values are from 1 to 30 in seconds, and the default value is 1 second.

When the switch receives a leave message from a port to leave a multicast group, it will wait for a leave time before removing the port from the multicast group. During the period, if the switch receives any report messages from the port, the port will not be removed from the multicast group. Exceptions are as follows:

- If the member port ages out before the Leave Time ends and no report messages are received, the port will be removed from the multicast group once its Member Port Aging Time ends.
- The Leave Time mechanism will not take effect when Fast Leave takes effect.

A proper leave time value can avoid other hosts connecting to the same port of the switch being mistakenly removed from the multicast group when only some of them want to leave.

Step 5 **ipv6 mld snooping vlan-config** *vlan-id-list* **report-suppression**

(Optional) Enable Report Suppression for the VLANs. By default, it is disabled.

When enabled, the switch will only forward the first MLD report message for each multicast group to the MLD querier and suppress subsequent MLD report messages for the same multicast group during one query interval. This feature prevents duplicate report messages from being sent to the MLD querier.

vlan-id-list: Specify the ID or the ID list of the VLAN(s).

Step 6 **ipv6 mld snooping vlan-config** *vlan-id-list* **immediate-leave**

(Optional) Enable Fast Leave for the VLANs. By default, it is disabled.

Without Fast Leave, after a receiver sends an MLD done message (equivalent to an IGMP leave message) to leave a multicast group, the switch will forward the done message to the Layer 3 device (the querier).

From the point of view of the querier, the port connecting to the switch is a member port of the corresponding multicast group. After receiving the done message from the switch, the querier will send out a configured number (Last Listener Query Count) of Multicast-Address-Specific Queries (MASQs) on that port with a configured interval (Last Listener Query Interval), and wait for MLD reports. If there are other receivers connecting to the switch, they will response to the MASQs before the Last Listener Query Interval expires. If no reports are received after the response time of the last query expires, the querier will remove the port from the forwarding list of the corresponding multicast group.

That is, if there are other receivers connecting to the switch, the one sent done message have to wait until the port ages out from the switch's forwarding list of the corresponding multicast group (the maximum waiting time is decided by the Member Port Aging Time).

With Fast Leave enabled on a VLAN, the switch will remove the (Multicast Group, Port, VLAN) entry from the multicast forwarding table before forwarding the done message to the querier. This helps to reduce bandwidth waste since the switch no longer sends the corresponding multicast streams to the VLAN of the port as soon as the port receives a done message from the VLAN.

vlan-id-list: Specify the ID or the ID list of the VLAN(s).

Step 7 **ipv6 mld snooping vlan-config** *vlan-id-list* **rport interface { fastEthernet** *port-list* **| gigabitEthernet** *port-list* **| ten-gigabitEthernet** *port-list*| **port-channel** *lag-list* **}**

(Optional) Specify the static router ports for the VLANs. Static router ports do not age.

vlan-id-list: Specify the ID or the ID list of the VLAN(s).

port-list: The number or the list of the Ethernet port that need to be configured as static router ports.

lag-list: The ID or the list of the LAG that need to be configured as static router ports.

Step 8 **ipv6 mld snooping vlan-config** *vlan-id-list* **router-ports-forbidden interface { fastEthernet** *port-list* **| gigabitEthernet** *port-list* **| ten-gigabitEthernet** *port-list* **| port-channel** *lag-list* **}**

(Optional) Specify the ports to forbid them from being router ports in the VLANs.

vlan-id-list: Specify the ID or the ID list of the VLAN(s).

port-list: The number or the list of the Ethernet port that need to be forbidden from being router ports.

lag-list: The ID or the list of the LAG that need to be forbidden from being router ports.

Step 9	**ipv6 mld snooping vlan-config** *vlan-id-list* **querier** (Optional) Enable MLD Snooping Querier for the VLAN. By default, it is disabled. When enabled, the switch acts as an MLD Snooping Querier for the hosts in this VLAN. A querier periodically sends a general query on the network to solicit membership information, and sends group-specific queries when it receives done messages from hosts. *vlan-id-list:* Specify the ID or the ID list of the VLAN(s). After enabling MLD Snooping Querier feature, you need to specify the corresponding parameters including the Last Member Query Count, Last Member Query Interval, Maximum Response Time, Query Interval and General Query Source IP. Use the command below in global configuration mode to configure the parameters: **ipv6 mld snooping vlan-config** *vlan-id-list* **querier { max-response-time** *response-time* **| query-interval** *interval* **| general-query source-ip** *ip-addr* **| last-listener-query-count** *num* **| last-listener-query-interval** *interval* **}** *vlan-id-list:* Specify the ID or the ID list of the VLAN(s). *response-time:* Specify the host's maximum response time to general query messages. **query-interval** *interval:* Specify the interval between general query messages sent by the switch. *ip-addr:* Specify the source IP address of the general query messages sent by the switch. It should be an IPv6 link-local address. *num:* Specify the number of group-specific queries to be sent. With MLD Snooping Querier enabled, when the switch receives a done message, it obtains the address of the multicast group that the host wants to leave from the message. Then the switch sends out MASQs to this multicast group through the port receiving the done message. If specified count of MASQs are sent and no report message is received, the switch will delete the multicast address from the multicast forwarding table. **last-listener-query-interval** *interval:* Specify the interval between MASQs.
Step 10	**show ipv6 mld snooping vlan** *vlan-id* Show the basic MLD snooping configuration in the specified VLAN.
Step 11	**end** Return to privileged EXEC mode.
Step 12	**copy running-config startup-config** Save the settings in the configuration file.

The following example shows how to enable MLD Snooping for VLAN 1, and configure the member port aging time as 300 seconds, the router port aging time as 320 seconds, and then enable Fast Leave and Report Suppression for the VLAN:

Switch#configure

Switch(config)#ipv6 mld snooping vlan-config 1 **mtime** 300

Switch(config)#ipv6 mld snooping vlan-config 1 **rtime** 320

Switch(config)#ipv6 mld snooping vlan-config 1 **immediate-leave**

Switch(config)#ipv6 mld snooping vlan-config 1 **report-suppression**

Switch(config)#show ipv6 mld snooping vlan 1

Vlan Id: 1

Vlan MLD Snooping Status: Enable

Fast Leave: Enable

Report Suppression: Enable

Router Time: Enable

Member Time: Enable

Querier: Disable

...

Switch(config)#end

Switch#copy running-config startup-config

The following example shows how to enable MLD Snooping querier for VLAN 1, and configure the query interval as 100 seconds, the maximum response time as 15 seconds, the last listener query interval as 2 seconds, the last listener query count as 3, and the general query source IP as FE80::1:

Switch#configure

Switch(config)#ipv6 mld snooping vlan-config 1 **querier**

Switch(config)#ipv6 mld snooping vlan-config 1 **querier query-interval** 100

Switch(config)#ipv6 mld snooping vlan-config 1 **querier max-response-time** 15

Switch(config)#ipv6 mld snooping vlan-config 1 **querier last-listener-query-interval** 2

Switch(config)#ipv6 mld snooping vlan-config 1 **querier last-listener-query-count** 3

Switch(config)#ipv6 mld snooping vlan-config 1 **querier general-query source-ip** FE80::1

Switch(config)#show ipv6 mld snooping vlan 1

Vlan Id: 1

...

Querier:	Enable
Maximum Response Time:	15
Query Interval:	100
Last Member Query Interval:	2
Last Member Query Count:	3
General Query Source IP:	fe80::1

...

Switch(config)#end

Switch#copy running-config startup-config

3.2.3 Configuring MLD Snooping for Ports

Follow these steps to configure MLD Snooping for ports:

Step 1	**configure** Enter global configuration mode.
Step 2	**interface {fastEthernet** *port* **| range fastEthernet** *port-list* **| gigabitEthernet** *port* **| range gigabitEthernet** *port-list* **| ten-gigabitEthernet** *port* **| range ten-gigabitEthernet** *port-list***| port-channel** *port-channel-id* **| range port-channel** *port-channel-list***}** Enter interface configuration mode**.**
Step 3	**ipv6 mld snooping** Enable MLD Snooping for the port. By default, it is enabled.
Step 4	**ipv6 mld snooping immediate-leave** (Optional) Enable Fast Leave on the specified port. Fast Leave can be enabled on a per-port basis or per-VLAN basis. When enabled on a per-port basis, the switch will remove the port from the corresponding multicast group of all VLANs before forwarding the done message to the querier. You should only use Fast Leave for a port when there is a single receiver connected to the port. For more details about Fast Leave, see *3.2.2 Configuring MLD Snooping for VLANs*.
Step 5	**show ipv6 mld snooping interface [fastEthernet** [*port-list*] **| gigabitEthernet** [*port-list*] **| ten-gigabitEthernet** [*port-list*] **| port-channel** [*port-channel-list*]**] basic-config** Show the basic MLD Snooping configuration on the specified port(s) or of all the ports.
Step 6	**end** Return to privileged EXEC mode.
Step 7	**copy running-config startup-config** Save the settings in the configuration file.

The following example shows how to enable MLD Snooping and fast leave for port 1/0/1-3:

Switch#configure

Switch(config)#interface range gigabitEhternet 1/0/1-3

Switch(config-if-range)#ipv6 mld snooping

Switch(config-if-range)#ipv6 mld snooping immediate-leave

Switch(config-if-range)#show ipv6 mld snooping interface gigabitEthernet 1/0/1-3

Port	MLD-Snooping	Fast-Leave
Gi1/0/1	enable	enable
Gi1/0/2	enable	enable
Gi1/0/3	enable	enable

Switch(config-if-range)#end

Switch#copy running-config startup-config

3.2.4 Configuring Hosts to Statically Join a Group

Hosts or Layer 2 ports normally join multicast groups dynamically, but you can also configure hosts to statically join a group.

Follow these steps to configure hosts to statically join a group:

Step 1	**configure** Enter global configuration mode.
Step 2	**ipv6 mld snooping vlan-config** *vlan-id-list* **static** *ip* **interface {fastEthernet** *port-list* **| gigabitEthernet** *port-list* **| ten-gigabitEthernet** *port-list* **| port-channel** *lag-list***}** *vlan-id-list:* Specify the ID or the ID list of the VLAN(s). *ip:* Specify the IP address of the multicast group that the hosts want to join. *port-list* / *lag-list:* Specify the ports that is connected to the hosts. These ports will become static member ports of the group.
Step 3	**show ipv6 mld snooping groups static** Show the static MLD Snooping configuration.
Step 4	**end** Return to privileged EXEC mode.
Step 5	**copy running-config startup-config** Save the settings in the configuration file.

The following example shows how to configure port 1/0/1-3 in VLAN 2 to statically join the multicast group FF80::1001:

Switch#configure

Switch(config)#ipv6 mld snooping vlan-config 2 **static** FF80::1001 **interface gigabitEthernet** 1/0/1-3

Switch(config)#show ipv6 mld snooping groups static

Multicast-ip	VLAN-id	Addr-type	Switch-port
----------	-------	---------	----------
ff80::1001	2	static	Gi1/0/1-3

Switch(config)#end

Switch#copy running-config startup-config

4 MVR Configuration

To complete MVR configuration, follow these steps:

1) Configure 802.1Q VLANs.
2) Configure MVR globally.
3) Add multicast groups to MVR.
4) Configure MVR for the ports.
5) Statically add ports to MVR groups.

Configuration Guidelines

- MVR does not support IGMPv3 messages.
- Do not configure MVR on private VLAN ports, otherwise MVR cannot take effect.
- MVR operates on the underlying mechanism of IGMP Snooping, but the two features operate independently of each other. Both protocols can be enabled on a port at the same time. When both are enabled, MVR listens to the report and leave messages only for the multicast groups configured in MVR. All other multicast groups are managed by IGMP Snooping.

4.1 Using the GUI


4.1.1 Configuring 802.1Q VLANs

Before configuring MVR, create an 802.1Q VLAN as the multicast VLAN. Add all source ports (uplink ports that receive multicast data from the router) to the multicast VLAN as tagged ports. Configure 802.1Q VLANs for the receiver ports (ports that are connecting to the hosts) according to network requirements. Note that receiver ports can only belong to one VLAN and cannot be added to the multicast VLAN. For details, refer to *Configuring 802.1Q VLAN*.

4.1.2 Configuring MVR Globally

Choose the menu **L2 FEATURES > Multicast > MVR > MVR Config** to load the following page.

Figure 4-1 Configure MVR Globally

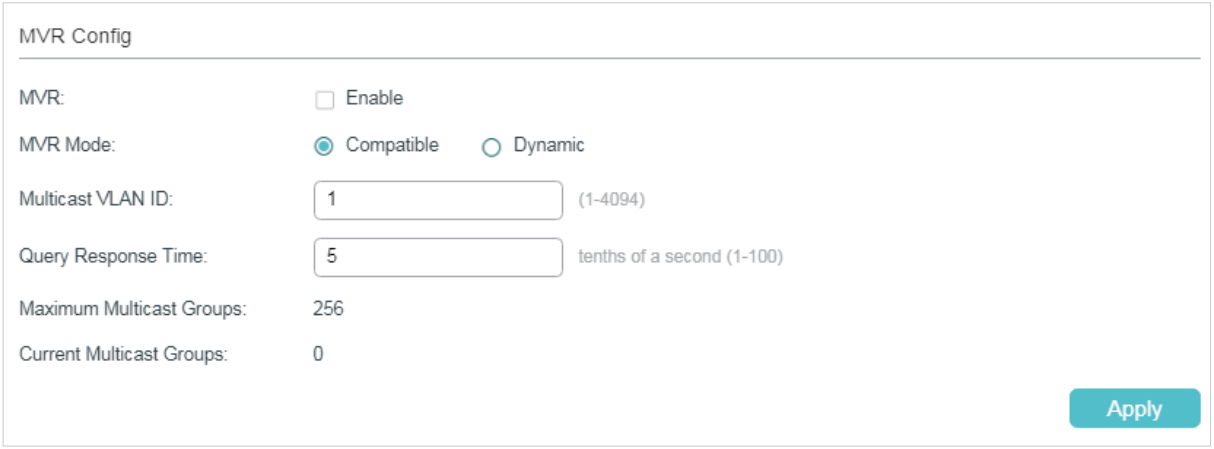

Follow these steps to configure MVR globally:

1) Enable MVR globally and configure the global parameters.


MVR	Enable or disable MVR globally.
MVR Mode	Specify the MVR mode as compatible or dynamic. **Compatible:** In this mode, the switch does not forward report or leave messages from the hosts to the IGMP querier. This means IGMP querier cannot learn the multicast groups' membership information from the switch. The IGMP querier must be statically configured to transmit all the required multicast streams to the switch via the multicast VLAN. **Dynamic:** In this mode, after receiving report or leave messages from the hosts, the switch will forward them to the IGMP querier via the multicast VLAN (with appropriate translation of the VLAN ID). The IGMP querier can learn the multicast groups' membership information through the report and leave messages, and transmit the multicast streams to the switch via the multicast VLAN according to the multicast forwarding table.
Multicast VLAN ID	Specify an existing 802.1Q VLAN as the multicast VLAN.
Query Response Time	Specify the maximum time to wait for the IGMP membership report since the switch receives an IGMP leave message on a receiver port. After receiving an IGMP leave message from a receiver port, the switch will send out group-specific queries and wait for IGMP membership reports. If no IGMP membership reports are received before the Query Response Time expires, the switch will remove the port from the multicast group.
Maximum Multicast Groups	Displays the maximum number of multicast groups that can be configured on the switch.
Current Multicast Groups	Displays the current number of multicast groups that have been configured on the switch.

2) Click **Apply**.

4.1.3 Adding Multicast Groups to MVR

You need to manually add multicast groups to the MVR. Choose the menu **L2 FEATURES > Multicast > MVR > MVR Group Config** and click Add to load the following page.

Figure 4-2 Add Multicast Groups to MVR

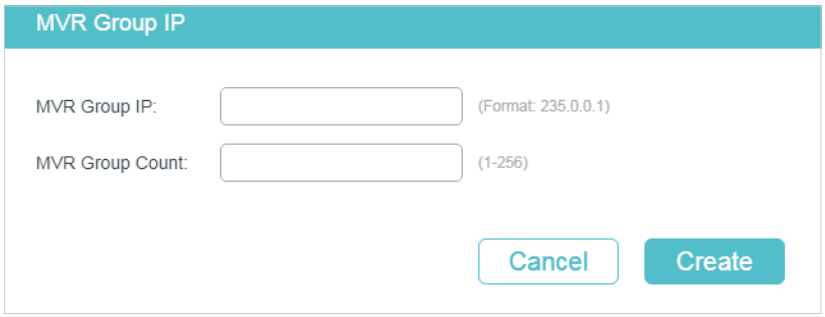

Follow these steps to add multicast groups to MVR:


1) Specify the IP address of the multicast groups.

MVR Group IP / MVR Group Count	Specify the start IP address and the number of contiguous series of multicast groups. Multicast data sent to the address specified here will be sent to all source ports on the switch and all receiver ports that have requested to receive data from that multicast address.

2) Click **Create**.

Then the added multicast groups will appear in the MVR group table, as the following figure shows:

Figure 4-3 MVR Group Table

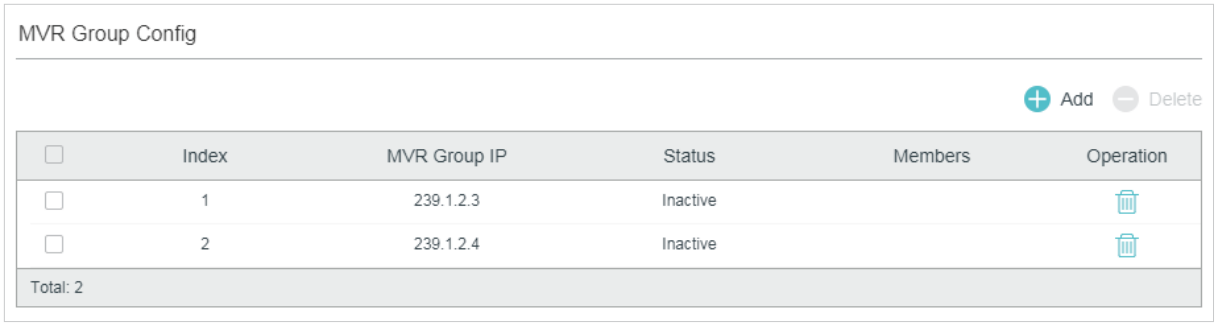


MVR Group IP	Displays the IP address of multicast group.

Status	Displays the status of the MVR group. In compatible mode, all the MVR groups are added manually, so the status is always active. In dynamic mode, there are two status: **Inactive**: The MVR group is added successfully, but the source port has not received any query messages from this multicast group. **Active**: The MVR group is added successfully and the source port has received query messages from this multicast group.
Member	Displays the member ports in this MVR group.

4.1.4 Configuring MVR for the Port

Choose the menu **L2 FEATURES > Multicast > MVR > Port Config** to load the following page.

Figure 4-4 Configure MVR for the Port

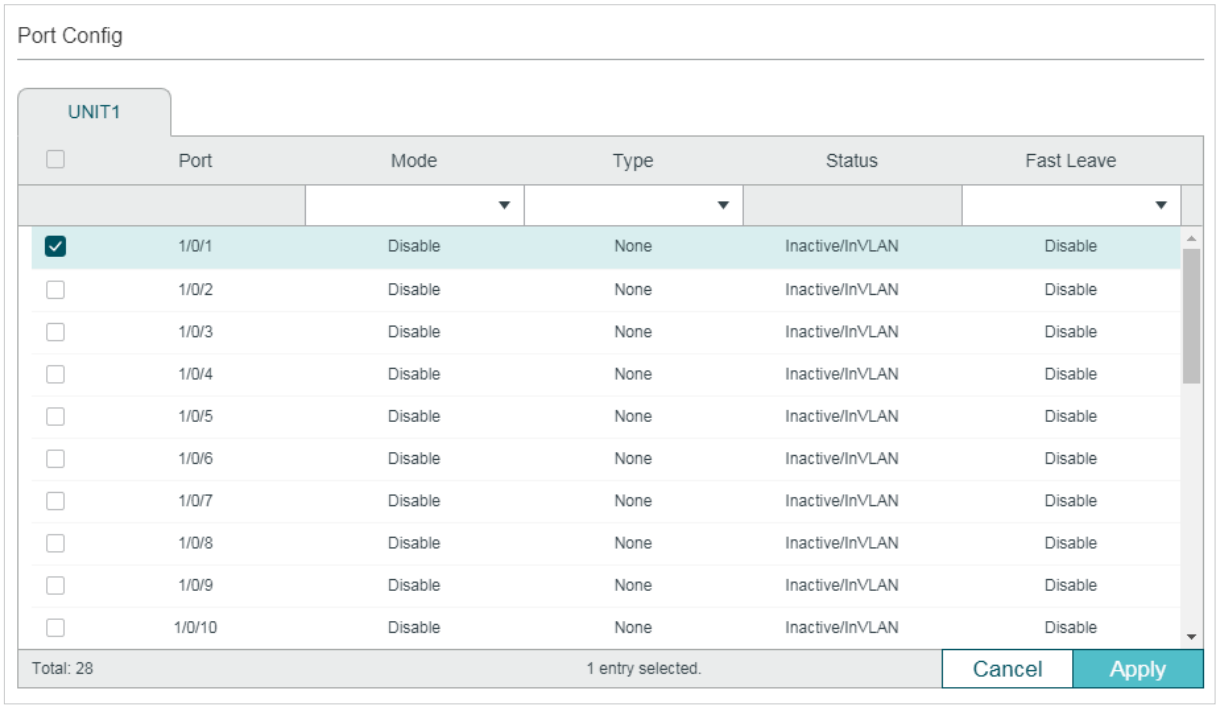

Follow these steps to add multicast groups to MVR:

1) Select one or more ports to configure.
2) Enable MVR, and configure the port type and Fast Leave feature for the port.

Mode	Enable or disable MVR for the selected ports.

Type	Configure the port type. **None**: The port is a non-MVR port. If you attempt to configure a non-MVR port with MVR characteristics, the operation will be unsuccessful. **Source**: Configure the uplink ports that receive and send multicast data on the multicast VLAN as source ports. Source ports should belong to the multicast VLAN. In compatible mode, source ports will be automatically added to all multicast groups, while in dynamic mode, you need to manually add them to the corresponding multicast groups. **Receiver**: Configure the ports that are connecting to the hosts as receiver ports. A receiver port can only belong to one VLAN, and cannot belong to the multicast VLAN. In both modes, the switch will add or remove the receiver ports to the corresponding multicast groups by snooping the report and leave messages from the hosts.
Status	Displays the port's status. **Active/InVLAN**: The port is physically up and in one or more VLANs. **Active/NotInVLAN**: The port is physically up and not in any VLAN. **Inactive/InVLAN**: The port is physically down and in one or more VLANs. **Inactive/NotInVLAN**: The port is physically down and not in any VLAN.
Fast Leave	Enable or disable Fast Leave for the selected ports. Only receiver ports support Fast Leave. Before enabling Fast Leave for a port, make sure there is only a single receiver device connecting to the port.


3) Click **Apply**.

4.1.5 (Optional) Adding Ports to MVR Groups Statically

You can add only receiver ports to MVR groups statically. The switch adds or removes receiver ports to the corresponding multicast groups by snooping the report and leave messages from the hosts. You can also statically add a receiver port to an MVR group.

Choose the menu **L2 FEATURES > Multicast > MVR > Static Group Members,** and click in your desired MVR group entry to load the following page.

Figure 4-5 Configure Hosts to Statically Join an MVR group

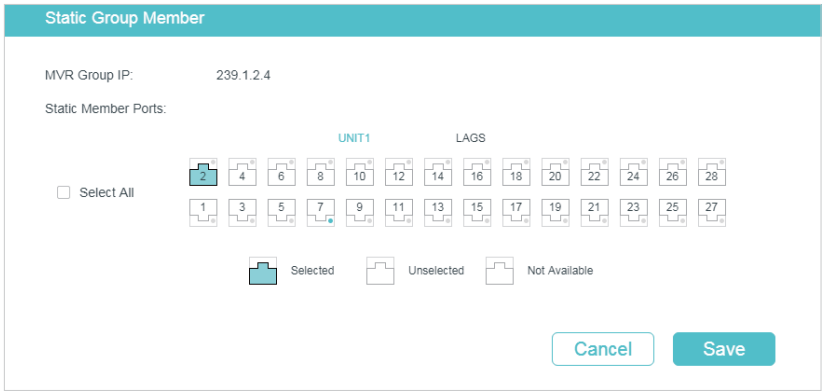

Follow these steps to statically add ports to an MVR group:

1) Select the ports to add them to the MVR group.
2) Click **Save**.

4.2 Using the CLI

4.2.1 Configuring 802.1Q VLANs

Before configuring MVR, create an 802.1Q VLAN as the multicast VLAN. Add the all source ports to the multicast VLAN as tagged ports. Configure 802.1Q VLANs for the receiver ports according to network requirements. Note that receiver ports can only belong to one VLAN and cannot be added to the multicast VLAN. For details, refer to *Configuring 802.1Q VLAN*.

4.2.2 Configuring MVR Globally

Follow these steps to configure MVR globally:

Step 1	**configure** Enter global configuration mode.
Step 2	**mvr** Enable MVR Globally.
Step 3	**mvr mode {** compatible | dynamic **}** Configure the MVR mode as compatible or dynamic. compatible: In this mode, the switch does not forward report or leave messages from the hosts to the IGMP querier. So the IGMP querier cannot learn the multicast groups membership information from the switch. You have to statically configure the IGMP querier to transmit all the required multicast streams to the switch via the multicast VLAN. dynamic: In this mode, after receiving report or leave messages from the hosts, the switch will forward them to the IGMP querier via the multicast VLAN (with appropriate translation of the VLAN ID). So the IGMP querier can learn the multicast groups membership information through the report and leave messages, and transmit the multicast streams to the switch via the multicast VLAN according to the multicast forwarding table.
Step 4	**mvr vlan** *vlan-id* Specify the multicast VLAN. *vlan-id:* Specify the ID of the multicast VLAN. Valid values are from 1 to 4094.

Step 5	**mvr querytime** *time* Specify the maximum time to wait for the IGMP membership reports since the switch receives an IGMP leave message on a receiver port. *time:* Specify the maximum response time. After receiving an IGMP leave message from a receiver port, the switch will send out group-specific queries and wait for IGMP membership reports. If no IGMP membership reports are received before this configured time expires, the switch will remove the port from the multicast group. Valid values are from 1 to100 tenths of a second, and the default value is 5 tenths of a second.
Step 6	**mvr group** *ip-addr count* Add multicast groups to the MVR. *ip-addr:* Specify the start IP address of the contiguous series of multicast groups. *count:* Specify the number of the multicast groups to be added to the MVR. The range is 1 to 256.
Step 7	**show mvr** Show the global MVR configuration. **show mvr members** Show the existing MVR groups.
Step 8	**end** Return to privileged EXEC mode.
Step 9	**copy running-config startup-config** Save the settings in the configuration file.

The following example shows how to enable MVR globally, and configure the MVR mode as compatible, the multicast VLAN as VLAN 2 and the query response time as 5 tenths of a second. Then add 239.1.2.3-239.1.2.5 to MVR group.

Switch#configure

Switch(config)#mvr mode compatible

Switch(config)#mvr vlan 2

Switch(config)#mvr querytime 5

Switch(config)#mvr group 239.1.2.3 3

Switch(config)#show mvr

MVR	:Enable
MVR Multicast Vlan	:2
MVR Max Multicast Groups	:256
MVR Current Multicast Groups	:3

MVR Global Query Response Time :5 (tenths of sec)

MVR Mode Type :Compatible

Switch(config)#show mvr members

MVR Group IP	status	Members
239.1.2.3	active	
239.1.2.4	active	
239.1.2.5	active	

Switch(config)#end

Switch#copy running-config startup-config

4.2.3 Configuring MVR for the Ports

Follow these steps to configure MLD Snooping globally:

Step 1	**configure** Enter global configuration mode.
Step 2	**interface {fastEthernet** *port* **| range fastEthernet** *port-list* **| gigabitEthernet** *port* **| range gigabitEthernet** *port-list* **| ten-gigabitEthernet** *port* **| range ten-gigabitEthernet** *port-list* **| port-channel** *port-channel-id* **| range port-channel** *port-channel-list***}** Enter interface configuration mode**.**
Step 3	**mvr** Enable MVR for the port.
Step 4	**mvr type {** source | receiver **}** Configure the MVR port type as receiver or source. By default, the port is a non-MVR port. If you attempt to configure a non-MVR port with MVR characteristics, the operation fails. source: Configure the uplink ports that receive and send multicast data on the multicast VLAN as source ports. Source ports should belong to the multicast VLAN. receiver: Configure the ports that are connecting to the hosts as receiver ports. A receiver port can only belong to one VLAN, and cannot belong to the multicast VLAN.
Step 5	**mvr immediate** (Optional) Enable the Fast Leave feature of MVR for the port. Only receiver ports support Fast Leave. Before enabling Fast Leave for a port, make sure there is only a single receiver device connecting to the port.

Step 6	**mvr vlan** *vlan-id* **group** *ip-addr* (Optional) Statically add the port to an MVR group. Then the port can receive multicast traffic sent to the IP multicast address via the multicast VLAN. This command applies to only receiver ports. The switch adds or removes the receiver ports to the corresponding multicast groups by snooping the report and leave messages from the hosts. You can also statically add a receiver port to an MVR group. *vlan-id*: Enter the multicast VLAN ID. *ip-addr*: Specify the IP address of the multicast group.
Step 7	**show mvr interface {fastEthernet [***port-list* **] | gigabitEthernet [***port-list* **] | ten-gigabitEthernet [***port-list* **] }** Show the MVR configuration of the specified interface(s). **show mvr members** Show the membership information of all MVR groups.
Step 8	**end** Return to privileged EXEC mode.
Step 9	**copy running-config startup-config** Save the settings in the configuration file.

The following example shows how to configure port 1/0/7 as source port, and port 1/0/1-3 as receiver ports. Then statically add port 1/0/1-3 to group 239.1.2.3 and enable MVR Fast Leave for these ports. The multicast VLAN is VLAN 2.

Switch#configure

Switch(config)#interface gigabitEthernet 1/0/7

Switch(config-if)#mvr

Switch(config-if)#mvr type source

Switch(config-if)#exit

Switch(config)#interface range gigabitEthernet 1/0/1-3

Switch(config-if-range)#mvr

Switch(config-if-range)#mvr type receiver

Switch(config-if-range)#mvr immediate

Switch(config-if-range)#mvr vlan 2 **group** 239.1.2.3

Switch(config-if-range)#show mvr interface gigabitEtnernet 1/0/1-3,1/0/7

Port	Mode	Type	Status	Immediate Leave
----------	----------	----------	----------	----------

Gi1/0/1	Enable	Receiver	INACTIVE/InVLAN	Enable
Gi1/0/2	Enable	Receiver	INACTIVE/InVLAN	Enable
Gi1/0/3	Enable	Receiver	INACTIVE/InVLAN	Enable
Gi1/0/7	Enable	Source	INACTIVE/InVLAN	Disable

Switch(config-if-range)#show mvr members

MVR Group IP	status	Members
---	---	---
239.1.2.3	active	Gi1/0/1-3, 1/0/7

Switch(config)#end

Switch#copy running-config startup-config

5 Multicast Filtering Configuration

To complete multicast filtering configuration, follow these steps:

1) Create the IGMP profile or MLD profile.
2) Configure multicast groups a port can join and the overflow action.

5.1 Using the GUI

5.1.1 Creating the Multicast Profile

You can create multicast profiles for both IPv4 and IPv6 network. With multicast profile, the switch can define a blacklist or whitelist of multicast groups so as to filter multicast sources.


The process for creating multicast profiles for IPv4 and IPv6 are similar. The following introductions take creating an IPv4 profile as an example.

Choose the menu **L2 FEATURES > Multicast > Multicast Filtering > IPv4 Profile**, and click Add to load the following page.

Note:

To create a multicast profile for IPv6, choose the menu **L2 FEATURES > Multicast > Multicast Filtering > IPv6 Profile**.

Figure 5-1 Create IPv4 Profile

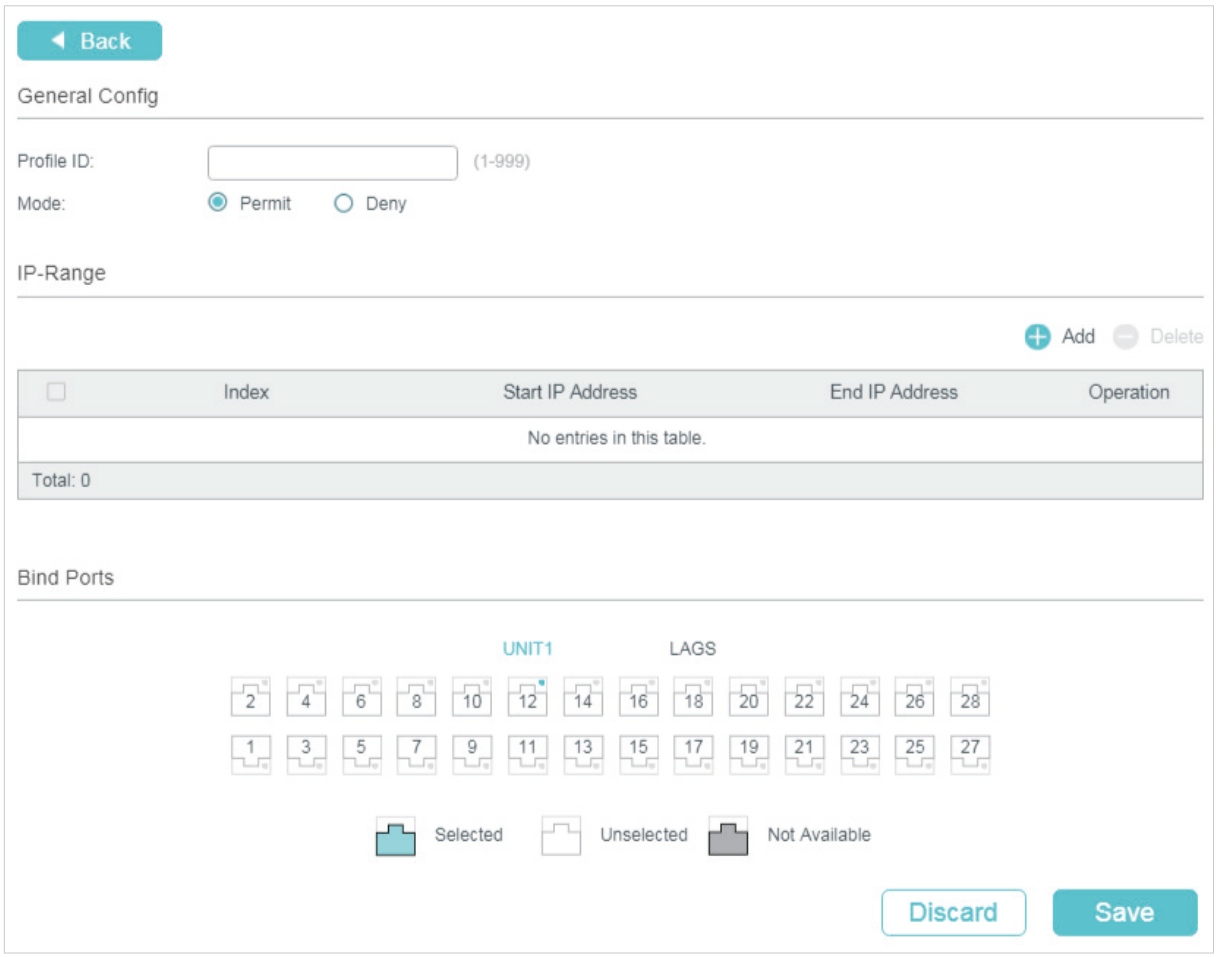


Follow these steps to create a profile.

1) In the **General Config** section, specify the Profile ID and Mode.

Profile ID	Enter a profile ID between 1 and 999.
Mode	Select **Permit** or **Deny** as the filtering mode. **Permit**: Acts as a whitelist and only allows specific member ports to join specified multicast groups. **Deny**: Acts as a blacklist and prevents specific member ports from joining specific multicast groups.

2) In the **IP-Range** section, click Add to load the following page. Configure the start IP address and end IP address of the multicast groups to be filtered, and click **Create**.

Figure 5-2 Configure Multicast Groups to Be Filtered

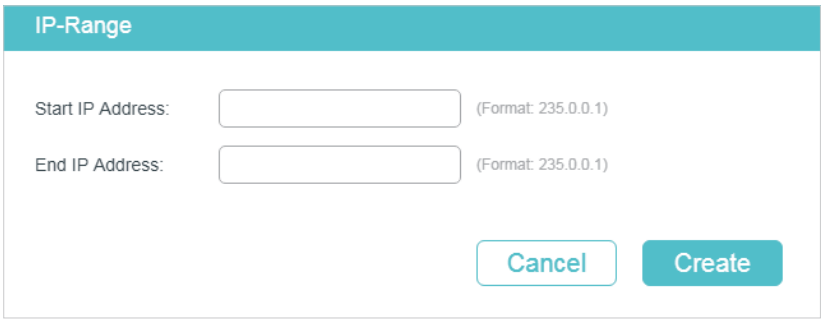

3) In the **Bind Ports** section, select your desired ports to be bound with the profile.

4) Click **Save**.

5.1.2 Configure Multicast Filtering for Ports

You can modify the mapping relation between ports and profiles in batches, and configure the number of multicast groups a port can join and the overflow action.


The process for configuring multicast filtering for ports in IPv4 and IPv6 are similar. The following introductions take configuring multicast filtering for ports in IPv4 as an example.

Choose the menu **L2 FEATURES > Multicast > Multicast Filtering > IPv4 Port Config** to load the following page.

Note:

For IPv6, choose the menu **L2 FEATURES > Multicast > Multicast Filtering > IPv6 Port Config**.

Figure 5-3 Configure Multicast Filtering for Ports

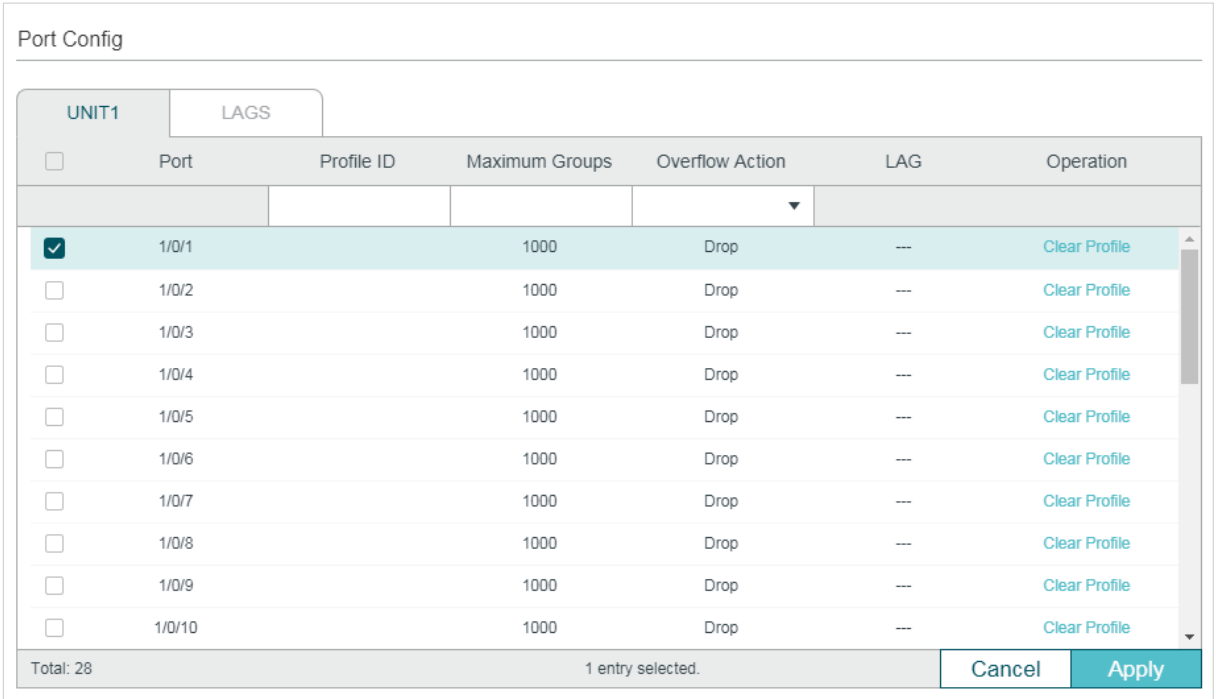

Follow these steps to bind the profile to ports and configure the corresponding parameters for the ports:

1) Select one or more ports to configure.
2) Specify the profile to be bound, and configure the maximum groups the port can join and the overflow action.

Profile ID	Specify the ID of an existing profile to bind the profile to the selected ports. One port can only be bound to one profile.
Maximum Groups	Enter the number of multicast groups the port can join. Valid values are from 1 to 1000.
Overflow Action	Select the action the switch will take with the new multicast member groups when the number of multicast groups the port has joined exceeds the maximum. **Drop**: Drop all subsequent membership report messages to prevent the port joining a new multicast groups. **Replace**: Replace the existing multicast group that has the lowest multicast MAC address with the new multicast group.
LAG	Displays the LAG the port belongs to.
Operation	Click **Clear Profile** to clear the binding between the profile and the port.

3) Click **Apply**.

5.2 Using the CLI

5.2.1 Creating the Multicast Profile

You can create multicast profiles for both IPv4 and IPv6 network. With multicast profile, the switch can define a blacklist or whitelist of multicast groups so as to filter multicast sources.

Creating IGMP Profile (Multicast Profile for IPv4)

Step 1	**configure** Enter global configuration mode.
Step 2	**ip igmp profile** *id* Create a new profile and enter profile configuration mode.

Step 3	**Permit** Configure the profile's filtering mode as permit. Then the profile acts as a whitelist and only allows specific member ports to join specified multicast groups. **deny** Configure the profile's filtering mode as deny. Then the profile acts as a blacklist and prevents specific member ports from joining specific multicast groups.
Step 4	**range** *start-ip end-ip* Configure the range of multicast IP addresses to be filtered. *start-ip* / *end-ip:* Specify the start IP address and end IP address of the IP range.
Step 5	**show ip igmp profile** [*id*] Show the detailed IGMP profile configuration.
Step 6	**end** Return to privileged EXEC mode.
Step 7	**copy running-config startup-config** Save the settings in the configuration file.

The following example shows how to configure Profile 1 so that the switch filters multicast streams sent to 226.0.0.5-226.0.0.10:

Switch#configure

Switch(config)#ip igmp snooping

Switch(config)#ip igmp profile 1

Switch(config-igmp-profile)#deny

Switch(config-igmp-profile)#range 226.0.0.5 226.0.0.10

Switch(config-igmp-profile)#show ip igmp profile

IGMP Profile 1

deny

range 226.0.0.5 226.0.0.10

Switch(config)#end

Switch#copy running-config startup-config

Creating MLD Profile (Multicast Profile for IPv6)

Step 1	**configure** Enter global configuration mode.

Step 2	**ipv6 mld profile** *id* Create a new profile and enter profile configuration mode.
Step 3	**Permit** Configure the profile's filtering mode as permit. It is similar to a whitelist, indicating that the switch only allow specific member ports to join specific multicast groups. **deny** Configure the profile's filtering mode as deny. It is similar to a blacklist, indicating that the switch disallow specific member ports to join specific multicast groups.
Step 4	**range** *start-ip end-ip* Configure the range of multicast IP addresses to be filtered. *start-ip* / *end-ip:* Specify the start IP address and end IP address of the IP range.
Step 5	**show ipv6 mld profile** [*id*] Show the detailed MLD profile configuration.
Step 6	**end** Return to privileged EXEC mode.
Step 7	**copy running-config startup-config** Save the settings in the configuration file.

The following example shows how to configure Profile 1 so that the switch filters multicast streams sent to ff01::1234:5-ff01::1234:8:

Switch#configure

Switch(config)#ipv6 mld snooping

Switch(config)#ipv6 mld profile 1

Switch(config-mld-profile)#deny

Switch(config-mld-profile)#range ff01::1234:5 ff01::1234:8

Switch(config-mld-profile)#show ipv6 mld profile

MLD Profile 1

deny

range ff01::1234:5 ff01::1234:8

Switch(config)#end

Switch#copy running-config startup-config

5.2.2 Binding the Profile to Ports

You can bind the created IGMP profile or MLD profile to ports, and configure the number of multicast groups a port can join and the overflow action.

Binding the IGMP Profile to Ports

Step 1	**configure** Enter global configuration mode.
Step 2	**interface {fastEthernet** *port* **| range fastEthernet** *port-list* **| gigabitEthernet** *port* **| range gigabitEthernet** *port-list* **| ten-gigabitEthernet** *port* **| range ten-gigabitEthernet** *port-list* **| port-channel** *port-channel-id* **| range port-channel** *port-channel-list***}** Enter interface configuration mode.
Step 3	**ip igmp filter** *profile-id* Bind the IGMP profile to the specified ports. *profile-id*: Specify the ID of the profile to be bound. It should be an existing profile.
Step 4	**ip igmp snooping max-groups** *maxgroup* Configure the maximum number of multicast groups the port can join. *maxgroup*: Specify the maximum number of multicast groups the port can join. Valid values are from 1 to 1000.
Step 5	**ip igmp snooping max-groups action {**drop | replace**}** Specify the action towards the new multicast group when the number of multicast groups the port joined exceeds the limit. drop: Drop all subsequent membership report messages, and the port join no more new multicast groups. replace: Replace the existing multicast group owning the lowest multicast MAC address with the new multicast group.
Step 6	**show ip igmp profile** [*id*] Show the detailed IGMP profile configurations. **show ip igmp snooping interface [fastEthernet** [*port-list*] **| gigabitEthernet** [*port-list*] **| ten-gigabitEthernet** [*port-list*] **| port-channel** [*port-channel-list*] **] max-groups** Show the multicast group limitation on the specified port(s) or of all the ports.
Step 7	**end** Return to privileged EXEC mode.
Step 8	**copy running-config startup-config** Save the settings in the configuration file.

The following example shows how to bind the existing Profile 1 to port 1/0/2, and specify the maximum number of multicast groups that port 1/0/2 can join as 50 and the Overflow Action as Drop:

Switch#configure

Switch(config)#interface gigabitEthernet 1/0/2

Switch(config-if)#ip igmp snooping

Switch(config-if)#ip igmp filter 1

Switch(config-if)#ip igmp snooping max-groups 50

Switch(config-if)#ip igmp snooping max-groups action drop

Switch(config-if)#show ip igmp profile

IGMP Profile 1

...

Binding Port(s)

Gi1/0/2

Switch(config-if)#show ip igmp snooping interface gigabitEthernet 1/0/2 **max-groups**

Port	Max-Groups	Overflow-Action
Gi1/0/2	50	Drops

Switch(config)#end

Switch#copy running-config startup-config

Binding the MLD Profile to Ports

Step 1	**configure** Enter global configuration mode.
Step 2	**interface {fastEthernet** *port* **| range fastEthernet** *port-list* **| gigabitEthernet** *port* **| range gigabitEthernet** *port-list* **| ten-gigabitEthernet** *port* **| range ten-gigabitEthernet** *port-list* **| port-channel** *port-channel-id* **| range port-channel** *port-channel-list***}** Enter interface configuration mode.
Step 3	**ipv6 mld filter** *profile-id* Bind the MLD profile to the specified ports. *profile-id*: Specify the ID of the profile to be bound. It should be an existing profile.

Step 4	**ipv6 mld snooping max-groups** *maxgroup* Configure the maximum number of multicast groups the port can join. *maxgroup*: Specify the maximum number of multicast groups the port can join. Valid values are from 1 to 1000.
Step 5	**ipv6 mld snooping max-groups action {**drop	replace**}** Specify the action towards the new multicast group when the number of multicast groups the port joined exceeds max group. drop: Drop all subsequent membership report messages, and the port join no more new multicast groups. replace: Replace the existing multicast group owning the lowest multicast MAC address with the new multicast group.
Step 6	**show ipv6 mld profile** [*id*] Show the detailed MLD profile configuration. **show ipv6 mld snooping interface [fastEthernet** [*port-list*] **| gigabitEthernet** [*port-list*] **| ten-gigabitEthernet** [*port-list*] **| port-channel** [*port-channel-list*] **] max-groups** Show the multicast group limitation on the specified port(s) or of all the ports.
Step 7	**end** Return to privileged EXEC mode.
Step 8	**copy running-config startup-config** Save the settings in the configuration file.

The following example shows how to bind the existing Profile 1 to port 1/0/2, and specify the maximum number of multicast groups that port 1/0/2 can join as 50 and the Overflow Action as Drop:

Switch#configure

Switch(config)#interface gigabitEthernet 1/0/2

Switch(config-if)#ipv6 mld snooping

Switch(config-if)#ipv6 mld filter 1

Switch(config-if)#ipv6 mld snooping max-groups 50

Switch(config-if)#ipv6 mld snooping max-groups action drop

Switch(config-if)#show ipv6 mld profile

MLD Profile 1

...

Binding Port(s)

Gi1/0/2

Switch(config-if)#show ipv6 mld snooping interface gigabitEthernet 1/0/2 **max-groups**

Port	Max-Groups	Overflow-Action
---	---	---
Gi1/0/2	50	Drops

Switch(config)#end

Switch#copy running-config startup-config

6 Viewing Multicast Snooping Information

You can view the following multicast snooping information:


- View IPv4 multicast table.
- View IPv4 multicast statistics on each port.
- View IPv6 multicast table.
- View IPv6 multicast statistics on each port.

6.1 Using the GUI

6.1.1 Viewing IPv4 Multicast Table

Choose the menu **L2 FEATURES > Multicast > Multicast Info > IPv4 Multicast Table** to load the following page:

Figure 6-1 IPv4 Multicast Table

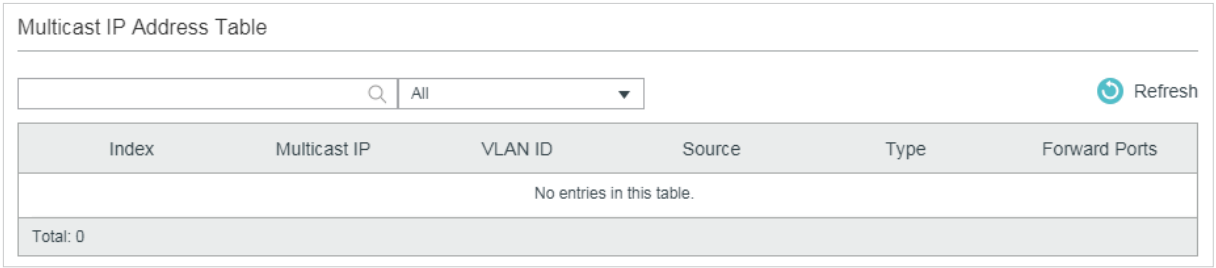

The multicast IP address table shows all valid Multicast IP-VLAN-Port entries:


Multicast IP	Displays the multicast source IP address.
VLAN ID	Displays the ID of the VLAN the multicast group belongs to.
Source	Displays the source of the multicast entry. **IGMP Snooping**: The multicast entry is learned by IGMP Snooping. **MVR**: The multicast entry is learned by MVR.
Type	Displays how the multicast entry is generated. **Dynamic**: The entry is dynamically learned. All the member ports are dynamically added to the multicast group. **Static**: The entry is manually added. All the member ports are manually added to the multicast group. **Mix**: The entry is dynamically learned (manually learned), and some of the member ports are manually added (dynamically added) to the multicast group.

Forward Ports	All ports in the multicast group, including router ports and member ports.

6.1.2 Viewing IPv4 Multicast Statistics on Each Port

Choose the menu **L2 FEATURES > Multicast > Multicast Info > IPv4 Multicast Statistics** to load the following page:

Figure 6-2 IPv4 Multicast Statistics

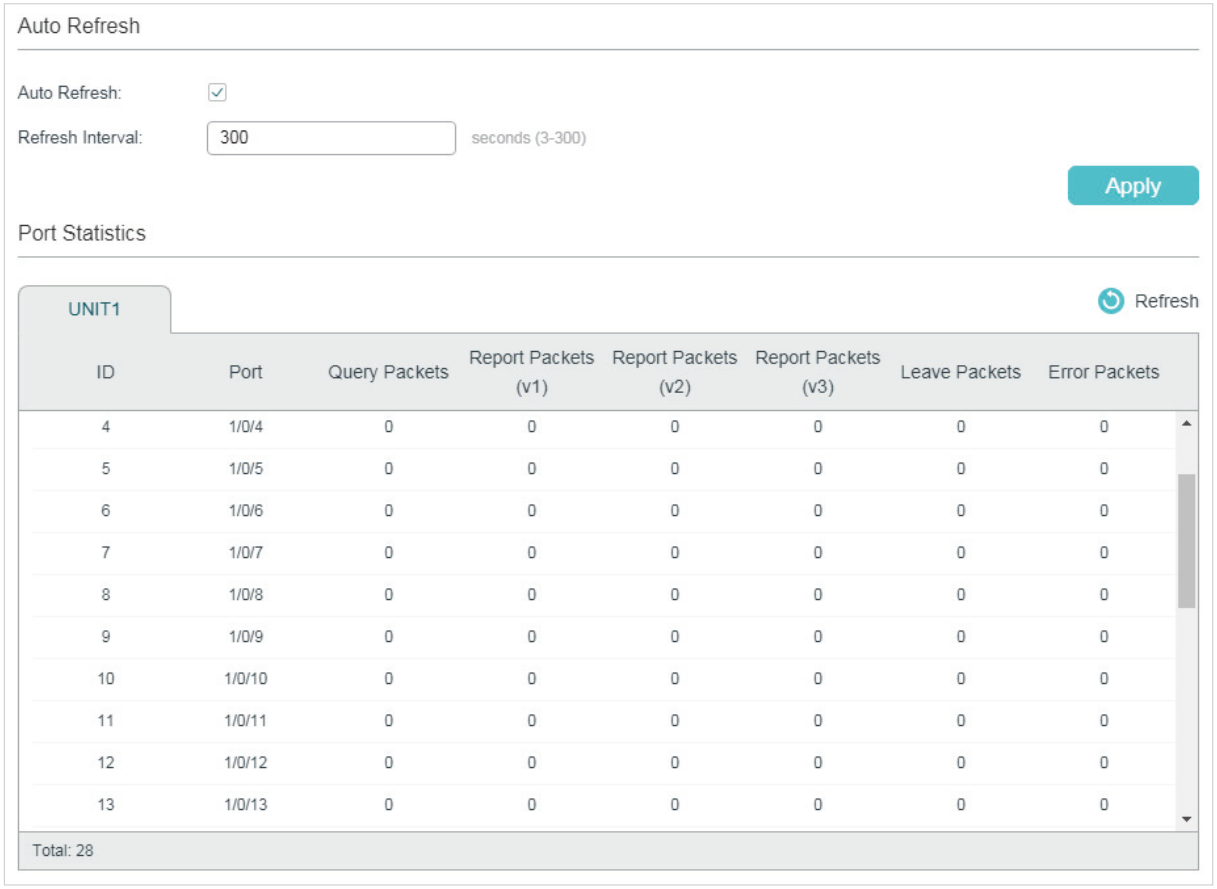

Follow these steps to view IPv4 multicast statistics on each port:

1) To get the real-time multicast statistics, enable **Auto Refresh**, or click **Refresh**.

Auto Refresh	Enable or disable Auto Refresh. When enabled, the switch will automatically refresh the multicast statistics.
Refresh Interval	After **Auto Refresh** is enabled, specify the time interval for the switch to refresh the multicast statistics.

2) In the **Port Statistics** section, view IPv4 multicast statistics on each port.


Query Packets	Displays the number of query packets received by the port.
Report Packets (v1)	Displays the number of IGMPv1 report packets received by the port.

Report Packets (v2)	Displays the number of IGMPv2 report packets received by the port.
Report Packets (v3)	Displays the number of IGMPv3 report packets received by the port.
Leave Packets	Displays the number of leave packets received by the port.
Error Packets	Displays the number of error packets received by the port.

6.1.3 Viewing IPv6 Multicast Table

Choose the menu **L2 FEATURES > Multicast > Multicast Info > IPv6 Multicast Table** to load the following page:

Figure 6-3 IPv6 Multicast Table

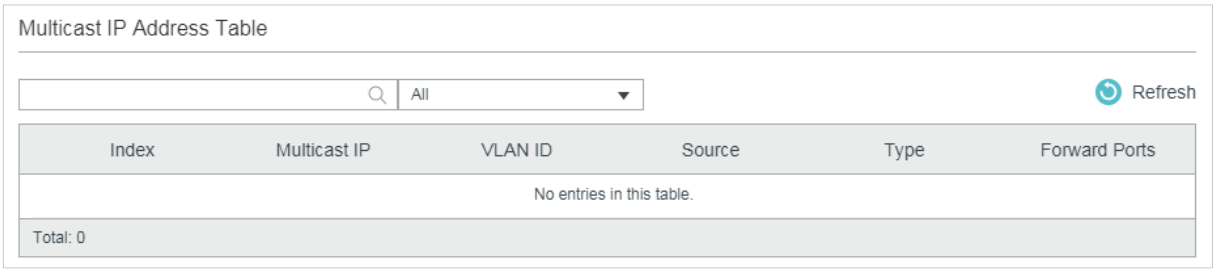


The multicast IP address table shows all valid Multicast IP-VLAN-Port entries:

Multicast IP	Displays the multicast source IP address.
VLAN ID	Displays the ID of the VLAN the multicast group belongs to.
Source	Displays the source of the multicast entry. **MLD Snooping**: The multicast entry is learned by IGMP Snooping.
Type	Displays how the multicast entry is generated. **Dynamic**: The entry is dynamically learned. All the member ports are dynamically added to the multicast group. **Static**: The entry is manually added. All the member ports are manually added to the multicast group. **Mix**: The entry is dynamically learned (manually learned), and some of the member ports are manually added (dynamically added) to the multicast group.
Forward Port	All ports in the multicast group, including router ports and member ports.

6.1.4 Viewing IPv6 Multicast Statistics on Each Port

Choose the menu **L2 FEATURES > Multicast > Multicast Info > IPv6 Multicast Statistics** to load the following page:

Figure 6-4 IPv6 Multicast Statistics

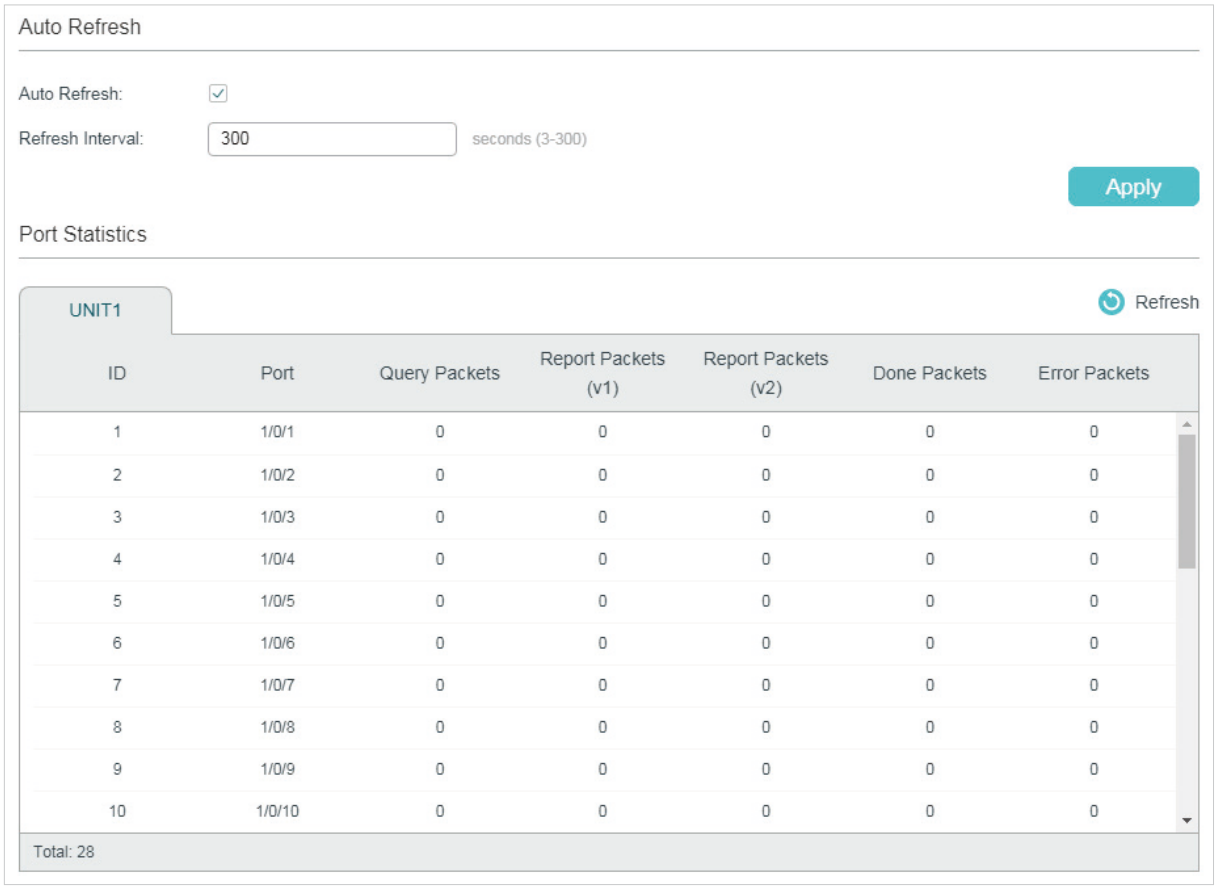

Follow these steps to view IPv6 multicast statistics on each port:

1) To get the real-time IPv6 multicast statistics, enable **Auto Refresh**, or click **Refresh**.

Auto Refresh	Enable or disable Auto Refresh. When enabled, the switch will automatically refresh the multicast statistics.
Refresh Interval	After **Auto Refresh** is enabled, specify the time interval for the switch to refresh the multicast statistics.

2) In the **Port Statistics** section, view IPv6 multicast statistics on each port.

Query Packets	Displays the number of query packets received by the port.
Report Packets (v1)	Displays the number of MLDv1 packets received by the port.
Report Packets (v2)	Displays the number of MLDv2 packets received by the port.

Done Packets	Displays the number of done packets received by the port.
Error Packets	Displays the number of error packets received by the port.

6.2 Using the CLI

6.2.1 Viewing IPv4 Multicast Snooping Information

show ip igmp snooping groups [vlan *vlan-id* **] [**count | dynamic | dynamic count | static | static count **]**

Displays information of specific multicast group in all VLANs or in the specific VLAN.

count: Displays the number of multicast groups.

dynamic: Displays information of all dynamic multicast groups.

dynamic count: Displays the number of dynamic multicast groups.

static: Displays information of all static multicast groups.

static count: Displays the number of static multicast groups.

show ip igmp snooping interface [fastEthernet [*port-list*] **| gigabitEthernet** [*port-list*] **| ten-gigabitEthernet** [*port-list*] **] packet-stat**

Displays the packet statistics on specified ports or all ports.

clear ip igmp snooping statistics

Clear all statistics of all IGMP packets.

6.2.2 Viewing IPv6 Multicast Snooping Configurations

show ipv6 mld snooping groups [vlan *vlan-id* **] [**count | dynamic | dynamic count | static | static count **]**

Displays information of specific multicast group in all VLANs or in the specific VLAN.

count displays the number of multicast groups.

dynamic displays information of all dynamic multicast groups.

dynamic count displays the number of dynamic multicast groups.

static displays information of all static multicast groups.

static count displays the number of static multicast groups.

show ipv6 mld snooping interface [fastEthernet [*port-list*] **| gigabitEthernet** [*port-list*] **| ten-gigabitEthernet** [*port-list*] **] packet-stat**

Displays the packet statistics on specified ports or all ports.

clear ipv6 mld snooping statistics

Clear all statistics of all MLD packets.

7 Configuration Examples


7.1 Example for Configuring Basic IGMP Snooping

7.1.1 Network Requirements

Host B, Host C and Host D are in the same VLAN of the switch. All of them want to receive multicast streams sent to multicast group 225.1.1.1.

As shown in the following topology, Host B, Host C and Host D are connected to port 1/0/1, port 1/0/2 and port 1/0/3 respectively. Port 1/0/4 is the router port connected to the multicast querier.

Figure 7-1 Network Topology for Basic IGMP Snooping

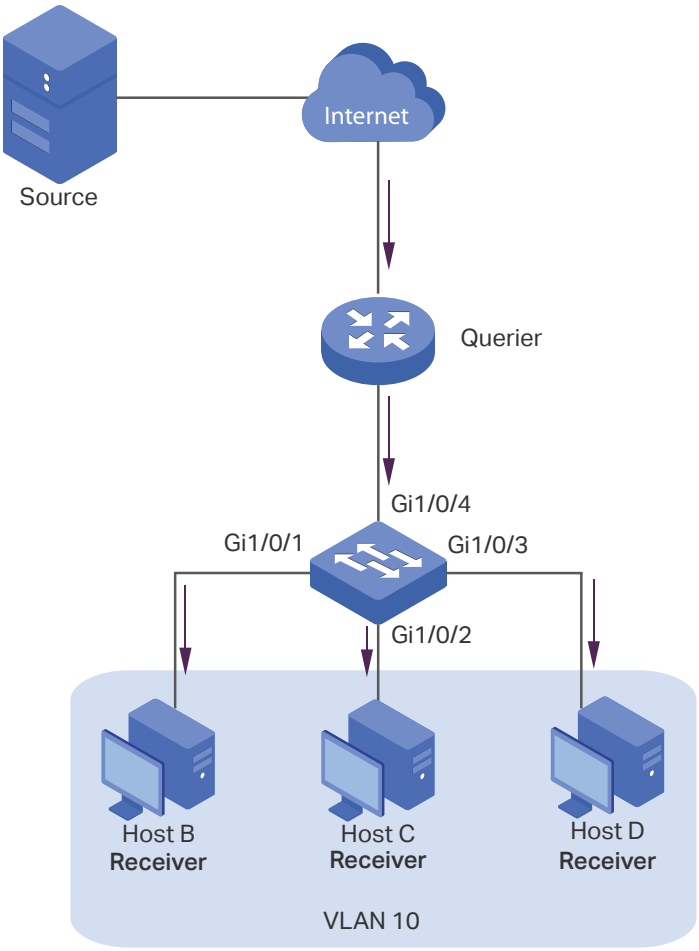

7.1.2 Configuration Scheme

- Add the three member ports and the router port to a VLAN and configure their PVIDs.
- Enable IGMP Snooping globally and in the VLAN.


- Enable IGMP Snooping on the ports.

Demonstrated with T2600G-28TS, this section provides configuration procedures in two ways: using the GUI and using the CLI.

7.1.3 Using the GUI


1) Choose the menu **L2 FEATURES > VLAN > 802.1Q VLAN > VLAN Config** and click Add to load the following page. Create VLAN 10 and add Untagged port 1/0/1-3 and Tagged port 1/0/4 to VLAN 10.

Figure 7-2 Create VLAN 10

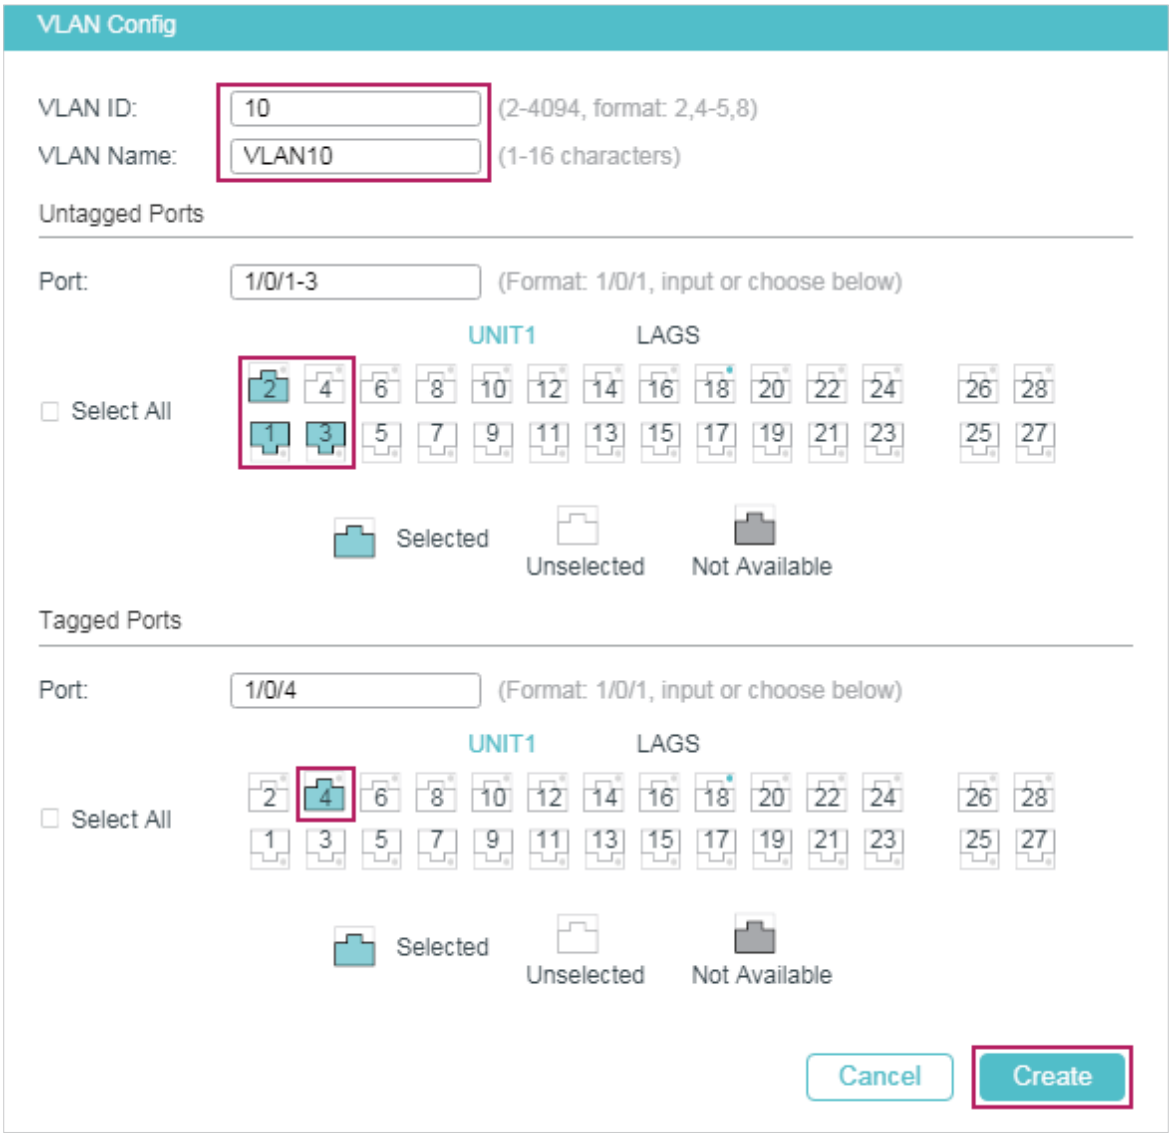


2) Choose the menu **L2 FEATURES > VLAN > 802.1Q VLAN > Port Config** to load the following page. Configure the PVID of port 1/0/1-4 as 10.

Figure 7-3 Configure PVID for the Ports

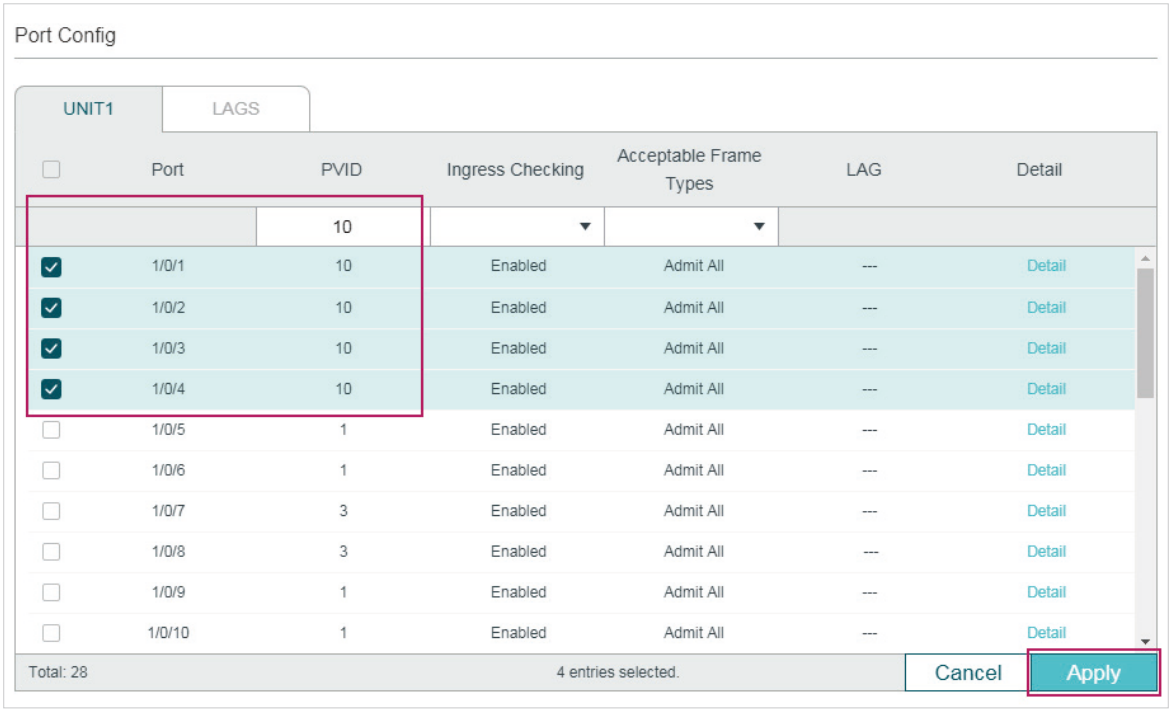


3) Choose the menu **L2 FEATURES > Multicast > IGMP Snooping > Global Config** to load the following page. In the **Global Config** section, enable IGMP Snooping globally. Configure the IGMP version as v3 so that the switch can process IGMP messages of all versions. Then click **Apply**.

Figure 7-4 Configure IGMP Snooping Globally

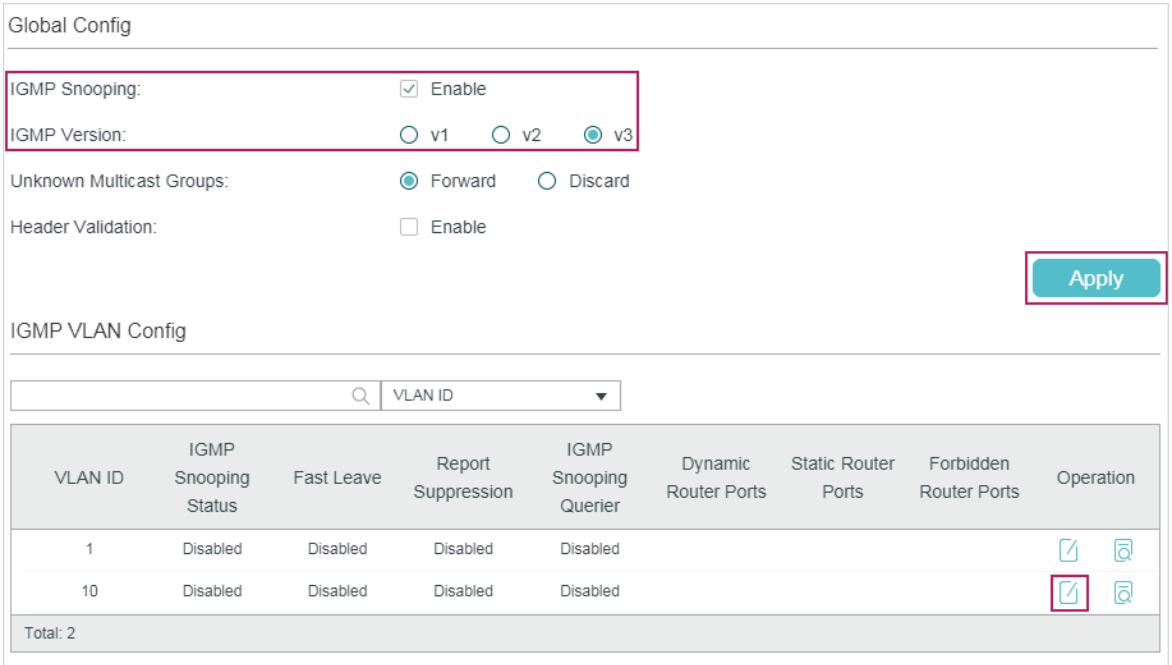


4) In the **IGMP VLAN Config** section, click in VLAN 10 to load the following page. Enable IGMP Snooping for VLAN 10.

Figure 7-5 Enable IGMP Snooping in the VLAN

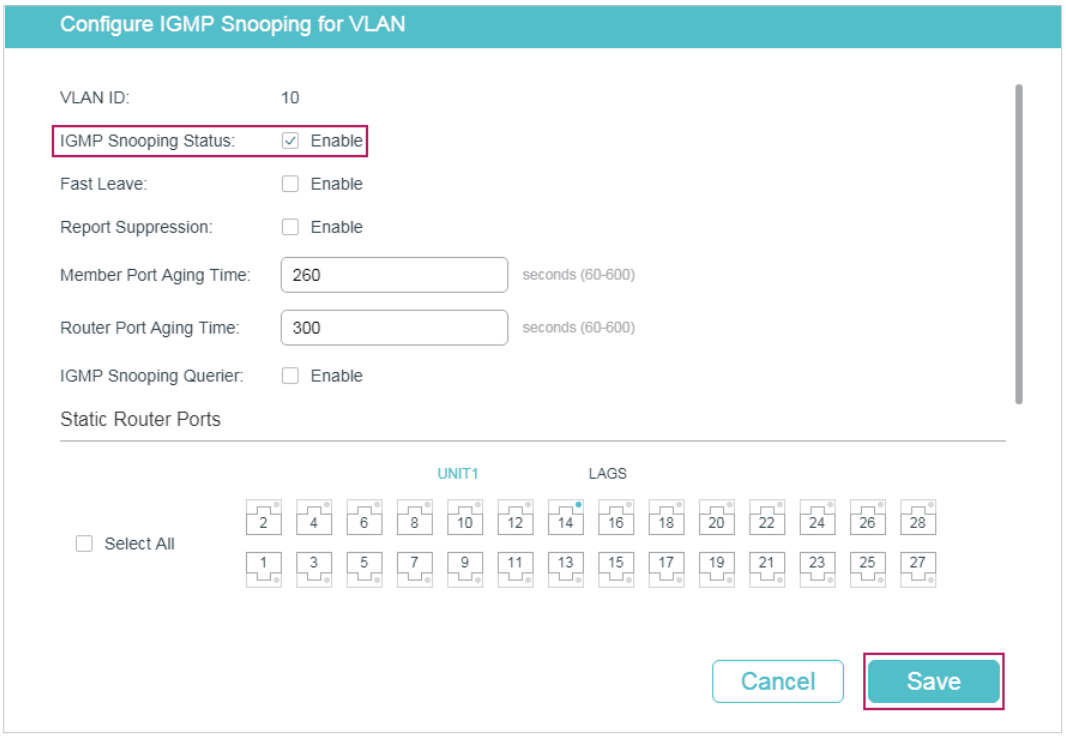

5) Choose the menu **L2 FEATURES > Multicast > IGMP Snooping > Port Config** to load the following page. Enable IGMP Snooping for ports 1/0/1-4.

Figure 7-6 Enable IGMP Snooping on the Ports

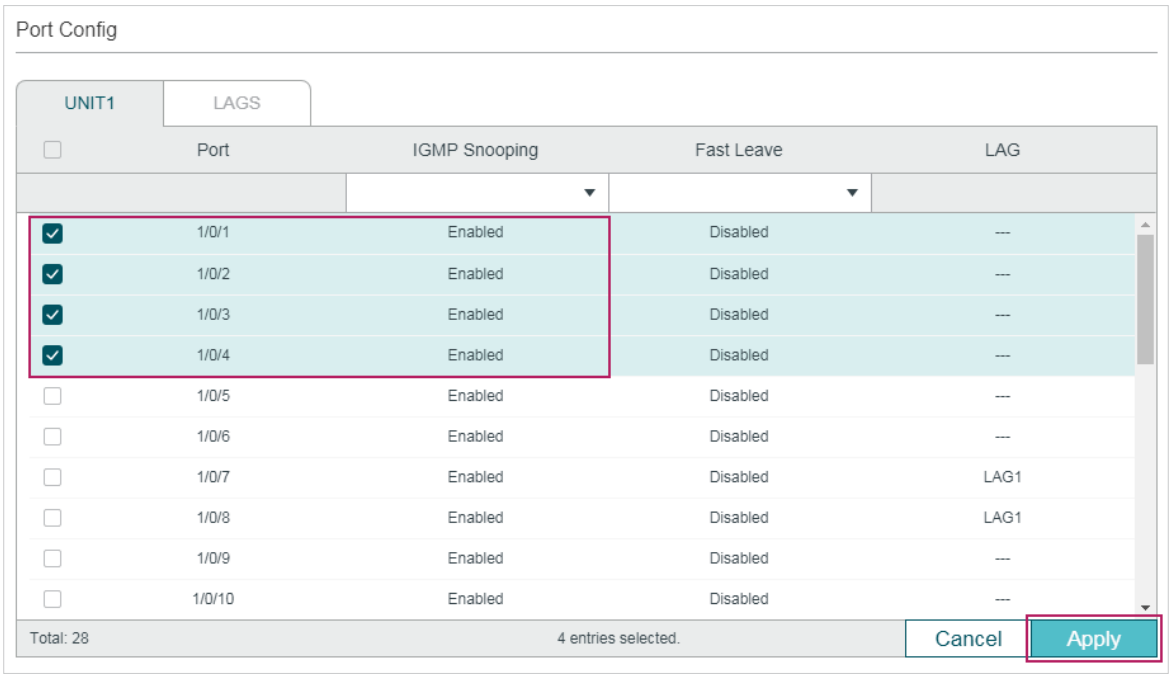

6) Click Save to save the settings.

7.1.4 Using the CLI

1) Create VLAN 10.

Switch#configure

Switch(config)#vlan 10

Switch(config-vlan)#name vlan10

Switch(config-vlan)#exit

2) Add port 1/0/1-3 to VLAN 10 and set the link type as untagged. Add port 1/0/4 to VLAN 10 and set the link type as tagged.

Switch(config)#interface range gigabitEthernet 1/0/1-3

Switch(config-if-range)#switchport general allowed vlan 10 untagged

Switch(config-if-range)#exit

Switch(config)#interface gigabitEthernet 1/0/4

Switch(config-if)#switchport general allowed vlan 10 tagged

Switch(config-if)#exit

3) Set the PVID of port 1/0/1-4 as 10.

Switch(config)#interface range gigabitEthernet 1/0/1-4

Switch(config-if-range)#switchport pvid 10

Switch(config-if-range)#exit

4) Enable IGMP Snooping globally.

Switch(config)#ip igmp snooping

5) Enable IGMP Snooping in VLAN 10.

Switch(config)#ip igmp snooping vlan-config 10

6) Enable IGMP Snooping on port 1/0/1-4.

Switch(config)#interface range gigabitEthernet 1/0/1-4

Switch(config-if-range)#ip igmp snooping

Switch(config-if-range)#exit

7) Save the settings.

Switch(config)#end

Switch#copy running-config startup-config

Verify the Configurations

Show members in the VLAN:

Switch(config)#show vlan brief

VLAN	Name	Status	Ports
-----	----------	---------	----------
1	System-VLAN	active	Gi1/0/1, Gi1/0/2, Gi1/0/3, Gi1/0/4, Gi1/0/5, Gi1/0/6, Gi1/0/7, Gi1/0/8, ...
10	vlan10	active	Gi1/0/1, Gi1/0/2, Gi1/0/3, Gi1/0/4

Show status of IGMP Snooping globally, on the ports and in the VLAN:

Switch(config)#show ip igmp snooping

IGMP Snooping :Enable

IGMP Version :V3

Header Validation :Disable

Global Authentication Accounting :Disable

Enable Port : Gi1/0/1-4

Enable VLAN:10

7.2 Example for Configuring MVR


7.2.1 Network Requirements

Host B, Host C and Host D are in three different VLANs of the switch. All of them want to receive multicast streams sent to multicast group 225.1.1.1.

7.2.2 Network Topology

As shown in the following network topology, Host B, Host C and Host D are connected to port 1/0/1, port 1/0/2 and port 1/0/3 respectively. Port 1/0/1, port 1/0/2 and port 1/0/3 belong to VLAN 10, VLAN 20 and VLAN 30 respectively. Port 1/0/4 is connected to the multicast network in the upper layer network.

Figure 7-7 Network Topoloy for Multicast VLAN

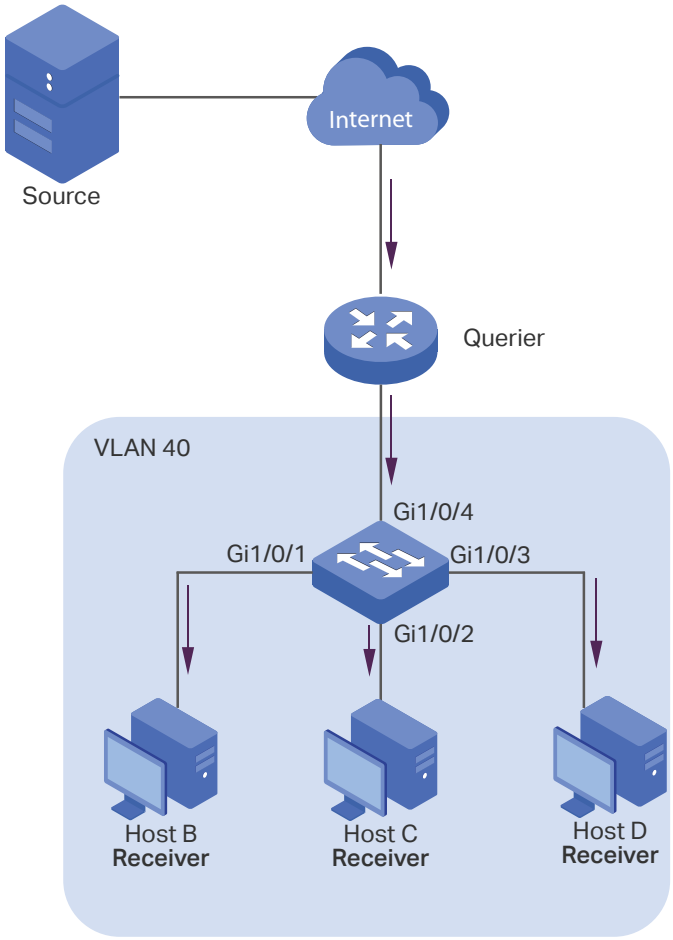

7.2.3 Configuration Scheme

As the hosts are in different VLANs, in IGMP Snooping, the Querier need to duplicate multicast streams for hosts in each VLAN. To avoid duplication of multicast streams being sent between Querier and the switch, you can configure MVR on the switch.

The switch can work in either MVR compatible mode or MVR dynamic mode. When in compatible mode, remember to statically configure the Querier to transmit the streams of multicast group 225.1.1.1 to the switch via the multicast VLAN. Here we take the MVR dynamic mode as an example.

Demonstrated with T2600G-28TS, this section provides configuration procedures in two ways: using the GUI and using the CLI.

7.2.4 Using the GUI

1) Add port 1/0/1-3 to VLAN 10, VLAN 20 and VLAN 30 as Untagged ports respectively, and configure the PVID of port 1/0/1 as 10, port 1/0/2 as 20, port 1/0/3 as 30. Make sure port1/0/1-3 only belong to VLAN 10, VLAN 20 and VLAN 30 respectively. For details, refer to *Configuring 802.1Q VLAN*.

Figure 7-8 VLAN Configurations for Port 1/0/1-3



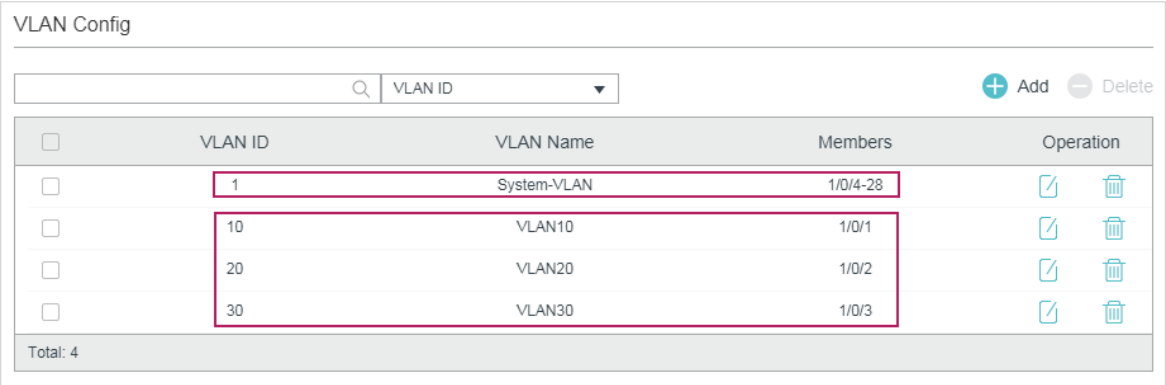


Figure 7-9 PVID for Port 1/0/1-3

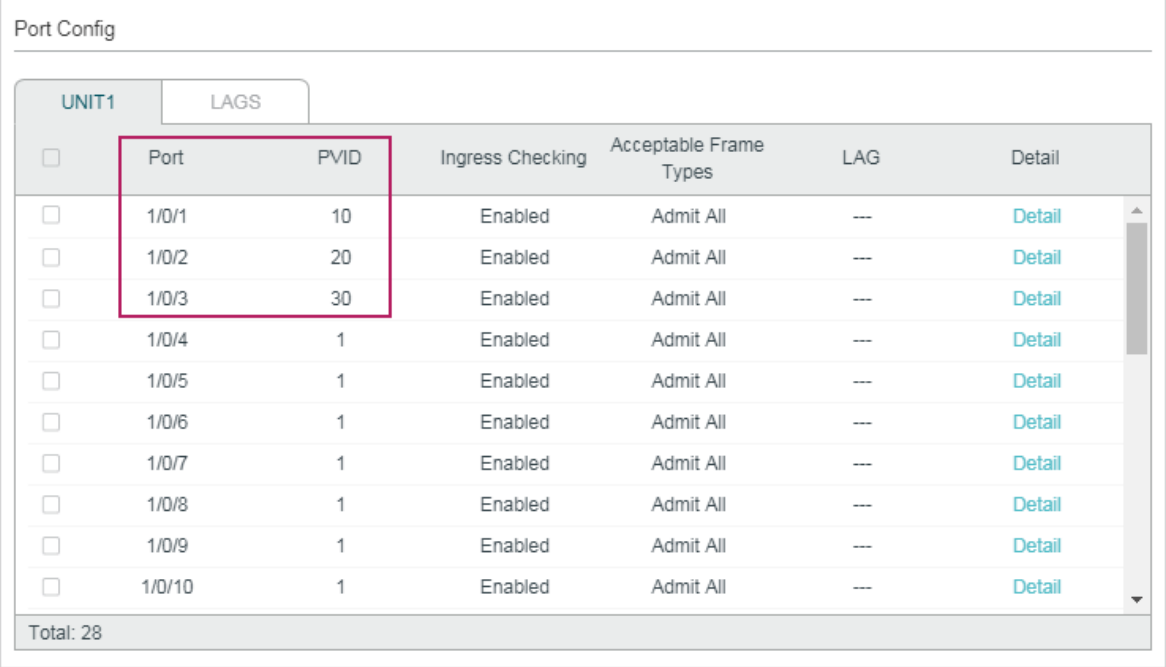


2) Choose the menu **L2 FEATURES > VLAN > 802.1Q VLAN > VLAN Config** and click Add to load the following page. Create VLAN 40 and add port 1/0/4 to the VLAN as Tagged port.

Figure 7-10 Create Multicast VLAN

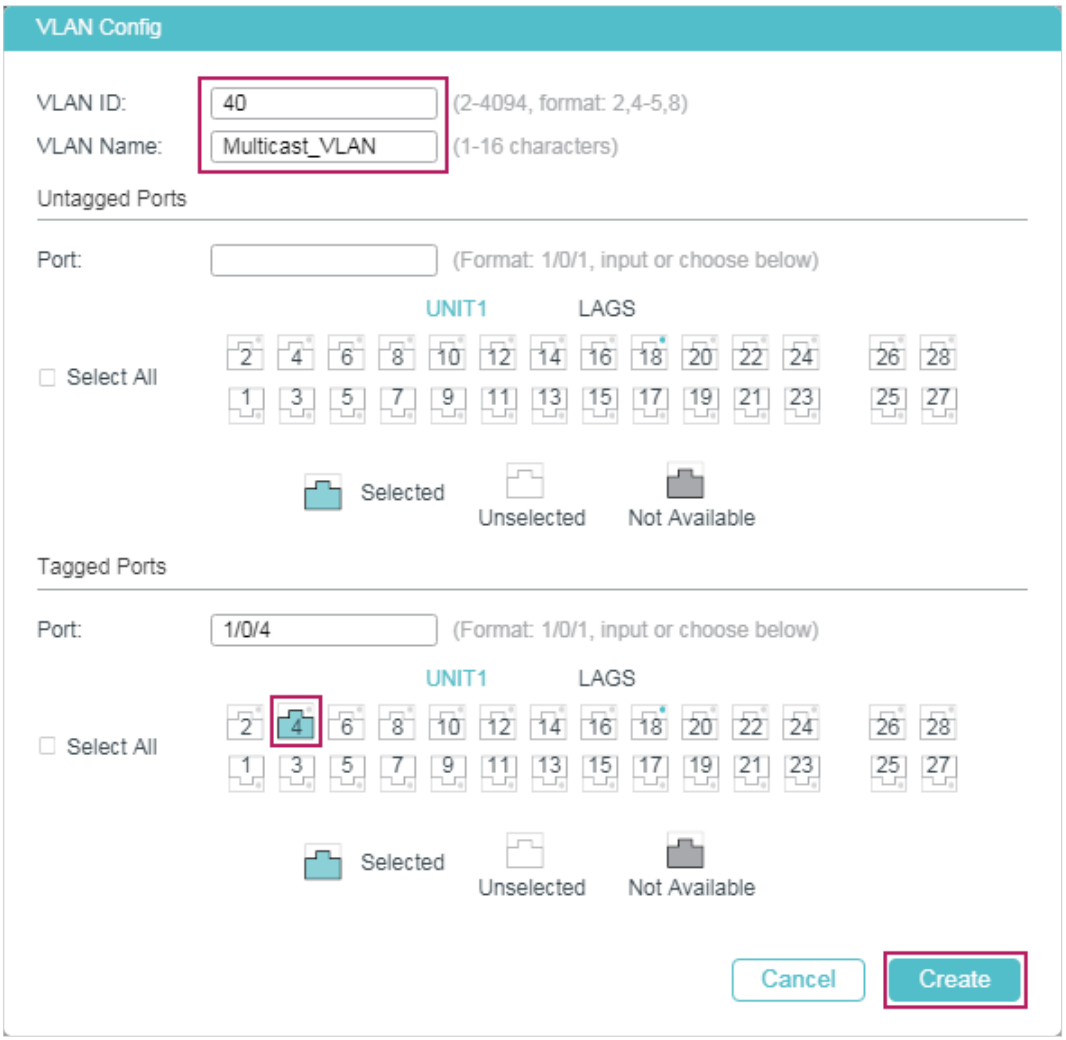


3) Choose the menu **L2 FEATURES > Multicast > MVR > MVR Config** to load the following page. Enable MVR globally, and configure the MVR mode as **Dynamic**, multicast VLAN ID as **40**.

Figure 7-11 Configure MVR Globally

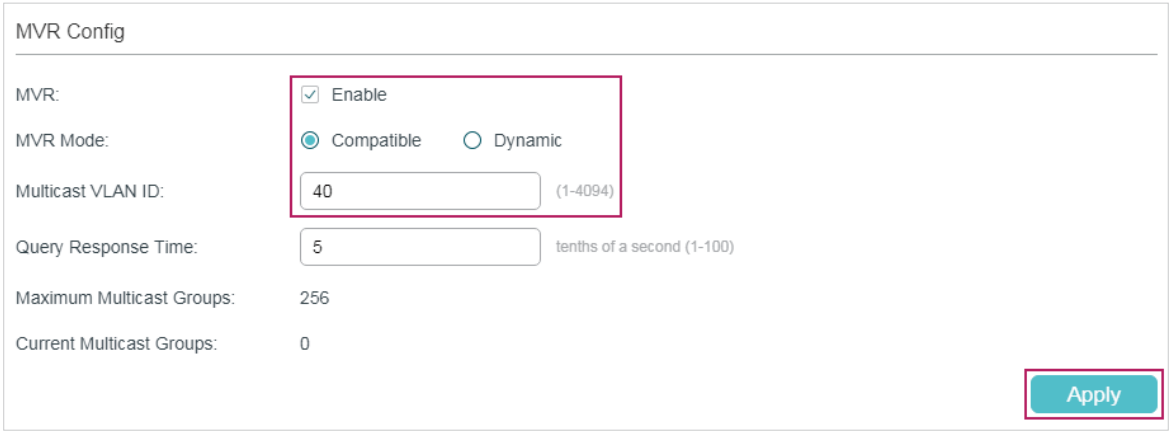


4) Choose the menu **L2 FEATURES > Multicast > MVR > MVR Group Config** and click Add to load the following page. Add multicast group 225.1.1.1 to MVR.

Figure 7-12 Add Multicast Group to MVR

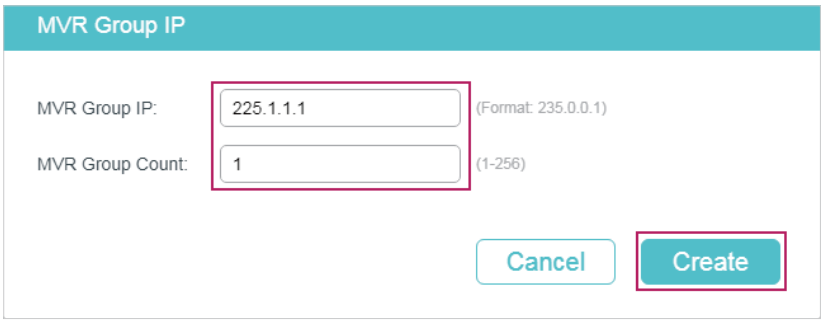

5) Choose the menu **L2 FEATURES > Multicast > MVR > Port Config** to load the following page. Enable MVR for port 1/0/1-4. Configure port 1/0/1-3 as **Receiver** ports and port 1/0/4 as **Source** port.

Figure 7-13 Configure MVR for the Ports

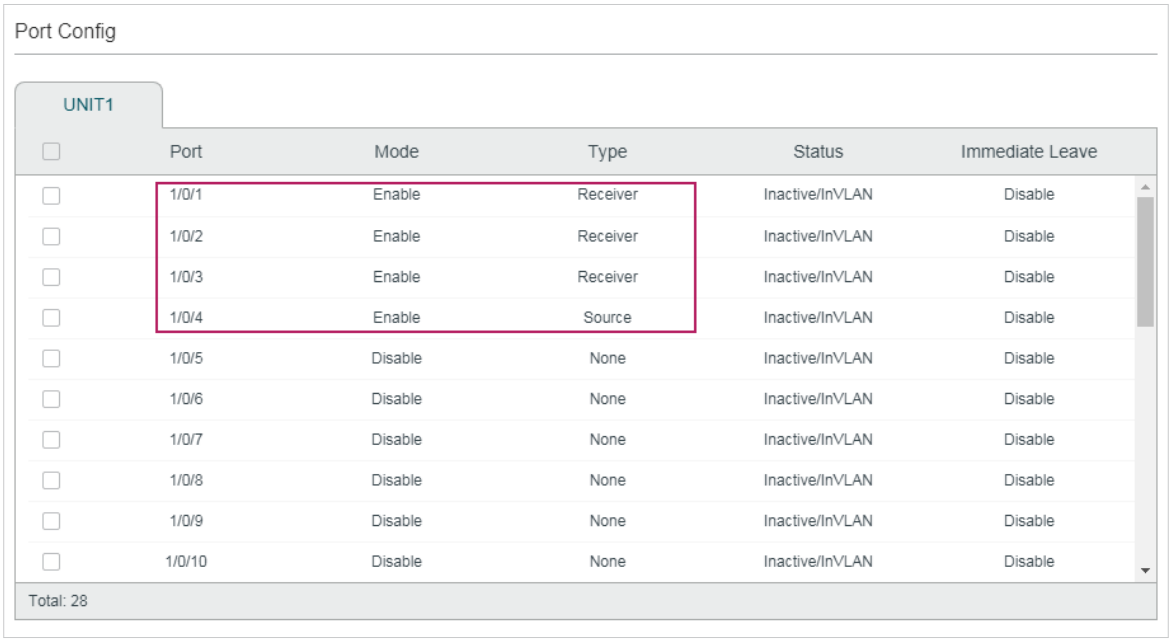

6) Click Save to save the settings.

7.2.5 Using the CLI

1) Create VLAN 10, VLAN 20, VLAN 30 and VLAN 40.

Switch#configure

Switch(config)#vlan 10,20,30,40

Switch(config-vlan)#exit

2) Add port 1/0/1-3 to VLAN 10, VLAN 20 and VLAN 30 as untagged ports respectively, and configure the PVID of port 1/0/1 as 10, port 1/0/2 as 20, port 1/0/3 as 30. Add port 1/0/4 to VLAN 40 as tagged port and configure the PVID as of port 1/0/4 as 40.

Switch(config)#interface gigabitEthernet 1/0/1

```
Switch(config-if)#switchport general allowed vlan 10 untagged
Switch(config-if)#switchport pvid 10
Switch(config-if)#exit
Switch(config)#interface gigabitEthernet 1/0/2
Switch(config-if)#switchport general allowed vlan 20 untagged
Switch(config-if)#switchport pvid 20
Switch(config-if)#exit
Switch(config)#interface gigabitEthernet 1/0/3
Switch(config-if)#switchport general allowed vlan 30 untagged
Switch(config-if)#switchport pvid 30
Switch(config-if)#exit
Switch(config)#interface gigabitEthernet 1/0/4
Switch(config-if)#switchport general allowed vlan 40 tagged
Switch(config-if)#switchport pvid 40
Switch(config-if)#exit
```

3) Check whether port1/0/1-3 only belong to VLAN 10, VLAN 20 and VLAN 30 respectively. If not, delete them from the other VLANs. By default, all ports are in VLAN 1, so you need to delete them from VLAN 1.

```
Switch(config)#show vlan brief
```

VLAN	Name	Status	Ports
1	System-VLAN	active	Gi1/0/1, Gi1/0/2, Gi1/0/3, Gi1/0/4, Gi1/0/5, Gi1/0/6, Gi1/0/7, Gi1/0/8, ...
10	VLAN10	active	Gi1/0/1
20	VLAN20	active	Gi1/0/2
30	VLAN30	active	Gi1/0/3
40	VLAN40	active	Gi1/0/4

```
Switch(config)#interface range gigabitEthernet 1/0/1-3
Switch(config-if-range)#no switchport general allowed vlan 1
Switch(config-if-range)#exit
```

4) Enable MVR globally, and configure the MVR mode as **Dynamic**, multicast VLAN ID as **40**. Add multicast group 225.1.1.1 to MVR.

   Switch(config)#mvr

   Switch(config)#mvr mode dynamic

   Switch(config)#mvr vlan 40

   Switch(config)#mvr group 225.1.1.1 1

5) Enable MVR for port 1/0/1-4. Configure port 1/0/1-3 as **Receiver** ports and port 1/0/4 as **Source** port.

   Switch(config)#interface range gigabitEthernet 1/0/1-3

   Switch(config-if-range)#mvr

   Switch(config-if-range)#mvr type receiver

   Switch(config-if-range)#exit

   Switch(config)#interface gigabitEthernet 1/0/4

   Switch(config-if)#mvr

   Switch(config-if)#mvr type source

   Switch(config-if)#exit

6) Save the settings.

   Switch(config)#end

   Switch#copy running-config startup-config

Verify the Configurations

Show the brief information of all VLANs:

Switch(config)#show vlan brief

VLAN	Name	Status	Ports
1	System-VLAN	active	Gi1/0/4, Gi1/0/5, Gi1/0/6, Gi1/0/7, ...
10	VLAN10	active	Gi1/0/1
20	VLAN20	active	Gi1/0/2
30	VLAN30	active	Gi1/0/3
40	VLAN40	active	Gi1/0/4

Show the brief information of MVR:

```
Switch(config)#show mvr
MVR                                 :Enable
MVR Multicast Vlan                  :40
MVR Max Multicast Groups            :256
MVR Current Multicast Groups        :1
MVR Global Query Response Time      :5 (tenths of sec)
MVR Mode Type                       :Dynamic
```

Show the membership of MVR groups:


```
Switch(config)#show mvr members
MVR Group IP        Status          Members
----------------    ------------    ------------------
225.1.1.1           active          Gi1/0/4
```

7.3 Example for Configuring Unknown Multicast and Fast Leave

7.3.1 Network Requirement

A user experiences lag when he is changing channel on his IPTV. He wants solutions to this problem. As shown in the following network topology, port 1/0/4 on the switch is connected to the upper layer network, and port 1/0/2 is connected to Host B.

Figure 7-14 Network Topology for Unknow Multicast and Fast Leave

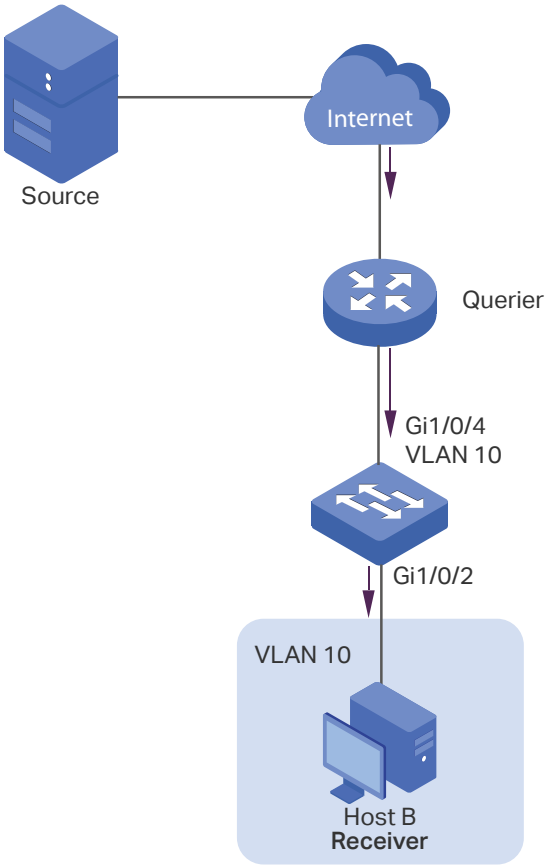

7.3.2 Configuration Scheme

After the channel is changed, the client (Host B) still receives irrelevant multicast data, the data from the previous channel and possibly other unknown multicast data, which increases the network load and results in network congestion.

To avoid Host B from receiving irrelevant multicast data, you can enable Fast Leave on port 1/0/2 and configure the switch to discard unknown multicast data. To change channel, Host B sends a leave message about leaving the previous channel. With Fast Leave enabled on port 1/0/2, the switch will then drop multicast data from the previous channel, which ensures that Host B only receives multicast data from the new channel and that the multicast network is unimpeded.


Demonstrated with T2600G-28TS, this section provides configuration procedures in two ways: using the GUI and using the CLI.

7.3.3 Using the GUI

1) Create VLAN 10. Add port 1/0/2 to the VLAN as untagged port and port 1/0/4 as tagged port. Configure the PVID of the two ports as 10. For details, refer to *Configuring 802.1Q VLAN*.

2) Choose the menu **L2 FEATURES > Multicast > IGMP Snooping > Global Config** to load the following page. In the **Global Config** section, enable IGMP Snooping globally and configure Unknown Multicast Groups as **Discard**.

Figure 7-15 Configure IGMP Snooping Globally

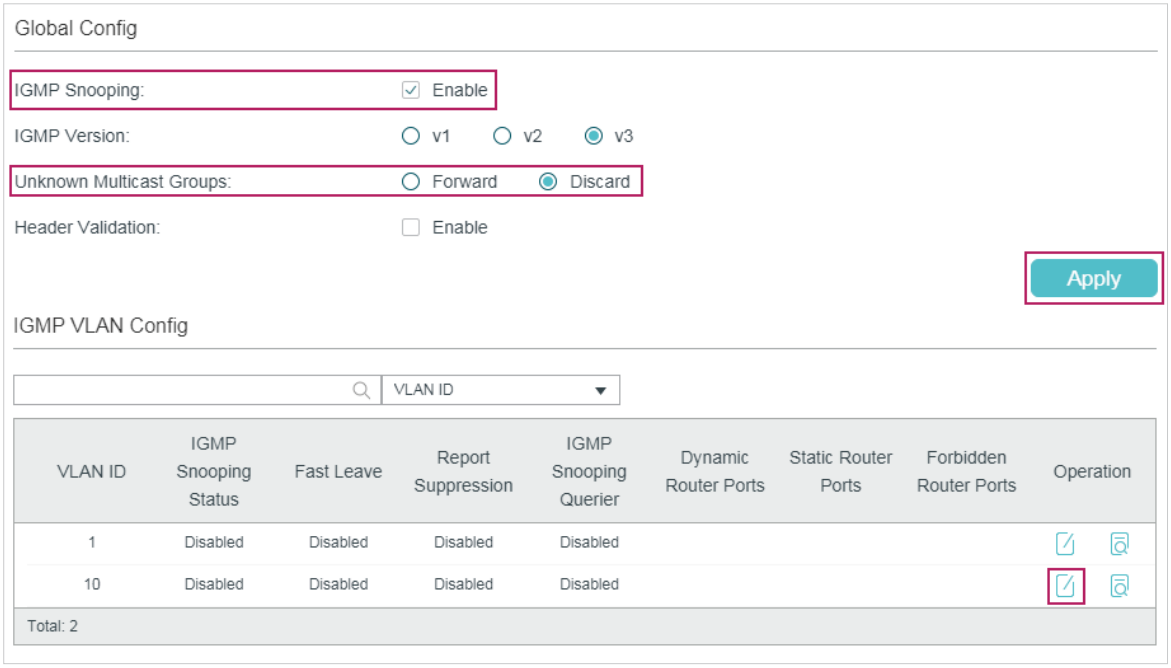


Note:

IGMP Snooping and MLD Snooping share the setting of Unknown Multicast, so you have to enable MLD Snooping globally on the **L2 FEATURES > Multicast > MLD Snooping > Global Config** page at the same time.


3) In the **IGMP VLAN Config** section, click in VLAN 10 to load the following page. Enable IGMP Snooping for VLAN 10.

Figure 7-16 Enable IGMP Snooping for VLAN 10

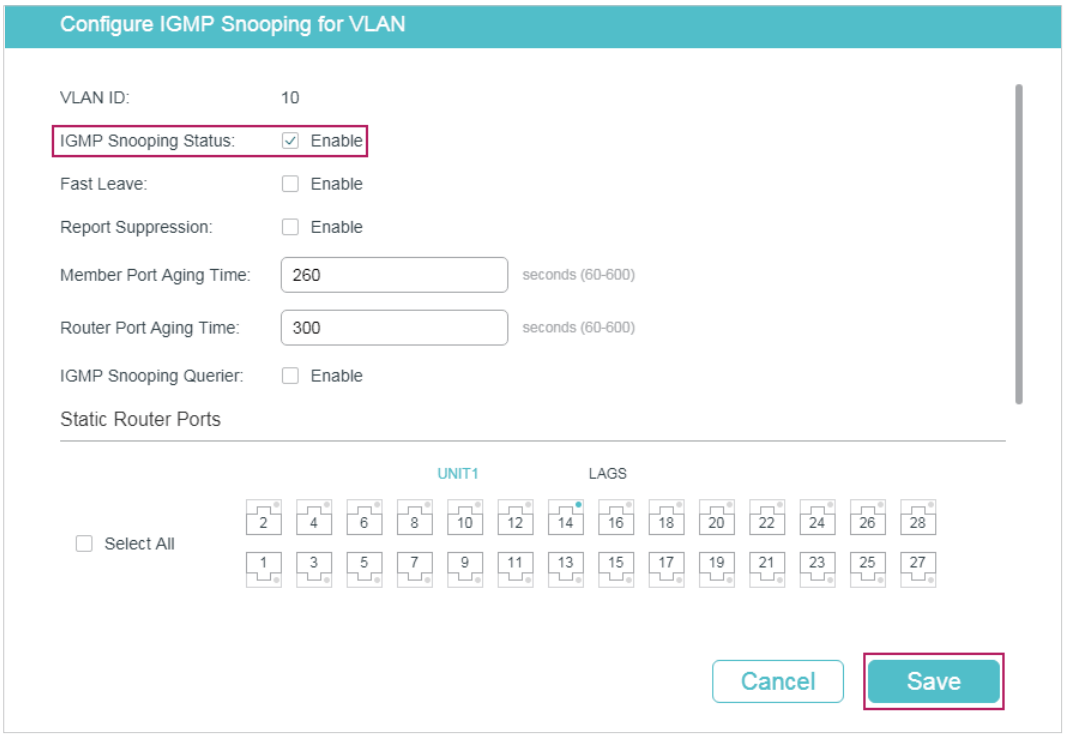

4) Choose the menu **L2 FEATURES > Multicast > IGMP Snooping > Port Config** to load the following page. Enable IGMP Snooping on port 1/0/2 and port 1/0/4 and enable Fast Leave on port 1/0/2.

Figure 7-17 Configure IGMP Snooping on Ports

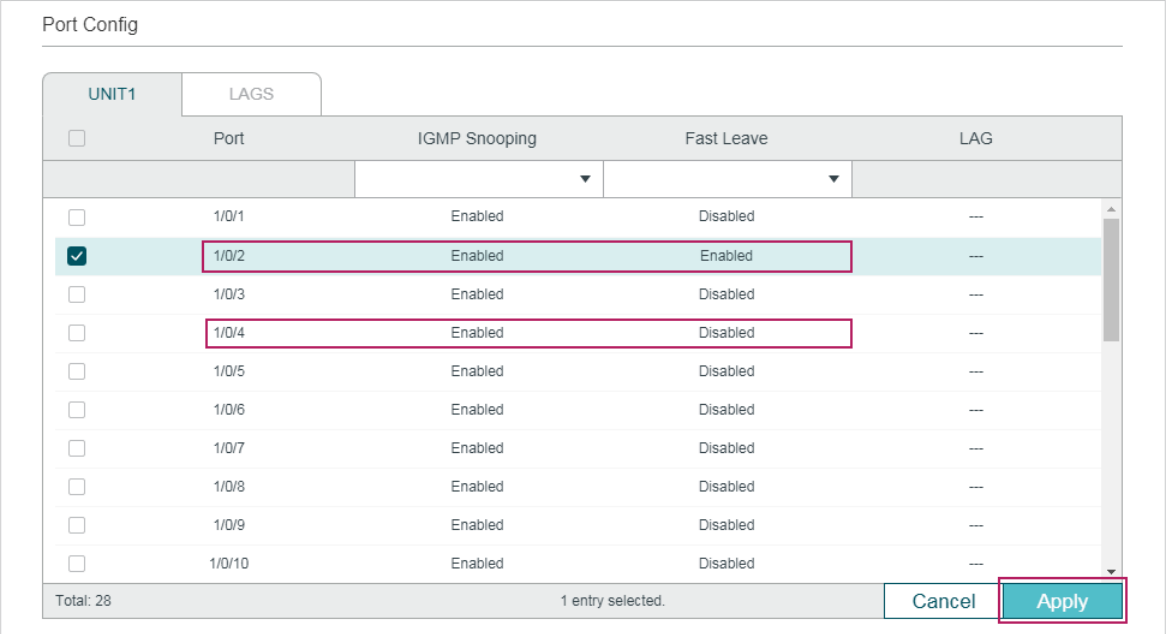

5) Click Save to save the settings.

7.3.4 Using the CLI

1) Enable IGMP Snooping and MLD Snooping globally.

Switch#configure

Switch(config)#ip igmp snooping

Switch(config)#ipv6 mld snooping

2) Configure Unknown Multicast Groups as Discard globally.

Switch(config)#ip igmp snooping drop-unknown

3) Enable IGMP Snooping on port 1/0/2 and enable Fast Leave. On port 1/0/4, enable IGMP Snooping.

Switch(config)#interface gigabitEthernet 1/0/2

Switch(config-if)#ip igmp snooping

Switch(config-if)#ip igmp snooping immediate-leave

Switch(config-if)#exit

Switch(config)#interface gigabitEthernet 1/0/4

Switch(config-if)#ip igmp snooping

Switch(config-if)#exit

4) Enable IGMP Snooping in VLAN 10.

Switch(config)#ip igmp snooping vlan-config 10

5) Save the settings.

Switch(config)#end

Switch#copy running-config startup-config

Verify the Configurations

Show global settings of IGMP Snooping:

Switch(config)#show ip igmp snooping

IGMP Snooping :Enable

IGMP Version :V3

Unknown Multicast :Discard

...

Enable Port: Gi1/0/1-28

Enable VLAN:10

Show settings of IGMP Snooping on port 1/0/2:

Switch(config)#show ip igmp snooping interface gigabitEthernet 1/0/2 basic-config

Port	IGMP-Snooping	Fast-Leave
---	---	---
Gi1/0/2	enable	enable

7.4 Example for Configuring Multicast Filtering

7.4.1 Network Requirements

Host B, Host C and Host D are in the same subnet. Host C and Host D only receive multicast data sent to 225.0.0.1, while Host B receives all multicast data except the one sent from 225.0.0.2.


7.4.2 Configuration Scheme

With the functions for managing multicast groups, whitelist and blacklist mechanism (profile binding), the switch can only allow specific member ports to join specific multicast groups or disallow specific member ports to join specific multicast groups. You can achieve this filtering function by creating a profile and binding it to the corresponding member port.

7.4.3 Network Topology

As shown in the following network topology, Host B is connected to port 1/0/1, Host C is connected to port 1/0/2 and Host D is connected to port 1/0/3. They are all in VLAN 10.

Figure 7-18 Network Topology for Multicast Filtering

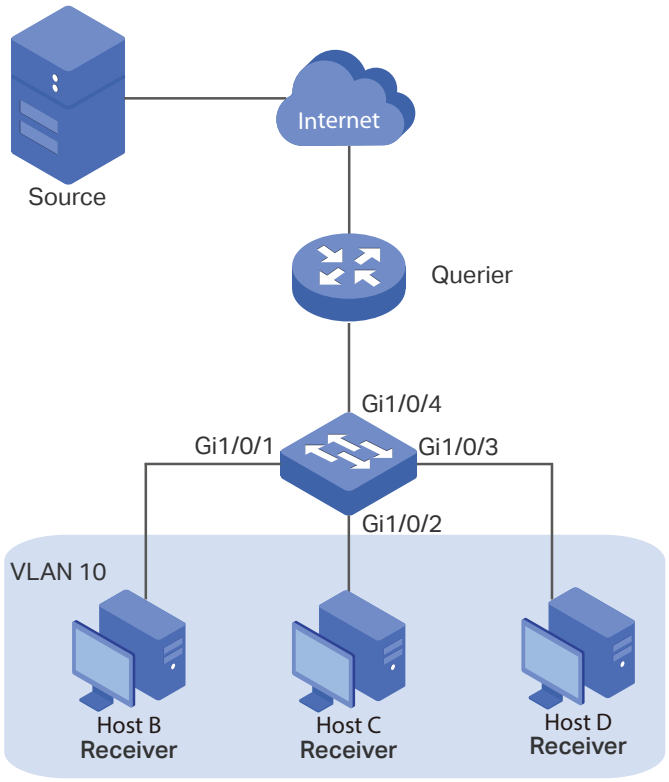


Demonstrated with T2600G-28TS, this section provides configuration procedures in two ways: using the GUI and using the CLI.

7.4.4 Using the GUI


1) Create VLAN 10. Add port 1/0/1-3 to the VLAN as untagged port and port 1/0/4 as tagged port. Configure the PVID of the four ports as 10. For details, refer to *Configuring 802.1Q VLAN*.
2) Choose the menu **L2 FEATURES > Multicast > IGMP Snooping > Global Config** to load the following page. In the **Global Config** section, enable IGMP Snooping globally.

Figure 7-19 Enable IGMP Snooping Globally

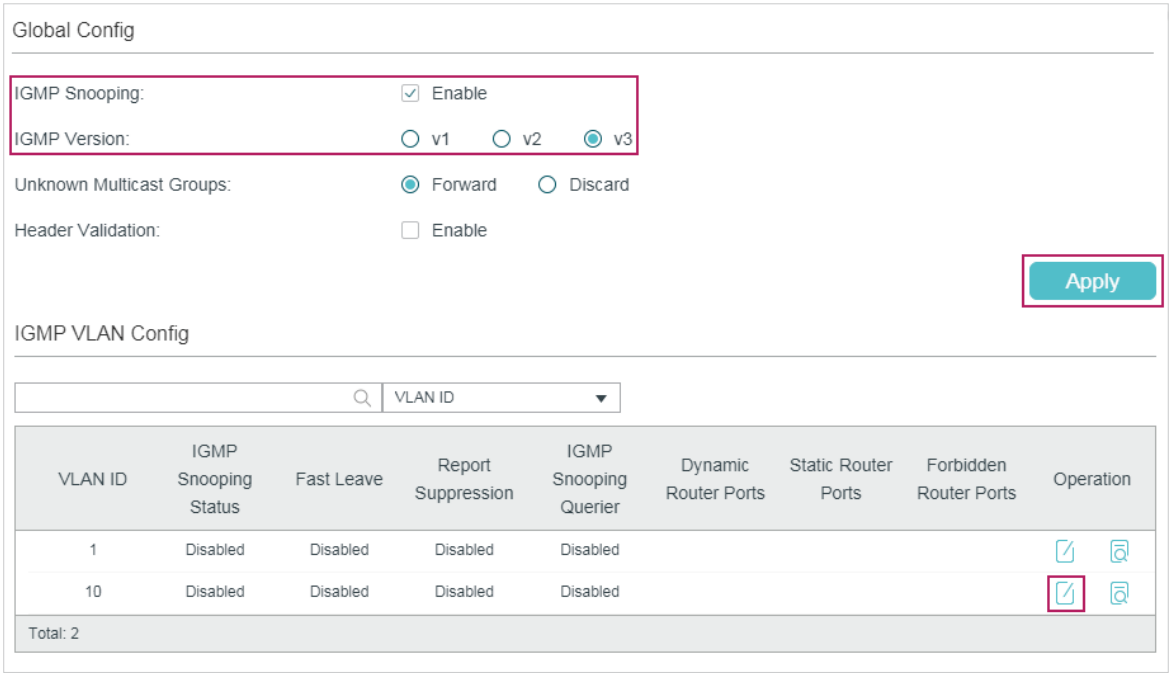


3) In the **IGMP VLAN Config** section, click in VLAN 10 to load the following page. Enable IGMP Snooping for VLAN 10.

Figure 7-20 Enable IGMP Snooping for VLAN 10

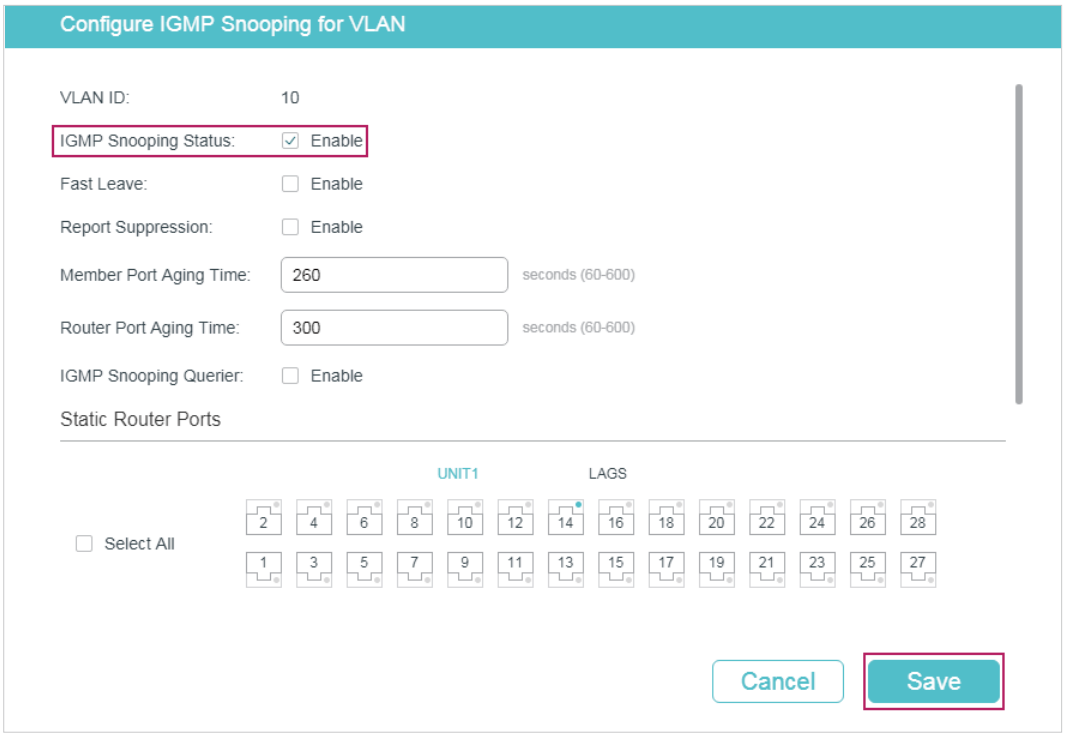


4) Choose the menu **L2 FEATURES > Multicast > IGMP Snooping > Port Config** to load the following page.

Figure 7-21 Enable IGMP Snooping on the Port

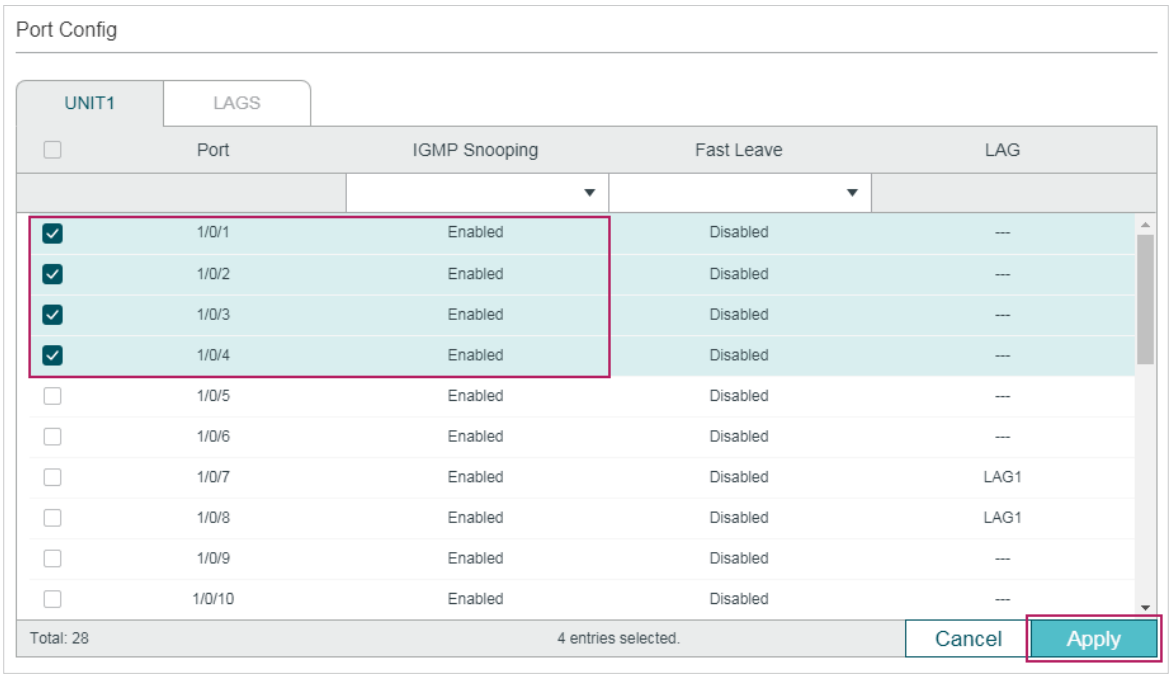


5) Choose the menu **L2 FEATURES > Multicast > Multicast Filtering > IPv4 Profile** and click Add to load the following page. Create Profile 1, specify the mode as **Permit,** bind the profile to port 1/0/2-3, and specify the filtering multicast IP address as 225.0.0.1. Then click **Back** to return to the **IPv4 Profile Table** page.

Figure 7-22 Configure Filtering Profile for Host C and Host D

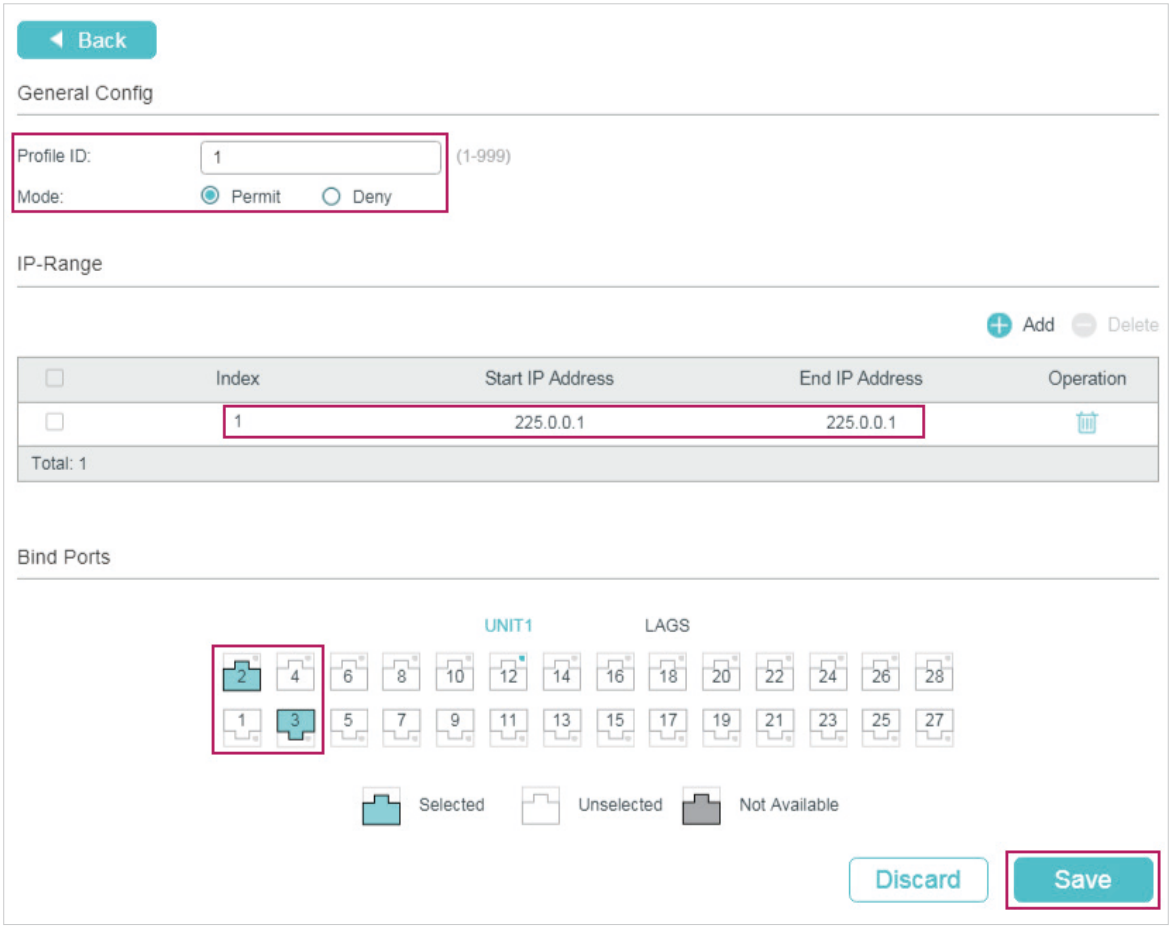

6) Click Add again to load the following page. Create Profile 2, specify the mode as **Deny,** bind the profile to port 1/0/1, and specify the filtering multicast IP address as 225.0.0.2.

Figure 7-23 Configure Filtering Profile for Host B

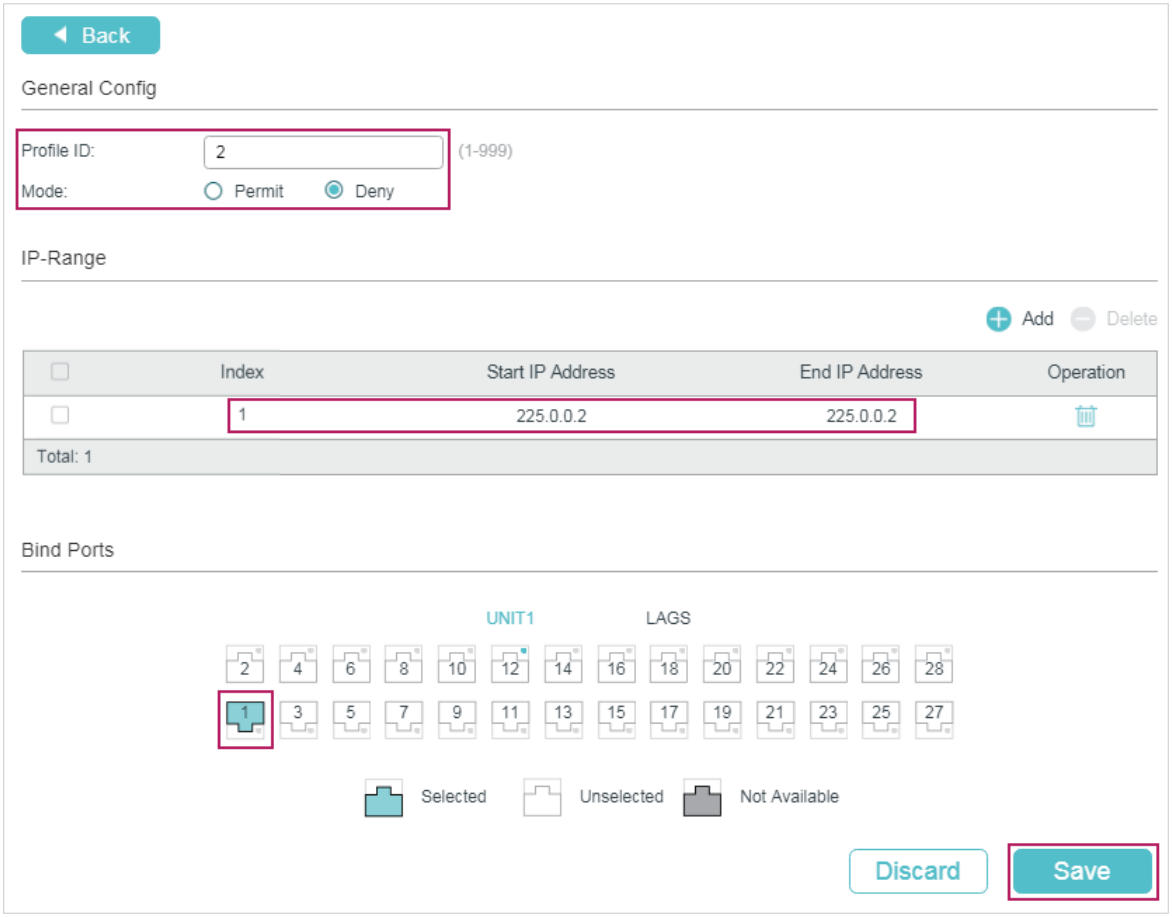

7) Click Save to save the settings.

7.4.5 Using the CLI

1) Create VLAN 10.

Switch#configure

Switch(config)#vlan 10

Switch(config-vlan)#name vlan10

Switch(config-vlan)#exit

2) Add port 1/0/1-3 to VLAN 10 and set the link type as untagged. Add port 1/0/4 to VLAN 10 and set the link type as tagged.

Switch(config)#interface range gigabitEthernet 1/0/1-3

Switch(config-if-range)#switchport general allowed vlan 10 untagged

Switch(config-if-range)#exit

Switch(config)#interface gigabitEthernet 1/0/4

Switch(config-if)#switchport general allowed vlan 10 tagged

Switch(config-if)#exit

3) Set the PVID of port 1/0/1-4 as 10.

Switch(config)#interface range gigabitEthernet 1/0/1-4

Switch(config-if-range)#switchport pvid 10

Switch(config-if-range)#exit

4) Enable IGMP Snooping Globally.

Switch(config)#ip igmp snooping

5) Enable IGMP Snooping in VLAN 10.

Switch(config)#ip igmp snooping vlan-config 10

6) Enable IGMP Snooping on port 1/0/1-4.

Switch(config)#interface range gigabitEthernet 1/0/1-4

Switch(config-if-range)#ip igmp snooping

Switch(config-if-range)#exit

7) Create Profile 1, configure the mode as permit, and add an IP range with both start IP and end IP being 225.0.0.1.

Switch(config)#ip igmp profile 1

Switch(config-igmp-profile)#permit

Switch(config-igmp-profile)#range 225.0.0.1 225.0.0.1

Switch(config-igmp-profile)#exit

8) Bind Profile 1 to Port 1/0/2 and Port 1/10/3.

Switch(config)#interface range gigabitEthernet 1/0/2-3

Switch(config-if-range)#ip igmp filter 1

Switch(config-if-range)#exit

9) Create Profile 2, configure the mode as deny, and add an IP range with both start IP and end IP being 225.0.0.2.

Switch(config)#ip igmp profile 2

Switch(config-igmp-profile)#deny

Switch(config-igmp-profile)#range 225.0.0.2 225.0.0.2

Switch(config-igmp-profile)#exit

10) Bind Profile 2 to Port 1/0/1.

Switch(config)#interface gigabitEthernet 1/0/1

Switch(config-if)#ip igmp filter 2

Switch(config-if)#exit

11) Save the settings.

Switch(config)#end

Switch#copy running-config startup-config

Verify the Configurations

Show global settings of IGMP Snooping:

Switch(config)#show ip igmp snooping

IGMP Snooping :Enable

IGMP Version :V3

...

Enable Port:Gi1/0/1-4

Enable VLAN:10

Show all profile bindings:

Switch(config)#show ip igmp profile

IGMP Profile 1

permit

range 225.0.0.1 225.0.0.1

Binding Port(s)

Gi1/0/2-3

IGMP Profile 2

deny

range 225.0.0.2 225.0.0.2

Binding Port(s)

Gi1/0/1

8 Appendix: Default Parameters

8.1 Default Parameters for IGMP Snooping

Table 8-1 Default Parameters of IGMP Snooping

Function	Parameter	Default Setting
Global Settings of IGMP Snooping	IGMP Snooping	Disabled
	IGMP Version	v3
	Unknown Multicast Groups	Forward
	Header Validation	Disabled
IGMP Snooping Settings in the VLAN	IGMP Snooping	Disabled
	Fast Leave	Disabled
	Report Suppression	Disabled
	Member Port Aging Time	260 seconds
	Router Port Aging Time	300 seconds
	Leave Time	1 second
	IGMP Snooping Querier	Disabled
	Query Interval	60 seconds
	Maximum Response Time	10 seconds
	Last Member Query Interval	1 second
	Last Member Query Count	2
	General Query Source IP	0.0.0.0
	Static Router Ports	None
	Forbidden Router Ports	None
IGMP Snooping Settings on the Port and LAG	IGMP Snooping	Enabled
	Fast Leave	Disabled

Function	Parameter	Default Setting
Static Multicast Group Settings	Static Multicast Group Entries	None
IGMP Accounting and Authentication	IGMP Accounting	Disabled
	IGMP Authentication	Disabled

8.2 Default Parameters for MLD Snooping

Table 8-2 Default Parameters of MLD Snooping

Function	Parameter	Default Setting
Global Settings of IGMP Snooping	MLD Snooping	Disabled
	Unknown Multicast Groups	Forward
MLD Snooping Settings in the VLAN	MLD Snooping	Disabled
	Fast Leave	Disabled
	Report Suppression	Disabled
	Member Port Aging Time	260 seconds
	Router Port Aging Time	300 seconds
	Leave Time	1 second
	MLD Snooping Querier	Disabled
	Query Interval	60 seconds
	Maximum Response Time	10 seconds
	Last Listener Query Interval	1 second
	Last Listener Query Count	2
	General Query Source IP	::
	Static Router Ports	None
	Forbidden Router Ports	None
MLD Snooping Settings on the Port and LAG	MLD Snooping	Enabled
	Fast Leave	Disabled

Function	Parameter	Default Setting
Static Multicast Group Settings	Static Multicast Group Entries	None

8.3 Default Parameters for MVR

Table 8-3 Default Parameters of MVR

Function	Parameter	Default Setting
Global Settings of MVR	MVR	Disabled
	MVR Mode	Compatible
	Multicast VLAN ID	1
	Query Response Time	5 tenths of a second
	Maximum Multicast Groups	256
MVR Group Settings	MVR Group Entries	None
MVR Settings on the Port	MVR Mode	Disabled
	MVR Port Type	None
	Fast Leave	Disabled
MVR Static Group Members	MVR Static Group Member Entries	None

8.4 Default Parameters for Multicast Filtering

Table 8-4 Default Parameters of Multicast Filtering

Function	Parameter	Default Setting
Profile Settings	IPv4 Profile and IPv6 Profile Entries	None
Multicast Filtering Settings on the Port and LAG	Bound Profile	None
	Maximum Groups	1000
	Overflow Action	Drop

Part 14

Configuring Spanning Tree

CHAPTERS

1. Spanning Tree
2. STP/RSTP Configurations
3. MSTP Configurations
4. STP Security Configurations
5. Configuration Example for MSTP
6. Appendix: Default Parameters

1 Spanning Tree


1.1 Overview

STP

STP (Spanning Tree Protocol) is a layer 2 Protocol that prevents loops in the network. As is shown in Figure 1-1, STP helps to:

- Block specific ports of the switches to build a loop-free topology.
- Detect topology changes and automatically generate a new loop-free topology.

Figure 1-1 STP Function

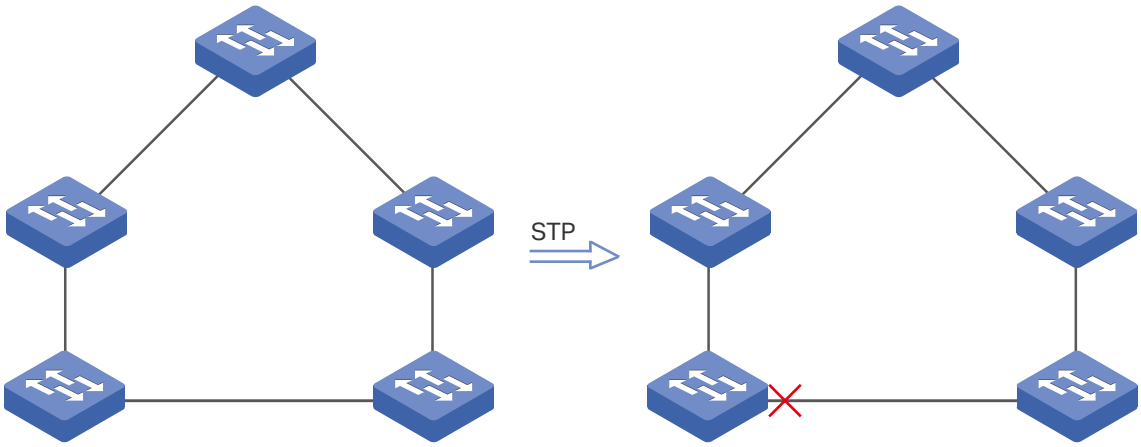

RSTP

RSTP (Rapid Spanning Tree Protocol) provides the same features as STP. Besides, RSTP can provide much faster spanning tree convergence.

MSTP


MSTP (Multiple Spanning Tree Protocol) also provides the fast spanning tree convergence as RSTP. In addition, MSTP enables VLANs to be mapped to different spanning trees (MST instances), and traffic in different VLANs will be transmitted along their respective paths, implementing load balancing.

1.2 Basic Concepts

1.2.1 STP/RSTP Concepts

Based on the networking topology below, this section will introduce some basic concepts in STP/RSTP.

Figure 1-2 STP/RSTP Topology

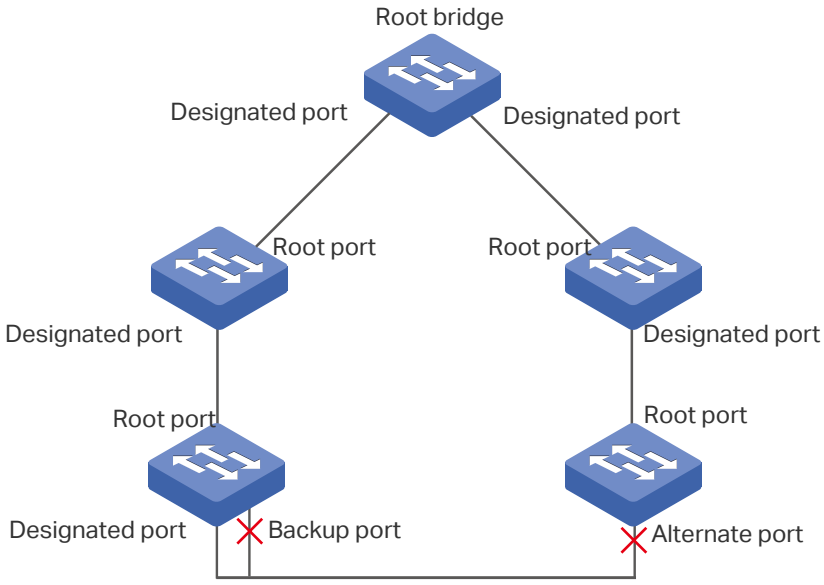

Root Bridge

The root bridge is the root of a spanning tree. The switch with te lowest bridge ID will be the root bridge, and there is only one root bridge in a spanning tree.

Bridge ID

Bridge ID is used to select the root bridge. It is composed of a 2-byte priority and a 6-byte MAC address. The priority is allowed to be configured manually on the switch, and the switch with the lowest priority value will be elected as the root bridge. If the priority of the switches are the same, the switch with the smallest MAC address will be selected as the root bridge.

Port Role

- Root Port

The root port is selected on non-root bridge that can provide the lowest root path cost. There is only one root port in each non-root bridge.

- Designated Port

The designated port is selected in each LAN segment that can provide the lowest root path cost from that LAN segment to the root bridge.

- Alternate Port

If a port is not selected as the designated port for it receives better BPDUs from another switch, it will become an alternate port.

In RSTP/MSTP, the alternate port is the backup for the root port. It is blocked when the root port works normally. Once the root port fails, the alternate port will become the new root port.

In STP, the alternate port is always blocked.

- Backup Port

If a port is not selected as the designated port for it receives better BPDUs from the switch it belongs to, it will become an backup port.

In RSTP/MSTP, the backup port is the backup for the designated port. It is blocked when the designated port works normally. Once the root port fails, the backup port will become the new designated port.

In STP, the backup port is always blocked.

- Disable Port

The disconnected port with spanning tree function enabled .

Port Status

Generally, in STP, the port status includes: Blocking, Listening, Learning, Forwarding and Disabled.

- Blocking

In this status, the port receives and sends BPDUs. The other packets are dropped.

- Listening

In this status, the port receives and sends BPDUs. The other packets are dropped.

- Learning

In this status, the port receives and sends BPDUs. It also receives the other user packets to update its MAC address table, but doesn't forward them.

- Forwarding

In this status, the port receives and sends BPDUs. It also receives the other user packets to update its MAC address table, and forwards them.

- Disabled

In this status, the port is not participating in the spanning tree, and drops all the packets it receives.

In RSTP/MSTP, the port status includes: Discarding, Learning and Forwarding. The Discarding status is the grouping of STP's Blocking, Listening and Disabled, and the

Learning and Forwarding status correspond exactly to the Learning and Forwarding status specified in STP.

In TP-Link switches, the port status includes: Blocking, Learning, Forwarding and Disconnected.

- Blocking

In this status, the port receives and sends BPDUs. The other packets are dropped.

- Learning

In this status, the port receives and sends BPDUs. It also receives the other user packets to update its MAC address table, but doesn't forward them.

- Forwarding

In this status, the port receives and sends BPDUs. It also receives the other user packets to update its MAC address table, and forwards them.

- Disconnected

In this status, the port is enabled with spanning tree function but not connected to any device.

Path Cost

The path cost reflects the link speed of the port. The smaller the value, the higher link speed the port has.

The path cost can be manually configured on each port. If not, the path cost values are automatically calculated according to the link speed as shown below:

Table 1-1 The Default Path Cost Value

Link Speed	Path Cost Value
10Mb/s	2,000,000
100Mb/s	200,000
1Gb/s	20,000
10Gb/s	2,000

Root Path Cost

The root path cost is the accumulated path costs from the root bridge to the other switches. When root bridge sends its BPDU, the root path cost value is 0. When a switch receives this BPDU, the root path cost wll be increased according to the path cost of the receive port. Then it create a new BPDU with the new root file cost and forwards it to the

downstream switch. The value of the accumulated root path cost increases as the BPDU spreads further.


BPDU

BPDU is a kind of packet that is used to generate and maintain the spanning tree. The BPDUs (Bridge Protocol Data Unit) contain a lot of information, like bridge ID, root path cost, port priority and so on. Switches share these information to help determine the spanning tree topology.

1.2.2 MSTP Concepts

MSTP, compatible with STP and RSTP, has the same basic elements used in STP and RSTP. Based on the networking topology, this section will introduce some concepts only used in MSTP.

Figure 1-3 MSTP Topology

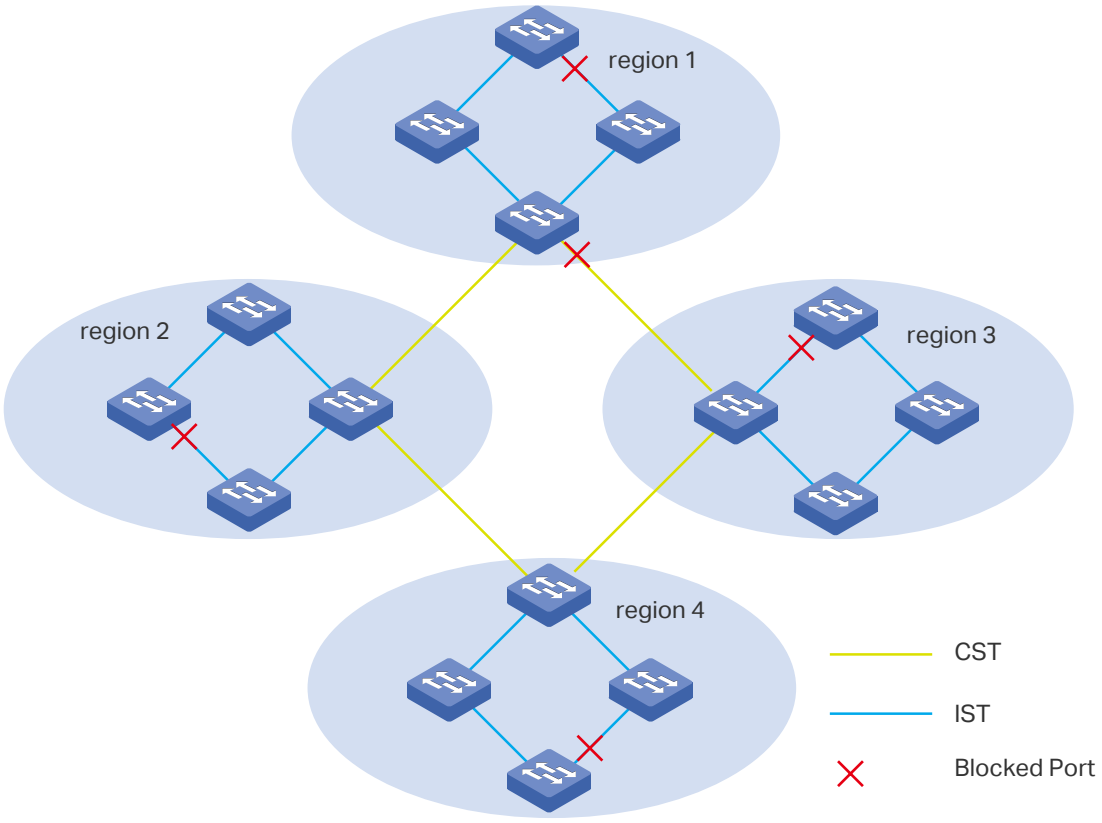

MST Region


An MST region consists of multiple interconnected switches. The switches with the same following characteristics are considered as in the same region:

- Same region name
- Same revision level
- Same VLAN-Instance mapping

MST Instance

The MST instance is a spanning tree running in the MST region. Multiple MST instances can be established in one MST region and they are independent of each other. As is shown in Figure 1-4, there are three instances in a region, and each instance has its own root bridge.

Figure 1-4 MST Region

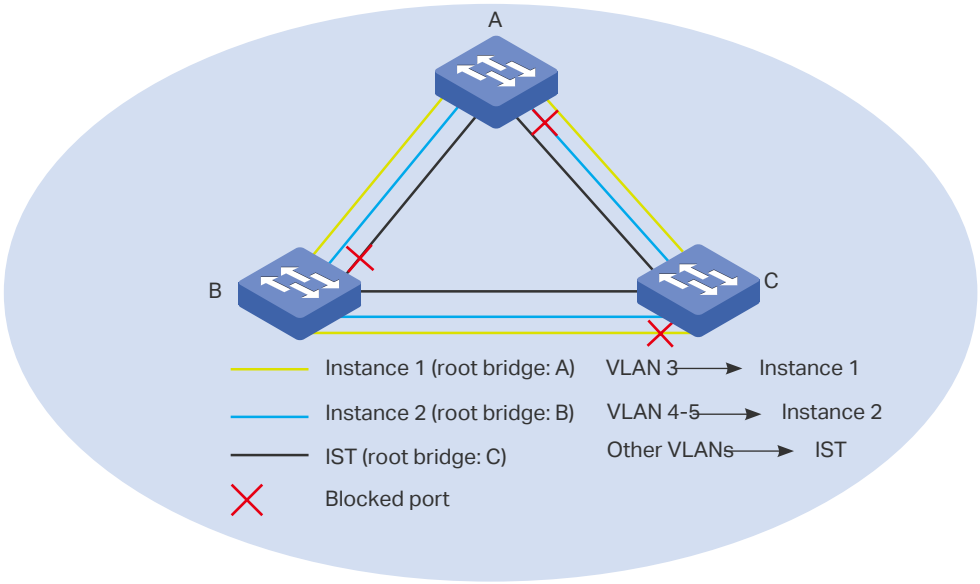

VLAN-Instance Mapping

VLAN-Instance Mapping describes the mapping relationship between VLANs and instances. Multiple VLANs can be mapped to a same instance, but one VLAN can be mapped to only one instance. As Figure 1-4 shows, VLAN 3 is mapped to instance 1, VLAN 4 and VLAN 5 are mapped to instance 2, the other VLANs are mapped to the IST.

IST

The Internal Spanning Tree (IST), which is a special MST instance with an instance ID 0. By default, all the VLANs are mapped to IST.

CST

The Common Spanning Tree (CST), that is the spanning tree connecting all MST regions. As is shown in Figure 1-3, region1-region 4 are connected by the CST.

CIST

The Common and Internal Spanning Tree (CIST), comprising IST and CST. CIST is the spanning tree that connects all the switches in the network.

1.3 STP Security

STP Security prevents the loops caused by wrong configurations or BPDU attacks. It contains Loop Protect, Root Protect, BPDU Protect, BPDU Filter and TC Protect functions.

» Loop Protect

Loop Protect function is used to prevent loops caused by link congestions or link failures. It is recommended to enable this function on root ports and alternate ports.

If the switch cannot receive BPDUs because of link congestions or link failures, the root port will become a designated port and the alternate port will transit to forwarding status, so loops will occur.

With Loop Protect function enabled, the port will temporarily transit to blocking state when the port does not receive BPDUs. After the link restores to normal, the port will transit to its normal state, so loops can be prevented.

» Root Protect

Root Protect function is used to ensure that the desired root bridge will not lose its position. It is recommended to enable this function on the designated ports of the root bridge.

Generally, the root bridge will lose its position once receiving higher-priority BPDUs caused by wrong configurations or malicious attacks. In this case, the spanning tree will be regenerated, and traffic needed to be forwarded along high-speed links may be lead to low-speed links.

With root protect function enabled, when the port receives higher-priority BDPUs, it will temporarily transit to blocking state. After two times of forward delay, if the port does not receive any higher-priority BDPUs, it will transit to its normal state.

» BPDU Protect

BPDU Protect function is used to prevent the port from receiving BPUDs. It is recommended to enable this function on edge ports.

Normally edge ports do not receive BPDUs, but if a user maliciously attacks the switch by sending BPDUs, the system automatically configures these ports as non-edge ports and regenerates the spanning tree.

With BPDU protect function enabled, the edge port will be shutdown when it receives BPDUs, and reports these cases to the administrator. Only the administrator can restore it.

» BPDU Filter

BPDU filter function is to prevent BPDU flooding in the network. It is recommended to enable this function on edge ports.

If a switch receives malicious BPDUs, it forwards these BPDUs to the other switches in the network, and the spanning tree will be continuously regenerated. In this case, the switch occupies too much CPU or the protocol status of BPDUs is wrong.

With BPDU filter function enabled, the port does not receive or forward BPDUs, but it sends out its own BPDUs, preventing the switch from being attacked by BPDUs.

» TC Protect

TC Protect function is used to prevent the switch from frequently removing MAC address entries. It is recommended to enable this function on the ports of non-root switches.

A switch removes MAC address entries upon receiving TC-BPDUs (the packets used to announce changes in the network topology). If a user maliciously sends a large number of TC-BPDUs to a switch in a short period, the switch will be busy with removing MAC address entries, which may decrease the performance and stability of the network.

With TC protect function enabled, if the number of the received TC-BPDUs exceeds the maximum number you set in the TC threshold, the switch will not remove MAC address entries in the TC protect cycle.

2 STP/RSTP Configurations

To complete the STP/RSTP configuration, follow these steps:

1) Configure STP/RSTP parameters on ports.
2) Configure STP/RSTP globally.
3) Verify the STP/RSTP configurations.

Configuration Guidelines


- Before configuring the spanning tree, it's necessary to make clear the role that each switch plays in a spanning tree.
- To avoid any possible network flapping caused by STP/RSTP parameter changes, it is recommended to enable STP/RSTP function globally after configuring the relevant parameters.

2.1 Using the GUI

2.1.1 Configuring STP/RSTP Parameters on Ports

Choose the menu **L2 FEATURES > Spanning Tree > Port Config** to load the following page.

Figure 2-1 Configuring STP/RSTP Parameters on Ports

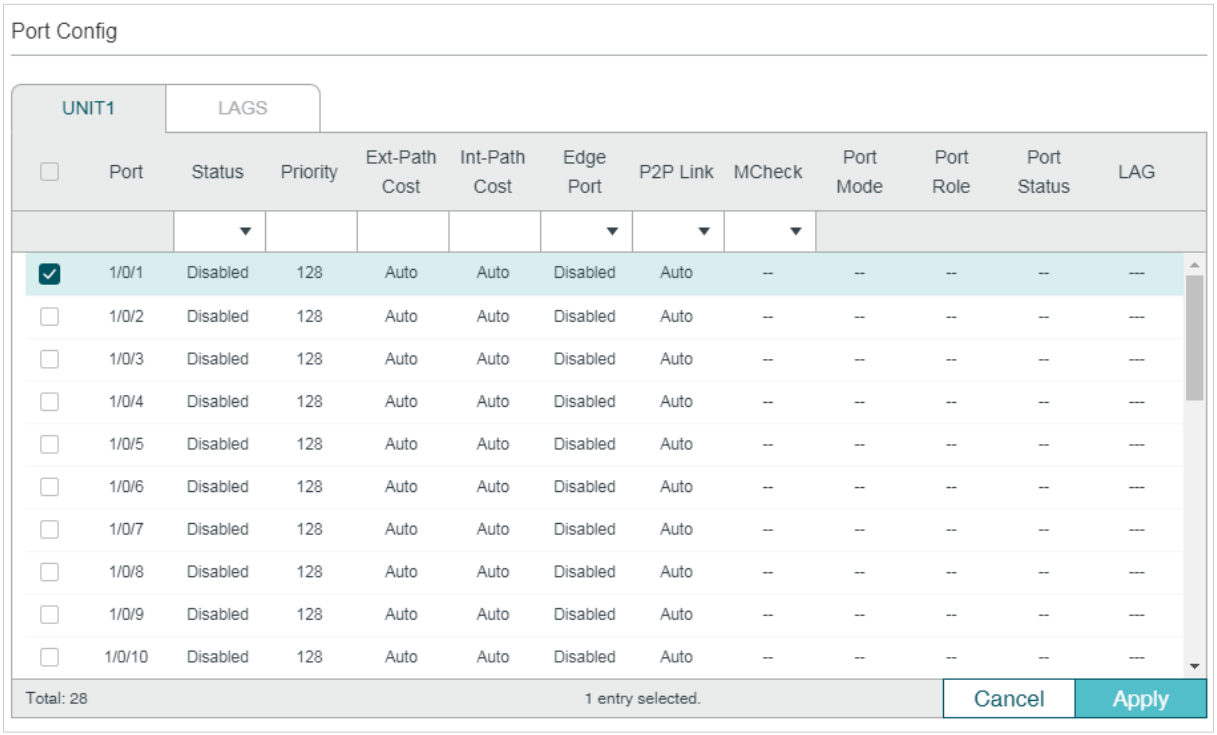

Follow these steps to configure STP/RSTP parameters on ports:

1) In the **Port Config** section, configure STP/RSTP parameters on ports.

UNIT	Select the desired unit or LAGs.
Status	Enable or disable spanning tree function on the desired port.
Priority	Specify the Priority for the desired port. The value should be an integral multiple of 16, ranging from 0 to 240. The port with lower value has the higher priority. When the root path of the port is the same as other ports', the switch will compare the port priorities between these port and select a root port with the highest priority.
Ext-Path Cost	Enter the value of the external path cost. The valid values are from 0 to 2000000. The default setting is Auto, which means the port calculates the external path cost automatically according to the port's link speed. For STP/RSTP, external path cost indicates the path cost of the port in spanning tree. The port with the lowest root path cost will be elected as the root port of the switch. For MSTP, external path cost indicates the path cost of the port in CST.
Int-Path Cost	Enter the value of the internal path cost. The default setting is Auto, which means the port calculates the internal path cost automatically according to the port's link speed. This parameter is only used in MSTP and you need not to configure it if the spanning tree mode is STP/RSTP. For MSTP, internal path cost is used to calculate the path cost in IST. The port with the lowest root path cost will be elected as the root port of the switch in IST.
Edge Port	Select Enable to set the port as an edge port. When the topology is changed, the edge port can transit its state from blocking to forwarding directly. For the quick generation of the spanning tree, it is recommended to set the ports that are connected to the end devices as edge ports.
P2P Link	Select the status of the P2P (Point-to-Point) link to which the ports are connected. During the regeneration of the spanning tree, if the port of P2P link is elected as the root port or the designated port, it can transit its state to forwarding directly. Three options are supported: Auto, Open(Force) and Closed(Force). By default, it is Auto. **Auto**: The switch automatically checks if the port is connected to a P2P link, then sets the status as Open or Closed. **Open(Force)**: A port is set as the one that is connected to a P2P link. You should check the link first. **Close(Force)**: A port is set as the one that is not connected to a P2P link. You should check the link first.


MCheck	Select whether to perform MCheck operations on the port. If a port on an RSTP-enabled/MSTP-enabled device is connected to an STP-enabled device, the port will switch to STP compatible mode and send packets in STP format. MCheck is used to switch the mode of the port back to RSTP/MSTP after the port is disconnected from the STP-enabled device. The MCheck configuration can take effect only once, after that the MCheck status of the port will switch to Disabled.
Port Mode	Displays the spanning tree mode of the port. **STP**: The spanning tree mode of the port is STP. **RSTP**: The spanning tree mode of the port is RSTP. **MSTP**: The spanning tree mode of the port is MSTP.
Port Role	Displays the role that the port plays in the spanning tree. **Root Port**: Indicates that the port is the root port in the spanning tree. It has the lowest path cost from the root bridge to this switch and is used to communicate with the root bridge. **Designated Port**: Indicates that the port is the designated port in the spanning tree. It has the lowest path cost from the root bridge to this physical network segment and is used to forward data for the corresponding network segment. **Alternate Port**: Indicates that the port is the alternate port in the spanning tree. It is the backup of the root port or master port. **Backup Port**: Indicates that the port is the backup port in the spanning tree. It is the backup of the designated port. **Disabled**: Indicates that the port is not participating in the spanning tree.
Port Status	Displays the port status. **Forwarding**: The port receives and sends BPDUs, and forwards user data. **Learning**: The port receives and sends BPDUs. It also receives user traffic, but doesn't forward the traffic. **Blocking**: The port only receives and sends BPDUs. **Disconnected**: The port has the spanning tree function enabled but is not connected to any device.
LAG	Displays the LAG the port belongs to.

2) Click **Apply**.

2.1.2 Configuring STP/RSTP Globally

Choose the menu **L2 FEATURES > Spanning Tree > STP Config > STP Config** to load the following page.

Figure 2-2 Configuring STP/RSTP Globally

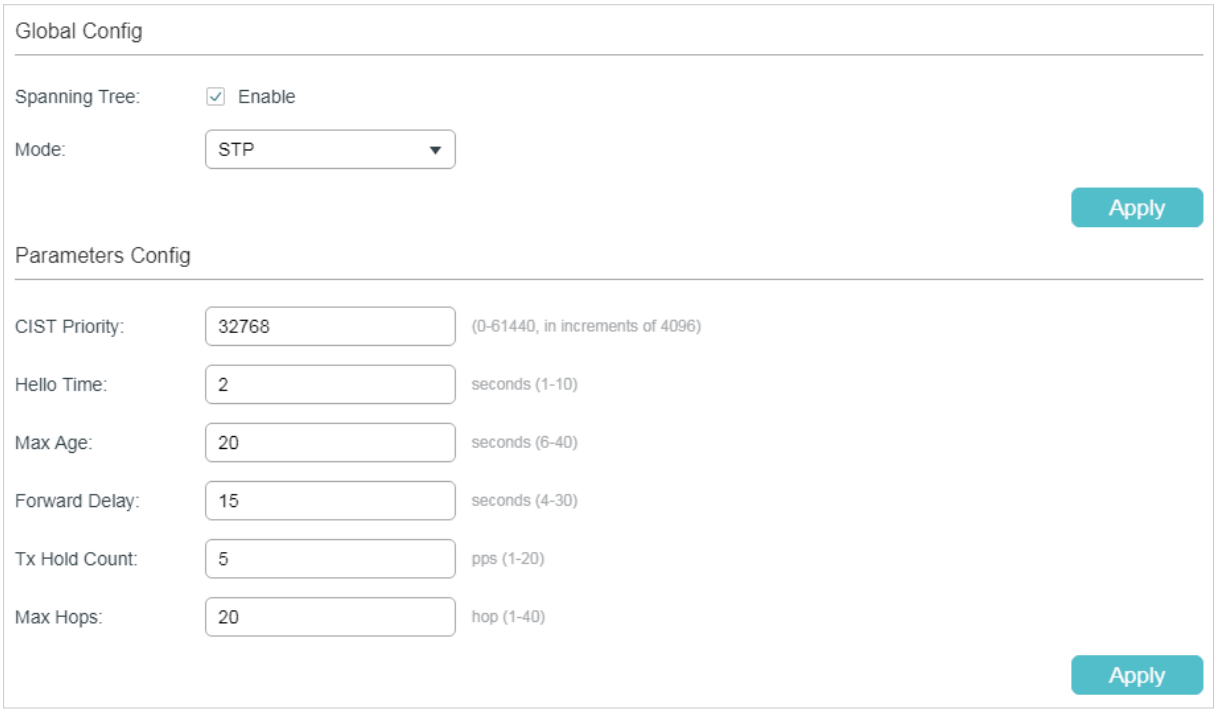

Follow these steps to configure STP/RSTP globally:

1) In the **Parameters Config** section, configure the global parameters of STP/RSTP and click **Apply**.

CIST Priority	Specify the CIST priority for the switch. CIST priority is a parameter used to determine the root bridge for spanning tree. The switch with the lower value has the higher priority. In STP/RSTP, CIST priority is the priority of the switch in spanning tree. The switch with the highest priority will be elected as the root bridge. In MSTP, CISP priority is the priority of the switch in CIST. The switch with the higher priority will be elected as the root bridge in CIST.
Hello Time	Specify the interval between BPDUs' sending. The default value is 2.The root bridge sends configuration BPDUs at an interval of Hello Time. It works with the MAX Age to test the link failures and maintain the spanning tree.
Max Age	Specify the maximum time that the switch can wait without receiving a BPDU before attempting to regenerate a new spanning tree. The default value is 2.
Forward Delay	Specify the interval between the port state transition from listening to learning. The default value is 15. It is used to prevent the network from causing temporary loops during the regeneration of spanning tree. The interval between the port state transition from learning to forwarding is also the Forward Delay.
Tx Hold Count	Specify the maximum number of BPDU that can be sent in a second. The default value is 5.

Max Hops	Specify the maximum BPDU counts that can be forwarded in a MST region. The default value is 20. A switch receives BPDU, then decrements the hop count by one and generates BPDUs with the new value. When the hop reaches zero, the switch will discard the BPDU. This value can control the scale of the spanning tree in the MST region. *Note:* Max Hops is a parameter configured in MSTP. You need not configure it if the spanning tree mode is STP/RSTP.

Note:

To prevent frequent network flapping, make sure that Hello Time, Forward Delay, and Max Age conform to the following formulas:

- 2*(Hello Time + 1) <= Max Age
- 2*(Forward Delay - 1) >= Max Age

2) In the **Global Config** section, enable spanning tree function, choose the STP mode as STP/RSTP, and click **Apply**.


Spanning Tree	Check the box to enable the spanning tree function globally.
Mode	Select the desired spanning tree mode as STP/RSTP on the switch. By default, it's STP. **STP**: Specify the spanning tree mode as STP. **RSTP**: Specify the spanning tree mode as RSTP. **MSTP**: Specify the spanning tree mode as MSTP.

2.1.3 Verifying the STP/RSTP Configurations

Verify the STP/RSTP information of your switch after all the configurations are finished.

Choose the menu **L2 FEATURES > Spanning Tree > STP Config > STP Summary** to load the following page.

Figure 2-3 Verifying the STP/RSTP Configurations

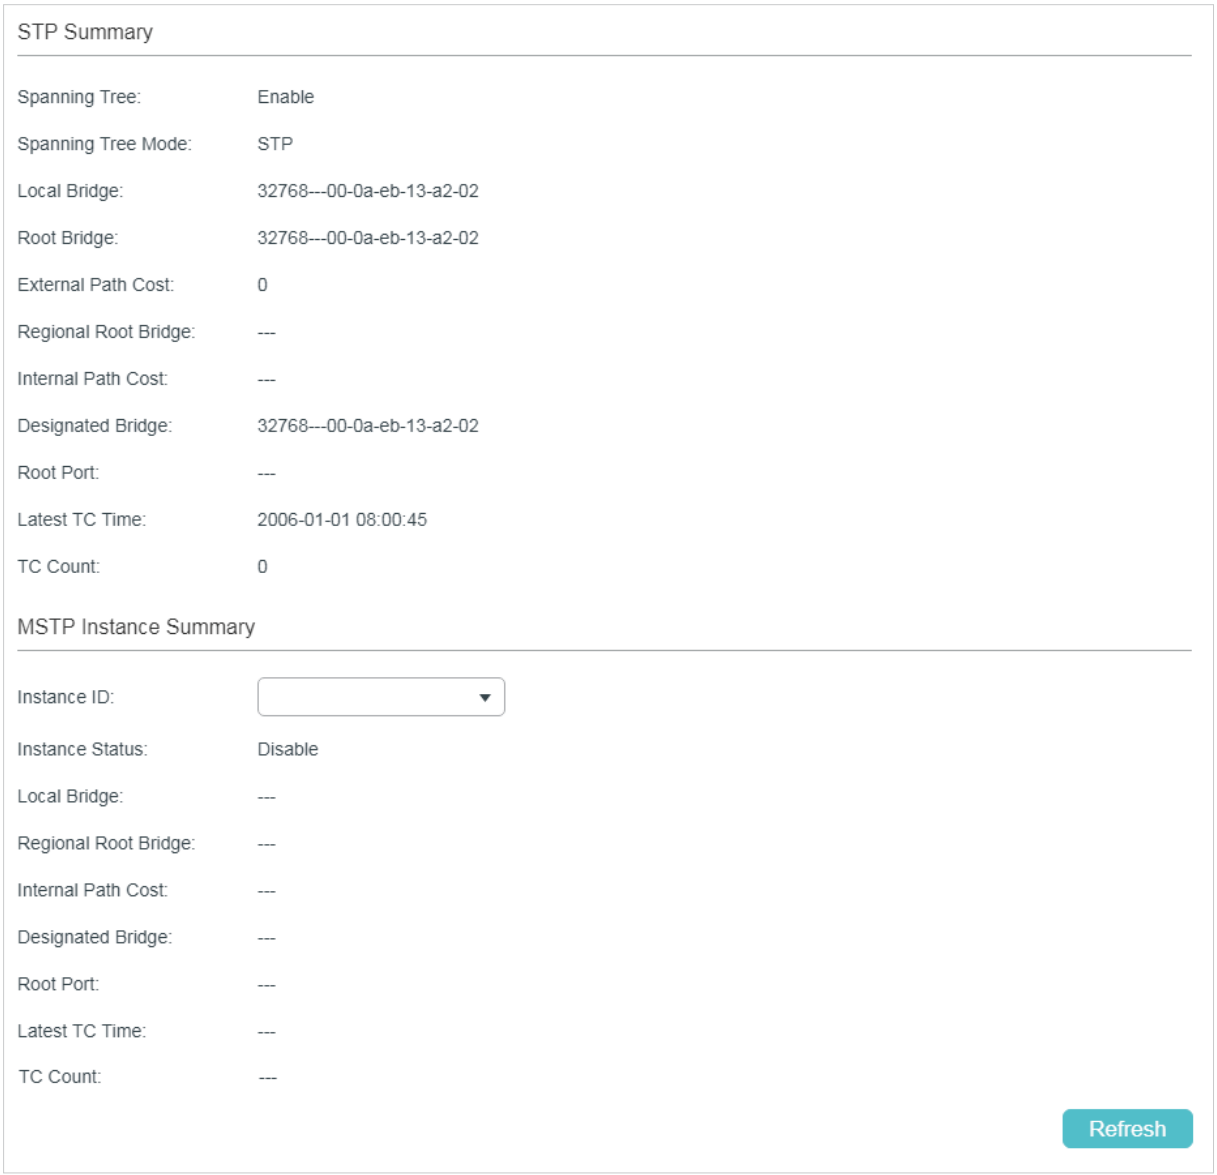

The **STP Summary** section shows the summary information of spanning tree :

Spanning Tree	Displays the status of the spanning tree function.
Spanning Tree Mode	Displays the spanning tree mode.
Local Bridge	Displays the bridge ID of the local bridge. The local bridge is the current switch.
Root Bridge	Displays the bridge ID of the root bridge.
External Path Cost	Displays the root path cost from the switch to the root bridge.
Regional Root Bridge	It is the root bridge of IST. It is not displayed when you choose the spanning tree mode as STP/RSTP.
Internal Path Cost	The internal path cost is the root path cost from the switch to the root bridge of IST. It is not displayed when you choose the spanning tree mode as STP/RSTP.

Designated Bridge	Displays the bridge ID of the designated bridge. The designated bridge is the switch that has designated ports.
Root Port	Displays the root port of the current switch.
Latest TC Time	Displays the latest time when the topology is changed.
TC Count	Displays how many times the topology has changed.

2.2 Using the CLI

2.2.1 Configuring STP/RSTP Parameters on Ports

Follow these steps to configure STP/RSTP parameters on ports:

Step 1	**configure** Enter global configuration mode.
Step 2	**interface {fastEthernet** *port* **| range fastEthernet** *port-list* **| gigabitEthernet** *port* **| range gigabitEthernet** *port-list* **| ten-gigabitEthernet** *port* **| range ten-gigabitEthernet** *port-list* **| port-channel** *port-channel-id* **| range port-channel** *port-channel-list***}** Enter interface configuration mode.
Step 3	**spanning-tree** Enable spanning tree function for desired ports.

Step 4 **spanning-tree common-config** [**port-priority** *pri*] [**ext-cost** *ext-cost*] [**portfast** { enable | disable }] [**point-to-point** { auto | open | close }]

Configure STP/RSTP parameters on the desired port .

pri: Specify the Priority for the desired port. The value should be an integral multiple of 16, ranging from 0 to 240. The default value is 128. Ports with lower values have higher priority. When the root path of the port is the same as other ports', the switch will compare the port priorities and select a root port with the highest priority.

ext-cost: Specify the value of the external path cost. The valid values are from 0 to 2000000 and the default setting is Auto, which means the port calculates the external path cost automatically according to the port's link speed.

For STP/RSTP, external path cost indicates the path cost of the port in spanning tree. The Port with the lowest root path cost will be elected as the root port of the switch.

For MSTP, external path cost indicates the path cost of the port in CST.

portfast { enable | disable }: Enable to set the port as an edge port. By default, it is disabled. When the topology is changed, the edge port can transit its state from blocking to forwarding directly. For the quick generation of the spanning tree, it is recommended to set the ports that are connected to the end devices as edge ports.

point-to-point { auto | open | close }: Select the status of the P2P (Point-to-Point) link to which the ports are connected. During the regeneration of the spanning tree, if the port of P2P link is elected as the root port or the designated port, it can transit its state to forwarding directly. Auto indicates that the switch automatically checks if the port is connected to a P2P link, then sets the status as Open or Closed. Open is used to set the port as the one that is connected to a P2P link. Close is used to set the port as the one that is not connected to a P2P link.

Step 5 **spanning-tree mcheck**

(Optional) Perform MCheck operations on the port.

If a port on an RSTP-enabled/MSTP-enabled device is connected to an STP-enabled device, the port will switch to STP compatible mode and send packets in STP format. MCheck is used to switch the mode of the port back to RSTP/MSTP after the port is disconnected from the STP-enabled device. The MCheck configuration can take effect only once, after that the MCheck status of the port will switch to Disabled.

Step 6 **show spanning-tree interface** [**fastEthernet** *port* **| gigabitEthernet** *port* | **ten- gigabitEthernet** *port* **| port-channel** *lagid*] [**edge** | ext-cost | int-cost | mode | p2p | priority | role | state | status]

(Optional) View the information of all ports or a specified port.

port: Specify the port number.

lagid: Specify the ID of the LAG.

ext-cost | int-cost | mode | p2p | priority | role | state | status: Display the specified information.

Step 7 **end**
Return to privileged EXEC mode.

Step 8 **copy running-config startup-config**

Save the settings in the configuration file.

The following example shows how to enable spanning tree function on port 1/0/3 and configure the port priority as 32 :

Switch#configure

Switch(config)#interface gigabitEthernet 1/0/3

Switch(config-if)#spanning-tree

Switch(config-if)#spanning-tree common-config port-priority 32

Switch(config-if)#show spanning-tree interface gigabitEthernet 1/0/3

Interface	State	Prio	Ext-Cost	Int-Cost	Edge	P2p	Mode
Gi1/0/3	Enable	32	Auto	Auto	No	No(auto)	N/A

Role	Status	LAG
N/A	LnkDwn	N/A

Switch(config-if)#end

Switch#copy running-config startup-config

2.2.2 Configuring Global STP/RSTP Parameters

Follow these steps to configure global STP/RSTP parameters of the switch:

Step 1	**configure** Enter global configuration mode.
Step 2	**spanning-tree priority** *pri* Configure the priority of the switch. *pri:* Specify the priority for the switch. The valid value is from 0 to 61440, which are divisible by 4096. The priority is a parameter used to determine the root bridge for spanning tree. The switch with the lower value has the higher priority. In STP/RSTP, the value is the priority of the switch in spanning tree. The switch with the highest priority will be elected as the root bridge. In MSTP, the value is the priority of the switch in CIST. The switch with the higher priority will be elected as the root bridge in CIST.

Step 3	**spanning-tree timer** {[**forward-time** *forward-time*] [**hello-time** *hello-time*] [**max-age** *max-age*]} (Optional) Configure the Forward Delay, Hello Time and Max Age. *forward-time:* Specify the value of Forward Delay. It is the interval between the port state transition from listening to learning. The valid values are from 4 to 30 in seconds, and the default value is 15. Forward Delay is used to prevent the network from causing temporary loops during the regeneration of spanning tree. The interval between the port state transition from learning to forwarding is also the Forward Delay. *hello-time:* Specify the value of Hello Time. It is the interval between BPDUs' sending. The valid values are from 1 to 10 in seconds, and the default value is 2. The root bridge sends configuration BPDUs at an interval of Hello Time. It works with the MAX Age to test the link failures and maintain the spanning tree. *max-age:* Specify the value of Max Age. It is the maximum time that the switch can wait without receiving a BPDU before attempting to regenerate a new spanning tree. The valid values are from 6 to 40 in seconds, and the default value is 20.
Step 4	**spanning-tree hold-count** *value* Specify the maximum number of BPDU that can be sent in a second. *value:* Specify the maximum number of BPDU packets that can be sent in a second. The valid values are from 1 to 20 pps, and the default value is 5.
Step 5	**show spanning-tree bridge** (Optional) View the global STP/RSTP parameters of the switch.
Step 6	**end** Return to privileged EXEC mode.
Step 7	**copy running-config startup-config** Save the settings in the configuration file.

Note:

To prevent frequent network flapping, make sure that Hello Time, Forward Delay, and Max Age conform to the following formulas:

- 2*(Hello Time + 1) <= Max Age
- 2*(Forward Delay - 1) >= Max Age

This example shows how to configure the priority of the switch as 36864, the Forward Delay as 12 seconds:

Switch#configure

Switch(config)#spanning-tree priority 36864

Switch(config)#spanning-tree timer forward-time 12

Switch(config)#show spanning-tree bridge

State	Mode	Priority	Hello-Time	Fwd-Time	Max-Age	Hold-Count	Max-Hops
Enable	Rstp	36864	2	12	20	5	20

Switch(config)#end

Switch#copy running-config startup-config

2.2.3 Enabling STP/RSTP Globally

Follow these steps to configure the spanning tree mode as STP/RSTP, and enable spanning tree function globally:

Step 1	**configure** Enter global configuration mode.
Step 2	**spanning-tree mode** { stp | rstp } Configure the spanning tree mode as STP/RSTP. stp: Specify the spanning tree mode as STP . rstp: Specify the spanning tree mode as RSTP .
Step 3	**spanning-tree** Enable spanning tree function globally.
Step 4	**show spanning-tree active** (Optional) View the active information of STP/RSTP.
Step 5	**end** Return to privileged EXEC mode.
Step 6	**copy running-config startup-config** Save the settings in the configuration file.

This example shows how to enable spanning tree function, configure the spanning tree mode as RSTP and verify the configurations:

Switch#configure

Switch(config)#spanning-tree mode rstp

Switch(config)#spanning-tree

Switch(config)#show spanning-tree active

Spanning tree is enabled

Spanning-tree's mode: RSTP (802.1w Rapid Spanning Tree Protocol)

Latest topology change time: 2006-01-02 10:04:02

Root Bridge

Priority : 32768

Address : 00-0a-eb-13-12-ba

Local bridge is the root bridge

Designated Bridge

Priority : 32768

Address : 00-0a-eb-13-12-ba

Local Bridge

Priority : 32768

Address : 00-0a-eb-13-12-ba

Interface	State	Prio	Ext-Cost	Int-Cost	Edge	P2p	Mode
Gi1/0/16	Enable	128	200000	200000	No	Yes(auto)	Rstp
Gi1/0/18	Enable	128	200000	200000	No	Yes(auto)	Rstp
Gi1/0/20	Enable	128	200000	200000	No	Yes(auto)	Rstp

Role	Status	LAG
Desg	Fwd	N/A
Desg	Fwd	N/A
Desg	Fwd	N/A

Switch(config)#end

Switch#copy running-config startup-config

3 MSTP Configurations

To complete the MSTP configuration, follow these steps:

1) Configure parameters on ports in CIST.
2) Configure the MSTP region.
3) Configure the MSTP globally.
4) Verify the MSTP configurations.

Configuration Guidelines


- Before configuring the spanning tree, it's necessary to make clear the role that each switch plays in a spanning tree.
- To avoid any possible network flapping caused by MSTP parameter changes, it is recommended to enable MSTP function globally after configuring the relevant parameter.

3.1 Using the GUI

3.1.1 Configuring Parameters on Ports in CIST

Choose the menu **L2 FEATURES > Spanning Tree > Port Config** to load the following page.

Figure 3-1 Configuring the Parameters of the Ports

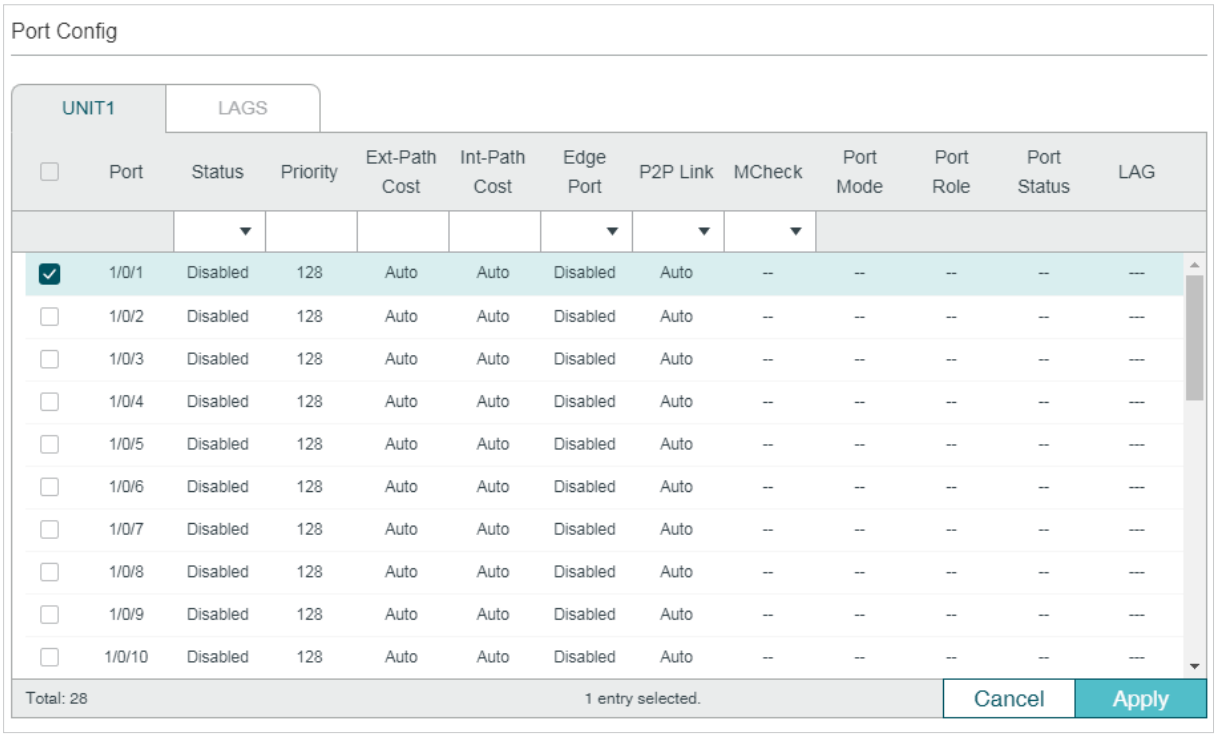

Follow these steps to configure parameters on ports in CIST:

1) In the **Port Config** section, configure the parameters on ports.

UNIT	Select the desired unit or LAGs.
Status	Enable or disable spanning tree function on the desired port.
Priority	Specify the Priority for the desired port. The value should be an integral multiple of 16, ranging from 0 to 240. The port with lower value has the higher priority. When the root path of the port is the same as other ports', the switch will compare the port priorities between these port and select a root port with the highest priority.
Ext-Path Cost	Enter the value of the external path cost. The default setting is Auto, which means the port calculates the external path cost automatically according to the port's link speed. For STP/RSTP, external path cost indicates the path cost of the port in spanning tree. The port with the lowest root path cost will be elected as the root port of the switch. For MSTP, external path cost indicates the path cost of the port in CST.
Int-Path Cost	Enter the value of the internal path cost. The valid values are from 0 to 2000000. The default setting is Auto, which means the port calculates the internal path cost automatically according to the port's link speed. This parameter is only used in MSTP and you need not to configure it if the spanning tree mode is STP/RSTP. For MSTP, internal path cost is used to calculate the path cost in IST. The port with the lowest root path cost will be elected as the root port of the switch in IST.
Edge Port	Select Enable to set the port as an edge port. When the topology is changed, the edge port can transit its state from blocking to forwarding directly. For the quick generation of the spanning tree, it is recommended to set the ports that are connected to the end devices as edge ports.

P2P Link	Select the status of the P2P (Point-to-Point) link to which the ports are connected. During the regeneration of the spanning tree, if the port of P2P link is elected as the root port or the designated port, it can transit its state to forwarding directly. Three options are supported: Auto, Open(Force) and Closed(Force). By default, it is Auto. **Auto**: The switch automatically checks if the port is connected to a P2P link, then sets the status as Open or Closed. **Open(Force)**: A port is set as the one that is connected to a P2P link. You should check the link first. **Close(Force)**: A port is set as the one that is not connected to a P2P link. You should check the link first.
MCheck	Select whether to perform MCheck operations on the port. If a port on an RSTP-enabled/MSTP-enabled device is connected to an STP-enabled device, the port will switch to STP compatible mode and send packets in STP format. MCheck is used to switch the mode of the port back to RSTP/MSTP after the port is disconnected from the STP-enabled device. The MCheck configuration can take effect only once, after that the MCheck status of the port will switch to Disabled.
Port Mode	Displays the spanning tree mode of the port. **STP**: The spanning tree mode of the port is STP. **RSTP**: The spanning tree mode of the port is RSTP. **MSTP**: The spanning tree mode of the port is MSTP.
Port Role	Displays the role that the port plays in the spanning tree. **Root Port**: Indicates that the port is the root port in the spanning tree. It has the lowest path cost from the root bridge to this switch and is used to communicate with the root bridge. **Designated Port**: Indicates that the port is the designated port in the spanning tree. It has the lowest path cost from the root bridge to this physical network segment and is used to forward data for the corresponding network segment. **Master Port:** Indicates the port provides the lowest root path cost from the region to the root bridge in CIST. In CIST, each region is regarded as a switch, and the master port is the root port of the corresponding region. **Alternate Port**: Indicates that the port is the alternate port in the spanning tree. It is the backup of the root port or master port. **Backup Port**: Indicates that the port is the backup port in the spanning tree. It is the backup of the designated port. **Disabled**: Indicates that the port is not participating in the spanning tree.

Port Status	Displays the port status. **Forwarding**: The port receives and sends BPDUs, and forwards user data. **Learning**: The port receives and sends BPDUs. It also receives user traffic, but doesn't forward the traffic. **Blocking**: The port only receives and sends BPDUs. **Disconnected**: The port has the spanning tree function enabled but is not connected to any device.
LAG	Displays the LAG the port belongs to.

2) Click **Apply**.

3.1.2 Configuring the MSTP Region


Configure the region name, revision level, VLAN-Instance mapping of the switch. The switches with the same region name, the same revision level and the same VLAN-Instance mapping are considered as in the same region.

Besides, configure the priority of the switch, the priority and path cost of ports in the desired instance.

- Configuring the Region Name and Revision Level

Choose the menu **L2 FEATURES > Spanning Tree > MSTP Instance > Region Config** to load the following page.

Figure 3-2 Configuring the Region

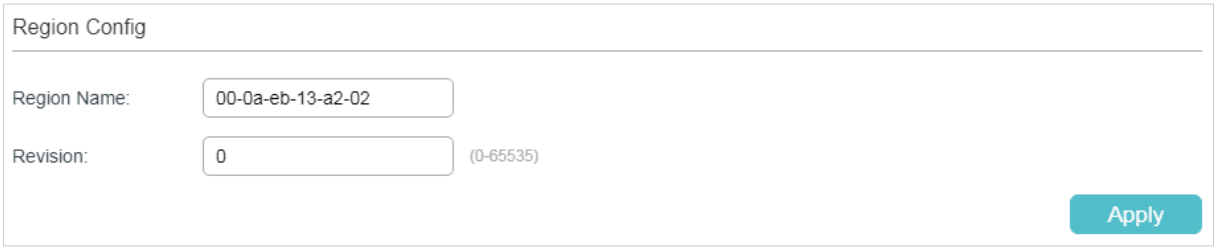

Follow these steps to create an MST region:

1) In the **Region Config** section, set the name and revision level to specify an MSTP region.


Region Name	Configure the name for an MST region using up to 32 characters. By default, it is the MAC address of the switch.
Revision	Enter the revision level. By default, it is 0.

2) Click **Apply**.

Configuring the VLAN-Instance Mapping and Switch Priority

Choose the menu **L2 FEATURES > Spanning Tree > MSTP Instance > Instance Config** to load the following page.


Figure 3-3 Configuring the VLAN-Instance Mapping

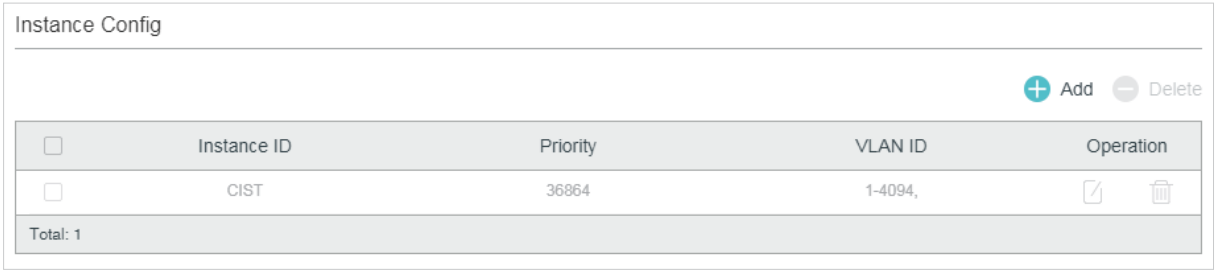

Follow these steps to map VLANs to the corresponding instance, and configure the priority of the switch in the desired instance:

1) In the **Instance Config** section, click **Add** and enter the instance ID, Priority and corresponding VLAN ID.

Figure 3-4 Configuring the Instance

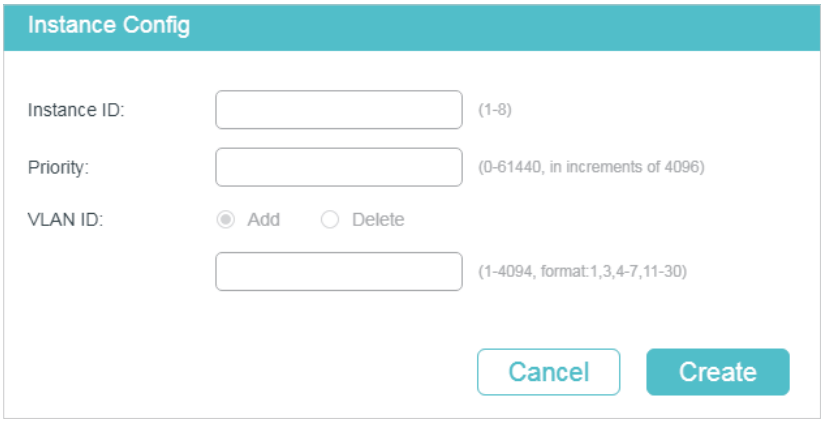


Instance ID	Enter the corresponding instance ID.
Priority	Specify the priority for the switch in the corresponding instance. The value should be an integral multiple of 4096, ranging from 0 to 61440. It is used to determine the root bridge for the instance. Switches with a lower value have higher priority, and the switch with the highest priority will be elected as the root bridge in the corresponding instance.
VLAN ID	Enter the VLAN ID to map the VLAN to the desired instance or unbind the VLAN-instance mapping.

2) Click **Create**.

Configuring Parameters on Ports in the Instance

Choose the menu **L2 FEATURES > Spanning Tree > MSTP Instance > Instance Port Config** to load the following page.

Figure 3-5 Configuring Port Parameters in the Instance

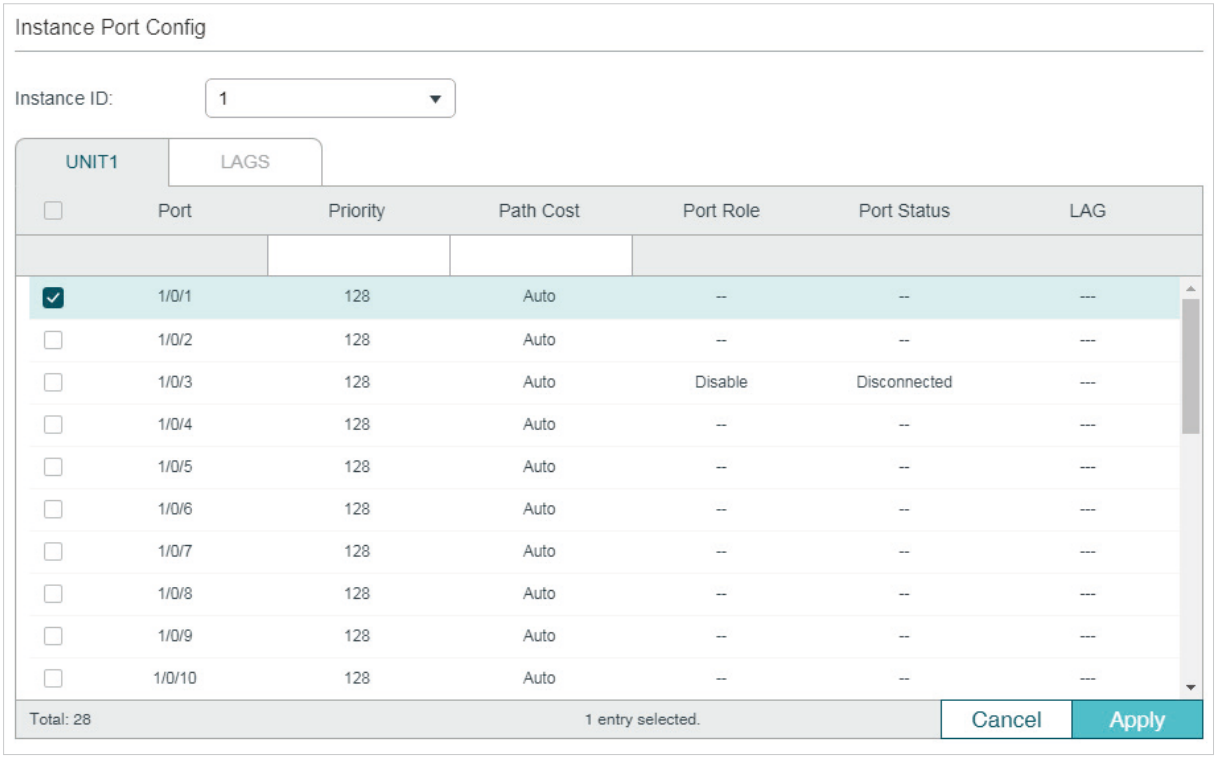

Follow these steps to configure port parameters in the instance:

1) In the **Instance Port Config** section, select the desired instance ID.

Instance ID	Select the ID number of the instance that you want to configure.

2) Configure port parameters in the desired instance.


UNIT	Select the desired unit or LAGs for configuration.
Priority	Specify the Priority for the port in the corresponding instance. The value should be an integral multiple of 16, ranging from 0 to 240. The port with lower value has the higher priority. When the root path of the port is the same as other ports', the switch will compare the port priorities between these ports and select a root port with the highest priority.
Path Cost	Enter the value of the path cost in the corresponding instance. The valid values are from 0 to 2000000. The default setting is Auto, which means the port calculates the external path cost automatically according to the port's link speed. The port with the lowest root path cost will be elected as the root port of the switch.

Port Role	Displays the role that the port plays in the desired instance. **Root Port**: Indicates that the port is the root port in the desired instance. It has the lowest path cost from the root bridge to this switch and is used to communicate with the root bridge. **Designated Port**: Indicates that the port is the designated port in the desired instance. It has the lowest path cost from the root bridge to this physical network segment and is used to forward data for the corresponding network segment. **Alternate Port**: Indicates that the port is the alternate port in the desired instance. It is the backup of the root port or master port. **Backup Port**: Indicates that the port is the backup port in the desired instance. It is the backup of the designated port. **Master Port:** Indicates the port provides the lowest root path cost from the region to the root bridge in CIST. In CIST, each region is regarded as a switch, and the master port is the root port of the corresponding region. **Disabled**: Indicates that the port is not participating in the spanning tree.
Port Status	Displays the port status. **Forwarding**: The port receives and sends BPDUs, and forwards user traffic. **Learning**: The port receives and sends BPDUs. It also receives user traffic, but doesn't forward the traffic. **Blocking**: The port only receives and sends BPDUs. **Disconnected**: The port has the spanning tree function enabled but is not connected to any device.
LAG	Displays the LAG which the port belongs to.

3.1.3 Configuring MSTP Globally

Choose the menu **L2 FEATURES > Spanning Tree > STP Config > STP Config** to load the following page.

Figure 3-6 Configure MSTP Function Globally

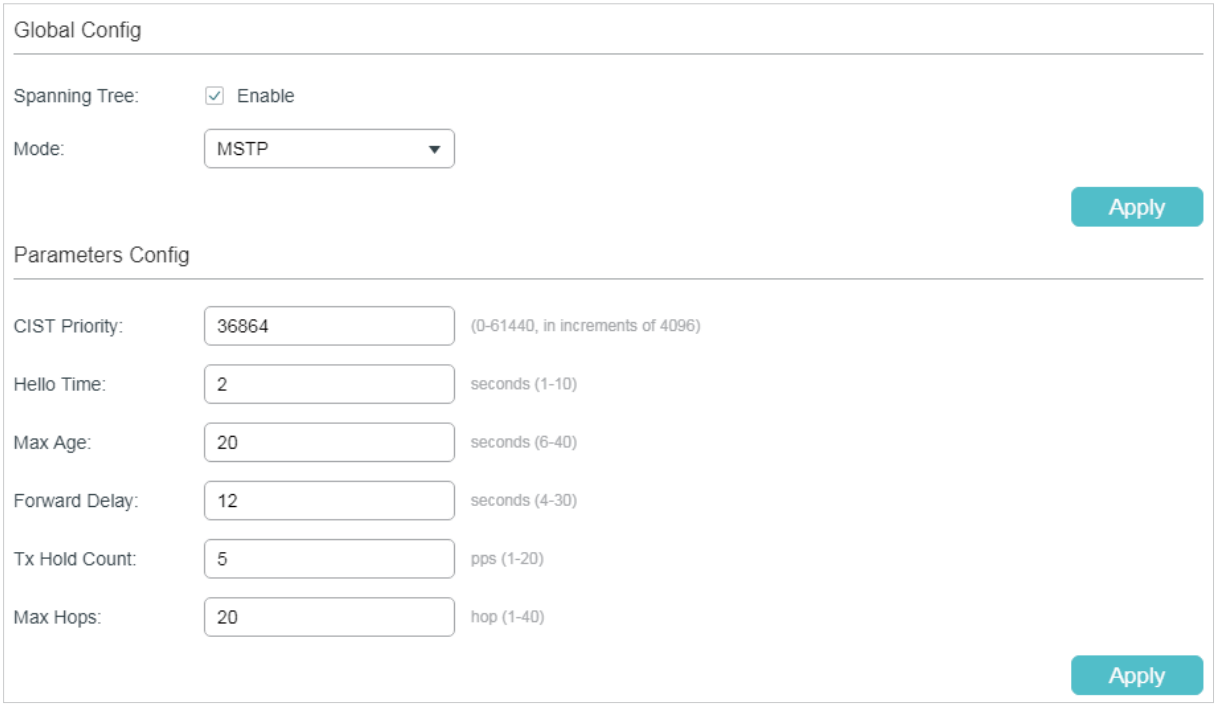

Follow these steps to configure MSTP globally:

1) In the **Parameters Config** section, Configure the global parameters of MSTP and click **Apply**.

CIST Priority	Specify the CIST priority for the switch. CIST priority is a parameter used to determine the root bridge for spanning tree. The switch with the lower value has the higher priority. In STP/RSTP, CIST priority is the priority of the switch in spanning tree. The switch with the highest priority will be elected as the root bridge. In MSTP, CISP priority is the priority of the switch in CIST. The switch with the higher priority will be elected as the root bridge in CIST.
Hello Time	Specify the interval between BPDUs' sending. The default value is 2. The root bridge sends configuration BPDUs at an interval of Hello Time. It works with the MAX Age to test the link failures and maintain the spanning tree.
Max Age	Specify the maximum time that the switch can wait without receiving a BPDU before attempting to regenerate a new spanning tree. The default calue is 20.

Forward Delay	Specify the interval between the port state transition from listening to learning. The default value is 15. It is used to prevent the network from causing temporary loops during the regeneration of spanning tree. The interval between the port state transition from learning to forwarding is also the Forward Delay.
Tx Hold Count	Specify the maximum number of BPDU that can be sent in a second. The default value is 5.
Max Hops	Specify the maximum BPDU hop counts that can be forwarded in a MST region. The default value is 20. A switch receives BPDU, then decrements the hop count by one and generates BPDUs with the new value. When the hop reaches zero, the switch will discard the BPDU. This value can control the scale of the spanning tree in the MST region. Note: Max Hops is a parameter configured in MSTP. You need not configure it if the spanning tree mode is STP/RSTP.

Note:

To prevent frequent network flapping, make sure that Hello Time, Forward Delay, and Max Age conform to the following formulas:

- 2*(Hello Time + 1) <= Max Age
- 2*(Forward Delay - 1) >= Max Age


2) In the **Global Config** section, enable Spanning-Tree function and choose the STP mode as MSTP and click **Apply**.

Spanning-Tree	Check the box to enable the spanning tree function globally.
Mode	Select the desired spanning tree mode as STP/RSTP on the switch. By default, it's STP. **STP:** Specify the spanning tree mode as STP. **RSTP:** Specify the spanning tree mode as RSTP. **MSTP:** Specify the spanning tree mode as MSTP.

3.1.4 Verifying the MSTP Configurations

Choose the menu **Spanning Tree > STP Config > STP Summary** to load the following page.

Figure 3-7 Verifying the MSTP Configurations

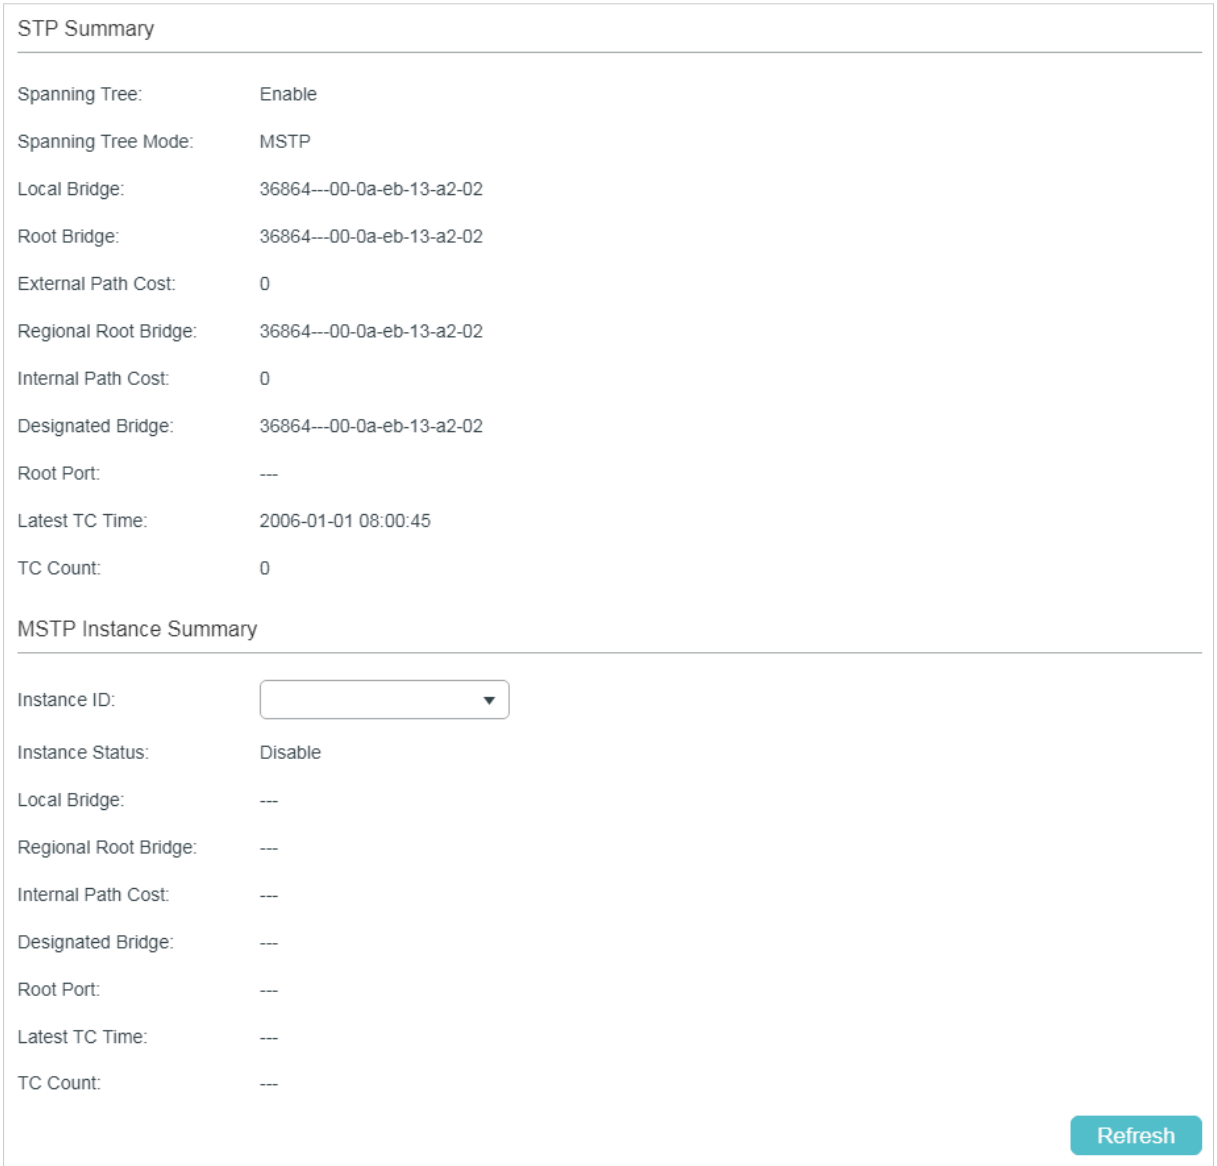

The **STP Summary** section shows the summary information of CIST:

Spanning Tree	Displays the status of the spanning tree function.
Spanning-Tree Mode	Displays the spanning tree mode.
Local Bridge	Displays the bridge ID of the local switch. The local bridge is the current switch.
Root Bridge	Displays the bridge ID of the root bridge in CIST.
External Path Cost	Displays the external path cost. It is the root path cost from the switch to the root bridge in CIST.

Regional Root Bridge	Displays the bridge ID of the root bridge in IST.
Internal Path Cost	Displays the internal path cost. It is the root path cost from the current switch to the root bridge in IST.
Designated Bridge	Displays the bridge ID of the designated bridge in CIST.
Root Port	Displays the root port of in CIST.
Latest TC Time	Displays the latest time when the topology is changed.
TC Count	Displays how many times the topology has changed.

The **MSTP Instance Summary** section shows the information in MST instances:

Instance ID	Select the desired instance.
Instance Status	Displays the status of the desired instance.
Local Bridge	Displays the bridge ID of the local switch. The local bridge is the current switch.
Regional Root Bridge	Displays the bridge ID of the root bridge in the desired instance.
Internal Path Cost	Displays the internal path cost. It is the root path cost from the current switch to the regional root bridge.
Designated Bridge	Displays the bridge ID of the designated bridge in the desired instance.
Root Port	Displays the root port of the desired instance.
Latest TC Time	Displays the latest time when the topology is changed.
TC Count	Displays how many times the topology has changed.

3.2 Using the CLI

3.2.1 Configuring Parameters on Ports in CIST

Follow these steps to configure the parameters of the port in CIST:

Step 1	**configure** Enter global configuration mode.
Step 2	**interface {fastEthernet** *port* **| range fastEthernet** *port-list* **| gigabitEthernet** *port* **| range gigabitEthernet** *port-list* **| ten-gigabitEthernet** *port* **| range ten-gigabitEthernet** *port-list* **| port-channel** *port-channel-id* **| range port-channel** *port-channel-list***}** Enter interface configuration mode.

Step 3 **spanning-tree**

Enable spanning tree function for the desired port.

Step 4 **spanning-tree common-config** [**port-priority** *pri*] [**ext-cost** *ext-cost*] [**int-cost** *int-cost*][**portfast** { enable | disable }] [**point-to-point** { auto | open | close }]

Configure the parameters on ports in CIST.

pri: Specify the Priority for the desired port. The value should be an integral multiple of 16, ranging from 0 to 240. The default value is 128. Ports with lower values have higher priority. When the root path of the port is the same as other ports', the switch will compare the port priorities and select a root port with the highest priority.

ext-cost: Specify the value of the external path cost. The valid values are from 0 to 2000000 and the default setting is Auto, which means the port calculates the external path cost automatically according to the port's link speed.

For STP/RSTP, external path cost indicates the path cost of the port in spanning tree. The Port with the lowest root path cost will be elected as the root port of the switch.

For MSTP, external path cost indicates the path cost of the port in CST.

int-cost: Specify the value of the internal path cost. The valid values are from 0 to 2000000. The default setting is Auto, which means the port calculates the internal path cost automatically according to the port's link speed. This parameter is only used in MSTP.

For MSTP, internal path cost is used to calculate the path cost in IST. The port with the lowest root path cost will be elected as the root port of the switch in IST.

portfast { enable | disable }*:* Enable to set the port as an edge port. By default, it is disabled. When the topology is changed, the edge port can transit its state from blocking to forwarding directly. For the quick generation of the spanning tree, it is recommended to set the ports that are connected to the end devices as edge ports.

point-to-point { auto | open | close }*:* Select the status of the P2P (Point-to-Point) link to which the ports are connected. During the regeneration of the spanning tree, if the port of P2P link is elected as the root port or the designated port, it can transit its state to forwarding directly. Auto indicates that the switch automatically checks if the port is connected to a P2P link, then sets the status as Open or Closed. Open is used to set the port as the one that is connected to a P2P link. Close is used to set the port as the one that is not connected to a P2P link.

Step 5 **spanning-tree mcheck**

(Optional) Perform MCheck operations on the port.

If a port on an RSTP-enabled/MSTP-enabled device is connected to an STP-enabled device, the port will switch to STP compatible mode and send packets in STP format. MCheck is used to switch the mode of the port back to RSTP/MSTP after the port is disconnected from the STP-enabled device. The MCheck configuration can take effect only once, after that the MCheck status of the port will switch to Disabled.

Step 6 **show spanning-tree interface** [**fastEthernet** *port* | **gigabitEthernet** *port* | **ten-gigabitEthernet** *port* | **port-channel** *lagid*] [**edge |** ext-cost | int-cost | mode | p2p | priority | role | state | status]

(Optional) View the information of all ports or a specified port.

port: Specify the port number.

lagid: Specify the ID of the LAG.

ext-cost | int-cost | mode | p2p | priority | role | state | status: Display the specified information.

Step 7	**end** Return to privileged EXEC mode.
Step 8	**copy running-config startup-config** Save the settings in the configuration file.

This example shows how to enable spanning tree function for port 1/0/3 and configure the port priority as 32 :

Switch#configure

Switch(config)#interface gigabitEthernet 1/0/3

Switch(config-if)#spanning-tree

Switch(config-if)#spanning-tree common-config port-priority 32

Switch(config-if)#show spanning-tree interface gigabitEthernet 1/0/3

MST-Instance 0 (CIST)

Interface	State	Prio	Ext-Cost	Int-Cost	Edge	P2p	Mode	Role	Status
Gi1/0/3	Enable	32	Auto	Auto	No	No(auto)	N/A	N/A	LnkDwn

MST-Instance 5

Interface	Prio	Cost	Role	Status
Gi1/0/3	144	200	N/A	LnkDwn

Switch(config-if)#end

Switch#copy running-config startup-config

3.2.2 Configuring the MSTP Region

- Configuring the MST Region

Follow these steps to configure the MST region and the priority of the switch in the instance:

Step 1	**configure** Enter global configuration mode.

Step 2	**spanning-tree mst instance** *instance-id* **priority** *pri* Configure the priority of the switch in the instance. *instance-id*: Specify the instance ID, the valid values ranges from 1 to 8. *pri*: Specify the priority for the switch in the corresponding instance. The value should be an integral multiple of 4096, ranging from 0 to 61440. The default value is 32768. It is used to determine the root bridge for the instance. Switches with a lower value have higher priority, and the switch with the highest priority will be elected as the root bridge in the corresponding instance.
Step 3	**spanning-tree mst configuration** Enter MST configuration mode, as to configure the VLAN-Instance mapping, region name and revision level.
Step 4	**name** *name* Configure the region name of the region. *name*: Specify the region name, used to identify an MST region. The valid values are from 1 to 32 characters.
Step 5	**revision** *revision* Configure the revision level of the region. *revision:* Specify the revision level of the region. The valid values are from 0 to 65535.
Step 6	**instance** *instance-id* **vlan** *vlan-id* Configure the VLAN-Instance mapping. *instance-id*: Specify the Instance ID. The valid values are from 1 to 8. *vlan-id*: Specify the VLAN mapped to the corresponding instance.
Step 7	**show spanning-tree mst** { **configuration** [digest] | **instance** *instance-id* [**interface** [**fastEthernet** *port* | **gigabitEthernet** *port* | **port-channel** *lagid* | **ten-gigabitEthernet** *port*]] } (Optional) View the related information of MSTP Instance. *digest*: Specify to display the digest calculated by instance-vlan map. *instance-id*: Specify the Instance ID desired to view, ranging from 1 to 8. *port:* Specify the port number. *lagid:* Specify the ID of the LAG.
Step 8	**end** Return to privileged EXEC mode.
Step 9	**copy running-config startup-config** Save the settings in the configuration file.

This example shows how to create an MST region, of which the region name is R1, the revision level is 100 and VLAN 2-VLAN 6 are mapped to instance 5:

Switch#configure

Switch(config)#spanning-tree mst configuration

Switch(config-mst)#name R1

Switch(config-mst)#revision 100

Switch(config-mst)#instance 5 **vlan** 2-6

Switch(config-mst)#show spanning-tree mst configuration

Region-Name : R1

Revision : 100

MST-Instance Vlans-Mapped

--- ---

0 1,7-4094

5 2-6,

Switch(config-mst)#end

Switch#copy running-config startup-config

Configuring the Parameters on Ports in Instance

Follow these steps to configure the priority and path cost of ports in the specified instance:

Step 1	**configure** Enter global configuration mode.
Step 2	**interface {fastEthernet** *port* **| range fastEthernet** *port-list* **| gigabitEthernet** *port* **| range gigabitEthernet** *port-list* **| ten-gigabitEthernet** *port* **| range ten-gigabitEthernet** *port-list* **| port-channel** *port-channel-id* **| range port-channel** *port-channel-list***}** Enter interface configuration mode.
Step 3	**spanning-tree mst instance** *instance-id* **{[port-priority** *pri* **] | [cost** *cost* **]}** Configure the priority and path cost of ports in the specified instance. *instance-id:* Specify the instance ID, the valid values ranges from 1 to 8. *pri:* Specify the Priority for the port in the corresponding instance. The value should be an integral multiple of 16, ranging from 0 to 240. The default valueis 128. The port with lower value has the higher priority. When the root path of the port is the same as other ports', the switch will compare the port priorities between these ports and select a root port with the highest priority. *cost:* Enter the value of the path cost in the corresponding instance. The valid values are from 0 to 2000000. The default setting is Auto, which means the port calculates the external path cost automatically according to the port's link speed. The port with the lowest root path cost will be elected as the root port of the switch.

Step 4	**show spanning-tree mst** { **configuration** [digest] | **instance** *instance-id* [**interface** [**fastEthernet** *port* | **gigabitEthernet** *port* | **port-channel** *lagid* | **ten-gigabitEthernet** *port*]] } (Optional) View the related information of MSTP Instance. *digest:* Specify to display the digest calculated by instance-vlan map. *instance-id:* Specify the Instance ID desired to view, ranging from 1 to 8. *port:* Specify the port number. *lagid:* Specify the ID of the LAG.
Step 5	**end** Return to privileged EXEC mode.
Step 6	**copy running-config startup-config** Save the settings in the configuration file.

This example shows how to configure the priority as 144, the path cost as 200 of port 1/0/3 in instance 5:

Switch#configure

Switch(config)#interface gigabitEthernet 1/0/3

Switch(config-if)#spanning-tree mst instance 5 **port-priority** 144 **cost** 200

Switch(config-if)#show spanning-tree interface gigabitEthernet 1/0/3

MST-Instance 0 (CIST)

Interface	State	Prio	Ext-Cost	Int-Cost	Edge	P2p	Mode	Role	Status	LAG
Gi1/0/3	Enable	32	Auto	Auto	No	No(auto)	N/A	N/A	LnkDwn	N/A

MST-Instance 5

Interface	Prio	Cost	Role	Status	LAG
Gi1/0/3	144	200	N/A	LnkDwn	N/A

Switch(config-if)#end

Switch#copy running-config startup-config

3.2.3 Configuring Global MSTP Parameters

Follow these steps to configure the global MSTP parameters of the switch:

Step 1	**configure** Enter global configuration mode.

Step 2 **spanning-tree priority** *pri*

Configure the priority of the switch for comparison in CIST.

pri: Specify the priority for the switch. The valid value is from 0 to 61440, which are divisible by 4096. The priority is a parameter used to determine the root bridge for spanning tree. The switch with the lower value has the higher priority.

In STP/RSTP, the value is the priority of the switch in spanning tree. The switch with the highest priority will be elected as the root bridge.

In MSTP, the value is the priority of the switch in CIST. The switch with the higher priority will be elected as the root bridge in CIST.

Step 3 **spanning-tree timer** {[**forward-time** *forward-time*] [**hello-time** *hello-time*] [**max-age** *max-age*]}

(Optional) Configure the Forward Delay, Hello Time and Max Age.

forward-time: Specify the value of Forward Delay. It is the interval between the port state transition from listening to learning. The valid values are from 4 to 30 in seconds, and the default value is 15. Forward Delay is used to prevent the network from causing temporary loops during the regeneration of spanning tree. The interval between the port state transition from learning to forwarding is also the Forward Delay.

hello-time: Specify the value of Hello Time. It is the interval between BPDUs' sending. The valid values are from 1 to 10 in seconds, and the default value is 2. The root bridge sends configuration BPDUs at an interval of Hello Time. It works with the MAX Age to test the link failures and maintain the spanning tree.

max-age: Specify the value of Max Age. It is the maximum time that the switch can wait without receiving a BPDU before attempting to regenerate a new spanning tree. The valid values are from 6 to 40 in seconds, and the default value is 20.

Step 4 **spanning-tree hold-count** *value*

(Optional) Specify the maximum number of BPDU that can be sent in a second.

value: Specify the maximum number of BPDU packets that can be sent in a second. The valid values are from 1 to 20 pps, and the default value is 5.

Step 5 **spanning-tree max-hops** *value*

(Optional) Specify the maximum BPDU hop counts that can be forwarded in a MST region. A switch receives BPDU, then decrements the hop count by one and generates BPDUs with the new value. When the hop reaches zero, the switch will discard the BPDU. This value can control the scale of the spanning tree in the MST region.

value: Specify the maximum number of hops that occur in a specific region before the BPDU is discarded. The valid values are from 1 to 40 in hop, and the default value is 20.

Step 6 **show spanning-tree bridge**

(Optional) View the global parameters of the switch.

Step 7 **end**
Return to privileged EXEC mode.

Step 8 **copy running-config startup-config**

Save the settings in the configuration file.

Note:

To prevent frequent network flapping, make sure that Hello Time, Forward Delay, and Max Age conform to the following formulas:

- 2*(Hello Time + 1) <= Max Age
- 2*(Forward Delay - 1) >= Max Age

This example shows how to configure the CIST priority as 36864, the Forward Delay as 12 seconds, the Hold Count as 8 and the Max Hop as 25:

Switch#configure

Switch(config)#spanning-tree priority 36864

Switch(config-if)#spanning-tree timer forward-time 12

Switch(config-if)#spanning-tree hold-count 8

Switch(config-if)#spanning-tree max-hops 25

Switch(config-if)#show spanning-tree bridge

State	Mode	Priority	Hello-Time	Fwd-Time	Max-Age	Hold-Count	Max-Hops
Enable	Mstp	36864	2	12	20	8	25

Switch(config-if)#end

Switch#copy running-config startup-config

3.2.4 Enabling Spanning Tree Globally

Follow these steps to configure the spanning tree mode as MSTP and enable spanning tree function globally:

Step 1	**configure** Enter global configuration mode.
Step 2	**spanning-tree mode** mstp Configure the spanning tree mode as MSTP. *mstp:* Specify the spanning tree mode as MSTP.
Step 3	**spanning-tree** Enable spanning tree function globally.
Step 4	**show spanning-tree active** (Optional) View the active information of MSTP.

Step 5	**end** Return to privileged EXEC mode.
Step 6	**copy running-config startup-config** Save the settings in the configuration file.

This example shows how to configure the spanning tree mode as MSTP and enable spanning tree function globally :

Switch#configure

Switch(config)#spanning-tree mode mstp

Switch(config)#spanning-tree

Switch(config)#show spanning-tree active

Spanning tree is enabled

Spanning-tree's mode: MSTP (802.1s Multiple Spanning Tree Protocol)

Latest topology change time: 2006-01-04 10:47:42

MST-Instance 0 (CIST)

Root Bridge

Priority : 32768

Address : 00-0a-eb-13-23-97

External Cost : 200000

Root Port : Gi/0/20

Designated Bridge

Priority : 32768

Address : 00-0a-eb-13-23-97

Regional Root Bridge

Priority : 36864

Address : 00-0a-eb-13-12-ba

Local bridge is the regional root bridge

Local Bridge

Priority : 36864

Address : 00-0a-eb-13-12-ba

```
Interface  State     Prio    Ext-Cost    Int-Cost    Edge    P2p         Mode   Role    Status
---------- -------   ----    --------    --------    ----    ---------   -----  -----   -------
Gi/0/16    Enable    128     200000      200000      No      Yes(auto)   Mstp   Altn    Blk
Gi/0/20    Enable    128     200000      200000      No      Yes(auto)   Mstp   Root    Fwd

MST-Instance 1

Root Bridge

Priority    : 32768

Address     : 00-0a-eb-13-12-ba

Local bridge is the root bridge

Designated Bridge

Priority    : 32768

Address     : 00-0a-eb-13-12-ba

Local Bridge

Priority    : 32768

Address     : 00-0a-eb-13-12-ba

Interface   Prio  Cost      Role    Status
----------  ----  --------  ------- --------
Gi/0/16     128   200000    Altn    Blk
Gi/0/20     128   200000    Mstr    Fwd
```

Switch(config)#end


Switch#copy running-config startup-config

4 STP Security Configurations

4.1 Using the GUI

Choose the menu **L2 FEATURES > Spanning Tree > STP Security** to load the following page.

Figure 4-1 Configuring the Port Protect

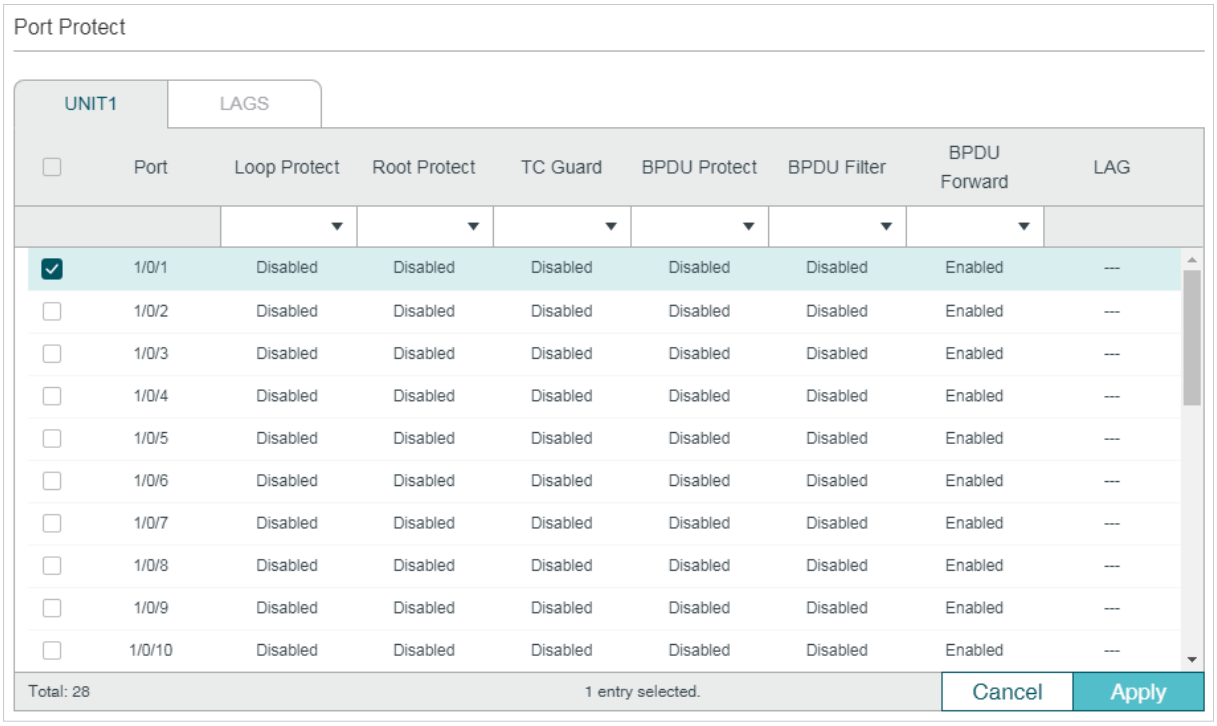

Configure the Port Protect features for the selected ports, and click **Apply**.

UNIT	Select the desired unit or LAGs for configuration.
Loop Protect	Enable or disable Loop Protect. It is recommended to enable this function on root ports and alternate ports. When there are link congestions or link failures in the network, the switch will not receive BPDUs from the upstream device in time. Loop Protect is used to avoid loop caused by the recalculation in this situation. With Loop Protect function enabled, the port will temporarily transit to a blocking state after it does not receive BPDUs in time.

Root Protect	Enable or disable Root Protect. It is recommended to enable this function on the designated ports of the root bridge. Switches with faulty configurations may produce a higher-priority BPDUs than the root bridge's, and this situation will cause recalculation of the spanning tree. Root Protect is used to ensure that the desired root bridge will not lose its position in the scenario above. With root protect enabled, the port will temporarily transit to blocking state when it receives higher-priority BDPUs. After two forward delays, if the port does not receive any other higher-priority BDPUs, it will transit to its normal state.
TC Guard	Enable or disable the TC Guard function. It is recommended to enable this function on the ports of non-root switches. TC Guard function is used to prevent the switch from frequently changing the MAC address table. With TC Guard function enabled, when the switch receives TC-BPDUs, it will not process the TC-BPDUs at once. The switch will wait for a fixed time and process the TC-BPDUs together after receiving the first TC-BPDU, then it will restart timing.
BPDU Protect	Enable or disable the BPDU Protect function. It is recommended to enable this function on edge ports. Edge ports in spanning tree are used to connect to the end devices and it doesn't receive BPDUs in the normal situation. If edge ports receive BPDUs, it may be an attack. BPDU Protect is used to protect the switch from the attack talked above. With BPDU protect function enabled, the edge ports will be shutdown when they receives BPDUs, and will report these cases to the administrator. Only the administrator can restore the state of the ports.
BPDU Filter	Enable or disable BPDU Filter. It is recommended to enable this function on edge ports. With BPDU filter function enabled, the port does not receive or forward BPDUs, but it sends out its own BPDUs. BPDU Filter can prevent the switch from being attacked as with BPDU Protect.
BPDU Forward	Enable or disable BPDU Forward. This function only takes effect when the spanning tree function is disabled globally. With BPDU forward enabled, the port can still forward spanning tree BPDUs when the spanning tree function is disabled.

4.2 Using the CLI

4.2.1 Configuring the STP Security

Follow these steps to configure the Root protect feature, BPDU protect feature and BPDU filter feature for ports:

Step 1	**configure** Enter global configuration mode.

Step 2	**interface {fastEthernet** *port* **| range fastEthernet** *port-list* **| gigabitEthernet** *port* **| range gigabitEthernet** *port-list* **| ten-gigabitEthernet** *port* **| range ten-gigabitEthernet** *port-list* **| port-channel** *port-channel-id* **| range port-channel** *port-channel-list***}** Enter interface configuration mode.
Step 3	**spanning-tree guard loop** (Optional) Enable Loop Protect. It is recommended to enable this function on root ports and alternate ports. When there are link congestions or link failures in the network, the switch will not receive BPDUs from the upstream device in time. Loop Protect is used to avoid loop caused by the recalculation in this situation. With Loop Protect function enabled, the port will temporarily transit to a blocking state after it does not receive BPDUs in time.
Step 4	**spanning-tree guard root** (Optional) Enable Root Protect. It is recommended to enable this function on the designated ports of the root bridge. Switches with faulty configurations may produce a higher-priority BPDUs than the root bridge's, and this situation will cause recalculation of the spanning tree. Root Protect is used to ensure that the desired root bridge will not lose its position in the scenario above. With root protect enabled, the port will temporarily transit to blocking state when it receives higher-priority BDPUs. After two forward delays, if the port does not receive any other higher-priority BDPUs, it will transit to its normal state.
Step 5	**spanning-tree guard tc** (Optional) Enable the TC Guard function. It is recommended to enable this function on the ports of non-root switches. TC Guard function is used to prevent the switch from frequently changing the MAC address table. With TC Guard function enabled, when the switch receives TC-BPDUs, it will not process the TC-BPDUs at once. The switch will wait for a fixed time and process the TC-BPDUs together after receiving the first TC-BPDU, then it will restart timing.
Step 6	**spanning-tree bpduguard** (Optional) Enable the BPDU Protect function. It is recommended to enable this function on edge ports. Edge ports in spanning tree are used to connect to the end devices and it doesn't receive BPDUs in the normal situation. If edge ports receive BPDUs, it may be an attack. BPDU Protect is used to protect the switch from the attack talked above. With BPDU protect function enabled, the edge ports will be shutdown when they receives BPDUs, and will report these cases to the administrator. Only the administrator can restore the state of the ports.
Step 7	**spanning-tree bpdufilter** (Optional) Enable or disable BPDU Filter. It is recommended to enable this function on edge ports. With BPDU filter function enabled, the port does not receive or forward BPDUs, but it sends out its own BPDUs. BPDU Filter can prevent the switch from being attacked as with BPDU Protect.

Step 8	**spanning-tree bpduflood** (Optional) Enable BPDU Forward. This function only takes effect when the spanning tree function is disabled globally. By default, it is enabled. With BPDU forward enabled, the port can still forward spanning tree BPDUs when the spanning tree function is disabled.
Step 9	**show spanning-tree interface-security** [**fastEthernet** *port* | **gigabitEthernet** *port* | **ten-gigabitEthernet** *port* | **port-channel** *port-channel-id*] [bpdufilter | bpduguard | bpduflood | loop | root | tc] (Optional) View the protect inforamtion of ports. *port*: Specify the port number. *lagid*: Specify the ID of the LAG.
Step 10	**end** Return to privileged EXEC mode.
Step 11	**copy running-config startup-config** Save the settings in the configuration file.

This example shows how to enable Loop Protect, Root Protect, BPDU Filter and BPDU Protect functions on port 1/0/3:

Switch#configure

Switch(config)#interface gigabitEthernet 1/0/3

Switch(config-if)#spanning-tree guard loop

Switch(config-if)#spanning-tree guard root

Switch(config-if)#spanning-tree bpdufilter

Switch(config-if)#spanning-tree bpduguard

Switch(config-if)#show spanning-tree interface-security gigabitEthernet 1/0/3

Interface	BPDU-Filter	BPDU-Guard	Loop-Protect	Root-Protect	TC-Protect	BPDU-Flood
Gi1/0/3	Enable	Enable	Enable	Enable	Disable	Enable

Switch(config-if)#end

Switch#copy running-config startup-config

5 Configuration Example for MSTP


MSTP, backwards-compatible with STP and RSTP, can map VLANs to instances to implement load-balancing, thus providing a more flexible method in network management. Here we take the MSTP configuration as an example.

5.1 Network Requirements

As shown in figure 5-1, the network consists of three switches. Traffic in VLAN 101-VLAN 106 is transmitted in this network. The link speed between the switches is 100Mb/s (the default path cost of the port is 200000).

It is required that traffic in VLAN 101 - VLAN 103 and traffic in VLAN 104 - VLAN 106 should be transmitted along different paths.

Figure 5-1 Network Topology

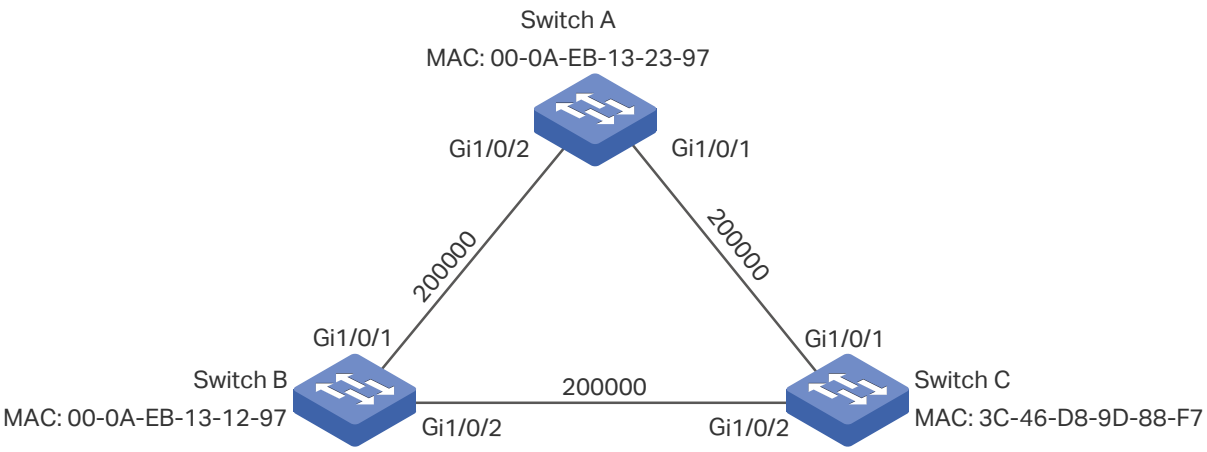


5.2 Configuration Scheme

To meet this requirement, you are suggested to configure MSTP function on the switches. Map the VLANs to different instances to ensure traffic can be transmitted along the respective instance.

Here we configure two instances to meet the requirement, as is shown below:

Figure 5-2 VLAN-Instance Mapping

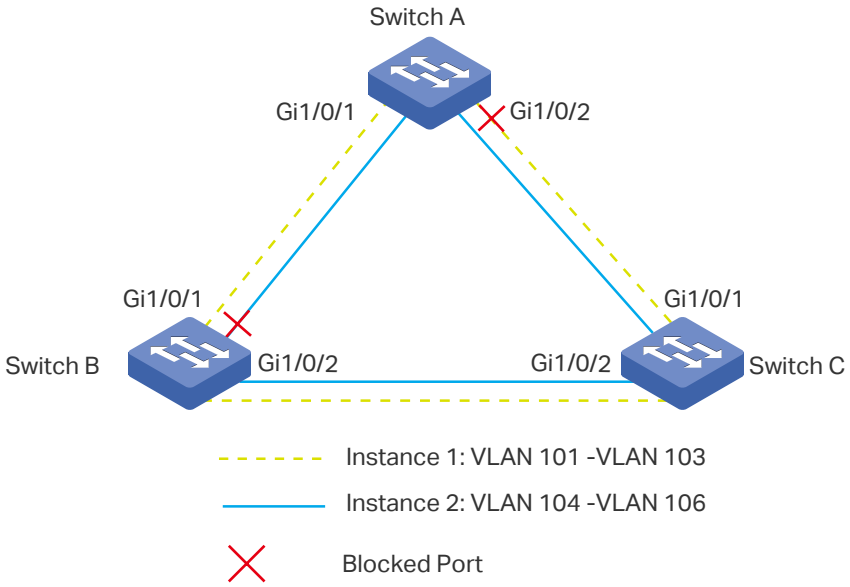

The overview of configuration is as follows:

1) Enable MSTP function globally in all the switches.
2) Enable Spanning Tree function on the ports in each switch.
3) Configure Switch A, Switch B and Switch C in the same region. Configure the region name as 1, and the revision level as 100. Map VLAN 101 - VLAN 103 to instance 1 and VLAN 104 - VLAN 106 to instance 2.
4) Configure the priority of Switch B as 0 to set it as the root bridge in instance 1; configure the priority of Switch C as 0 to set it as the root bridge in instance 2.
5) Configure the path cost to block the specified ports. For instance 1, set the path cost of port 1/0/1 of Switch A to be greater than the default path cost (200000); for instance 2, set the path cost of port 1/0/2 of Switch B to be greater than the default path cost (200000). After this configuration, port 1/0/2 of Switch A in instance 1 and port 1/0/1 of Switch B in instance 2 will be blocked for they cannot be neither root port nor designated port.

Note:


Please configure MSTP for each switch first and then connect them together to avoid broadcast storm.

5.3 Using the GUI

- Configurations for Switch A


1) Choose the menu **L2 FEATURES > Spanning Tree > STP Config > STP Config** to load the following page. Enable MSTP function globally, here we leave the values of the other global parameters as default settings. **Click Apply**.

Figure 5-3 Configure the Global MSTP Parameters of the Switch

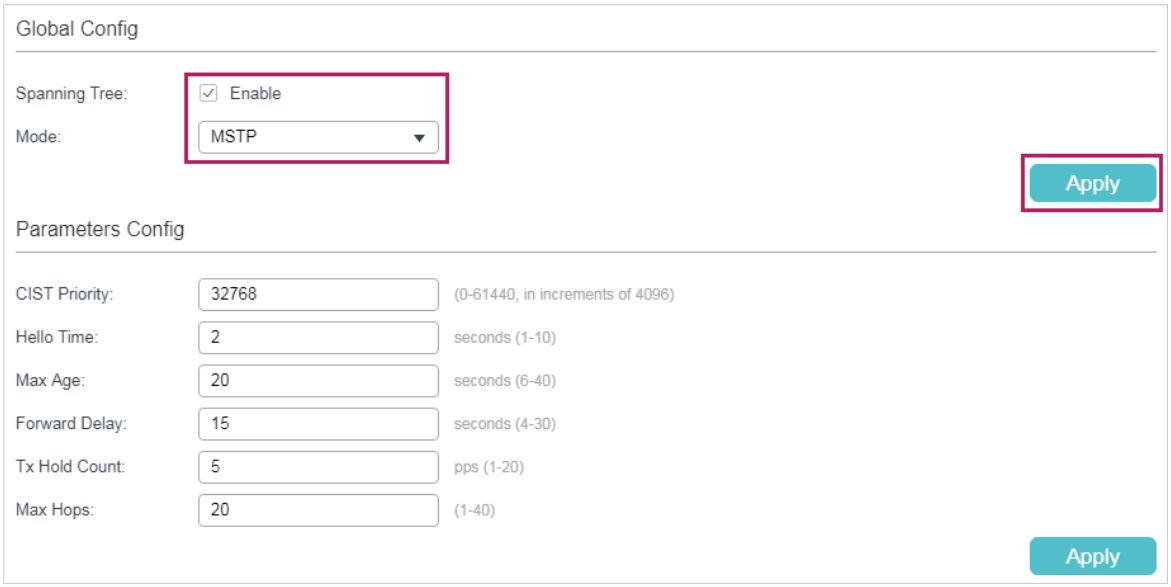


2) Choose the menu **L2 FEATURES > Spanning Tree > STP Config > Port Config** to load the following page. Enable spanning tree function on port 1/0/1 and port 1/0/2. Here we leave the values of the other parameters as default settings. Click **Apply**.

Figure 5-4 Enable Spanning Tree Function on Ports

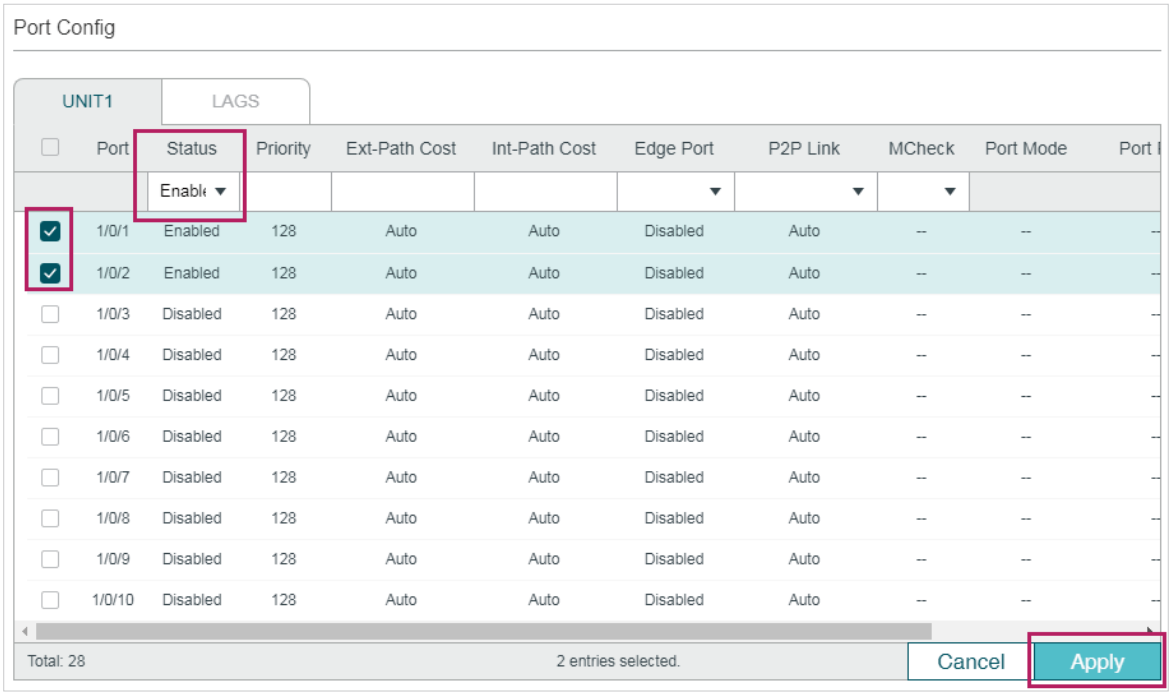


3) Choose the menu **L2 FEATURES > Spanning Tree > MSTP Instance > Region Config** to load the following page. Set the region name as 1 and the revision level as 100. Click **Apply**.

Figure 5-5 Configuring the MST Region

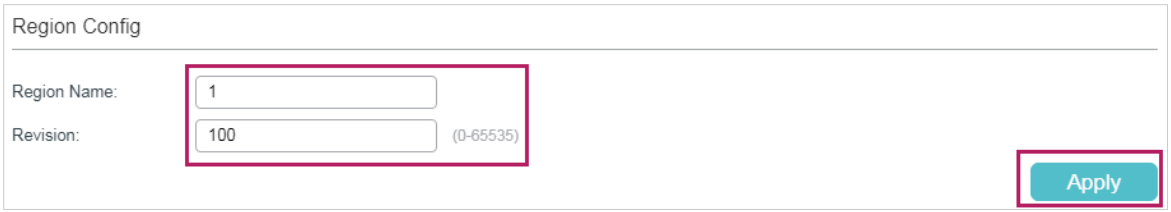


4) Choose the menu **L2 FEATURES > Spanning Tree > MSTP Instance > Instance Config**. Click Add, map VLAN101-VLAN103 to instance 1 and set the priority as 32768; map VLAN104-VLAN106 to instance 2 and set the priority as 32768. Click **Create**.

Figure 5-6 Configuring the VLAN-Instance Mapping

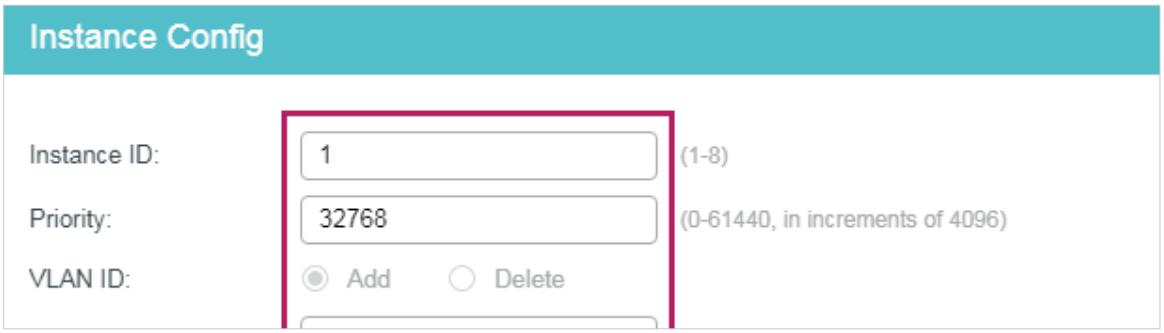

5) Choose the menu **L2 FEATURES > Spanning Tree > MSTP Instance > Instance Port Config** to load the following page. Set the path cost of port 1/0/1 in instance 1 as **300000** so that port 1/0/1 of switch C can be selected as the designated port.

Figure 5-7 Configure the Path Cost of Port 1/0/1 In Instance 1

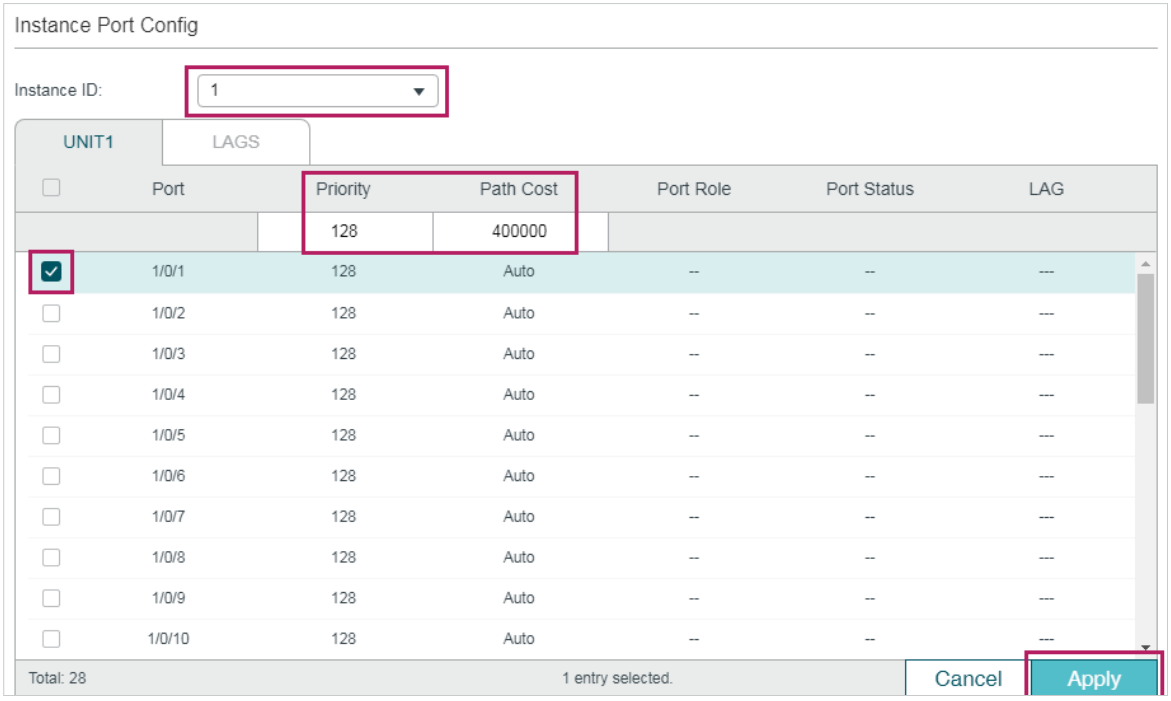


6) Click Save to save the settings.

Configurations for Switch B


1) Choose the menu **L2 FEATURES > Spanning Tree > STP Config > STP Config** to load the following page. Enable MSTP function globally, here we leave the values of the other global parameters as default settings. **Click Apply**.

Figure 5-8 Configure the Global MSTP Parameters of the Switch

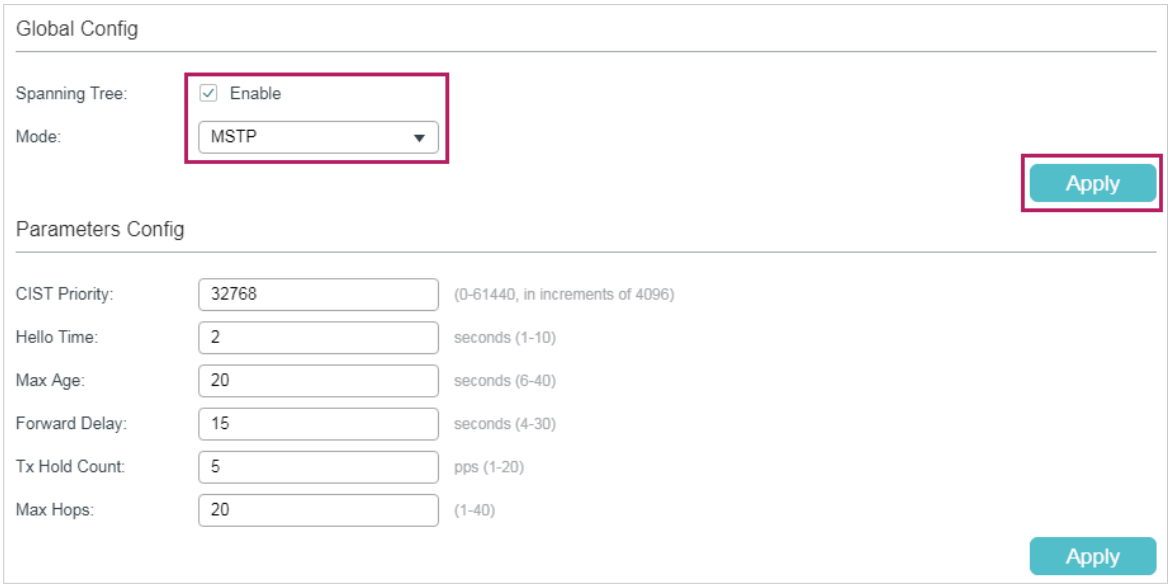


2) Choose the menu **L2 FEATURES > Spanning Tree > STP Config > Port Config** to load the following page. Enable the spanning tree function on port 1/0/1 and port 1/0/2. Here we leave the values of the other parameters as default settings. Click **Apply**.

Figure 5-9 Enable Spanning Tree Function on Ports

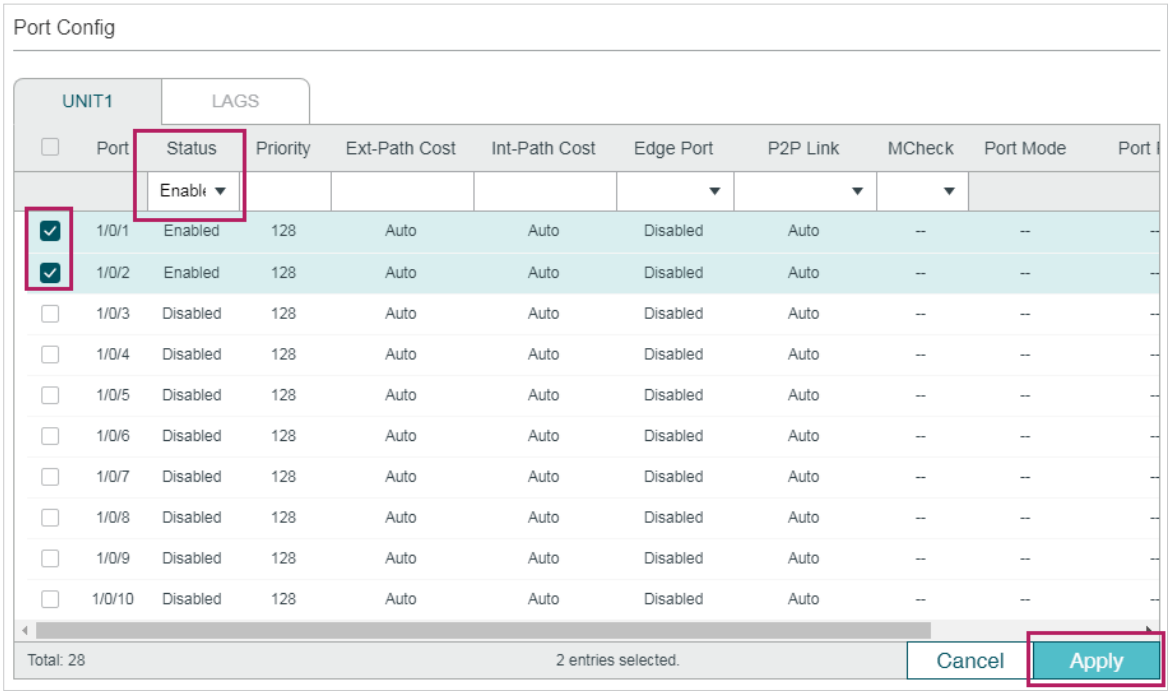


3) Choose the menu **L2 FEATURES > Spanning Tree > MSTP Instance > Region Config** to load the following page. Set the region name as 1 and the revision level as 100. Click **Apply**.

Figure 5-10 Configuring the Region

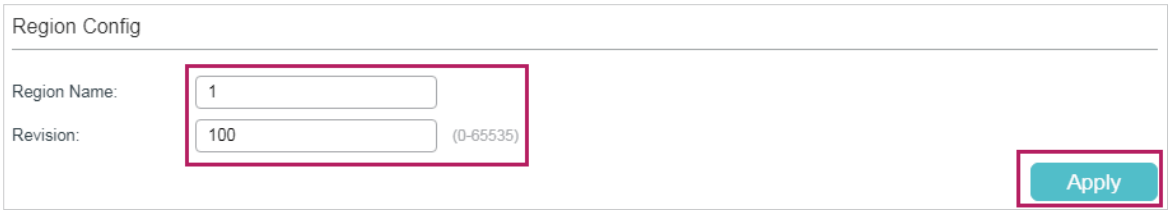


4) Choose the menu **L2 FEATURES > Spanning Tree > MSTP Instance > Instance Config**. Map VLAN101-VLAN103 to instance 1 and set the Priority as 0; map VLAN104-VLAN106 to instance 2 and set the priority as 32768. Click **Create**.

Figure 5-11 Configuring the VLAN-Instance Mapping

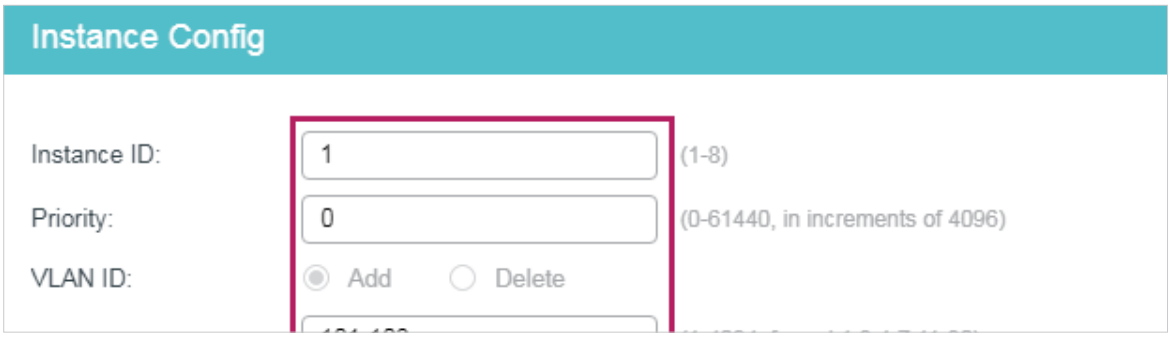

5) Choose the menu **L2 FEATURES > Spanning Tree > MSTP Instance > Instance Port Config** to load the following page. Set the path cost of port 1/0/2 in instance 2 as 300000 so that port 1/0/1 of switch A can be selected as the designated port.

Figure 5-12 Configure the Path Cost of Port 1/0/2 in Instance 2

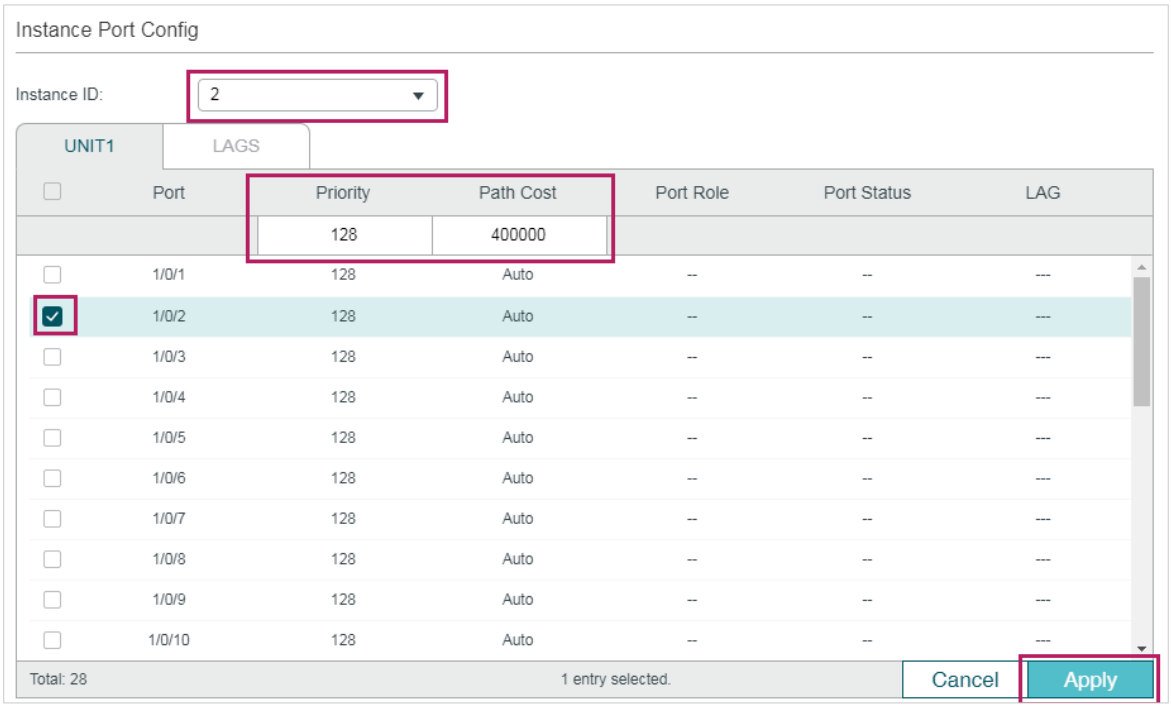


6) Click Save to save the settings.

Configurations for Switch C


1) Choose the menu **L2 FEATURES > Spanning Tree > STP Config > STP Config** to load the following page. Enable MSTP function globally, here we leave the values of the other global parameters as default settings. **Click Apply**.

Figure 5-13 Configure the Global MSTP Parameters of the Switch

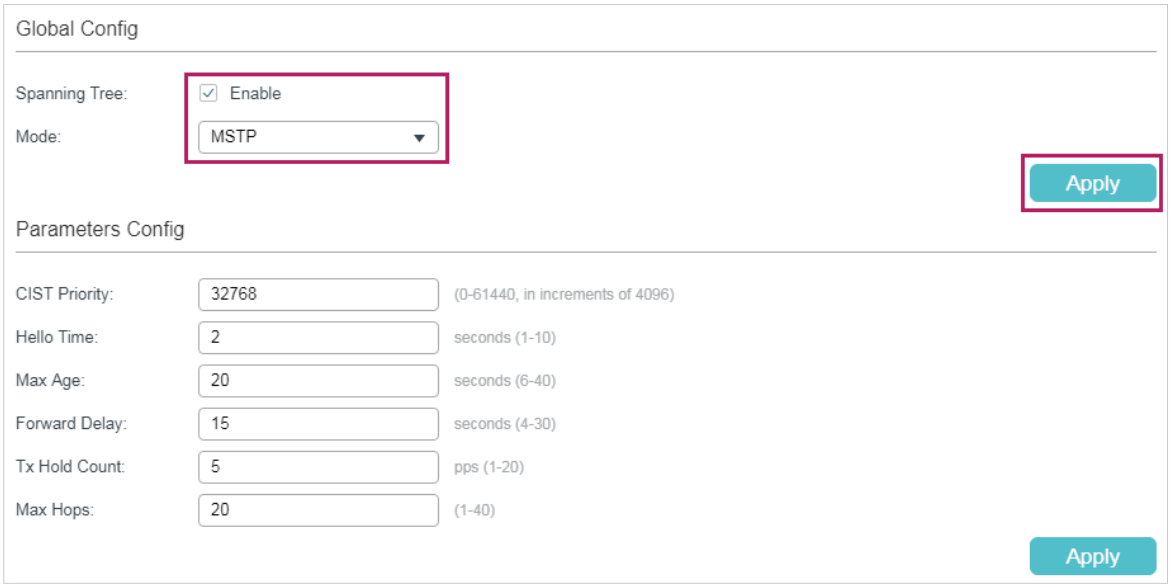


2) Choose the menu **L2 FEATURES > Spanning Tree > STP Config > Port Config** to load the following page. Enable the spanning tree function on port 1/0/1 and port 1/0/2. Here we leave the values of the other parameters as default settings. Click **Apply**.

Figure 5-14 Enable Spanning Tree Function on Ports

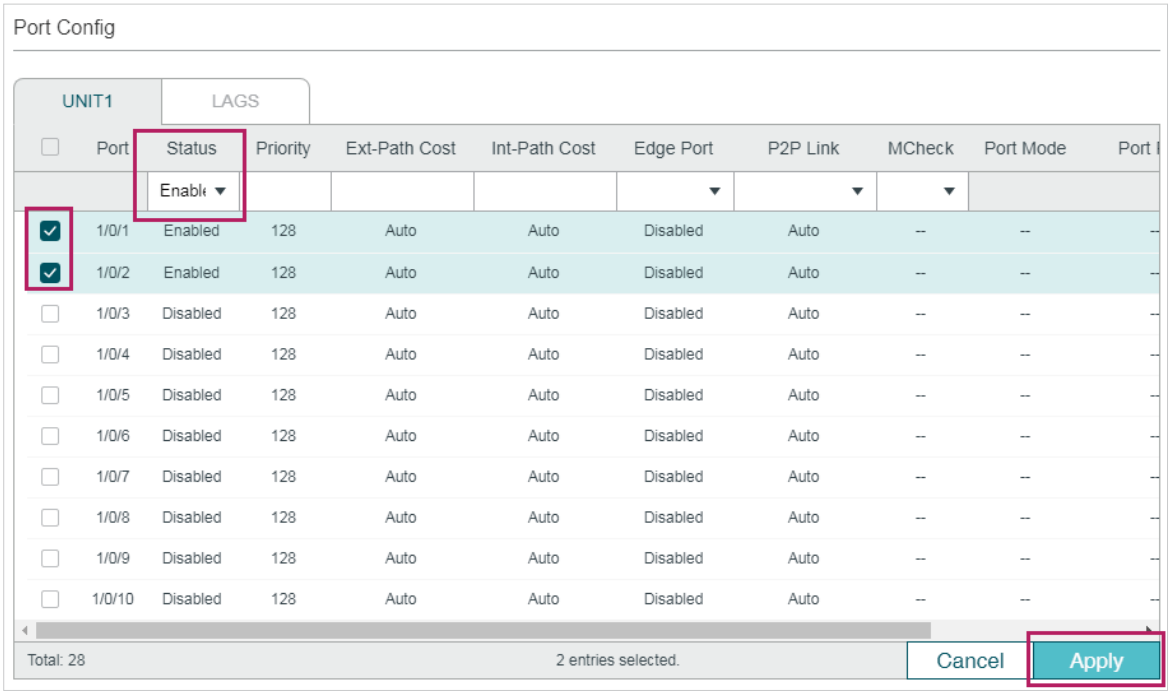


3) Choose the menu **Spanning Tree > MSTP Instance > Region Config** to load the following page. Set the region name as 1 and the revision level as 100. Click **Apply**.

Figure 5-15 Configuring the Region

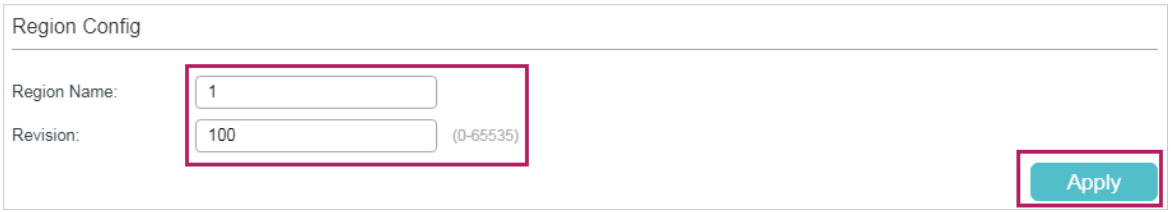

4) Choose the menu **L2 FEATURES > Spanning Tree > MSTP Instance > Instance Config**. Click Add, map VLAN101-VLAN103 to instance 1 and set the priority as 32768; map VLAN104-VLAN106 to instance 2 and set the priority as 0. Click **Create**.

Figure 5-16 Configuring the VLAN-Instance Mapping

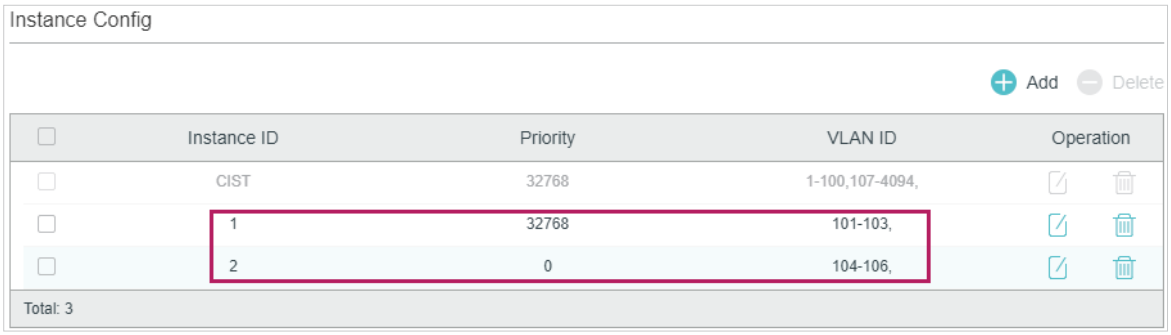

5) Click Save to save the settings.

5.4 Using the CLI

- Configurations for Switch A

1) Configure the spanning tree mode as MSTP, then enable spanning tree function globally.

```
Switch#configure
Switch(config)#spanning-tree mode mstp
Switch(config)#spanning-tree
```

2) Enable the spanning tree function on port 1/0/1 and port 1/0/2, and specify the path cost of port 1/0/1 in instance 1 as 300000.

```
Switch(config)#interface gigabitEthernet 1/0/1
Switch(config-if)#spanning-tree
Switch(config-if)#spanning-tree mst instance 1 cost 300000
Switch(config-if)#exit
Switch(config)#interface gigabitEthernet 1/0/2
Switch(config-if)#spanning-tree
Switch(config-if)#exit
```

3) Configure the region name as 1, the revision number as 100; map VLAN101-VLAN103 to instance 1; map VLAN104-VLAN106 to instance 2:

```
Switch(config)#spanning-tree mst configuration
Switch(config-mst)#name 1
Switch(config-mst)#revision 100
Switch(config-mst)#instance 1 vlan 101-103
Switch(config-mst)#instance 2  vlan 104-106
Switch(config-mst)#end
Switch#copy running-config startup-config
```

- Configurations for Switch B

1) Configure the spanning tree mode as MSTP, then enable spanning tree function globally.

```
Switch#configure
Switch(config)#spanning-tree mode mstp
Switch(config)#spanning-tree
```

2) Enable the spanning tree function on port 1/0/1 and port 1/0/2, and specify the path cost of port 1/0/2 in instance 2 as 300000.

```
Switch(config)#interface gigabitEthernet 1/0/2
Switch(config-if)#spanning-tree
Switch(config-if)#spanning-tree mst instance 2 cost 300000
Switch(config-if)#exit
Switch(config)#interface gigabitEthernet 1/0/1
Switch(config-if)#spanning-tree
Switch(config-if)#exit
```

3) Configure the region name as 1, the revision number as 100; map VLAN101-VLAN103 to instance 1; map VLAN104-VLAN106 to instance 2; configure the priority of Switch B in instance 1 as 0 to set it as the root bridge in instance 1:

```
Switch(config)#spanning-tree mst configuration
Switch(config-mst)#name 1
Switch(config-mst)#revision 100
Switch(config-mst)#instance 1 vlan 101-103
Switch(config-mst)#instance 2  vlan 104-106
```

Switch(config-mst)#exit

Switch(config)#spanning-tree mst instance 1 priority 0

Switch(config)#end

Switch#copy running-config startup-config

- Configurations for Switch C

1) Configure the spanning tree mode as MSTP, then enable spanning tree function globally.

Switch#configure

Switch(config)#spanning-tree mode mstp

Switch(config)#spanning-tree

2) Enable the spanning tree function on port 1/0/1 and port 1/0/2.

Switch(config)#interface range gigabitEthernet 1/0/1-2

Switch(config-if-range)#spanning-tree

Switch(config-if-range)#exit

3) Configure the region name as 1, the revision number as 100; map VLAN101-VLAN103 to instance 1; map VLAN104-VLAN106 to instance 2; configure the priority of Switch C in instance 2 as 0 to set it as the root bridge in instance 2:

Switch(config)#spanning-tree mst configuration

Switch(config-mst)#name 1

Switch(config-mst)#revision 100

Switch(config-mst)#instance 1 vlan 101-103

Switch(config-mst)#instance 2 vlan 104-106

Switch(config-mst)#exit

Switch(config)#spanning-tree mst instance 2 priority 0

Switch(config)#end

Switch#copy running-config startup-config

Verify the Configurations

- Switch A

Verify the configurations of Switch A in instance 1:

Switch(config)#show spanning-tree mst instance 1

MST-Instance 1

Root Bridge

Priority : 0

Address : 00-0a-eb-13-12-ba

Internal Cost : 400000

Root Port : 1

Designated Bridge

Priority : 0

Address : 00-0a-eb-13-12-ba

Local Bridge

Priority : 32768

Address : 00-0a-eb-13-23-97

Interface	Prio	Cost	Role	Status	LAG
---	---	---	---	---	---
Gi1/0/1	128	300000	Root	Fwd	N/A
Gi1/0/2	128	200000	Altn	Blk	N/A

Verify the configurations of Switch A in instance 2:

Switch(config)#show spanning-tree mst instance 2

MST-Instance 2

Root Bridge

Priority : 0

Address : 3c-46-d8-9d-88-f7

Internal Cost : 200000

Root Port : 2

Designated Bridge

Priority : 0

Address : 3c-46-d8-9d-88-f7

Local Bridge

Priority : 32768

Address : 00-0a-eb-13-23-97

Interface	Prio	Cost	Role	Status	LAG
Gi1/0/1	128	200000	Desg	Fwd	N/A
Gi1/0/2	128	200000	Root	Fwd	N/A

- Switch B

Verify the configurations of Switch B in instance 1:

Switch(config)#show spanning-tree mst instance 1

MST-Instance 1

Root Bridge

Priority : 0

Address : 00-0a-eb-13-12-ba

Local bridge is the root bridge

Designated Bridge

Priority : 0

Address : 00-0a-eb-13-12-ba

Local Bridge

Priority : 0

Address : 00-0a-eb-13-12-ba

Interface	Prio	Cost	Role	Status
Gi1/0/1	128	200000	Desg	Fwd
Gi1/0/2	128	200000	Desg	Fwd

Verify the configurations of Switch B in instance 2:

Switch(config)#show spanning-tree mst instance 2

MST-Instance 2

Root Bridge

Priority : 0

Address : 3c-46-d8-9d-88-f7

Internal Cost : 400000

Root Port : 2

Designated Bridge

Priority : 0

Address : 3c-46-d8-9d-88-f7

Local Bridge

Priority : 32768

Address : 00-0a-eb-13-12-ba

Interface	Prio	Cost	Role	Status
Gi1/0/1	128	200000	Altn	Blk
Gi1/0/2	128	200000	Root	Fwd

- Switch C

  Verify the configurations of Switch C in instance 1:

  Switch(config)#show spanning-tree mst instance 1

  MST-Instance 1

  Root Bridge

  Priority : 0

  Address : 00-0a-eb-13-12-ba

  Internal Cost : 200000

  Root Port : 2

  Designated Bridge

  Priority : 0

  Address : 00-0a-eb-13-12-ba

  Local Bridge

  Priority : 32768

  Address : 3c-46-d8-9d-88-f7

Interface	Prio	Cost	Role	Status

```
Gi1/0/1       128      200000    Desg      Fwd
Gi1/0/2       128      200000    Root      Fwd
```

Verify the configurations of Switch C in instance 2:

```
Switch(config)#show spanning-tree mst instance 2
MST-Instance 2
Root Bridge
Priority     : 0
Address      : 3c-46-d8-9d-88-f7
Local bridge is the root bridge
Designated Bridge
Priority     : 0
Address      : 3c-46-d8-9d-88-f7
Local Bridge
Priority     : 0
Address      : 3c-46-d8-9d-88-f7
Interface     Prio      Cost        Role      Status
-----------   ------    ---------   -------   ----------
Gi1/0/1       128       200000      Desg      Fwd
Gi1/0/2       128       200000      Desg      Fwd
```

6 Appendix: Default Parameters

Default settings of the Spanning Tree feature are listed in the following table.

Table 6-1 Default Settings of the Global Parameters

Parameter	Default Setting
Spanning-tree	Disabled
Mode	STP
CIST Priority	32768
Hello Time	2 seconds
Max Age	20 seconds
Forward Delay	15 seconds
Tx Hold Count	5 pps
Max Hops	20 hops

Table 6-2 Default Settings of the Port Parameters

Parameter	Default Setting
Status	Disabled
Priority	128
Ext-Path Cost	Auto
In-Path Cost	Auto
Edge Port	Disabled
P2P Link	Auto
MCheck	------

Table 6-3 Default Settings of the MSTP Instance

Parameter	Default Setting
Status	Disabled
Revision Level	0

Parameter	Default Setting
Priority	32768
Port Priority	128
Path Cost	Auto

Table 6-4 Default Settings of the STP Security

Parameter	Default Setting
Loop Protect	Disabled
Root Protect	Disabled
TC Guard	Disabled
BPDU Protect	Disabled
BPDU Filter	Disabled
BPDU Forward	Enabled

Part 15

Configuring LLDP

CHAPTERS

1. LLDP
2. LLDP Configurations
3. LLDP-MED Configurations
4. Viewing LLDP Settings
5. Viewing LLDP-MED Settings
6. Configuration Example
7. Appendix: Default Parameters

1 LLDP

1.1 Overview

LLDP (Link Layer Discovery Protocol) is a neighbor discovery protocol that is used for network devices to advertise information about themselves to other devices on the network. This protocol is a standard IEEE 802.1ab defined protocol and runs over the Layer 2 (the data-link layer) , which allows for interoperability between network devices of different vendors.

With LLDP enabled, the switch can get its neighbors' information, and network administrators can use the NMS (Network Management System) to gather these information, helping them to know about the network topology, examine the network connectivity and troubleshoot the network faults.

LLDP-MED (LLDP for Media Endpoint Discovery) is an extension of LLDP and is used to advertise information between network devices and media endpoints. It is specially used together with Auto VoIP (Voice over Internet Protocol) to allow VoIP device to access the network. VoIP devices can use LLDP-MED for auto-configuration to minimize the configuration effort.

1.2 Supported Features

The switch supports LLDP and LLDP-MED.

LLDP allows the local device to encapsulate its management address, device ID, interface ID and other information into a LLDPDU (Link Layer Discovery Protocol Data Unit) and periodically advertise this LLDPDU to its neighbor devices. The neighbors store the received LLDPDU in a standard MIB (Management Information Base), making it possible for the information to be accessed by a NMS (Network Management System) using a management protocol such as the SNMP (Simple Network Management Protocol).

LLDP-MED allows the network device to send its information including Auto VoIP information, PoE (Power over Ethernet) capacity and more to the media endpoint devices (for example, IP phones) for auto-configuration. The media endpoint devices receive the Auto VoIP information and finish the auto-configuration, then send the voice traffic with the desired configuration, which can provide preferential treatment to the voice traffic.

2 LLDP Configurations

T configure LLDP function, follow the steps:


1) Configure the LLDP feature globally.
2) Configure the LLDP feature for the port.

2.1 Using the GUI

2.1.1 Configuring LLDP Globally

Choose the **L2 FEATURES > LLDP** > **LLDP Config** > **Global Config** to load the following page.

Figure 2-1 Global Config

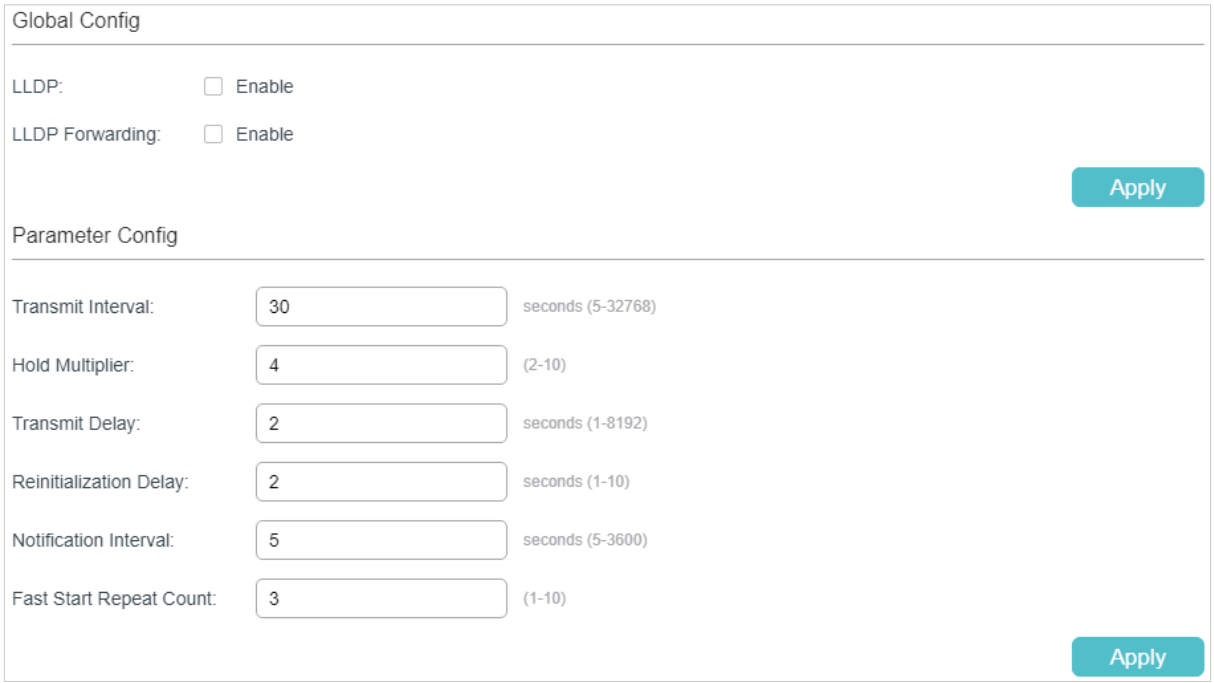

Follow these steps to configure the LLDP feature globally.

1) In the **Global Config** section, enable LLDP. You can also enable the switch to forward LLDP messages when LLDP function is disabled. Click **Apply**.

LLDP	Enable LLDP function globally.
LLDP Forwarding	(Optional) Enable the switch to forward LLDP messages when LLDP function is disabled.


3) In the **Parameter Config** section, configure the LLDP parameters. Click **Apply**.

Transmit Interval	Enter the interval between successive LLDP packets that are periodically sent from the local device to its neighbors. The default is 30 seconds.
Hold Multiplier	This parameter is a multiplier on the Transmit Interval that determines the actual TTL (Time To Live) value used in an LLDP packet. TTL is the duration that the neighbor device should hold the received LLDP packet before discarding it. The default value is 4. TTL= Hold Multiplier * Transmit Interval.
Transmit Delay	Specify the amount of time that the local device waits before sending another LLDP packet to its neighbor. When the local information changes, the local device will send LLDP packets to inform its neighbors. If frequent changes occur to the local device, LLDP packets will flood. After specifying a transmit delay time, the local device will wait for a delay time to send LLDP packets when changes occur to avoid frequent LLDP packet forwarding. The default is 2 seconds.
Reinitialization Delay	Specify the amount of delay from when Admin Status of ports becomes “Disable’ until reinitialization will be attempted. The default value is 2 seconds.
Notification Interval	Enter the interval between successive in seconds Trap messages that are periodically sent from the local device to the NMS. The default value is 5.
Fast Start Repeat Count	Specify the number of LLDP packets that the local port sends when its Admin Status changes from Disable (or Rx_Only) to Tx&RX (or Tx_Only). The default value is 3. In this case, the local device will shorten the Transmit Interval of LLDP packets to 1 second to make it quickly discovered by its neighbors. After the specified number of LLDP packets are sent, the Transmit Interval will be restored to the specified value.

2.1.2 Configuring LLDP For the Port

Choose th menu **L2 FEATURES > LLDP** > **LLDP Config** > **Port Config** to load the following page.

Figure 2-2 Port Config

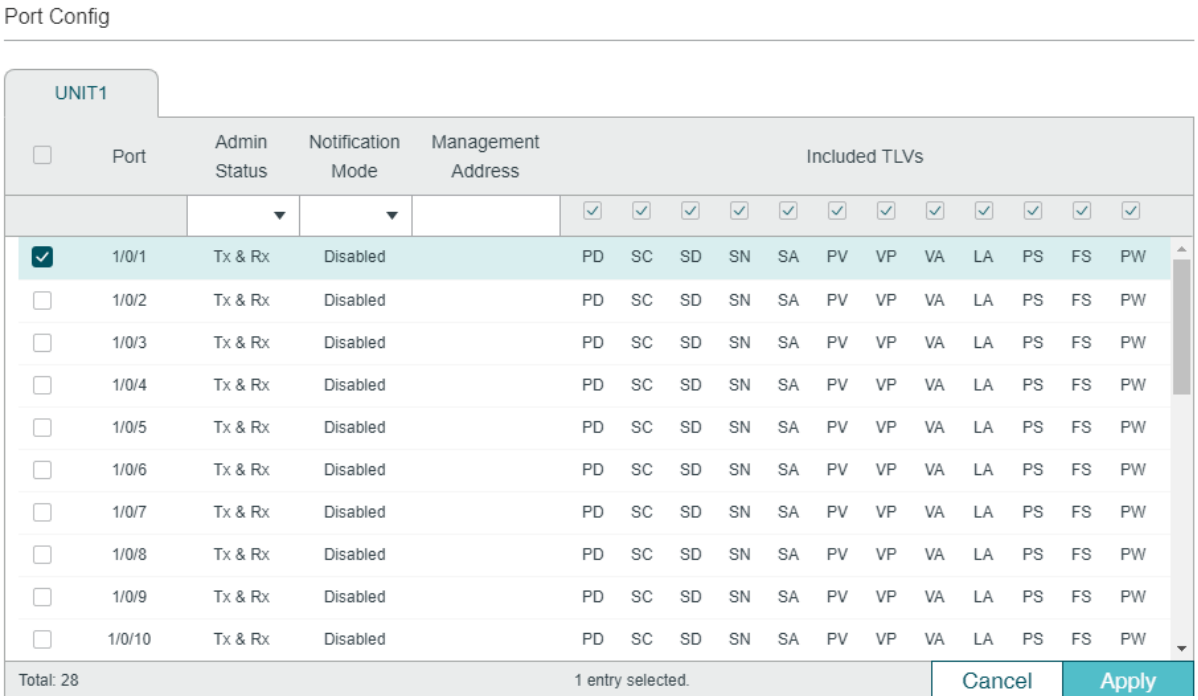

Follow these steps to configure the LLDP feature for the interface.

1) Select one or more ports to configure.
2) Configure the Admin Status and Notification Mode for the port.

Admin Status	Set Admin Status for the port to deal with LLDP packets. Tx&Rx: The port transmits LLDP packets and receives LLDP packets. Rx_Only: The port only receives LLDP packets. Tx_Only: The port only transmits LLDP packets. Disable: The port will not transmit LLDP packets or drop the received LLDP packets.
Notification Mode	(Optional) Enable the switch to send trap messages to the NMS when the information of the neighbor device connected to this port changes.
Management Address	Specify the Management IP address of the port to be notified to the neighbor. Value 0.0.0.0 means the port will notify its default management address to the neighbor.

3) Select the TLVs (Type/Length/Value) included in the LLDP packets according to your needs.

Included TLVs	Configure the TLVs included in the outgoing LLDP packets. The switch supports the following TLVs: PD: Used to advertise the port description defined by the IEEE 802 LAN station. SC: Used to advertise the supported functions and whether or not these functions are enabled. SD: Used to advertise the system's description including the full name and version identification of the system's hardware type, software operating system, and networking software. SN: Used to advertise the system name. SA: Used to advertise the local device's management address to make it possible to be managed by SNMP. PV: Used to advertise the 802.1Q VLAN ID of the port. VP: Used to advertise the protocol VLAN ID of the port. VA: Used to advertise the name of the VLAN which the port is in. LA: Used to advertise whether the link is capable of being aggregated, whether the link is currently in an aggregation, and the port ID when it is in an aggregation. PS: Used to advertise the port's attributes including the duplex and bit-rate capability of the sending IEEE 802.3 LAN node that is connected to the physical medium, the current duplex and bit-rate settings of the sending IEEE 802.3 LAN node and whether these settings are the result of auto-negotiation during link initiation or of manual set override action. FS: Used to advertise the maximum frame size capability of the implemented MAC and PHY. PW: Used to advertise the port's PoE (Power over Ethernet) support capabilities.

4) Click **Apply**.

2.2 Using the CLI

2.2.1 Global Config

Enable the LLDP feature on the switch and configure the LLDP parameters.

Step 1	**configure** Enter global configuration mode.
Step 2	**lldp** Enable the LLDP feature on the switch.

Step 3	**lldp forward_message** (Optional) Enable the switch to forward LLDP messages when LLDP function is disabled.
Step 4	**lldp hold-multiplier** *multiplier* (Optional) Specify the amount of time the neighbor device should hold the received information before discarding it. This parameter is a multiplier on the Transmit Interval that determines the actual TTL (Time To Live) value used in an LLDP packet. TTL is the duration that the neighbor device should hold the received LLDP packet before discarding it. TTL= Hold Multiplier * Transmit Interval. *multiplier:* Specify the hold-multiplier. The valid value ranges from 2 to 10, and the default value is 4.
Step 5	**lldp timer { tx-interval** *tx-interval* **| tx-delay** *tx-delay* **| reinit-delay** *reinit-delay* **| notify-interval** *notify-interval* **| fast-count** *fast-count* **}** (Optional) Configure the timers for LLDP packet forwarding. *tx-interval:* Enter the interval between successive LLDP packets that are periodically sent from the local device to its neighbors. *tx-delay:* Specify the amount of time that the local device waits before sending another LLDP packet to its neighbors. The default is 2 seconds. *reinit-delay:* Specify the amount of time that the local device waits before sending another LLDP packet to its neighbors. The default is 2 seconds. *notify-interval:* Enter the interval between successive Trap messages that are periodically sent from the local device to the NMS. The default is 5 seconds. *fast-count:* Specify the number of packets that the local port sends when its Admin Status changes. The default is 3.
Step 6	**show lldp** Display the LLDP information.
Step 7	**end** Return to Privileged EXEC Mode.
Step 8	**copy running-config startup-config** Save the settings in the configuration file.

The following example shows how to configure the following parameters, lldp timer=4, tx-interval=30 seconds, tx-delay=2 seconds, reinit-delay=3 seconds, notify-iInterval=5 seconds, fast-count=3.

Switch#configure

Switch(config)#lldp

Switch(config)#lldp hold-multiplier 4

Switch(config)#lldp timer tx-interval 30 **tx-delay** 2 **reinit-delay** 3 **notify-interval** 5 **fast-count** 3

Switch(config)#show lldp

LLDP Status: Enabled

LLDP Forward Message: Disabled

Tx Interval: 30 seconds

TTL Multiplier: 4

Tx Delay: 2 seconds

Initialization Delay: 2 seconds

Trap Notification Interval: 5 seconds

Fast-packet Count: 3

LLDP-MED Fast Start Repeat Count: 4

Switch(config)#end

Switch#copy running-config startup-config

2.2.2 Port Config

Select the desired port and set its Admin Status, Notification Mode and the TLVs included in the LLDP packets.

Step 1	**configure** Enter global configuration mode.
Step 2	**interface {fastEthernet** *port* **| range fastEthernet** *port-list* **| gigabitEthernet** *port* **| range gigabitEthernet** *port-list* **| ten-gigabitEthernet** *port* **| range ten-gigabitEthernet** *port-list* **}** Enter interface configuration mode.
Step 3	**lldp receive** (Optional) Set the mode for the port to receive LLDP packets. It is enabled by default.
Step 4	**lldp transmit** (Optional) Set the mode for the port to send LLDP packets. It is enabled by default.
Step 5	**lldp snmp-trap** (Optional) Enable the Notification Mode feature on the port. If it is enabled, the local device will send trap messages to the NMS when neighbor information changed. It is disabled by default.
Step 6	**lldp tlv-select** (Optional) Configure the TLVs included in the outgoing LLDP packets. By default, the outgoing LLDP packets include all TLVs.

Step 7	**show lldp interface { fastEthernet** *port* **| gigabitEthernet** *port* **| ten-gigabitEthernet** *port* **}** Display LLDP configuration of the corresponding port.
Step 8	**end** Return to Privileged EXEC Mode.
Step 9	**copy running-config startup-config** Save the settings in the configuration file.

The following example shows how to configure the port 1/0/1. The port can receive and transmit LLDP packets, its notification mode is enabled and the outgoing LLDP packets include all TLVs.

Switch#configure

Switch(config)#lldp

Switch(config)#interface gigabitEthernet 1/0/1

Switch(config-if)#lldp receive

Switch(config-if)#lldp transmit

Switch(config-if)#lldp snmp-trap

Switch(config-if)#lldp tlv-select all

Switch(config-if)#show lldp interface gigabitEthernet 1/0/1

LLDP interface config:

gigabitEthernet 1/0/1:

Admin Status: TxRx

SNMP Trap: Enabled

TLV Status

--- ------

Port-Description Yes

System-Capability Yes

System-Description Yes

System-Name Yes

Management-Address Yes

Port-VLAN-ID Yes

Protocol-VLAN-ID Yes

VLAN-Name Yes

Link-Aggregation Yes

MAC-Physic Yes

Max-Frame-Size Yes

Power Yes

Switch(config-if)#end

Switch#copy running-config startup-config

3 LLDP-MED Configurations

To configure LLDP-MED function, follow the steps:

1) Enable LLDP feature globally and configure the LLDP parametres for the ports.
2) Configuring LLDP-MED fast repeat count globally.
3) Enable and configure the LLDP-MED feature on the port.

Configuration Guidelines

LLDP-MED is used together with Auto VoIP to implement VoIP access. Besides the configuration of LLDP-MED feature, you also need configure the Auto VoIP feature. Refer to *Configuring QoS* for detailed instructions.

3.1 Using the GUI

3.1.1 Configuring LLDP Globally

Enable LLDP globally and configure the LLDP parametres for the ports. For the details of LLDP configuration, refer to *LLDP Configuration*.

3.1.1 Configuring LLDP-MED Globally

Choose the menu **L2 FEATURES > LLDP** > **LLDP-MED Config** > **Global Config** to load the following page.

Figure 3-1 LLDP-MED Parameters Config



Configure the Fast Start Count and view the current device class. Click **Apply**.


Fast Start Repeat Count	Specify the number of successive LLDP-MED packets that the switch sends when it receives the LLDP-MED packets from the neighbor endpoints. The default is 4. If the switch receives LLDP-MED packets from the neighbor endpoints for the first time, it will send the specified number of LLDP-MED packets carrying LLDP-MED information. After that, the transmit interval will be restored to the specified value.

Device Class	Display the current device class. LLDP-MED defines two device classes, Network Connectivity Device and Endpoint Device. The switch is a Network Connectivity device.

3.1.2 Configuring LLDP-MED for Ports

Choose the menu **L2 FEATURES > LLDP** > **LLDP-MED Config** > **Port Config** to load the following page.


Figure 3-2 LLDP-MED Port Config

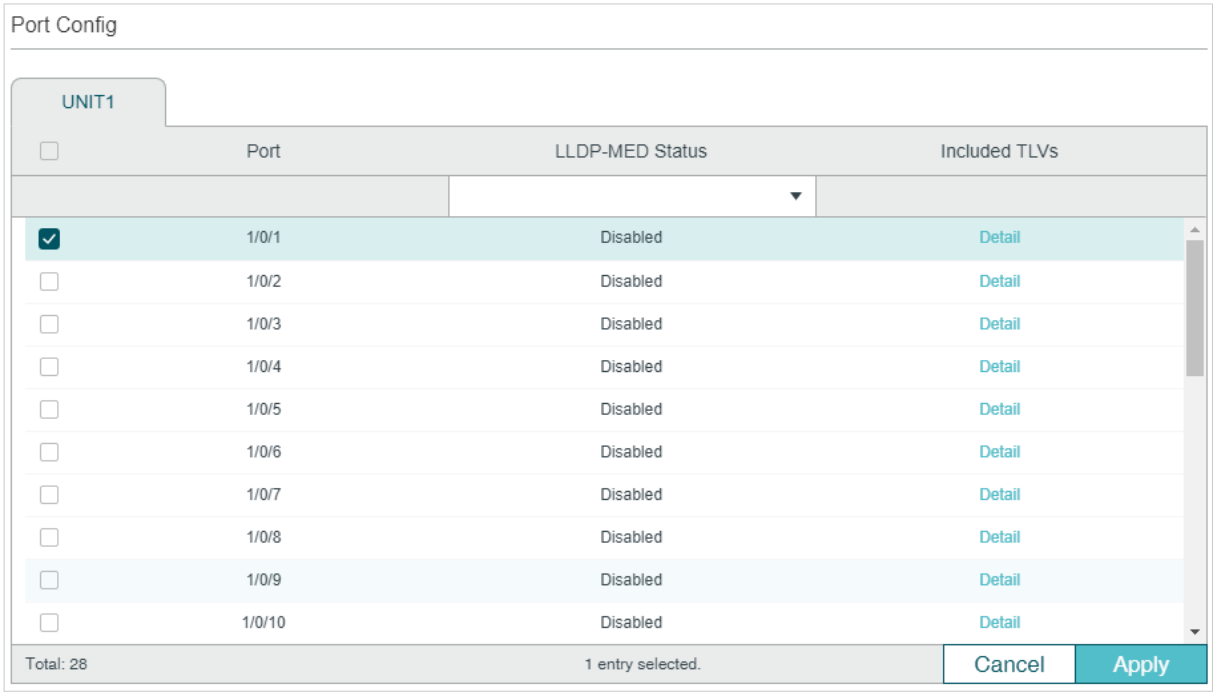

Follow these steps to enable LLDP-MED:

1) Select the desired port and enable LLDP-MED. Click **Apply**.
2) Click **Detail** to enter the following page. Configure the TLVs included in the outgoing LLDP packets. If **Location Identification** is selected, you need configure the Emergency Number or select Civic Address to configure the details. Click **Apply**.

Figure 3-3 LLDP-MED Port Config-Detail

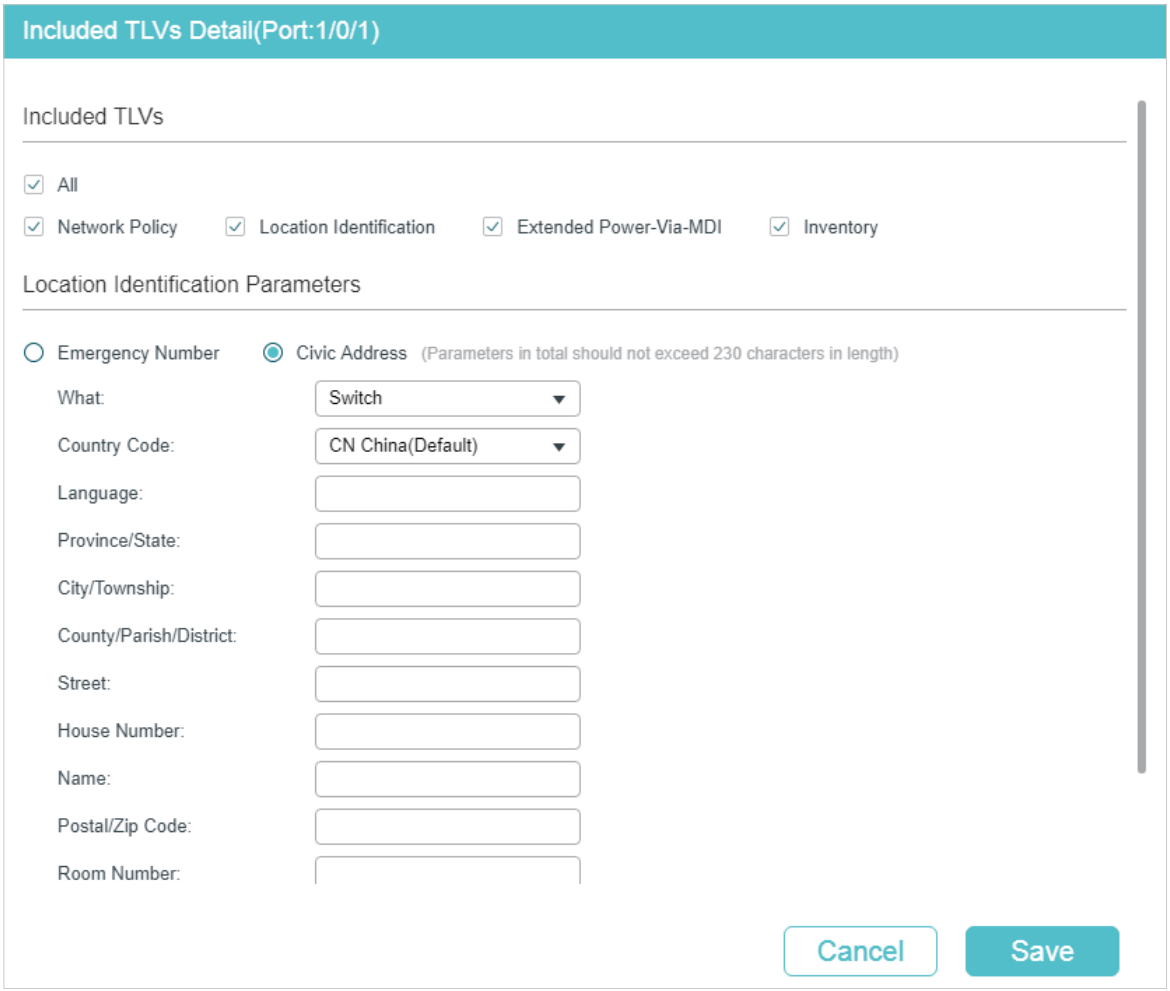

Network Policy	Used to advertise VLAN configuration and the associated Layer 2 and Layer 3 attributes of the port to the endpoint devices.
Location Identification	Used to assign the location identifier information to the Endpoint devices. If this option is selected, you can configure the emergency number and the detailed address of the endpoint device in the Location Identification Parameters section.
Extended Power-Via-MDI	Used to advertise the detailed PoE information including power supply priority and supply status between LLDP-MED Endpoint devices and Network Connectivity devices.
Inventory	Used to advertise the inventory information. The Inventory TLV set contains seven basic Inventory management TLVs, that is, Hardware Revision TLV, Firmware Revision TLV, Software Revision TLV, Serial Number TLV, Manufacturer Name TLV, Model Name TLV and Asset ID TLV.
Emergency Number	Configure the emergency number to call CAMA or PSAP. The number should contain 10-25 characters.

Civic Address	Configure the address of the audio device in the IETF defined address format. What: Specify the role type of the local device, DHCP Server, Switch or LLDP-MED Endpoint. Country Code: Enter the country code defined by ISO 3166 , for example, CN, US. Language, Province/State etc.: Enter the regular details.

3.2 Using the CLI

3.2.1 Global Config

Step 1	**configure** Enter global configuration mode.
Step 2	**lldp** Enable the LLDP feature on the switch.
Step 3	**lldp med-fast-count** *count* (Optional) Specify the number of successive LLDP-MED frames that the local device sends when fast start mechanism is activated. When the fast start mechanism is activated, the local device will send the specified number of LLDP packets carrying LLDP-MED information. *count:* The valid value are from 1 to 10. The default is 4.
Step 4	**show lldp** Display the LLDP information.
Step 5	**end** Return to Privileged EXEC Mode.
Step 6	**copy running-config startup-config** Save the settings in the configuration file.

The following example shows how to configure LLDP-MED fast count as 4:

Switch#configure

Switch(config)#lldp

Switch(config)#lldp med-fast-count 4

Switch(config)#show lldp

LLDP Status: Enabled

Tx Interval: 30 seconds

TTL Multiplier: 4

Tx Delay: 2 seconds

Initialization Delay: 2 seconds

Trap Notification Interval: 5 seconds

Fast-packet Count: 3

LLDP-MED Fast Start Repeat Count: 4

Switch(config)#end

Switch#copy running-config startup-config

3.2.2 Port Config

Select the desired port, enable LLDP-MED and select the TLVs (Type/Length/Value) included in the outgoing LLDP packets according to your needs.

Step 1	**configure** Enter global configuration mode.
Step 2	**interface {fastEthernet** *port* **| range fastEthernet** *port-list* **| gigabitEthernet** *port* **| range gigabitEthernet** *port-list* **| ten-gigabitEthernet** *port* **| range ten-gigabitEthernet** *port-list* **}** Enter interface configuration mode.
Step 3	**lldp med-status** (Optional) Enable the LLDP-MED on the port. It is disabled by default.
Step 4	**lldp med-tlv-select { [inventory-management] [location] [network-policy] [power-management] [all] }** (Optional) Configure the LLDP-MED TLVs included in the outgoing LLDP packets. By default, the outgoing LLDP packets include all TLVs. If LLDP-MED Location TLV is selected, configure the parameters as follows: **lldp med-location {emergency-number** *identifier* **| civic-address [language** *language* **| province-state** *province-state* **| lci-county-name** *county* **| lci-city** *city* **| street** *street* **| house-number** *house-number* **| name** *name* **| postal-zipcode** *postal-zipcode* **| room-number** *room-number* **| post-office-box** *post-office-box* **| additional** *additional* **| country-code** *country-code* **| what { dhcp-server | endpoint | switch }] }** Configure the LLDP-MED Location TLV included in the outgoing LLDP packets. Used to assign the location identifier information to the Endpoint devices. *identifier:* Configure the emergency number to call CAMA or PSAP. The number should contain 10-25 characters. *language,province-state,county.etc:* Configure the address in the IETF defined address format.
Step 5	**show lldp interface { fastEthernet** *port* **| gigabitEthernet** *port* **| ten-gigabitEthernet** *port* **}** Display LLDP configuration of the corresponding port.

Step 6	**end** Return to Privileged EXEC Mode.
Step 7	**copy running-config startup-config** Save the settings in the configuration file.

The following example shows how to enable LLDP-MED on port 1/0/1, configure the LLDP-MED TLVs included in the outgoing LLDP packets.

Switch(config)#lldp

Switch(config)#lldp med-fast-count 4

Switch(config)#interface gigabitEthernet 1/0/1

Switch(config-if)#lldp med-status

Switch(config-if)#lldp med-tlv-select all

Switch(config-if)#show lldp interface gigabitEthernet 1/0/1

LLDP interface config:

gigabitEthernet 1/0/1:

Admin Status: TxRx

SNMP Trap: Enabled

TLV Status

--- ------

Port-Description Yes

System-Capability Yes

System-Description Yes

System-Name Yes

Management-Address Yes

Port-VLAN-ID Yes

Protocol-VLAN-ID Yes

VLAN-Name Yes

Link-Aggregation Yes

MAC-Physic Yes

Max-Frame-Size Yes

Power Yes

LLDP-MED Status: Enabled

TLV Status

--- ------

Network Policy Yes

Location Identification Yes

Extended Power Via MDI Yes

Inventory Management Yes

Switch(config)#end

Switch#copy running-config startup-config

4 Viewing LLDP Settings

This chapter introduces how to view the LLDP settings on the local device.


4.1 Using GUI

4.1.1 Viewing LLDP Device Info

- Viewing the Local Info

Choose the menu **L2 FEATURES** > **LLDP** > **LLDP Config** > **Local Info** to load the following page.

Figure 4-1 Local Info

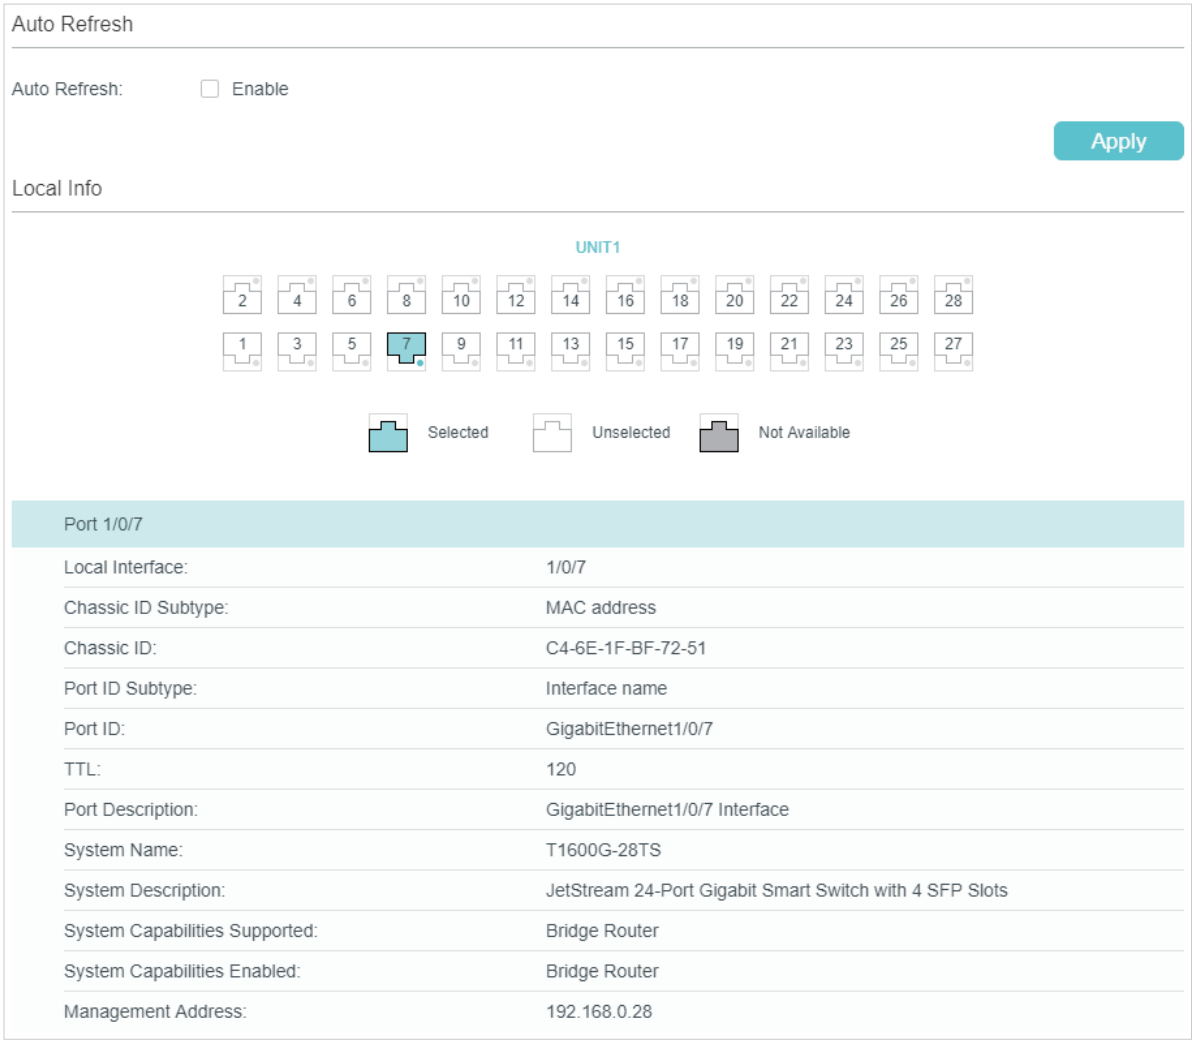

Follow these steps to view the local information:


1) In the **Auto Refresh** section, enable the Auto Refresh feature and set the Refresh Rate according to your needs. Click **Apply**.
2) In the **Local Info** section, select the desired port and view its associated local device information.

Local Interface	Displays the local port ID.
Chassis ID Subtype	Displays the Chassis ID type.
Chassis ID	Displays the value of the Chassis ID.
Port ID Subtype	Displays the Port ID type.
Port ID	Displays the value of the Port ID.
TTL	Specify the amount of time in seconds the neighbor device should hold the received information before discarding it.
Port Description	Displays the description of the local port.
System Name	Displays the system name of the local device.
System Description	Displays the system description of the local device.
System Capabilities Supported	Displays the supported capabilities of the local system.
System Capabilities Enabled	Displays the primary functions of the local device.
Management Address	Displays the management IP address of the local device.

Viewing the Neighbor Info

Choose the menu **L2 FEATURES** > **LLDP** > **LLDP Config** > **Neighbor Info** to load the following page.

Figure 4-2 Neighbor Info

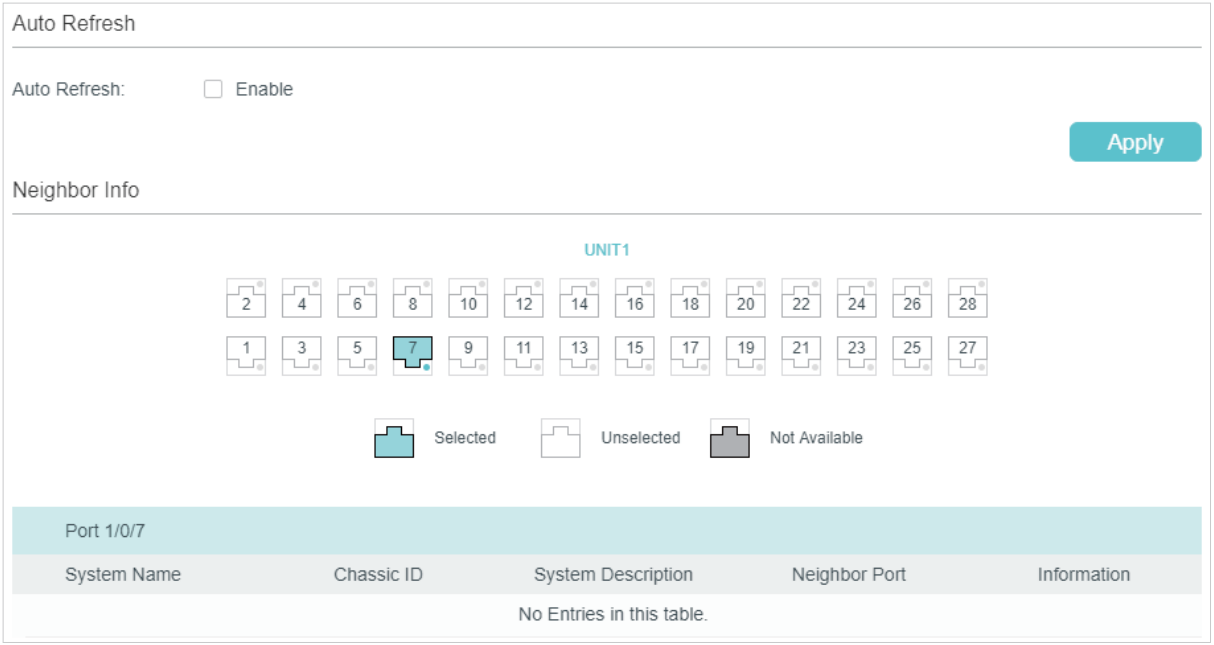

Follow these steps to view the neighbor information:


1) In the **Auto Refresh** section, enable the Auto Refresh feature and set the Refresh Rate according to your needs. Click **Apply**.
2) In the **Neighbor Info** section, select the desired port and view its associated neighbor device information.

System Name	Displays the system name of the neighbor device.
Chassis ID	Displays the Chassis ID of the neighbor device.
System Description	Displays the system description of the neighbor device.
Neighbor Port	Displays the port ID of the neighbor device which is connected to the local port.
Information	Click to view the details of the neighbor device.

4.1.2 Viewing LLDP Statistics

Choose the menu **L2 FEATURES** > **LLDP** > **LLDP Config** > **Statistics Info** to load the following page.

Figure 4-3 Static Info

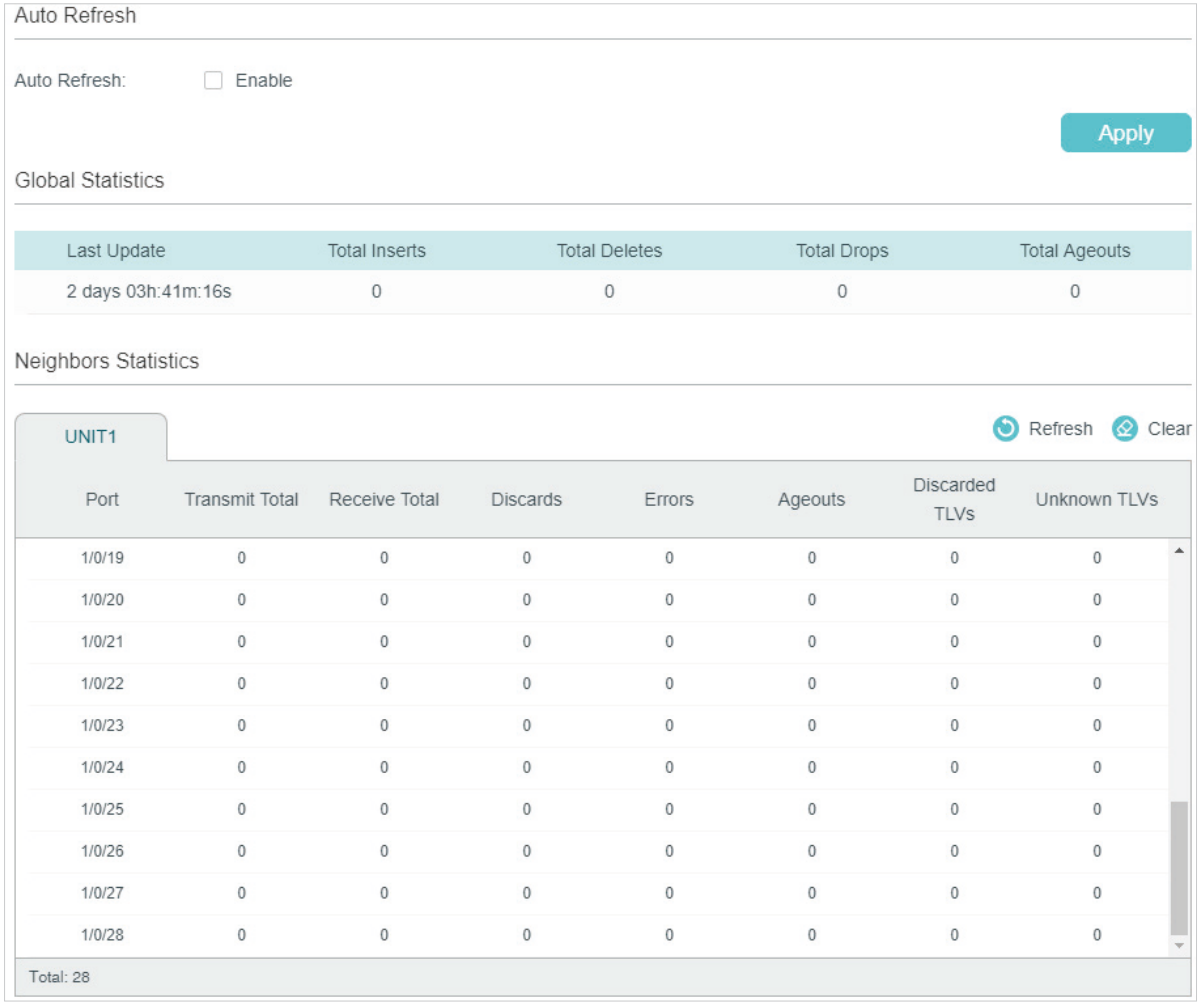

Follow these steps to view LLDP statistics:

1) In the **Auto Refresh** section, enable the Auto Refresh feature and set the Refresh Rate according to your needs. Click **Apply**.

2) In the **Global Statistics** section, view the global statistics of the local device.

Last Update	Displays the time when the statistics updated.
Total Inserts	Displays the total number of neighbors during latest update time.
Total Deletes	Displays the number of neighbors deleted by the local device. The port will delet neighbors when the port is disabled or the TTL of the LLDP packets sent by the neighbor is 0.
Total Drops	Displays the number of neighbors dropped by the local device. Each port can learn a maximum of 80 neighbor device, and the subsquent neighbors will be dropped when the limit is exceeded.

Total Ageouts	Displays the latest number of neighbors that have aged out on the local device.

3) In the **Neighbors Statistics** section, view the statistics of the corresponding port.

Transmit Total	Displays the total number of the LLDP packets sent via the port.
Receive Total	Displays the total number of the LLDP packets received via the port.
Discards	Displays the total number of the LLDP packets discarded by the port.
Errors	Displays the total number of the error LLDP packets received via the port.
Ageouts	Displays the number of the aged out neighbors that are connected to the port.
TLV Discards	Displays the total number of the TLVs discarded by the port when receiving LLDP packets.
TLV Unknowns	Displays the total number of the unknown TLVs included in the received LLDP packets.

4.2 Using CLI

■ Viewing the Local Info

show lldp local-information interface { fastEthernet *port* **| gigabitEthernet** *port* **| ten-gigabitEthernet** *port* **}**

View the LLDP details of a specific port or all the ports on the local device.

■ Viewing the Neighbor Info

show lldp neighbor-information interface { fastEthernet *port* **| gigabitEthernet** *port* **| ten-gigabitEthernet** *port* **}**

Display the information of the neighbor device which is connected to the port.

■ Viewing LLDP Statistics

show lldp traffic interface { fastEthernet *port* **| gigabitEthernet** *port* **| ten-gigabitEthernet** *port* **}**

View the statistics of the corresponding port on the local device.


5 Viewing LLDP-MED Settings

5.1 Using GUI

Choose the menu **L2 FEATURES** > **LLDP** > **LLDP-MED Config** > **Local Info** to load the following page.

- Viewing the Local Info

Figure 5-1 LLDP-MED Local Info

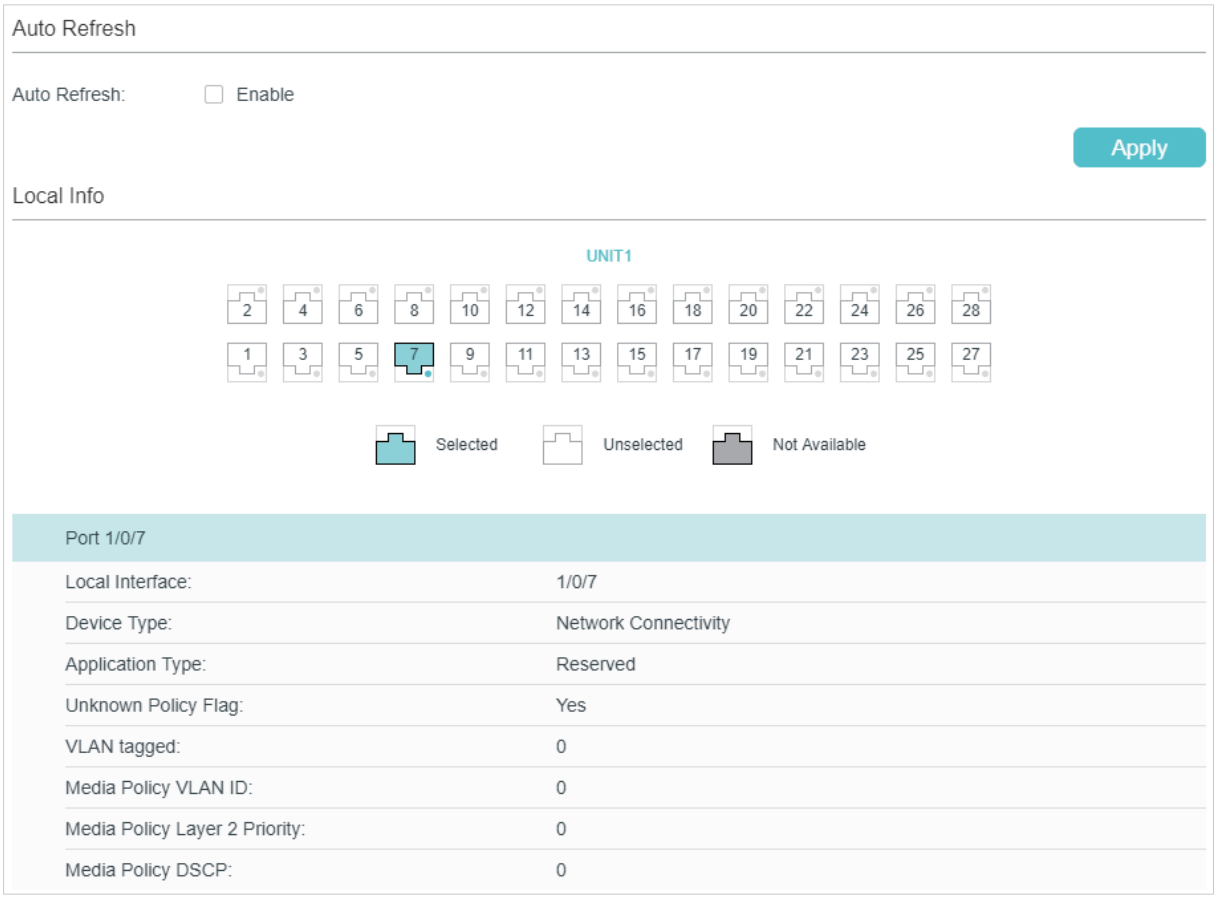

Follow these steps to view LLDP-MED local information:

1) In the **Auto Refresh** section, enable the Auto Refresh feature and set the Refresh Rate according to your needs. Click **Apply**.
2) In the **LLDP-MED Local Info** section, select the desired port and view the LLDP-MED settings.


Local Interface	Displays the local port ID.
Device Type	Displays the local device type defined by LLDP-MED.LLDP-MED.

Application Type	Displays the supported applications of the local device.
Unknown Policy Flag	Displays the unknown location settings included in the network policy TLV.
VLAN tagged	Displays the VLAN Tag type of the applications, tagged or untagged.
Media Policy VLAN ID	Displays the 802.1Q VLAN ID of the port.
Media Policy Layer 2 Priority	Displays the Layer 2 priority used in the specific application.
Media Policy DSCP	Displays the DSCP value used in the specific application.

Viewing the Neighbor Info

Choose the menu **L2 FEATURES** > **LLDP** > **LLDP-MED Config** > **Neighbor Info** to load the following page.

Figure 5-2 LLDP-MED Neighbor Info

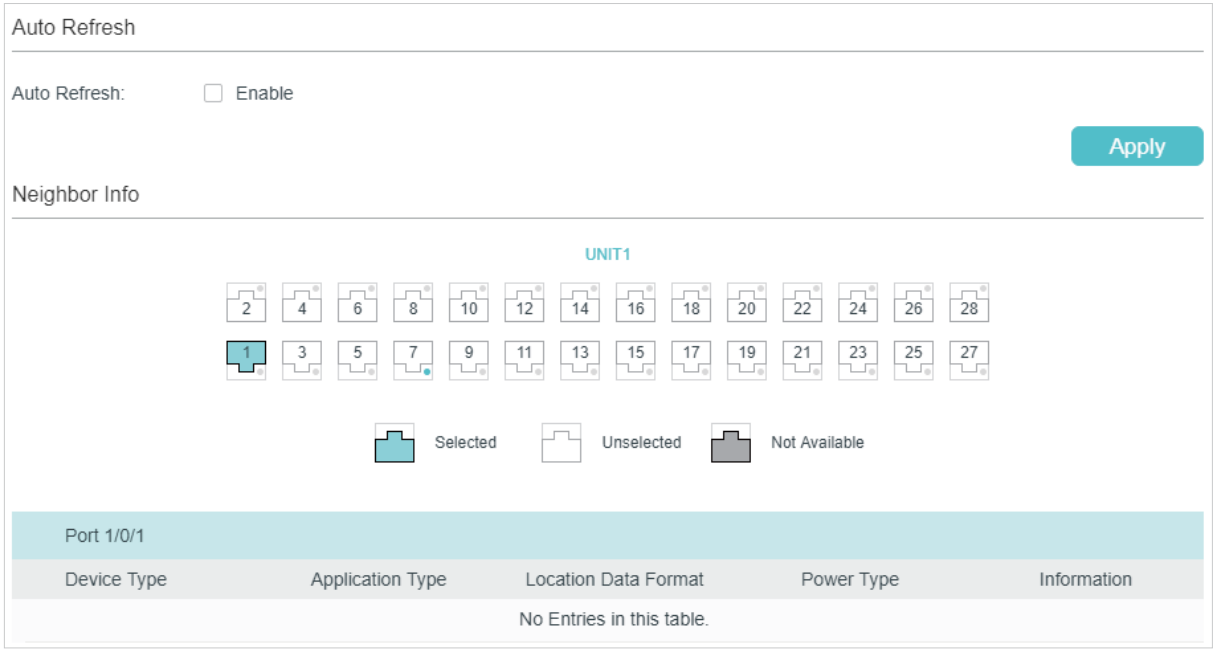

Follow these steps to view LLDP-MED neighgbor information:

1) In the **Auto Refresh** section, enable the Auto Refresh feature and set the Refresh Rate according to your needs. Click **Apply**.
2) In the **Neighbor Info** section, select the desired port and view the LLDP-MED settings.

Device Type	Displays the LLDP-MED device type of the neighbor device.
Application Type	Displays the application type of the neighbor device.

Location Data Format	Displays the location type of the neighbor device.
Power Type	Displays the power type of the neighbor device.
Information	View more LLDP-MED details of the neighbor device.

5.2 Using CLI

Viewing the Local Info

show lldp local-information interface { fastEthernet *port* **| gigabitEthernet** *port* **| ten-gigabitEthernet** *port* **}**

View the LLDP details of a specific port or all the ports on the local device.

Viewing the Neighbor Info

show lldp neighbor-information interface { fastEthernet *port* **| gigabitEthernet** *port* **| ten-gigabitEthernet** *port* **}**

Display the information of the neighbor device which is connected to the port.

Viewing LLDP Statistics

show lldp traffic interface { fastEthernet *port* **| gigabitEthernet** *port* **| tengigabitEthernet** *port* **}**

View the statistics of the corresponding port.

6 Configuration Examples


6.1 Example for LLDP

6.1.1 Network Requirements

The network administrator needs view the information of the devices in the company network to know about the link situation and network topology so that he can troubleshoot the potential network faults in advance.

Port Gi1/0/1 on Switch A is directly connected to port Gi1/0/2 on Switch B. Switch B is directly connected to the PC. The administrator can view the device information using the NMS.

Figure 6-1 LLDP Network Topology

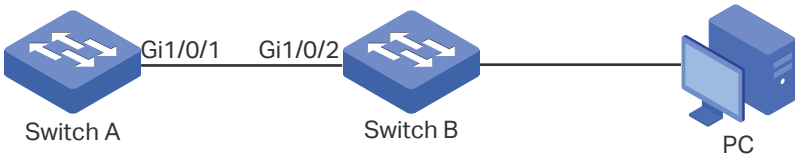

6.1.2 Configuration Scheme

LLDP can meet the network requirements. Enable the LLDP feature globally on Switch A and Switch B. Configure the related LLDP parameters on the corresponding ports.


Configuring Switch A and Switch B:

The configurations of Switch A and Switch B are similar. The following introductions take Switch A as an example. Demonstrated with T2600G-28TS, this chapter provides configuration procedures in two ways: using the GUI and using the CLI.

6.1.3 Using the GUI


1) Choose the menu **L2 FEATURES** > **LLDP** > **LLDP Config** > **Global Config** to load the following page. Enable LLDP globally and configure the related parameters. Here we take the default settings as an example.

Figure 6-2 LLDP Global Config

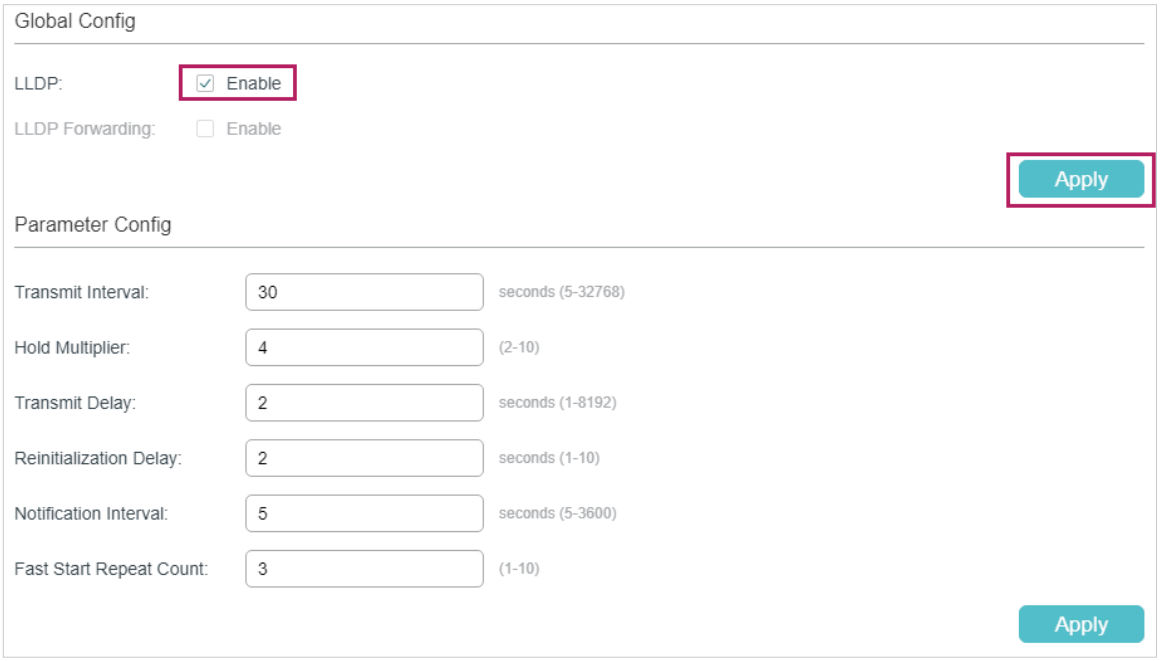

2) Choose the menu **L2 FEATURES** > **LLDP** > **LLDP Config** > **Port Config** to load the following page. Set the Admin Status of port Gi1/0/1 as Tx&Rx, enable Notification Mode and configure all the TLVs included in the outgoing LLDP packets.

Figure 6-3 LLDP Port Config

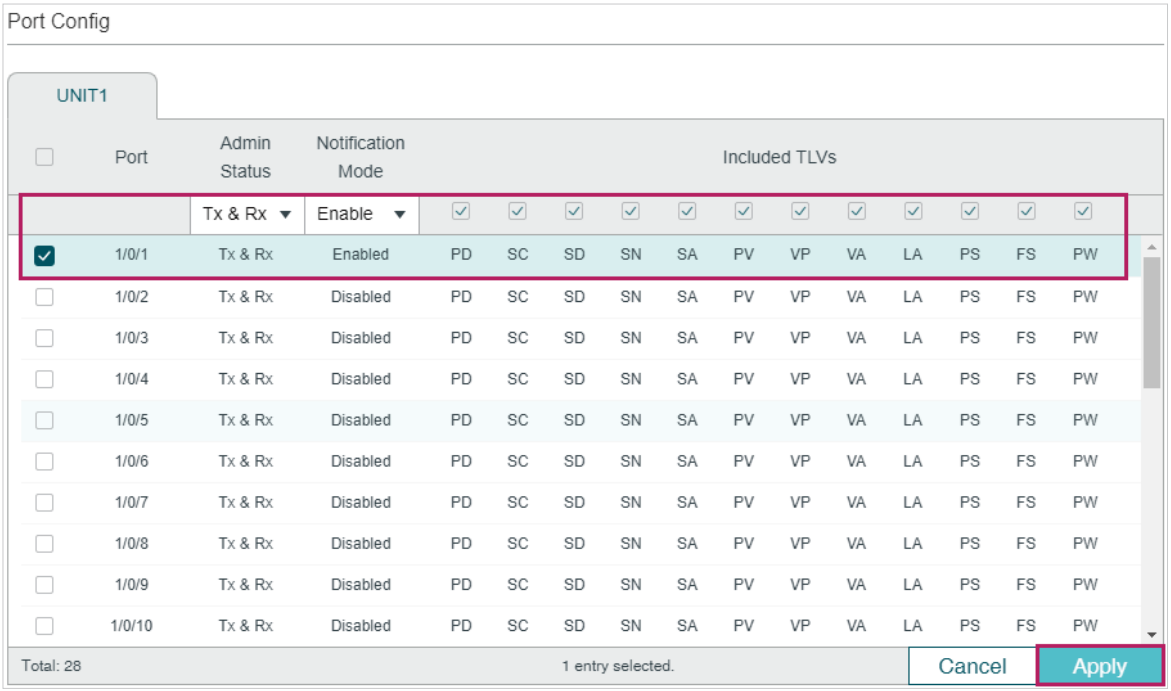

6.1.4 Using CLI

1) Enable LLDP globally and configure the corresponding parameters.

Switch_A#configure

Switch_A(config)#lldp

Switch_A(config)#lldp hold-multiplier 4

Switch_A(config)#lldp timer tx-interval 30 tx-delay 2 reinit-delay 3 notify-interval 5 fast-count 3

2) Set the Admin Status of port Gi1/0/1 to Tx&Rx, enable Notification Mode and configure all the TLVs included in the outgoing LLDP packets.

Switch_A#configure

Switch_A(config)#interface gigabitEthernet 1/0/1

Switch_A(config-if)#lldp receive

Switch_A(config-if)#lldp transmit

Switch_A(config-if)#lldp snmp-trap

Switch_A(config-if)#lldp tlv-select all

Switch_A(config-if)#end

Switch_A#copy running-config startup-config

Verify the Configurations

View LLDP settings globally

Switch_A#show lldp

LLDP Status:	Enabled
LLDP Forward Message:	Disabled
Tx Interval:	30 seconds
TTL Multiplier:	4
Tx Delay:	2 seconds
Initialization Delay:	2 seconds
Trap Notification Interval:	5 seconds
Fast-packet Count:	3
LLDP-MED Fast Start Repeat Count:	4

View LLDP settings on each port

Switch_A#show lldp interface gigabitEthernet 1/0/1

LLDP interface config:

gigabitEthernet 1/0/1:

Admin Status:	TxRx
SNMP Trap:	Enabled

TLV	Status
Port-Description	Yes
System-Capability	Yes
System-Description	Yes
System-Name	Yes
Management-Address	Yes
Port-VLAN-ID	Yes
Protocol-VLAN-ID	Yes
VLAN-Name	Yes
Link-Aggregation	Yes
MAC-Physic	Yes
Max-Frame-Size	Yes
Power	Yes

LLDP-MED Status: Disabled

TLV	Status
Network Policy	Yes
Location Identification	Yes
Extended Power Via MDI	Yes
Inventory Management	Yes

View the Local Info

Switch_A#show lldp local-information interface gigabitEthernet 1/0/1

LLDP local Information:

gigabitEthernet 1/0/1:

Chassis type:	MAC address
Chassis ID:	00:0A:EB:13:23:97
Port ID type:	Interface name
Port ID:	GigabitEthernet1/0/1
Port description:	GigabitEthernet1/0/1 Interface

TTL: 120

System name: T2600G-28TS

System description: JetStream 24-Port Gigabit L2 Managed Switch with 4 SFP Slots

System capabilities supported: Bridge Router

System capabilities enabled: Bridge Router

Management address type: ipv4

Management address: 192.168.0.226

Management address interface type: IfIndex

Management address interface ID: 1

Management address OID: 0

Port VLAN ID(PVID): 1

Port and protocol VLAN ID(PPVID): 0

Port and protocol VLAN supported: Yes

Port and protocol VLAN enabled: No

VLAN name of VLAN 1: System-VLAN

Protocol identity:

Auto-negotiation supported: Yes

Auto-negotiation enabled: Yes

OperMau: speed(1000)/duplex(Full)

Link aggregation supported: Yes

Link aggregation enabled: No

Aggregation port ID: 0

Power port class: PD

PSE power supported: No

PSE power enabled: No

PSE pairs control ability: No

Maximum frame size: 1518

LLDP-MED Capabilities: Capabilities

Network Policy

Location Identification

Inventory

Device Type: Network Connectivity

Application type: Reserved

Unknown policy: Yes

Tagged: No

VLAN ID: 0

Layer 2 Priority: 0

DSCP: 0

Location Data Format: Civic Address LCI

- What: Switch

- Country Code: CN

Hardware Revision: T2600G-28TS 3.0

Firmware Revision: Reserved

Software Revision: 3.0.0 Build 20170918 Rel.71414(s)

Serial Number: Reserved

Manufacturer Name: TP-Link

Model Name: T2600G-28TS 3.0

Asset ID: unknown

View the Neighbor Info

Switch_A#show lldp neighbor-information interface gigabitEthernet 1/0/1

LLDP Neighbor Information:

gigabitEthernet 1/0/1:

Neighbor index 1:

Chassis type: MAC address

Chassis ID: 00:0A:EB:13:18:2D

Port ID type: Interface name

Port ID: GigabitEthernet1/0/2

Port description: GigabitEthernet1/0/2 Interface

TTL: 120


System name:	T1600G-52PS
System description:	JetStream 48-Port Gigabit Smart PoE Switch with 4 SFP Slots
System capabilities supported:	Bridge Router
System capabilities enabled:	Bridge Router
Management address type:	ipv4
Management address:	192.168.0.1
Management address interface type:	IfIndex
Management address interface ID:	1
Management address OID:	0
Port VLAN ID(PVID):	1
Port and protocol VLAN ID(PPVID):	0
Port and protocol VLAN supported:	Yes
Port and protocol VLAN enabled:	No
VLAN name of VLAN 1:	System-VLAN
Protocol identity:	
Auto-negotiation supported:	Yes
Auto-negotiation enabled:	Yes
OperMau:	speed(1000)/duplex(Full)
Link aggregation supported:	Yes
Link aggregation enabled:	No
Aggregation port ID:	0
Power port class:	PSE
PSE power supported:	Yes
PSE power enabled:	Yes
PSE pairs control ability:	No

6.2 Example for LLDP-MED

6.2.1 Network Requirements

As the following figure shows, an IP phone and a PC are both connected to port 1/0/1 of the switch. It is required that the voice data stream is sent to VLAN2 and other untagged data stream is sent to the default VLAN1.

Figure 6-1 LLDP-MED Network Topology

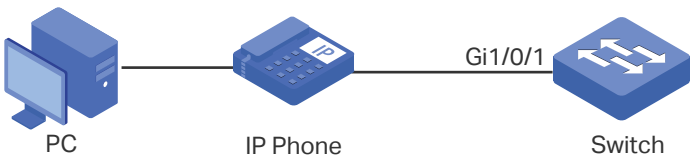

6.2.2 Configuration Scheme

LLDP-MED allows the switch to send its Auto VoIP information to the IP phones for auto-configuration. In this example, you can configure Auto VoIP and LLDP-MED to meet the network requirements.

The configuration overview is as follows:


3) Create VLAN2 for the voice data and keep the PVID of port 1/0/1 as the default value 1. In this way, all the untagged packets from the PC are sent to VLAN1; all the packets with VLAN Tag 2 from the IP phone are sent to VLAN2.
4) Configure Auto VoIP on port 1/0/1.
5) Enable LLDP globally.
6) Configure LLDP-MED on port 1/0/1.

Demonstrated with T1600G-28TS, this chapter provides configuration procedures in two ways: using the GUI and using the CLI.

6.2.3 Using the GUI


1) Choose the menu **L2 FEATURES** > **VLAN** > **802.1Q VLAN** > **VLAN Config** and click Add to load the following page. Specify VLAN ID as 2, give a VLAN name, and select port 1/0/1 as untagged member port. Click **Create**.

Figure 6-2 VLAN Config

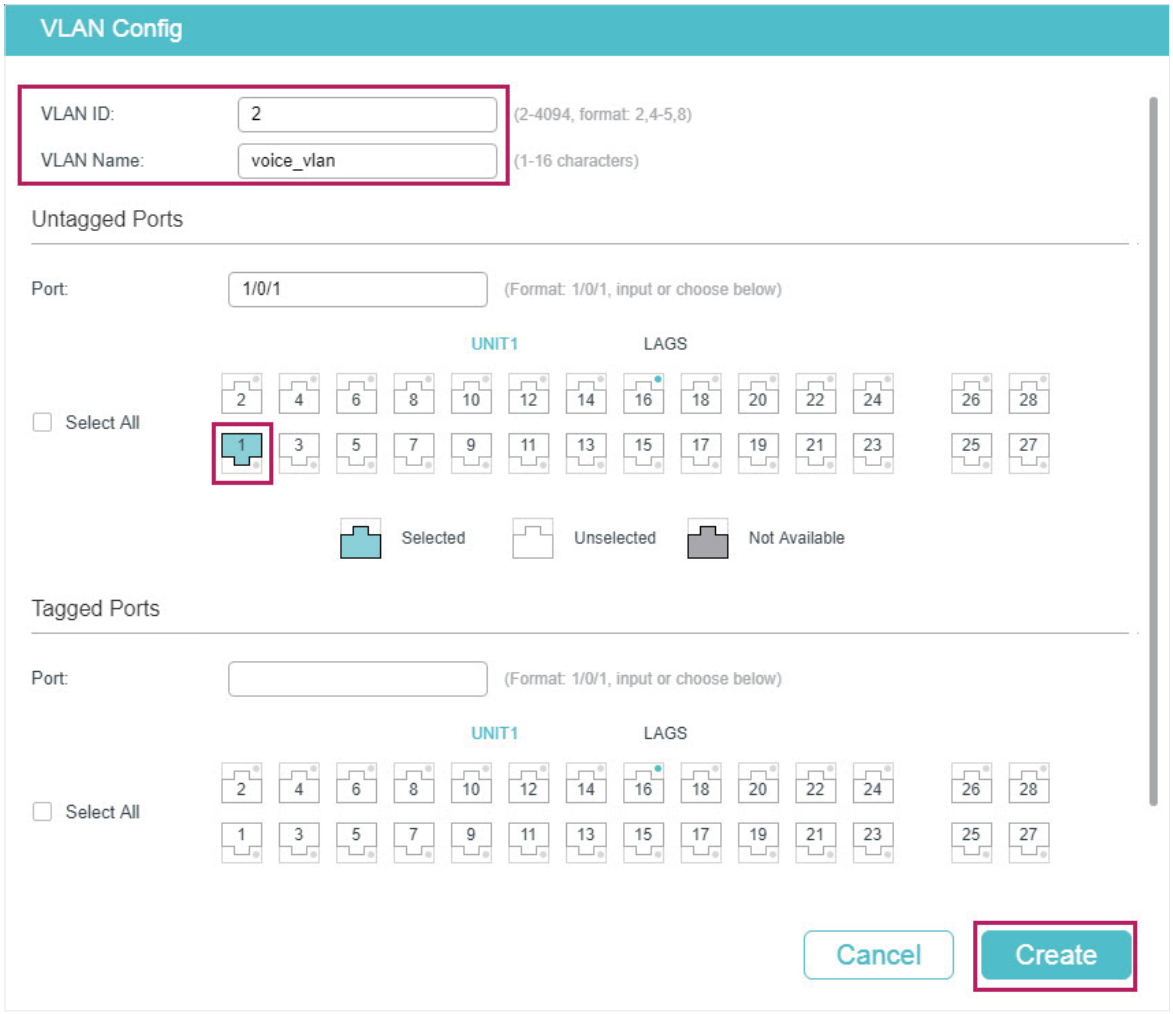


2) Choose the menu **QoS > Auto VoIP** to load the following page. Select port 1/0/1, configure the interface mode as VLAN ID and set the VLAN ID value as 2. Click **Apply**.

Figure 6-3 Auto VoIP Config

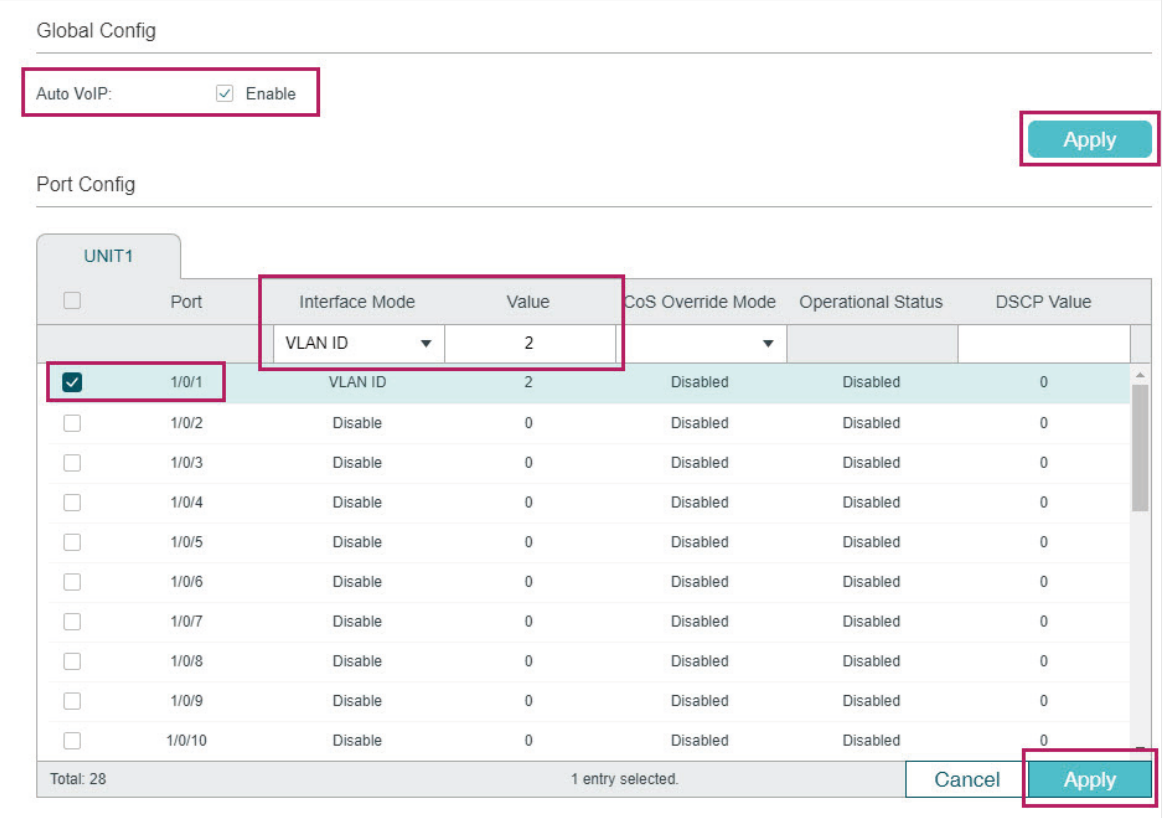


3) Choose the menu **L2 FEATURES** > **LLDP** > **LLDP Config** > **Global Config** to load the following page. Enable LLDP globally and click **Apply**.

Figure 6-4 LLDP Global Config

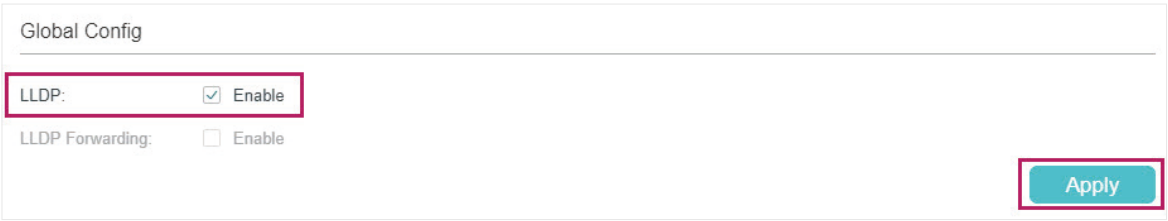

4) Choose the menu **L2 FEATURES** > **LLDP** > **LLDP Config** >**Global Config** > **Port Config** to load the following page. Enable LLDP-MED on port 1/0/1 and click **Apply**.

Figure 6-5 LLDP-MED Config

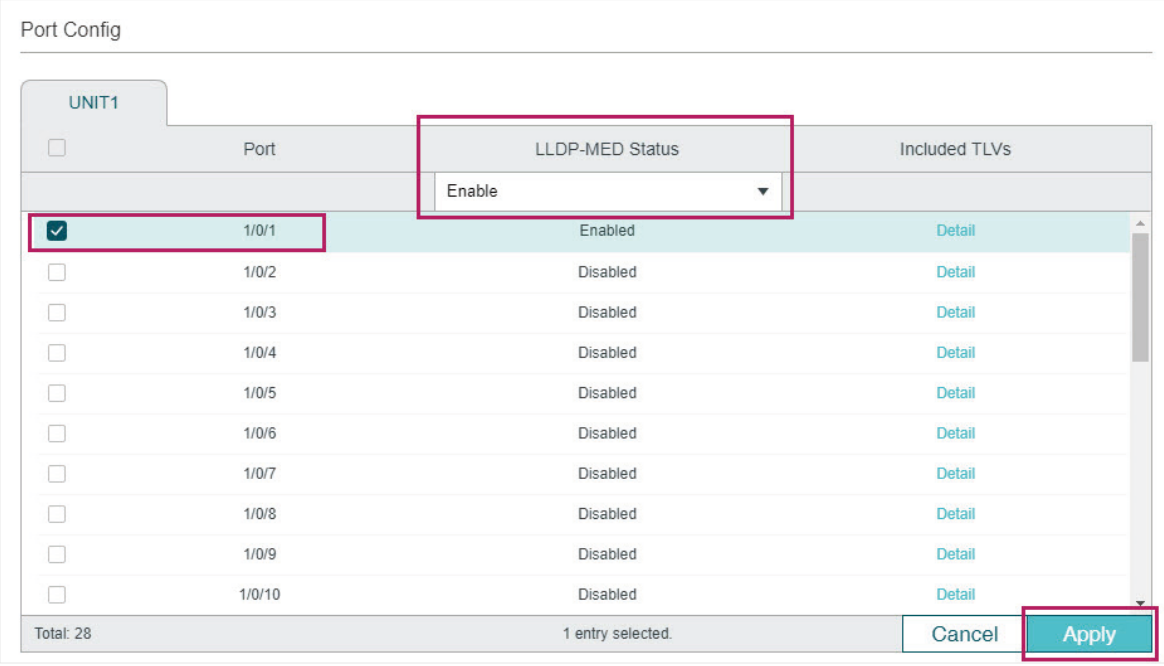

5) Click Save to save the settings.

6.2.4 Using CLI

1) Create VLAN2 and add untagged port 1/0/1 to VLAN2.

Switch#configure

Switch(config)#vlan 2

Switch(config-vlan)#name voice_vlan

Switch(config-vlan)#exit

Switch(config)#interface gigabitEthernet 1/0/1

Switch(config-if)#switch general allowed vlan 2 untagged

Switch(config-if)#exit

2) Enable Auto VoIP globally.

Switch(config)#auto-voip

3) Configure Auto VoIP. On port 1/0/1, configure the interface mode as VLAN ID and set the VLAN ID value as 2.

Switch(config)#interface gigabitEthernet 1/0/1

Switch(config-if)#auto-voip 2

Switch(config-if)#exit

4) Enable LLDP globally.

Switch(config)#lldp

5) Enable LLDP-MED on port 1/0/1.

```
Switch(config)#interface gigabitEthernet 1/0/1
Switch(config-if)#lldp med-status
Switch(config-if)#end
Switch#copy running-config startup-config
```

Verify the Configurations

View VLAN settings:

```
Switch#show vlan
VLAN  Name                Status    Ports
-----  -------------------  ---------  ---------------------------------------
1       System-VLAN       active    Gi1/0/1, Gi1/0/2, Gi1/0/3, Gi1/0/4,
                                    Gi1/0/5, Gi1/0/6, Gi1/0/7, Gi1/0/8,
                                    Gi1/0/9, Gi1/0/10, Gi1/0/11, Gi1/0/12,
                                    Gi1/0/13, Gi1/0/14, Gi1/0/15, Gi1/0/16,
                                    Gi1/0/17, Gi1/0/18, Gi1/0/19, Gi1/0/20,
                                    Gi1/0/21, Gi1/0/22, Gi1/0/23, Gi1/0/24,
                                    Gi1/0/25, Gi1/0/26, Gi1/0/27, Gi1/0/28
2    voice_vlan             active     Gi1/0/1
```

View VoIP settings:

```
Switch#show auto-voip interface
Interface.Gi1/0/1
Auto-VoIP Interface Mode.        Enabled
Auto-VoIP VLAN ID.               2
Auto-VoIP COS Override.          False
Auto-VoIP DSCP Value.            0
Auto-VoIP Port Status.           Enabled
...
```

View global LLDP settings:

```
Switch_A#show lldp
 LLDP Status:              Enabled
 LLDP Forward Message:     Disabled
 ...
```

View LLDP-MED settings on port 1/0/1:

```
Switch_A#show lldp interface gigabitEthernet 1/0/1
LLDP interface config:
gigabitEthernet 1/0/1:
...
LLDP-MED Status:          Enabled
TLV                       Status
---                       ------
Network Policy            Yes
Location Identification   Yes
Extended Power Via MDI    Yes
Inventory Management      Yes
```

7 Appendix: Default Parameters

Default settings of LLDP are listed in the following tables.

Default LLDP Settings

Table 7-1 Default LLDP Settings

Parameter	Default Setting
LLDP	Disable
LLDP Forward Message	Disable
Transmit Interval	30 seconds
Hold Multiplier	4
Transmit Delay	2 seconds
Reinitialization Delay	2 seconds
Notification Interval	5 seconds
Fast Start Repeat Count	3

Table 7-2 Default LLDP Settings on the Port

Parameter	Default Setting
Admin Status	Tx&Rx
Notification Mode	Disable
Included TLVs	All

Default LLDP-MED Settings

Table 7-3 Default LLDP-MED Settings

Parameter	Default Setting
Fast Start Repeat Count	4
LLDP-MED Status (port)	Disable
Included TLVs	All

Part 16

Configuring L2PT

CHAPTERS

1. Overview
2. L2PT Configuration
3. Configuration Example
4. Appendix: Default Parameters


1 Overview

L2PT (Layer 2 Protocol Tunneling) is a feature for service providers to transparently transmit Layer 2 protocol data units (PDUs) between customer networks at different locations through a public ISP network. Some terminology that is used in this section is defined as follows:

- Edge Switch: The switch that is connected to the customer network and placed on the boundary of the ISP network.
- UNI: User Network Interface, a port configured on the edge switch which is connected to the customer network.
- NNI: Network Network Interface, a port configured on the edge switch which is connected to the ISP network.

As shown in Figure 1-1, a customer has two local networks which are connected through the ISP network. When the two customer networks run the same Layer 2 protocol, the Layer 2 PDUs between them must be transmitted through the ISP network to perform Layer 2 protocol calculation (for example, calculating a spanning tree). Generally, the PDUs of the same Layer 2 protocol use the same destination MAC address. Therefore, when a Layer 2 PDU from a customer network reaches a edge switch in the ISP network, the switch cannot identify whether the PDU comes from a customer network or the ISP network and then the PDU will be discarded. As a result, the Layer 2 PDUs cannot be transmitted through the ISP network to the other side.

Figure 1-1 L2PT Application

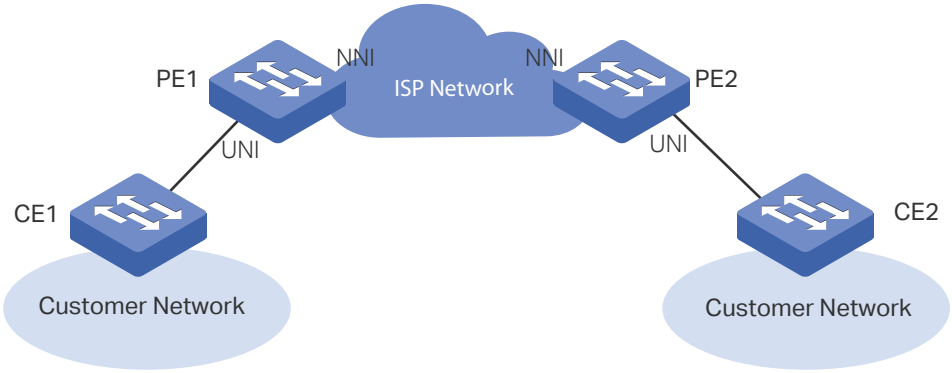

To resolve this problem, the ISP network should transparently transmit the Layer 2 PDUs between the two customer networks. In this case, L2PT feature can be configured on the edge switches (PE1 and PE2) to allow the Layer 2 PDUs to be tunneled through the network.

The following describes the PDUs transmission procedure through the ISP network from one customer network to the other side:

1) Upon receiving a Layer 2 PDU from CE1 via the UNI port, PE1 replaces the destination MAC address of the PDU with a special multicast MAC address (01:00:0c:cd:cd: d0) and then sends the PDU to the ISP network via the NNI port.
2) The ISP network identifies the PDU and directly forwards it to the other end.
3) PE2 receives the PDU via its NNI port and restores the destination MAC address of the PDU to its original destination MAC address.


With L2PT feature configured accordingly, the switch can transparently transmit the PDUs of the following Layer 2 protocols: STP (Spanning Tree Protocol), GVRP (GARP VLAN Registration Protocol), LACP (Link Aggregation Control Protocol), CDP (Cisco Discovery Protocol), VTP (VLAN Trunking Protocol), PAgP (Port Aggregation Protocol), UDLD (UniDirectional Link Detection) and PVST+(Per VLAN Spanning Tree Plus).

2 L2PT Configuration

2.1 Using the GUI

Choose the menu **L2 FEATURES > L2PT** to load the following page.

Figure 2-1 Configuring L2PT

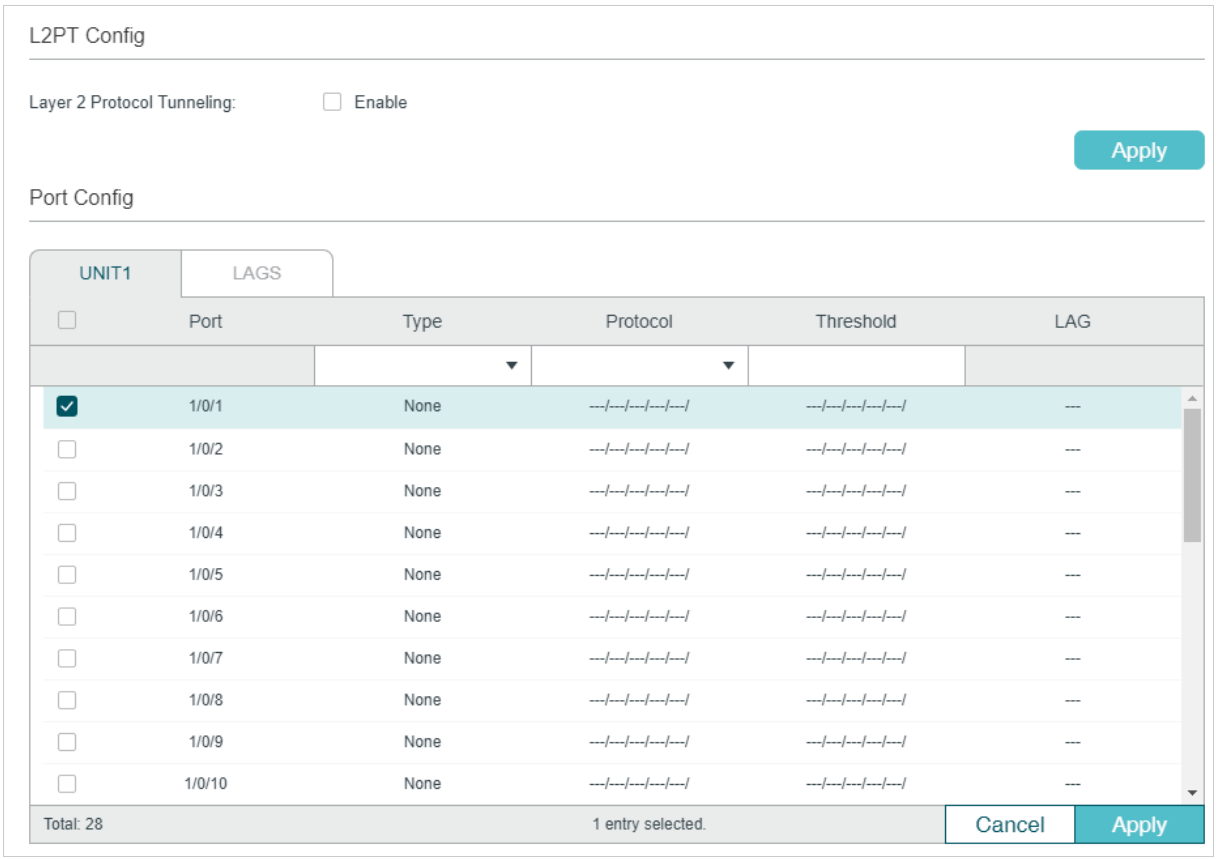

Follow these steps to configure L2PT:

1) In the **L2PT Config** section, enable L2PT globally and click **Apply**.
2) In the **Port Config** section, configure the port that is connected to the customer network as a UNI port and specify your desired protocols on the port. In addition, you can also set the threshold for packets-per-second to be processed on the UNI port.

Port	Displays the port number.
Type	Select **UNI** as the port type for the selected port. Usually, the UNI port is connected to the customer network. The default setting is **None** which indicates that L2PT is disabled on this port.

Protocol	Specify the Layer 2 protocol types of the packets that can be transparently transmitted on the selected port: **STP**: Enable protocol tunneling for the STP packets. **GVRP**: Enable protocol tunneling for the GVRP packets. **01000CCCCCCC**: Enable protocol tunneling for the packets with their destination MAC address as 01000CCCCCCC, which includes CDP, VTP, PAgP and UDLD. **01000CCCCCCD**: Enable protocol tunneling for the PVST+ packets with the destination MAC address as 01000CCCCCCD. **LACP**: Enable protocol tunneling for the LACP packets. **All**: All the above Layer 2 protocols are supported for tunneling.
Threshold	Specify the maximum number of packets to be processed for the specified protocol on the port in one second. When the threshold is exceeded, the port drops the specified Layer 2 protocol packets. This value ranges from 1 to 1000 (packets per second). 0 indicates that the threshold feature is disabled.
LAG	Displays the LAG that the port is in.

3) In the **Port Config** section, configure the port that is connected to the ISP network as an NNI port. Note that the protocols and threshold cannot be configured on the NNI port.

Port	Displays the port number.
Type	Select **NNI** as the port type for the selected port. Usually, NNI port is connected to the ISP network. The default setting is **None**, which indicates that L2PT is disabled on this port.
LAG	Displays the LAG that the port is in.

4) Click **Apply**.

Note:

The member port of an LAG (Link Aggregation Group) follows the configuration of the LAG and not its own. The configurations of the port can take effect only after it leaves the LAG.

2.2 Using the CLI

Follow these steps to configure L2PT feature.

Step 1	**configure** Enter global configuration mode.

Step 2	**l2protocol-tunnel** Enable the L2PT feature globally.
Step 3	**interface { fastEthernet** *port* **| range fastEthernet** *port-list* **| gigabitEthernet** *port* **| range gigabitEthernet** *port-list* **| ten-gigabitEthernet** *port* **| range ten-gigabitEthernet** *port-list* **| port-channel** *port-channel-id* **| range port-channel** *port-channel-id-list* **}** Enter interface configuration mode.
Step 4	**l2protocol-tunnel type uni {** 01000cccccc | 01000ccccccd | gvrp | stp | lacp | all **} [threshold** *threshold* **]** Configure the port as a UNI port, specify the Layer 2 protocol types of the packets that can be transparently transmitted on the port, and set the threshold for packets-per-second accepted for encapsulation on the UNI port. 01000cccccc: Enable protocol tunneling for the packets with their destination MAC address as 01000CCCCCCC, which includes CDP, VTP, PAgP and UDLD. 01000ccccccd: Enable protocol tunneling for the PVST+ packets with the destination MAC address as 01000CCCCCCD. gvrp: Enable protocol tunneling for the GVRP packets. stp: Enable protocol tunneling for the STP packets. lacp: Enable protocol tunneling for the LACP packets. all: All the above Layer 2 protocols are supported for tunneling. *threshold:* Set a threshold which determines the maximum number of packets to be processed for the specified protocol on the port in one second. When the threshold is exceeded, the port drops the specified Layer 2 protocol packets. The valid values are from 1 to 1000 (packets/second). 0 indicates that the threshold feature is disabled.
Step 5	**exit** Return to global configuration mode.
Step 6	**interface { fastEthernet** *port* **| range fastEthernet** *port-list* **| gigabitEthernet** *port* **| range gigabitEthernet** *port-list* **| ten-gigabitEthernet** *port* **| range ten-gigabitEthernet** *port-list* **| port-channel** *port-channel-id* **| range port-channel** *port-channel-id-list* **}** Enter interface configuration mode.
Step 7	**l2protocol-tunnel type nni** Configure the port as an NNI port.
Step 8	**show l2protocol-tunnel global** Verify the global L2PT configuration.
Step 9	**show l2protocol-tunnel interface [fastEthernet** *port* **| gigabitEthernet** *port* **| ten-gigabitEthernet** *port* **| port-channel** *port-channel-id* **]** Verify the L2PT configuration of the port or LAG.

Step 10	**end** Return to privileged EXEC mode.
Step 11	**copy running-config startup-config** Save the settings in the configuration file.

Note:

The member port of an LAG (Link Aggregation Group) follows the configuration of the LAG and not its own. The configurations of the port can take effect only after it leaves the LAG.

This example shows how to enable L2PT globally:

Switch#configure

Switch(config)#l2protocol-tunnel

Switch(config)#show l2protocol-tunnel global

l2protocol-tunnel State: Enable

Switch(config)#end

Switch#copy running-config startup-config

This example shows how to configure port 1/0/1 as a UNI port for the Layer 2 protocol GVRP and set the threshold as 1000:

Switch#configure

Switch(config)#interface gigabitEthernet 1/0/1

Switch(config-if)#l2protocol-tunnel type uni gvrp **threshold** 1000

Switch(config-if)#show l2protocol-tunnel interface gigabitEthernet 1/0/1

Interface	Type	Protocol	Threshold	LAG
---	---	---	---	---
Gi1/0/1	uni	gvrp,--,--,--,--	1000,--,--,--,--	N/A

Switch(config-if)#end

Switch#copy running-config startup-config

This example shows how to configure port 1/0/5 as an NNI port.

Switch#configure

Switch(config)#interface gigabitEthernet 1/0/5

Switch(config-if)#l2protocol-tunnel type nni

Switch(config-if)#show l2protocol-tunnel interface gigabitEthernet 1/0/5

Interface	Type	Protocol	Threshold	LAG
---	---	---	---	---
Gi1/0/5	nni	--,--,--,--,--	--,--,--,--,--	N/A

Switch(config-if)#end


Switch#copy running-config startup-config

3 Configuration Example

3.1 Network Requirements

As shown below, the two branches of a company are connected through the ISP network, and they want to achieve spanning tree calculation by exchanging Layer 2 STP packets with each other. To meet this requirement, the ISP network needs to transparently transmit the STP packets between the two customer networks.

Figure 3-1 Network Topology

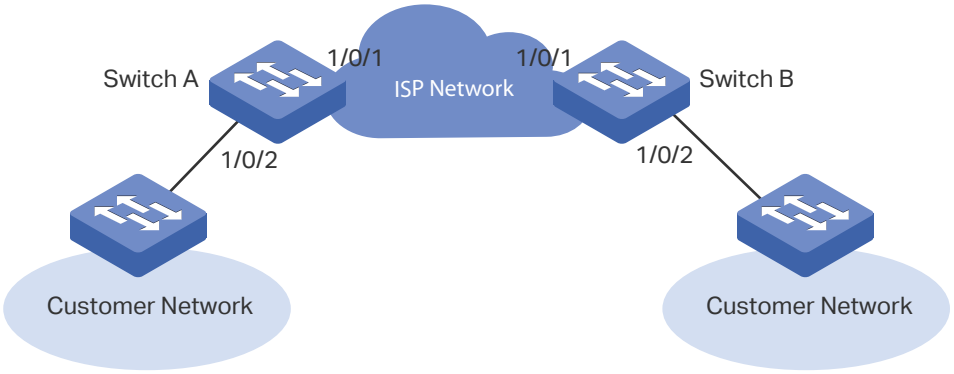

3.2 Configuration Scheme

The service provider can configure L2PT on the two edge switches (Switch A and Switch B). With the L2PT feature, the STP packets can be encapsulated as normal data packets and sent to the other side without being processed by the devices in the ISP network.

The overview of configuration is as follows:

1) Enable the L2PT feature globally.
2) Specify port 1/0/1 which is connected to the ISP network as an NNI port.
3) Specify port 1/0/2 which is connected to the customer network as a UNI port for the STP. In addition, configure the threshold as 1000 to limit the number of packets to be processed on the port in one second.

Demonstrated with T2600G-28TS, the following sections provide configuration procedure in two ways: using the GUI and using the CLI.


3.3 Using the GUI

The configurations of Switch A and Switch B are similar. The following introductions take Switch A as an example.

1) Choose the menu **L2 FEATURES > L2PT** to load the following page. Enable the L2PT feature globally and click **Apply**.

2) Specify port 1/0/1 as an NNI port and click **Apply**. Specify port 1/0/2 as a UNI port for the STP and set the threshold as 1000. Then click **Apply**. The configuration result is as follows:

Figure 3-2 Global Config

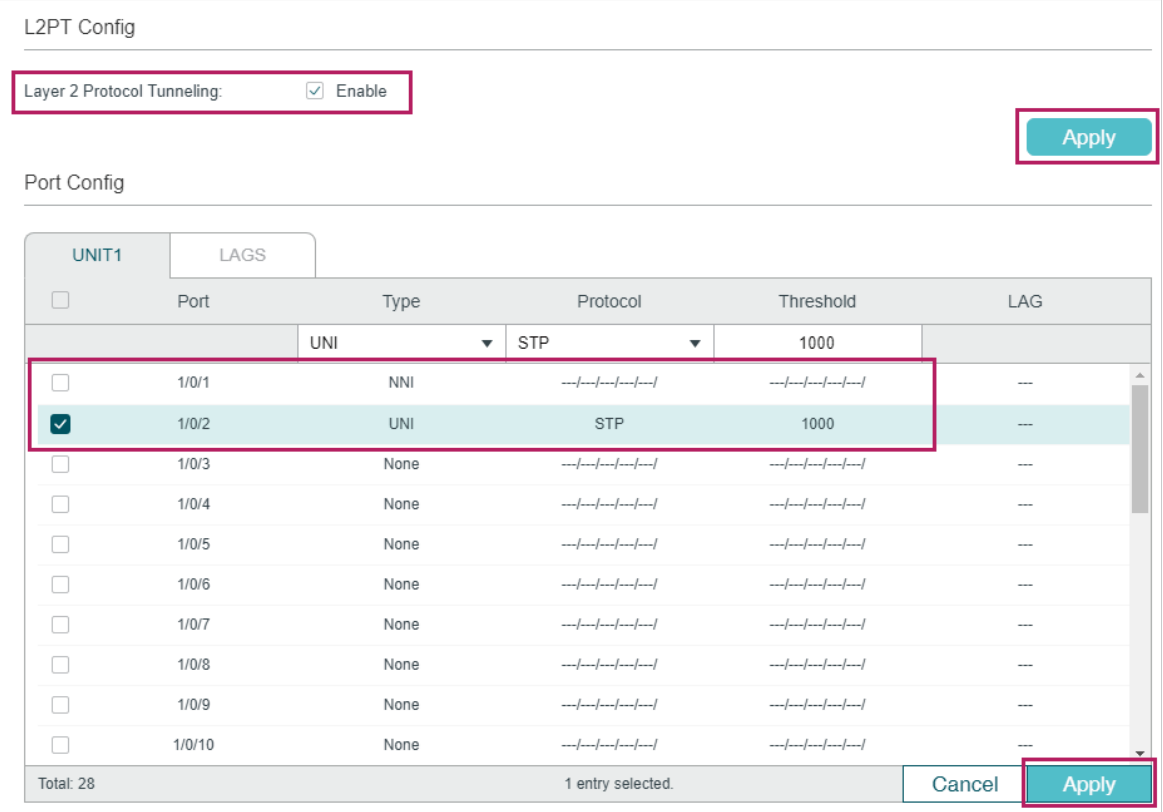

3) Click Save to save the settings.

3.4 Using the CLI

The configurations of Switch A and Switch B are similar. The following introductions take Switch A as an example.

Switch_A#configure

Switch_A(config)#l2protocol-tunnel

Switch_A(config)#interface gigabitEthernet 1/0/1

Switch_A(config-if)#l2protocol-tunnel type nni

Switch_A(config-if)#exit

Switch_A(config)#interface gigabitEthernet 1/0/2

Switch_A(config-if)#l2protocol-tunnel type uni stp 1000

```
Switch_A(config-if)#end
Switch_A#copy running-config startup-config
```

Verify the Configuration

Verify the global configuration:

```
Switch_A#show l2protocol-tunnel global
l2protocol-tunnel State:        Enable
```

Verify the configuration on port 1/0/1:

```
Switch_A#show l2protocol-tunnel interface gigabitEthernet 1/0/1
Interface       Type       Protocol        Threshold         LAG
---------       ----       --------        ---------         ----
Gi1/0/1          nni       --,--,--,--,--  --,--,--,--,--    N/A
```

Verify the configuration on port 1/0/2:

```
Switch_A#show l2protocol-tunnel interface gigabitEthernet 1/0/2
Interface       Type       Protocol          Threshold          LAG
---------       ----       --------          ---------          ----
Gi1/0/2          uni       stp,--,--,--,--   1000,--,--,--,--   N/A
```

4 Appendix: Default Parameters

Default settings of L2PT are listed in the following table.

Table 4-1 Default Settings of L2PT

Parameter	Defualt Setting
L2PT Config	
Layer 2 Protocol Tunneling	Disable
Port Config	
Type	None
Protocol	None
Threshold	None

Part 17

Configuring PPPoE ID Insertion

CHAPTERS

1. Overview
2. PPPoE ID Insertion Configuration
3. Appendix: Default Parameters


1 Overview

In common PPPoE dialup mode, when users dial up through PPPoE, they can access the network as long as their accounts are authenticated successfully on the RADIUS server. As a result, the illegal users can embezzle the accounts to access the Internet.

PPPoE ID Insertion provides a way to resolve this problem. With this feature enabled, the switch attaches a tag to the PPPoE Active Discovery packets received from the client, and sends it to the BRAS (Broadband Remote Access Server). The tag records the client information, such as the connected port number and the MAC address of the client. The BRAS uses the tag as a NAS-Port-ID attribute in the RADIUS packet and send it to the RADIUS server for PPP (Point-to-Point Protocol) authentication. If the tag information is different from the configured one, the authentication will fail. In this way, the illegal users cannot embezzle the accounts of legal users to access the Internet.

Additionally, after receiving the PPPoE Active Discovery Offer packet or Session-confirmation packet from the BRAS, the switch will remove the tag in the packet and send it to the client.

Figure 1-1 Network Topology of PPPoE ID-Insertion

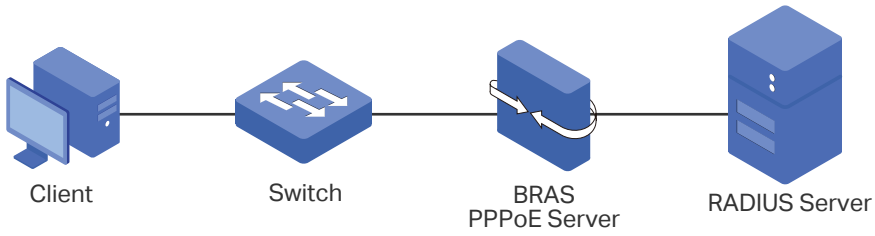


2 PPPoE ID Insertion Configuration

2.1 Using the GUI

Choose the menu **L2 FEATURES > PPPoE** to load the following page.

Figure 2-1 Configuring PPPoE ID Insertion

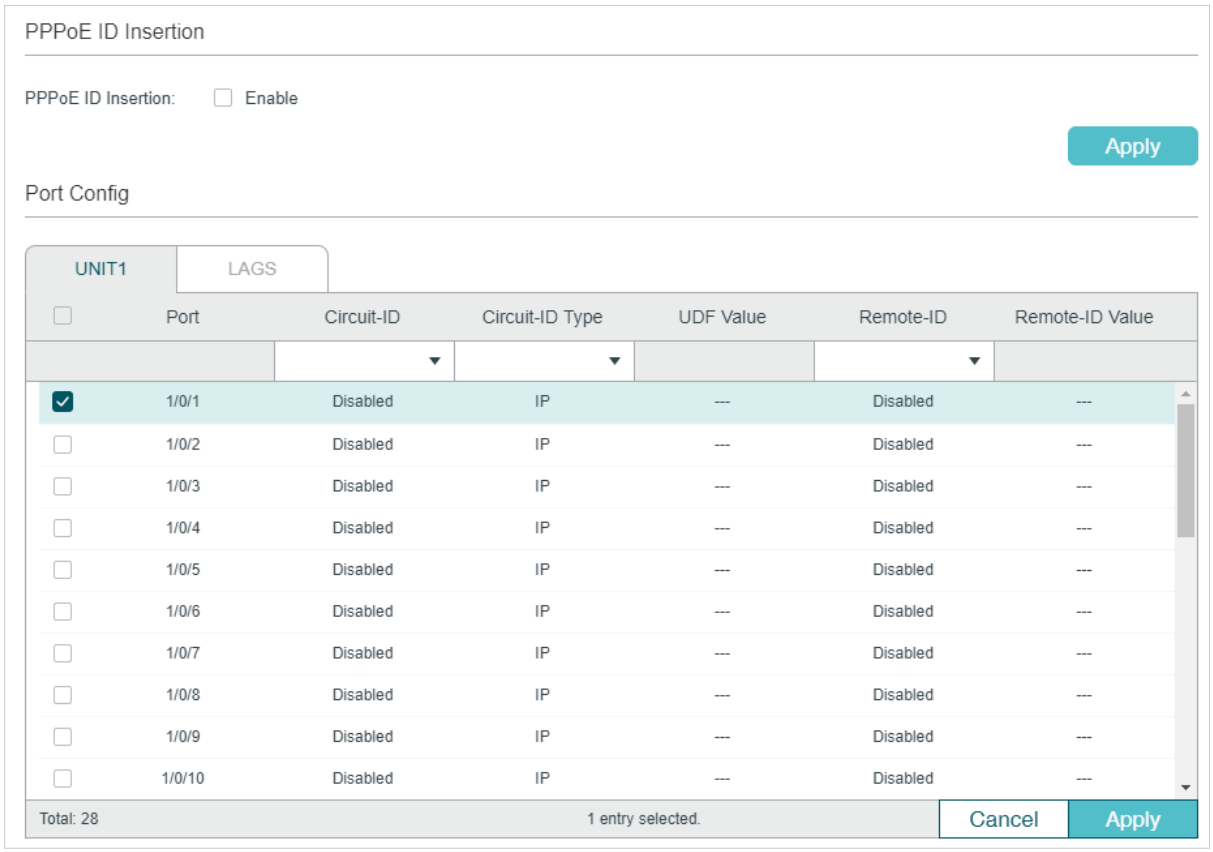

Follow these steps to configure PPPoE ID-Insertion:

1) In the **PPPoE ID Insertion** section, enable PPPoE ID Insertion and click **Apply**.
2) In the **Port Config** section, select one or more ports, and configure the relevant parameters. Then click **Apply**.

Circuit-ID	Enable or disable the Circuit-ID Insertion feature. With this option enabled, the switch will insert a Circuit ID to the received PPPoE Discovery packet on this port.
Circuit-ID Type	Select the type of the Circuit ID. The following options are provided: **IP**: The circuit ID includes the following three parts: the source MAC address of the received packet, the IP address of the switch and the port number. This is the default value. **MAC**: The circuit ID includes the following three parts: the source MAC address of the packet, the MAC address of the switch and the port number. **UDF**: The circuit ID includes the following three parts: the source MAC address of the packet, the user-specified string and the port number. **UDF Only**: Only the user specified string will be used to encode the Circuit-ID option.
UDF Value	If UDF or UDF Only is selected, specify a string with at most 40 characters to encode the Circuit-ID option.
Remote-ID	Enable or disable the Remote-ID Insertion feature. With this option enabled, the switch will insert a Remote ID to the received PPPoE Discovery packet on this port.
Remote-ID Value	Specify a string with at most 40 characters to encode the Remote-iID option.

Note:

The member port of an LAG (Link Aggregation Group) follows the configuration of the LAG and not its own. The configurations of the port can take effect only after it leaves the LAG.

2.2 Using the CLI

Follow these steps to configure PPPoE ID Insertion:

Step 1	**configure** Enter global configuration mode.
Step 2	**pppoe id-insertion** Globally enable the PPPoE ID Insertion feature.
Step 3	**interface { fastEthernet** *port* **| range fastEthernet** *port-list* **| gigabitEthernet** *port* **| range gigabitEthernet** *port-list* **| ten-gigabitEthernet** *port* **| range ten-gigabitEthernet** *port-list* **}** Enter interface configuration mode.
Step 4	**pppoe circuit-id** Enable Circuit-ID Insertion feature, and the switch will insert a Circuit ID to the received PPPoE Discovery packet on this port.

Step 5	**pppoe circuit-id type {** mac | ip | udf [*Value*] | udf-only [*Value*] **}** Specify the type of the Circuit ID. The following options are provided: mac: The source MAC address of the packet, the MAC address of the switch and the port number will be used to encode the Circuit-ID option. ip: The circuit ID includes the following three parts: the source MAC address of the received packet, the IP address of the switch and the port number. This is the default value. udf [*Value*]: Specify a string with at most 40 characters. The circuit ID includes the following three parts: the source MAC address of the packet, the user-specified string and the port number. udf-only [*Value*]: Specify a string with at most of 40 characters. Only the specified string will be used to encode the Circuit-ID option.
Step 6	**pppoe remote-id** [*Value*] Enable Remote-ID Insertion feature and specify the Remote ID. *Value*: Specify a string with at most 40 characters. The source MAC address of the packet and the specified string will be used to encode the Remote-ID option.
Step 7	**show pppoe id-insertion global** Verify the global configuration of PPPoE ID Insertion.
Step 8	**show pppoe id-insertion interface { fastEthernet** *port* **| gigabitEthernet** *port* **| ten-gigabitEthernet** *port***}** Verify the configuration of PPPoE ID Insertion on the port.
Step 9	**end** Return to privileged EXEC mode.
Step 10	**copy running-config startup-config** Save the settings in the configuration file.

The following example shows how to enable PPPoE ID Insertion globally and on port 1/0/1, and configure the Circuit-ID as 123 without other information and Remote-ID as host1.

Switch#configure

Switch(config)#pppoe id-insertion

Switch(config-if)#interface gigabitEthernet 1/0/1

Switch(config-if)#pppoe circuit-id

Switch(config-if)#pppoe circuit-id type udf-only 123

Switch(config-if)#pppoe remote-id host1

Switch(config-if)#show pppoe id-insertion global

PPPoE ID Insertion State: Enabled

Switch(config-if)#show pppoe id-insertion interface gigabitEthernet 1/0/1

Port	Circuit-ID	C-ID Type	C-ID Value(UDF)	Remote-ID	R-ID Value
Gi1/0/1	Enabled	UDF-ONLY	123	Enabled	host1

Switch(config-if)#end

Switch#copy running-config startup-config

Note:

The member port of an LAG (Link Aggregation Group) follows the configuration of the LAG and not its own. The configurations of the port can take effect only after it leaves the LAG.

3 Appendix: Default Parameters

Default settings of L2PT are listed in the following table.

Table 3-1 PPPoE ID Insertion

Parameter	Default Setting
Global Config	
PPPoE ID Insertion	Disable
Port Config	
Circuit-ID	Disable
Circuit-ID Type	IP
UDF Value	None
Remote-ID	Disable
Remote-ID Value	None

Part 18

Configuring Layer 3 Interfaces

CHAPTERS

1. Overview
2. Layer 3 Interface Configurations
3. Appendix: Default Parameters

1 Overview

Interfaces are used to exchange data and interact with interfaces of other network devices. Interfaces are classified into Layer 2 interfaces and Layer 3 interfaces.

- Layer 2 interfaces are the physical ports on the switch panel. They forward packets based on MAC address table.
- Layer 3 interfaces are used to forward IPv4 and IPv6 packets using static or dynamic routing protocols. You can use Layer 3 interfaces for IP routing and inter-VLAN routing.

This chapter introduces the configurations for Layer 3 interfaces. The supported types of Layer 3 interfaces are shown as below:

Table 1-1 Supported Types of Layer 3 interfaces

Type	Description
VLAN Interface	A Layer 3 interface with which acts as the default gateway of all the hosts in the corresponding VLAN.
Loopback Interface	An interface of which the status is always up.
Routed Port	A physical port configured as a Layer 3 port.
Port-channel Interface	Several routed ports are bound together and configured as a Layer 3 interface.

2 Layer 3 Interface Configurations

To complete IPv4 interface configuration, follow these steps:

1) Create a Layer 3 interface
2) Configure IPv4 parameters of the created interface
3) View detailed information of the created interface

To complete IPv6 interface configuration, follow these steps:


1) Create a Layer 3 interface
2) Configure IPv6 parameters of the created interface
3) View detailed information of the created interface

2.1 Using the GUI

2.1.1 Creating a Layer 3 Interface

Choose the menu **L3 FEATURES> Interface** to load the following page.

Figure 2-1 Creating a Layer 3 Interface

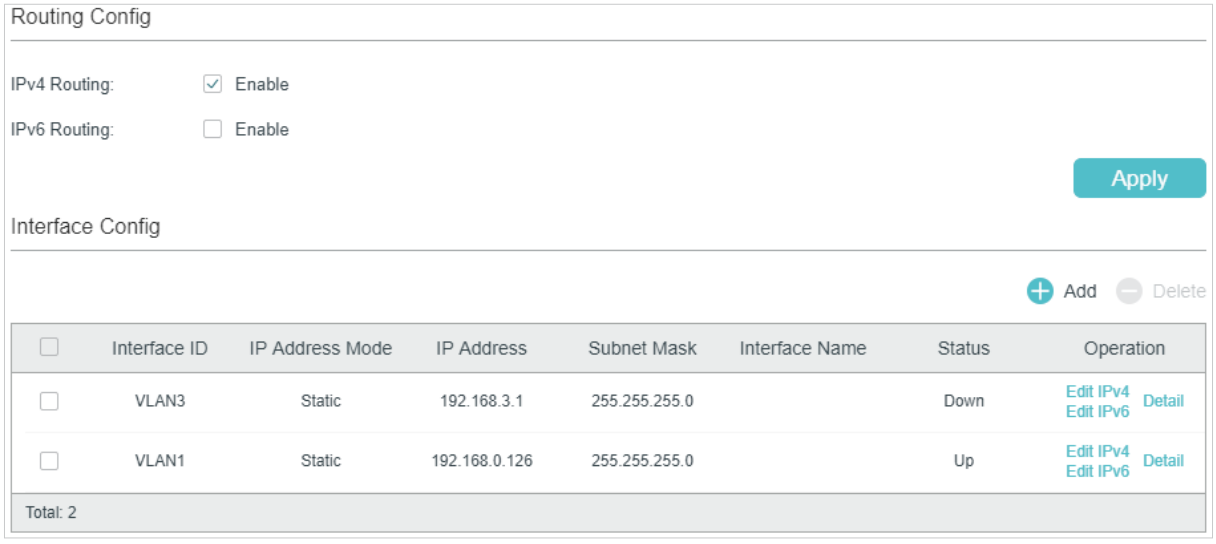


Follow these steps to create a Layer 3 interface.

1) In the **Routing Config** section, enable IPv4 routing or IPv6 routing. Then click **Apply**.

IPv4 Routing	Enable IPv4 routing function globally for all Layer 3 interfaces. It is enabled by default.

IPv6 Routing	(Optional) Enable IPv6 routing function globally for all Layer 3 interfaces. It is disabled by default.

2) In the **Interface Config** section, click Add to load the following page, and configure the corresponding parameters for the Layer 3 interface. Then click **Create**.

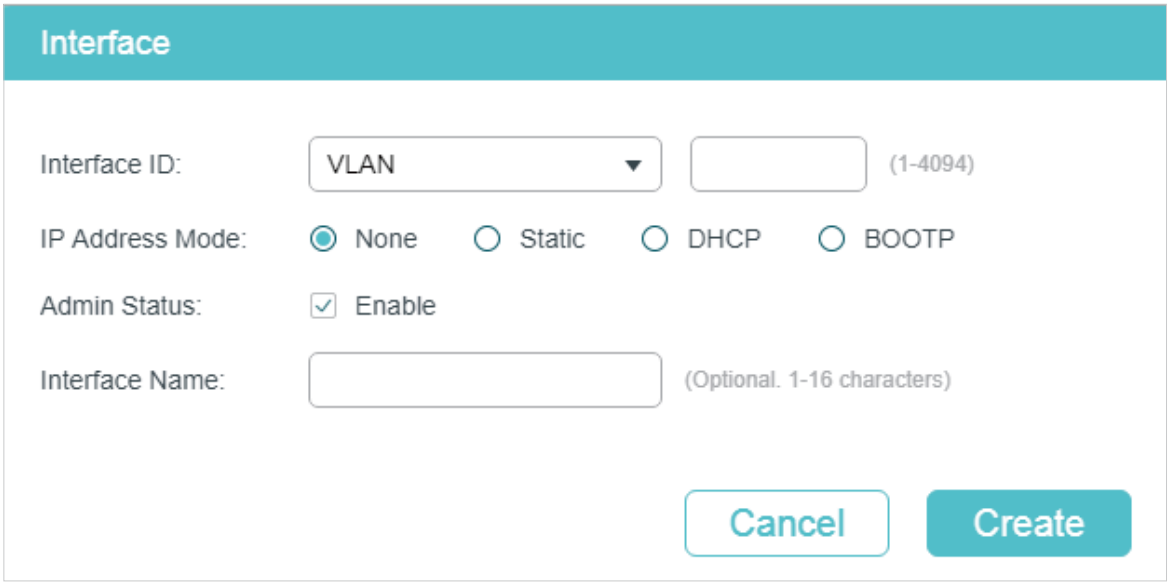

Interface ID	Select an interface type and enter the ID of the interface.
IP Address Mode	Specify the IP address assignment mode of the interface. **None:** No IP address will be assigned to the interface. **Static:** Assign an IP address to the interface manually. **DHCP:** Assign an IP address to the interface through the DHCP server. **BOOTP:** Assign an IP address to the interface through the BOOTP server.
DHCP Option 12	If you select DHCP as the IP Address Mode, configure the Option 12 here. DHCP Option 12 is used to specify the client's name.
IP Address	Specify the IP address of the interface if you choose "Static" as the IP address assignment mode.
Subnet Mask	Specify the subnet mask of the interface's IP address.
Admin Status	Enable or disable the interface's Layer 3 capabilities.
Interface Name	(Optional) Enter a name for the interface.


Note:

The created interface is an IPv4 interface. To configure the IPv6 features, please click "Edit IPv6" after the interface is created.

2.1.2 Configuring IPv4 Parameters of the Interface

In **Figure 2-1** you can view the corresponding interface you have created in the **Interface Config** section. On the corresponding interface entry, click **Edit IPv4** to load the following page and edit the IPv4 parameters of the interface.

Figure 2-2 Configuring the IPv4 Parameters

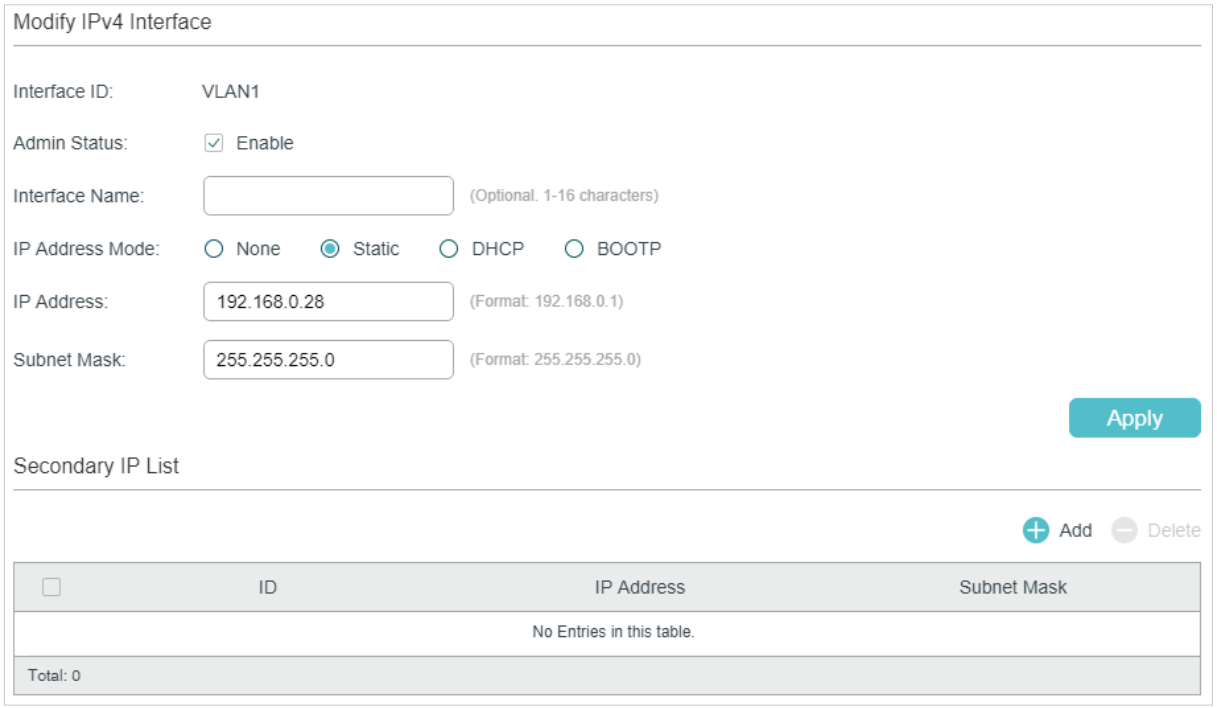


1) In the **Modify IPv4 Interface** section, configure relevant parameters for the interface according to your actual needs. Then click **Apply**.

Interface ID	Displays the interface ID.
Admin Status	Enable the Layer 3 capabilities for the interface.
Interface Name	(Optional) Enter a name for the interface.
IP Address Mode	Specify the IP address assignment mode of the interface. **None:** No IP address will be assigned. **Static:** Assign an IP address manually. **DHCP:** Obtain an IP address through DHCP. **BOOTP:** Obtain an IP address through BOOTP.
IP Address	Specify the IP address of the interface if you choose "Static" as the IP address assignment mode.
Subnet Mask	Specify the subnet mask of the interface's IP address.

DHCP Option 12	If you select DHCP as the IP Address Mode, configure the Option 12 here. DHCP Option 12 is used to specify the client's name.

2) In the **Secondary IP Table** section, click Add to add a secondary IP for the specified interface which allows you to have two logical subnets. Then click **Create**.

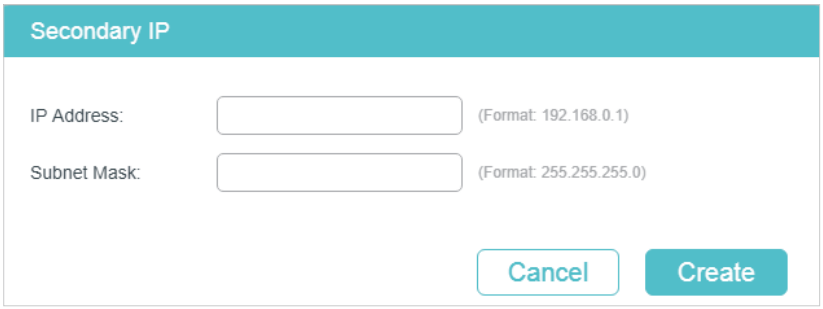


IP Address	Specify the secondary IP address of the interface.
Subnet Mask	Specify the subnet mask of the secondary IP address.

3) (Optional) In the **Secondary IP Table** section, you can view the corresponding secondary IP entry you have created.

2.1.3 Configuring IPv6 Parameters of the Interface

In **Figure 2-1**, you can view the corresponding interface entry you have created in the **Interface Config** section. On the corresponding interface entry, click **Edit IPv6** to load the following page and configure the IPv6 parameters of the interface.

Figure 2-3 Configuring the IPv6 Parameters

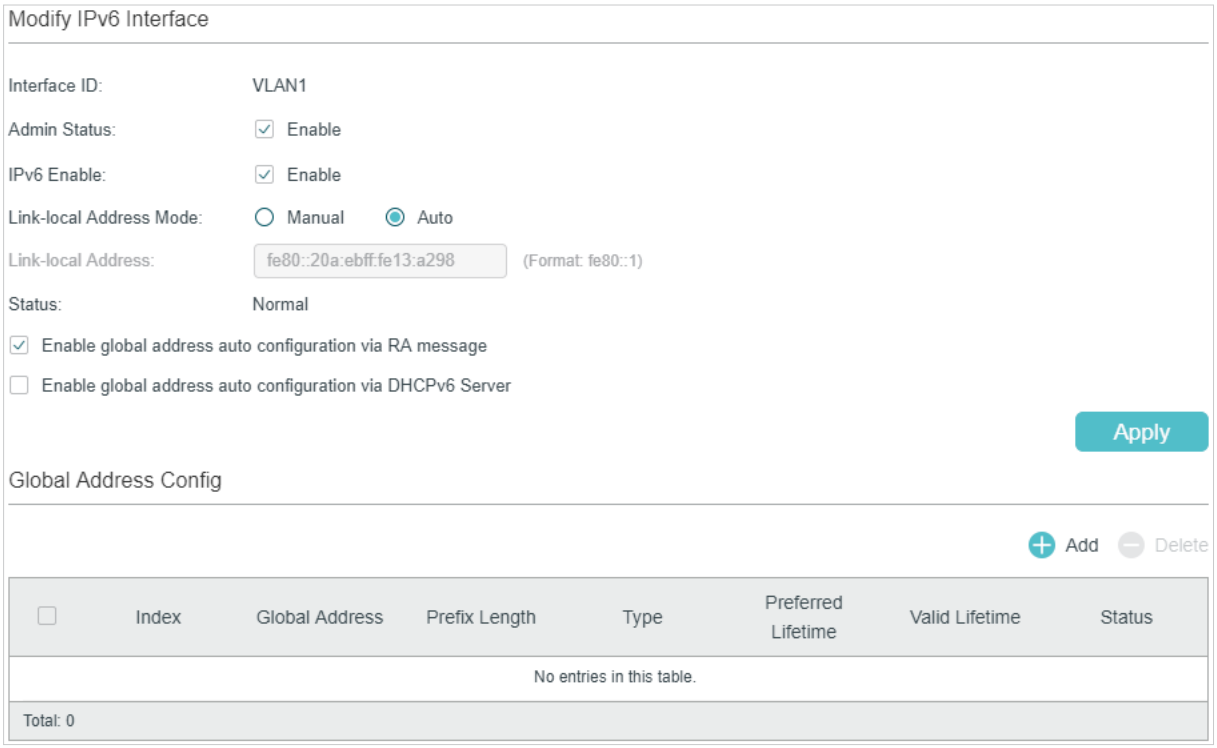

1) In the **Modify IPv6 Interface** section, enable IPv6 feature for the interface and configure the corresponding parameters . Then click **Apply**.

Interface ID	Displays the interface ID.
Admin Status	Enable the Layer 3 capabilities for the interface.
IPv6 Enable	Enable the IPv6 feature of the interface.
Link-local Address Mode	Select the link-local address configuration mode. **Manual:** With this option selected, you can assign a link-local address manually. **Auto:** With this option selected, the switch generates a link-local address automatically.
Link-local Address	Enter a link-local address if you choose “Manual” as the Link-Local Address Mode.

Status	Displays the status of the link-local address. An IPv6 address cannot be used before pass the DAD (Duplicate Address Detection), which is used to detect the address conflicts. In the DAD process, the IPv6 address may in three different status: **Normal:** Indicates that the link-local address passes the DAD and can be used normally. **Try:** Indicates that the link-local address is in the progress of DAD and cannot be used right now. **Repeat:** Indicates that the link-local address is duplicated, this address is already used by another node and cannot be used by the interface.

2) Configure IPv6 global address of the interface via following three ways:

Via RA Message:


Enable global address auto configuration via RA message	With this option enabled, the interface automatically generates a global address and other information according to the address prefix and other configuration parameters from the received RA (Router Advertisement) message.

Via DHCPv6 Server:

Enable global address auto configuration via DHCPv6 Server	With this option enabled, the switch will try to obtain the global address from the DHCPv6 Server.

Manually:

In the **Global Address Config** section, click Add to manually assign an IPv6 global address to the interface.

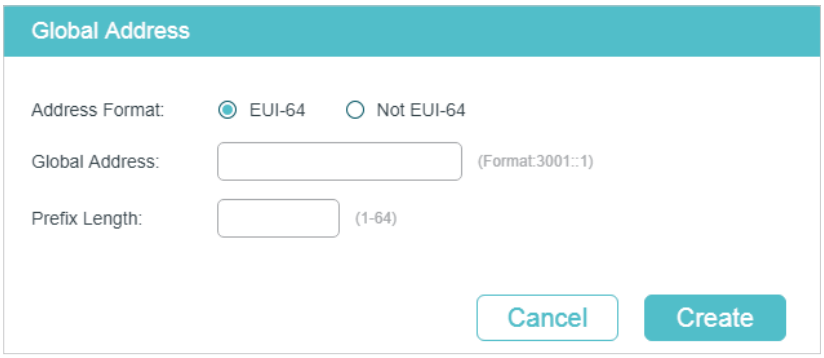

Address Format	Select the global address format according to your needs. **EUI-64:** Indicates that you only need to specify an address prefix, then the system will create a global address automatically. **Not EUI-64:** Indicates that you have to specify an intact global address.
Global Address	When EUI-64 is selected, please input the address prefix here, otherwise, please input an intact IPv6 address here.

Prefix Length	Configure the prefix length of the global address.


3) View the global address entry in the Global Address Config.

Global Address	View or modify the global address.
Prefix Length	View or modify the prefix length of the global address.
Type	Displays the configuration mode of the global address. **Manual:** Indicates that the corresponding address is configured manually. **Auto:** Indicates that the corresponding address is created automatically using the RA message or obtained from the DHCPv6 Server.
Preferred Lifetime	Displays the preferred lifetime of the global address. Preferred lifetime is the length of time that a valid IPv6 address is preferred. When the preferred time expires, the address becomes deprecated but still can be used, and you need to switch to another address.
Valid Lifetime	Displays the valid lifetime of the global address. Valid lifetime is the length of time that an IPv6 address is in the valid state. When the valid lifetime expires, the address become invalid and can be no longer usable.
Status	Displays the status of the link-local address. An IPv6 address cannot be used before pass the DAD (Duplicate Address Detection), which is used to detect the address conflicts. In the DAD process, the IPv6 address may in three different status: **Normal:** Indicates that the global address passes the DAD and can be normally used. **Try:** Indicates that the global address is in the progress of DAD and cannot be used right now. **Repeat:** Indicates that the global address is duplicated, this address is already used by another node. This address cannot be used by the interface.

2.1.4 Viewing Detail Information of the Interface

In **Figure 2-1** you can view the corresponding interface entry you have created in the **Interface Config** section. On the corresponding interface entry, click **Detail** to load the following page and view the detail information of the interface.

Figure 2-4 Viewing the detail information of the interface

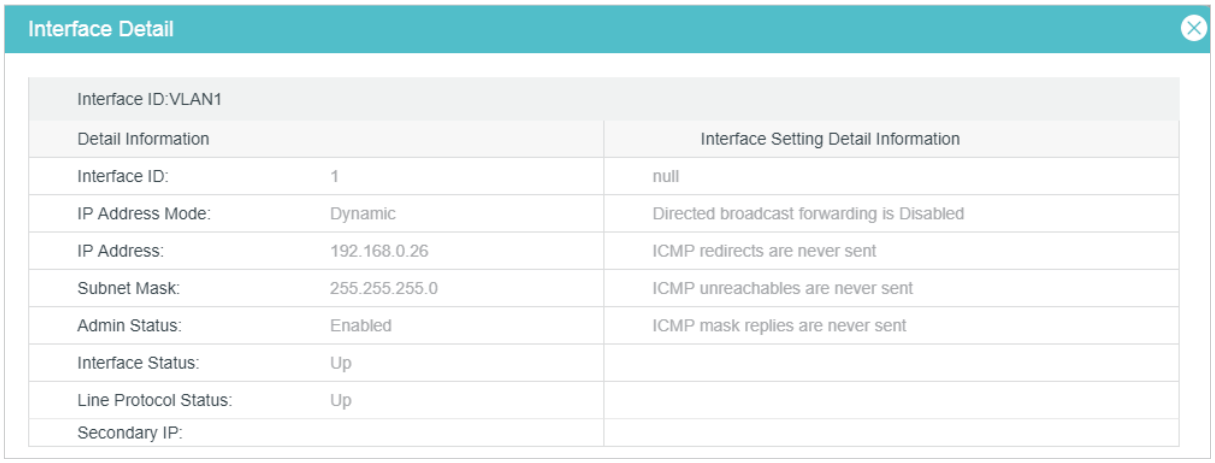

2.2 Using the CLI

2.2.1 Creating a Layer 3 Interface

Follow these steps to create a Layer 3 interface. You can create a VLAN interface, a loopback interface, a routed port or a port-channel interface according to your needs.

Step 1 **configure**

Enter global configuration mode.

Step 2	Create a VLAN interface: **interface vlan** *vlan-id* *vlan-id*: Specify an IEEE 802.1Q VLAN ID that already exists, ranging from 1 to 4094. Create a loopback interface: **interface loopback {** *id* **}** *id:* Specify the ID of the loopback interface, ranging from 1 to 64. Create a routed port: **interface { fastEthernet** *port* **| range fastEthernet** *port-list* **| gigabitEthernet** *port* **| range gigabitEthernet** *port-list* **| ten-gigabitEthernet** *port* **| range ten-gigabitEthernet** *port-list* **}** Enter interface configuration mode. *port*: Specify the Ethernet port number, for example 1/0/1. *port-list:* Specify the list of Ethernet ports, for example 1/0/1-3, 1/0/5. **no switchport** Switch the Layer 2 port into the Layer 3 routed port. Create a port-channel interface: **interface { port-cahnnel** *port-channel* **| range port-channel** *port-channel-list* **}** Enter interface configuration mode. *port-channel*: Specify the port channel, the valid value ranges from 1 to 14. *port-channel-list:* Specify the list of the port-channel interface, for example 1-3, 5. **no switchport** Switch the port channel to a Layer 3 port channel interface.
Step 3	**description** *string* Specify a description for the Layer 3 interface. *string:* The description of the Layer 3 interface, ranging from 1 to 32 characters.
Step 4	**end** Return to privileged EXEC mode.
Step 5	**copy running-config startup-config** Save the settings in the configuration file.

The following example shows how to create a VLAN interface with a description of VLAN-2.

Switch#configure

Switch(config)#interface vlan 2

Switch(config-if)#description VLAN-2

Switch(config-if)#end

Switch#copy running-config startup-config

2.2.2 Configuring IPv4 Parameters of the Interface

Follow these steps to configure the IPv4 parameters of the interface.

Step 1	**configure** Enter global configuration mode.
Step 2	**interface** { *interface-type* } { *interface-id*} Enter Layer 3 interface configuration mode. *interface-type*: Type of the Layer 3 interface, including fastEthernet, gigabitEthernet, ten-gigabitEthernet, loopback and VLAN. *interface-id:* The interface ID.
Step 3	Automatically assign an IP Address for the interface via DHCP or BOOTP: **ip address-alloc {** dhcp **|** bootp **}** Specify the IP Address assignment mode of the interface. dhcp: Specify the Layer 3 interface to obtain an IPv4 address from the DHCP Server. bootp: Specify the Layer 3 interface to obtain an IPv4 address from the BOOTP Server. Manually assign an IP Address for the interface: **ip address {** *ip-addr* **} {** *mask* **} [secondary]** Configure the IP address and subnet mask for the specified interface manually. *ip-addr*: Specify thse IP address of the Layer 3 interface. *mask*: Specify the subnet mask of the Layer 3 interface. **secondary:** Specify the interface's secondary IP address which allows you to have two logical subnets. If this parameter is omitted here, the configured IP address is the interface's primary address.
Step 4	**show ip interface brief** Verify the summary information of the Layer 3 interfaces.
Step 5	**end** Return to privileged EXEC mode.
Step 6	**copy running-config startup-config** Save the settings in the configuration file.

The following example shows how to configure the IPv4 parameters of a routed port, including setting a static IP address for the port and enabling the Layer 3 capabilities:

Switch#configure

Switch(config)#interface gigabitEthernet 1/0/1

Switch(config-if)#no switchport

Switch(config-if)#ip address 192.168.0.100 255.255.255.0

Switch(config-if)#show ip interface brief

Interface	IP-Address	Method	Status	Protocol	Shutdown
Gi1/0/1	192.168.0.100/24	Static	Up	Up	no

Switch(config-if)#end

Switch#copy running-config startup-config

2.2.3 Configuring IPv6 Parameters of the Interface

Follow these steps to configure the IPv6 parameters of the interface.

Step 1	**configure** Enter global configuration mode.
Step 2	**interface** { *interface-type* } { *interface-id* } Enter Layer 3 interface configuration mode. *interface-type*: Type of the Layer 3 interface, including fastEthernet, gigabitEthernet, ten-gigabitEthernet, loopback and VLAN. *interface-id:* The interface ID.
Step 3	**ipv6 enable** Enable the IPv6 feature on the specified Layer 3 interface. By default, it is enabled on VLAN interface 1. IPv6 function can only be enabled on one Layer 3 interface at a time.
Step 4	Configure the IPv6 link-local address for the specified interface: Manually configure the ipv6 link-local address for the specified interface: **ipv6 address** *ipv6-addr* **link-local** *ipv6-addr*: Specify the link-local address of the interface. It should be a standardized IPv6 address with the prefix fe80::/10, otherwise this command will be invalid. Automatically configure the ipv6 link-local address for the specified interface: **ipv6 address autoconfig**

Step 5	Configure the IPv6 global address for the specified interface: Automatically configure the interface's global IPv6 address via RA message: **ipv6 address ra** Configure the interface's global IPv6 address according to the address prefix and other configuration parameters from its received RA (Router Advertisement) message. Automatically configure the interface's global IPv6 address via DHCPv6 server: **ipv6 address dhcp** Enable the DHCPv6 Client function. When this function is enabled, the Layer 3 interface will try to obtain the IPv6 address from DHCPv6 server. Manually configure the interface's global IPv6 address: **ipv6 address** *ipv6-addr* *ipv6-addr:* The Global IPv6 address with network prefix, for example 3ffe::1/64. **ipv6 address** *ipv6-addr* **eui-64** Specify a global IPv6 address with an extended unique identifier (EUI) in the low-order 64 bits of the IPv6 address. Specify only the network prefix; the last 64 bits are automatically computed from the switch MAC address. This enables IPv6 processing on the interface.
Step 6	**show ipv6 interface** Verify the configured ipv6 information of the interface.
Step 7	**end** Return to privileged EXEC mode.
Step 8	**copy running-config startup-config** Save the settings in the configuration file.

The following example shows how to enable the IPv6 function and configure the IPv6 parameters of a VLAN interface:

Switch#configure

Switch(config)#interface vlan 2

Switch(config-if)#ipv6 enable

Switch(config-if)#ipv6 address autoconfig

Switch(config-if)#ipv6 address dhcp

Switch(config-if)#show ipv6 interface

Vlan2 is up, line protocol is up

IPv6 is enable, Link-Local Address: fe80::20a:ebff:fe13:237b[NOR]

Global Address RA: Disable

Global Address DHCPv6: Enable

Global unicast address(es): ff02::1:ff13:237b

Joined group address(es): ff02::1

ICMP error messages limited to one every 1000 milliseconds

ICMP redirects are enable

MTU is 1500 bytes

ND DAD is enable, number of DAD attempts: 1

ND retrans timer is 1000 milliseconds

ND reachable time is 30000 milliseconds

Switch(config-if)#end


Switch#copy running-config startup-config

3 Configuration Example

3.1 Network Requirement

The administrator need to allow the hosts in VLANs can access the internet. The topology is shown as below.

Figure 3-1 Network Topology

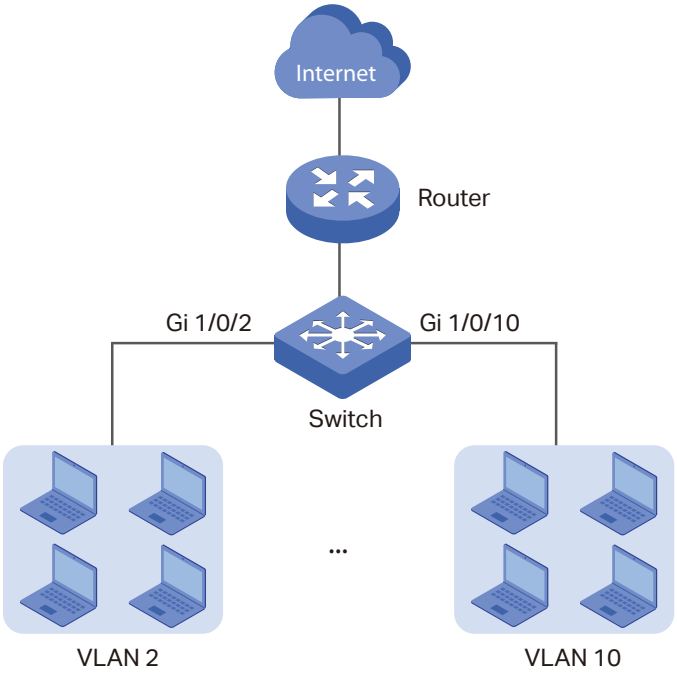

3.2 Configuration Scheme

For the hosts in VLANs are seperated at layer 2. To make it possible for these host to access the internet, we need to configure a VLAN interface on the switch for each VLAN. The VLAN interface can be considered as the default gateway for the hosts in the VLAN. All the requests to internet are sent to the VLAN interface first, then the VLAN interface will forward the packets to the internet according to the routing table.


Demonstrated with T2600G-28TS, this chapter provides configuration procedures in two ways: using the GUI and using the CLI.

3.3 Using the GUI

For the configurations for all the VLANs are similiar, here we only take the configuration of VLAN interface for VLAN 2 as an example.


1) Go to **L2 FEATURES > VLAN > 802.1Q VLAN** to create VLAN 2. Add port 1/0/2 to VLAN 2 with its egress rule as Untagged.

Table 3-2 Create VLAN 2

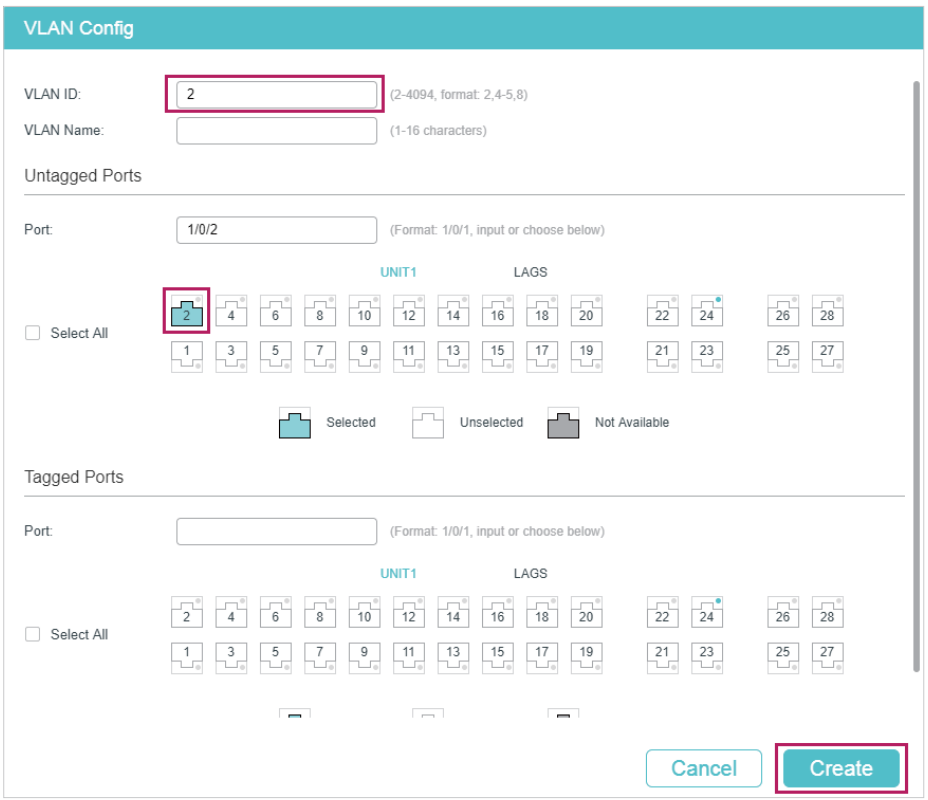

2) Go to **L3 FEATURES > Interface** to enable IPv4 routing (enabled by default), then click Add to create VLAN interface 2. Here we choose the IP address mode as **Static** and manually assign an IP address 192.168.2.1 to the interface.

Table 3-3 Create VLAN Interface 2

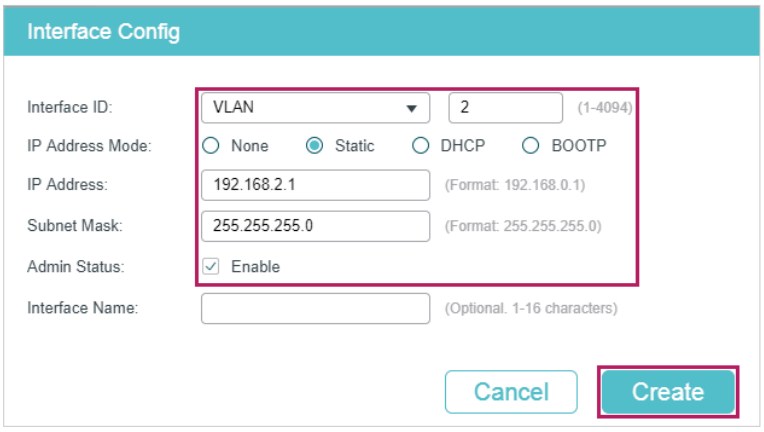

3) Click Save to save the settings.

3.3.1 Using the CLI

1) Create VLAN 2 and add port 1/0/2 to VLAN 2 with its egress rule as Untagged.

Switch#configure

Switch(config)#vlan 2

Switch(config-vlan)#exit

Switch(config)#interface gigabitEthernet 1/0/2

Switch(config-if)#switchport general allowed vlan 2 untagged

Switch(config-if)#exit

2) Create VLAN interface 2 for VLAN 2. Configure the IP address of VLAN interface 2 as 192.168.2.1.

Switch(config)#interface vlan 2

Switch(config-if)#ip address 192.168.2.1 255.255.255.0

Switch(config-if)#end

Switch#copy running-config startup-config

Verify the VLAN Interface Configurations

Verify the configurations of VLAN interface 2.

Switch#show interface vlan 2

VLAN2 is down, line protocol is down

Hardware is CPU Interface, address is 00:0a:eb:13:a2:98

ip is 192.168.2.1/24

4 Appendix: Default Parameters

Default settings of interface are listed in the following tables.

Table 4-1 Default Settings of Routing Config

Parameter	Default Setting
IPv4 Routing	Enable
IPv6 Routing	Disable

Table 4-2 Configuring the IPv4 Parameters of the Interface

Parameter	Default Setting
Interface ID	VLAN
IP Address Mode	None
Admin Status	Enable

Table 4-3 Configuring the IPv6 Parameters of the Interface

Parameter	Default Setting
Admin Status	Enable
IPv6 Enable	Enable
Link-local Address Mode	Auto
Enable global address auto configuration via RA message	Enable
Enable global address auto configuration via DHCPv6 Server	Disable

Part 19

Configuring Routing

CHAPTERS

1. Overview
2. IPv4 Static Routing Configuration
3. IPv6 Static Routing Configuration
4. Viewing Routing Table
5. Example for Static Routing

1 Overview

Routing table is used for a Layer 3 device (in this configuration guide, it means the switch) to forward packets to the correct destination. When the switch receives packets of which the source IP address and destination IP address are in different subnets, it will check the routing table, find the correct outgoing interface then forward the packets.

The routing table mainly contains two types of routing entries: dynamic routing entries and static routing entries.

Dynamic routing entries are automatically generated by the switch. The switch use dynamic routing protocols to automatically calculate the best route to forward packets.

Static routing entries are manually added none-aging routing entries. In a simple network with a small number of devices, you only need to configure static routes to ensure that the devices from different subnets can communicate with each other. On a complex large-scale network, static routes ensure stable connectivity for important applications because the static routes remain unchanged even when the topology changes.


The switch supports IPv4 static routing and IPv6 static routing configuration.

2 IPv4 Static Routing Configuration

2.1 Using the GUI

Choose the menu **L3 FEATURES > Static Routing > IPv4 Static Routing** and click Add to load the following page.

Figure 2-1 Configuring the IPv4 Static Routing

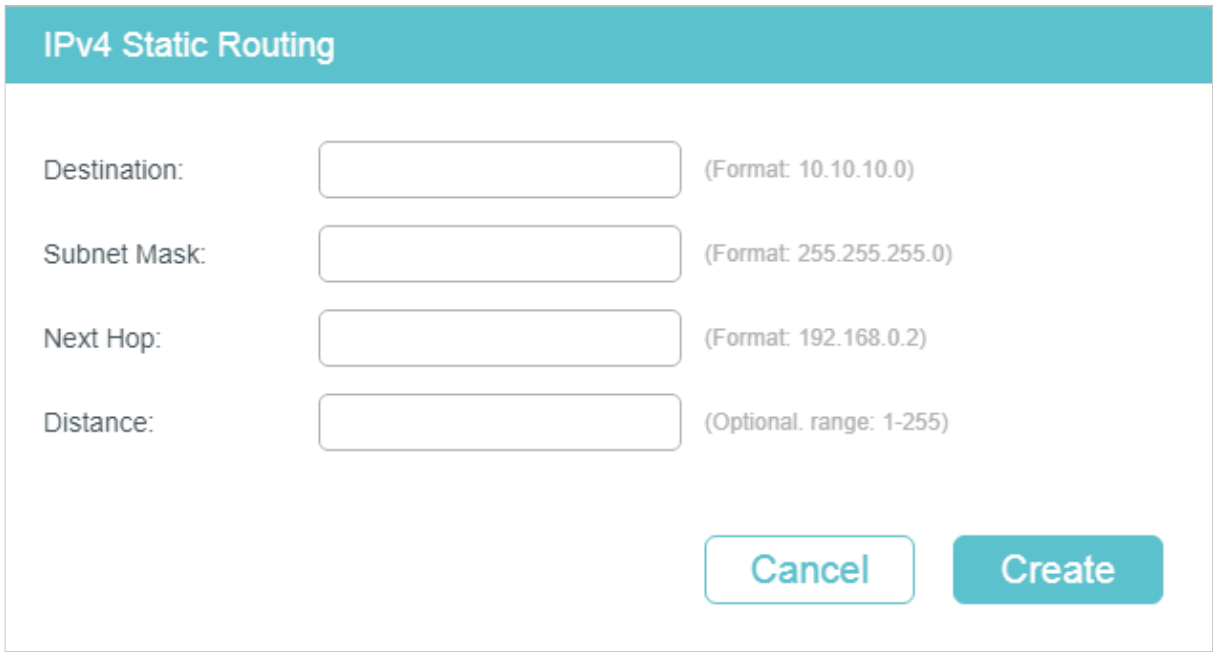

Configure the corresponding parameters to add an IPv4 static routing entry. Then click **Create**.

Destination	Specify the destination IPv4 address of the packets.
Subnet Mask	Specify the subnet mask of the destination IPv4 address.
Next Hop	Specify the IPv4 gateway address to which the packet should be sent next.
Distance	Specify the administrative distance, which is the trust rating of a routing entry. A higher value means a lower trust rating. Among the routes to the same destination, the route with the lowest distance value will be recorded in the IPv4 routing table. The valid value ranges from 1 to 255 and the default value is 1.

2.2 Using the CLI

Follow these steps to create an IPv4 static route.

Step 1	**configure** Enter global configuration mode.
Step 2	**ip route {** *dest-address* **} {** *mask* **} {** *next-hop-address* **} [** *distance* **]** Add an IPv4 static route. *dest-address:* Specify the destination IPv4 address of the packets. *mask:* Specify the subnet mask of the destination IPv4 address. *next-hop-address:* Specify the IPv4 gateway address to which the packet should be sent next. *distance:* Specify the administrative distance, which is a rating of the trustworthiness of the routing information. A higher value means a lower trust rating. When more than one routing protocols have routes to the same destination, only the route that has the shortest distance will be recorded in the IP routing table. The valid values are from 1 to 255 and the default value is 1.
Step 3	**show ip route [** static | connected **]** Verify the IPv4 route entries of the specified type.
Step 4	**end** Return to privileged EXEC mode.
Step 5	**copy running-config startup-config** Save the settings in the configuration file.

The following example shows how to create an IPv4 static route with the destination IP address as 192.168.2.0, the subnet mask as 255.255.255.0 and the next-hop address as 192.168.0.2:

Switch#configure

Switch(config)#ip route 192.168.2.0 255.255.255.0 192.168.0.2

Switch(config)#show ip route

Codes: C - connected, S - static

* - candidate default

C 192.168.0.0/24 is directly connected, Vlan1

S 192.168.2.0/24 [1/0] via 192.168.0.2, Vlan1

Switch(config)#end


Switch#copy running-config startup-config

3 IPv6 Static Routing Configuration

3.1 Using the GUI

Choose the menu **L3 FEATURES > Static Routing > IPv6 Static Routing > IPv6 Static Routing Table** and click Add to load the following page.

Figure 3-1 Configuring the IPv6 Static Routing

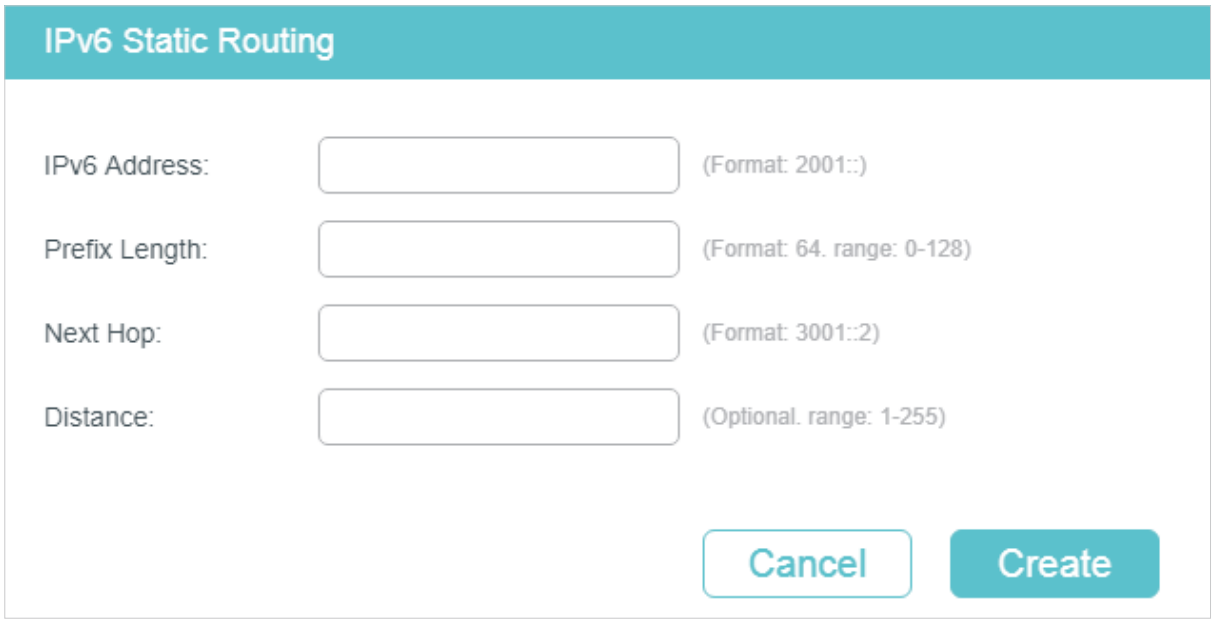

Configure the corresponding parameters to add an IPv6 static routing entry. Then click **Create.**

IPv6 Address	Specify the destination IPv6 address of the packets.
Prefix Length	Specify the prefix length of the IPv6 address.
Next Hop	Specify the IPv6 gateway address to which the packet should be sent next.
Distance	Specify the administrative distance, which is the trust rating of a routing entry. A higher value means a lower trust rating. Among the routes to the same destination, the route with the lowest distance value will be recorded in the IPv6 routing table. The valid value ranges from 1 to 255 and the default value is 1

3.2 Using the CLI

Follow these steps to enable IPv6 routing function and create an IPv6 static route.

Step 1	**configure** Enter global configuration mode.
Step 2	**ipv6 routing** Enable the IPv6 routing function on the specified Layer 3 interface.
Step 3	**ipv6 route {** *ipv6-dest-address* **} {** *next-hop-address* **} [** *distance* **]** Add an IPv6 static route. *ipv6-dest-address:* Specify the destination IPv6 address of the packets, in the format of X:X:X:X::X/<0-128>. *next-hop-address:* Specify the IPv6 gateway address to which the packet should be sent next. *distance:* Specify the administrative distance, which is a rating of the trustworthiness of the routing information. A higher value means a lower trust rating. When more than one routing protocols have routes to the same destination, only the route that has the shortest distance will be recorded in the IP routing table. The valid values are from 1 to 255 and the default value is 1.
Step 4	**show ipv6 route [** static | connected **]** Verify the IPv6 route entries of the specified type.
Step 5	**end** Return to privileged EXEC mode.
Step 6	**copy running-config startup-config** Save the settings in the configuration file.

The following example shows how to create an IPv6 static route with the destination IP address as 3200::/64 and the next-hop address as 3100::1234:

Switch#configure

Switch(config)#ipv6 route 3200::/64 3100::1234

Switch(config)#show ipv6 route static

Codes: C - connected, S - static

* - candidate default

C 3000::/64 is directly connected, Vlan1

S 3200::/64 [1/0] via 3100::1234, Vlan2

Switch(config)#end

Switch#copy running-config startup-config

4 Viewing Routing Table


You can view the routing tables to learn about the network topology. The switch supports IPv4 routing table and IPv6 routing table.

4.1 Using the GUI

4.1.1 Viewing IPv4 Routing Table

Choose the menu **L3 FEATURES > Routing Table > IPv4 Routing Table** to load the following page.

Figure 4-1 Viewing IPv4 Routing Table

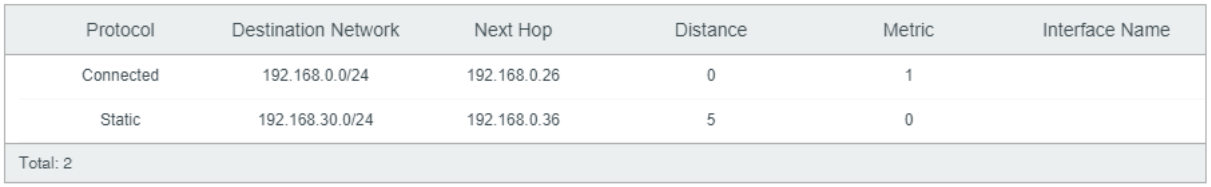

Protocol	Destination Network	Next Hop	Distance	Metric	Interface Name
Connected	192.168.0.0/24	192.168.0.26	0	1	
Static	192.168.30.0/24	192.168.0.36	5	0	

Total: 2


View the IPv4 routing entries.

Protocol	Displays the type of the routing entry. **Connected**: The destination network is directed connected to the switch. **Static**: The routing entry is a manually added static routing entry.
Destination Network	Displays the destination IP address and subnet mask.
Next Hop	Displays the IPv4 gateway address to which the packet should be sent next.
Distance	Displays the administrative distance, which is the trust rating of a routing entry. A higher value means a lower trust rating. Among the routes to the same destination, the route with the lowest distance value will be recorded in the IPv6 routing table.
Metric	Displays the metric to reach the destination IP address.
Interface Name	Displays the name of the gateway interface.

4.1.2 Viewing IPv6 Routing Table

Choose the menu **L3 FEATURES> Routing Table > IPv6 Routing Table** to load the following page.

Figure 4-2 Viewing IPv6 Routing Table

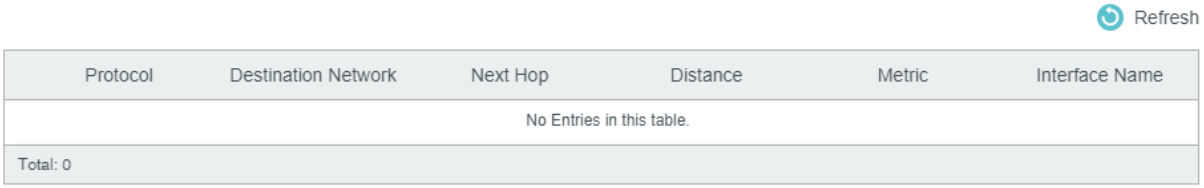

View the IPv6 routing entries.

Protocol	Displays the type of the routing entry. **Connected**: The destination network is directed connected to the switch. **Static**: The routing entry is a manually added static routing entry.
Destination Network	Displays the destination IPv6 address and subnet mask.
Next Hop	Displays the IPv6 gateway address to which the packet should be sent next.
Distance	Displays the administrative distance, which is the trust rating of a routing entry. A higher value means a lower trust rating. Among the routes to the same destination, the route with the lowest distance value will be recorded in the IPv6 routing table.
Metric	Displays the metric to reach the destination IPv6 address.
Interface Name	Displays the name of the gateway interface.

4.2 Using the CLI

4.2.1 Viewing IPv4 Routing Table

On privileged EXEC mode or any other configuration mode, you can use the following command to view IPv4 routing table:

show ip route [static | connected **]**

View the IPv4 route entries of the specified type. If not specified, all types of route entries will be displayed.

static: View the static routes.

connected: View the connected routes.

4.2.2 Viewing IPv6 Routing Table

On privileged EXEC mode or any other configuration mode, you can use the following command to view IPv6 routing table:

show ipv6 route [static | connected **]**

View the IPv6 route entries of the specified type. If not specified, all types of route entries will be displayed.

static: View the static IPv6 routes.


connected: View the connected IPv6 routes.

5 Example for Static Routing

5.1 Network Requirements

As shown below, Host A and Host B are on different network segments. To meet business needs, Host A and Host B need to establish a connection without using dynamic routing protocols to ensure stable connectivity.

Figure 5-1 Network Topology

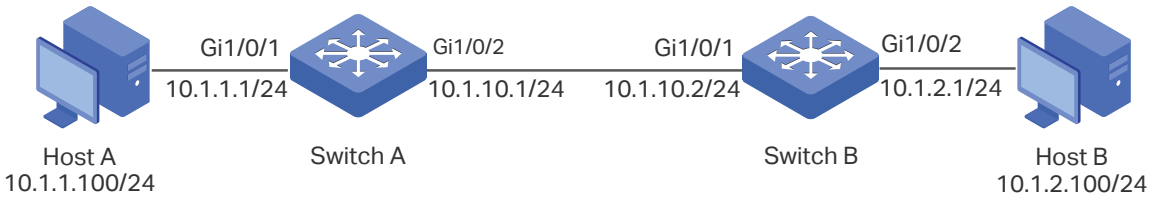

5.2 Configuration Scheme

To implement this requirement, you can configure the default gateway of host A as 10.1.1.1/24, the default gateway of host B as 10.1.2.1/24, and configure IPv4 static routes on Switch A and Switch B so that hosts on different network segments can communicate with each other.

Demonstrated with T2600G-28TS, the following sections provide configuration procedure in two ways: using the GUI and using the CLI.

5.3 Using the GUI

The configurations of Switch A and Switch B are similar. The following introductions take Switch A as an example.

1) Choose the menu **L3 FEATURES > Interface** to create a routed port Gi1/0/1 with the mode as static, the IP address as 10.1.1.1, the mask as 255.255.255.0 and the admin status as Enable. Create a routed port Gi1/0/2 with the mode as static, the IP address as 10.1.10.1, the mask as 255.255.255.0 and the admin status as Enable.

Figure 5-2 Create a Routed Port Gi1/0/1 for Switch A


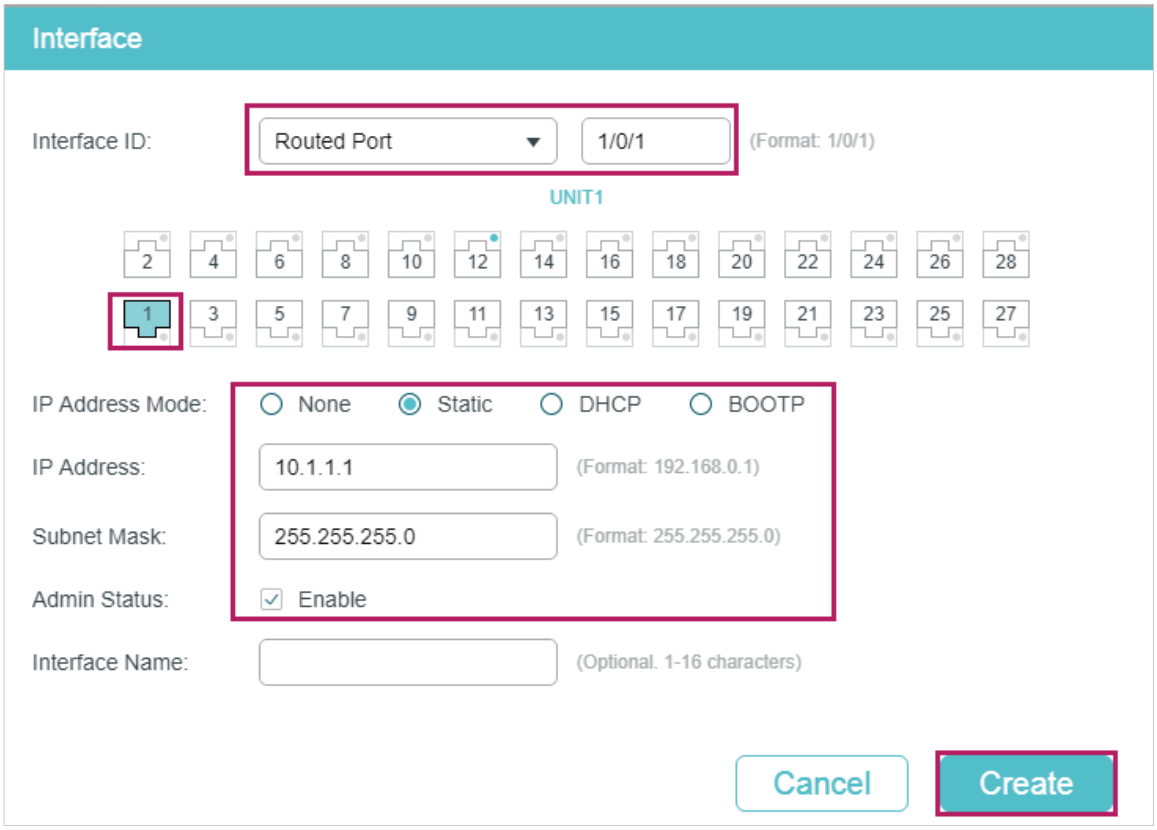



Figure 5-3 Create a Routed Port Gi1/0/2 for Switch A

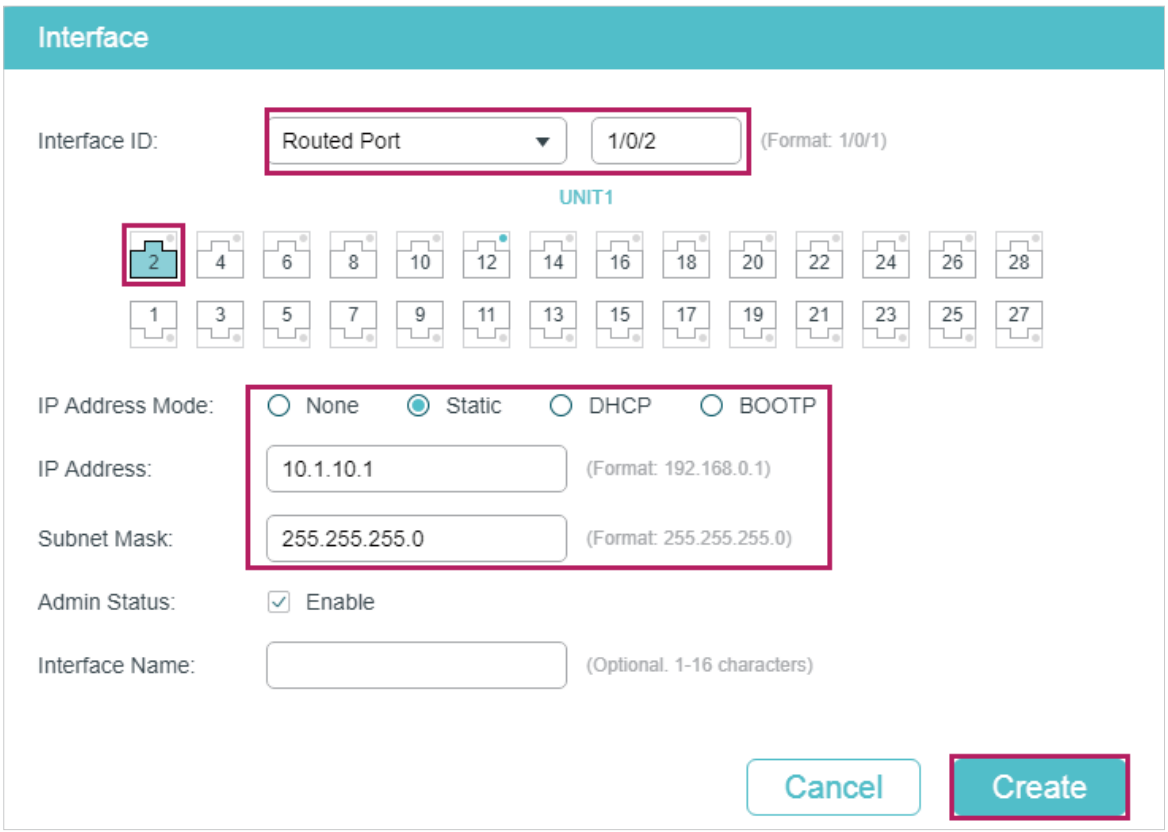

2) Choose the menu **L3 FEATURES > Static Routing > IPv4 Static Routing** to load the following page. Add a static routing entry with the destination as 10.1.2.0, the subnet

mask as 255.255.255.0 and the next hop as 10.1.10.2. For switch B, add a static route entry with the destination as 10.1.1.0, the subnet mask as 255.255.255.0 and the next hop as 10.1.10.1.

Figure 5-4 Add a Static Route for Switch A

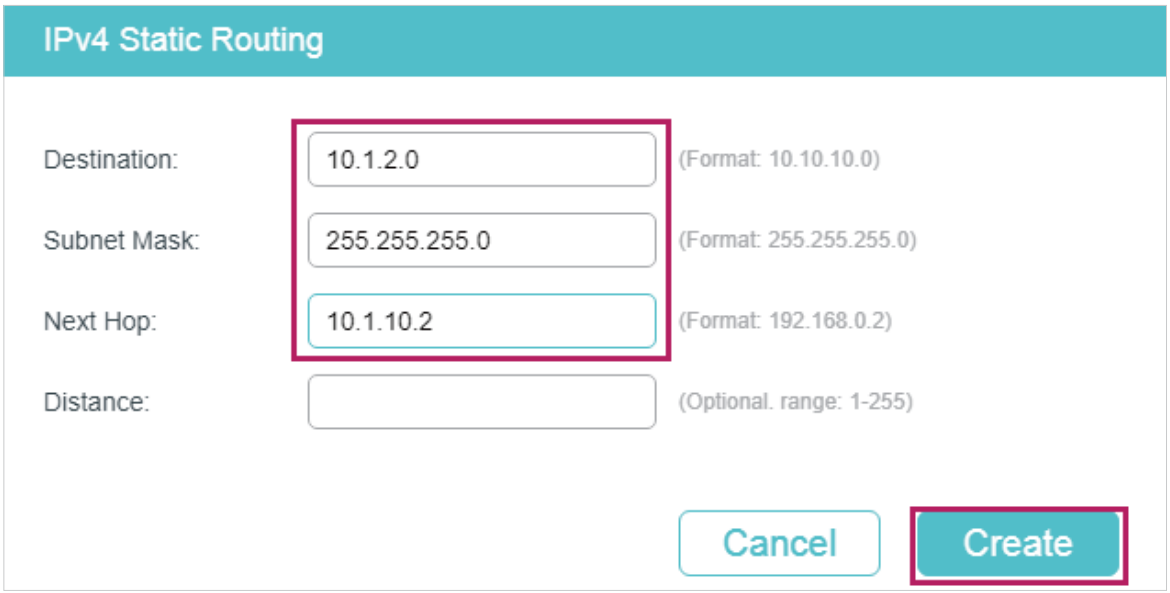

5.4 Using the CLI

The configurations of Switch A and Switch B are similar. The following introductions take Switch A as an example.

1) Create a routed port Gi1/0/1 with the mode as static, the IP address as 10.1.1.1, the mask as 255.255.255.0 and the admin status as Enable. Create a routed port Gi1/0/2 with the mode as static, the IP address as 10.1.10.1, the mask as 255.255.255.0 and the admin status as Enable.

   Switch_A#configure

   Switch_A(config)#interface gigabitEthernet 1/0/1

   Switch_A(config-if)#no switchport

   Switch_A(config-if)#ip address 10.1.1.1 255.255.255.0

   Switch_A(config-if)#exit

   Switch_A(config)#interface gigabitEthernet 1/0/2

   Switch_A(config-if)#no switchport

   Switch_A(config-if)#ip address 10.1.10.1 255.255.255.0

2) Add a static route entry with the destination as 10.1.2.0, the subnet mask as 255.255.255.0 and the next hop as 10.1.10.2. For switch B, add a static route entry with the destination as 10.1.1.0, the subnet mask as 255.255.255.0 and the next hop as 10.1.10.1.

Switch_A#configure

Switch_A(config)#ip route 10.1.2.0 255.255.255.0 10.1.10.2

Switch_A(config)#end

Switch_A#copy running-config startup-config

Verify the Configurations

- Switch A

  Verify the static routing configuration:

  Switch_A#show ip route

  Codes: C - connected, S - static

  * - candidate default

  C 10.1.1.0/24 is directly connected, Vlan10

  C 10.1.10.0/24 is directly connected, Vlan20

  S 10.1.2.0/24 [1/0] via 10.1.10.2, Vlan20

- Switch B

  Verify the static routing configuration:

  Switch_B#show ip route

  Codes: C - connected, S - static

  * - candidate default

  C 10.1.2.0/24 is directly connected, Vlan30

  C 10.1.10.0/24 is directly connected, Vlan20

  S 10.1.1.0/24 [1/0] via 10.1.10.1, Vlan20

- Connectivity Between Switch A and Switch B

  Run the ping command on switch A to verify the connectivity:

  Switch_A#ping 10.1.2.1

  Pinging 10.1.2.1 with 64 bytes of data :

  Reply from 10.1.2.1 : bytes=64 time<16ms TTL=64

  Reply from 10.1.2.1 : bytes=64 time<16ms TTL=64

  Reply from 10.1.2.1 : bytes=64 time<16ms TTL=64

  Reply from 10.1.2.1 : bytes=64 time<16ms TTL=64

Ping statistics for 10.1.2.1:

Packets: Sent = 4 , Received = 4 , Lost = 0 (0% loss)

Approximate round trip times in milli-seconds:

Minimum = 1ms , Maximum = 3ms , Average = 1ms

Part 20

Configuring DHCP Service

CHAPTERS

1. DHCP
2. DHCP Server Configuration
3. DHCP Relay Configuration
4. DHCP L2 Relay Configuration
5. Configuration Examples
6. Appendix: Default Parameters

1 DHCP

1.1 Overview

DHCP (Dynamic Host Configuration Protocol) is widely used to automatically assign IP addresses and other network configuration parameters to network devices, enhancing the utilization of IP address.


1.2 Supported Features

The supported DHCP features of the switch include DHCP Server, DHCP Relay and DHCP L2 Relay.

DHCP Server

DHCP Server is used to dynamically assign IP addresses, default gateway and other parameters to DHCP clients. As the following figure shows, the switch acts as a DHCP server and assigns IP addresses to the clients.

Figure 1-1 Application Scenario of DHCP Server

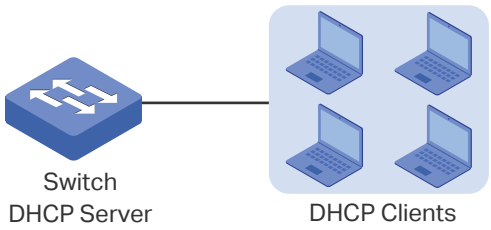

DHCP Relay

DHCP Relay is used to process and forward DHCP packets between different subnets or VLANs.

The DHCP client broadcasts DHCP request packets to require for an IP address. Since the transmission of broadcast packets are always limited in one LAN, so if the DHCP server are not in the same LAN with the client, the client can never obtain an IP address from the DHCP server. Therefore, each LAN should be equipped with a DHCP server, thus increasing the costs of network construction and bringing trouble for central network management.

DHCP Relay solves this problem. The DHCP Relay device acts as a relay agent and forwards DHCP packets between DHCP clients and DHCP servers in different LANs, so that DHCP clients in different LANs can share one DHCP server.

DHCP Relay includes three features: Option 82, DHCP Interface Relay and DHCP VLAN Relay.

Option 82

The switch can record the location information of the DHCP client using Option 82. The switch can add Option 82 to the DHCP request packet and then transmit the packet to the DHCP server. The DHCP server which supports Option 82 can set the distribution policy of IP addresses and the other parameters, providing a more flexible address distribution way.


DHCP Interface Relay

DHCP Interface Relay is used for the clients in different subnets to obtain IP addresses from the DHCP server that is not in the same subnet as the clients.

In DHCP Interface Relay, you can specify a DHCP server for an Layer 3 interface that the clients are connected to. When receiving DHCP packets from clients, the switch will fill the corresponding interface's IP address in the relay agent IP address field of the DHCP packets, and forwards the packets to the DHCP server. The DHCP server assigns IP addresses to the clients based on the relay agent IP address field.

As the following figure shows, the IP address for VLAN20 is 192.168.2.1/24 and for the routed port Gi1/0/1 is 192.168.3.1/24. With DHCP Interface VLAN configured, the switch uses IP address of VLAN 20 (192.168.2.1/24) when applying for IP addresses for clients in VLAN 20, and uses IP address of Gi1/0/1 (192.168.3.1/24) when applying for IP address for PC 1. As a result, the DHCP server will assign IP addresses in Pool A (the same subnet with the IP address of VLAN 20) to clients in VLAN 20, and assign IP address in Pool B (the same subnet with the Gi1/0/1) to PC 1.

Figure 1-2 Application Scenario of DHCP Interface Relay

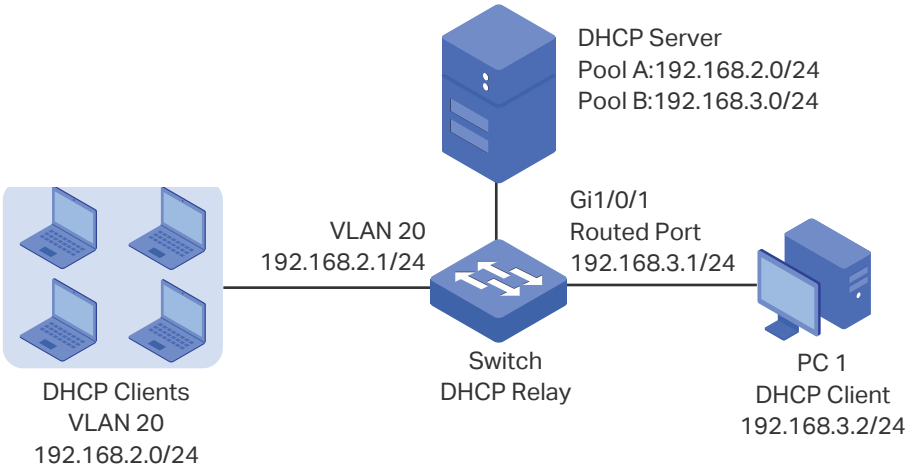

DHCP VLAN Relay


DHCP VLAN Relay allows clients in different VLANs to obtain IP addresses from the DHCP server using a single agent interface IP address.

In DHCP Interface Relay, to assign IP addresses to clients in different VLANs, you need to create a layer 3 interface for each VLAN to ensure the reachability.

In DHCP VLAN Relay, you can simply specify a layer 3 interface as default agent interface for all VLANs. The swith will fill this default agent interface's IP address in the relay agent IP address field of the DHCP packets from all VLANs.

As the following figure shows, no IP addresses are assigned to VLAN 10 and VLAN 20, but a default relay agent interface is configured with the IP address 192.168.2.1/24. The switch uses IP address of the default agent interface (192.168.2.1/24) to apply for IP addresses for clients in both VLAN 10 and VLAN 20. As a result, the DHCP server will assign IP addresses on 192.168.2.0/24 (the same subnet with the IP address of the default agent interface) to clients in both VLAN 10 and VLAN 20.

Figure 1-3 Application Scenario of DHCP VLAN Relay

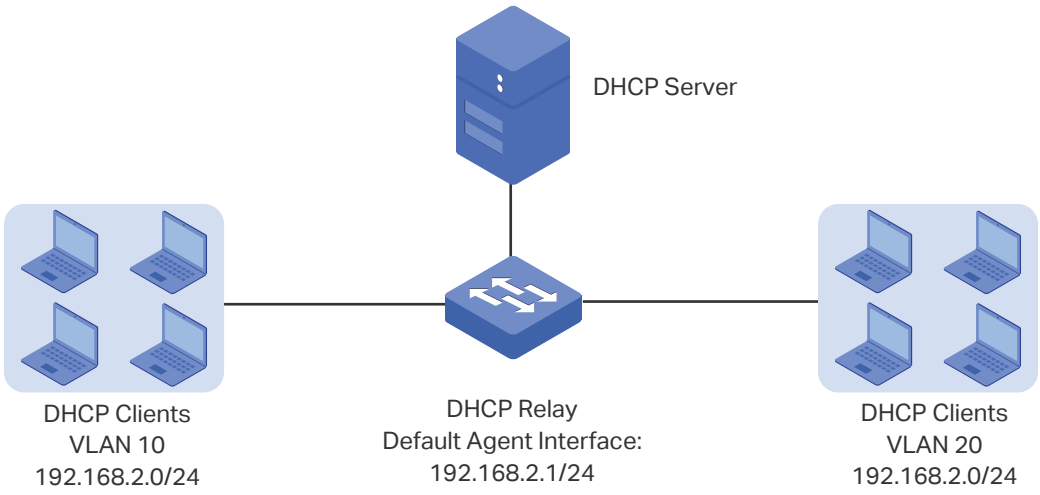


Note:

- If the VLAN already has an IP address, the switch will use the IP address of the VLAN as the relay agent IP address. The default relay agent IP address will not take effect.
- A routed port or port channel interface is not associated with a particular VLAN. DHCP VLAN relay will not work on routed ports or port channel interfaces.

DHCP L2 Relay

Unlike DHCP relay, DHCP L2 Relay is used in the situation that the DHCP server and client are in the same VLAN. In DHCP L2 Relay, in addition to normally assigning IP addresses to clients from the DHCP server, the switch can record the location information of the DHCP client using Option 82. The switch can add Option 82 to the DHCP request packet and then transmit the packet to the DHCP server. The DHCP server which supports Option 82 can set the distribution policy of IP addresses and the other parameters, providing a more flexible address distribution way.

Figure 1-4 Application Scenario of DHCP L2 Relay

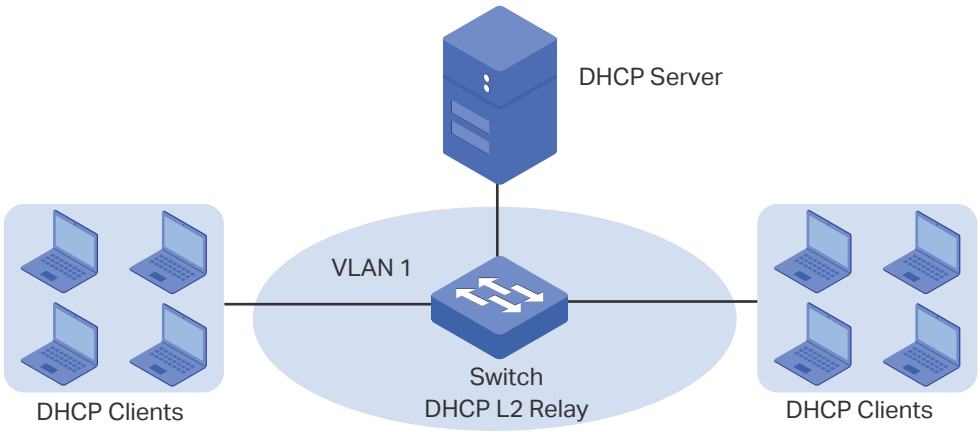

2 DHCP Server Configuration

To complete DHCP server configuration, follow these steps:


1) Enable the DHCP Server feature on the switch.
2) Configure the DHCP Server Pool.
3) (Optional) Manually assign static IP addresses for some clients if necessary.

2.1 Using the GUI

2.1.1 Enabling DHCP Server

Choose the menu **L3 FEATURES > DHCP Service > DHCP Server > DHCP Server** to load the following page.

Figure 2-1 DHCP Server

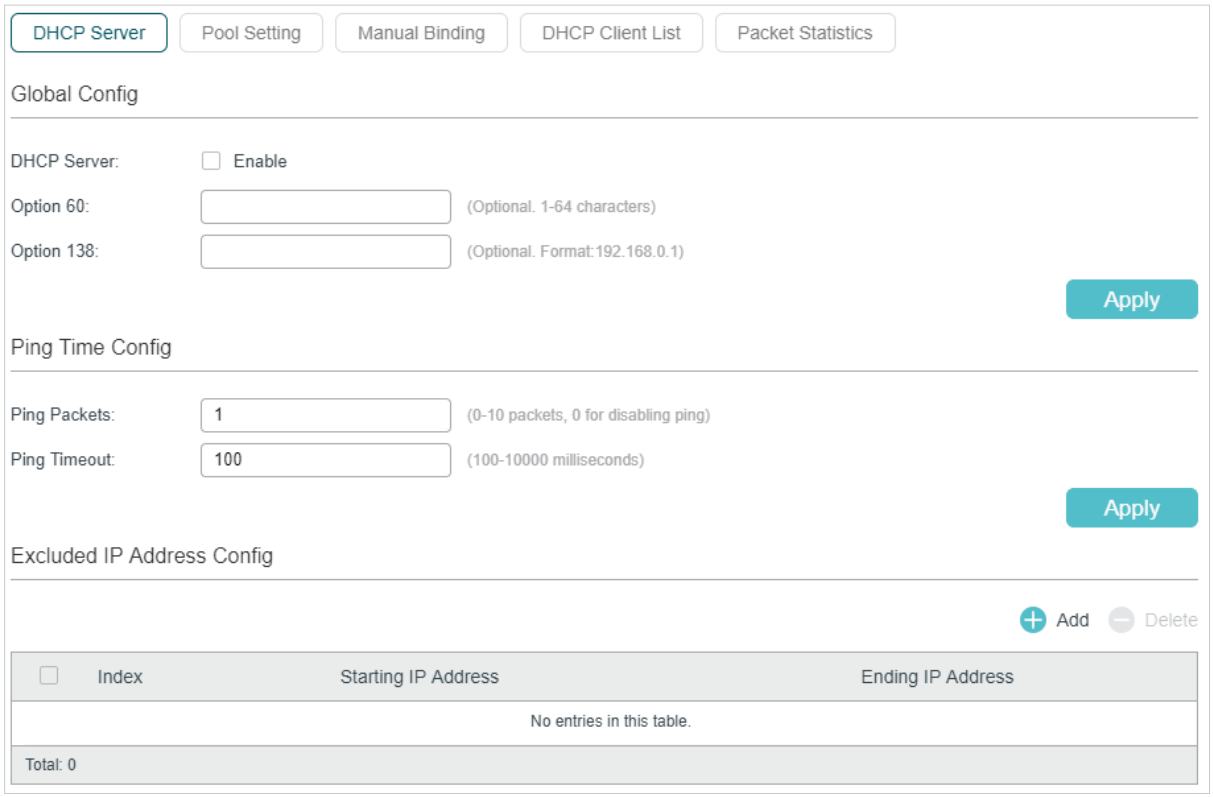

Follow these steps to configure DHCP Server:

1) In the **Global Config** section, enable DHCP Server. Click **Apply**.


DHCP Server	Enable DHCP Server. By default, it is disabled.

Option 60	(Optional) Specify the option 60 for device identification. Mostly it is used in the scenario where the APs (Access Points) apply for different IP addresses from different servers according to the needs. If an AP requests option 60, the server will respond a packet containing the option 60 configured here. And then the AP will compare the received option 60 with its own. If they are the same, the AP will accept the IP address assigned by the server, otherwise the assigned IP address will not be accepted.
Option 138	(Optional) Specify the option 138, which can be configured as the management IP address of an AC (Access Control) device. If the APs in the local network request this option, the server will respond a packet containing this option to inform the APs of the AC's IP address.

2) In the **Ping Time Config** section, configure Ping Packets and Ping Timeout for ping tests. Click **Apply**.

Ping Packets	Enter the number of ping packets the server can broadcast to test whether the IP address is occupied. The valid values are from 1 to 10, and the default is 1. When the switch is configured as a DHCP server to dynamically assign IP addresses to clients, the switch will deploy ping test to avoid IP address conflict resulted from assigning IP addresses repeatedly.
Ping Timeout	Specify the ping timeout period in milliseconds. It ranges from 100 to 10000 ms and the default is 100 ms. The DHCP server broadcasts an ICMP Echo Request (ping packet) to test whether an IP address is occupied or not. If the number of ping packets reaches the specified number and there is still no response, the server will assign the IP address. Otherwise, the server will record the IP address as a conflicted IP address and assign another IP address to the client.

3) In the **Excluded IP Address Config** section, click Add to load the following page to specify the IP addresses that should not be assigned to the clients.

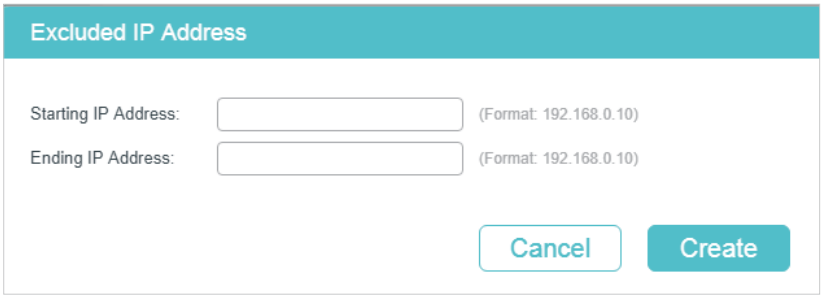

Enter the Starting IP Address and Ending IP Address to specify the range of reserved IP addresses. Click **Create**.


Starting IP Address/ Ending IP Address	Specify the start IP address and end IP address of the excluded IP address range. If the start IP address and the end IP address are the same, the server excludes only one IP address. When configuring DHCP Server, you need to reserve certain IP addresses for each subnet, such as default gateway address, broadcast address and DNS server address.

2.1.2 Configuring DHCP Server Pool

The DHCP Server Pool defines the parameters that will be assigned to the DHCP clients.

Choose the menu **L3 FEATURES > DHCP Service >DHCP Server > Pool Setting** and click Add to load the following page.

Figure 2-2 Pool Setting

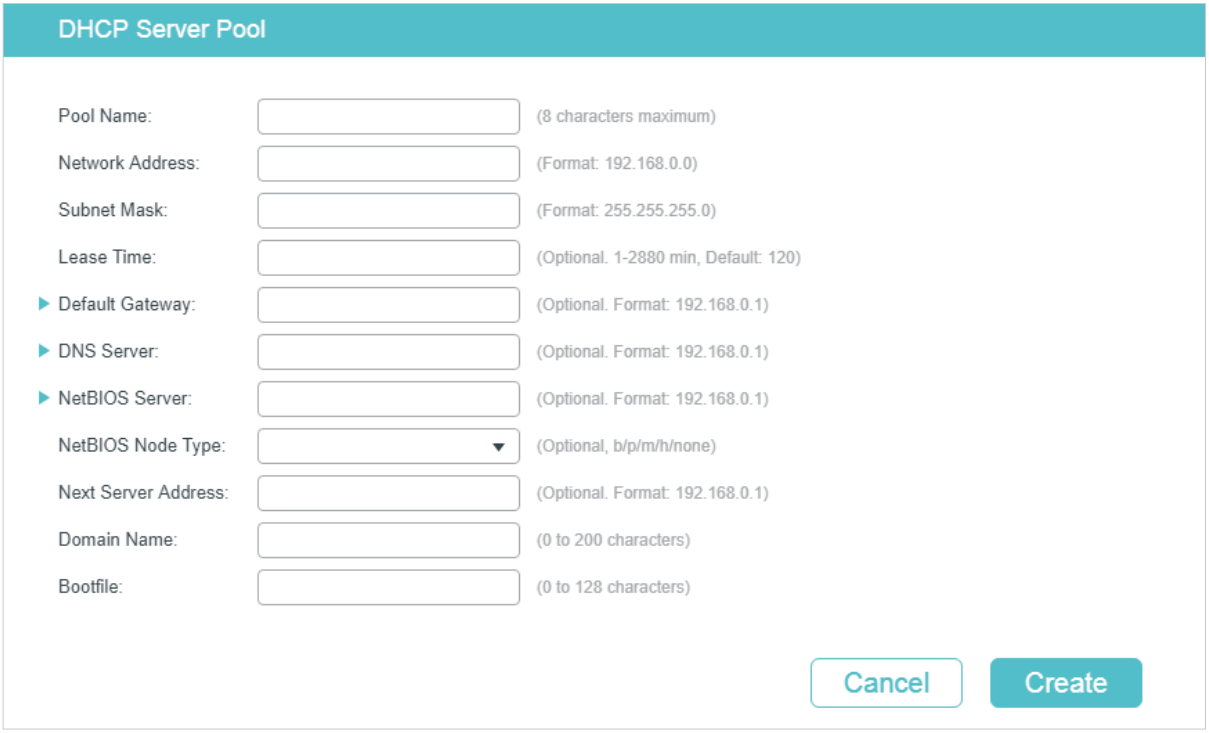

Configure the parameters for the DHCP Server Pool. Then click **Create**.

Pool Name	Specify a pool name for identification.
Network Address / Subnet Mask	Configure the network address and subnet mask of the DHCP server pool. The network address and subnet mask decide the range of the DHCP server pool. On the same subnet, all addresses can be assigned except the excluded addresses and addresses for special uses.
Lease Time	Specify how long the client can use the IP address assigned from this address pool. It ranges from 1 to 2880 minutes and the default is 120 minutes.
Default Gateway	(Optional) Configure the default gateway of the DHCP server pool. You can create up to 8 default gateways for each DHCP server pool. If you leave this field blank, the DHCP server will not assign this parameter to the client. In general, you can configure the IP address of the VLAN interface as the default gateway address.


DNS Server	(Optional) Specify the DNS server of the DHCP server pool. You can specify up to 8 DNS servers for each DHCP server pool. If you leave this field blank, the DHCP server will not assign this parameter to the client. In general, you can configure the IP address of the VLAN interface as the DNS server address.
Netbios Server	(Optional) Specify the NetBIOS name server. You can specify up to 8 NetBIOS servers for each DHCP server pool. If you leave this field blank, the DHCP server will not assign this parameter to the client. When a DHCP client uses the Network NetBIOS (Basic Input Output System) protocol for communication, the host name must be mapped to IP address. NetBIOS name server can resolve host names to IP addresses.
Netbios Node Type	(Optional) Specify the Netbios type for the clients, which is the way of inquiring IP address resolution. If you leave this field blank, the DHCP server will not assign this parameter to the client. The following options are provided: **b-node Broadcast**: The client sends query message via broadcast. **p-node Peer-to-Peer**: The client sends query message via unicast. **m-node Mixed**: The client sends query message via broadcast first. If it fails, the client will try again via unicast. **h-node Hybrid**: The client sends query message via unicast first. If it fails, the client will try again via broadcast.
Next Server Address	(Optional) Specify the IP address of a TFTP server for the clients. If needed, the clients can get the configuration file from the TFTP server for auto installation. If you leave this field blank, the DHCP server will not assign this parameter to the client.
Domain Name	(Optional) Specify the domain name that the clients should use when resolving host names via DNS. If you leave this field blank, the DHCP server will not assign this parameter to the client.
Bootfile	(Optional) Specify the name of the bootfile. If needed, the clients can get the bootfile from the TFTP server for auto installation. If you leave this field blank, the DHCP server will not assign this parameter to the client.

2.1.3 Configuring Manual Binding

Some devices like web servers require static IP addresses. To meet this requirement, you can manually bind the MAC address or client ID of the device to an IP address, and the DHCP server will reserve the bound IP address to this device at all times.

Choose the menu **L3 FEATURES > DHCP Service >DHCP Server > Manual Binding** and click Add to load the following page.

Figure 2-3 Manual Binding

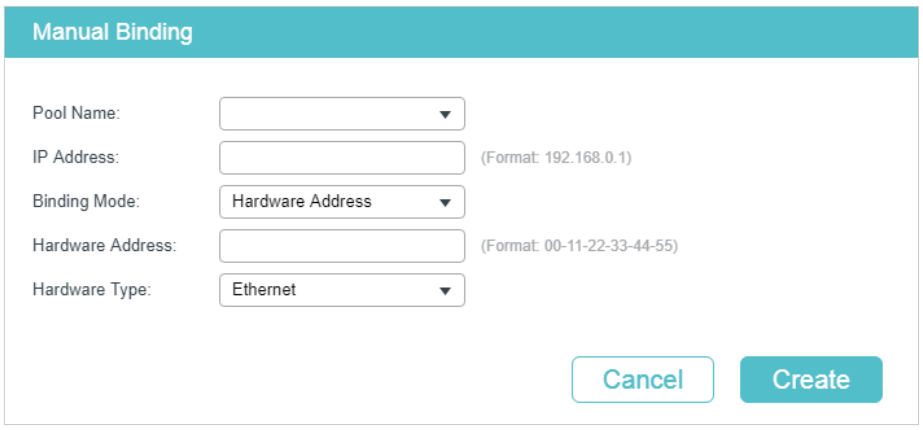

Select a pool name and enter the IP address to be bound. Select a binding mode and finish the configuration accordingly. Click **Create**.

Pool Name	Select a DHCP server pool from the drop-down list.
IP Address	Enter the IP address to be bound to the client.
Binding Mode	Select the binding mode: **Client ID**: Bind the IP address to the client ID of the client. **Client ID in ASCII**: Bind the IP address to the client ID in ASCII format. **Hardware Address**: Bind the IP address to the MAC address of the client.
Client ID	If you select Client ID as the binding mode, enter the client ID in this field.
Hardware Address	If you select Hardware Address as the binding mode, enter the MAC address in this field.
Hardware Type	If you select Hardware Address as the binding mode, select a hardware type. The hardware type includes Ethernet and IEEE802.

2.2 Using the CLI

2.2.1 Enabling DHCP Server

Follow these steps to enable DHCP Server and to configure ping packets and ping timeout.

Step 1	**configure** Enter global configuration mode.

Step 2	**service dhcp server** Enable DHCP Server.
Step 3	**ip dhcp server extend-option vendor-class-id** *vender* (Optional) Specify the option 60 for server identification. If a client requests option 60, the server will respond a packet containing the option 60 configured here. And then the client will compare the received option 60 with its own. If they are the same, the client will accept the IP address assigned by the server, otherwise the assigned IP address will not be accepted. *vender*: Specify the option 60.
Step 4	**ip dhcp server extend-option capwap-ac-ip** *ip-address* (Optional) Specify the option 138, which can be configured as the management IP address of an AC (Access Control) device. If the APs (Access Points) in the local network request this option, the server will respond a packet containing this option to inform the APs of the AC's IP address. *ip-address*: Specify the option 138.
Step 5	**ip dhcp server ping timeout** *value* Specify the ping timeout period. The DHCP server broadcasts an ICMP Echo Request (ping packet) to test whether an IP address is occupied or not. If there is no response within the ping timeout period, the server will broadcast the ping packet again. If the number of ping packets reaches the specified number and there is still no response, the server will assign the IP address. Otherwise, the server will record the IP address as a conflicted IP address and assign another IP address to the client. *value*: Specify the ping timeout period in milliseconds. It ranges from 100 to 10000 ms and the default is 100 ms.
Step 6	**ip dhcp server ping packets** *num* Specify the number of ping packets the server can broadcast to test whether the IP address is occupied. When the switch is configured as a DHCP server to dynamically assign IP addresses to clients, the switch will deploy ping test to avoid IP address conflict resulted from assigning IP addresses repeatedly. *num*: Enter the number of ping packets. The valid values are from 1 to 10, and the default is 1.
Step 7	**ip dhcp server exclude-address** *start-ip-address end-ip-address* Specify the starting IP address and ending IP address of the excluded IP address range. If the starting IP address and the ending IP address are the same, the server excludes only one IP address. When configuring DHCP Server, you need to reserve certain IP addresses for each subnet, such as default gateway address, broadcast address and DNS server address. *start-ip-address/end-ip-address*: Specify the starting IP address and ending IP address.
Step 8	**show ip dhcp server status** Verify the DHCP status, including whether it is enabled and the configuration of ping packet number and ping packet timeout.

Step 9	**show ip dhcp server extend-option** Verify the configuration of the extend options.
Step 10	**show ip dhcp server excluded-address** Verify the configuration of the excluded IP address.
Step 11	**end** Return to Privileged EXEC Mode.
Step 12	**copy running-config startup-config** Save the settings in the configuration file.

The following example shows how to enable DHCP Server globally on Switch, configure the number of ping packets as 2 and configure the ping timeout period as 200 ms:

Switch#configure

Switch(config)#service dhcp server

Switch(config)#ip dhcp server ping packets 2

Switch(config)#ip dhcp server ping timeout 200

Switch(config)#show ip dhcp server status

DHCP server is enable.

Ping packet number: 2.

Ping packet timeout: 200 milliseconds.

Switch(config)#end

Switch#copy running-config startup-config

The following example shows how to configure the option 60 as abc and option 138 as 192.168.0.155:

Switch#configure

Switch(config)#ip dhcp server extend-option vendor-class-id abc

Switch(config)#ip dhcp server extend-option capwap-ac-ip 192.168.0.155

Switch(config)#show ip dhcp server extend-option

Option 60: abc

Option 138: 192.168.0.155

Switch(config)#end

Switch#copy running-config startup-config

The following example shows how to configure the 192.168.1.1 as the default gateway address and excluded IP address:

Switch#configure

Switch(config)#ip dhcp server excluded-address 192.168.1.1 192.168.1.1

Switch(config)#show ip dhcp server excluded-address

No.	Start IP Address	End IP Address
---	----------	----------
1	192.168.1.1	192.168.1.1

Switch(config)#end

Switch#copy running-config startup-config

2.2.2 Configuring DHCP Server Pool

Follow these steps to configure DHCP server pool:

Step 1	**configure** Enter global configuration mode.
Step 2	**ip dhcp server pool** *pool-name* Configure a name for the DHCP server pool for identification. *pool-name*: Specify a pool name with 1 to 8 characters.
Step 3	**network** *network-address subnet-mask* Configure the network address and subnet mask of the DHCP server pool. The network address and subnet mask decide the range of the DHCP server pool. On the same subnet, all addresses can be assigned except the excluded addresses and addresses for special uses. *network-address*: Configure the network address of the DHCP server pool. *subnet-mask*: Configure the subnet mask of the DHCP server pool.
Step 4	**lease** *lease-time* Specify how long the client can use the IP address assigned from this address pool. *lease-time*: Enter the value of lease-time. It ranges from 1 to 2880 minutes and the default is 120 minutes.
Step 5	**default-gateway** *gateway-list* (Optional) Configure the default gateway of the DHCP server pool. In general, you can configure the IP address of the VLAN interface as the default gateway address. *gateway-list*: Specify the IP address of the default gateway. You can create up to 8 default gateways for each DHCP server pool.

Step 6	**dns-server** *dns-server-list* (Optional) Specify the DNS server of the DHCP server pool. In general, you can configure the IP address of the VLAN interface as the DNS server address. *dns-server-list*: Specify the IP address of the DNS server. You can specify up to 8 DNS servers for each DHCP server pool.
Step 7	**netbios-name-server** *NBNS-list* (Optional) Specify the NetBIOS name server. You can specify up to 8 NetBIOS servers for each DHCP server pool. When a DHCP client uses the Network NetBIOS (Basic Input Output System) protocol for communication, the host name must be mapped to IP address. NetBIOS name server can resolve host names to IP addresses. *NBNS-list*: Specify the IP address of the NetBIOS server. You can specify up to 8 NetBIOS servers for each DHCP server pool.
Step 8	**netbios-node-type** *type* (Optional) Specify the Netbios type for the clients, which is the way of inquiring IP address resolution. *type*: Specify the Netbios type. The following options are provided: **b-node Broadcast**: The client sends query message via broadcast. **p-node Peer-to-Peer**: The client sends query message via unicast. **m-node Mixed**: The client sends query message via broadcast first. If it fails, the client will try again via unicast. **h-node Hybrid**: The client sends query message via unicast first. If it fails, the client will try again via broadcast.
Step 9	**next-server** *ip-address* (Optional) Specify the IP address of a TFTP server for the clients. If needed, the clients can get the configuration file from the TFTP server for auto installation. *ip-address*: Specify the IP address of theTFTP server.
Step 10	**domain-name** *domainname* (Optional) Specify the domain name that the clients should use when resolving host names via DNS. *domainname*: Specify the domain name.
Step 11	**bootfile** *file-name* (Optional) Specify the name of the bootfile. If needed, the clients can get the bootfile from the TFTP server for auto installation. *file-name*: Specify the bootfile name.
Step 12	**show ip dhcp server pool** Verify the configuration of the DHCP server pool.
Step 13	**end** Return to Privileged EXEC Mode.

Step 14	**copy running-config startup-config**	Save the settings in the configuration file.

The following example shows how to create a DHCP server pool and name it as pool1 and configure its network address as 192.168.1.0, subnet mask as 255.255.255.0, lease time as 180 minute, default gateway as 192.168.1.1, DNS server as 192.168.1.4, Netbios server as 192.168.1.19, Netbios type as broadcast, TFTP server as 192.168.1.30, domain name as com, and bootfile name as bootfile:

Switch#configure

Switch(config)#ip dhcp server pool pool1

Switch(dhcp-config)#network 192.168.1.0 255.255.255.0

Switch(dhcp-config)#lease 180

Switch(dhcp-config)#default-gateway 192.168.1.1

Switch(dhcp-config)#dns-server 192.168.1.4

Switch(dhcp-config)#netbios-name-server 192.168.1.19

Switch(dhcp-config)#netbios-node-type b-node

Switch(dhcp-config)#next server 192.168.1.30

Switch(dhcp-config)#domain-name com

Switch(dhcp-config)#bootfile bootfile

Switch(dhcp-config)#show ip dhcp server pool

Pool Name: pool1

Network Address: 192.168.1.0

Subenet Mask: 255.255.255.0

Lease Time: 180

Default Gateway: 192.168.1.1

DNS Server: 192.168.1.4

Netbios Server: 192.168.1.19

Netbios Node Type: b-node

Next Server Address: 192.168.1.30

Domain Name: com

Bootfile Name: bootfile

Switch(dhcp-config)#end

Switch#copy running-config startup-config

2.2.3 Configuring Manual Binding

Some hosts, WWW server for example, requires a static IP address. To satisfy this requirement, you can manually bind the MAC address or client ID of the host to an IP address, and the DHCP server will reserve the bound IP address to this host at all times.

Follow these steps to configure Manual Binding:

Step 1	**configure** Enter global configuration mode.
Step 2	**ip dhcp server pool** *name* Create a DHCP server pool and enter DHCP configuration mode.
Step 3	Bind an IP address to a client: **address** *ip-address* **client-identifier** *client-id* Bind the specified IP address to the client with a specific hexadecimal client ID. *ip-address:* Specify the IP address to be bound. *client-id:* Specify the client ID in hexadecimal format. **address** *ip-address* **client-identifier** *client-id* **ascii** Bind the specified IP address to the client with a specific ASCII client ID. *ip-address:* Specify the IP address to be bound. *client-id:* Specify the client ID with ASCII characters. **address** *ip-address* **hardware-address** *hardware-address* **hardware-type** { ethernet | ieee802 } Bind the specified IP address to the client with a specific MAC address. *ip-address:* Specify the IP address to be bound. *hardware-address:* Enter the MAC address of the client. ethernet | ieee802*:* Specify a hardware type for the client, either Ethernet or IEEE802.
Step 4	**show ip dhcp server manual-binding** Verify the manual binding configuration.
Step 5	**end** Return to Privileged EXEC Mode.
Step 6	**copy running-config startup-config** Save the settings in the configuration file.

The following example shows how to bind the IP address 192.168.1.33 in pool1 (on the subnet of 192.168.1.0) to the host with the MAC address 74:D4:68:22:3F:34:

Switch#config

Switch(config)#ip dhcp server pool pool1

Switch(dhcp-config)#address 192.168.1.33 **hardware-address** 74:d4:68:22:3f:34 **hardware-type ethernet**

Switch(dhcp-config)#show ip dhcp server manual-binding

Pool Name	Client Id/Hardware Address	IP Address	Hardware Type	Bind Mode
---	---	---	---	---
pool1	74:d4:68:22:3f:34	192.168.1.33	Ethernet	MAC Address

Switch(dhcp-config)#end

Switch#copy running-config startup-config

3 DHCP Relay Configuration

To complete DHCP Relay configuration, follow these steps:


1) Enable DHCP Relay. Configure Option 82 if needed.
2) Specify DHCP server for the Interface or VLAN.

3.1 Using the GUI

3.1.1 Enabling DHCP Relay and Configuring Option 82

Choose the menu **L3 FEATURES > DHCP Service > DHCP Relay > DHCP Relay Config** to load the following page.

Figure 3-1 Enable DHCP Relay and Configure Option 82

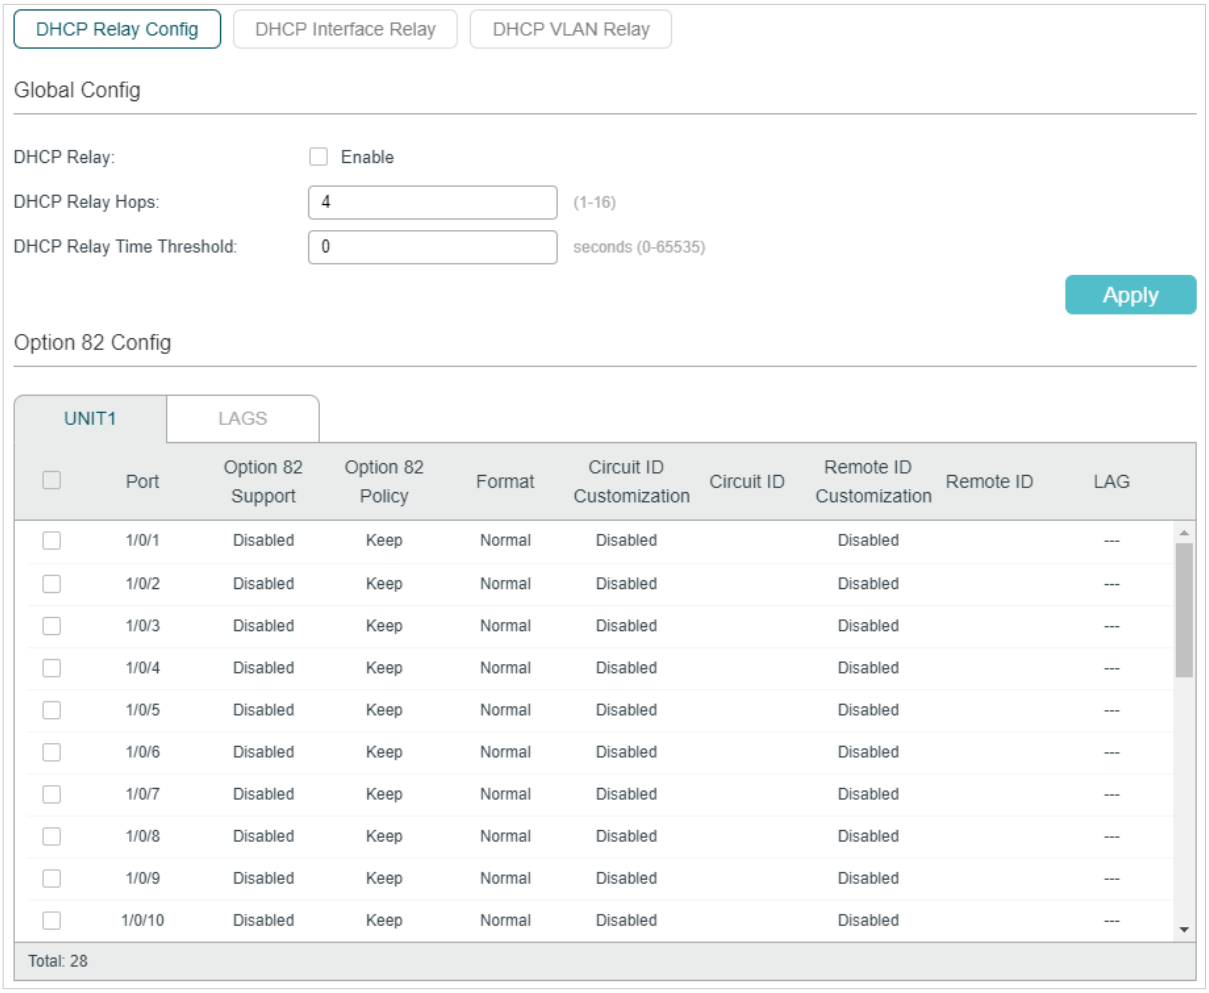

Follow these steps to enable DHCP Relay and configure Option 82:

1) In the **Global Config** section, enable DHCP Relay globally and configure the relay hops and the time threshold. Click **Apply**.

DHCP Relay	Enable DHCP Relay globally.
DHCP Relay Hops	Specify the DHCP relay hops. DHCP Relay Hops defines the maximum number of hops (DHCP Relay agent) that the DHCP packets can be relayed. If a packet's hop count is more than the value you set here, the packet will be dropped.
DHCP Relay Time Threshold	Specify the DHCP relay time threshold. The valid value ranges from 0 to 65535 seconds. DHCP relay time is the time elapsed since client began address acquisition or renewal process. When the time is greater than the value set here, the DHCP packet will be dropped by the switch. Value 0 means the switch will not examine this field of the DHCP packets.

2) (Optional) In the **Option 82 Config** section, configure Option 82.

Option 82 Support	Select whether to enable Option 82 or not. By default, it is disabled. Option 82 is used to record the DHCP client's location, Ethernet port and the VLAN, etc. If you need to record the accurate location of a client, you can enable Option 82 on the relay device which is closest to the client.
Option 82 Policy	Select the operation for the Option 82 field of the DHCP request packets. **Keep**: Indicates keeping the Option 82 field of the packets. **Replace**: Indicates replacing the Option 82 field of the packets with the switch defined one. By default, the Circuit ID is defined to be the VLAN and the ID of the port which receives the DHCP Request packets. The Remote ID is defined to be the MAC address of the DHCP Relay device which receives the DHCP Request packets. **Drop**: Indicates discarding the packets that include the Option 82 field.
Format	Select the format of option 82 sub-option value field. **Normal:** Indicates that the format of sub-option value field is TLV (type-length-value). **Private:** Indicates that the format of sub-option value field is just value.
Circuit ID Customization	Enable or disable Customization of Option 82. If enabled, you need to configure Option 82 information manually; If disabled, the switch will automatically configure the VLAN ID and the ID of the port that receives the DHCP packets as the circuit ID.
Circuit ID	Enter the customized circuit ID, which contains up to 64 characters. The circuit ID configurations of the switch and the DHCP server should be compatible with each other.
Remote ID Customization	Enable or disable the switch to define the Option 82 sub-option Remote ID field. If it is enabled, you can manually configure the remote ID; if it is disabled, the switch will automatically configure the switch's MAC address as the remote ID.

Remote ID	Enter the customized remote ID, which contains up to 64 characters. The remote ID configurations of the switch and the DHCP server should be compatible with each other.


3) Click **Apply**.

3.1.2 Configuring DHCP Interface Relay

DHCP Interface Relay is used for the clients that are connected to a Layer 3 interface to obtain IP addresses from the DHCP server, which is not in the same subnet as the clients.

Choose the menu **L3 FEATURES > DHCP Service > DHCP Relay > DHCP Interface Relay** and click Add to load the following page.

Figure 3-2 Configuring DHCP Interface Relay

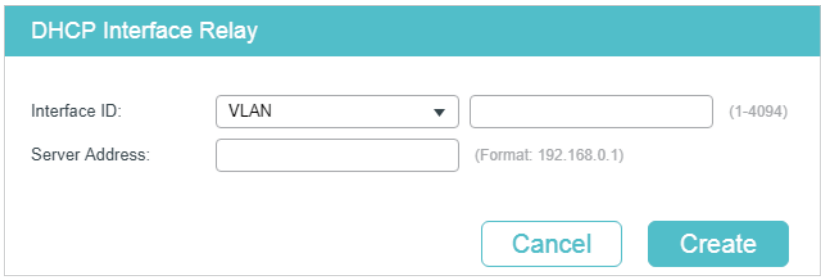

Select the interface type and enter the interface ID, then enter the IP address of the DHCP server. Click **Create**.

Interface ID	Specify the type and ID of the interface. It is the layer 3 interface that connecting to the DHCP clients. The interface should be an existing layer 3 interface.
Server Address	Enter the IP address of the DHCP server.

3.1.3 Configuring DHCP VLAN Relay

DHCP VLAN Relay is used for the clients in VLANs but do not have a layer 3 interface as the gateway to obtain IP addresses from the DHCP server, which is not in the same subnet as the clients.

Choose the menu **L3 FEATURES > DHCP Service > DHCP Relay > DHCP VLAN Relay** to load the following page.

Figure 3-3 Specify DHCP Server for VLAN



Follow these steps to specify DHCP Server for the specific VLAN:


1) In the **Default Relay Agent Interface** section, specify a Layer 3 interface as the default relay agent interface. Then click **Apply**.

Interface ID	Specify the type and ID of the interface that needs to be configured as the default relay agent interface. You can configure any existing layer 3 interface as the default relay agent interface. The DHCP server will assign IP addresses in the same subnet with this relay agent interface to the clients who use this relay agent interface to apply for IP addresses.
IP Address	Displays the IP address of this interface.

Note:

- If the VLAN the clients belong to already has an IP address, the switch will use the client's own VLAN interface as the relay agent interface. The manually specified default relay agent will not take effect.
- A routed port or port channel interface is not associated with a particular VLAN. DHCP VLAN relay will not work on routed ports or port channel interfaces.

2) In the **DHCP VLAN Relay Config** section, click Add to load the configuration page.

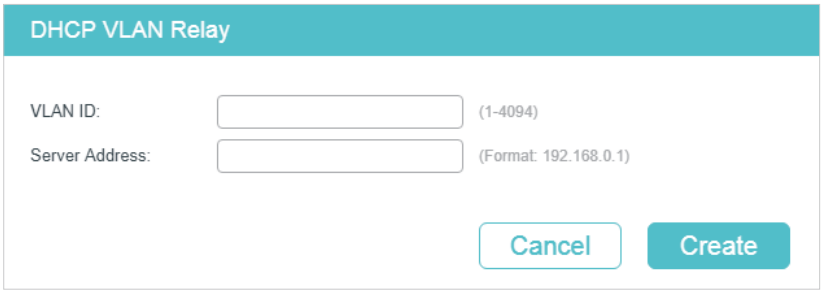

Specify the VLAN the clients belongs to and the server address. Click **Create**.

VLAN ID	Specify the VLAN, in which the clients can get IP addresses from the DHCP server.
Server Address	Enter the IP address of the DHCP server.

3.2 Using the CLI

3.2.1 Enabling DHCP Relay

Follow these steps to enable DHCP Relay and configure the corresponding parameters:

Step 1	**configure** Enter global configuration mode.
Step 2	**service dhcp relay** Enable DHCP Relay.
Step 3	**ip dhcp relay hops** *hops* Specify the maximum hops (DHCP Relay agent) that the DHCP packets can be relayed. If a packet's hop count is more than the value you set here, the packet will be dropped. *hops:* Specify the maximum hops for DHCP packets. The valid value ranges from the 1 to 16, and the default value is 4.
Step 4	**ip dhcp relay time** *time* Specify the DHCP relay time threshold. DHCP relay time is the time elapsed since client began address acquisition or renewal process. When the elapsed time of the DHCP packet is greater than the value set here, the DHCP packet will be dropped by the switch. *time:* Specify the DHCP relay time threshold. The valid value ranges from 1 to 65535. The default value is 0, which means the switch will not examine this field of the DHCP packets.
Step 5	**show ip dhcp relay** Verify the configuration of DHCP Relay.
Step 6	**end** Return to Privileged EXEC Mode.
Step 7	**copy running-config startup-config** Save the settings in the configuration file.

The following example shows how to enable DHCP Relay, configure the relay hops as 5 and configure the relay time as 10 seconds :

Switch#configure

Switch(config)#service dhcp relay

Switch(config)#show ip dhcp relay

Switch(config)#ip dhcp relay hops 5

Switch(config)#ip dhcp relay time 10

DHCP relay state: enabled

DHCP relay hops: 5

DHCP relay Time Threshold: 10 seconds

...

Switch(config)#end

Switch#copy running-config startup-config

3.2.2 (Optional) Configuring Option 82

Follow these steps to configure Option 82:

Step 1	**configure** Enter global configuration mode.
Step 2	**interface { fastEthernet** *port* **| range fastEthernet** *port-list* **| gigabitEthernet** *port* **| range gigabitEthernet** *port-list* **| ten-gigabitEthernet** *port* **| range ten-gigabitEthernet** *port-list* **}** Enter interface configuration mode.
Step 3	**ip dhcp relay information option** Enable the Option 82 feature on the port.
Step 4	**ip dhcp relay information strategy {** keep | replace | drop **}** Specify the operation for the Option 82 field of the DHCP request packets from the Host. The following options are provided: keep: Indicates keeping the Option 82 field of the packets. replace: Indicates replacing the Option 82 field of the packets with one defined by switch. By default, the Circuit ID is defined to be the VLAN and the number of the port which receives the DHCP Request packets. The Remote ID is defined to be the MAC address of the DHCP Snooping device which receives the DHCP Request packets. drop: Indicates discarding the packets that include the Option 82 field.
Step 5	**ip dhcp relay information format {** normal | private **}** Specify the format of option 82 sub-option value field. normal: Indicates that the format of sub-option value field is TLV (type-length-value). private: Indicates that the format of sub-option value field is the value you configure for the related sub-option.

Step 6	**ip dhcp relay information circuit-id** *string* Configure the circuit ID. The circuit ID configurations of the switch and the DHCP server should be compatible with each other. *string:* Enter the circuit ID, which contains up to 64 characters.
Step 7	**ip dhcp relay information remote-id** *string* Configure the remote ID. The remote ID configurations of the switch and the DHCP server should be compatible with each other. *string:* Enter the remote ID, which contains up to 64 characters.
Step 8	**show ip dhcp relay information interface { fastEthernet** *port* **| gigabitEthernet** *port* **| ten-gigabitEthernet** *port* **| port-channel** *port-channel-id* **}** Verify the Option 82 configuration of the port.
Step 9	**end** Return to Privileged EXEC Mode.
Step 10	**copy running-config startup-config** Save the settings in the configuration file.

The following example shows how to enable Option 82 on port 1/0/7 and configure the strategy as replace, the format as normal, the circuit-id as VLAN20 and the remote-id as Host1:

Switch#configure

Switch(config)#interface gigabitEthernet 1/0/7

Switch(config-if)#ip dhcp relay information option

Switch(config-if)#ip dhcp relay information strategy replace

Switch(config-if)#ip dhcp relay information format normal

Switch(config-if)#ip dhcp relay information circut-id VLAN20

Switch(config-if)#ip dhcp relay information remote-id Host1

Switch(config-if)#show ip dhcp relay information interface gigabitEthernet 1/0/7

Interface	Option 82 Status	Operation Strategy	Format	Circuit ID	Remote ID	LAG
---	---	---	---	---	---	---
Gi1/0/7	Enable	Replace	Normal	VLAN20	Host1	N/A

Switch(config-if)#end

Switch#copy running-config startup-config

3.2.3 Configuring DHCP Interface Relay

You can specify DHCP server for an Layer 3 interface or for a VLAN. The following respectively introduces how to configure DHCP Interface Relay and DHCP VLAN Relay.

Follow these steps to DHCP Interface Relay:

Step 1	**configure** Enter global configuration mode.
Step 2	Enter Layer 3 interface configuration mode: Enter VLAN interface configuration mode: **interface vlan** *vlan-id* *vlan-id*: Specify an IEEE 802.1Q VLAN ID that already exists, ranging from 1 to 4094. Enter routed port configuration mode: **interface { fastEthernet** *port* **| gigabitEthernet** *port* **| ten-gigabitEthernet** *port* **}** Enter interface configuration mode. *port*: Specify the Ethernet port number, for example 1/0/1. **no switchport** Switch the Layer 2 port into the Layer 3 routed port. Enter port-channel interface configuration mode: **interface { port-cahnnel** *port-channel* **}** Enter interface configuration mode. *port-channel*: Specify the port channel, the valid value ranges from 1 to 14. **no switchport** Switch the port channel to a Layer 3 port channel interface.
Step 3	**ip helper-address** *ip-addr* Specify DHCP server for the Layer 3 interface. *ip-addr:* Enter the IP address of the DHCP server.
Step 4	**show ip dhcp relay** Verify the configuration of DHCP Relay.
Step 5	**end** Return to Privileged EXEC Mode.
Step 6	**copy running-config startup-config** Save the settings in the configuration file.

The following example shows how to configure the DHCP server address as 192.168.1.7 on VLAN interface 66:

Switch#configure

Switch(config)#interface vlan 66

Switch(config-if)#ip helper-address 192.168.1.7

Switch(config-if)#show ip dhcp relay

...

DHCP relay helper address is configured on the following interfaces:

Interface	Helper address
VLAN 66	192.168.1.7

Switch(config-if)#end

Switch#copy running-config startup-config

3.2.4 Configuring DHCP VLAN Relay

Follow these steps to configure DHCP VLAN Relay:

Step 1	**configure** Enter global configuration mode.
Step 2	Enter Layer 3 interface configuration mode: Enter VLAN interface configuration mode: **interface vlan** *vlan-id* *vlan-id*: Specify an IEEE 802.1Q VLAN ID that already exists, ranging from 1 to 4094. Enter routed port configuration mode: **interface { fastEthernet** *port* **| gigabitEthernet** *port* **| ten-gigabitEthernet** *port* **}** Enter interface configuration mode. *port*: Specify the Ethernet port number, for example 1/0/1. **no switchport** Switch the Layer 2 port into the Layer 3 routed port. Enter port-channel interface configuration mode: **interface { port-cahnnel** *port-channel* **}** Enter interface configuration mode. *port-channel*: Specify the port channel, the valid value ranges from 1 to 14. **no switchport** Switch the port channel to a Layer 3 port channel interface.

Step 3	**ip dhcp relay default-interface** Set the interface as the default relay agent interface. If the VLAN that the clients belong to does not have an IP address, the switch will use the IP address of this interface to fill in the relay agent IP address field of DHCP packets from the DHCP clients.
Step 4	**exit** Return to global configuration mode.
Step 5	**ip dhcp relay vlan** *vid* **helper-address** *ip-address* Specify the VLAN ID and the DHCP server. *vid:* Enter the ID of the VLAN, in which the hosts can dynamically get the IP addresses from the DHCP server. *ip-address:* Enter the IP address of the DHCP server.
Step 6	**show ip dhcp relay** Verify the configuration of DHCP Relay.
Step 7	**end** Return to Privileged EXEC Mode.
Step 8	**copy running-config startup-config** Save the settings in the configuration file.

The following example shows how to set the routed port 1/0/2 as the default relay agent interface and configure the DHCP server address as 192.168.1.8 on VLAN 10:

Switch#configure

Switch(config)#interface gigabitEthernet 1/0/2

Switch(config-if)#no switchport

Switch(config-if)# ip dhcp relay default-interface

Switch(config-if)#exit

Switch(config)#ip dhcp relay vlan 10 **helper-address** 192.168.1.8

Switch(config)#show ip dhcp relay

...

DHCP VLAN relay helper address is configured on the following vlan:

vlan Helper address

---------- --------------

VLAN 10 192.168.1.8

Switch(config)#end

Switch#copy running-config startup-config

4 DHCP L2 Relay Configuration

To complete DHCP L2 Relay configuration, follow these steps:


1) Enable DHCP L2 Relay.
2) Configure Option 82 for ports.

4.1 Using the GUI

4.1.1 Enabling DHCP L2 Relay

Choose the menu **L3 FEATURES > DHCP Service > DHCP L2 Relay > Global Config** to load the following page.

Figure 4-1 Enable DHCP L2 Relay

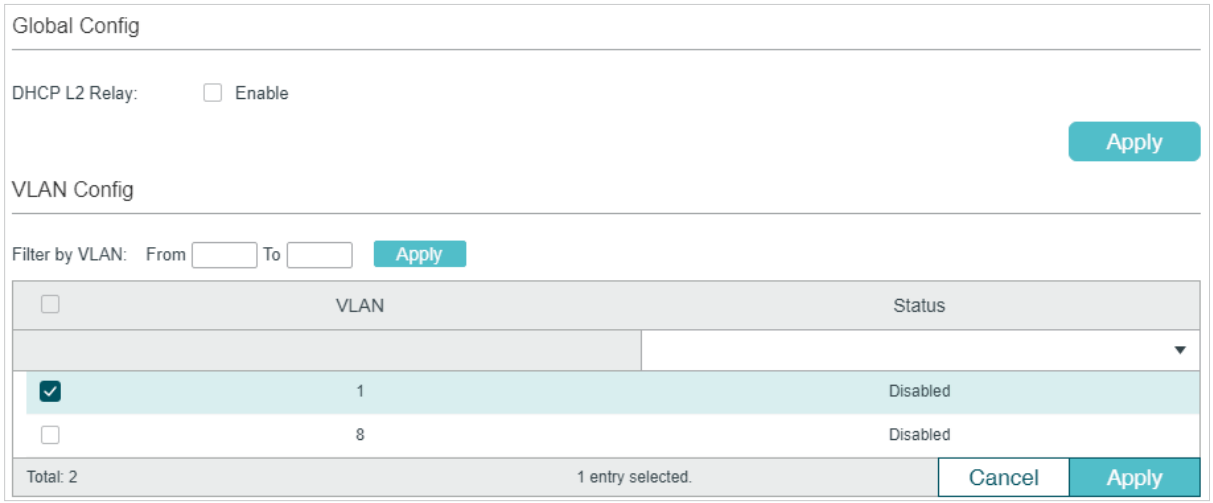

Follow these steps to enable DHCP L2 Relay globally and for the specified VLAN:

1) In the **Global Config** section, enable DHCP L2 Relay globally. Click **Apply**.

DHCP L2 Relay	Enable DHCP Relay globally.


2) In the **VLAN Config** section, enable DHCP L2 Relay for the specified VLAN. Click **Apply**.

VLAN	Displays the VLAN ID.
Status	Enable DHCP L2 Relay for the specified VLAN..

4.1.1 Configuring Option 82 for Ports

Choose the menu **L3 FEATURES > DHCP Service > DHCP L2 Relay > Port Config** to load the following page.

Figure 4-1 Configure Option 82 for Ports

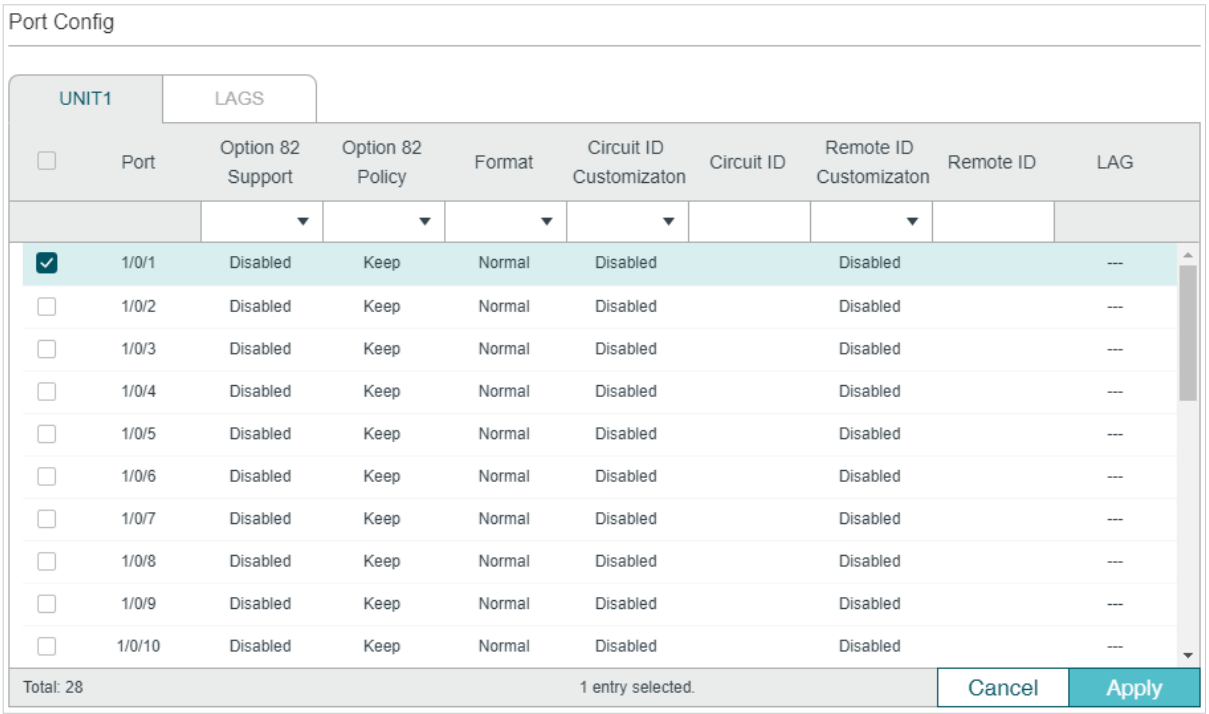

Follow these steps to enable DHCP Relay and configure Option 82:

1) Select one or more ports to configure Option 82.

Option 82 Support	Select whether to enable Option 82 or not. By default, it is disabled. Option 82 is used to record the DHCP client's location, Ethernet port and the VLAN, etc. If you need to record the accurate location of a client, you can enable Option 82 on the relay device which is closest to the client.
Option 82 Policy	Select the operation for the Option 82 field of the DHCP request packets. **Keep**: Indicates keeping the Option 82 field of the packets. **Replace**: Indicates replacing the Option 82 field of the packets with the switch defined one. By default, the Circuit ID is defined to be the VLAN and the ID of the port which receives the DHCP Request packets. The Remote ID is defined to be the MAC address of the DHCP Relay device which receives the DHCP Request packets. **Drop**: Indicates discarding the packets that include the Option 82 field.
Format	Select the format of option 82 sub-option value field. **Normal:** Indicates that the format of sub-option value field is TLV (type-length-value). **Private:** Indicates that the format of sub-option value field is just value.

Circuit ID Customization	Enable or disable Customization of Option 82. If enabled, you need to configure Option 82 information manually; If disabled, the switch will automatically configure the VLAN ID and the ID of the port that receives the DHCP packets as the circuit ID.
Circuit ID	Enter the customized circuit ID, which contains up to 64 characters. The circuit ID configurations of the switch and the DHCP server should be compatible with each other.
Remote ID Customization	Enable or disable the switch to define the Option 82 sub-option Remote ID field. If it is enabled, you can manually configure the remote ID; if it is disabled, the switch will automatically configure the switch's MAC address as the remote ID.
Remote ID	Enter the customized remote ID, which contains up to 64 characters. The remote ID configurations of the switch and the DHCP server should be compatible with each other.

2) Click **Apply**

4.2 Using the CLI

4.2.1 Enabling DHCP L2 Relay

Follow these steps to enable DHCP L2 Relay:

Step 1	**configure** Enter global configuration mode.
Step 2	**ip dhcp l2relay** Enable DHCP L2 Relay.
Step 3	**ip dhcp l2relay vlan** *valn-list* Enable DHCP L2 Relay for specified VLANs. *vlan-list:* Specify the vlan to be enabled with DHCP L2 relay.
Step 5	**show ip dhcp l2relay** Verify the configuration of DHCP Relay.
Step 6	**end** Return to Privileged EXEC Mode.
Step 7	**copy running-config startup-config** Save the settings in the configuration file.

The following example shows how to enable DHCP L2 Relay globally and for VLAN 2:

Switch#configure

Switch(config)#ip dhcp l2relay

Switch(config)#ip dhcp l2relay vlan 2

Switch(config)#show ip dhcp l2relay

Global Status: Enable

VLAN ID: 2

Switch(config)#end

Switch#copy running-config startup-config

4.2.2 Configuring Option 82 for Ports

Follow these steps to configure Option 82:

Step 1	**configure** Enter global configuration mode.
Step 2	**interface { fastEthernet** *port* **| range fastEthernet** *port-list* **| gigabitEthernet** *port* **| range gigabitEthernet** *port-list* **| ten-gigabitEthernet** *port* **| range ten-gigabitEthernet** *port-list* **}** Enter interface configuration mode.
Step 3	**ip dhcp l2relay information option** Enable the Option 82 feature on the port.
Step 4	**ip dhcp l2relay information strategy {** keep | replace | drop **}** Specify the operation for the Option 82 field of the DHCP request packets from the Host. The following options are provided: keep: Indicates keeping the Option 82 field of the packets. replace: Indicates replacing the Option 82 field of the packets with one defined by switch. By default, the Circuit ID is defined to be the VLAN and the number of the port which receives the DHCP Request packets. The Remote ID is defined to be the MAC address of the DHCP Snooping device which receives the DHCP Request packets. drop: Indicates discarding the packets that include the Option 82 field.
Step 5	**ip dhcp l2relay information format {** normal | private **}** Specify the format of option 82 sub-option value field. normal: Indicates that the format of sub-option value field is TLV (type-length-value). private: Indicates that the format of sub-option value field is the value you configure for the related sub-option.
Step 6	**ip dhcp l2relay information circuit-id** *string* Configure the circuit ID. The circuit ID configurations of the switch and the DHCP server should be compatible with each other. *string:* Enter the circuit ID, which contains up to 64 characters.

Step 7	**ip dhcp l2relay information remote-id** *string* Configure the remote ID. The remote ID configurations of the switch and the DHCP server should be compatible with each other. *string:* Enter the remote ID, which contains up to 64 characters.
Step 8	**show ip dhcp l2relay information interface { fastEthernet** *port* **| gigabitEthernet** *port* **| port-channel** *port-channel-id* **}** Verify the Option 82 configuration of the port.
Step 9	**end** Return to Privileged EXEC Mode.
Step 10	**copy running-config startup-config** Save the settings in the configuration file.

The following example shows how to enable Option 82 on port 1/0/7 and configure the strategy as replace, the format as normal, the circuit-id as VLAN20 and the remote-id as Host1:

Switch#configure

Switch(config)#interface gigabitEthernet 1/0/7

Switch(config-if)#ip dhcp l2relay information option

Switch(config-if)#ip dhcp l2relay information strategy replace

Switch(config-if)#ip dhcp l2relay information format normal

Switch(config-if)#ip dhcp l2relay information circut-id VLAN20

Switch(config-if)#ip dhcp l2relay information remote-id Host1

Switch(config-if)#show ip dhcp l2relay information interface gigabitEthernet 1/0/7

Interface	Option 82 Status	Operation Strategy	Format	Circuit ID	Remote ID	LAG
---	---	---	---	---	---	---
Gi1/0/7	Enable	Replace	Normal	VLAN20	Host1	N/A

Switch(config-if)#end

Switch#copy running-config startup-config


5 Configuration Examples

5.1 Example for DHCP Server

5.1.1 Network Requirements

As the network topology shows, the administrator uses the switch as the DHCP server to assign IP addresses to all the connected devices. The office computers need to obtain IP addresses dynamically, while the FTP server need to be assigned a fixed IP address.

Figure 5-1 Network Topology for DHCP Server

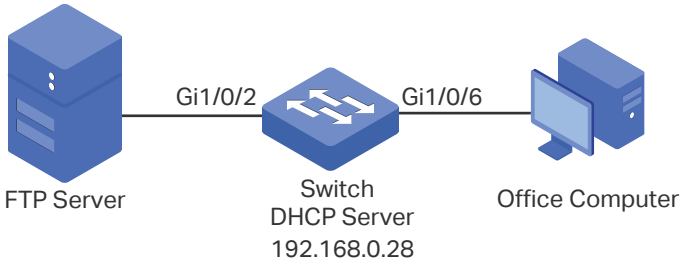

5.1.2 Configuration Scheme


You can enable the DHCP Server service on the switch and create a DHCP IP pool for all the connected devices. Then manually bind the MAC address of the FTP server to an IP address specified for the FTP server.

Demonstrated with T2600G-52TS, this chapter provides configuration procedures in two ways: using the GUI and using the CLI.

5.1.3 Using the GUI

1) Choose the menu **L3 FEATURES > DHCP Service > DHCP Server > DHCP Server** to load the following page. In the **Global Config** section, enable DHCP Server.


Figure 5-2 Configuring DHCP Server

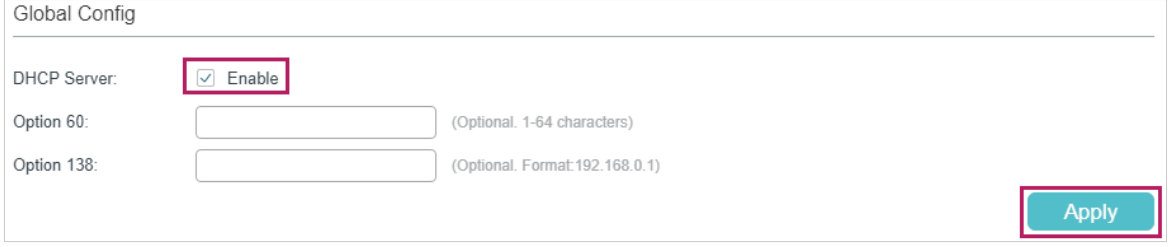

2) Choose the menu **L3 FEATURES > DHCP Service > DHCP Server > Pool Setting** and click Add to load the following page. Specify the Pool Name, Network Address,


Subnet Mask, Lease Time, Default Gateway and DNS Server as shown below. Click **Create**.

Figure 5-3 Configuring DHCP Server Pool

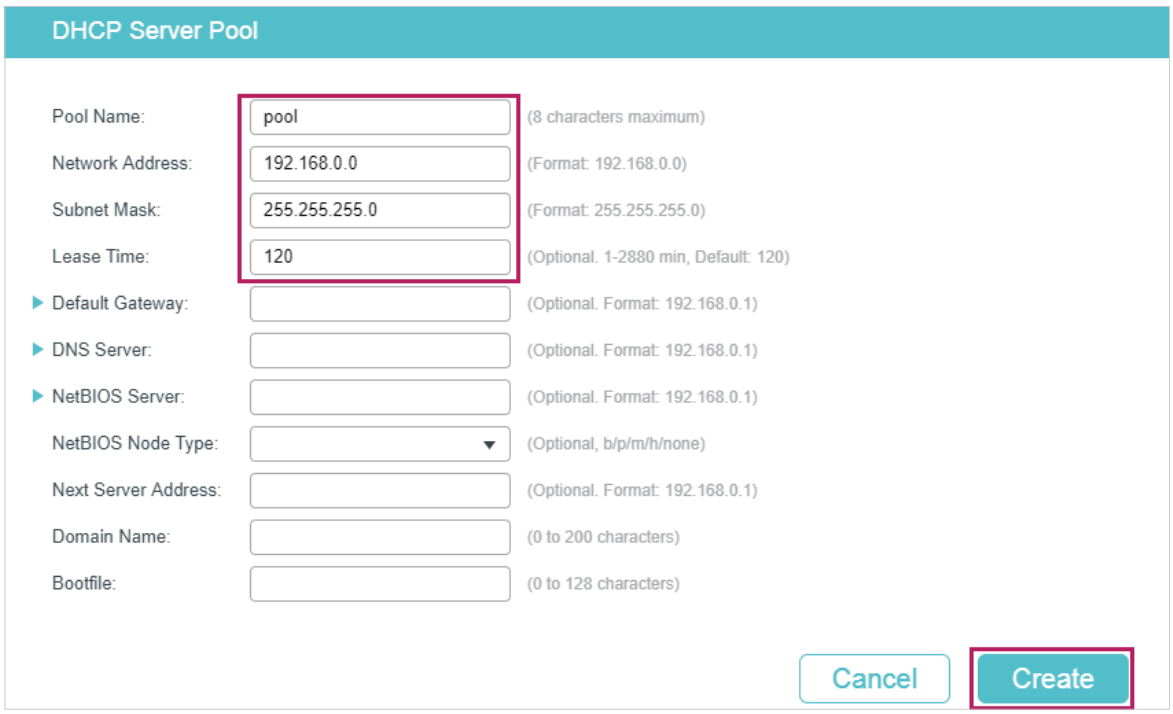

3) Choose the menu **L3 FEATURES > DHCP Service > DHCP Server > Manual Binding** and click Add to load the following page. Select the DHCP server pool you just created, and enter the IP address of the FTP server in the IP Address field. Select Hardware Address as the binding mode, and enter the MAC address of the FTP server in the Hardware Address field. Select Ethernet as the Hardware Type. Click **Create**.

Figure 5-4 Configuring Manual Binding

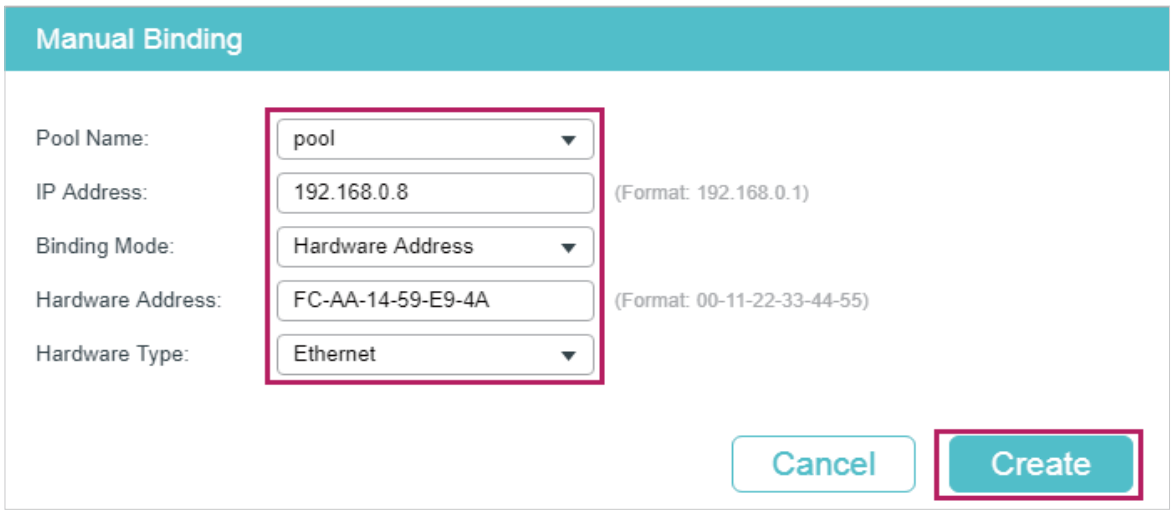

4) Click Save to save the settings.

5.1.4 Using the CLI

1) Enable DHCP Server.

Switch#configure

Switch(config)#service dhcp server

2) Specify the Pool Name, Network Address, Subnet Mask and Lease Time.

Switch(config)#ip dhcp server pool pool

Switch(dhcp-config)#network 192.168.0.0 255.255.255.0

Switch(dhcp-config)#lease 120

Switch(dhcp-config)#exit

3) Bind the specified IP address to the MAC address of the FTP server.

Switch(config)# ip dhcp server pool pool

Switch(dhcp-config)# address 192.168.0.8 hardware-address FC-AA-14-59-E9-4A hardware-type ethernet

Switch(dhcp-config)#end

Switch#copy running-config startup-config

Verify the Configuration

Switch#show ip dhcp server binding

IP Address	Client id/Hardware Address	Type	Lease Time Left
192.168.0.2	01-d43d-7ebf-615f	Automatic	01:57:27
192.168.0.8	01-fcaa-1459-e94a	Manual	Infinite


5.2 Example for DHCP Interface Relay

5.2.1 Network Requirements

The administrator deploys one DHCP server on the network, and want the server to assign IP addresses to the computers in the Marketing department and the R&D department . It is required that computers in the same department should be on the same subnet, while computers in different departments should be on different subnets.

As the network topology shows, the Marketing department and the R&D department respectively belong to VLAN 10 and VLAN 20. The IP address of VLAN interface 10 is 192.168.2.1 and the IP address of VLAN interface 20 is 192.168.3.1. The DHCP server is connected to the routed port of the switch. The Marketing department is connected to port 1/0/1 of the relay agent and the R&D department is connected to port 1/0/2 of the relay agent.

Figure 5-5 Network Topology for DHCP Interface Relay

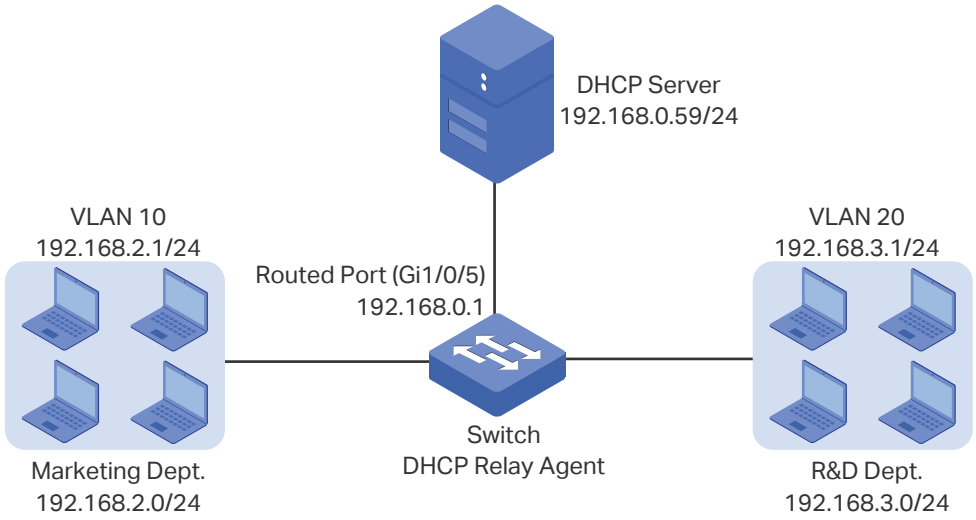

5.2.2 Configuration Scheme

In the given situation, the DHCP server and the computers are isolated in different network segments, so the DHCP request from the clients cannot be directly forwarded to the DHCP server. To satisfy the requirement that the two departments are assigned IP addresses in different subnet, we recommend you to configure DHCP Interface Relay to satisfy the requirement.

The overview of the configurations are as follows:

1) Before configuring DHCP Interface Relay, create two DHCP IP pools on the DHCP server, one is on 192.168.2.0/24 network segment and the other is on 192.168.3.0/24 network segment. Then create static routes or enable dynamic routing protocol like RIP on the DHCP server to make sure the DHCP server can reach the clients in the two VLANs.
2) Configure 802.1Q VLAN on the DHCP relay agent. Add all computers in the marketing department to VLAN 10, and add all computers in the R&D department to VLAN 20.
3) Create VLAN interfaces for VLAN 10 and VLAN 20 on the DHCP relay agent.
4) Configure DHCP Interface Relay on the DHCP relay agent. Enable DHCP Relay globally, and specify the DHCP server address for each VLAN.


In this example, the DHCP server is demonstrated with T2600G-52TS and the DHCP relay agent is demonstrated with T2600G-28TS. This chapter provides configuration procedures in two ways: using the GUI and using the CLI.

5.2.3 Using the GUI

- Configuring the DHCP Server

1) Choose the menu **L3 FEATURES > DHCP Service > DHCP Server > DHCP Server** to load the following page. In the **Global Config** section, enable DHCP Server globally.

Figure 5-6 Configuring DHCP Server

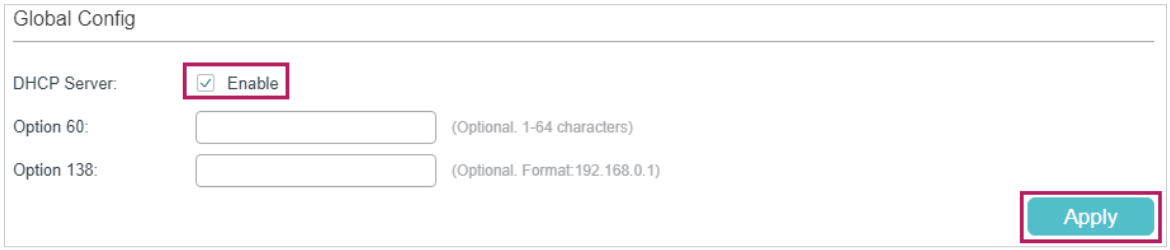

2) Choose the menu **L3 FEATURES > DHCP Service > DHCP Server > Pool Setting** and click Add to load the following page. Create pool 1 for VLAN 10 and pool 2 for VLAN 20. Configure the corresponding parameters as the following pictures show.

Figure 5-7 Configuring DHCP Pool 1 for VLAN 10


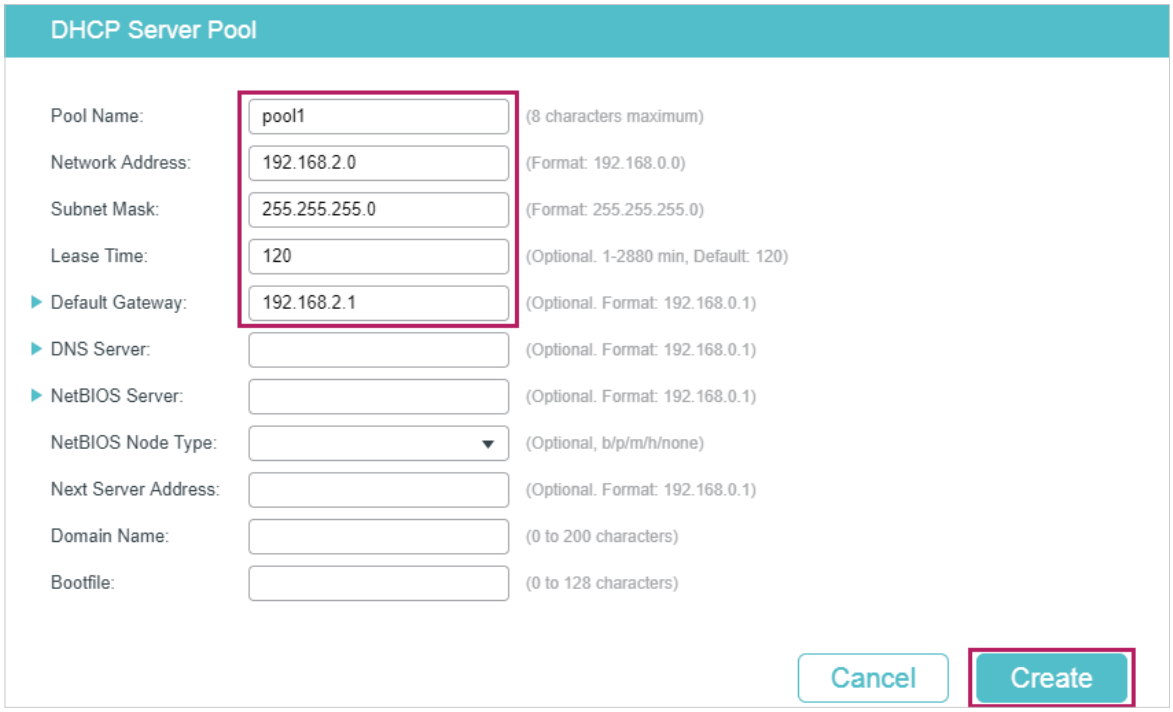


Figure 5-8 Configuring DHCP Pool 2 for VLAN 20

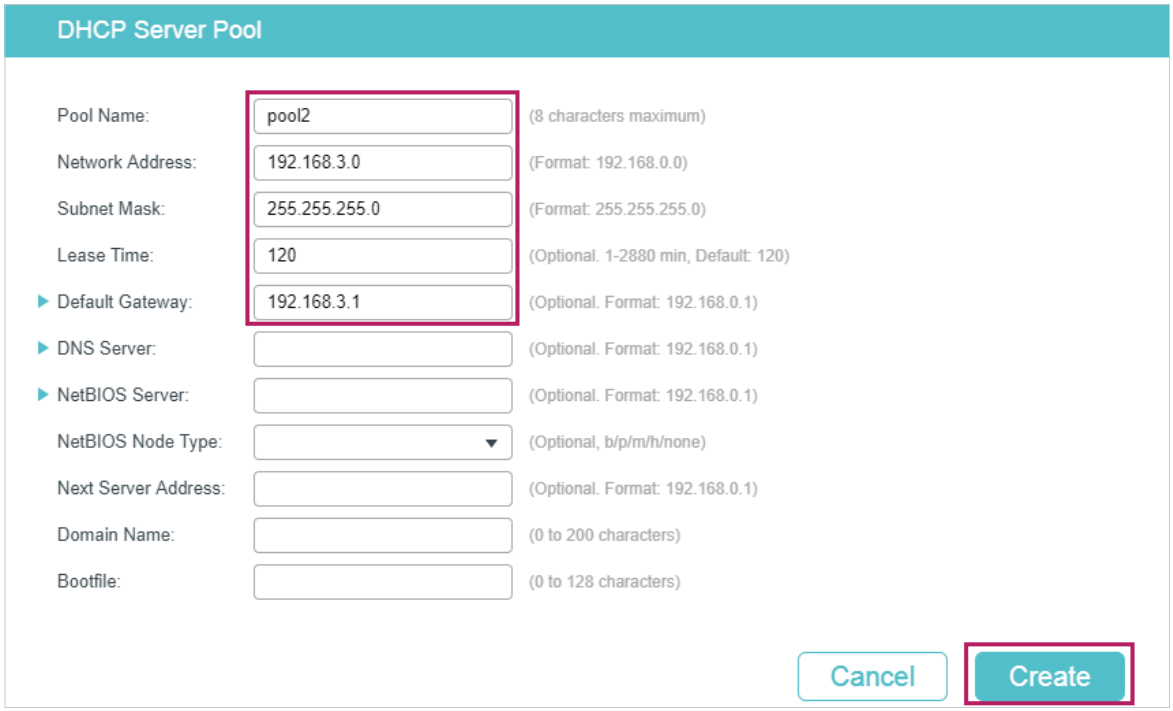

3) Choose the menu **L3 FEATURES > Static Routing > IPv4 Static Routing** and click Add to load the following page. Create two static routing entries for the DHCP server to make sure that the DHCP server can reach the clients in the two VLANs.

Figure 5-9 Creating the Static Routing Entry for VLAN 10


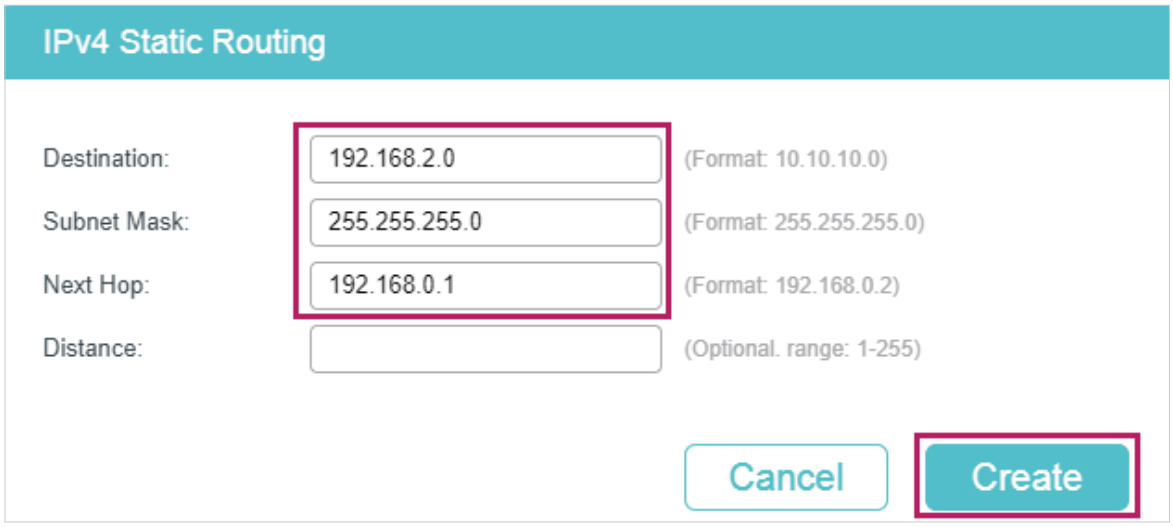


Figure 5-10 Creating the Static Routing Entry for VLAN 20

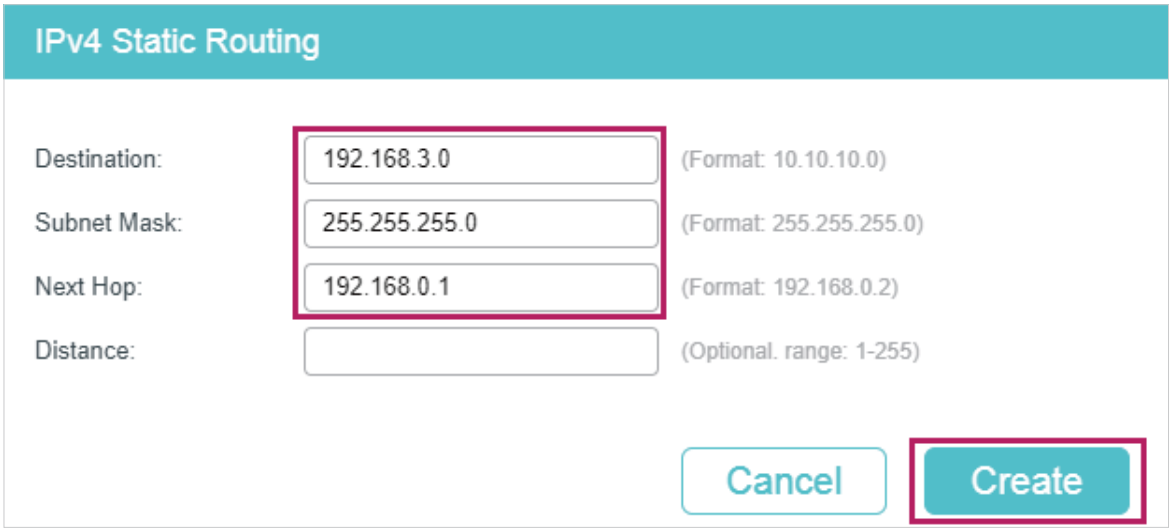

- Configuring the VLANs on the Relay Agent

1) Choose the menu **L2 FEATURES > VLAN > 802.1Q VLAN > VLAN Config** and click Add to load the following page. Create VLAN 10 and VLAN 20 for the Marketing department and R&D department respectively. Add port 1/0/1 to VLAN 10 and port 1/0/2 to VLAN 20.

Figure 5-11 Creating VLAN 10


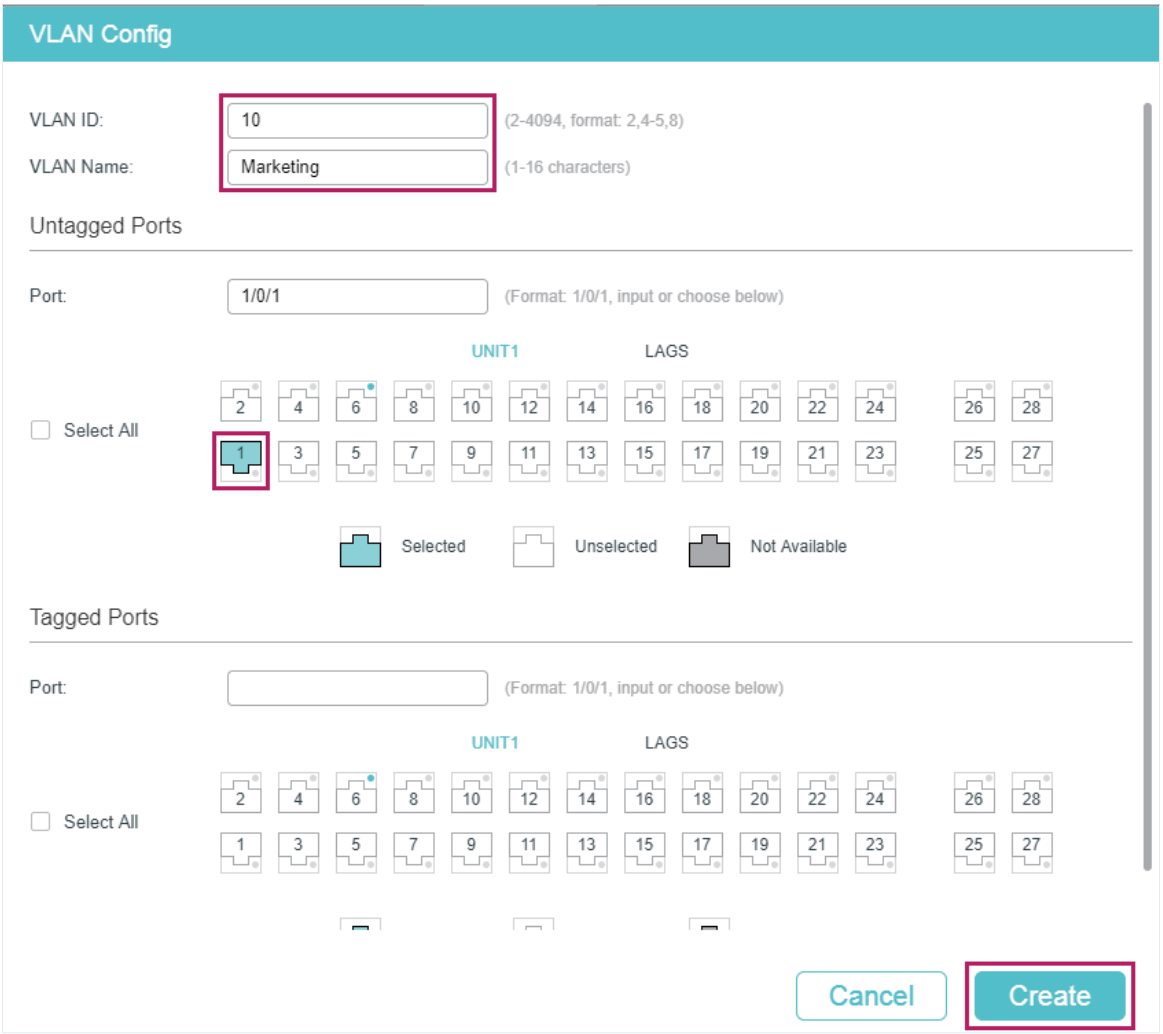


Figure 5-12 Creating VLAN 20

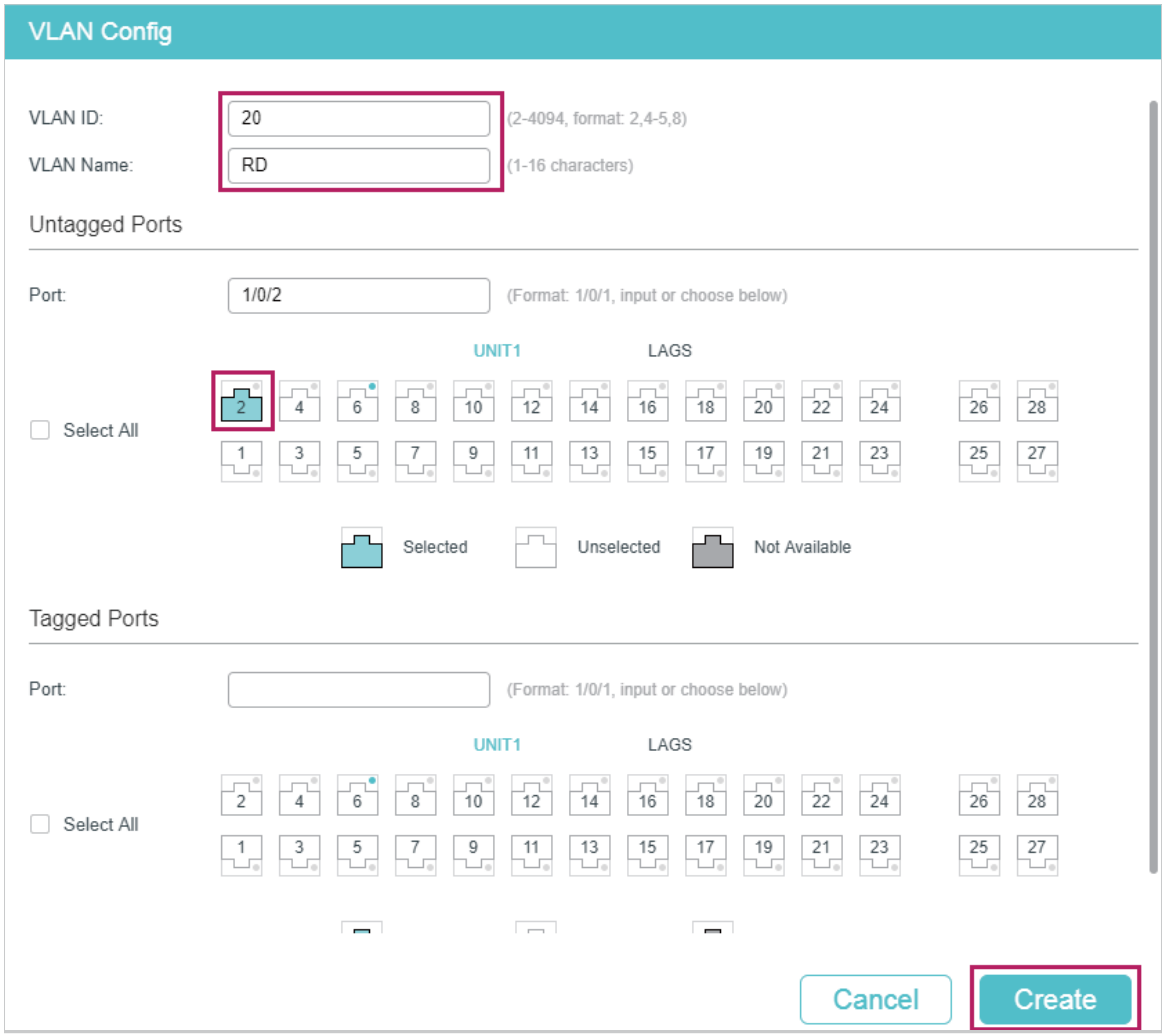

- Configuring the VLAN Interface and Routed Port on the Relay Agent

1) Choose the menu **L3 FEATURES > Interface** and click Add to load the following page. Create VLAN interface 10 and VLAN interface 20. Configure port 1/0/5 as the routed port.

Figure 5-13 Creating VLAN Interface 10

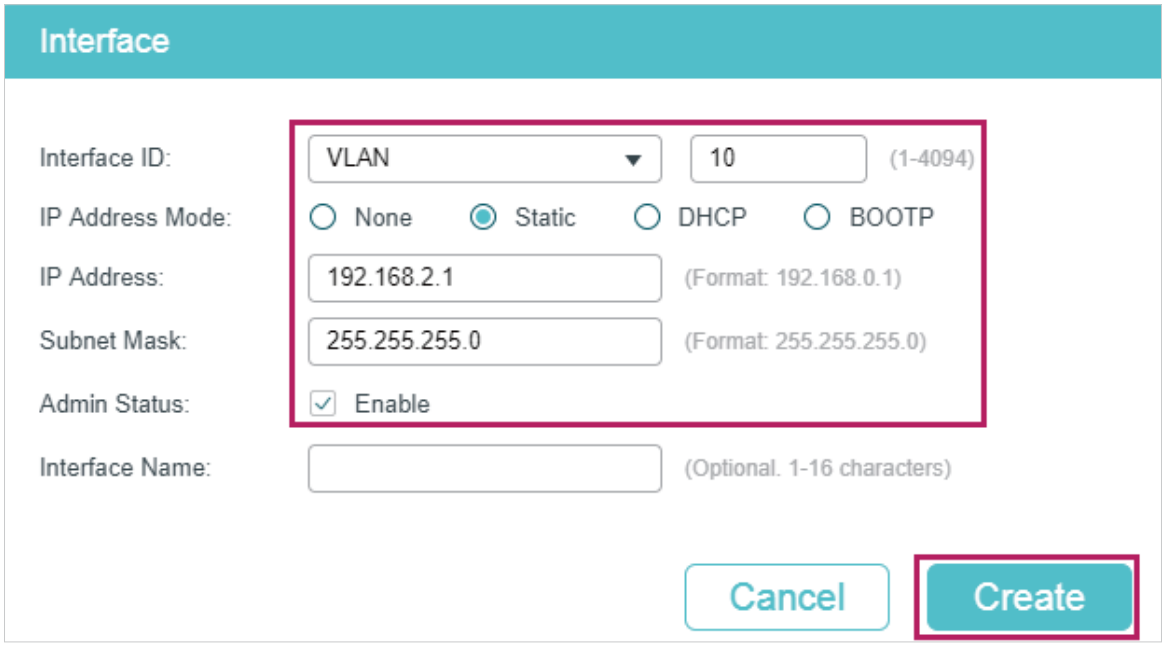


Figure 5-14 Creating VLAN Interface 20


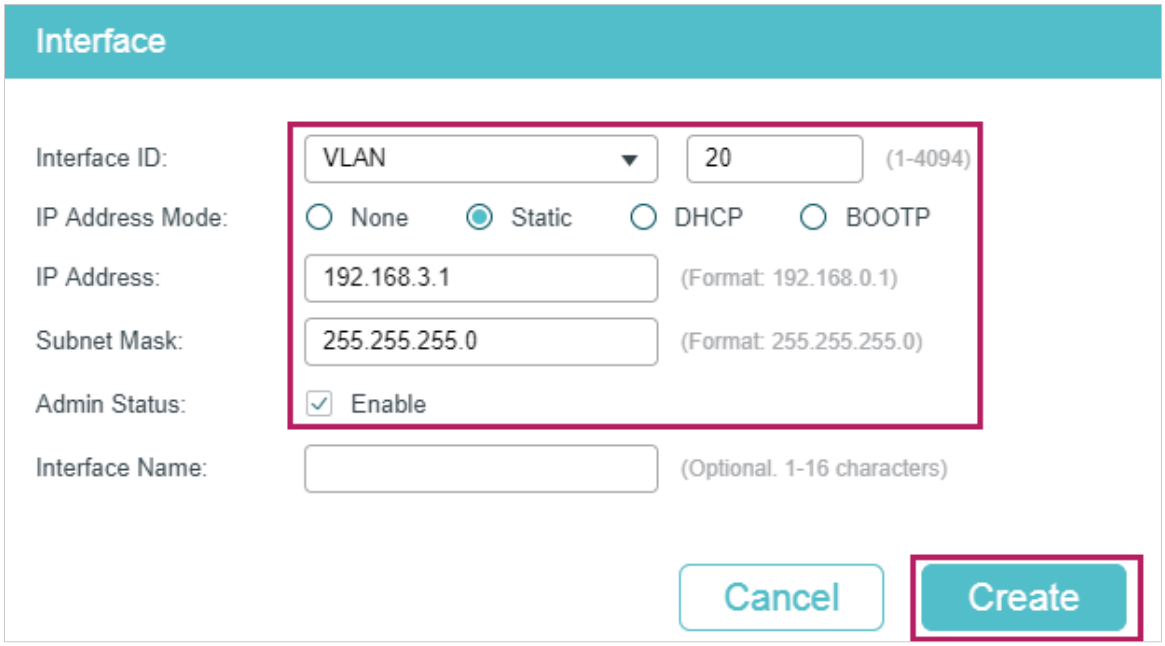



Figure 5-15 Configuring the Routed Port

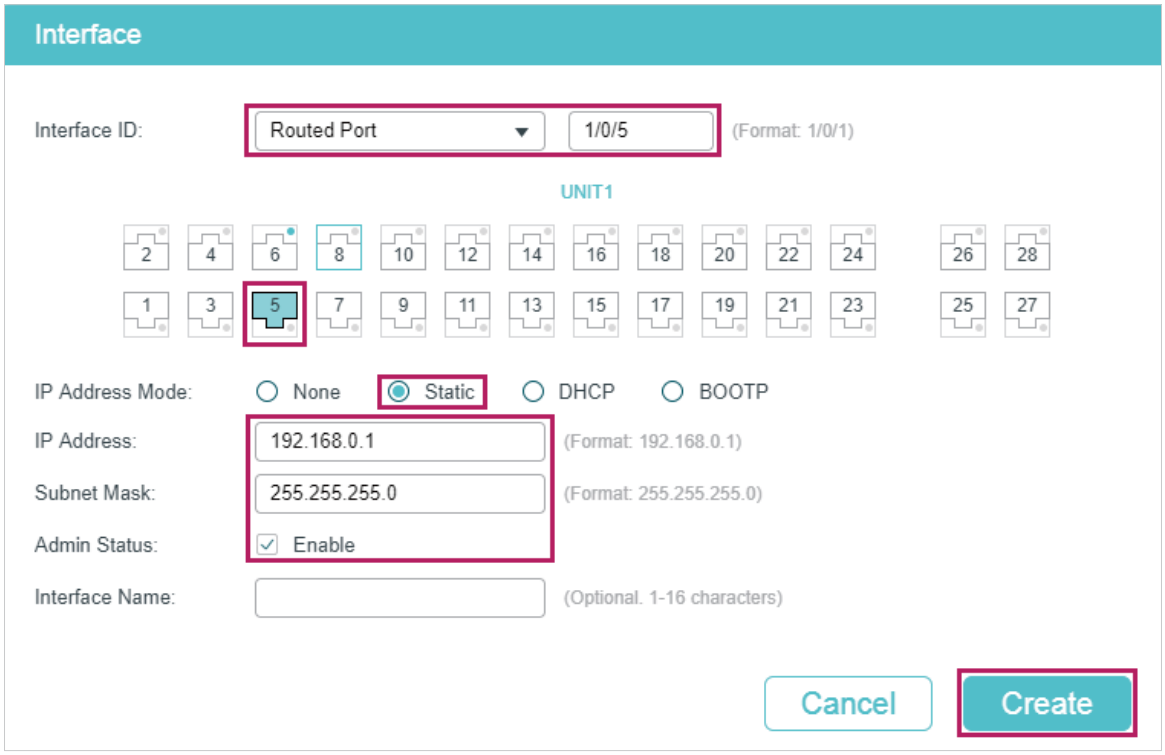

Configuring DHCP Interface Relay on the Relay Agent

1) Choose the menu **L3 FEATURES > DHCP Service > DHCP Relay > DHCP Relay Config** to load the following page. In the **Global Config** section, enable DHCP Relay, and click **Apply**.

Figure 5-16 Enable DHCP Relay

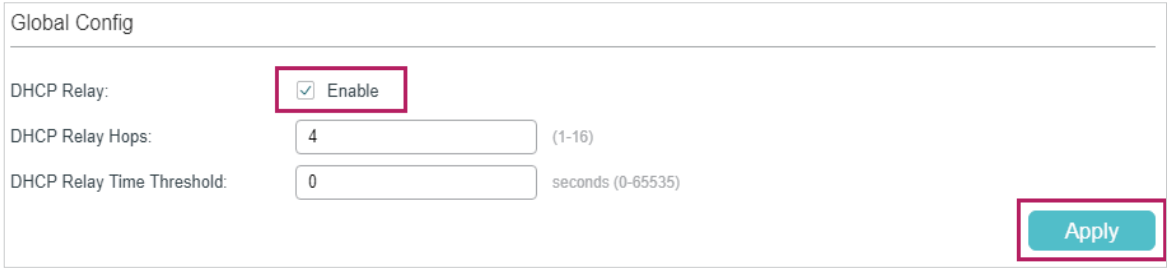

2) Choose the menu **L3 FEATURES > DHCP Service > DHCP Relay > DHCP Interface Relay** and click Add to load the following page. Specify the DHCP server for the clients in VLAN 10 and VLAN 20.

Figure 5-17 Specify DHCP Server for Interface VLAN 10


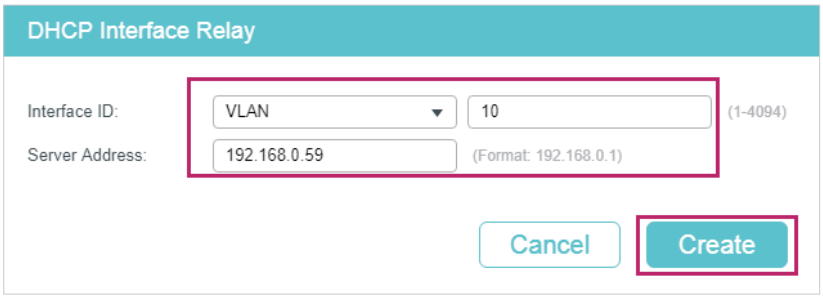


Figure 5-18 Specify DHCP Server for Interface VLAN 20

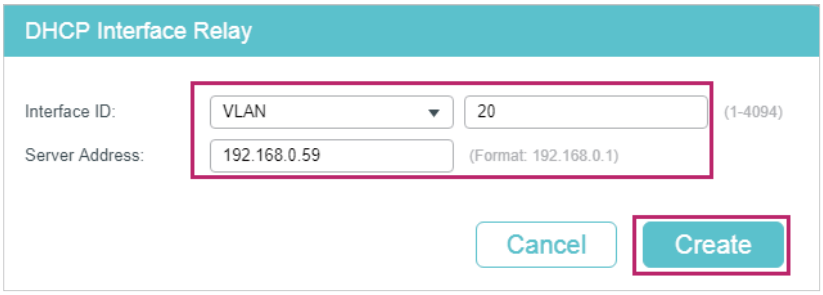

3) Click Save to save the settings.

5.2.4 Using the CLI

- Configurting the DHCP Server

1) Enable DHCP service globally.

Switch#configure

Switch(config)#service dhcp server

2) Create DHCP pool 1 and configure its network address as 192.168.2.0, subnet mask as 255.255.255.0, lease time as 120 minute, default gateway as 192.168.2.1; Create DHCP pool 2 and configure its network address as 192.168.3.0, subnet mask as 255.255.255.0, lease time as 120 minute, default gateway as 192.168.3.1.

Switch(config)#ip dhcp server pool pool1

Switch(dhcp-config)#network 192.168.2.0 255.255.255.0

Switch(dhcp-config)#lease 120

Switch(dhcp-config)#default-gateway 192.168.2.1

Switch(dhcp-config)#exit

Switch(config)#ip dhcp server pool pool1

Switch(dhcp-config)#network 192.168.2.0 255.255.255.0

Switch(dhcp-config)#lease 120

Switch(dhcp-config)#default-gateway 192.168.2.1

Switch(dhcp-config)#exit

3) Create two static routing entries to make sure that the DHCP server can reach the clients in the two VLANs.

Switch(config)# ip route 192.168.2.0 255.255.255.0 192.168.0.1

Switch(config)# ip route 192.168.3.0 255.255.255.0 192.168.0.1

Switch(config)#end

Switch#copy running-config startup-config

- Configuring the VLAN on the Relay Agent

Switch(config)# vlan 10

Switch(config-vlan)#name Marketing

Switch(config-vlan)#exit

Switch(config)#interface gigabitEthernet 1/0/1

Switch(config-if)#switchport general allowed vlan 10 untagged

Switch(config-if)#exit

Switch(config)# vlan 20

Switch(config-vlan)#name RD

Switch(config-vlan)#exit

Switch(config)#interface gigabitEthernet 1/0/2

Switch(config-if)#switchport general allowed vlan 20 untagged

Switch(config-if)#exit

- Configuring the VLAN Interfaces Routed Port on the Relay Agent

Switch(config)#interface vlan 10

Switch(config-if)#ip address 192.168.2.1 255.255.255.0

Switch(config-if)#ex

Switch(config)#interface vlan 20

Switch(config-if)#ip address 192.168.3.1 255.255.255.0

Switch(config-if)#exit

Switch(config)#interface gigabitEthernet 1/0/5

Switch(config-if)#ip address 192.168.0.1 255.255.255.0

Switch(config-if)#exit

- Configuring DHCP Interface Relay on the Relay Agent

1) Enable DHCP Relay.

Switch#configure

Switch(config)#service dhcp relay

2) Specify the DHCP server for the interface VLAN 10.

```
Switch(config)#interface vlan 10
Switch(config-if)#ip helper-address 192.168.0.59
Switch(config-if)#exit
```

3) Specify the DHCP server for interface VLAN 20

```
Switch(config)#interface vlan 20
Switch(config-if)#ip helper-address 192.168.0.59
Switch(config-if)#end
Switch#copy running-config startup-config
```

Verify the Configurations of the DHCP Relay Agent

```
Switch#show ip dhcp relay
DHCP relay is enabled
...
DHCP relay helper address is configured on the following interfaces:
Interface            Helper address
-------------------- ------------------------
VLAN10               192.168.0.59
VLAN20               192.168.0.59
...
```


5.3 Example for DHCP VLAN Relay

5.3.1 Network Requirements

The Marketing department and the R&D department respectively belong to two VLANs. Both of the VLANs have no Layer 3 gateways. The administrator deploys one DHCP server on the network, and wants the server to assign IP addresses to the two departments.

As the network topology shows, the Marketing department and the R&D department respectively belong to VLAN 10 and VLAN 20. The Marketing department is connected to port 1/0/1 of the relay agent and the R&D department is connected to port 1/0/2 of the relay agent.

Figure 5-19 Network Topology for DHCP VLAN Relay

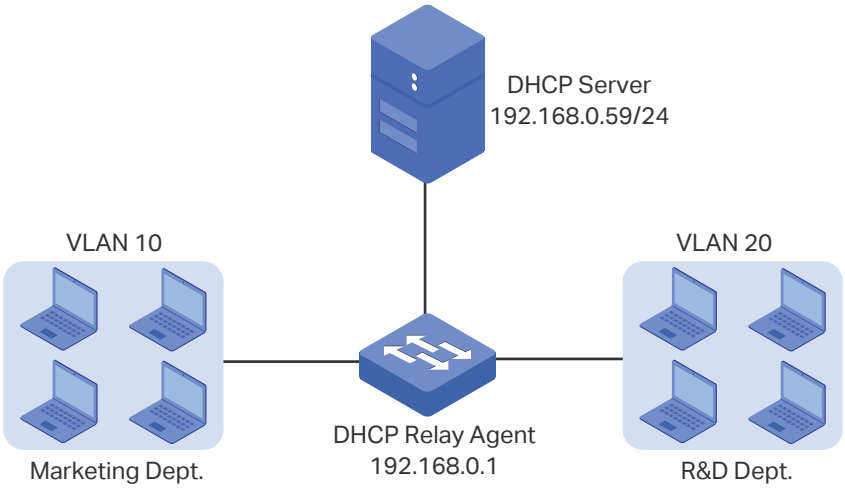

5.3.2 Configuration Scheme

In the given situation, the DHCP server and the computers are isolated by VLANs, so the DHCP request from the clients cannot be directly forwarded to the DHCP server. Considering that the two VLANs have no Layer 3 gateways, we recommend you to configure DHCP VLAN Relay to satisfy the requirement.

The overview of the configurations are as follows:

1) Create one DHCP IP pool on the DHCP server, which is on 192.168.0.0/24 network segment.
2) Configure 802.1Q VLAN on the DHCP relay agent. Add all computers in the marketing department to VLAN 10, and add all computers in the R&D department to VLAN 20.
3) Configure DHCP VLAN Relay on the DHCP relay agent. Enable DHCP Relay globally, choose the VLAN interface 1 (the default management VLAN interface) as the default relay agent interface, and specify the DHCP server address for VLAN 10 and VLAN 20.


In this example, the DHCP server is demonstrated with T2600G-28TS and the DHCP relay agent is demonstrated with T2600G-52TS. This chapter provides configuration procedures in two ways: using the GUI and using the CLI.

5.3.3 Using the GUI

- Configuring the DHCP Server


1) Choose the menu **L3 FEATURES > DHCP Service > DHCP Server > DHCP Server** to load the following page. In the **Global Config** section, enable DHCP Server globally.

Figure 5-20 Configuring DHCP Server

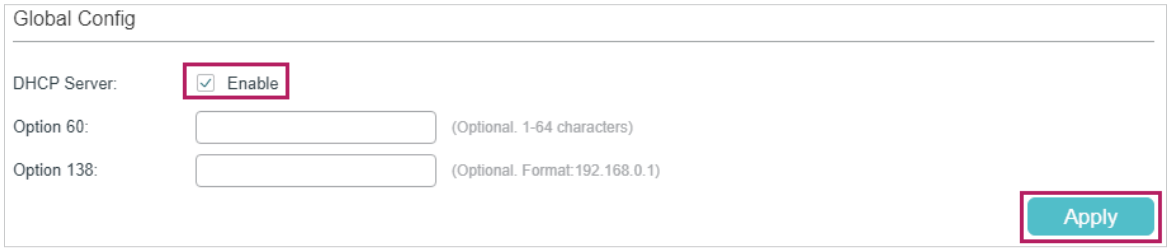

2) Choose the menu **L3 FEATURES > DHCP Service > DHCP Server > Pool Setting** and click Add to load the following page. Create a DHCP pool for the clients. Configure the corresponding parameters as the following picture shows.

Figure 5-21 Configuring DHCP Pool 1 for VLAN 10

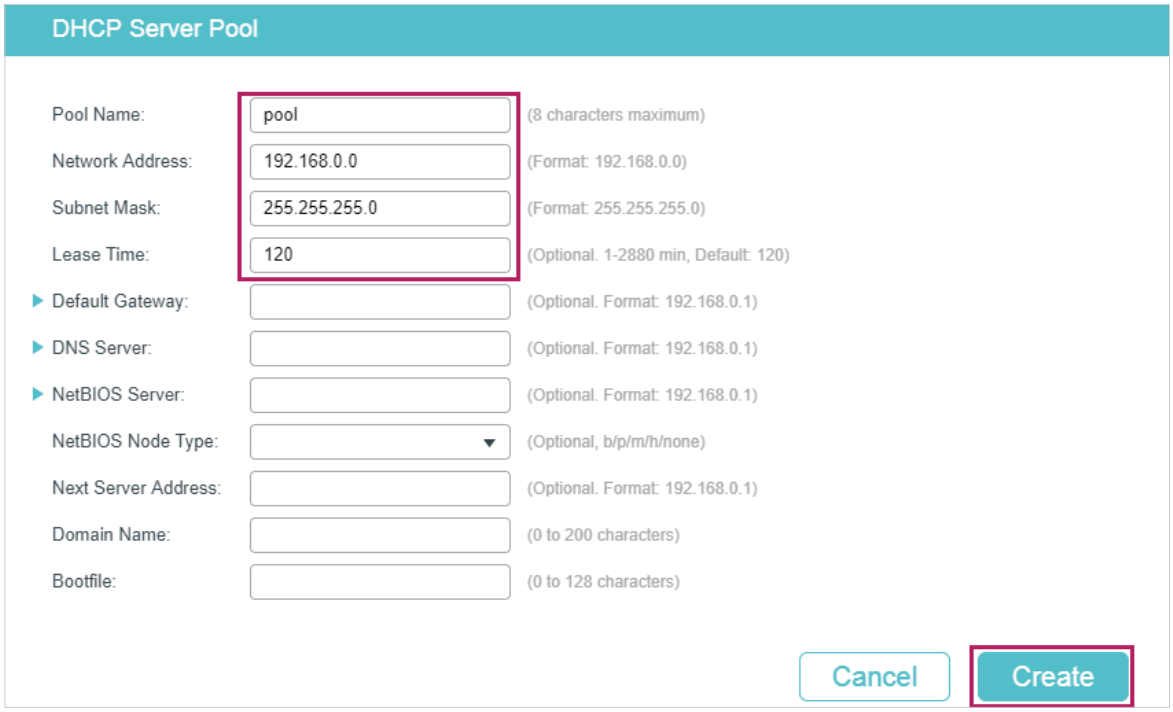

- Configuring the VLANs on the Relay Agent

3) Choose the menu **L2 FEATURES > VLAN > 802.1Q VLAN > VLAN Config** and click Add to load the following page. Create VLAN 10 and VLAN 20 for the Marketing department and R&D department respectively. Add port 1/0/1 to VLAN 10 and port 1/0/2 to VLAN 20.

Figure 5-22 Creating VLAN 10


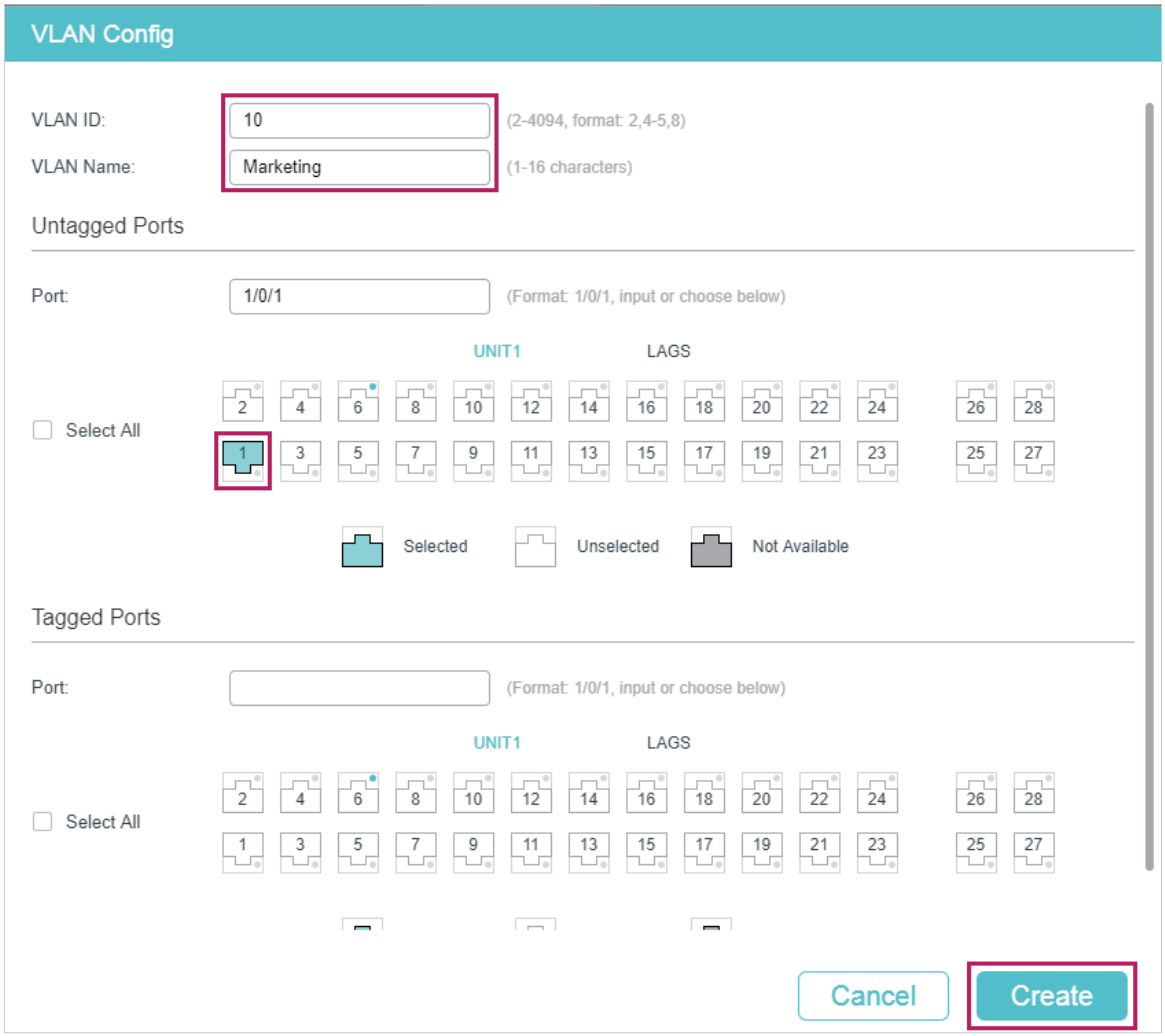



Figure 5-23 Creating VLAN 20

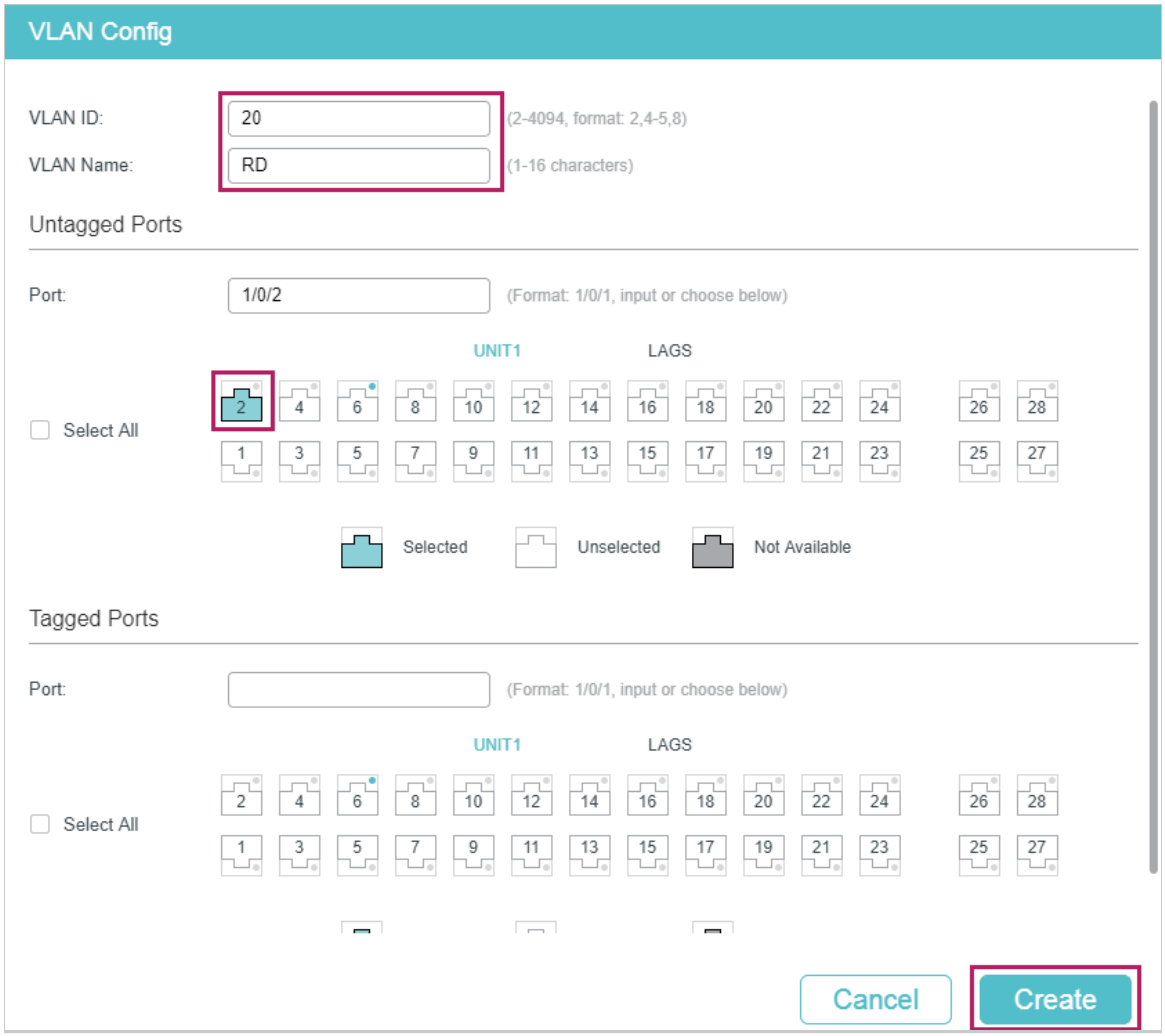

Configuring DHCP VLAN Relay on the Relay Agent


1) Choose the menu **L3 FEATURES > DHCP Service > DHCP Relay > DHCP Relay Config** to load the following page. In the **Global Config** section, enable DHCP Relay, and click **Apply**.

Figure 5-24 Enable DHCP Relay

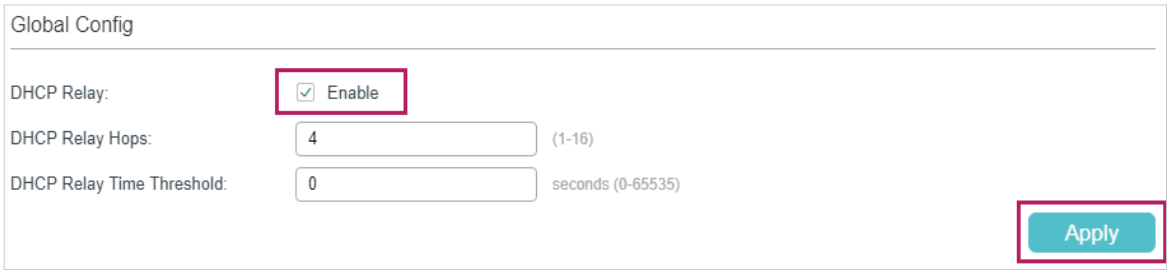

2) Choose the menu **L3 FEATURES > DHCP Service > DHCP Relay > DHCP VLAN Relay** to load the following page. In the **Default Relay Agent Interface** section, specify VLAN interface 1 (the default management VLAN interface) as the default relay agent interface.

Figure 5-25 Specify the Default Relay Agent Interface

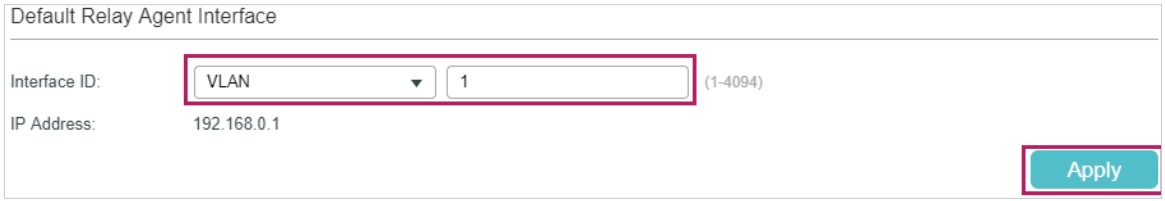

3) Choose the menu **L3 FEATURES > DHCP Service > DHCP Relay > DHCP VLAN Relay** and click Add to load the following page. Specify the DHCP server address for the clients in VLAN 10 and VLAN 20.

Figure 5-26 Specify DHCP Server for Interface VLAN 10


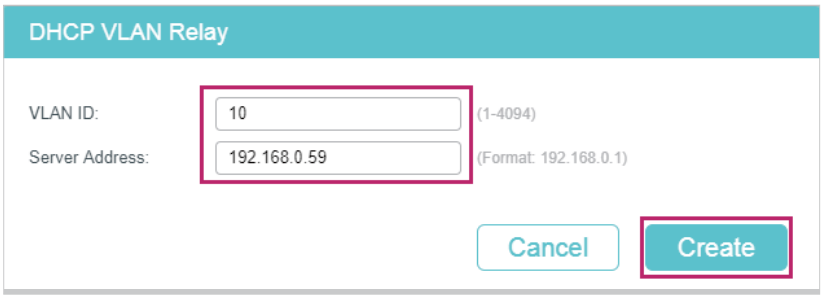


Figure 5-27 Specify DHCP Server for Interface VLAN 20

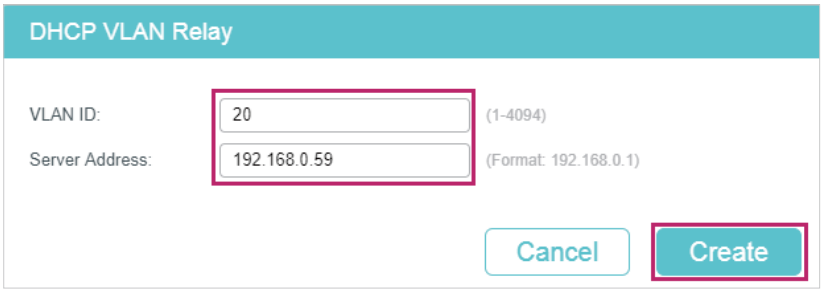

4) Click Save to save the settings.

5.3.4 Using the CLI

- Configurting the DHCP Server

1) Enable DHCP service globally.

Switch#configure

Switch(config)#service dhcp server

2) Create a DHCP pool and name it as “pool” and configure its network address as 192.168.0.0, subnet mask as 255.255.255.0, lease time as 120 minute, default gateway as 192.168.0.1.

Switch(config)#ip dhcp server pool pool

Switch(dhcp-config)#network 192.168.0.0 255.255.255.0

Switch(dhcp-config)#lease 120

Switch(dhcp-config)#default-gateway 192.168.0.1

Switch(dhcp-config)#dns-server 192.168.0.2

Switch(dhcp-config)#end

Switch#copy running-config startup-config

- Configuring the VLAN on the Relay Agent

Switch#configure

Switch(config)# vlan 10

Switch(config-vlan)#name Marketing

Switch(config-vlan)#exit

Switch(config)#interface gigabitEthernet 1/0/1

Switch(config-if)#switchport general allowed vlan 10 untagged

Switch(config-if)#exit

Switch(config)# vlan 20

Switch(config-vlan)#name RD

Switch(config-vlan)#exit

Switch(config)#interface gigabitEthernet 1/0/2

Switch(config-if)#switchport general allowed vlan 20 untagged

Switch(config-if)#exit

- Configuring DHCP VLAN Relay on the Relay Agent

1) Enable DHCP Relay.

Switch(config)#service dhcp relay

2) Specify the routed port 1/0/5 as the default relay agent interface.

Switch(config)#interface vlan 1

Switch(config-if)#ip dhcp relay default-interface

Switch(config-if)#exit

3) Specify the DHCP server for VLAN 10 and VLAN 20

Switch(config)#ip dhcp relay vlan 10 helper-address 192.168.0.59

Switch(config)#ip dhcp relay vlan 20 helper-address 192.168.0.59

Switch(config)#exit

Verify the Configurations of the DHCP Relay Agent

Switch#show ip dhcp relay

Switch#show ip dhcp relay

DHCP relay state: enabled

...

DHCP relay default relay agent interface:

Interface: VLAN 1

IP address: 192.168.0.1

DHCP vlan relay helper address is configured on the following vlan:

vlan	Helper address
VLAN 10	192.168.0.59
VLAN 20	192.168.0.59


5.4 Example for DHCP L2 Relay

5.4.1 Network Requirements

As the following figure shows, two groups are connected to Switch A, and Switch A is connected to the DHCP server. All devices on the network are in the default VLAN1. For management convenience, there are the network requirements:

- All PCs on the network get dynamic IP addresses from the DHCP server.
- For Group1, the DHCP server assigns the IP addresses from 192.168.10.100 to 192.168.10.150.
- For Group2, the DHCP server assigns IP addresses from 192.168.10.151 to 192.168.10.200.
- Switch A acts as the DHCP Relay to inform the DHCP server of the group information.

Figure 5-28 Network Topology for DHCP L2 Relay

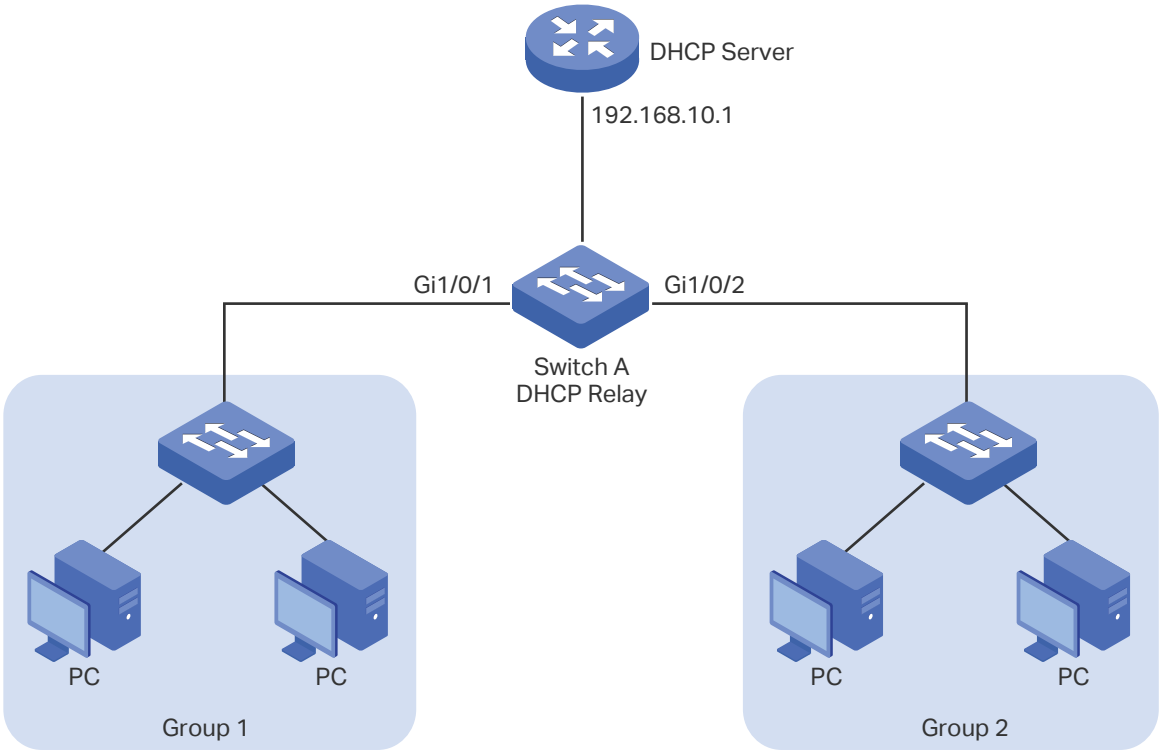

5.4.2 Configuration Scheme

First, make sure that the DHCP server supports Option 82. Then you can configure DHCP L2 Relay on Switch A to inform the DHCP server of the group information of each PC, so that the DHCP server can assign different IP address to the PCs in different groups.

The detailed configurations on the DHCP server may be different among different devices. The general configuration is to create two IP address pools for the two groups and configure the server to identify the DHCP packets from different groups through the option 82. You can refer to the related document that is for the DHCP server.

This chapter introduces the configurations on Switch A, which acts as the DHCP Relay. The configuration overview is as follows:


1) Enable DHCP L2 Relay globally and on VLAN1.
2) Configure Option 82 on ports 1/0/1 and 1/0/2.

Demonstrated with T2600G-28TS, this chapter provides configuration procedures in two ways: using the GUI and using the CLI.

5.4.3 Using the GUI


1) Choose the menu **L3 FEATURES** > **DHCP Service** > **DHCP L2 Relay** > **Global Config** to load the following page. In the **Global Config** section, enable DHCP L2 Relay globally and click **Apply**. Enable DHCP L2 Relay on VLAN 1 and click **Apply**.

Figure 5-29 Enabling DHCP L2 Relay

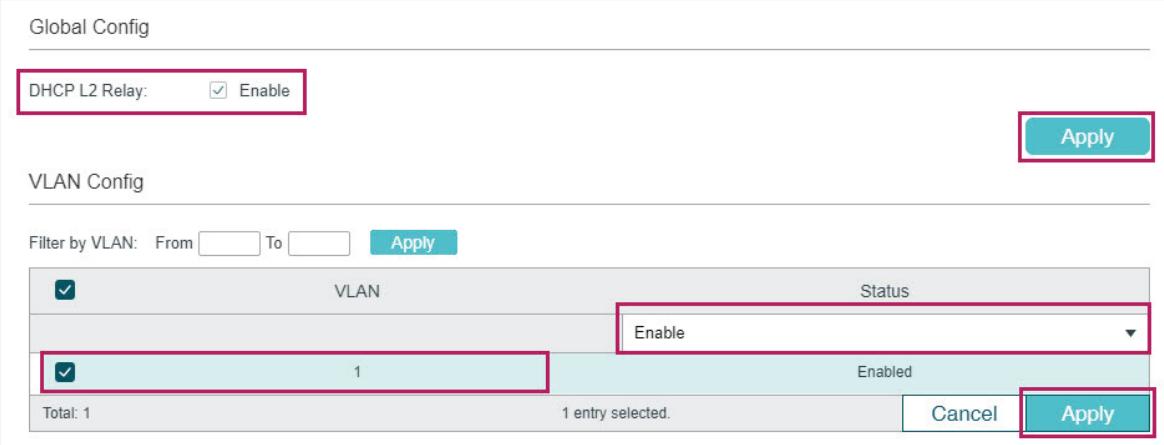


2) Choose the menu **L3 FEATURES** > **DHCP Service** > **DHCP L2 Relay** > **Port Config** to load the following page. Select port 1/0/1, enable Option 82, select Option 82 Policy as Replace, enable Circuit ID Customization and specify the Circuit ID as Group1. Click **Apply**.

Figure 5-30 Configuring Port 1/0/1

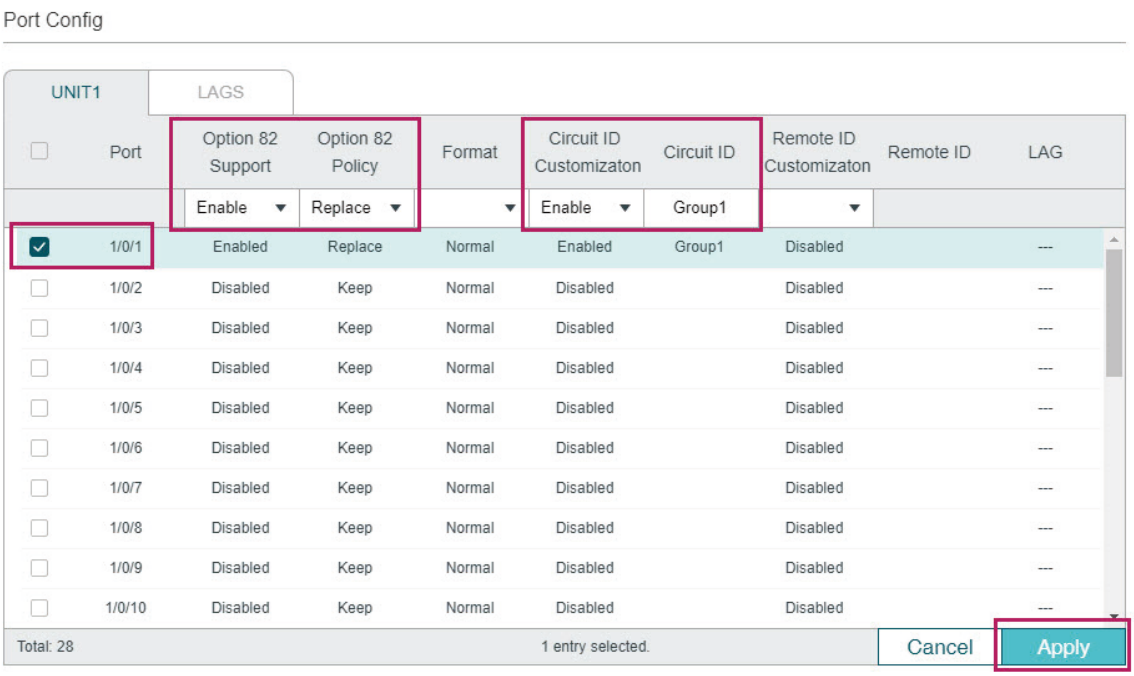

3) On the same page, select port 1/0/2, enable Option 82, select Option 82 Policy as Replace, enable Circuit ID Customization and specify the Circuit ID as Group2. Click **Apply**.

Figure 5-31 Configuring Port 1/0/2

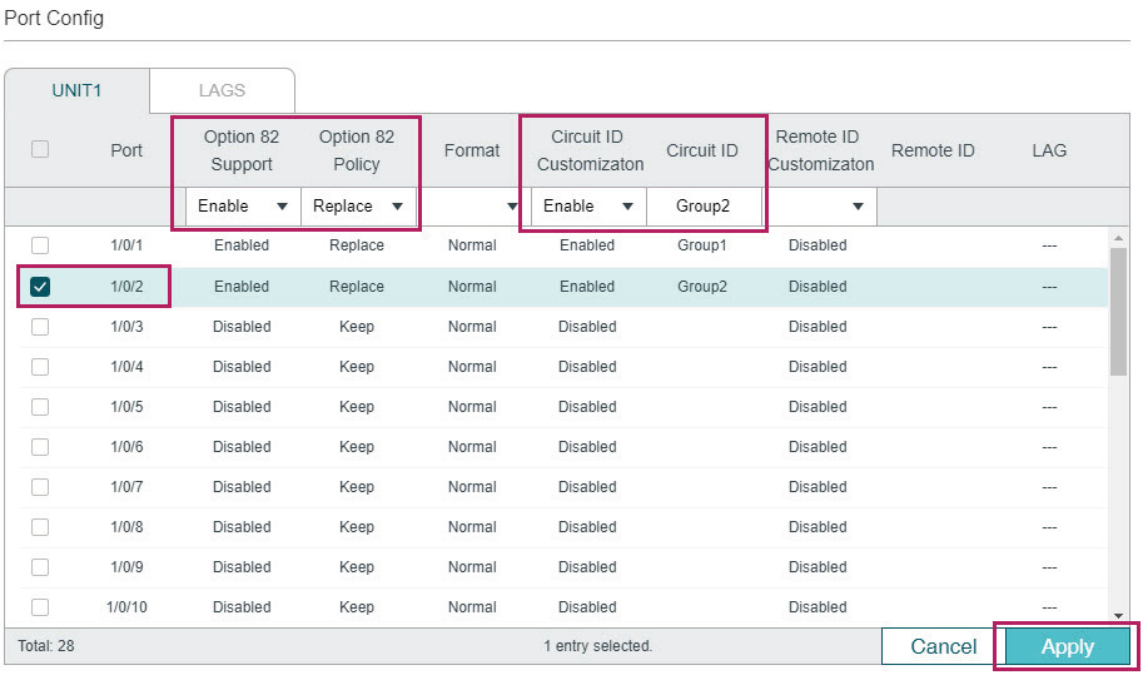

4) Click Save to save the settings.

5.4.4 Using CLI

1) Enable DHCP L2 Relay globally and on VLAN1.

Switch#configure

Switch(config)#ip dhcp l2relay

Switch(config)#iip dhcp l2relay vlan 1

2) On port 1/0/1, enable Option 82, set Option 82 Policy to Replace, enable Circuit ID Customization and specify the Circuit ID as Group1.

Switch(config)#interface gigabitEthernet 1/0/1

Switch(config-if)#ip dhcp l2relay information

Switch(config-if)#ip dhcp l2relay information strategy replace

Switch(config-if)#ip dhcp l2relay information circuit-id Group1

Switch(config-if)#exit

3) On port 1/0/2, enable Option 82, set Option 82 Policy to Replace, and specify the Circuit ID as Group2.

Switch(config)#interface gigabitEthernet 1/0/2

Switch(config-if)#ip dhcp l2relay information

Switch(config-if)#ip dhcp l2relay information strategy replace

Switch(config-if)#ip dhcp l2relay information circuit-id Group2

```
Switch(config-if)#end
Switch#copy running-config startup-config
```

Verify the Configurations

View global settings:

```
Switch#show ip dhcp l2relay
 Global Status: Enable
 VLAN ID: 1
```

View port settings:

```
Switch#show ip dhcp l2relay information interface gigabitEthernet 1/0/1
Interface Option 82 Status   Operation Strategy   Format   Circuit ID   ...
---------  ----------------      ------------------      -------    ---------    ...
Gi1/0/1    Enable                Replace                 Normal     Group1       ...

Switch#show ip dhcp l2relay information interface gigabitEthernet 1/0/1
Interface Option 82 Status   Operation Strategy   Format   Circuit ID   ...
---------  ----------------      ------------------      -------    ---------    ...
Gi1/0/2    Enable                Replace                 Normal     Group2       ...
```

6 Appendix: Default Parameters

Default settings of DHCP Server are listed in the following table.

Table 6-1 Default Settings of DHCP Server

Parameter	Default Setting
Global Config	
DHCP Server	Disable
Option 60	None
Option 138	None
Ping Time Config	
Ping Packets	1
Ping Timeout	100 ms
Excluded IP Address	
Start IP Address	None
End IP Address	None
Pool Setting	
Pool Name	None
Network Address	None
Subnet Mask	None
Lease Time	120 min
Default Gateway	None
DNS Server	None
Netbios Server	None
Netbios Node Type	None
Next Server Address	None
Domain Name	None
Bootfile	None

Parameter	Default Setting
Manual Binding	
Pool Name	None
IP Address	None
Binding Mode	Client ID
Client Id	None
Hardware Address	None
Hardware Type	Ethernet

Default settings of DHCP Relay are listed in the following table.

Table 6-2 Default Settings of DHCP Relay

Parameter	Default Setting
DHCP Relay	
DHCP Relay	Disable
DHCP Relay Hops	4
DHCP Relay Time Threshold	0
Option 82 Configuration	
Option 82 Support	Disabled
Option 82 Policy	Keep
Format	Normal
Circuit ID Customization	Disable
Circuit ID	None
Remote ID Customization	Disabled
Remote ID	None
DHCP Interface Relay	
Interface ID	None
Server Address	None

Parameter	Default Setting
DHCP VLAN Relay	
Interface ID	None
VLAN ID	None
Server Address	None

Default settings of DHCP L2 Relay are listed in the following table.

Table 6-3 Default Settings of DHCP L2 Relay

Parameter	Default Setting
Global Config	
DHCP Relay	Disabled
VLAN Status	Disabled
Port Config	
Option 82 Support	Disabled
Option 82 Policy	Keep
Format	Normal
Circuit ID Customization	Disable
Circuit ID	None
Remote ID Customization	Disabled
Remote ID	None

Part 21

Configuring ARP

CHAPTERS

1. Overview
2. ARP Configurations
3. Appendix: Default Parameters

1 Overview

ARP (Address Resolution Protocol) is used to map IP addresses to MAC addresses. Taking an IP address as input, ARP learns the associated MAC address, and stores the IP-MAC address association in an ARP entry for rapid retrieval.

1.1 Supported Features

ARP Table

The ARP table displays all the ARP entries, including dynamic entries and static entries.

Dynamic Entry: Automatically learned and will be deleted after aging time.

Static Entry: Added manually and will be remained unless modified or deleted manually.

Static ARP

You can manually add ARP entries by specifying the IP addresses and MAC addresses.

Gratuitous ARP


Gratuitous ARP is a special kind of ARP. Both the source and destination addresses of the gratuitous ARP packet are the sender its own IP address. It is used to detect duplicate IP address. If an interface sends a gratuitous ARP packet and no replies are received, then the sender knows its IP address is not used by other devices.

Proxy ARP

Normally, the ARP packets can only be transmitted in one broadcast domain, which means if two devices in the same network segment are connected to different Layer 3 interfaces, they cannot communicate with each other because they cannot learn each other's MAC address using ARP packets.

Proxy ARP solves this problem. As shown below, when a host sends an ARP request to another device that is not in the same broadcast domain but on the same network segment, the Layer 3 interface with Proxy ARP enabled will respond the ARP request with its own MAC address if the destination IP is reachable. After that, the ARP request sender sends packets to the switch, and the switch forwards the packets to the intended device.

Figure 1-1 Proxy ARP Application

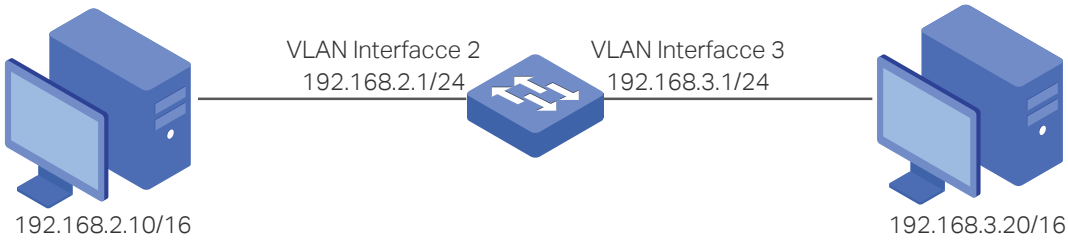


Local Proxy ARP

Local Proxy ARP is similar with Proxy ARP. As shown below, two hosts are in the same VLAN and connected to VLAN interface 1, but port 1/0/1 and port 1/0/2 are isolated on Layer 2. In this case, both of the hosts cannot receive each other's ARP request. So they cannot communicate with each other because they cannot learn each other's MAC address using ARP packets.

To solve this problem, you can enable Local Proxy ARP on the Layer 3 interface and the interface will respond the ARP request sender with its own MAC address. After that, the ARP request sender sends packets to the Layer 3 interface, and the interface forwards the packets to the intended device.

Figure 1-2 Local Proxy ARP Application

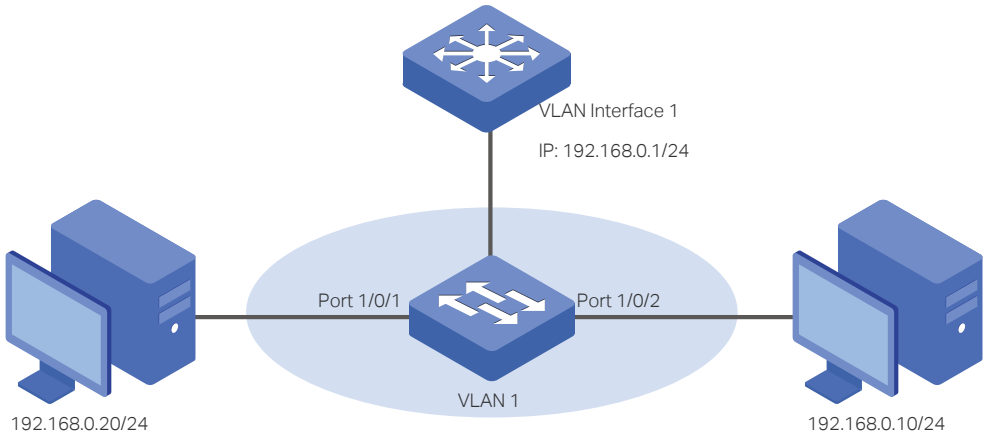

2 ARP Configurations

With ARP configurations, you can:

- View dynamic and static ARP entries.
- Add or delete static ARP entries.

To configure the Gratuitous ARP feature:

- Configure the Gratuitous ARP globally and set the Gratuitous ARP sending interval

To configure the Proxy ARP feature:

- Enable Proxy function for VLAN interfaces or routed ports.

To configure the Local Proxy ARP feature:

- Enable Local Proxy function for VLAN interfaces or routed ports.

2.1 Using the GUI


2.1.1 Viewing the ARP Entries

The ARP table consists of two kinds of ARP entries: dynamic and static.

- Dynamic Entry: Automatically learned and will be deleted after aging time.
- Static Entry: Added manually and will be remained unless modified or deleted manually.

Choose the menu **L3 FEATURES > ARP > ARP Table > ARP Table** to load the following page.

Figure 2-1 Viewing the ARP Entries

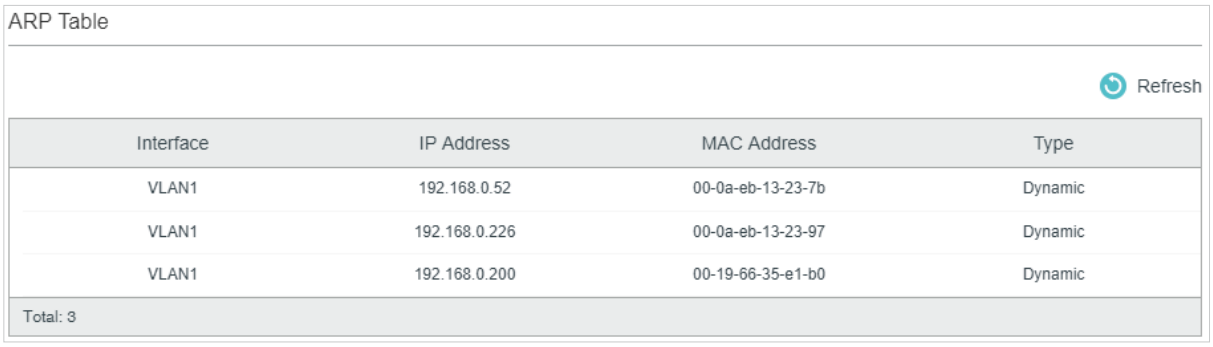

Interface	Displays the network interface of an ARP entry.
IP Address	Displays the IP address of an ARP entry.
MAC Address	Displays the MAC address of an ARP entry.


Type	Displays the type of an ARP entry. **Static**: The entry is added manually and will always remain the same. **Dynamic**: The entry that will be deleted after the aging time leased. The default aging time value is 600 seconds. If you want to change the aging time, you can use the CLI to configure it.

2.1.2 Adding Static ARP Entries Manually

You can add desired static ARP entries by mannually specifying the IP addresses and MAC addresses.

Choose the menu **L3 FEATURES > ARP > Static ARP** and click Add to load the following page.

Figure 2-2 Adding Static ARP Entries

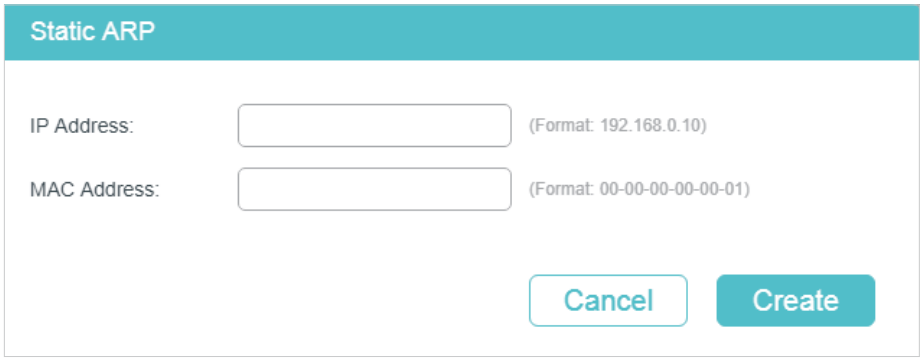


Enter the IP address and MAC address, then click **Create**.

IP address	Specify the IP address of the static ARP entry.
MAC address	Specify the MAC address.of the static ARP entry.

2.1.3 Configuring Gratuitous ARP

Choose the menu **L3 FEATURES > ARP > Gratuitous ARP** to load the following page.

Figure 2-3 Configuring Gratuitous ARP

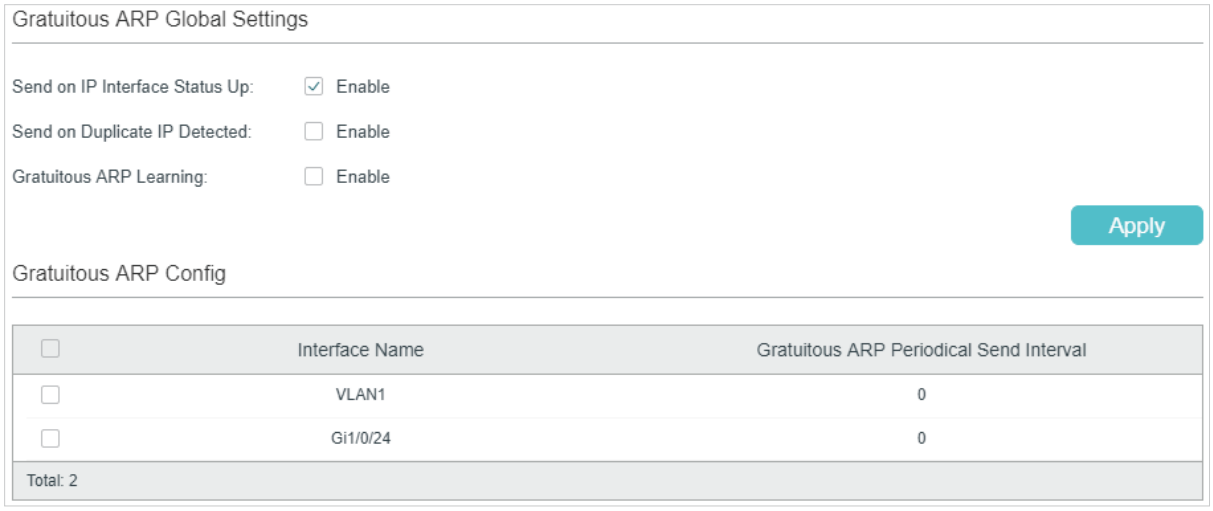

Follow these steps to configure the Gratuitous feature for the interface.

1) In the **Gratuitous ARP Global Settings** section, configure the global parameters for gratuitous ARP. Then click **Apply**.

Send on IP Interface Status Up	With this option enabled, the interface will send gratuitous ARP request packets when its status becomes up. This is used to announce the interface's IP address to the other hosts. It is enabled by default.
Send on Duplicate IP Detected	With this option enabled, the interface will send gratuitous ARP request packets when a gratuitous ARP request packet is received for which the IP address is the same as the interface's. In this case, the switch knows that another host is using the same IP address as its own. To claim the IP address for the correct owner, the interface sends gratuitous ARP packets. It is disabled by default.
Gratuitous ARP Learning	Normally, the switch only updates the MAC address table by learning from the ARP reply packet or normal ARP request packet. With this option enabled, the switch will also update the MAC address table by learning from the received gratuitous ARP packets. It is disabled by default.

2) In the **Gratuitous ARP Table** section, configure the interval of sending gratuitous ARP request packets for the interface. Then click **Apply**.


Interface Name	Displays the Interface ID of the Layer 3 interface.
Gratuitous ARP Periodical Send Interval	Enter the interval of sending gratuitous ARP request packets for the interface. A value of 0 means the interface will not send gratuitous ARP request packets periodically.

2.1.4 Configuring Proxy ARP

Proxy ARP is used in the situation that two devices are in the same network segment but connected to different Layer 3 interfaces.

Choose the menu **L3 FEATURES> ARP > Proxy ARP > Proxy ARP** to load the following page.

Figure 2-4 Configuring Proxy ARP

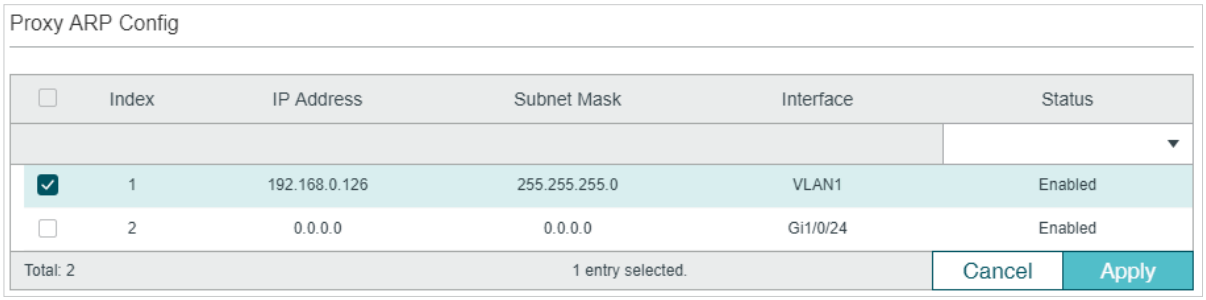

Select the desired interface and enable proxy ARP. Then click **Apply**.


IP Address	Displays the IP address of the Layer 3 interface
Subnet Mask	Displays the subnet mask of the IP address.
Status	Enable proxy ARP feature on the interface. The interface will respond the ARP request sender with its own MAC address.

2.1.5 Configuring Local Proxy ARP

Local Proxy ARP is used in the situation that two devices are in the same VLAN but isolated on the layer 2 ports.

Choose the menu **L3 FEATURES > ARP > Proxy ARP > Local Proxy ARP** to load the following page.

Figure 2-5 Configuring Local Proxy ARP

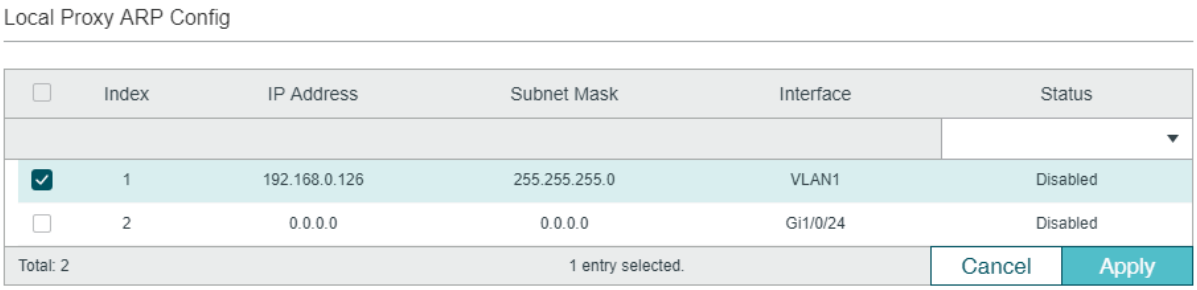

Select the desired interface and enable local proxy ARP. Then click **Apply**.

IP Address	Displays the IP address of the Layer 3 interface
Subnet Mask	Displays the subnet mask of the IP address.

Status	Enable local proxy ARP feature on the interface. The interface will respond the ARP request sender with its own MAC address.

2.2 Using the CLI

2.2.1 Configuring the ARP Entry

- Adding Static ARP Entries

Follow these steps to add static ARP entries:

Step 1	**configure** Enter global configuration mode.
Step 2	**arp** *ip mac type* Add a static ARP entry. *ip*: Enter the IP address of the static ARP entry. *mac:* Enter the MAC address of the static ARP entry. *type:* Enter the ARP type. Configure it as 'arpa'.
Step 3	**show arp** [*ip*] [*mac*] *ip*: Specify the IP address of your desired ARP entry. *mac:* Specify the MAC address of your desired ARP entry.
Step 4	**end** Return to privileged EXEC mode.
Step 5	**copy running-config startup-config** Save the settings in the configuration file.

This example shows how to create a static ARP entry with the IP as 192.168.0.1 and the MAC as 00:11:22:33:44:55:

Switch#configure

Switch(config)#arp 192.168.0.1 00:11:22:33:44:55 **arpa**

Switch(config)#show arp 192.168.0.1

Interface	Address	Hardware Addr	Type
Vlan1	192.168.0.1	00:11:22:33:44:55	STATIC

Switch(config)#end

Switch#copy running-config startup-config

■ Configuring the Aging Time of Dynamic ARP Entries

Follow these steps to configure the aging time of dynamic ARP entries:

Step 1	**configure** Enter global configuration mode.
Step 2	**arp timeout** *timeout* Configure the ARP aging time of the VLAN interface or routed port . *timeout:* Specify the value of aging time, which ranges from 1 to 3000 in seconds. The default value is 600 seconds.
Step 3	**end** Return to privileged EXEC mode.
Step 4	**copy running-config startup-config** Save the settings in the configuration file.

This example shows how to configure the aging time of dynamic ARP entries as 1000 seconds for VLAN interface 2 :

Switch#configure

Switch(config)#arp timeout 1000

Switch(config)#end

Switch#copy running-config startup-config

■ Clearing Dynamic Entries

Step 1	**configure** Enter global configuration mode.
Step 2	**clear arp-cache** Clear all the dynamic ARP entries.
Step 3	**copy running-config startup-config** Save the settings in the configuration file.

■ Renewing Dynamic Entries Automatically

Step 1	**configure** Enter global configuration mode.

Step 2	**arp dynamicrenwe** Clear all the dynamic ARP entries.
Step 3	**copy running-config startup-config** Save the settings in the configuration file.

■ Viewing ARP Entries

On privileged EXEC mode or any other configuration mode, you can use the following command to view ARP entries:

show arp [*ip*] [*mac*]

ip: Specify the IP address of your desired ARP entry.

mac: Specify the MAC address of your desired ARP entry.

show ip arp { fastEthernet *port* **| gigabitEthernet** *port* **| ten-gigabitEthernet** *port* **| port-channel** *lagid* **| vlan** *vid* **}**

Verify the active ARP entries associated with a Layer 3 interface.

port: Specify the number of the routed port.

lagid: Specify the ID of the LAG.

vid: Specify the VLAN interface ID.

2.2.2 Configuring the Gratuitous ARP

■ Configuring Gratuitous ARP Globally

Follow these steps to add static ARP entries:

Step 1	**configure** Enter global configuration mode.
Step 2	**gratuitous-arp intf-status-up enable** Enable the Layer 3 interface to send a gratuitous ARP packet to detect if its IP address is used by other devices. It is enabled by default
Step 3	**gratuitous-arp dup-ip-detected enable** (Optional) Enable the Layer 3 interface to send a gratuitous packet when the interface received a gratuitous ARP packet with the same IP address with its own. It is disabled by default.
Step 4	**gratuitous-arp learning enable** (Optional) Enable the switch to learn MAC address entries from gratuitous ARP packets. Generally, the switch only learn MAC address entries form normal ARP packets. With this option enabled, the switch will also learn MAC address entries from gratuitous ARP packets. By default, it is disabled.
Step 5	**show gratuitous-arp** Show the gratuitous ARP configuration.

Step 6	**end** Return to privileged EXEC mode.
Step 7	**copy running-config startup-config** Save the settings in the configuration file.

This example shows how to enable Send on IP Interface Status Up, Send on Duplicate IP Detected and Gratuitous ARP Learning features:

Switch#configure

Switch(config)#gratuitous-arp dup-ip-detected enable

Switch(config)#gratuitous-arp intf-status-up enable

Switch(config)#gratuitous-arp learning enable

Switch(config)#show gratuitous-arp

Send on IP interface Status up : Enabled

Send on Duplicate IP Detected : Enabled

Gratuitous ARP Learning : Enabled

Interface Gratuitous ARP Periodical Send Interval

--- ---

Gi1/0/18 0

VLAN1 0

Switch(config)#end

Switch#copy running-config startup-config

- Configuring Interval of Sending Gratuitous ARP Packets

Follow these steps to configure gratuitous ARP packets for Layer 3 interfaces:

Step 1	**configure** Enter global configuration mode.

Step 2	There are three types of Layer 3 interface that are able to send gratuitous ARP packets: routed port, port-channel and VLAN interface. **interface { fastEthernet** *port* **| range fastEthernet** *port-list* **| gigabitEthernet** *port* **| range gigabitEthernet** *port-list* **| ten-gigabitEthernet** *port* **| ten-range gigabitEthernet** *port-list* **| port-channel** *port-channel* **| range port-channel** *port-channel-list* **|}** **no switch port** Enter interface configuration mode and change the port or port-channel to be a Layer 3 interface.
	Interface vlan *vlan-id* Enter the vlan interface configuration mode. *vlan-id:* Enter the interface VLAN ID.
Step 3	**gratuitous-arp send-interval** *interval* Specify the periodical interval at which the interface sends the gratuitous ARP packet. *interval:* Specify the interval in seconds. The valid value ranges from 0 to 65535. Value 0 means the interface does not periodically send gratuitous ARP packets.
Step 4	**show gratuitous-arp** Show the gratuitous ARP configuration.
Step 5	**end** Return to privileged EXEC mode.
Step 6	**copy running-config startup-config** Save the settings in the configuration file.

This example shows how to configure the interval of sending gratuitous ARP packets for VLAN interface 1 as 10 seconds:

Switch#configure

Switch(config)#interface vlan 1

Switch(config-if)#gratuitous-arp send-interval 10

Switch(config-if)#show gratuitous-arp

...

Interface Gratuitous ARP Periodical Send Interval

--------- --

VLAN1 10

Switch(config-if)#end

Switch#copy running-config startup-config

2.2.3 Configuring Proxy ARP

You can configure proxy ARP and local proxy ARP.

■ Configuring Proxy ARP

Follow these steps to Proxy ARP on the VLAN interface, routed port or port channel.

Step 1	**configure** Enter global configuration mode.
Step 2	There are three types of Layer 3 interface can be enabled with Proxy ARP: routed port, port-channel and VLAN interface. **interface { fastEthernet** *port* **| range fastEthernet** *port-list* **| gigabitEthernet** *port* **| range gigabitEthernet** *port-list* **| ten-gigabitEthernet** *port* **| ten-range gigabitEthernet** *port-list* **| port-channel** *port-channel* **| range port-channel** *port-channel-list* **|}** **no switch port** Enter interface configuration mode and change the port or port-channel to be a Layer 3 interface.
	Interface vlan *vlan-id* Enter the vlan interface configuration mode. *vlan-id:* Enter the interface VLAN ID.
Step 3	**ip proxy-arp** Enable Proxy ARP function on the specified Layer 3 interface..
Step 4	**show ip proxy-arp** Show the Proxy ARP configuration..
Step 5	**end** Return to privileged EXEC mode.
Step 6	**copy running-config startup-config** Save the settings in the configuration file.

This example shows how to enable Proxy ARP function for VLAN interface 1:

Switch#configure

Switch(config)#interface vlan 1

Switch(config-if)#ip proxy-arp

Switch(config-if)#show ip proxy-arp

Interface	IP Address	IP Mask	Status
vlan 1	192.168.0.1	255.255.255.0	Enabled

Switch(config-if)#end

Switch#copy running-config startup-config

Configuring Local Proxy ARP

Follow these steps to Local Proxy ARP on the VLAN interface, routed port or port channel.

Step 1	**configure** Enter global configuration mode.
Step 2	There are three types of Layer 3 interface can be enabled with Local Proxy ARP: routed port, port-channel and VLAN interface. **interface { fastEthernet** *port* **| range fastEthernet** *port-list* **| gigabitEthernet** *port* **| range gigabitEthernet** *port-list* **| ten-gigabitEthernet** *port* **| ten-range gigabitEthernet** *port-list* **| port-channel** *port-channel* **| range port-channel** *port-channel-list* **|}** **no switch port** Enter interface configuration mode and change the port or port-channel to be a Layer 3 interface.
	Interface vlan *vlan-id* Enter the vlan interface configuration mode. *vlan-id:* Enter the interface VLAN ID.
Step 3	**ip local-proxy-arp** Enable Local Proxy ARP function on the specified Layer 3 interface..
Step 4	**show ip local-proxy-arp** Show the Local Proxy ARP configuration..
Step 5	**end** Return to privileged EXEC mode.
Step 6	**copy running-config startup-config** Save the settings in the configuration file.

This example shows how to enable Local Proxy ARP function for VLAN interface 1:

Switch#configure

Switch(config)#interface vlan 1

Switch(config-if)#ip local-proxy-arp

Switch(config-if)#show ip local-proxy-arp

Interface	IP Address	IP Mask	Status
---	---	---	---
vlan 1	192.168.0.1	255.255.255.0	Enabled

Switch(config-if)#end

Switch#copy running-config startup-config

3 Appendix: Default Parameters

Default ARP settings are listed in the following tables.

Table 3-1 Default Gratuitous Settings

Parameter	Default Setting
Send on IP Interface Status Up	Enable
Send on Duplicate IP Detected	Disable
Gratuitous ARP Learning	Disable
Gratuitous ARP Periodical Send Interval	0 second

Part 22

Configuring QoS

CHAPTERS

1. QoS
2. Class of Service Configuration
3. Bandwidth Control Configuration
4. Voice VLAN Configuration
5. Auto VoIP Configuration
6. Configuration Examples
7. Appendix: Default Parameters

1 QoS

1.1 Overview

With network scale expanding and applications developing, internet traffic is dramatically increased, thus resulting in network congestion, packet drops and long transmission delay. Typically, networks treat all traffic equally on FIFO (First In First Out) delivery basis, but nowadays many special applications like VoD, video conferences, VoIP, etc. require more bandwidth or shorter transmission delay to guarantee the performance.

With QoS (Quality of Service) technology, you can classify and prioritize network traffic to provide differentiated services to certain types of traffic.

1.2 Supported Features

You can configure the class of service, bandwidth control, Voice VLAN and Auto VoIP features on the switch to maximize the network performance and bandwidth utilization.

Class of Service

The switch classifies the ingress packets, maps the packets to different priority queues and then forwards the packets according to specified scheduler settings to implement QoS function.

- Priority Mode: Three modes are supported, Port Priority, 802.1p Priority and DSCP Priority.
- Scheduler Mode: Two scheduler type are supported, Strict and Weighted.

Bandwidth Control

Bandwidth Control functions to control the traffic rate and traffic threshold on each port to ensure network performance.

- Rate limit functions to limit the ingress/egress traffic rate on each port. In this way, the network bandwidth can be reasonably distributed and utilized.
- Storm Control function allows the switch to monitor broadcast packets, multicast packets and UL-frames (Unknown unicast frames) in the network. If the transmission rate of the packets exceeds the set rate, the packets will be automatically discarded to avoid network broadcast storm.

Voice VLAN and Auto VoIP

The voice VLAN and Auto VoIP features are used to prioritize the transmission of voice traffic. Voice traffic is typically more time-sensitive than data traffic, and the voice quality

can deteriorate a lot because of packet loss and delay. To ensure the high voice quality, you can configure Voice VLAN or Auto VoIP.

These two features can be enabled on the ports that transmit voice traffic only or transmit both voice traffic and data traffic. Voice VLAN can change the voice packets' 802.1p priority and transmit the packets in desired VLAN. Auto VoIP can inform the voice devices of send the packets with specific configuration by working with the LLDP-MED feature.

2 Class of Service Configuration

With class of service configurations, you can:

- Configure port priority
- Configure 802.1p priority
- Configure DSCP priority
- Specify the scheduler settings

Configuration Guidelines

- Select the priority mode that the ports trust according to your network requirements.

  A port can use only one priority to classify the ingress packets. Three priority modes are supported on the switch: Port Priority, 802.1P Priority and DSCP Priority.

  » Port Priority

  In this mode, the switch prioritizes packets according to their ingress ports, regardless of the packet field or type.

  » 802.1P Priority

  802.1P defines the first three bits in 802.1Q Tag as PRI field. The PRI values are from 0 to 7. 802.1P priority determines the priority of packets based on the PRI value.

  In this mode, the switch only prioritizes packets with VLAN tag, regardless of the IP header of the packets.

  » DSCP Priority

  DSCP priority determines the priority of packets based on the ToS (Type of Service) field in their IP header. RFC2474 re-defines the ToS field in the IP packet header as DS field. The first six bits (bit 0-bit 5) of the DS field is used to represent DSCP priority. The DSCP values are from 0 to 63.

  In this mode, the switch only prioritizes IP packets.

- Specify the 802.1p to queue mapping according to your needs.

  For 802.1p Priority, the packets will be forwarded according to the 802.1p to queue mapping directly.

  For Port Priority and DSCP Priority, the port priority and DSCP priority will first be mapped to the 8021p priority, and then mapped to the queue according to the 802.1p to queue mapping.


2.1 Using the GUI

2.1.1 Configuring Port Priority

- Configuring the Trust Mode and Port to 802.1p Mapping

Choose the menu **QoS > Class of Service > Port Priority** to load the following page.

Figure 2-1 Configuring the Trust Mode and Port to 802.1p Mapping

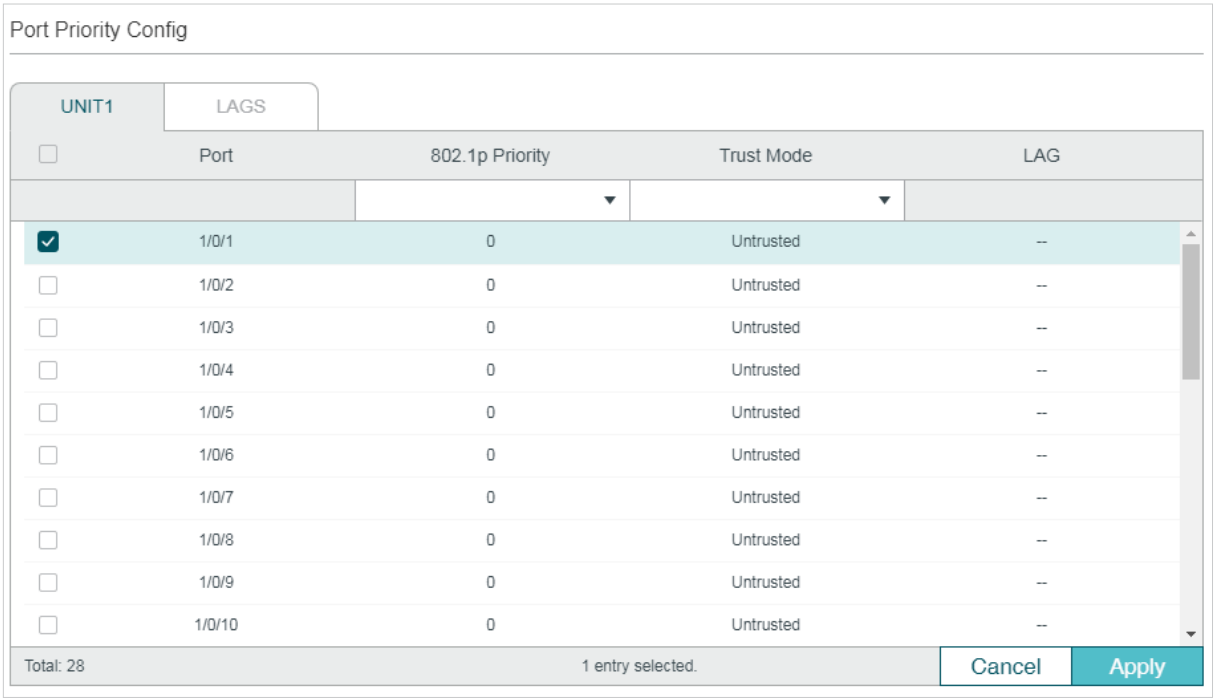

Follow these steps to configure the parameters of the port priority:

1) Select the desired ports, specify the 802.1p priority and set the trust mode as Untrusted.


802.1p Priority	Specify the port to 802.1p mapping for the desired port. The ingress packets from one port are first mapped to 802.1p priority based on the port to 802.1p mapping, then to TC queues based on the 802.1p to queue mapping. The untagged packets from one port will be added an 802.1p priority value according to the port to 802.1p priority mapping.
Trust Mode	Select the Trust mode as Untrusted. In this mode, the packets will be processed according to the port priority configuration.

2) Click **Apply**.

Configuring the 802.1p to Queue Mapping

Choose the menu **QoS > Class of Service > 802.1p Priority** to load the following page.

Figure 2-2 Configuring the 802.1p to Queue Mapping

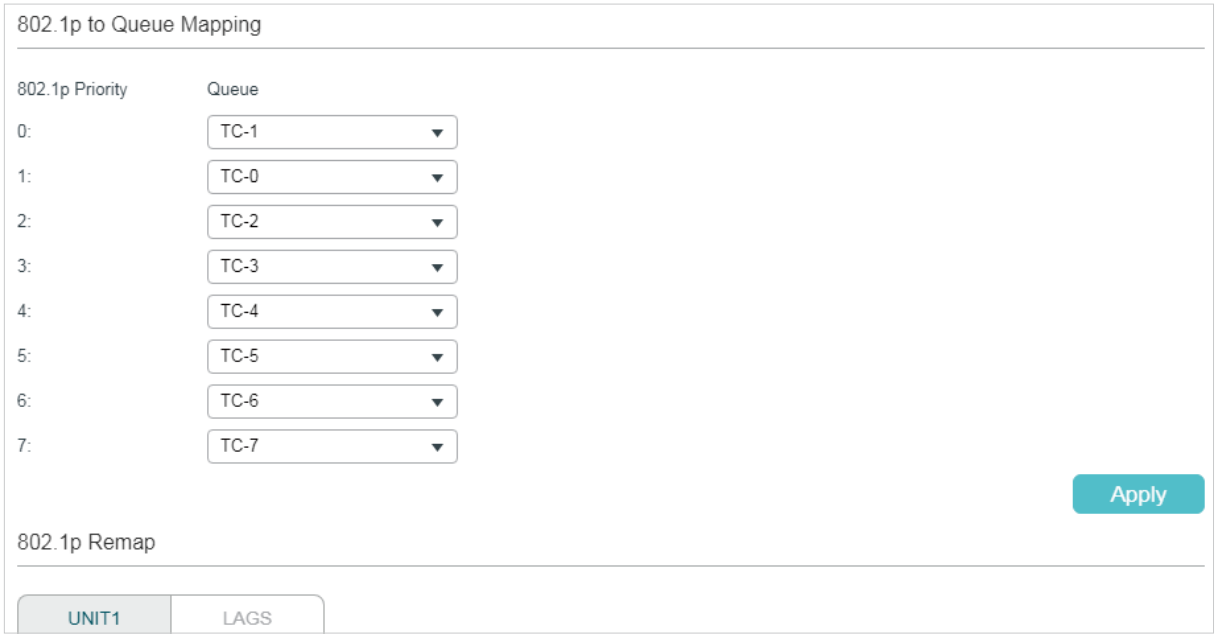

In the **802.1p to Queue Mapping** section, configure the mappings and click **Apply**.


802.1p Priority	Displays the number of 802.1p priority. In QoS, 802.1p priority is used to represent class of service.
Queue	Select the TC queue for the desired 802.1p priority. The packets with the desired 802.1p priority will be put in the corresponding queue.

2.1.2 Configuring 802.1p Priority

■ Configuring the Trust Mode

Choose the menu **QoS > Class of Service > Port Priority** to load the following page.

Figure 2-3 Configuring the Trust Mode

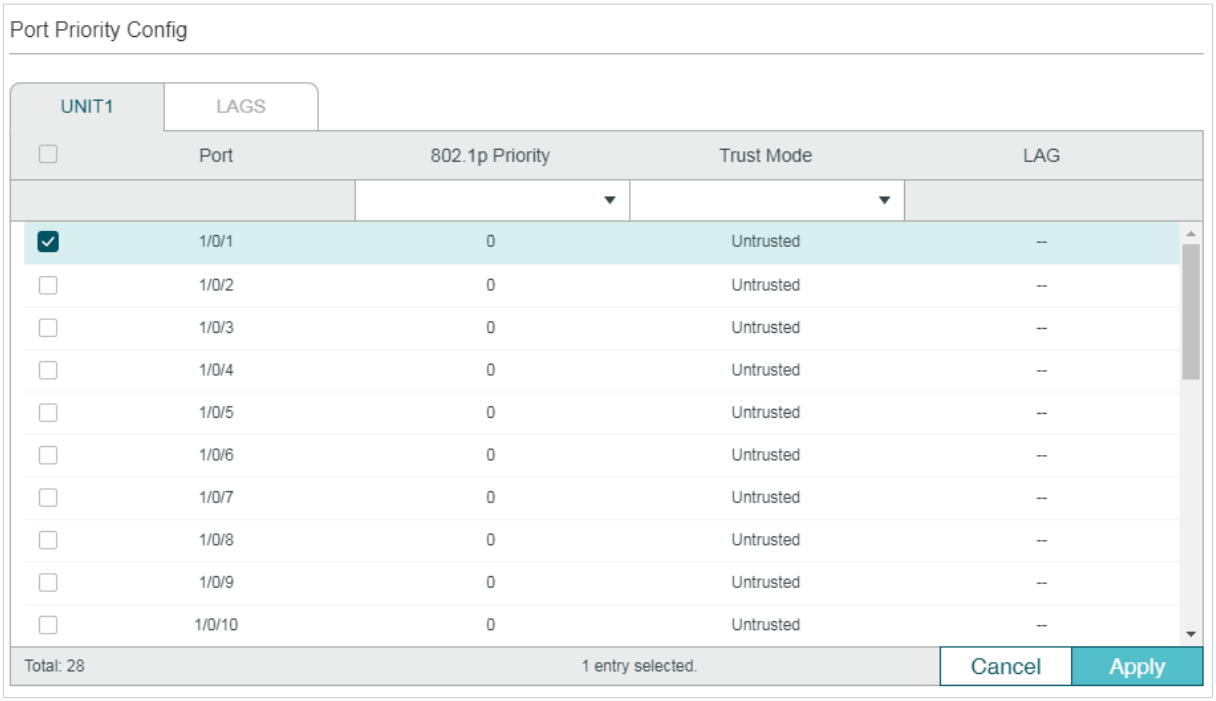

Follow these steps to configure the trust mode:

1) Select the desired ports and set the trust mode as Trust 802.1p.

Trust Mode	Select the Trust mode as Trust 802.1p. In this mode, the tagged packets will be processed according to the 802.1p priority configuration and the untagged packets will be processed according to the port priority configuration.


2) Click **Apply**.

- Configuring the 802.1p to Queue Mapping and 802.1p Remap

For T2600G-28TS/T2600G-28MPS/T2600G-28SQ/T2600G-52TS:

Choose the menu **QoS > Class of Service > 802.1p Priority** to load the following page.

Figure 2-4 Configuring the 802.1p to Queue Mapping and 802.1p Remap

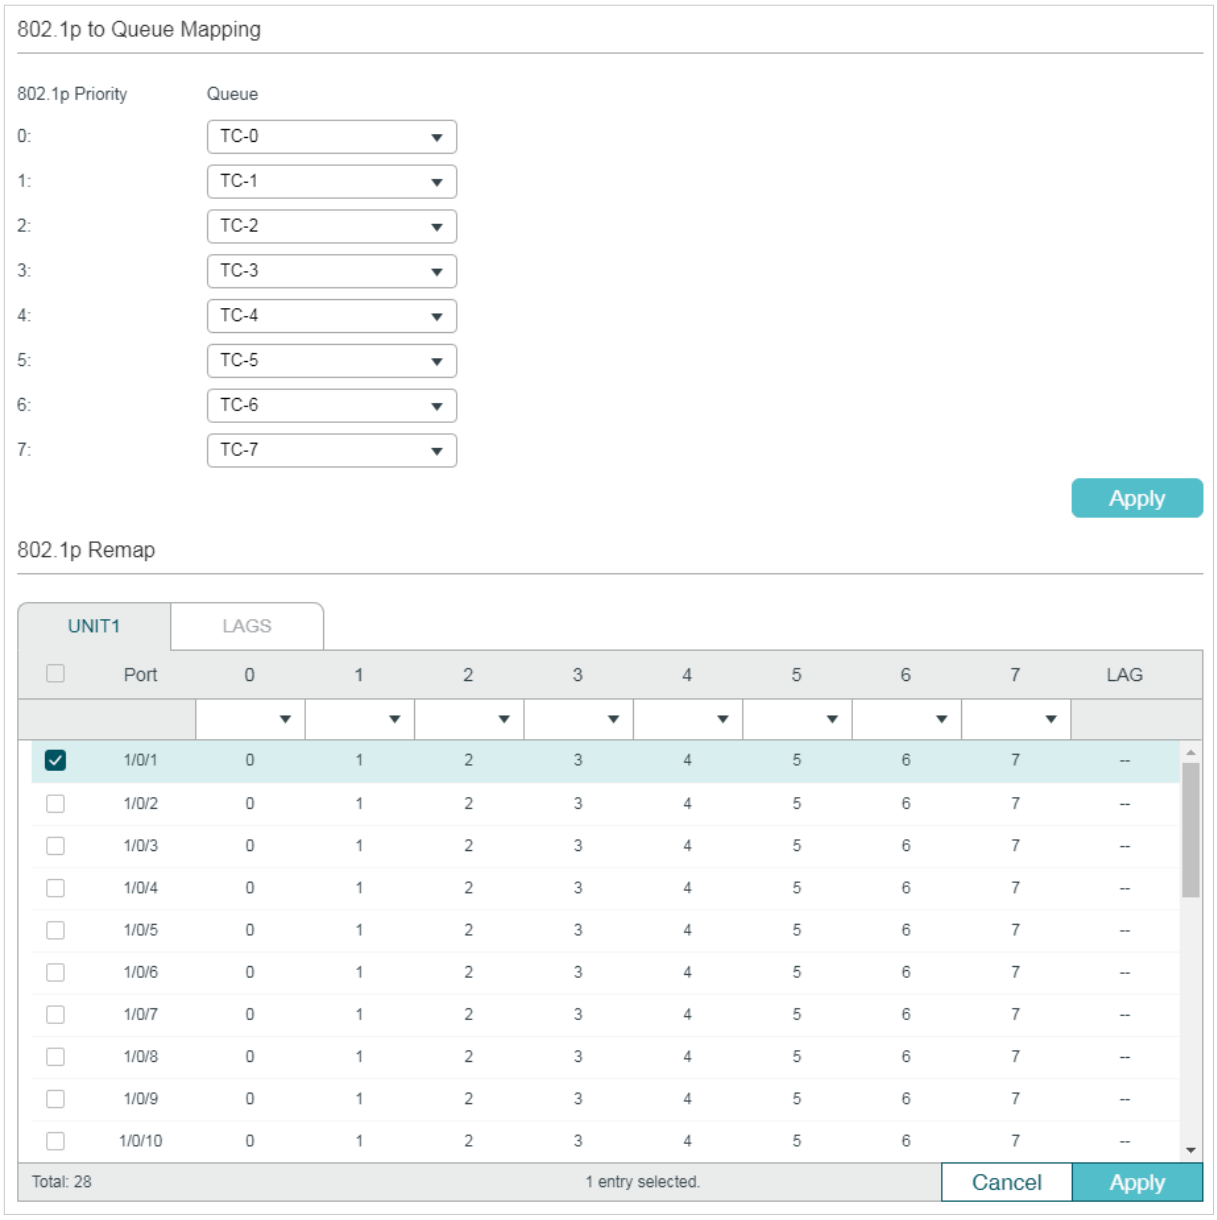

Follow these steps to configure the parameters of the 802.1p priority:

1) In the **802.1p to Queue Mapping** section, configure the mappings and click **Apply**.

802.1p Priority	Displays the number of 802.1p priority. In QoS, 802.1p priority is used to represent class of service. IEEE 802.1p standard defines three bits in 802.1Q tag as PRI filed. The PRI values are called 802.1p priority and used to represent the priority of the layer 2 packets. This function requires packets with VLAN tags.
Queue	Select the TC queue for the desired 802.1p priority. The packets with the desired 802.1p priority will be put in the corresponding queue.


2) (Optional) In the **802.1p Remap** section, configure the 802.1p to 802.1p mappings for ports and click **Apply**.

0 - 7	Select the number of 802.1p priority to which the desired 802.1p priority will be remapped. 802.1p Remap is used to modify the 802.1p priority of the ingress packets. When the switch detects the packets with desired 802.1p priority, it will modify the value of 802.1p priority according to the map.

For T2600G-18TS:

Choose the menu **QoS > Class of Service > 802.1p Priority** to load the following page.

Figure 2-5 Configuring the 802.1p to Queue Mapping and 802.1p Remap

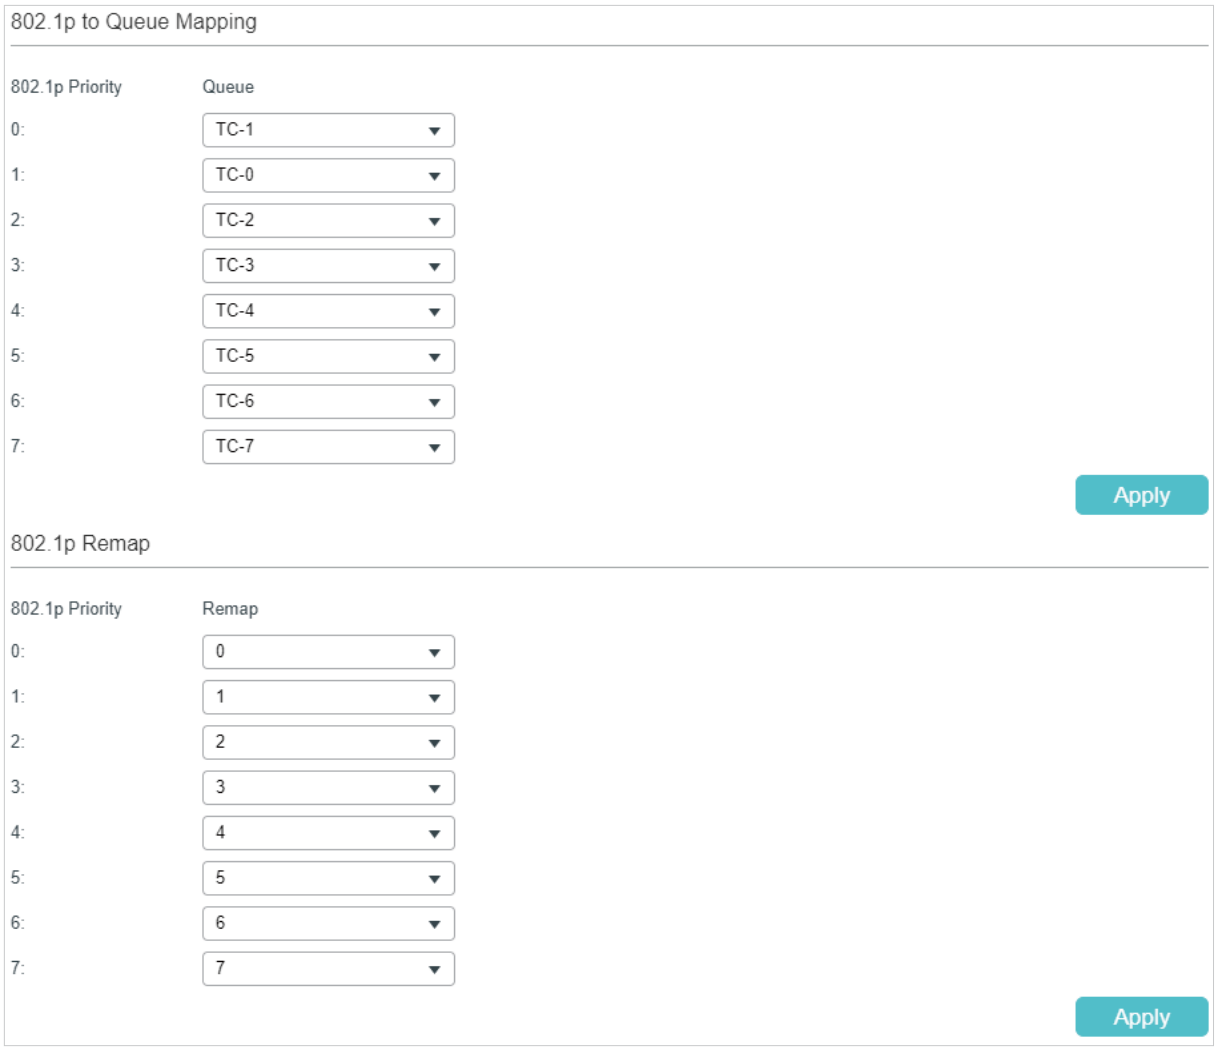

Follow these steps to configure the parameters of the 802.1p priority:

1) In the **802.1p to Queue Mapping** section, configure the mappings and click **Apply**.

802.1p Priority	Displays the number of 802.1p priority. In QoS, 802.1p priority is used to represent class of service. IEEE 802.1p standard defines three bits in 802.1Q tag as PRI filed. The PRI values are called 802.1p priority and used to represent the priority of the layer 2 packets. This function requires packets with VLAN tags.

Queue	Select the TC queue for the desired 802.1p priority. The packets with the desired 802.1p priority will be put in the corresponding queue.

2) (Optional) In the **802.1p Remap** section, configure the 802.1p to 802.1p mappings and click **Apply**. The remapping will take effect globally.

802.1p Priority	Displays the number of 802.1p priority. In QoS, 802.1p priority is used to represent class of service. IEEE 802.1p standard defines three bits in 802.1Q tag as PRI filed. The PRI values are called 802.1p priority and used to represent the priority of the layer 2 packets. This function requires packets with VLAN tags.
Remap	Select the number of 802.1p priority to which the original 802.1p priority will be remapped. 802.1p Remap is used to modify the 802.1p priority of the ingress packets. When the switch detects the packets with desired 802.1p priority, it will modify the value of 802.1p priority according to the map.

Note:


In Trust 802.1p mode, the untagged packets will be added an 802.1p priority based on the port to 802.1p mapping and will be forwarded according to the 802.1p to queue mapping.

2.1.3 Configuring DSCP Priority

Configuring the Trust Mode

Choose the menu **QoS > Class of Service > Port Priority** to load the following page.

Figure 2-6 Configuring the Trust Mode

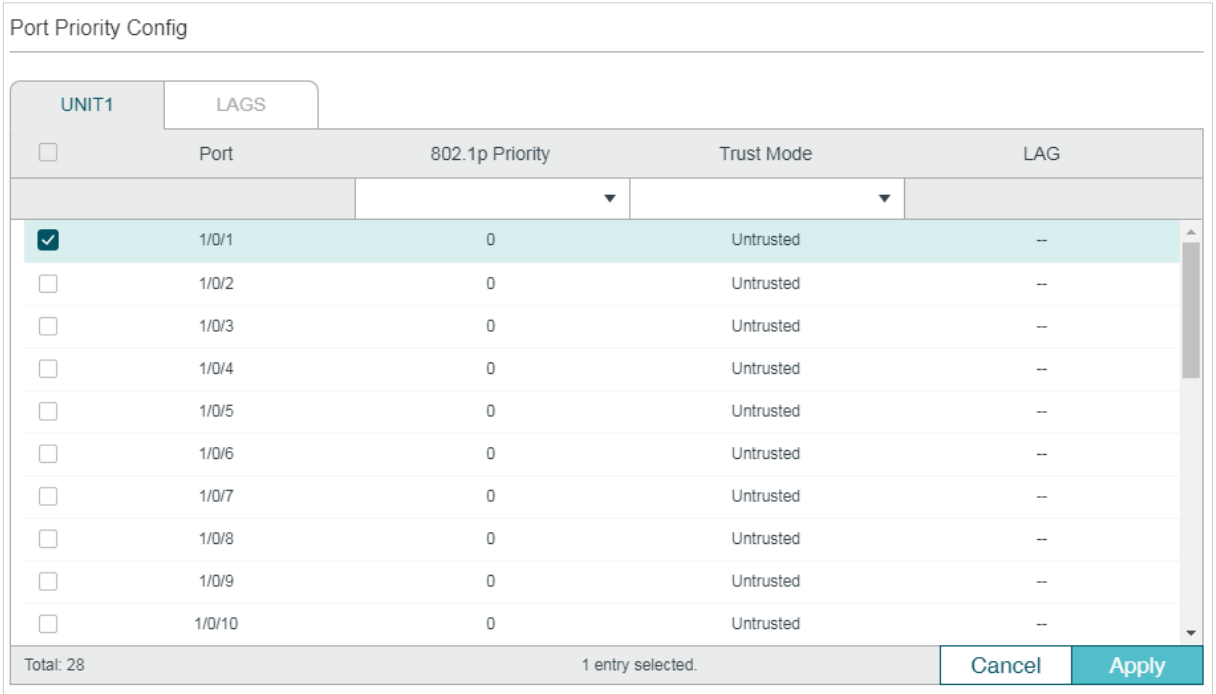

Follow these steps to configure the trust mode:

1) Select the desired ports and set the trust mode as Trust DSCP.


Trust Mode	Select the Trust mode as Trust DSCP. In this mode, the IP packets will be processed according to the DSCP priority configuration and the non-IP packets will be processed according to the port priority configuration.

2) Click **Apply**.

Configuring the 802.1p to Queue Mapping

Choose the menu **QoS > Class of Service > 802.1p Priority** to load the following page.

Figure 2-7 Configuring the 802.1p to Queue Mapping

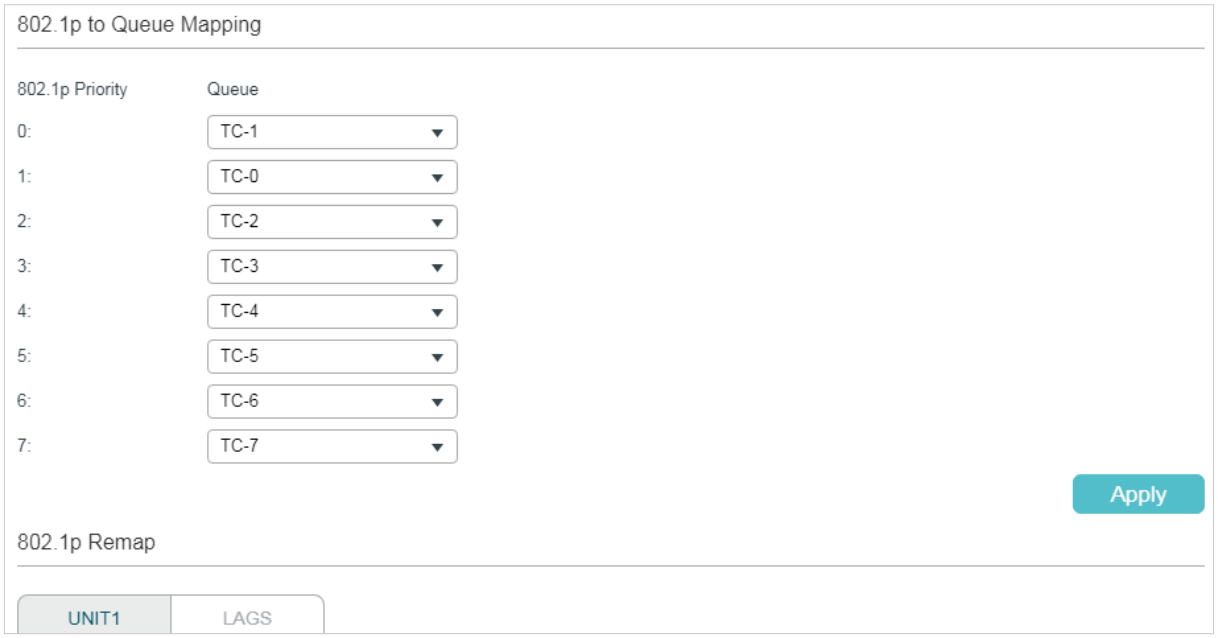

In the **802.1p to Queue Mapping** section, configure the mappings and click **Apply**.


802.1p Priority	Displays the number of 802.1p priority. In QoS, 802.1p priority is used to represent class of service.
Queue	Select the TC queue for the desired 802.1p priority. The packets with the desired 802.1p priority will be put in the corresponding queue.

- Configuring the DSCP to 802.1p Mapping and the DSCP Remap

For T2600G-28TS/T2600G-28MPS/T2600G-28SQ/T2600G-52TS:

Choose the menu **QoS > Class of Service >DSCP Priority** to load the following page.

Figure 2-8 Configuring the DSCP to 802.1p Mapping and the DSCP Remap

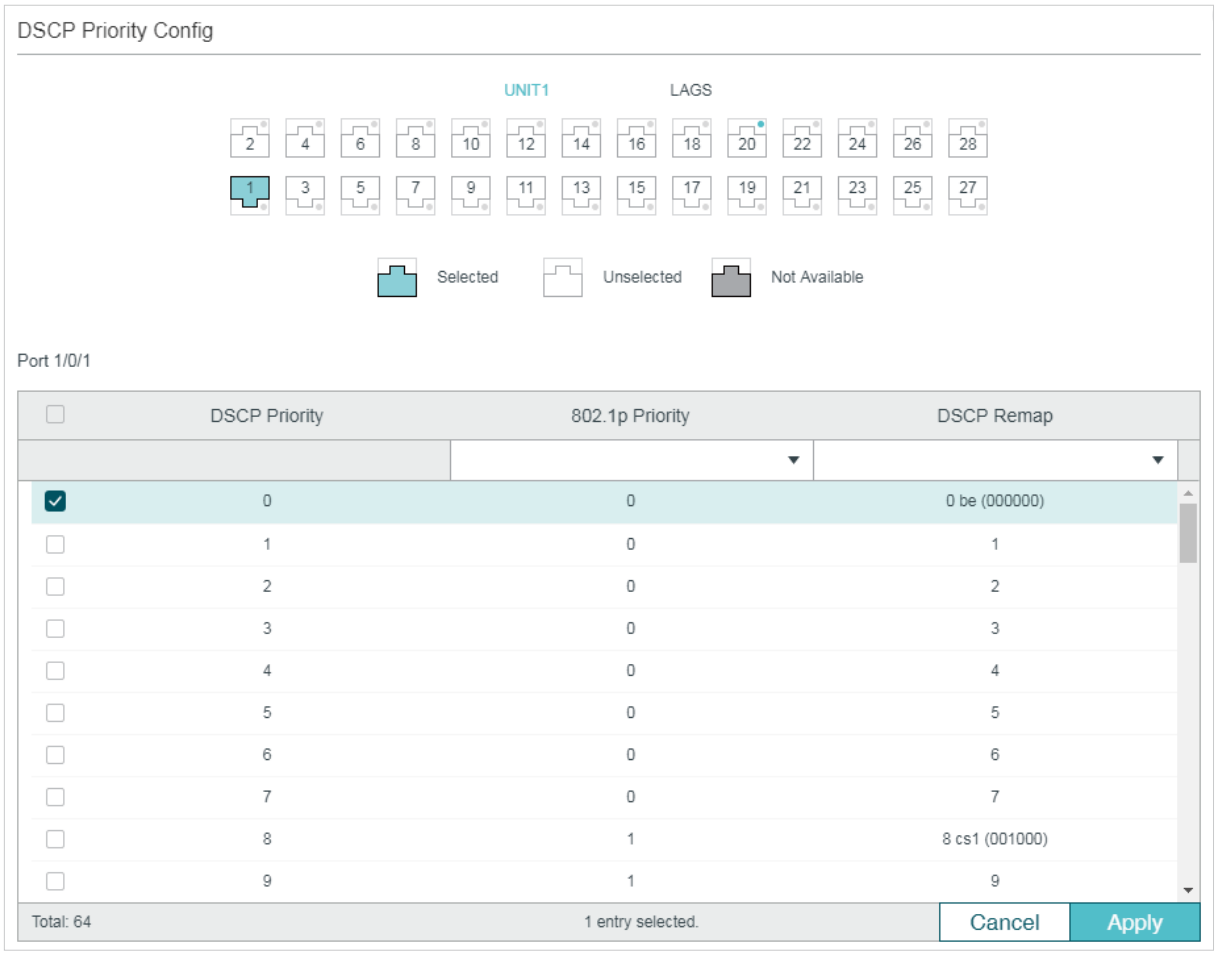

Follow these steps to configure the DSCP Priority:

1) Select the desired port, configure the DSCP to 802.1p mapping and the DSCP remap.

DSCP Priority	Displays the number of DSCP priority. DSCP Priority is used to classify the packets based on the value of DSCP, and map them to different queues. ToS (Type of Service) is a part of IP header, and DSCP uses the first six bits of ToS to represent the priority of IP packets. The DSCP values range from 0 to 63.
802.1p Priority	Specify the DSCP to 802.1p mapping for the desired port. The ingress packets are first mapped to 802.1p priority, then to TC queues according to the 802.1p to queue mappings.
DSCP Remap	(Optional) Select the DSCP priority to which the desired DSCP priority will be remapped for the port. When the switch detects the packets with desired DSCP value, it will modify the packets' DSCP value according to the map.

2) Click **Apply**.


Note:

All the ports in the same LAG should be assigned with the same port priority.

For T2600G-TS:

Choose the menu **QoS > Class of Service >DSCP Priority** to load the following page.

Figure 2-9 Configuring the DSCP to 802.1p Mapping and the DSCP Remap

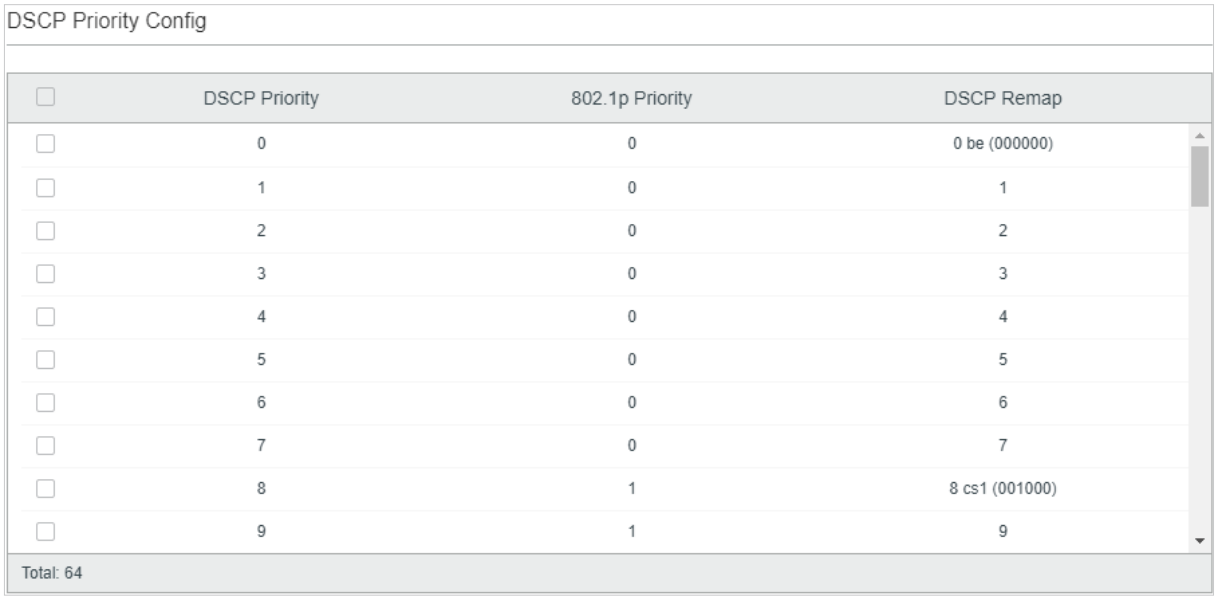

Follow these steps to configure the DSCP Priority:

1) In the **DSCP Priority Config** section, configure the DSCP to 802.1p mapping and the DSCP remap.

DSCP Priority	Displays the number of DSCP priority. DSCP Priority is used to classify the packets based on the value of DSCP, and map them to different queues. ToS (Type of Service) is a part of IP header, and DSCP uses the first six bits of ToS to represent the priority of IP packets. The DSCP values range from 0 to 63.
802.1p Priority	Specify the DSCP to 802.1p mapping. The ingress packets are first mapped to 802.1p priority based on the DSCP to 802.1p mappings, then to TC queues according to the 802.1p to queue mappings. The untagged IP packets with the desired DSCP value will be added an 802.1p priority value according to the DSCP to 802.1p mapping.
DSCP Remap	(Optional) Select the DSCP priority to which the original DSCP priority will be remapped. When the switch detects the packets with desired DSCP value, it will modify the packets' DSCP value according to the map.

2) Click **Apply**.

Note:

In Trust DSCP mode, non-IP packets will be added an 802.1p priority based on the port to 802.1p mapping and will be forwarded according to the 802.1p to queue mapping.

2.1.4 Specifying the Scheduler Settings

Specify the scheduler settings to control the forwarding sequence of different TC queues when congestion occurs.

Choose the menu **QoS > Class of Service > Scheduler Settings** to load the following page.

Figure 2-10 Specifying the Scheduler Settings (For T2600G-28TS/T2600G-28MPS/T2600G-28SQ/T2600G-52TS)


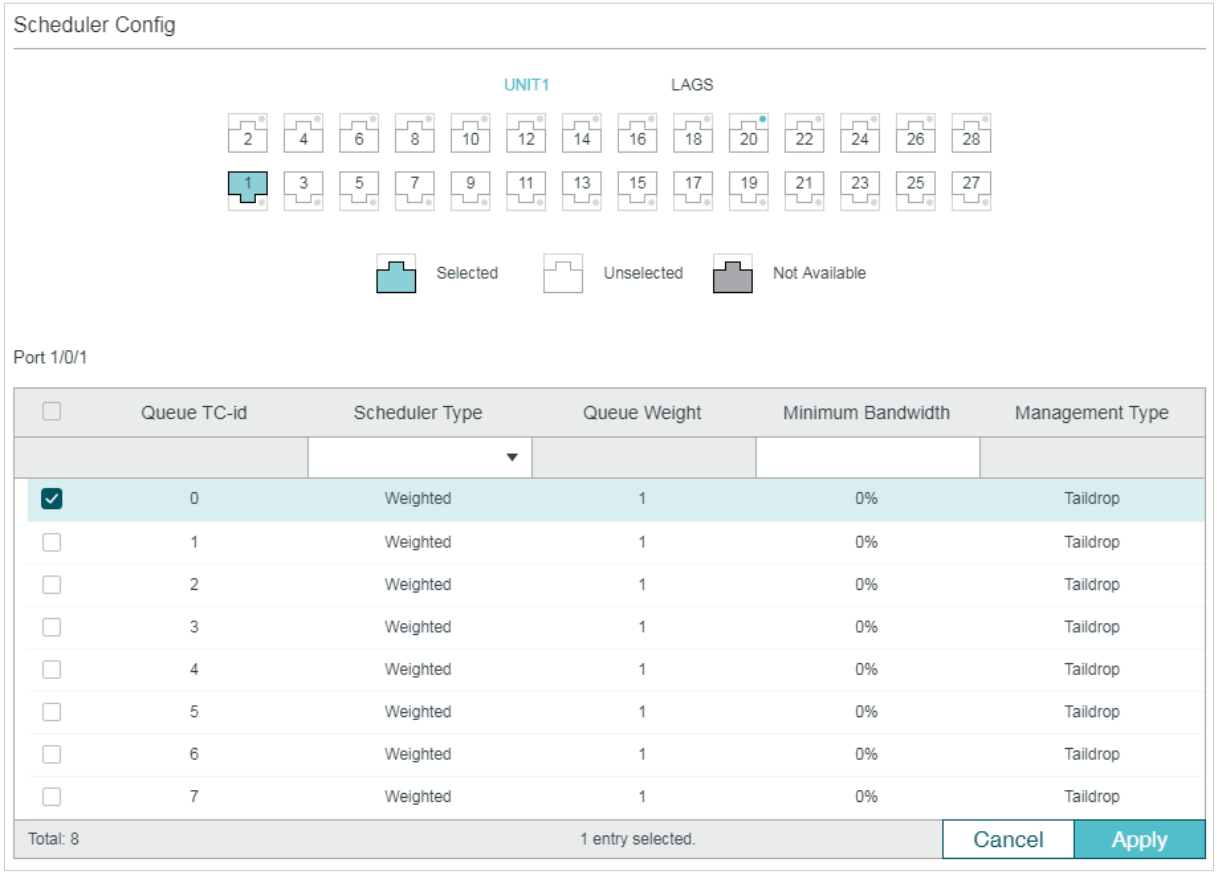


Figure 2-11 Specifying the Scheduler Settings (For T2600G-18TS)

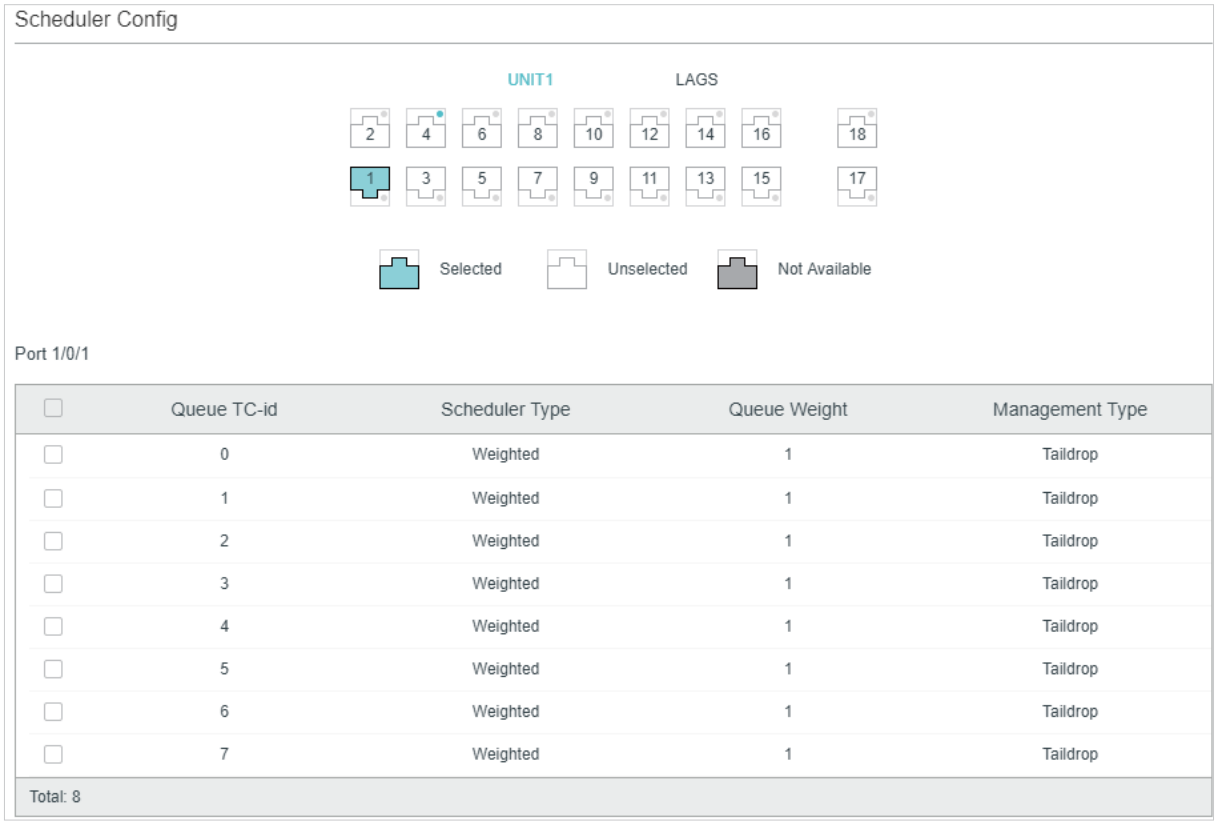

Follow these steps to configure the schedule mode:

1) In the **Scheduler Config** section, select the desired port.
2) Select the desired queue and configure the parameters.

Queue TC-id	Displays the ID number of priority Queue.
Scheduler Type	Select the type of scheduling used for corresponding queue. When the network congestion occurs, the egress queue will determine the forwarding sequence of the packets according to the type. **Strict:** In this mode, the egress queue will use SP (Strict Priority) to process the traffic in different queues. When congestion occurs, the traffic will be transmitted according to its queue priority strictly. The queue with higher priority occupies the whole bandwidth. Packets in the queue with lower priority are sent only when the queue with higher priority is empty. **Weighted:** In this mode, the egress queue will use WRR (Weighted Round Robin) to process the traffic in different queues. When congestion occurs, all the traffic will be transmitted, but the bandwidth that each traffic queue occupies will be allocated based on the queue weight.
Queue Weight	Specify the queue weight for the desired queue. This value can be set only in the Weighted mode. The valid values are from 1 to 127.

Minimum Bandwidth	Specify the minimum guaranteed bandwidth for the desired queue. The valid values are from 0 to 100 and 0 means Minimum Bandwidth is disabled. If the queue bandwidth calculated according to the weight is smaller than the minimum bandwidth, the switch will be forced to allocated the minimum bandwidth to the queue, and the other queue will share the rest bandwidth based on the weight. **Note**: Minimum Bandwidth is not available for T2600G-18TS.
Management Type	Displays the Management Type for the queues. The switch supports Taildrop mode. When the traffic exceeds the limit, the additional traffic will be dropped.

3) Click **Apply**.

Note:

With ACL Redirect feature, the switch maps all the packets that meet the configured ACL rules to the new TC queue, regardless of the mapping relations configured in this section.

2.2 Using CLI

2.2.1 Configuring Port Priority

- Configuring the Trust Mode and the port to 802.1p Mapping

Follow these steps to configure the trust mode and the port to 802.1p mapping:

Step 1	**configure** Enter global configuration mode
Step 2	**interface {fastEthernet** *port* **| range fastEthernet** *port-list* **| gigabitEthernet** *port* **| range gigabitEthernet** *port-list* **| ten-gigabitEthernet** *port* **| range ten-gigabitEthernet** *port-list* **| port-channel** *port-channel-id* **| range port-channel** *port-channel-list***}** Enter interface configuration mode.
Step 3	**qos trust mode {***untrust* **|** *dot1p* **|** *dscp***}** Select the trust mode for the port. By default, it is untrust. Here we set the trust mode as untrust. *untrust:* Specify the ports' trust mode as untrust. In this mode, the packets will be processed according to the port priority configuration.
Step 4	**qos port-priority** *dot1p-priority* Specify the port to 802.1p priority mapping for the desired port. The ingress packets from one port are first mapped to 802.1p priority based on the port to 802.1p mapping, then to TC queues based on the 802.1p to queue mapping. The untagged packets from one port will be added an 802.1p priority value according to the port to 802.1p mapping. *dot1p-priority:* Specify the 802.1p priority ranging from 0 to 7. The default value is 0.

Step 5	**show qos trust interface [fastEthernet** *port* **| gigabitEthernet** *port* **| ten-gigabitEthernet** *port* **| port-channel** *port-channel-id***]** Verify the trust mode of the ports.
Step 6	**show qos port-priority interface [fastEthernet** *port* **| gigabitEthernet** *port* **| ten-gigabitEthernet** *port* **| port-channel** *port-channel-id***]** Verify the port to 802.1p mappings.
Step 7	**end** Return to privileged EXEC mode.
Step 8	**copy running-config startup-config** Save the settings in the configuration file.

■ Configuring the 802.1p to Queue Mapping

Follow these steps to configure the 802.1p to queue mapping:

Step 1	**configure** Enter global configuration mode
Step 2	**qos cos-map {***dot1p-priority***} {***tc-queue***}** Specify the 802.1p to queue mapping. The packets with the desired 802.1p priority will be put in the corresponding queues. By default, the 802.1p priority 0 to 7 is respectively mapped to TC-1, TC-0, TC-2, TC-3, TC-4, TC-5, TC-6, TC-7. *dot1p-priority:* Specify the 802.1p priority. The valid values are from 0 to 7. *tc-queue:* Specify the ID number of the TC queue. The valid values are from 0 to 7.
Step 3	**show qos cos-map** Verify the 802.1p to queue mappings.
Step 4	**end** Return to privileged EXEC mode.
Step 5	**copy running-config startup-config** Save the settings in the configuration file.

The following example shows how to configure the trust mode of port 1/0/1 as untrust, map the port 1/0/1 to 802.1p priority 1 and map 802.1p priority 1 to TC3:

Switch#configure

Switch(config)#interface gigabitEthernet 1/0/1

Switch(config-if)#qos trust mode untrust

Switch(config-if)#qos port-priority 1

Switch(config-if)#exit

Switch(config)#qos cos-map 1 3

Switch(config)#show qos trust interface gigabitEthernet 1/0/1

```
Port       Trust Mode      LAG
--------   ---------       --------
Gi1/0/1    untrust         N/A
```

Switch(config)#show qos port-priority interface gigabitEthernet 1/0/1

```
Port       CoS Value       LAG
--------   ---------       --------
Gi1/0/1    CoS  1          N/A
```

Switch(config)#show qos cos-map

```
-----+-----+-----+-----+-----+-----+-----+----+----
Tag |0     |1     |2     |3     |4     |5     |6    |7
-----+-----+-----+-----+-----+-----+-----+----+----
TC   |TC0  |TC3  |TC2  |TC3  |TC4 |TC5  |TC6 |TC7
-----+-----+-----+-----+-----+-----+-----+----+----
```

Switch(config)#end

Switch#copy running-config startup-config

2.2.2 Configuring 802.1p Priority

- Configuring the Trust Mode

Follow these steps to configure the trust mode:

Step 1	**configure** Enter global configuration mode

Step 2	**interface {fastEthernet** *port* **| range fastEthernet** *port-list* **| gigabitEthernet** *port* **| range gigabitEthernet** *port-list* **| ten-gigabitEthernet** *port* **| range ten-gigabitEthernet** *port-list* **| port-channel** *port-channel-id* **| range port-channel** *port-channel-list***}** Enter interface configuration mode.
Step 3	**qos trust mode {***untrust* **|** *dot1p* **|** *dscp***}** Select the trust mode for the port. By default, it is untrust. Here we set the trust mode as dot1p. *dot1p:* Specify the ports' trust mode as dot1p. In this mode, the tagged packets will be processed according to the 802.1p priority configuration and the untagged packets will be processed according to the port priority configuration.
Step 4	**show qos trust interface [fastEthernet** *port* **| gigabitEthernet** *port* **| ten-gigabitEthernet** *port* **| port-channel** *port-channel-id***]** Verify the trust mode of the ports.
Step 5	**end** Return to privileged EXEC mode.
Step 6	**copy running-config startup-config** Save the settings in the configuration file.

■ Configuring the 802.1p to Queue Mapping and 802.1p Remap

Follow these steps to configure the 802.1p to queue mapping and 802.1p remap:

Step 1	**configure** Enter global configuration mode
Step 2	**qos cos-map {***dot1p-priority***} {***tc-queue***}** Specify the 802.1p to queue mapping. The packets with the desired 802.1p priority will be put in the corresponding queues. By default, the 802.1p priority 0 to 7 is respectively mapped to TC-1, TC-0, TC-2, TC-3, TC-4, TC-5, TC-6, TC-7. *dot1p-priority:* Specify the 802.1p priority. The valid values are from 0 to 7. *tc-queue:* Specify the ID number of the TC queue. The valid values are from 0 to 7.

Step 3	For T2600G-28TS/T2600G-28MPS/T2600G-28SQ/T2600G-52TS: **interface {fastEthernet** *port* **| range fastEthernet** *port-list* **| gigabitEthernet** *port* **| range gigabitEthernet** *port-list* **| ten-gigabitEthernet** *port* **| range ten-gigabitEthernet** *port-list* **| port-channel** *port-channel-id* **| range port-channel** *port-channel-list***}** Enter interface configuration mode. **qos dot1p-remap {***dot1p-priority***} {***new-dot1p-priority***}** (Optional) Specify the 802.1p to 802.1p mappings for the desired port. 802.1p Remap is used to modify the 802.1p priority of the ingress packets. When the switch detects the packets with desired 802.1p priority, it will modify the value of 802.1p priority according to the map. By default, the original 802.1p priority 0 is mapped to the 802.1p priority 0, the original 802.1p priority 1 is mapped to the 802.1p priority 1 and so on. *dot1p-priority:* Specify the original 802.1p priority. The valid values are from 0 to 7. *new-dot1p-priority:* Specify the new 802.1p priority. The valid values are from 0 to 7. For T2600G-18TS: **qos dot1p-remap {***dot1p-priority***} {***new-dot1p-priority***}** (Optional) Specify the 802.1p to 802.1p mappings. 802.1p Remap is used to modify the 802.1p priority of the ingress packets. When the switch detects the packets with desired 802.1p priority, it will modify the value of 802.1p priority according to the map. By default, the original 802.1p priority 0 is mapped to the 802.1p priority 0, the original 802.1p priority 1 is mapped to the 802.1p priority 1 and so on. *dot1p-priority:* Specify the original 802.1p priority. The valid values are from 0 to 7. *new-dot1p-priority:* Specify the new 802.1p priority. The valid values are from 0 to 7.
Step 4	**show qos cos-map** Verify the 802.1p to queue mappings.
Step 5	For T2600G-28TS/T2600G-28MPS/T2600G-28SQ/T2600G-52TS: **show qos dot1p-remap interface [fastEthernet** *port* **| gigabitEthernet** *port* **| ten-gigabitEthernet** *port* **| port-channel** *port-channel-id***]** Verify the 802.1p to 802.1p mappings of the ports. For T2600G-18TS: **show qos dot1p-remap** Verify the 802.1p to 802.1p mappings globally.
Step 6	**end** Return to privileged EXEC mode.
Step 7	**copy running-config startup-config** Save the settings in the configuration file.

The following example shows how to configure the trust mode of port 1/0/1 as dot1p, map 802.1p priority 3 to TC4, and configure to map the original 802.1p 1 to 802.1p priority 3:

Switch#configure

Switch(config-if)#interface gigabitEthernet 1/0/1

Switch(config-if)#qos trust mode dot1p

Switch(config-if)#exit

Switch(config)#qos cos-map 3 4

Switch(config)#interface gigabitEthernet 1/0/1

Switch(config-if)#qos dot1p-remap 1 3

Switch(config-if)#show qos trust interface gigabitEthernet 1/0/1

```
Port       Trust Mode      LAG
--------   ---------       --------
Gi1/0/1    trust 802.1P    N/A
```

Switch(config-if)#show qos cos-map

```
-----+-----+-----+-----+-----+-----+-----+----+----
Tag |0    |1    |2    |3    |4    |5    |6   |7
-----+-----+-----+-----+-----+-----+-----+----+----
TC  |TC0 |TC1 |TC2 |TC4 |TC4 |TC5 |TC6 |TC7
-----+-----+-----+-----+-----+-----+-----+----+----
```

Switch(config-if)#show qos dot1p-remap interface gigabitEthernet 1/0/1

```
Port       0   1   2   3   4   5   6   7   LAG
-----      ----- ----- ----- ----- ----- ----- ----- ----- -----
Gi1/0/1    0   3   2   3   4   5   6   7   N/A
```

Switch(config-if)#end

Switch#copy running-config startup-config

2.2.3 Configuring DSCP Priority

- Configuring the Trust Mode

Follow these steps to configure the trust mode:

Step 1	**configure** Enter global configuration mode
Step 2	**interface {fastEthernet** *port* **| range fastEthernet** *port-list* **| gigabitEthernet** *port* **| range gigabitEthernet** *port-list* **| ten-gigabitEthernet** *port* **| range ten-gigabitEthernet** *port-list* **| port-channel** *port-channel-id* **| range port-channel** *port-channel-list***}** Enter interface configuration mode.
Step 3	**qos trust mode {***untrust* **|** *dot1p* **|** *dscp***}** Select the trust mode for the port. By default, it is untrust. Here we set the trust mode as dscp. *dscp:* Specify the ports' trust mode as dscp. In this mode, the IP packets will be processed according to the DSCP priority configuration and the non-IP packets will be processed according to the port priority configuration.
Step 4	**show qos trust interface [fastEthernet** *port* **| gigabitEthernet** *port* **| ten-gigabitEthernet** *port* **| port-channel** *port-channel-id***]** Verify the trust mode of the ports.
Step 5	**end** Return to privileged EXEC mode.
Step 6	**copy running-config startup-config** Save the settings in the configuration file.

■ Configuring the 802.1p to Queue Mapping

Follow these steps to configure the 802.1p to queue mapping:

Step 1	**configure** Enter global configuration mode
Step 2	**qos cos-map {***dot1p-priority***} {***tc-queue***}** Specify the 802.1p to queue mapping. The packets with the desired 802.1p priority will be put in the corresponding queues. By default, the 802.1p priority 0 to 7 is respectively mapped to TC-1, TC-0, TC-2, TC-3, TC-4, TC-5, TC-6, TC-7. *dot1p-priority:* Specify the 802.1p priority. The valid values are from 0 to 7. *tc-queue:* Specify the ID number of the TC queue. The valid values are from 0 to 7.
Step 3	**show qos cos-map** Verify the 802.1p to queue mappings.
Step 4	**end** Return to privileged EXEC mode.
Step 5	**copy running-config startup-config** Save the settings in the configuration file.

Configuring the DSCP to 802.1p Mapping and DSCP Remap

Follow these steps to configure the DSCP to 802.1p mapping and DSCP remap:

Step 1	**configure** Enter global configuration mode
Step 2	For T2600G-28TS/T2600G-28MPS/T2600G-28SQ/T2600G-52TS: **interface {fastEthernet** *port* **| range fastEthernet** *port-list* **| gigabitEthernet** *port* **| range gigabitEthernet** *port-list* **| ten-gigabitEthernet** *port* **| range ten-gigabitEthernet** *port-list* **| port-channel** *port-channel-id* **| range port-channel** *port-channel-list***}** Enter interface configuration mode. **qos dscp-map {***dscp-value-list***} {***dot1p-priority***}** Specify the DSCP to 802.1p mapping for the desired port. The ingress packets with the desired DSCP priority are first mapped to 802.1p priority based on the DSCP to 802.1p mapping, then to TC queues based on the 802.1p to queue mapping. By default, the DSCP priorities 0-7 are mapped to the 802.1p priority 0, the DSCP priorities 8-15 are mapped to the 802.1p priority 1 and so on. *dscp-value-list:* Specify the DSCP value list in the format of "1-3,5,7". The valid values are from 0 to 63. *dot1p-priority:* Specify the 802.1p priority. The valid values are from 0 to 7. For T2600G-18TS: **qos dscp-map {***dscp-value-list***} {***dot1p-priority***}** Specify the DSCP to 802.1p mapping. The ingress packets with the desired DSCP priority are first mapped to 802.1p priority based on the DSCP to 802.1p mapping, then to TC queues based on the 802.1p to queue mapping. The untagged packets with the desired DSCP priority will be added an 802.1p priority value according to the DSCP to 802.1p mapping. by default, the DSCP priorities 0-7 are mapped to the 802.1p priority 0, the DSCP priorities 8-15 are mapped to the 802.1p priority 1 and so on. *dscp-value-list:* Specify the DSCP value list in the format of "1-3,5,7". The valid values are from 0 to 63. *dot1p-priority:* Specify the 802.1p priority. The valid values are from 0 to 7.
Step 3	**qos dscp-remap {***dscp-value-list***} {***dscp-remap-value***}** (Optional) Specify the DSCP to DSCP mappings for the ports. DSCP Remap is used to modify the DSCP priority of the ingress packets. When the switch detects the packets with the desired DSCP priority, it will modify the value of DSCP priority according to the map. By default, the original DSCP priority 0 is mapped to the DSCP priority 0, the original DSCP priority 1 is mapped to the DSCP priority 1 and so on. *dscp-value-list:* Specify the original DSCP priority list in the format of "1-3,5,7". The valid values are from 0 to 63. *dscp-remap-value:* Specify the new DSCP priority. The valid values are from 0 to 63.

Step 4	For T2600G-28TS/T2600G-28MPS/T2600G-28SQ/T2600G-52TS: **show qos dscp-map interface [fastEthernet** *port* **| gigabitEthernet** *port* **| ten-gigabitEthernet** *port* **| port-channel** *port-channel-id***]** Verify the DSCP to queue mappings of ports. For T2600G-18TS: **show qos dscp-map** Verify the DSCP to queue mappings globally.
Step 5	For T2600G-28TS/T2600G-28MPS/T2600G-28SQ/T2600G-52TS: **show qos dscp-remap interface [fastEthernet** *port* **| gigabitEthernet** *port* **| ten-gigabitEthernet** *port* **| port-channel** *port-channel-id***]** Verify the DSCP to DSCP mappings of the ports. For T2600G-18TS: **show qos dscp-remap** Verify the DSCP to DSCP mappings globally.
Step 6	**end** Return to privileged EXEC mode.
Step 8	**copy running-config startup-config** Save the settings in the configuration file.

Note:

For T2600G-28TS/T2600G-28MPS/T2600G-28SQ/T2600G-52TS, all the ports in the same LAG should be assigned with the same port priority.

For T2600G-18TS, in Trust DSCP mode, non-IP packets will be added an 802.1p priority based on the port to 802.1p mapping and will be forwarded according to the 802.1p to queue mapping.

The following example shows how to configure the trust mode of port 1/0/1 as dscp, map 802.1p priority 3 to TC4, map DSCP priority 1-3,5,7 to 802.1p priority 3, and configure to map the original DSCP priority 9 to DSCP priority 5:

Switch#configure

Switch(config)#interface gigabitEthernet 1/0/1

Switch(config-if)#qos trust mode dscp

Switch(config-if)#exit

Switch(config)#qos cos-map 3 4

Switch(config)#interface gigabitEthernet 1/0/1

Switch(config-if)#qos dscp-map 1-3,5,7 3

Switch(config-if)#qos dscp-remap 9 5

Switch(config-if)#show qos trust interface gigabitEthernet 1/0/1

```
Port        Trust Mode      LAG
--------    ---------       ------
Gi1/0/1     trust DSCP      N/A
```

Switch(config-if)#show qos cos-map

```
-----+-----+-----+-----+-----+-----+-----+----+----
Tag |0     |1     |2     |3     |4     |5     |6    |7
-----+-----+-----+-----+-----+-----+-----+----+----
TC   |TC0 |TC1  |TC2  |TC4  |TC4 |TC5  |TC6 |TC7
-----+-----+-----+-----+-----+-----+-----+----+----
```

Switch(config-if)#show qos dscp-map interface gigabitEthernet 1/0/1

```
Gi1/0/1----LAG: N/A
DSCP:              0   1   2   3   4   5   6   7
DSCP to 802.1P     0   3   3   3   0   3   0   3
                   ---- ---- ---- ---- ---- ---- ---- ----
DSCP:              8   9   10  11  12  13  14  15
DSCP to 802.1P     1   1   1   1   1   1   1   1
                   ---- ---- ---- ---- ---- ---- ---- ----
DSCP:              16  17  18  19  20  21  22  23
DSCP to 802.1P     2   2   2   2   2   2   2   2
                    ---- ---- ---- ---- ---- ---- ---- ----
DSCP:              24  25  26  27  28  29  30  31
DSCP to 802.1P     3   3   3   3   3   3   3   3
                   ---- ---- ---- ---- ---- ---- ---- ----
DSCP:              32  33  34  35  36  37  38  39
DSCP to 802.1P     4   4   4   4   4   4   4   4
                   ---- ---- ---- ---- ---- ---- ---- ----
DSCP:              40  41  42  43  44  45  46  47
DSCP to 802.1P     5   5   5   5   5   5   5   5
                   ---- ---- ---- ---- ---- ---- ---- ---
DSCP:              48  49  50  51  52  53  54  55
```

DSCP to 802.1P 6 6 6 6 6 6 6 6

---- ---- ---- ---- ---- ---- ---- ----

DSCP: 56 57 58 59 60 61 62 63

DSCP to 802.1P 7 7 7 7 7 7 7 7

---- ---- ---- ---- ---- ---- ---- ---

Switch(config-if)#show qos dscp-remap interface gigabitEthernet 1/0/1

Gi1/0/1----LAG: N/A

DSCP: 0 1 2 3 4 5 6 7

DSCP remap value 0 1 2 3 4 5 6 7

---- ---- ---- ---- ---- ---- ---- ----

DSCP: 8 **9** 10 11 12 13 14 15

DSCP remap value 8 **5** 10 11 12 13 14 15

---- ---- ---- ---- ---- ---- ---- ----

DSCP: 16 17 18 19 20 21 22 23

DSCP remap value 16 17 18 19 20 21 22 23

---- ---- ---- ---- ---- ---- ---- ----

DSCP: 24 25 26 27 28 29 30 31

DSCP remap value 24 25 26 27 28 29 30 31

---- ---- ---- ---- ---- ---- ---- ----

DSCP: 32 33 34 35 36 37 38 39

DSCP remap value 32 33 34 35 36 37 38 39

---- ---- ---- ---- ---- ---- ---- ----

DSCP: 40 41 42 43 44 45 46 47

DSCP remap value 40 41 42 43 44 45 46 47

---- ---- ---- ---- ---- ---- ---- ----

DSCP: 48 49 50 51 52 53 54 55

DSCP remap value 48 49 50 51 52 53 54 55

---- ---- ---- ---- ---- ---- ---- ----

DSCP: 56 57 58 59 60 61 62 63

DSCP remap value 56 57 58 59 60 61 62 63

---- ---- ---- ---- ---- ---- ---- ----

Switch(config-if)#end

Switch#copy running-config startup-config

2.2.4 Specifying the Scheduler Settings

Follow these steps to specify the scheduler settings to control the forwarding sequence of different TC queues when congestion occurs.

Step 1 **configure**

Enter global configuration mode.

Step 2 **interface {fastEthernet** *port* **| range fastEthernet** *port-list* **| gigabitEthernet** *port* **| range gigabitEthernet** *port-list* **| ten-gigabitEthernet** *port* **| range ten-gigabitEthernet** *port-list* **| port-channel** *port-channel-id* **| range port-channel** *port-channel-list***}**

Enter interface configuration mode.

Step 3 **qos queue** *tc-queue* **mode {**sp **|** wrr**} [weight** *weight***]**

Specify the type of scheduling used for corresponding queue. When the network congestion occurs, the egress queue will determine the forwarding sequence of the packets according to the type. By default, it is wrr mode and the all the queue weights are 1.

tc-queue: Specify the ID number of TC queue. The valid values are from 0 to 7.

sp: In sp mode, the egress queue will use SP (Strict Priority) to process the traffic in different queues. When congestion occurs, the traffic will be transmitted according to its queue priority strictly. The queue with higher priority occupies the whole bandwidth. Packets in the queue with lower priority are sent only when the queue with higher priority is empty.

wrr: In wrr mode, the egress queue will use WRR (Weighted Round Robin) to process the traffic in different queues. When congestion occurs, all the traffic will be transmitted, but the bandwidth that each traffic queue occupies will be allocated based on the queue weight.

weight: Specify the queue weight for the desired queue. This value can be set only in the wrr mode. The valid values are from 1 to 127.

Step 4 **qos queue** *tc-queue* **bandwidth** *rate*

Specify the minimum guaranteed bandwidth for the desired queue. If the queue bandwidth calculated according to the weight is smaller than the minimum bandwidth, the switch will be forced to allocated the minimum bandwidth to the queue, and the other queue will share the rest bandwidth based on the weight.

tc-queue: Specify the ID number of the TC queue. The valid values are from 0 to 7.

rate: Specify the rate for the desired TC queue. The valid values are from 1 to 100. The default value is 0.

Note: Minimum Bandwidth is not available for T2600G-18TS.

Step 5 **show qos queue interface [fastEthernet** *port* **| gigabitEthernet** *port* **| ten-gigabitEthernet** *port* **| port-channel** *port-channel-id***]**

Verify the scheduler settings..

Step 6	**end** Return to privileged EXEC mode.
Step 7	**copy running-config startup-config** Save the settings in the configuration file.

Note:

With ACL Redirect feature, the switch maps all the packets that meet the configured ACL rules to the new TC queue, regardless of the mapping relations configured in this section.

The following example shows how to specify the scheduler settings for port 1/0/1. Set the scheduler mode of TC1 as sp mode, set the scheduler mode of TC4 as wrr mode and set the queue weight as 5. Set the minimum bandwidth of TC4 as 10.

Switch#configure

Switch(config)#interface gigabitEthernet 1/0/1

Switch(config-if)#qos queue 1 **mode** sp

Switch(config-if)#qos queue 4 **mode** wrr **weight** 5

Switch(config-if)#qos queue 4 **bandwidth** 10

Switch(config-if)#show qos queue interface gigabitEthernet 1/0/1

Gi1/0/1----LAG: N/A

Queue	Schedule Mode	Weight	Min Bandwidth(%)
TC0	WRR	1	0%
TC1	Strict	N/A	0%
TC2	WRR	1	0%
TC3	WRR	1	0%
TC4	WRR	5	10%
TC5	WRR	1	0%
TC6	WRR	1	0%
TC7	WRR	1	0%

Switch(config-if)#end

Switch#copy running-config startup-config

3 Bandwidth Control Configuration

With bandwidth control configurations, you can:


- Configure rate limit
- Configure storm control

3.1 Using the GUI

3.1.1 Configuring Rate Limit

Choose the menu **QoS > Bandwidth Control > Rate Limit** to load the following page.

Figure 3-1 Configuring Rate Limit

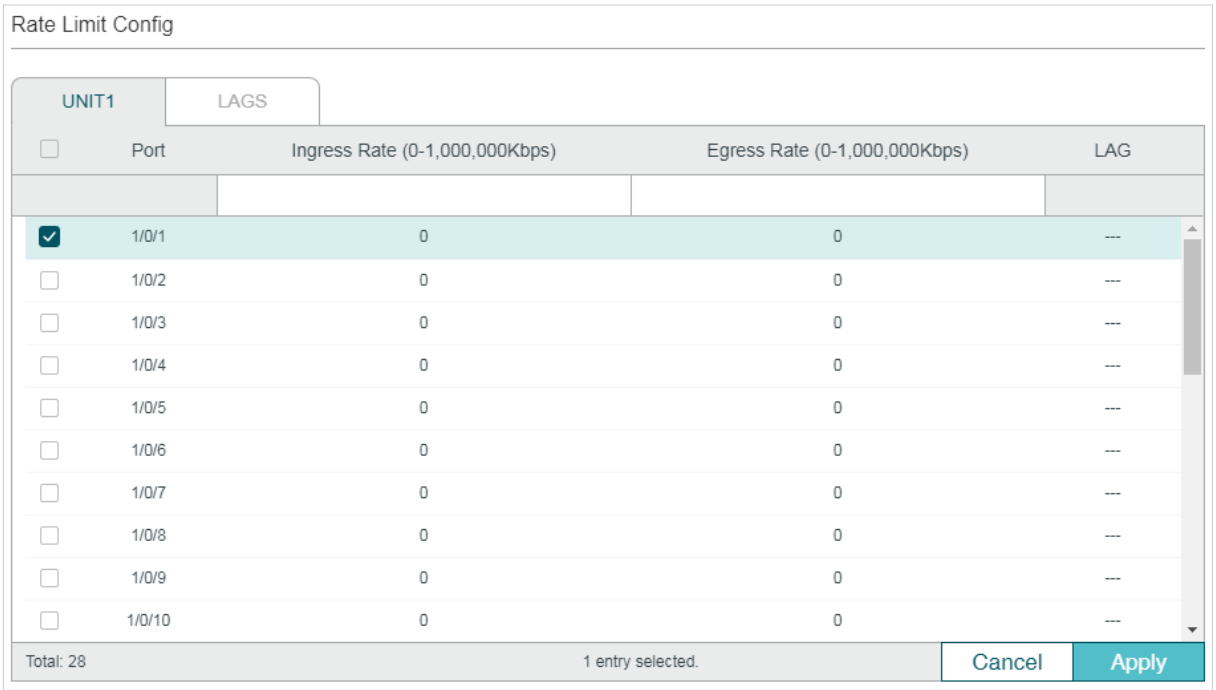

Follow these steps to configure the Rate Limit function:

1) Select the desired port and configure the upper rate limit to receive and send packets.


Ingress Rate (0-1,000,000Kbps)	Configure the upper rate limit for receiving packets on the port. The valid values are from 0 to 1000000 Kbps and 0 means the ingress rate limit is disabled.
Egress Rate (0-1,000,000Kbps)	Configure the bandwidth for sending packets on the port. The valid values are from 0 to 1000000 Kbps and 0 means the egress rate limit is disabled.

2) Click **Apply**.

3.1.2 Configuring Storm Control

Choose the menu **QoS > Bandwidth Control > Storm Control** to load the following page.

Figure 3-2 Configuring Storm Control

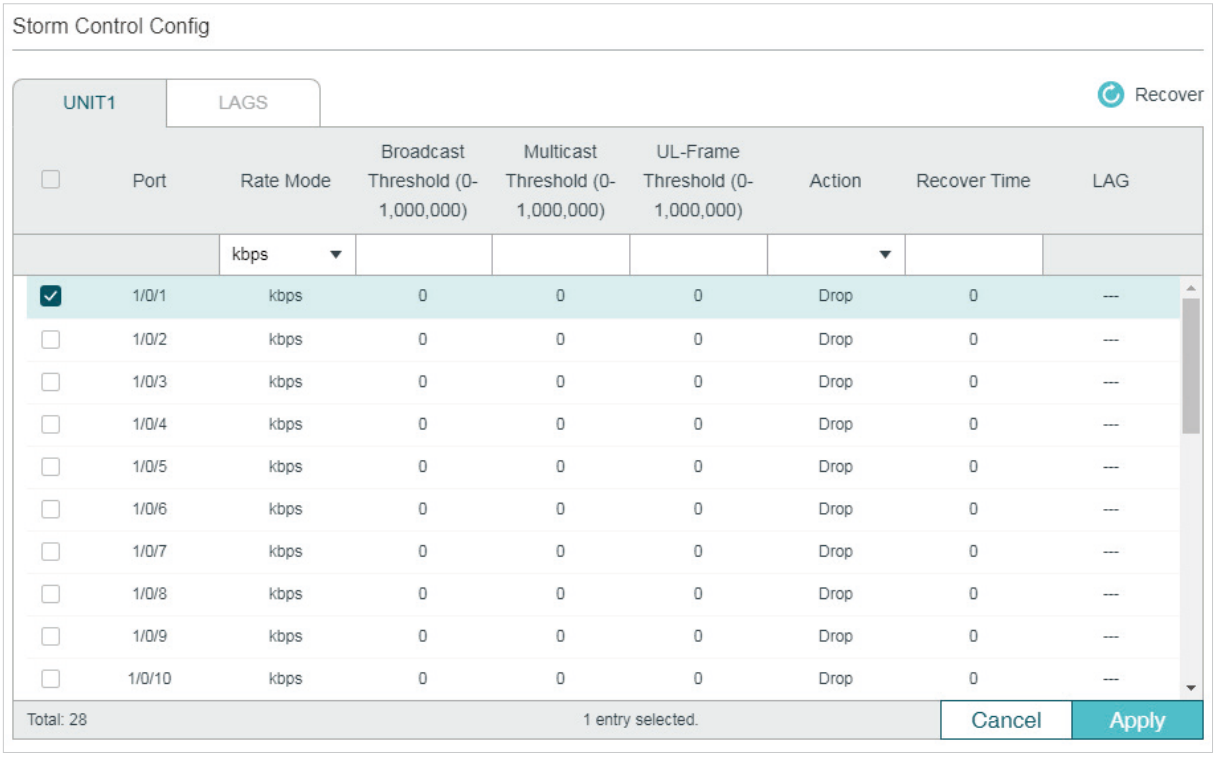

Follow these steps to configure the Storm Control function:

1) Select the desired port and configure the upper rate limit for forwarding broadcast packets, multicast packets and UL-frames (Unknown unicast frames).

Rate Mode	Specify the Rate Mode for the broadcast threshold, multicast threshold and UL-Frame threshold on the desired port. **kbps:** The switch will limit the maximum speed of the specific kinds of traffic in kilo-bits per second. **ratio:** The switch will limit the percentage of bandwidth utilization for specific kinds of traffic. **pps:** The switch will limit the maximum number of packets per second for specific kinds of traffic. Note: **pps** is not available for T2600G-18TS.
Broadcast Threshold (0-1,000,000)	Specify the upper rate limit for receiving broadcast packets. The valid values differ among different rate modes. The value 0 means the broadcast threshold is disabled. The broadcast traffic exceeding the limit will be processed according to the Action configurations.

Multicast Threshold (0-1,000,000)	Specify the upper rate limit for receiving multicast packets. The valid values differ among different rate modes. The value 0 means the multicast threshold is disabled. The multicast traffic exceeding the limit will be processed according to the Action configurations.
UL-Frame Threshold (0-1,000,000)	Specify the upper rate limit for receiving unknown unicast frames. The valid values differ among different rate modes. The value 0 means the unknown unicast threshold is disabled. The traffic exceeding the limit will be processed according to the Action configurations.
Action	Select the action that the switch will take when the traffic exceeds its corresponding limit. **Drop:** Set the Action as Drop. The port will drop the subsequent packets when the traffic exceeds the limit. **Shutdown:** Set the Action as Shutdown. The port will be shutdown when the traffic exceeds the limit.
Recover Time	Specify the recover time for the port. It takes effect only when the action is set as shutdown. The valid values are from 0 to 3600 seconds. When the port is shutdown, it can recover to its normal state after the recover time passed. If the recover time is specified as 0, which means the port will not recover to its normal state automatically and you can recover the port manually.

2) Click **Apply**.

Note:

For ports in the same LAG, rate limit / storm control should be set to the same value to ensure a successful port aggregation.

3.2 Using the CLI

3.2.1 Configuring Rate Limit

Follow these steps to configure the upper rate limit for the port to receive and send packets:

Step 1	**configure** Enter global configuration mode.
Step 2	**interface {fastEthernet** *port* **| range fastEthernet** *port-list* **| gigabitEthernet** *port* **| range gigabitEthernet** *port-list* **| ten-gigabitEthernet** *port* **| range ten-gigabitEthernet** *port-list* **| port-channel** *port-channel-id* **| range port-channel** *port-channel-list***}** Enter interface configuration mode.

Step 3	**bandwidth {ingress** *ingress-rate* **| egress** *egress-rate***}** Configure the upper rate limit for the port to receive and send packets. *ingress-rate:* Configure the upper rate limit for receiving packets on the port. The valid values are from 0 to 1000000 Kbps. *egress-rate:* Configure the upper rate limit for sending packets on the port. The valid values are from 0 to 1000000 Kbps.
Step 4	**show bandwidth interface [fastEthernet** *port* **| gigabitEthernet** *port* **| ten-gigabitEthernet** *port* **| port-channel** *port-channel-id***]** Verify the ingress/egress rate limit for forwarding packets on the port or LAG. If no port or LAG is specified, it displays the upper ingress/egress rate limit for all ports or LAGs.
Step 5	**end** Return to privileged EXEC mode.
Step 6	**copy running-config startup-config** Save the settings in the configuration file.

The following example shows how to configure the ingress-rate as 5120 Kbps and egress-rate as 1024 Kbps for port 1/0/5:

Switch#configure

Switch(config)#interface gigabitEthernet 1/0/5

Switch(config-if)#bandwidth ingress 5120 **egress** 1024

Switch(config-if)#show bandwidth interface gigabitEthernet 1/0/5

Port	IngressRate(Kbps)	EgressRate(Kbps)	LAG
---	---	---	---
Gi1/0/5	5120	1024	N/A

Switch(config-if)#end

Switch#copy running-config startup-config

3.2.2 Configuring Storm Control

Follow these steps to configure the upper rate limit on the port for forwarding broadcast packets, multicast packets and unknown unicast frames:

Step 1	**configure** Enter global configuration mode

Step 2	**interface {fastEthernet** *port* **| range fastEthernet** *port-list* **| gigabitEthernet** *port* **| range gigabitEthernet** *port-list* **| ten-gigabitEthernet** *port* **| range ten-gigabitEthernet** *port-list* **| port-channel** *port-channel-id* **| range port-channel** *port-channel-list***}** Enter interface configuration mode.
Step 3	**storm-control rate-mode {**kbps **|** ratio **|** pps**}** Specify the Rate Mode for the broadcast threshold, multicast threshold and UL-Frame threshold on the desired port. kbps: The switch will limit the maximum speed of the specific kinds of traffic in kilo-bits per second. ratio: The switch will limit the percentage of bandwidth utilization for specific kinds of traffic. pps: The switch will limit the maximum number of packets per second for specific kinds of traffic. Note: pps is not available for T2600G-18TS.
Step 4	**storm-control broadcast** *rate* Specify the upper rate limit for receiving broadcast packets. The broadcast traffic exceeding the limit will be processed according to the Action configurations. *rate*: Enter the upper rate. In kbps mode, the valid values are from 1 to 1000000 Kbps. In ratio mode, the valid values are from 1 to100 percent. In pps mode, the valid values are from 1 to 1488000 packets per second.
Step 5	**storm-control multicast** *rate* Specify the upper rate limit for receiving multicast packets. The multicast traffic exceeding the limit will be processed according to the Action configurations. *rate*: Enter the upper rate. In kbps mode, the valid values are from 1 to 1000000 Kbps. In ratio mode, the valid values are from 1 to100 percent. In pps mode, the valid values are from 1 to 1488000 packets per second.
Step6	**storm-control unicast** *rate* Specify the upper rate limit for receiving unknown unicast frames. The traffic exceeding the limit will be processed according to the Action configurations. *rate*: Enter the upper rate. In kbps mode, the valid values are from 1 to 1000000 Kbps. In ratio mode, the valid values are from 1 to100 percent. In pps mode, the valid values are from 1 to 1488000 packets per second.

Step 7	**storm-control exceed {**drop **|** shutdown**} [recover-time** *time***]** Specify the action and the recover time. The switch will perform the action when the traffic exceeds its corresponding limit. By default, it is drop. drop**:** Set the Action as Drop. The port will drop the subsequent packets when the traffic exceeds the limit. shutdown**:** Set the Action as Shutdown. The port will be shutdown when the traffic exceeds the limit. *time*: Specify the recover time for the port. It takes effect only when the action is set as shutdown. The valid values are from 0 to 3600 and the default value is 0. When the port is shutdown, it can recover to its normal state after the recover time passed. If the recover time is specified as 0, which means the port will not recover to its normal state automatically and you can recover the port manually.
Step 8	**storm-control recover** (Optional) Recover the port manually. When the recover time is specified as 0, the port will not recover to its normal state automatically. In this condition, you need to use this command to recover the port manually.
Step 9	**show storm-control interface [fastEthernet** *port* **| gigabitEthernet** *port* **| ten-gigabitEthernet** *port* **| port-channel** *port-channel-id***]** Verify the storm control configurations of the port or LAG. If no port or LAG is specified, it displays the storm control configuration for all ports or LAGs.
Step 10	**end** Return to privileged EXEC mode.
Step 11	**copy running-config startup-config** Save the settings in the configuration file.

The following example shows how to configure the upper rate limit of broadcast packets as 148800 pps, Specify the action as shutdown and set the recover time as 10 for port 1/0/5:

Switch#configure

Switch(config)#interface gigabitEthernet 1/0/5

T2600G-28TS(config-if)#storm-control rate-mode pps

T2600G-28TS(config-if)#storm-control broadcast 148800

T2600G-28TS(config-if)#storm-control exceed shutdown **recover-time** 10

T2600G-28TS(config-if)#show storm-control interface gigabitEthernet 1/0/5

Port	Rate Mode	BcRate	McRate	UlRate	Exceed	Recover Time	LAG
Gi1/0/5	pps	148800	0	0	shutdown	10	N/A

Switch(config-if)#end

Switch#copy running-config startup-config

4 Voice VLAN Configuration

To complete the voice VLAN configurations, follow these steps:

1) Create a 802.1Q VLAN
2) Configure OUI addresses
3) Configure Voice VLAN globally
4) Add ports to Voice VLAN

Configuration Guidelines

- Before configuring voice VLAN, you need to create a 802.1Q VLAN for voice traffic. For details about 802.1Q VLAN Configuration, please refer to *802.1Q VLAN Configuration*.
- VLAN 1 is a default VLAN and cannot be configured as the voice VLAN.
- Only one VLAN can be set as the voice VLAN on the switch.

4.1 Using the GUI


4.1.1 Configuring OUI Addresses

The OUI address is assigned as a unique identifier by IEEE (Institute of Electrical and Electronics Engineers) to a device vendor. It is used by the switch to determine whether a packet is a voice packet.

If the OUI address of your voice device is not in the OUI table, you need to add the OUI address to the table.

Choose the menu **QoS > Voice VLAN > OUI Config** to load the following page.


Figure 4-1 Configuring OUI Addresses

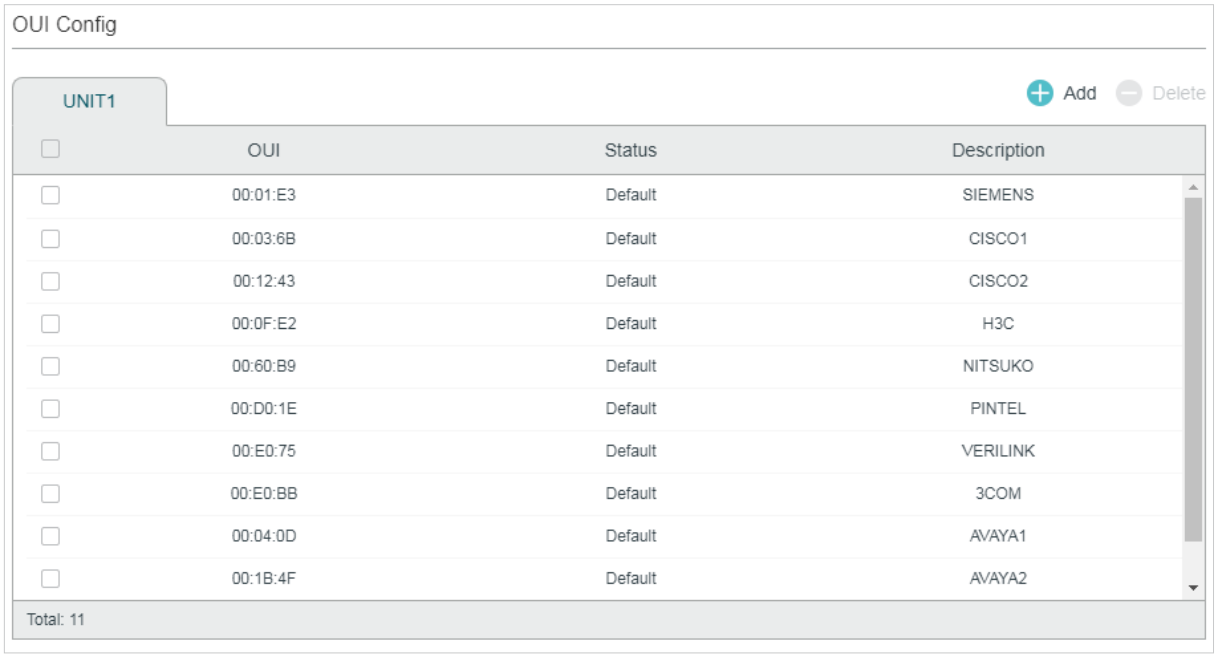

Follow these steps to configure the OUI addresses:

1) Click Add to load the following page.

Figure 4-2 Creating an OUI Entry

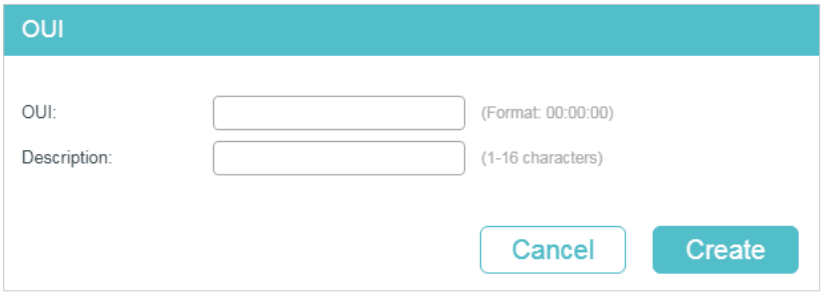

2) Specify the OUI and the Description.


OUI	Enter the OUI address of your voice devices. The OUI address is used by the switch to determine whether a packet is a voice packet. An OUI address is the first 24 bits of a MAC address, and is assigned as a unique identifier by IEEE (Institute of Electrical and Electronics Engineers) to a device vendor. If the source MAC address of a packet matches the OUI addresses in the OUI list, the switch identifies the packet as a voice packet and prioritizes it in transmission.
Description	Give an OUI address description for identification.

3) Click **Create**.

4.1.1 Configuring Voice VLAN Globally

Choose the menu **QoS > Voice VLAN > Global Config** to load the following page.

Figure 4-3 Configuring Voice VLAN Globally

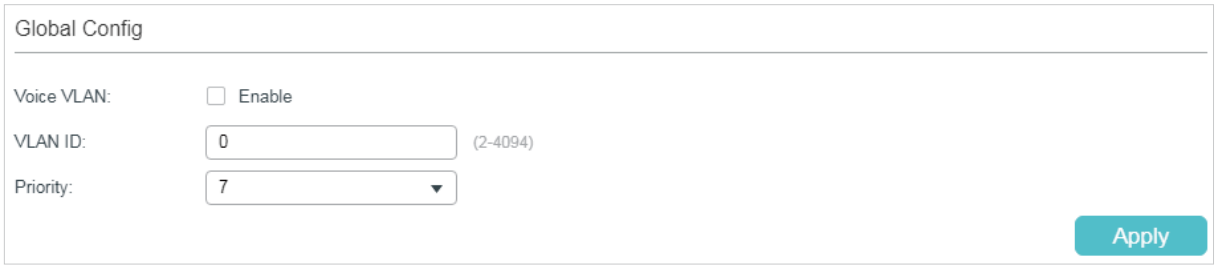

Follow these steps to configure voice VLAN globally:

1) Enable the voice VLAN feature and specify the parameters.


VLAN ID	Specify the 802.1Q VLAN ID to set the 802.1Q VLAN as the voice VLAN.
Priority	Select the priority that will be assigned to voice packets. A bigger value means a higher priority. This is an IEEE 802.1p priority, and you can further configure its scheduler mode in Class of Service if needed.

2) Click **Apply**.

4.1.1 Adding Ports to Voice VLAN

Choose the menu **QoS > Voice VLAN > Port Config** to load the following page.

Figure 4-4 Adding Ports to Voice VLAN

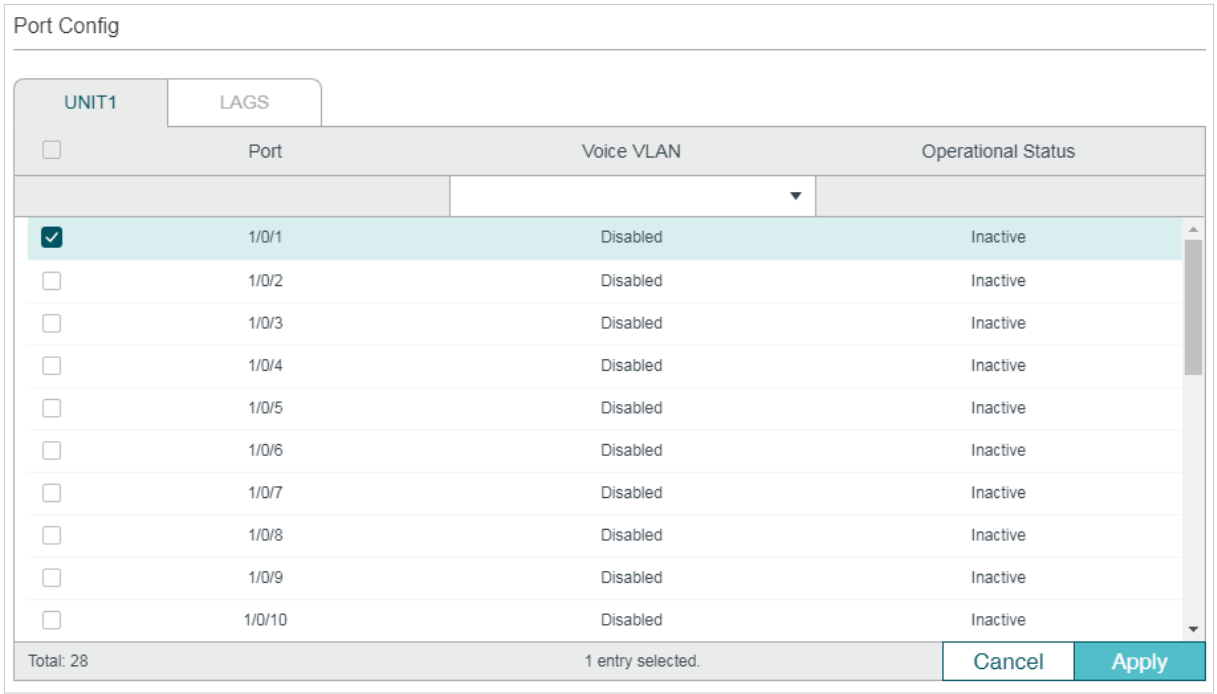

Follow these steps to configure voice VLAN globally:

1) Select the desired ports and choose Enable in Voice VLAN filed.

Voice VLAN	Select Enable to enable the voice VLAN feature on ports and add the desired ports to Voice VLAN.

Optional Status	Displays the state of the Voice VLAN on the corresponding port. **Active:** Indicates that Voive VLAN function is enabled on the port. **Inactive:** Indicates that Voive VLAN function is disabled on the port.

2) Click **Apply**.

4.2 Using the CLI

Follow these steps to configure voice VLAN:

Step 1	**configure** Enter global configuration mode.
Step 2	**show voice vlan oui-table** Check whether the OUI address of your voice device is in the OUI table. The OUI address is used by the switch to determine whether a packet is a voice packet. An OUI address is the first 24 bits of a MAC address, and is assigned as a unique identifier by IEEE (Institute of Electrical and Electronics Engineers) to a device vendor. If the source MAC address of a packet matches the OUI addresses in the OUI list, the switch identifies the packet as a voice packet and prioritizes it in transmission.
Step 3	**voice vlan oui** *oui-prefix* **oui-desc** *string* If the OUI address of your voice device is not in the OUI table, add the OUI address to the table. *oui-prefix*: Enter the OUI address for your voice device in the format of XX:XX:XX. *string*: Give an OUI address description for identification. It contains 16 characters at most.
Step 4	**voice vlan** *vid* Enable the voice VLAN feature and specify an existing 802.1Q VLAN as the voice VLAN. *vid:* Enter the 802.1Q VLAN ID to set the 802.1Q VLAN as the voice VLAN.
Step 5	**voice vlan priority** *pri* Specify the priority that will be assigned to voice packets. *pri:* Enter the priority that will be assigned to voice packets. A bigger value means a higher priority. The valid values are from 0 to 7 and the default value is 7. This is an IEEE 802.1p priority, and you can further configure its scheduler mode in Class of Service if needed.
Step 6	**interface {fastEthernet** *port* **| range fastEthernet** *port-list* **| gigabitEthernet** *port* **| range gigabitEthernet** *port-list* **| ten-gigabitEthernet** *port* **| range ten-gigabitEthernet** *port-list* **| port-channel** *port-channel-id* **| range port-channel** *port-channel-list***}** Enter interface configuration mode.
Step 7	**voice vlan** Enable the voice VLAN feature on ports and add the desired ports to voice VLAN.

Step 8	**show voice vlan interface** Verify the voice VLAN configuration information.
Step 8	**end** Return to privileged EXEC mode.
Step 9	**copy running-config startup-config** Save the settings in the configuration file.

The following example shows how to show the OUI table, set VLAN 8 as voice VLAN, set the priority as 6 and enable voice VLAN feature on port 1/0/3:

Switch#configure

Switch(config)#show voice vlan oui-table

00:01:E3 Default SIEMENS

00:03:6B Default CISCO1

00:12:43 Default CISCO2

00:0F:E2 Default H3C

00:60:B9 Default NITSUKO

00:D0:1E Default PINTEL

00:E0:75 Default VERILINK

00:E0:BB Default 3COM

00:04:0D Default AVAYA1

00:1B:4F Default AVAYA2

00:04:13 Default SNOM

Switch(config)#voice vlan 8

Switch(config)#voice vlan priority 6

Switch(config)#interface gigabitEthernet 1/0/3

Switch(config-if)#voice vlan

Switch(config-if)#show voice vlan interface

Voice VLAN ID 8

Priority 6

Interface Voice VLAN Mode Operational Status LAG

--- --- --- ---

Gi1/0/1 disabled Down N/A

Gi1/0/2	disabled	Down	N/A
Gi1/0/3	enabled	Up	N/A
Gi1/0/4	disabled	Down	N/A
Gi1/0/5	disabled	Down	N/A

.....

Switch(config-if)#end

Switch#copy running-config startup-config

5 Auto VoIP Configuration

Configuration Guidelines


- Before configuring Auto VoIP, you need to enable LLDP-MED on ports and configure the relevant parameters. For details about LLDP-MED configuration, please refer to *LLDP Configurations*.

- Auto VoIP provide flexible solutions for optimizing the voice traffic. It can work with other features such as VLAN and Class of Service to process the voice packets with specific fields. You can choose and configure Auto VoIP and other features according to your needs.

5.1 Using the GUI

Choose the menu **QoS > Auto VoIP** to load the following page.

Figure 5-1 Configuring Auto VoIP

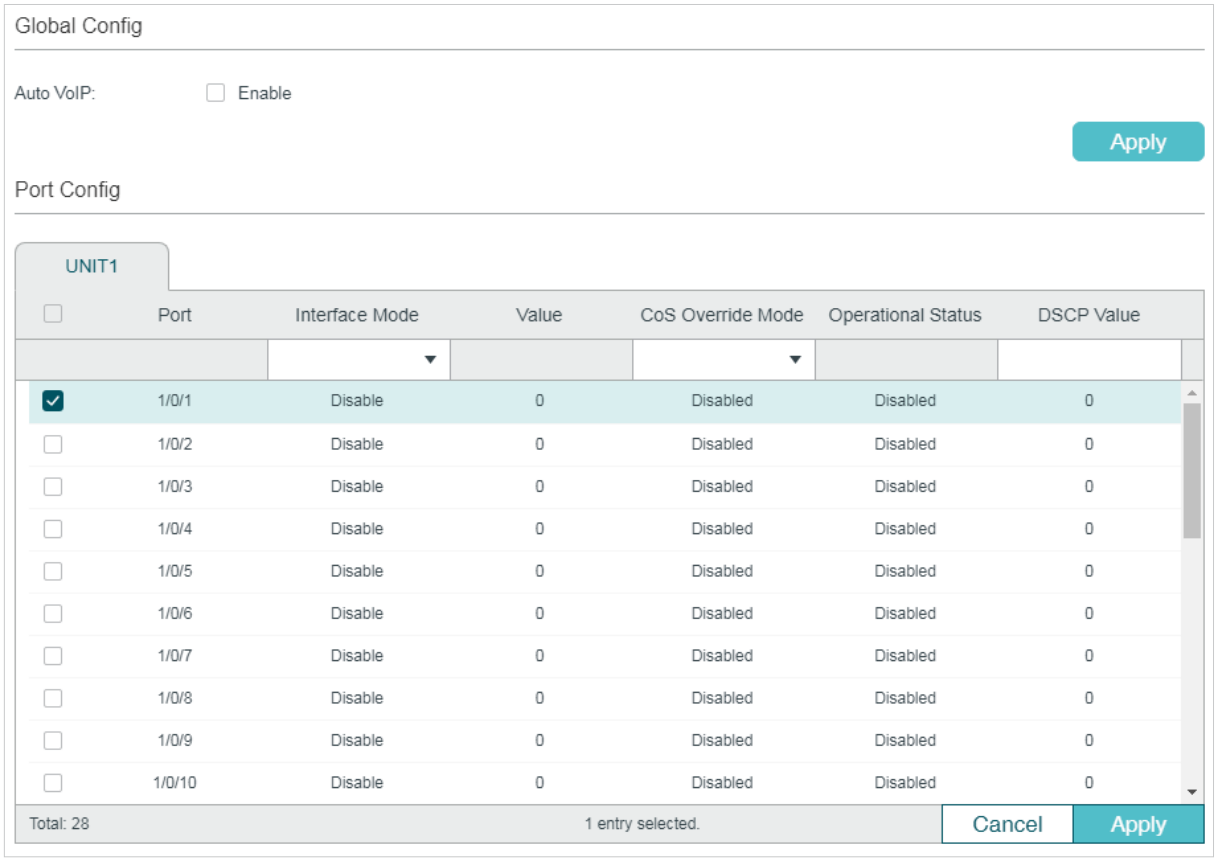

Follow these steps to configure the OUI addresses:

1) In the **Global Config** section, enable the Auto VoIP function gloablly.
2) In the **Port Config** section, select the desired and configure the parameters.

Interface Mode	Select the interface mode for the port. **Disable:** Disable the Auto VoIP function on the corresponding port. **None:** Allow the voice devices to use its own configuration to send voice traffic. **VLAN ID:** The voice devices will send voice packets with desired VLAN tag. If this mode is selected, it is necessary to specify the VLAN ID in the Value field. In addition, you need to configure the 802.1Q VLAN to ensure the corresponding ports can forward the packets normally. **Dot1p:** The voice devices will send voice packets with desired 802.1p priority. If this mode is selected, it is necessary to specify 802.1p priority in the Value field. In addition, you can configure the Class of Service to make the switch process the packets according to the 802.1p priority. **Untagged:** The voice devices will send untagged voice packets.
Value	Enter the value of VLAN ID or 802.1p priority for the port according to the Interface Mode configurations.
CoS Override Mode	Enable or disable the Class of Service override mode. **Enabled:** Enable CoS override. The switch will ignore the 802.1p priority in the voice packets and put the packets in TC-5 directly. **Disabled:** Disable CoS override. The switch will then put the voice packets in the corresponding TC queue according to the 802.1p priority of the packets.
Operational Status	Displays the operating status of the Voice VLAN feature on the interface. To make it enabled, you must enable the Voice VLAN both globally and on the interface.
DSCP Value	Enter the value of DSCP priority. The voice device will send the packets with the corresponding DSCP value. In addition, you can configure the Class of Service to make the switch process the packets according to the DSCP priority.

3) Click **Apply**.

5.2 Using the CLI

Follow these steps to configure Auto VoIP:

Step 1	**configure** Enter global configuration mode.
Step 2	**auto-voip** Enable Auto VoIP globally.

Step 3 **interface {fastEthernet** *port* **| range fastEthernet** *port-list* **| gigabitEthernet** *port* **| range gigabitEthernet** *port-list* **| ten-gigabitEthernet** *port* **| range ten-gigabitEthernet** *port-list* **| port-channel** *port-channel-id* **| range port-channel** *port-channel-list***}**

Enter interface configuration mode.

Step 4 Select the interface mode for the port.

no auto-voip

Specify the interface mode as disabled, which means the Auto VoIP function is disabled on the corresponding port.

auto-voip none

Specify the interface mode as none. In this mode, the switch allows the voice devices to use its own configuration to send voice traffic.

auto-voip *vlan-id*

Specify the interface mode as VLAN ID. In this mode, the voice devices will send voice packets with desired VLAN tag. If this mode is selected, it is necessary to specify the 802.1Q VLAN ID. The valid values are from 1 to 4093.

In addition, you need to configure the 802.1Q VLAN to ensure the corresponding ports can forward the packets normally.

auto-voip dot1p *dot1p*

Specify the interface mode as dot1p. In this mode, the voice devices will send voice packets with desired 802.1p priority. If this mode is selected, it is necessary to specify 802.1p priority. The valid values are from 0 to 7.

In addition, you can configure the Class of Service to make the switch process the packets according to the 802.1p priority.

auto-voip untagged

Specify the interface mode as untagged. In this mode, the voice devices will send untagged voice packets.

Step 5 **auto-voip data priority {**trust **|** untrust**}**

Enable or disable the Class of Service override mode. By default, it is trust, which means the Class of Service override mode is disabled.

trust: In this mode, the switch will then put the voice packets in the corresponding TC queue according to the 802.1p priority of the packets.

untrust: In this mode, the switch will ignore the 802.1p priority in the voice packets and put the packets in TC-5 directly.

Step 6 **auto-voip dscp** *value*

Specify the value of DSCP priority. The voice device will send the packets with the corresponding DSCP value.

In addition, you can configure the Class of Service to make the switch process the packets according to the DSCP priority.

value: Enter the value of DSCP priority. The valid values are from 0 to 63 and the default value is 0.

Step 7	**show auto-voip** Verify the global state of Auto VoIP.
Step 8	**show auto-voip interface** Verify the Auto VoIP configuration information of ports.
Step 8	**end** Return to privileged EXEC mode.
Step 9	**copy running-config startup-config** Save the settings in the configuration file.

The following example shows how to set the interface mode as dot1p, specify the 802.1p priority as 4, specify the DSCP priority as 10 and enable the CoS override mode for port 1/0/3:

Switch#configure

Switch(config)#auto-voip

Switch(config)#interface gigabitEthernet 1/0/3

Switch(config-if)#auto-voip dot1p 4

Switch(config-if)#auto-voip dscp 10

Switch(config-if)#auto-voip data priority untrust

Switch(config-if)#show auto-voip

Administrative Mode: Enabled

Switch(config-if)#show auto-voip interface

Interface.Gi1/0/1

Auto-VoIP Interface Mode. Disabled

Auto-VoIP COS Override. False

Auto-VoIP DSCP Value. 0

Auto-VoIP Port Status. Disabled

Interface.Gi1/0/2

Auto-VoIP Interface Mode. Disabled

Auto-VoIP COS Override. False

Auto-VoIP DSCP Value. 0

Auto-VoIP Port Status. Disabled

Interface.Gi1/0/3

Auto-VoIP Interface Mode. Enabled

Auto-VoIP Priority. 4

Auto-VoIP COS Override. True

Auto-VoIP DSCP Value. 10

Auto-VoIP Port Status. Enabled

.....

Switch(config-if)#end

Switch#copy running-config startup-config


6 Configuration Examples

6.1 Example for Class of Service

6.1.1 Network Requirements

As shown below, both RD department and Marketing department can access the internet. When congestion occurs, the traffic from two departments can both be forwarded and the traffic from the Marketing department should take precedence.

Figure 6-1 QoS Application Topology

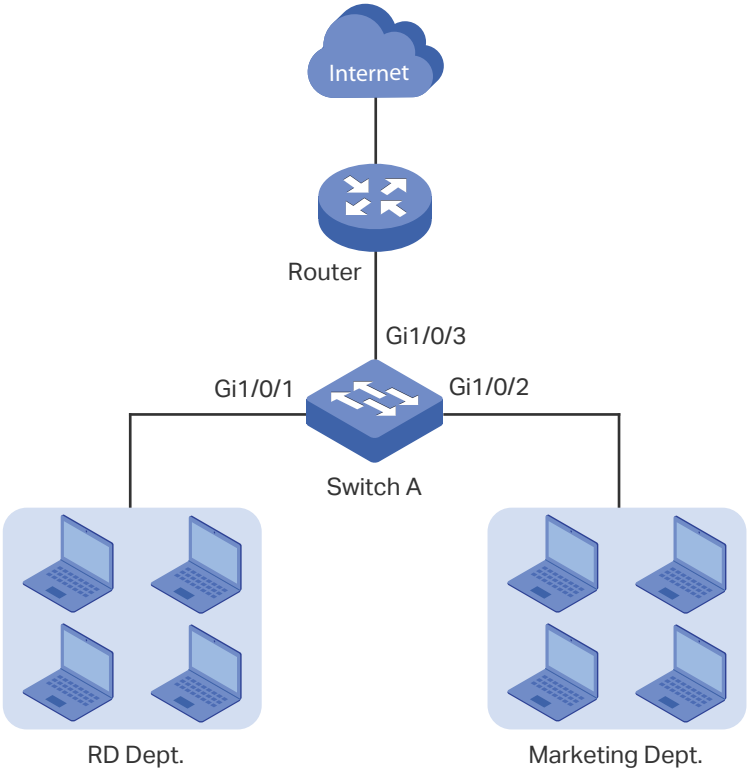

6.1.2 Configuration Scheme

To implement this requirement, you can configure Port Priority to put the packets from the Marketing department into the queue with the higher priority than the packets from the RD department.


1) Configure the trust mode of port 1/0/1 and port 1/0/2 as untrusted and map the ports to different queues.
2) Set the scheduler type of the queues as weighted for port 1/0/3 and specify the queue weight to make the traffic from the Marketing department take precedence.

Demonstrated with T2600G-28TS, the following sections provide configuration procedure in two ways: using the GUI and using the CLI.

6.1.3 Using the GUI


1) Choose the menu **QoS > Class of Service > Port Priority** to load the following page. Set the trust mode of port 1/0/1 and 1/0/2 as untrusted. Specify the 802.1p priority of port 1/0/1 as 1 and specify the 802.1p priority of port 1/0/2 as 0. Click **Apply**.

Figure 6-2 Configuring Port Priority

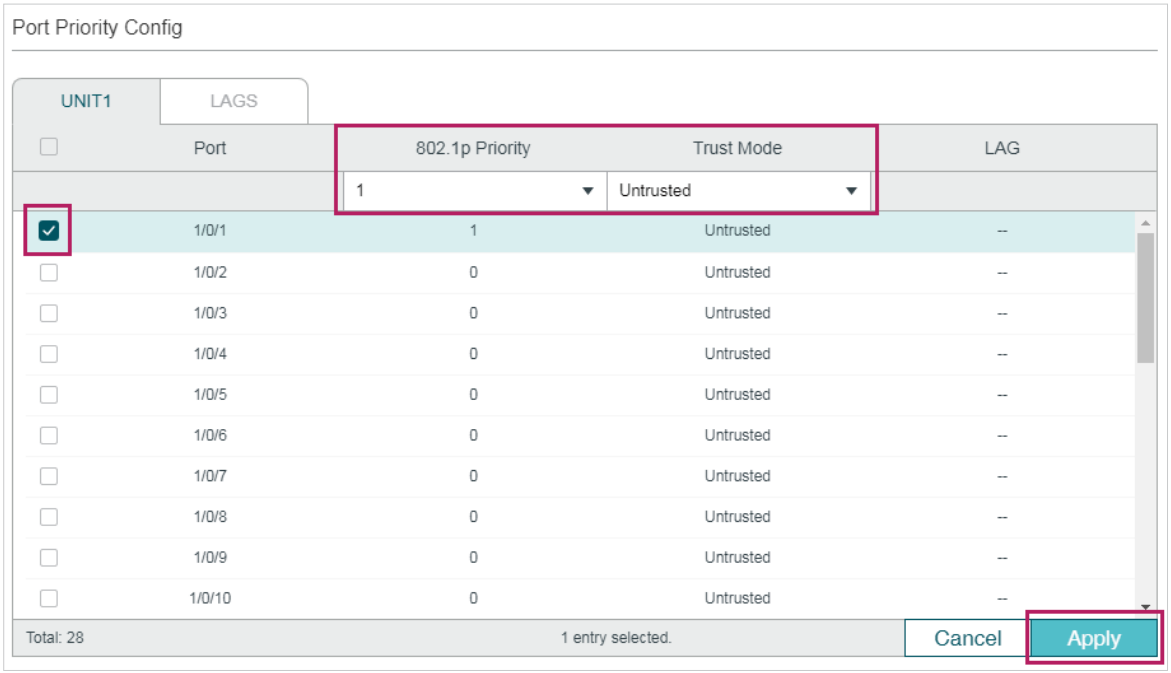


2) Choose the menu **QoS > Class of Service > 802.1p Priority** to load the following page. Map the 802.1p priority 0 to TC-1 and map the 802.1p priority 1 to TC-0. Click **Apply**.

Figure 6-3 Configuring the 802.1p to Queue Mappings

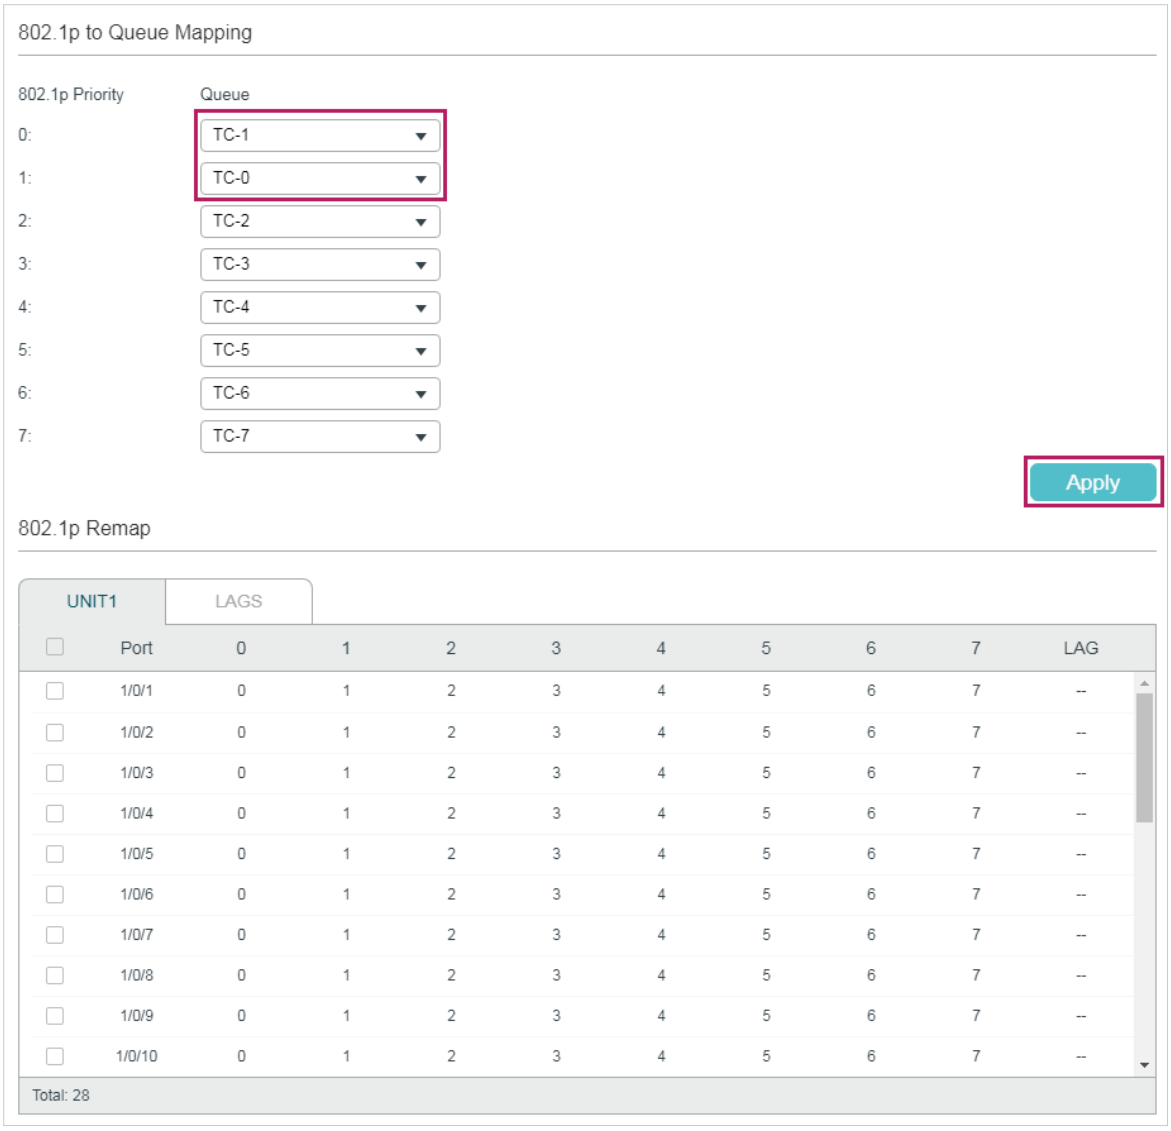

3) Choose the menu **QoS > Class of Service > Scheduler Settings** to load the following page. Select the port 1/0/3 and set the scheduler type of TC-0 and TC-1 as Weighted. Specify the queue weight of TC-0 as 1 and specify the queue weight of TC-1 as 5. Click **Apply**.

Figure 6-4 Configuring the Egress Queue

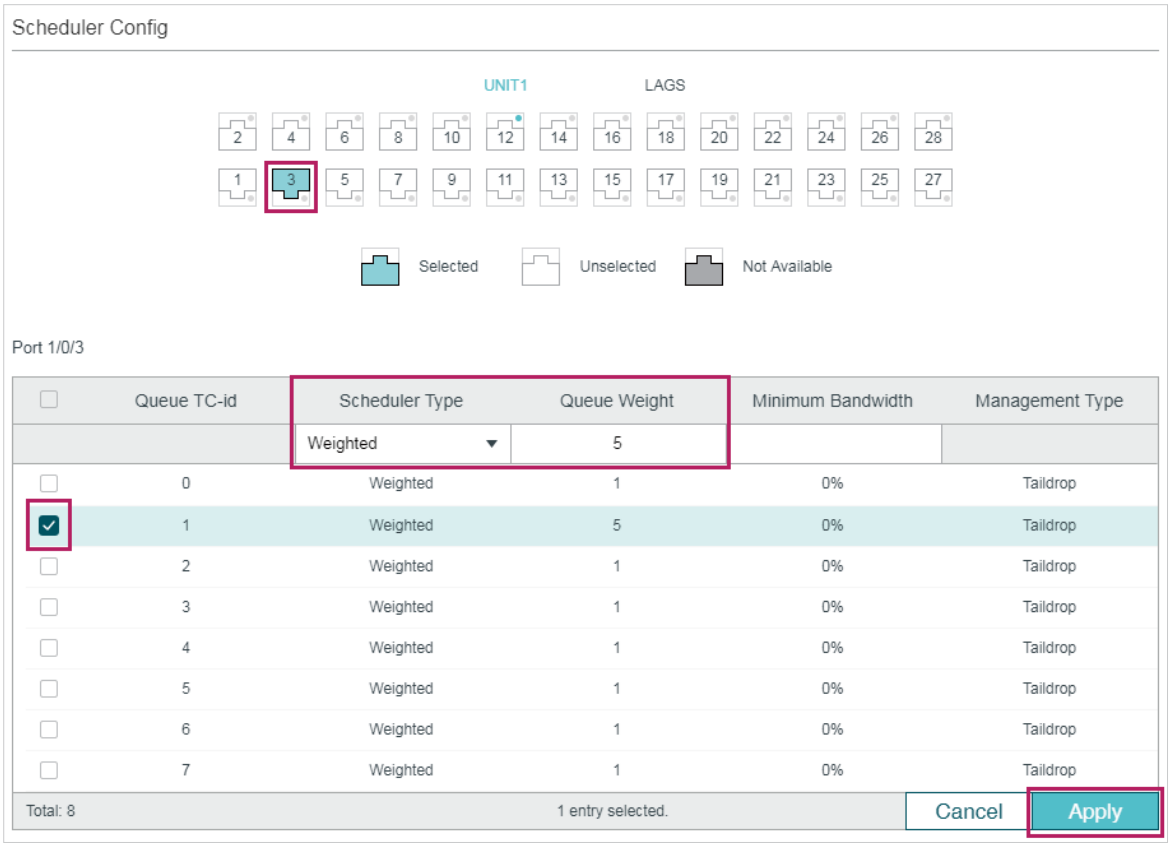

4) Click Save to save the settings.

6.1.4 Using the CLI

1) Set the trust mode of port 1/0/1 as untrusted and specify the 802.1p priority as 1.

Switch_A#configure

Switch_A(config)#interface gigabitEthernet 1/0/1

Switch_A(config-if)#qos trust mode untrust

Switch_A(config-if)#qos port-priority 1

Switch_A(config-if)#exit

2) Set the trust mode of port 1/0/2 as untrusted and specify the 802.1p priority as 0.

Switch_A(config)#interface gigabitEthernet 1/0/2

Switch_A(config-if)#qos trust mode untrust

Switch_A(config-if)#qos port-priority 0

Switch_A(config-if)#exit

3) Map the 802.1p priority 0 to TC-1 and map the 802.1p priority 1 to TC-0.

Switch_A(config)#qos cos-map 0 1

Switch_A(config)#qos cos-map 1 0

4) Set the scheduler type of TC-0 and TC-1 as Weighted for egress port 1/0/3. Specify the queue weight of TC-0 as 1 and specify the queue weight of TC-1 as 5.

Switch_A(config)#interface gigabitEthernet 1/0/3

Switch_A(config-if)#qos queue 0 mode wrr weight 1

Switch_A(config-if)#qos queue 1 mode wrr weight 5

Switch_A(config-if)#end

Switch_A#copy running-config startup-config

Verify the configurations

Verify the trust mode of the port:

Switch_A#show qos trust interface

Port	Trust Mode	LAG
Gi1/0/1	untrust	N/A
Gi1/0/2	untrust	N/A
Gi1/0/3	untrust	N/A
Gi1/0/4	untrust	N/A

...

Verify the port to 802.1p mappings:

Switch_A#show qos port-priority interface

Port	CoS Value	LAG
Gi1/0/1	CoS 1	N/A
Gi1/0/2	CoS 0	N/A
Gi1/0/3	CoS 0	N/A
Gi1/0/4	CoS 0	N/A

...

Verify the 802.1p to queue mappings:

```
Switch_A#show qos cos-map
-----+-----+-----+-----+-----+-----+-----+----+----
Tag |0    |1    |2    |3    |4    |5    |6   |7
-----+-----+-----+-----+-----+-----+-----+----+----
TC  |TC1 |TC0 |TC2 |TC4 |TC4 |TC5 |TC6 |TC7
-----+-----+-----+-----+-----+-----+-----+----+----
```

Verify the scheduler mode of the egress port:


```
Switch _A#show qos queue interface gigabitEthernet 1/0/3
Gi1/0/3----LAG: N/A
Queue  Schedule Mode  Weight  Min Bandwidth(%)
-----  ----------     -----   ----------
TC0    WRR            1       0%
TC1    WRR            5       0%
TC2    WRR            1       0%
TC3    WRR            1       0%
TC4    WRR            1       0%
TC5    WRR            1       0%
TC6    WRR            1       0%
TC7    WRR            1       0%
```

6.2 Example for Voice VLAN

6.2.1 Network Requirements

As shown below, the company plans to install IP phones in the office area. To ensure the good voice quality, IP phones and the computers will be connected to the different ports of the switch, and the voice traffic requires a higher priority than the data traffic.

Figure 6-5 Voice VLAN Application Topology

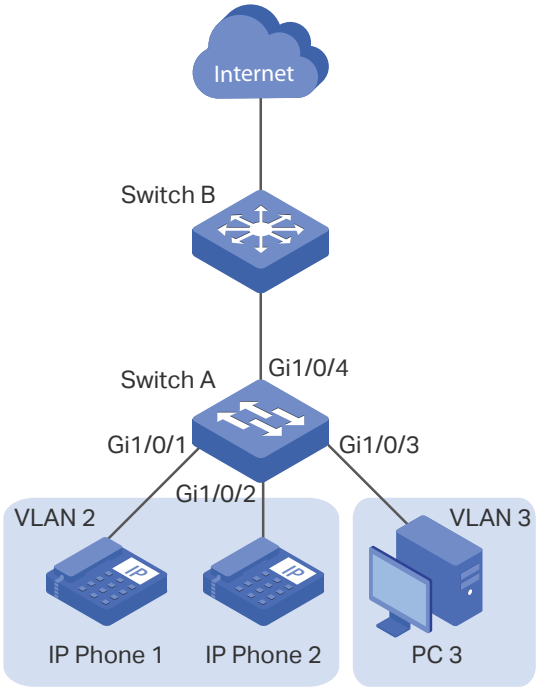

6.2.2 Configuration Scheme

To implement this requirement, you can configure Voice VLAN to ensure that the voice traffic can be transmitted in the same VLAN and the data traffic is transmitted in another VLAN. In addition, specify the priority to make the voice traffic can take precedence when the congestion occurs.


1) Configure 802.1Q VLAN for port 1/0/1, port 1/0/2. port 1/0/3 and port 1/0/4.
2) Configure Voice VLAN feature on port 1/0/1 and port 1/0/2.

Demonstrated with T2600G-28TS, the following sections provide configuration procedure in two ways: using the GUI and using the CLI.

6.2.3 Using the GUI


1) Choose the menu **L2 FEATURES > VLAN > 802.1Q VLAN > VLAN Config** and click Add to load the following page. Create VLAN 2 and add untagged port 1/0/1, port 1/0/2 and port 1/0/4 to VLAN 2. Click **Create**.

Figure 6-6 Configuring VLAN 2

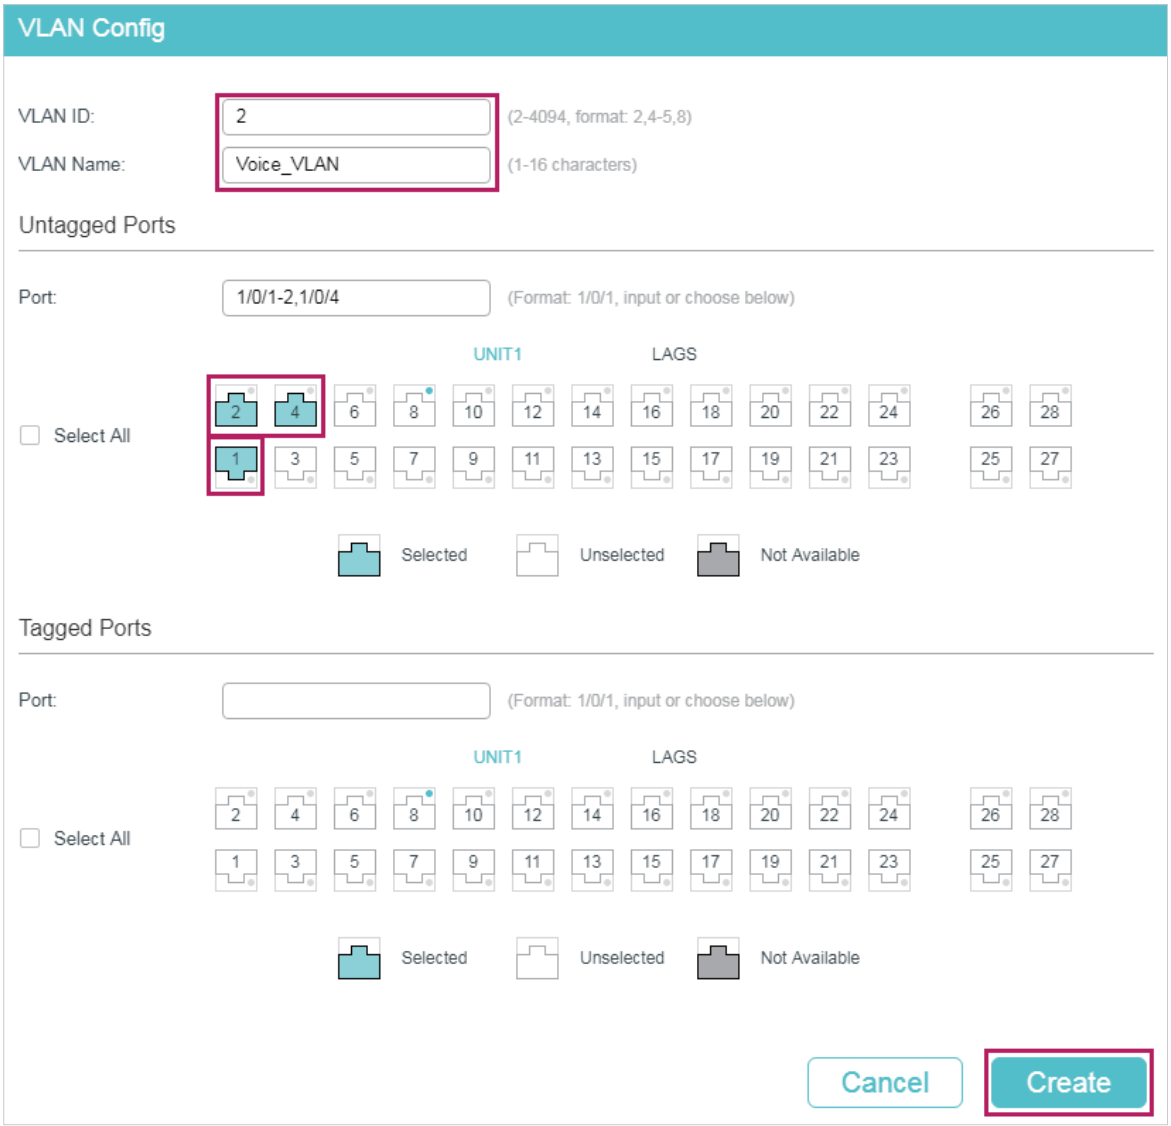


2) Click Add to load the following page. Create VLAN 3 and add untagged port 1/0/3 and port 1/0/4 to VLAN 3. Click **Create**.

Figure 6-7 Configuring VLAN 3

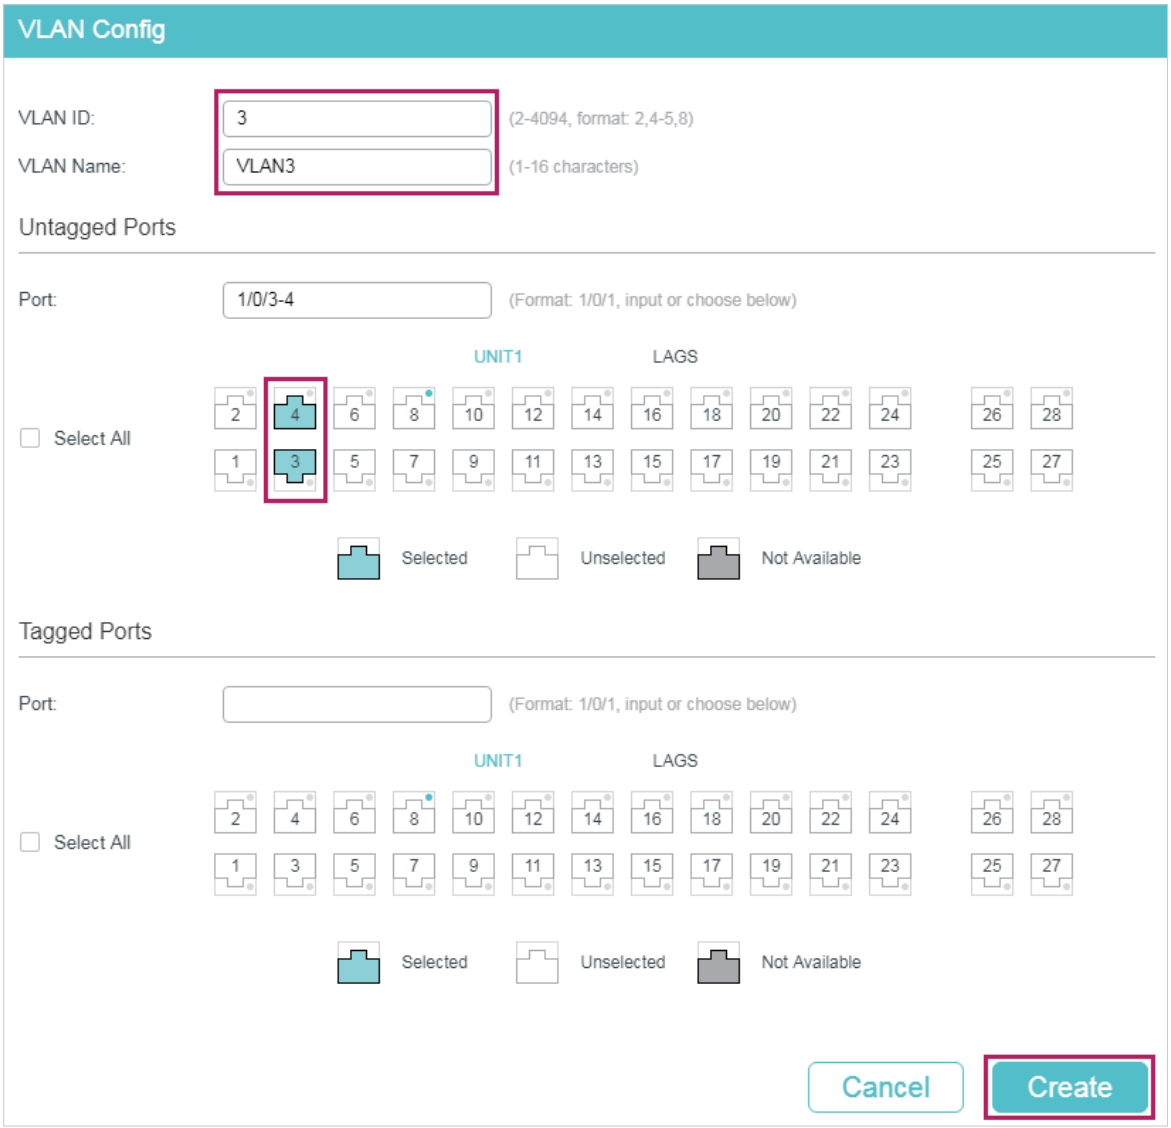


3) Choose the menu **L2 FEATURES > VLAN > 802.1Q VLAN > Port Config** to load the following page. Disable the Ingress Checking feature on port 1/0/1 and port 1/0/2 and specify the PVID as 2. Click **Apply**.

Figure 6-8 Specifying the Parameters of the Ports

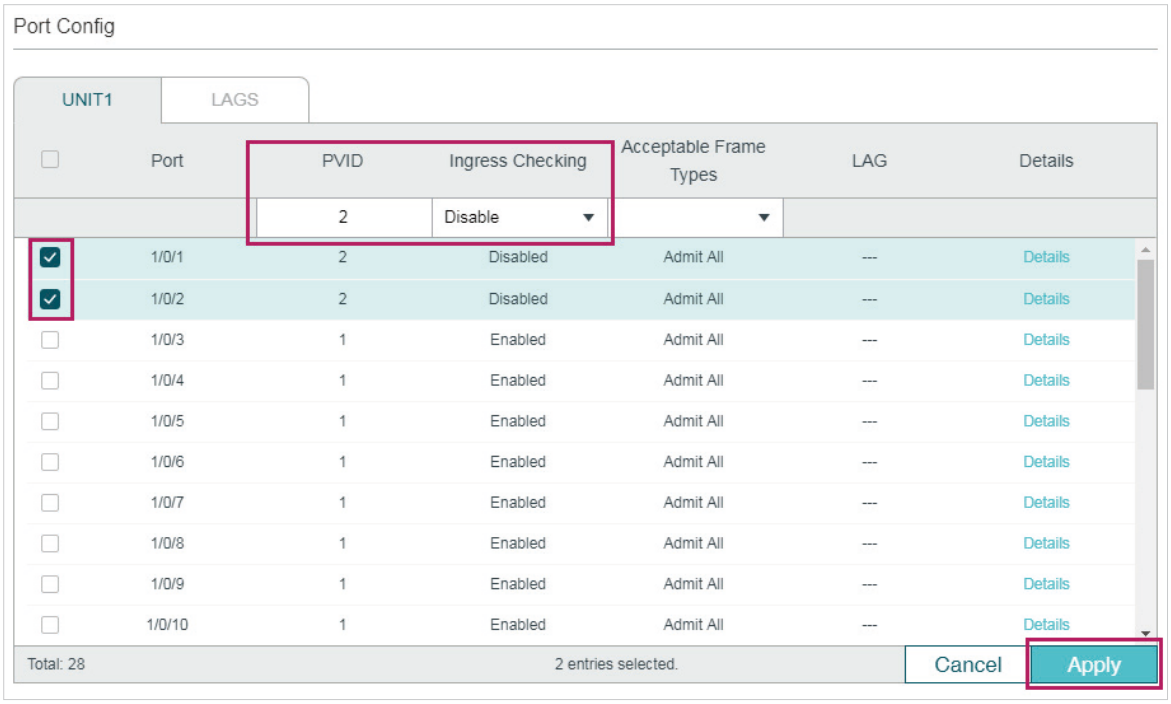


4) Choose the menu **QoS > Voice VLAN > OUI Config** to load the following page. Check the OUI table.

Figure 6-9 Checking the OUI Table

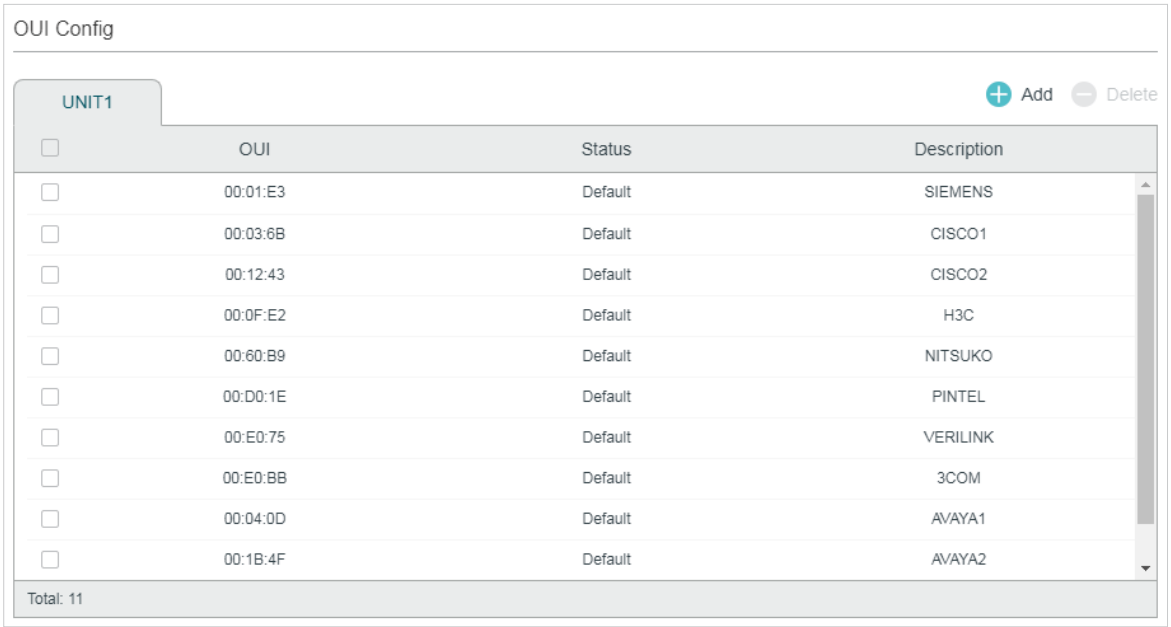


5) Choose the menu **QoS > Voice VLAN > Global Config** to load the following page. Enable Voice VLAN globally. Specify the VLAN ID as 2 and set the priority as 7. Click **Apply**.

Figure 6-10 Configuring Voice VLAN Globally

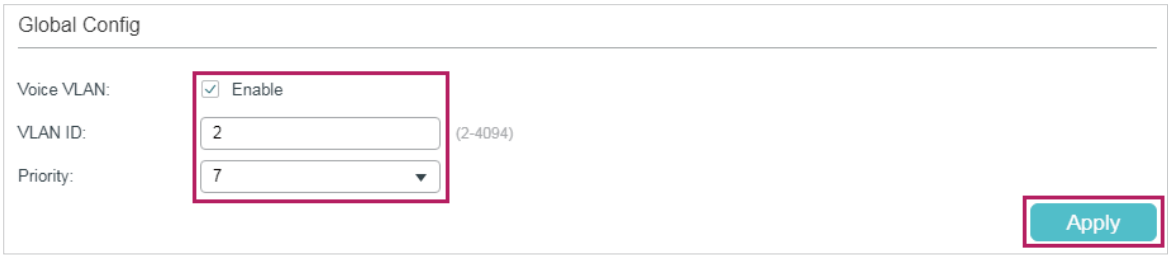

6) Choose the menu **QoS > Voice VLAN > Port Config** to load the following page. Enable Voice VLAN on port 1/0/1 and port 1/0/2. Click **Apply**.

Figure 6-11 Enabling Voice VLAN on Ports

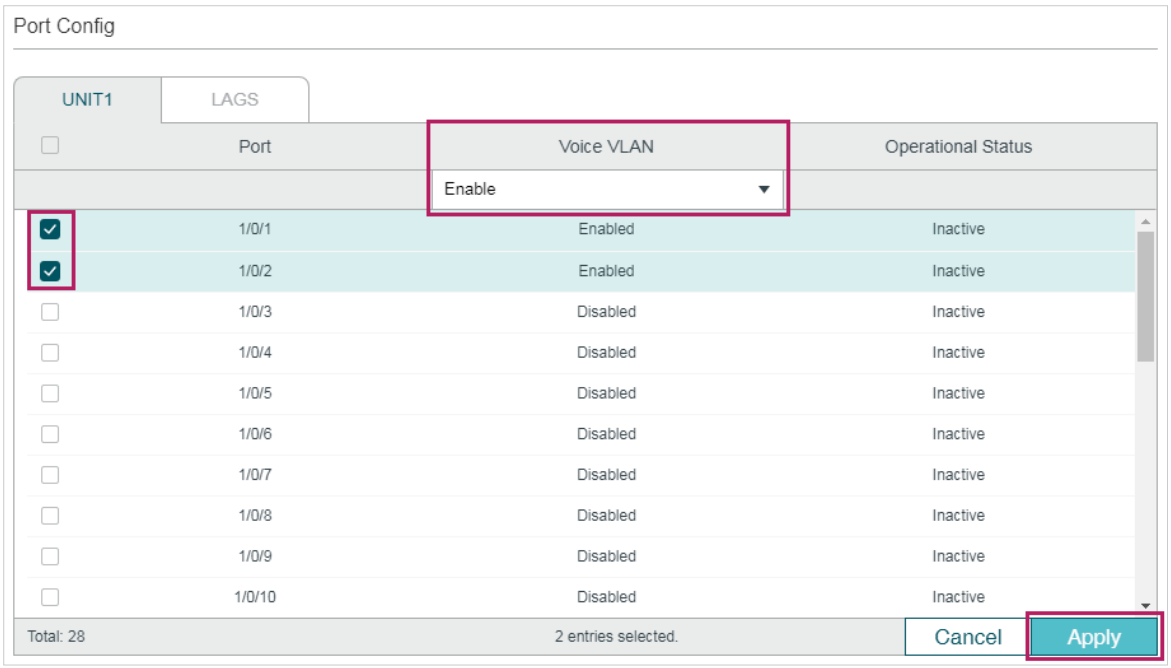

7) Click Save to save the settings.

6.2.4 Using the CLI

1) Create VLAN 2 and add untagged port 1/0/1, port 1/0/2 and port 1/0/4 to VLAN 2.

Switch_A#configure

Switch_A(config)#vlan 2

Switch_A(config-vlan)#name VoiceVLAN

Switch_A(config-vlan)#exit

Switch_A(config)#interface gigabitEthernet 1/0/1

Switch_A(config-if)#switchport general allowed vlan 2 untagged

Switch_A(config-if)#exit

Switch_A(config)#interface gigabitEthernet 1/0/2

Switch_A(config-if)#switchport general allowed vlan 2 untagged

Switch_A(config-if)#exit

Switch_A(config)#interface gigabitEthernet 1/0/4

Switch_A(config-if)#switchport general allowed vlan 2 untagged

Switch_A(config-if)#exit

2) Create VLAN 3 and add untagged port 1/0/3 and port 1/0/4 to VLAN 3.

Switch_A(config)#vlan 3

Switch_A(config-vlan)#name VLAN3

Switch_A(config-vlan)#exit

Switch_A(config)#interface gigabitEthernet 1/0/3

Switch_A(config-if)#switchport general allowed vlan 3 untagged

Switch_A(config-if)#exit

Switch_A(config)#interface gigabitEthernet 1/0/4

Switch_A(config-if)#switchport general allowed vlan 3 untagged

Switch_A(config-if)#exit

3) Disable the Ingress Checking feature on port 1/0/1 and port 1/0/2 and specify the PVID as 2.

Switch_A(config)#interface gigabitEthernet 1/0/1

Switch_A(config-if)#no switchport check ingress

Switch_A(config-if)#switchport pvid 2

Switch_A(config-if)#exit

Switch_A(config)#interface gigabitEthernet 1/0/2

Switch_A(config-if)#no switchport check ingress

Switch_A(config-if)#switchport pvid 2

Switch_A(config-if)#exit

4) Check the OUI table.

Switch(config)#show voice vlan oui

00:01:E3 Default SIEMENS

00:03:6B Default CISCO1

00:12:43 Default CISCO2

00:0F:E2 Default H3C

00:60:B9 Default NITSUKO

00:D0:1E Default PINTEL

00:E0:75 Default VERILINK

00:E0:BB Default 3COM

00:04:0D Default AVAYA1

00:1B:4F Default AVAYA2

00:04:13 Default SNOM

5) Enable Voice VLAN globally. Specify the VLAN ID as 2 and set the priority as 7.

Switch_A(config)#voice vlan 2

Switch_A(config)#voice vlan priority 7

6) Enable Voice VLAN on port 1/0/1 and port 1/0/2.

Switch_A(config)#interface gigabitEthernet 1/0/1

Switch_A(config-if)#voice vlan

Switch_A(config-if)#exit

Switch_A(config)#interface gigabitEthernet 1/0/2

Switch_A(config-if)#voice vlan

Switch_A(config-if)#end

Switch_A#copy running-config startup-config

Verify the configurations

Verify the basic VLAN configuration:

Switch_A(config)#show vlan brief

VLAN	Name	Status	Ports
1	System-VLAN	active	Gi1/0/1, Gi1/0/2, Gi1/0/3, Gi1/0/4, Gi1/0/5, Gi1/0/6, Gi1/0/7, Gi1/0/8, Gi1/0/9, Gi1/0/10, Gi1/0/11, Gi1/0/12, Gi1/0/13, Gi1/0/14, Gi1/0/15, Gi1/0/16, Gi1/0/17, Gi1/0/18, Gi1/0/19, Gi1/0/20, Gi1/0/21, Gi1/0/22, Gi1/0/23, Gi1/0/24, Gi1/0/25, Gi1/0/26, Gi1/0/27, Gi1/0/28

```
2       VoiceVLAN       active      Gi1/0/1, Gi1/0/2, Gi1/0/4
3       VLAN3           active      Gi1/0/3, Gi1/0/4
```

Verify the Voice VLAN configuration:

```
Switch_A(config)#show voice vlan interface
Voice VLAN ID           2
Priority                7


Interface    Voice VLAN Mode   Operational Status   LAG
---------    ---------------   ------------------   ---
Gi1/0/1      enabled           Up                   N/A
Gi1/0/2      enabled           Up                   N/A
Gi1/0/3      disabled          Down                 N/A
Gi1/0/4      disabled          Down                 N/A
Gi1/0/5      disabled          Down                 N/A
...
Gi1/0/28     disabled          Down                 N/A
```

6.3 Example for Auto VoIP

6.3.1 Network Requirements

As shown below, the company plans to install IP phones in the office area. IP phones share switch ports used by computers, because no more ports are available for IP phones. To ensure the good voice quality, the voice traffic requires a higher priority than the data traffic.

Figure 6-12 Auto VoIP Application Topology

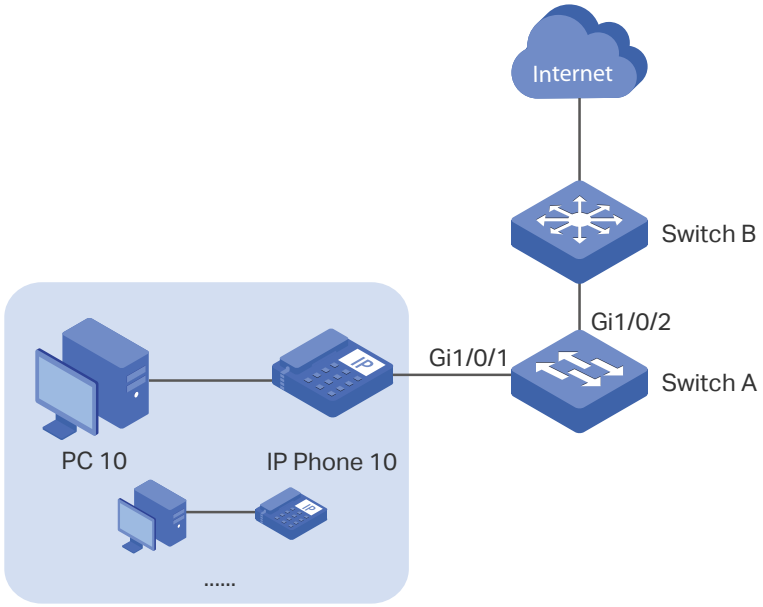

6.3.2 Configuration Scheme

To optimize voice traffic, configure Auto VoIP and LLDP-MED to instruct IP Phones to send traffic with desired DSCP priority. Voice traffic is put in the desired queue and data traffic is put in other queues according to the Class of Service configurations. Make sure that the voice traffic can take precedence when congestion occurs.

1) Enable the Auto VoIP feature and configure the DSCP value of ports.
2) Configure Class of Service.
3) Enable LLDP-MED and configure the corresponding parameters.


Demonstrated with T2600G-28TS, the following sections provide configuration procedure in two ways: using the GUI and using the CLI.

6.3.3 Using the GUI

Auto VoIP configurations for port1/0/1 and other ports connected to the IP phone are the same, the following configuration procedures take port 1/0/1 as example.


1) Choose the menu **QoS > Auto VoIP** to load the following page. Enable Auto VoIP globally and specify the DSCP value of port 1/0/1 as 63. Click **Apply**.

Figure 6-13 Configuring Auto VoIP

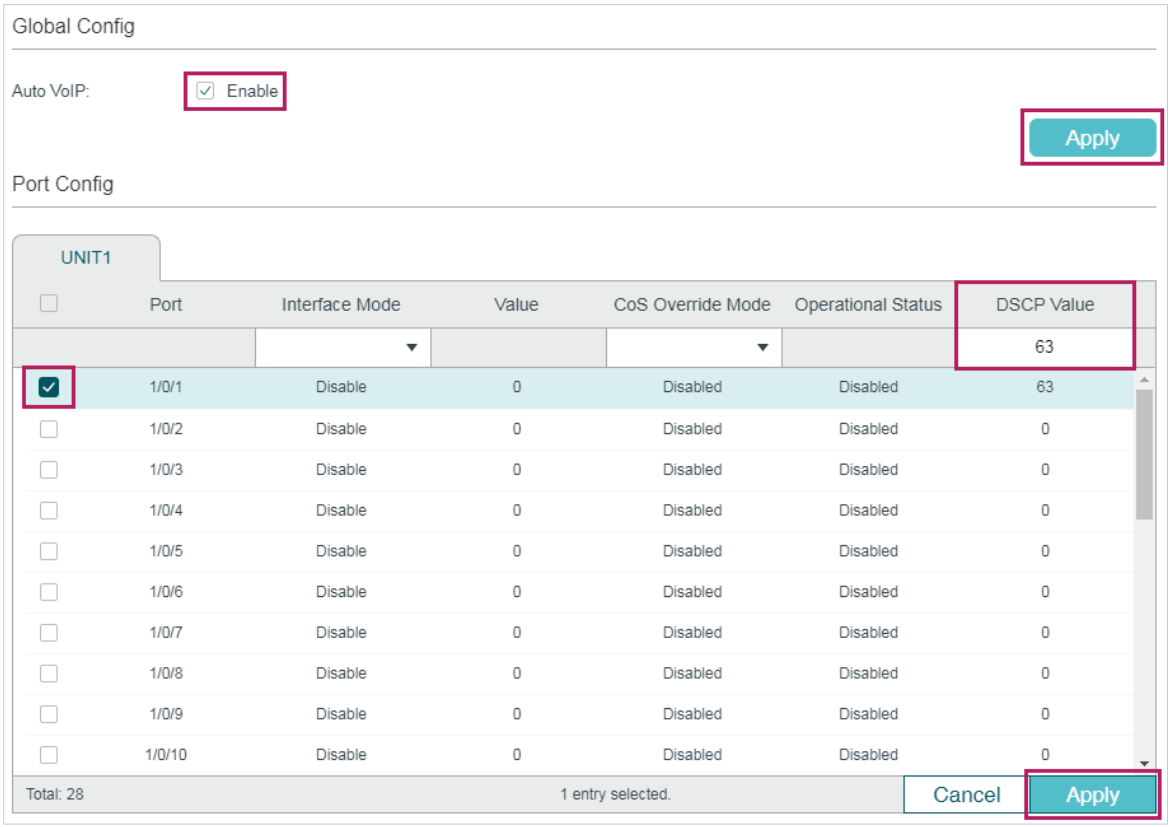


2) Choose the menu **QoS > Class of Service > Port Priority** to load the following page. Set the trust mode of port 1/0/1 as trust DSCP. Click **Apply**.

Figure 6-14 Configuring Port Priority

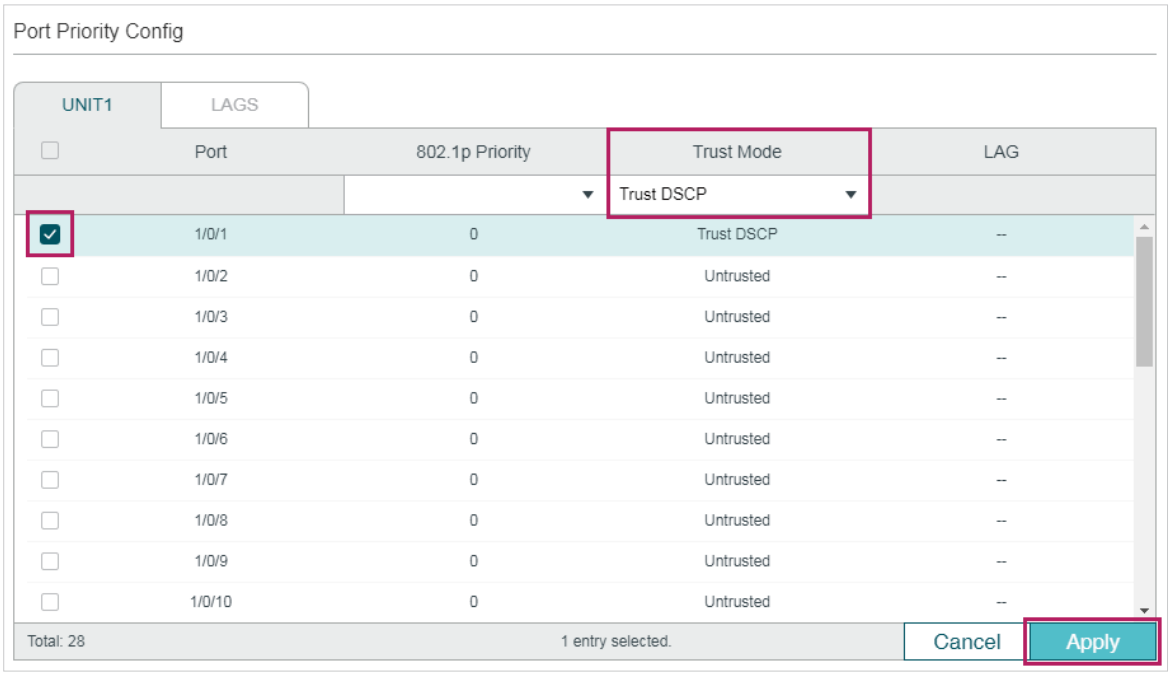


3) Choose the menu **QoS > Class of Service > DSCP Priority** to load the following page. Select port 1/0/1 and specify the 802.1p priority as 7 for DSCP priority 63. Click **Apply**.

Figure 6-15 Specifying the 802.1p priority for DSCP priority 63

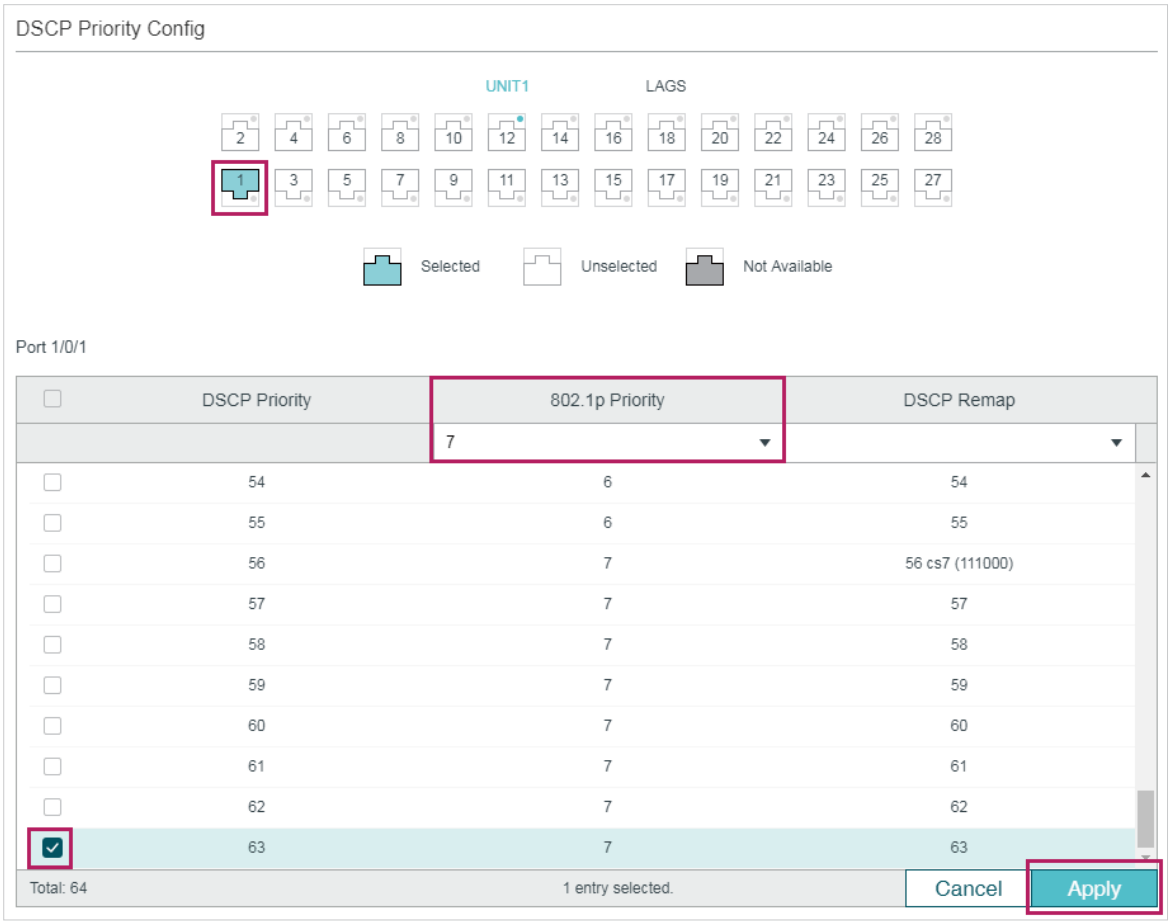


4) Select port 1/0/1 and specify the 802.1p priority as 5 for other DSCP priorities. Click **Apply**.

Figure 6-16 Specifying the 802.1p priority for Other DSCP priorities

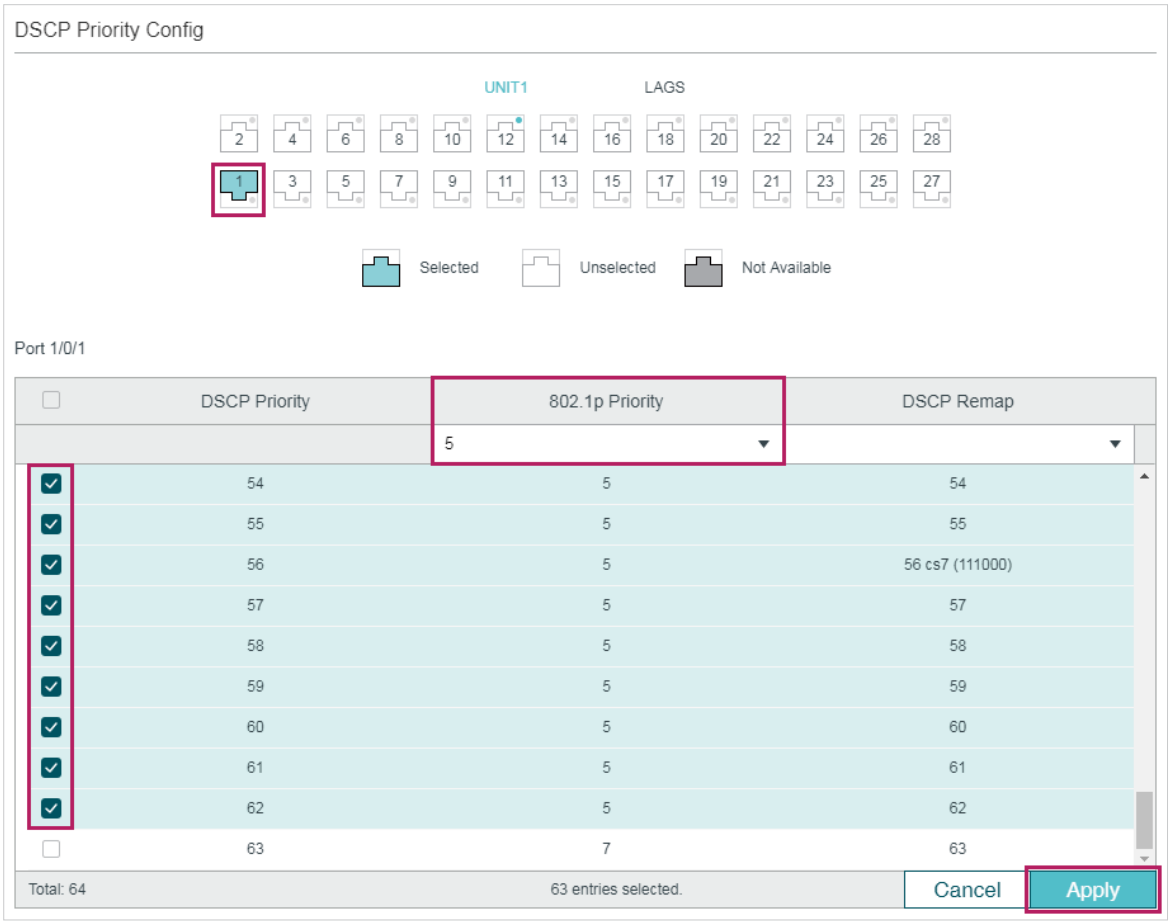


5) Choose the menu **QoS > Class of Service > Scheduler Settings** to load the following page. Select port 1/0/2. Set the scheduler mode as weighted and specify the queue weight as 1 for TC-5. Click **Apply**.

Figure 6-17 Configuring the TC-5 for the Port

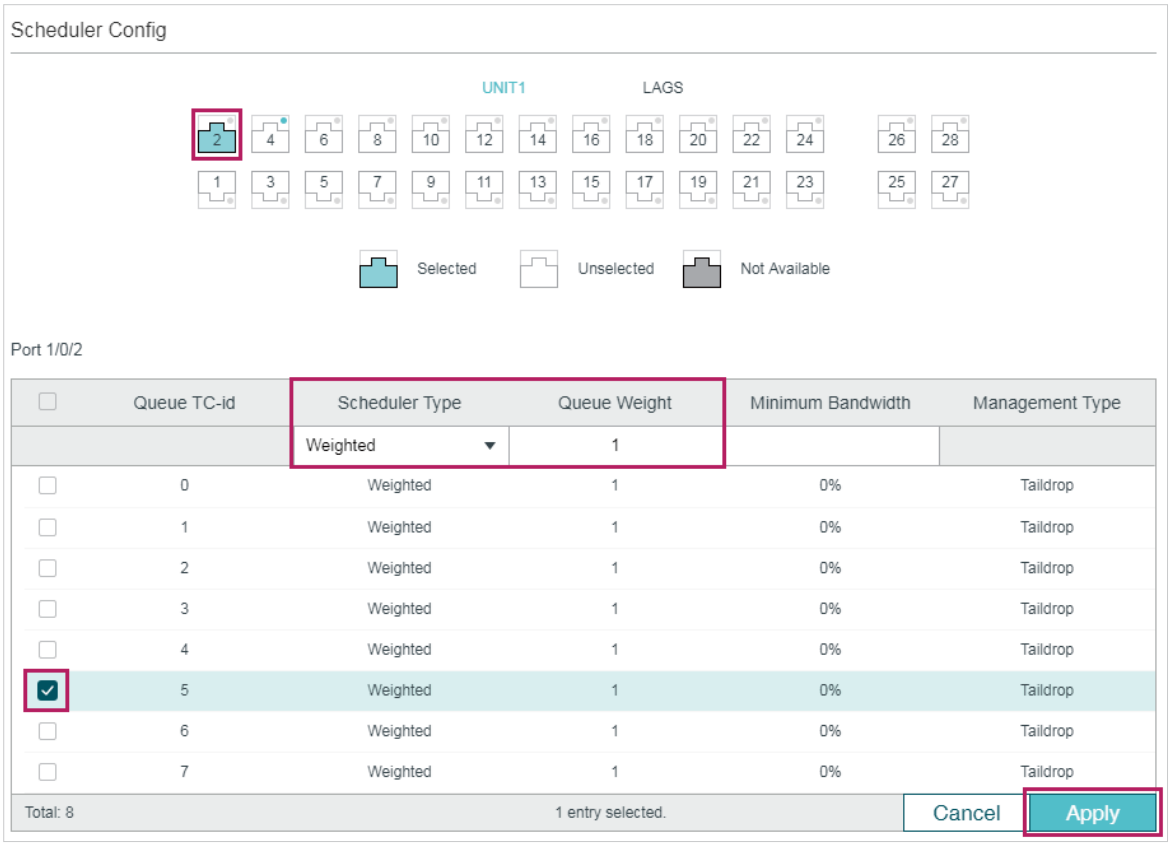


6) Select port 1/0/2. Set the scheduler mode as weighted and specify the queue weight as 10 for TC-7. Click **Apply**.

Figure 6-18 Configuring the TC-7 for the Port

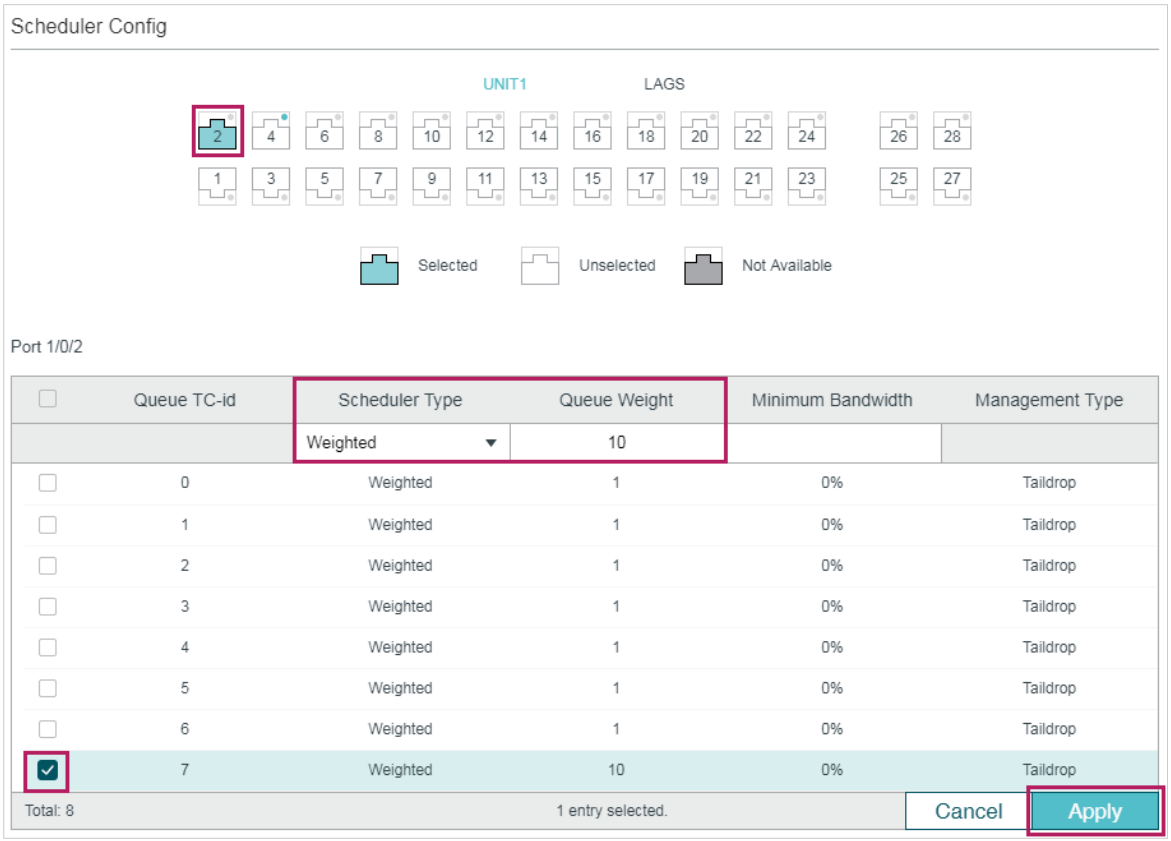


7) Choose the menu **L2 FEATURES > LLDP > LLDP-MED Config > Port Config** click Detail to of port1/0/1 to load the following page. Check the boxes of all the TLVs. Click **Save**.

Figure 6-19 Configuring the TLVs

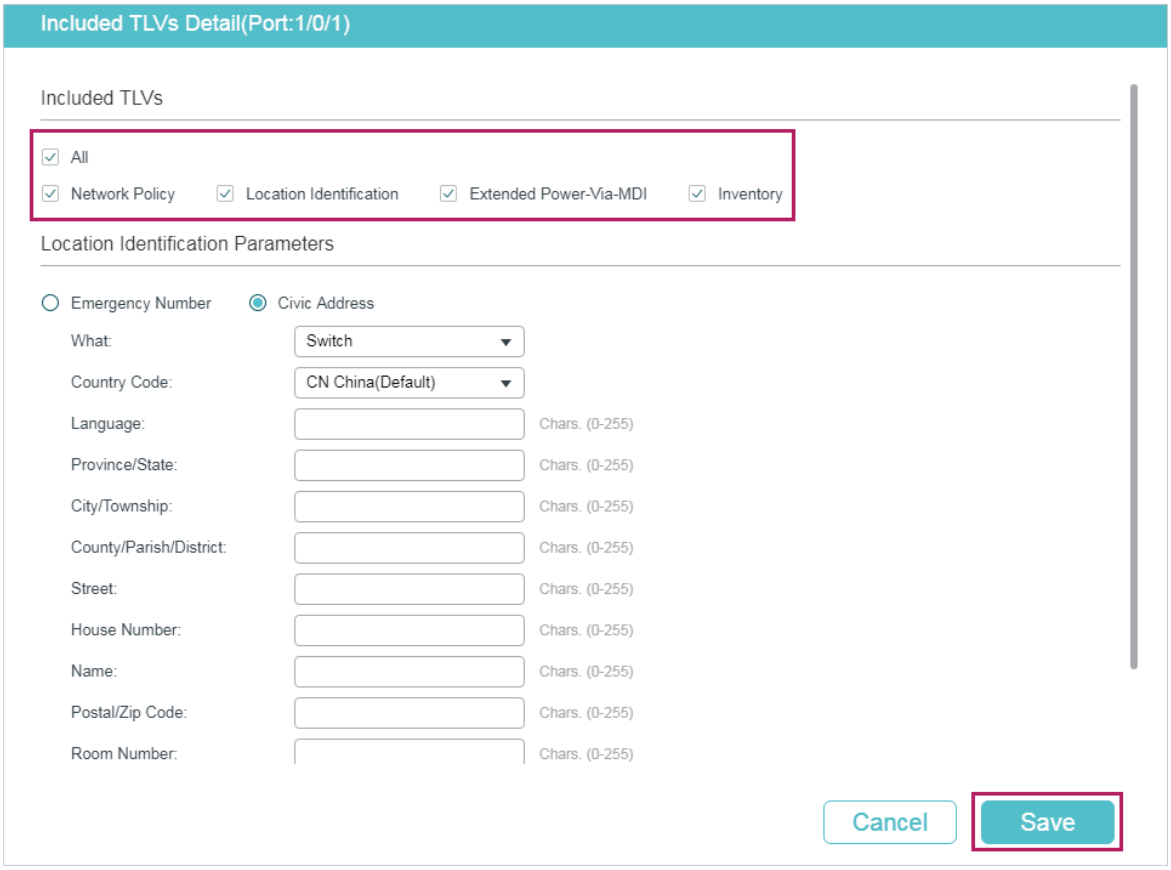

8) Choose the menu **L2 FEATURES > LLDP > LLDP-MED Config > Port Config** to load the following page. Enable LLDP-MED on port 1/0/1. Click **Apply**.

Figure 6-20 Enabling LLDP-MED on the Port

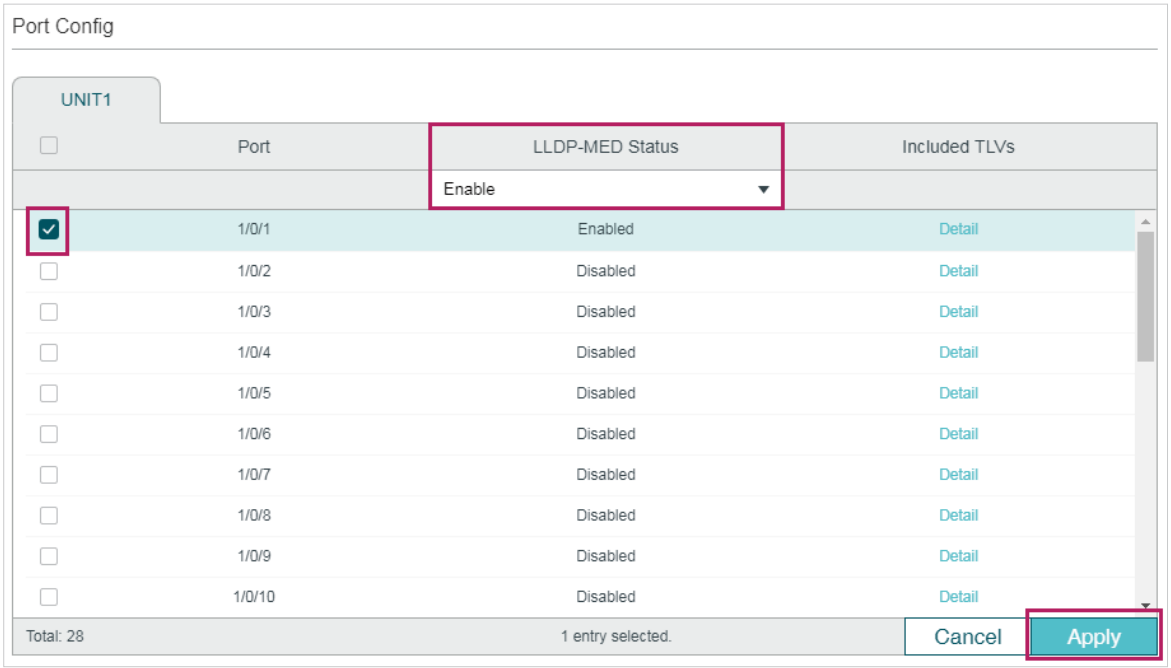

9) Click Save to save the settings.

6.3.4 Using the CLI

1) Enable Auto VoIP globally and specify the DSCP value of port 1/0/1 as 63.

   Switch_A#configure

   Switch_A(config)#auto-voip

   Switch_A(config)#interface gigabitEthernet 1/0/1

   Switch_A(config-if)#auto-voip dscp 63

   Switch_A(config-if)#exit

2) Set the trust mode of port 1/0/1 as trust DSCP. Specify the 802.1p priority as 7 for DSCP priority 63 and specify 802.1p priority as 5 for other DSCP priorities.

   Switch_A(config)#interface gigabitEthernet 1/0/1

   Switch_A(config-if)#qos trust mode dscp

   Switch_A(config-if)#qos dscp-map 63 7

   Switch_A(config-if)#qos dscp-map 0-62 5

   Switch_A(config-if)#exit

3) On port 1/0/1, set the scheduler mode as weighted and specify the queue weight as 1 for TC-5. Set the scheduler mode as weighted and specify the queue weight as 10 for TC-7.

   Switch_A(config)#interface gigabitEthernet 1/0/1

   Switch_A(config-if)#qos queue 5 mode wrr weight 1

   Switch_A(config-if)#qos queue 7 mode wrr weight 10

   Switch_A(config-if)#exit

4) Enable LLDP-MED on port 1/0/1 and select all the TLVs to be included in outgoing LLDPDU.

   Switch_A(config)#interface gigabitEthernet 1/0/1

   Switch_A(config-if)#lldp med-status

   Switch_A(config-if)#lldp med-tlv-select all

   Switch_A(config-if)#end

   Switch_A#copy running-config startup-config

Verify the configurations

Verify the configuration of Auto VoIP:

```
Switch_A(config)#show auto-voip
Administrative Mode:    Enabled
```

Verify the Auto VoIP configuration of ports:

```
Switch_A(config)#show auto-voip interface
Interface.Gi1/0/1
Auto-VoIP Interface Mode.          Disabled
Auto-VoIP COS Override.            False
Auto-VoIP DSCP Value.              63
Auto-VoIP Port Status.             Disabled

Interface.Gi1/0/2
Auto-VoIP Interface Mode.          Disabled
Auto-VoIP COS Override.            False
Auto-VoIP DSCP Value.              0
Auto-VoIP Port Status.             Disabled

Interface.Gi1/0/3
Auto-VoIP Interface Mode.          Disabled
Auto-VoIP COS Override.            False
Auto-VoIP DSCP Value.              0
Auto-VoIP Port Status.             Disabled
...
```

Verify the configuration of Class of Service:

```
Switch_A(config)#show qos trust interface gigabitEthernet 1/0/1
Port        Trust Mode      LAG
--------    ---------       ------
Gi1/0/1     trust DSCP      N/A
```

```
Switch_A(config)#show qos cos-map
-----+-----+-----+-----+-----+-----+-----+----+----
Tag  |0    |1    |2    |3    |4    |5    |6   |7
-----+-----+-----+-----+-----+-----+-----+----+----
TC   |TC1  |TC0  |TC2  |TC3  |TC4  |TC5  |TC6 |TC7
-----+-----+-----+-----+-----+-----+-----+----+----
Switch_A(config)#show qos dscp-map interface gigabitEthernet 1/0/1
Gi1/0/1----LAG: N/A
DSCP:              0   1   2   3   4   5   6   7
DSCP to 802.1P   5   5   5   5   5   5   5   5
                  ---- ---- ---- ---- ---- ---- ---- ----
DSCP:              8   9   10  11  12  13  14  15
DSCP to 802.1P   5   5   5   5   5   5   5   5
                  ---- ---- ---- ---- ---- ---- ---- ----
DSCP:              16  17  18  19  20  21  22  23
DSCP to 802.1P   5   5   5   5   5   5   5   5
                  ---- ---- ---- ---- ---- ---- ---- ----
DSCP:              24  25  26  27  28  29  30  31
DSCP to 802.1P   5   5   5   5   5   5   5   5
                  ---- ---- ---- ---- ---- ---- ---- ----
DSCP:              32  33  34  35  36  37  38  39
DSCP to 802.1P   5   5   5   5   5   5   5   5
                  ---- ---- ---- ---- ---- ---- ---- ----
DSCP:              40  41  42  43  44  45  46  47
DSCP to 802.1P   5   5   5   5   5   5   5   5
                  ---- ---- ---- ---- ---- ---- ---- ---
DSCP:              48  49  50  51  52  53  54  55
DSCP to 802.1P   5   5   5   5   5   5   5   5
                  ---- ---- ---- ---- ---- ---- ---- ----
```

DSCP:	56	57	58	59	60	61	62	63
DSCP to 802.1P	5	5	5	5	5	5	5	7

Verify the configuration of LLDP-MED:

Switch_A(config)#show lldp interface

LLDP interface config:

gigabitEthernet 1/0/1:

Admin Status:	TxRx
SNMP Trap:	Disabled
TLV	Status
---	------
Port-Description	Yes
System-Capability	Yes
System-Description	Yes
System-Name	Yes
Management-Address	Yes
Port-VLAN-ID	Yes
Protocol-VLAN-ID	Yes
VLAN-Name	Yes
Link-Aggregation	Yes
MAC-Physic	Yes
Max-Frame-Size	Yes
Power	Yes
LLDP-MED Status:	Enabled
TLV	Status
---	------
Network Policy	Yes

Location Identification Yes

Extended Power Via MDI Yes

Inventory Management Yes

...

7 Appendix: Default Parameters

Default settings of Class of Service are listed in the following tables.

Table 7-1 Default Settings of Port Priority Configuration

Parameter	Default Setting
802.1P Priority	0
Trust Mode	Untrusted

Table 7-2 Default Settings of 802.1p to Queue Mapping

802.1p Priority	Queues (8)
0	TC1
1	TC0
2	TC2
3	TC3
4	TC4
5	TC5
6	TC6
7	TC7

Table 7-3 Default Settings of 802.1p Remap Configuration

Original 802.1p Priority	New 802.1p Priority
0	0
1	1
2	2
3	3
4	4
5	5
6	6
7	7

Table 7-4 Default Settings of DSCP to 802.1p Mapping

DSCP	802.1p Priority
0 to 7	0
8 to 15	1

DSCP	802.1p Priority
16 to 23	2
24 to 31	3
32 to 39	4
40 to 47	5
48 to 55	6
56 to 63	7

Table 7-5 Default Settings of DSCP Remap Configuration

Original DSCP	New DSCP	Original DSCP	New DSCP	Original DSCP	New DSCP
0	0 be (000000)	22	22 af23 (010110)	44	44
1	1	23	23	45	45
2	2	24	24 cs3 (011000)	46	46 ef (101110)
3	3	25	25	47	47
4	4	26	26 af31 (011010)	48	48 cs6 (110000)
5	5	27	27	49	49
6	6	28	28 af32 (011100)	50	50
7	7	29	29	51	51
8	8 cs1 (001000)	30	30 af33 (011110)	52	52
9	9	31	31	53	53
10	10 af11 (001010)	32	32 cs4 (100000)	54	54
11	11	33	33	55	55
12	12 af12 (001100)	34	34 af41 (100010)	56	56 cs7 (111000)
13	13	35	35	57	57
14	14 af13 (001110)	36	36 af42 (100100)	58	58
15	15	37	37	59	59
16	16 cs2 (010000)	38	38 af43 (100110)	60	60
17	17	39	39	61	61
18	18 af21 (010010)	40	40 cs5 (101000)	62	62
19	19	41	41	63	63
20	20 af22 (010100)	42	42		
21	21	43	43		

Table 7-6 Default Settings of Scheduler Settings Configuration

Parameter	Default Setting
Scheduler Type	Weighted
Queue Weight	1
Minimum Bandwidth	0%
Management Type	Taildrop

Default settings of Class of Service are listed in the following tables.

Table 7-7 Default Settings of Bandwidth Control

Parameter	Default Setting
Ingress Rate (0-1,000,000Kbps)	0
Egress Rate (0-1,000,000Kbps)	0

Table 7-8 Default Settings of Storm Control

Parameter	Default Setting
Rate Mode	kbps
Broadcast Threshold (0-1,000,000)	0
Multicast Threshold (0-1,000,000)	0
UL-Frame Threshold (0-1,000,000)	0
Action	Drop
Recover Time	0

Default settings of Voice VLAN are listed in the following tables.

Table 7-9 Default Settings of Global Configuration

Parameter	Default Setting
Voice VLAN	Disabled
VLAN ID	None
Priority	7

Table 7-10 Default Settings of Port Configuration

Parameter	Default Setting
Voice VLAN	Disabled

Table 7-11 Default Settings of OUI Table

OUI	Status	Description
00:01:E3	Default	SIEMENS
00:03:6B	Default	CISCO1
00:12:43	Default	CISCO2
00:0F:E2	Default	H3C
00:60:B9	Default	NITSUKO
00:D0:1E	Default	PINTEL
00:E0:75	Default	VERILINK
00:E0:BB	Default	3COM
00:04:0D	Default	AVAYA1
00:1B:4F	Default	AVAYA2
00:04:13	Default	SNOM

Default settings of Auto VoIP are listed in the following tables.

Table 7-12 Default Settings of Auto VoIP

Parameter	Default Setting
Interface Mode	Disabled
Value	None
Cos Override Mode	Disabled
DSCP Value	0

Part 23

Configuring Access Security

CHAPTERS

1. Access Security
2. Access Security Configurations
3. Appendix: Default Parameters

1 Access Security

1.1 Overview

Access Security provides different security measures for accessing the switch remotely so as to enhance the configuration management security.

1.2 Supported Features

Access Control

This function is used to control the users' access to the switch based on IP address, MAC address or port.

HTTP

This function is based on the HTTP protocol. It can allow or deny users to access the switch via a web browser.

HTTPS

This function is based on the SSL or TLS protocol working in transport layer. It supports a security access via a web browser.

SSH

This function is based on the SSH protocol, a security protocol established on application and transport layers. The function with SSH is similar to a telnet connection, but SSH can provide information security and powerful authentication.

Telnet

This function is based on the Telnet protocol subjected to TCP/IP protocol. Through Telnet, users can log on to the switch remotely.

Serial Port

You can configure the serial port parameters.

2 Access Security Configurations

With access security configurations, you can:


- Configure the Access Control feature
- Configure the HTTP feature
- Configure the HTTPS feature
- Configure the SSH feature
- Configure the Telnet function
- Configure the Serial Port parameters

2.1 Using the GUI

2.1.1 Configuring the Access Control Feature

Choose the menu **SECURITY** > **Access Security** > **Access Control** to load the following page.

Figure 2-1 Configuring the Access Control

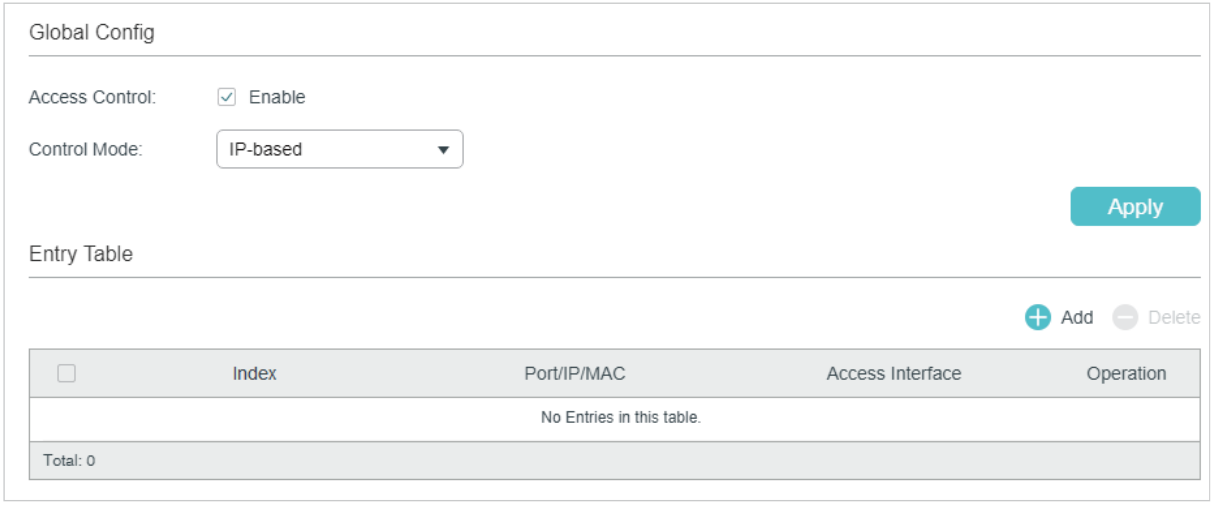


1) In the **Global Config** section, enable Access Control, select one control mode and click **Apply**.

Control Mode	Select the control mode for users to log in to the web management page. **IP-based**: Only the users within the IP-range you set here are allowed to access the switch. **MAC-based**: Only the users with the MAC address you set here are allowed to access the switch. **Port-based**: Only the users connecting to the ports you set here are allowed to access the switch.

2) In the **Entry Table** section, click Add to add an Access Control entry.

When the **IP-based** mode is selected, the following window will pop up.


Figure 2-2 Configuring Access Control Entry-IP Based

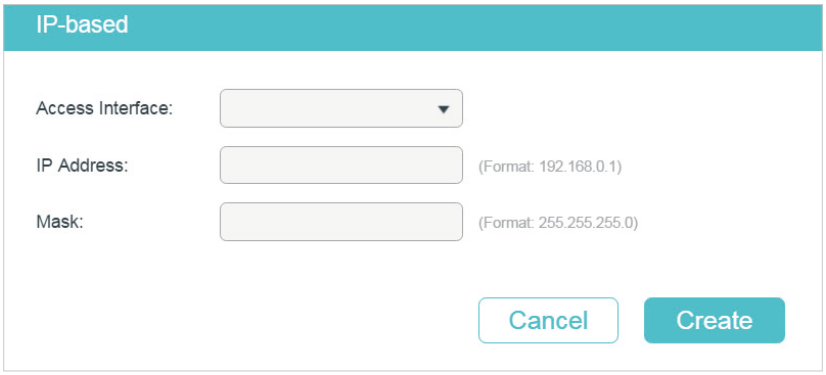

Access Interface	Select the interface to control the methods for users' accessing. **SNMP**: A function to manage the network devices via NMS. **Telnet**: A connection type for users to remote login. **SSH**: A connection type based on SSH protocol. **HTTP**: A connection type based on HTTP protocol. **HTTPS**: A connection type based on SSL protocol. **Ping**: A communication protocol to test the connection of the network.
IP Address/ Mask	Enter the IP address and mask to specify an IP range. Only the users within this IP range can access the switch.

When the **MAC-based** mode is selected, the following window will pop up.


Figure 2-3 Configuring Access Control Entry-MAC Based

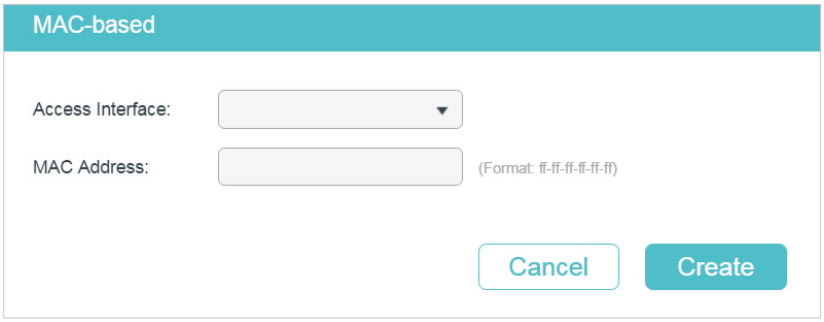

Access Interface	Select the interface to control the methods for users' accessing. **SNMP**: A function to manage the network devices via NMS. **Telnet**: A connection type for users to remote login. **SSH**: A connection type based on SSH protocol. **HTTP**: A connection type based on HTTP protocol. **HTTPS**: A connection type based on SSL protocol. **Ping**: A communication protocol to test the connection of the network.
MAC Address	Specify the MAC address. Only the users with the correct MAC address can access the switch.

When the **Port-based** mode is selected, the following window will pop up.

Figure 2-4 Configuring Access Control Entry-Port Based

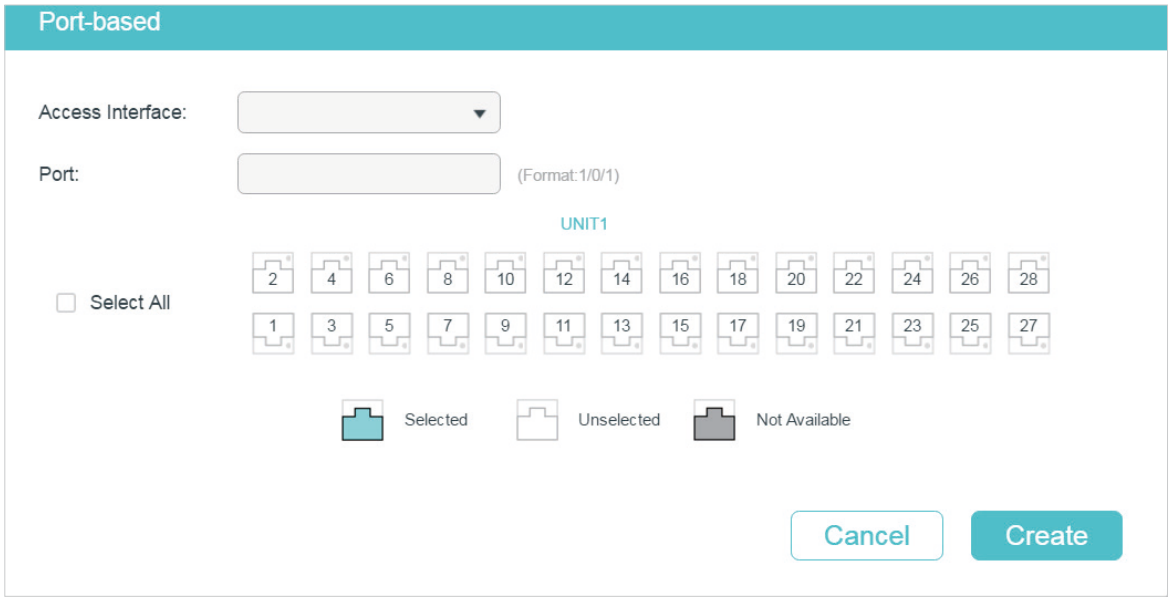


Access Interface	Select the interface to control the methods for users' accessing. **SNMP**: A function to manage the network devices via NMS. **Telnet**: A connection type for users to remote login. **SSH**: A connection type based on SSH protocol. **HTTP**: A connection type based on HTTP protocol. **HTTPS**: A connection type based on SSL protocol. **Ping**: A communication protocol to test the connection of the network.
Port	Select one or more ports to configure. Only the users connected to these ports are allowed to access the switch.

3) Click **Create**. Then you can view the created entries in the **Entry Table**.

2.1.2 Configuring the HTTP Function

Choose the menu **SECURITY** > **Access Security** > **HTTP Config** to load the following page.

Figure 2-5 Configuring the HTTP Function

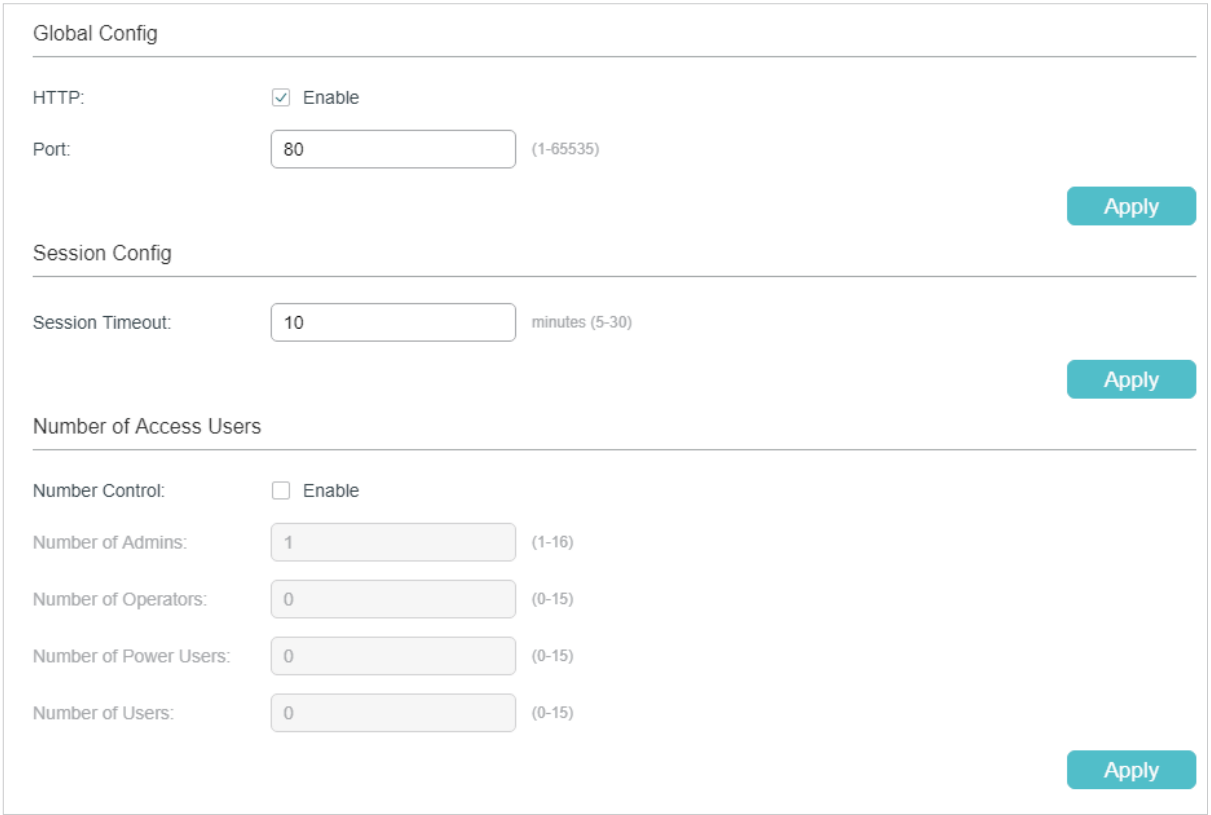

1) In the **Global Control** section, enable HTTP function, specify the port using for HTTP, and click **Apply** to enable the HTTP function.

HTTP	HTTP function is based on the HTTP protocol. It allows users to manage the switch through a web browser.

Port	Specify the port number for HTTP service.

2) In the **Session Config** section, specify the Session Timeout and click **Apply**.

Session Timeout	The system will log out automatically if users do nothing within the Session Timeout time.


3) In the **Number of Access Users** section, enable Number Control function, specify the following parameters and click **Apply**.

Number Control	Enable or disable Number Control. With this option enabled, you can control the number of the users logging on to the web management page at the same time. The total number of users should be no more than 16.
Number of Admins	Specify the maximum number of users whose access level is Admin.
Number of Operators	Specify the maximum number of users whose access level is Operator.
Number of Power Users	Specify the maximum number of users whose access level is Power User.
Number of Users	Specify the maximum number of users whose access level is User.

2.1.3 Configuring the HTTPS Function

Choose the menu **SECURITY** > **Access Security** > **HTTPS Config** to load the following page.

Figure 2-6 Configuring the HTTPS Function

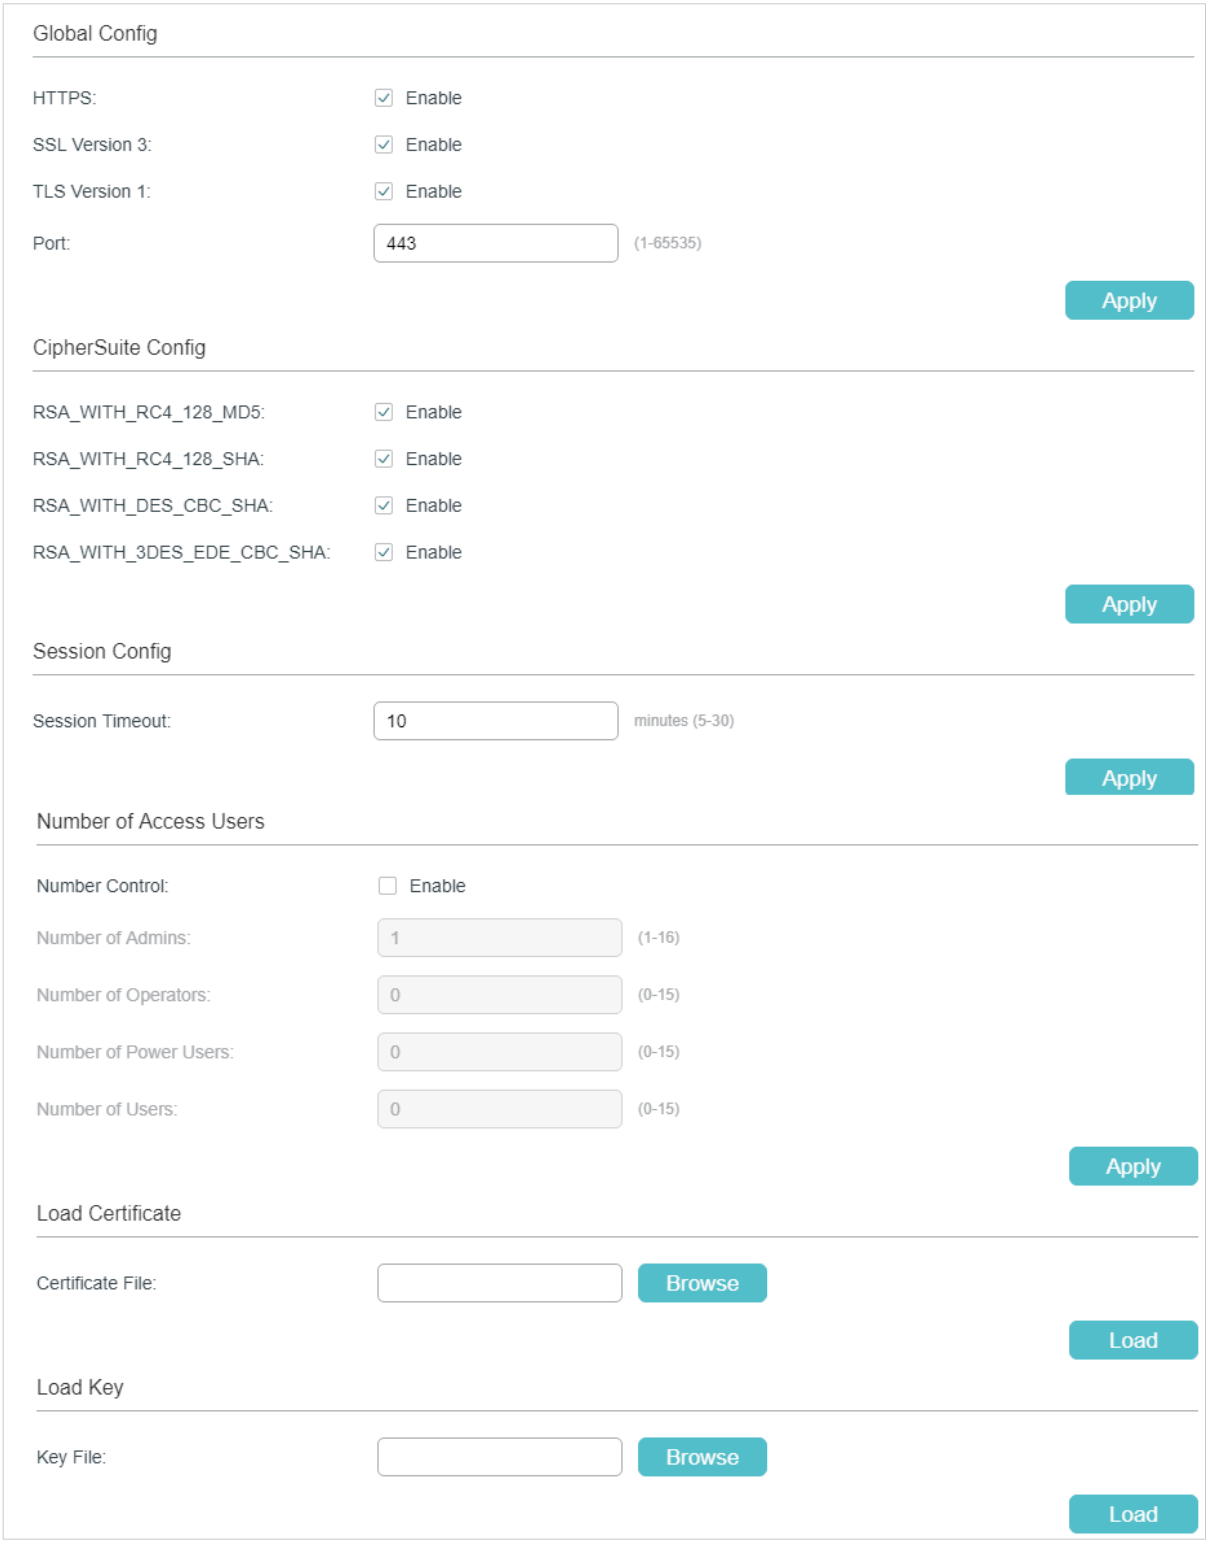

1) In the **Global Config** section, enable HTTPS function, select the protocol the switch supports and specify the port using for HTTPS. Click **Apply**.

HTTPS	Enable or disable the HTTPS function. HTTPS function is based on the SSL or TLS protocol. It provides a secure connection between the client and the switch.
SSL Version 3	Enable or disable SSL Version 3 protocolon the switch. SSL is a transport protocol. It can provide server authentication, encryption and message integrity to allow secure HTTP connection.
TLS Version 1	Enable or disable TLS Version 1 protocol on the switch. TLS is a transport protocol upgraded from SSL. It supports a different encryption algorithm from SSL, so TLS and SSL are not compatible. TLS can support a more secure connection.

2) In the **CipherSuite Config** section, select the algorithm to be enabled and click **Apply**.

RSA_WITH_ RC4_128_MD5	Key exchange with RC4 128-bit encryption and MD5 for message digest.
RSA_WITH_ RC4_128_SHA	Key exchange with RC4 128-bit encryption and SHA for message digest.
RSA_WITH_ DES_CBC_SHA	Key exchange with DES-CBC for message encryption and SHA for message digest.
RSA_ WITH_3DES_ EDE_CBC_SHA	Key exchange with 3DES and DES-EDE3-CBC for message encryption and SHA for message digest.

3) In the **Session Config** section, specify the Session Timeout and click **Apply**.

Session Timeout	The system will log out automatically if users do nothing within the Session Timeout time.

4) In the **Number of Access Users** section, enable Number Control function, specify the following parameters and click **Apply**.

Number Control	Enable or disable Number Control. With this option enabled, you can control the number of the users logging on to the web management page at the same time. The total number of users should be no more than 16.
Number of Admins	Specify the maximum number of users whose access level is Admin.
Number of Operators	Specify the maximum number of users whose access level is Operator.
Number of Power Users	Specify the maximum number of users whose access level is Power User.
Number of Users	Specify the maximum number of users whose access level is User.


5) In the **Load Certificate** and **Load Key** section, download the certificate and key.

Certificate File	Select the desired certificate to download to the switch. The certificate must be BASE64 encoded. The SSL certificate and key downloaded must match each other, otherwise the HTTPS connection will not work.
Key File	Select the desired Key to download to the switch. The key must be BASE64 encoded. The SSL certificate and key downloaded must match each other, otherwise the HTTPS connection will not work.

2.1.4 Configuring the SSH Feature

Choose the menu **SECURITY** > **Access Security** > **SSH Config** to load the following page.

Figure 2-7 Configuring the SSH Feature

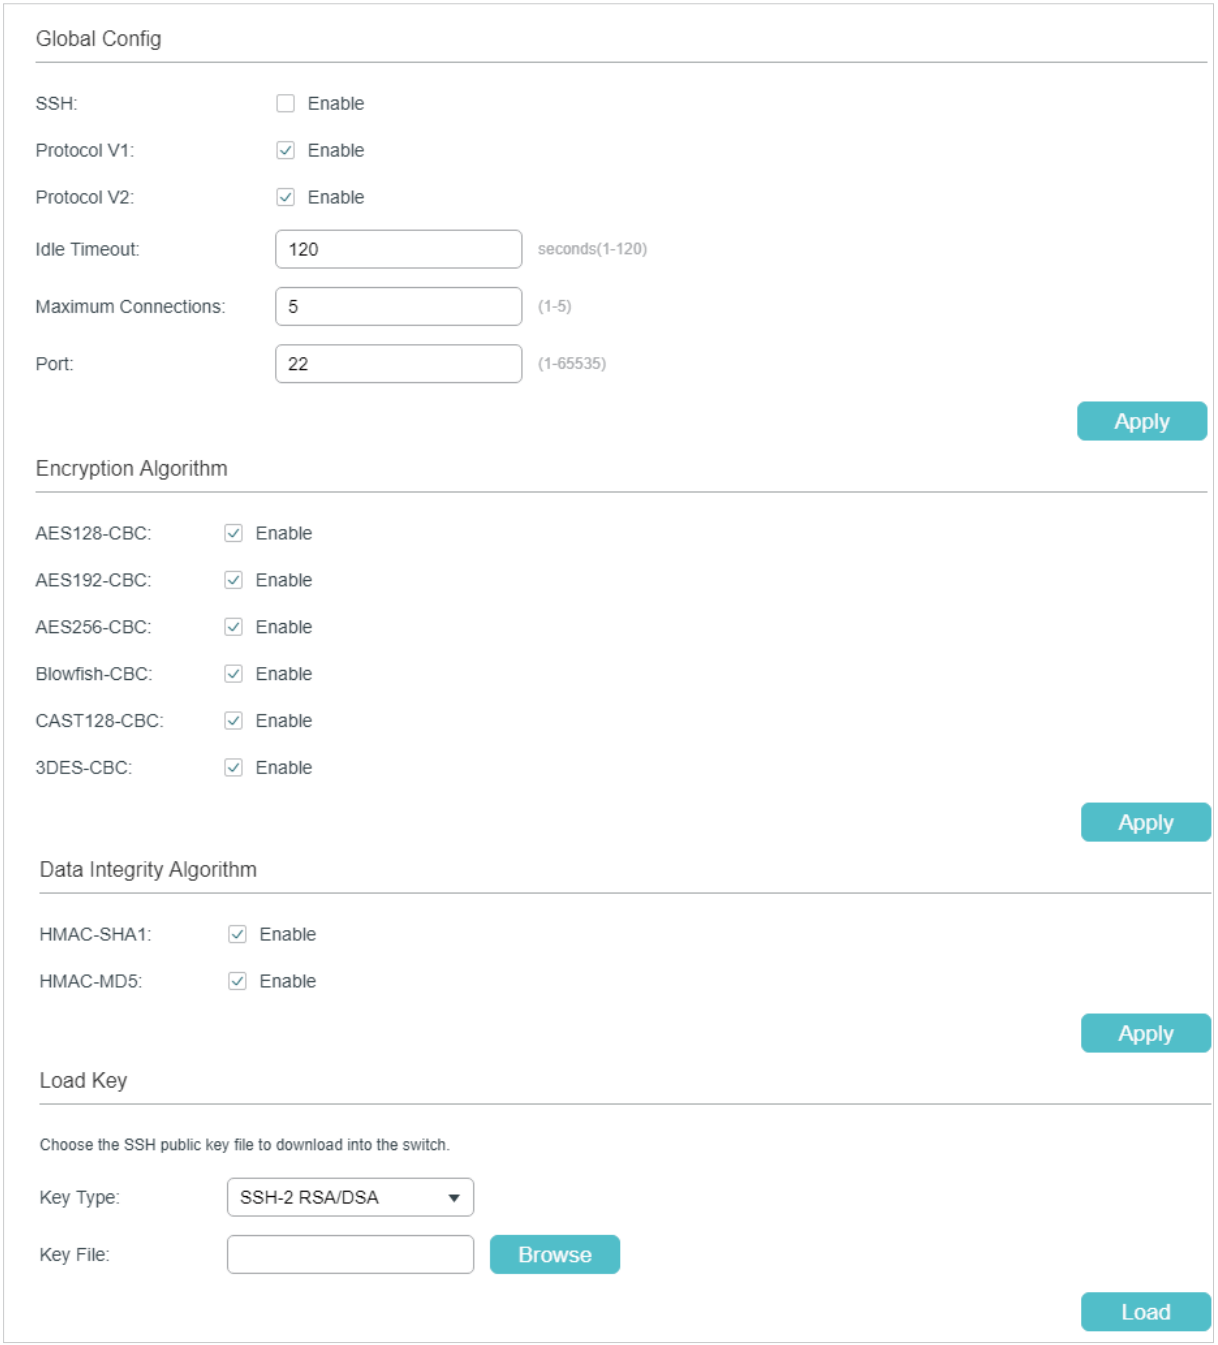

1) In the **Global Config** section, select **Enable** to enable SSH function and specify following parameters.

SSH	Select **Enable** to enable the SSH function. SSH is a protocol working in application layer and transport layer. It can provide a secure, remote connection to a device. It is more secure than Telnet protocol as it provides strong encryption.

Protocol V1	Select **Enable** to enable SSH version 1.
Protocol V2	Select **Enable** to enable SSH version 2.
Idle Timeout	Specify the idle timeout time. The system will automatically release the connection when the time is up.
Maximum Connections	Specify the maximum number of the connections to the SSH server. New connection will not be established when the number of the connections reaches the maximum number you set.
Port	Specify the port using for SSH.

2) In the **Encryption Algorithm** section, enable the encryption algorithm you want the switch to support and click **Apply**.

3) In **Data Integrity Algorithm** section, enable the integrity algorithm you want the switch to support and click **Apply**.

4) In **Import Key File** section, select key type from the drop-down list and click **Browse** to download the desired key file.

Key Type	Select the key type. The algorithm of the corresponding type is used for both key generation and authentication.
Key File	Select the desired public key to download to the switch. The key length of the downloaded file ranges of 512 to 3072 bits.


Note:

It will take a long time to download the key file. Please wait without any operation.

2.1.5 Configuring the Telnet Function

Choose the menu **SECURITY** > **Access Security** > **Telnet Config** to load the following page.

Figure 2-8 Configuring the Telnet Function

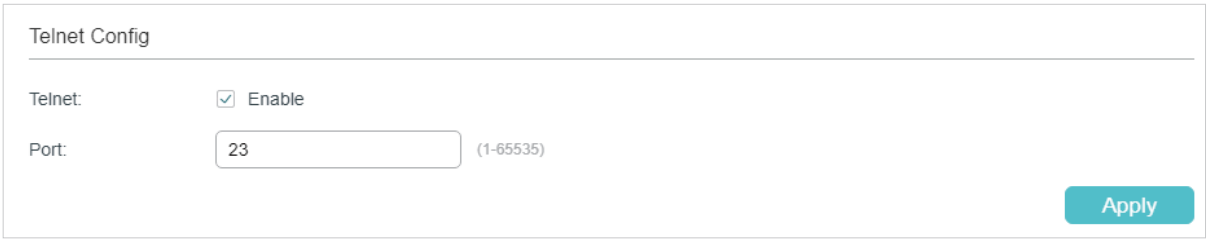


Enable Telnet and click **Apply**.

Telnet	Select **Enable** to make the Telnet function effective. Telnet function is based on the Telnet protocol subjected to TCP/IP protocol. It allows users to log on to the switch remotely.
Port	Specify the port using for Telnet.

2.1.6 Configuring the Serial Port Parameters

Choose the menu **SECURITY** > **Access Security** > **Serial Port Config** to load the following page.

Figure 2-9 Configuring the Serial Port Parameters

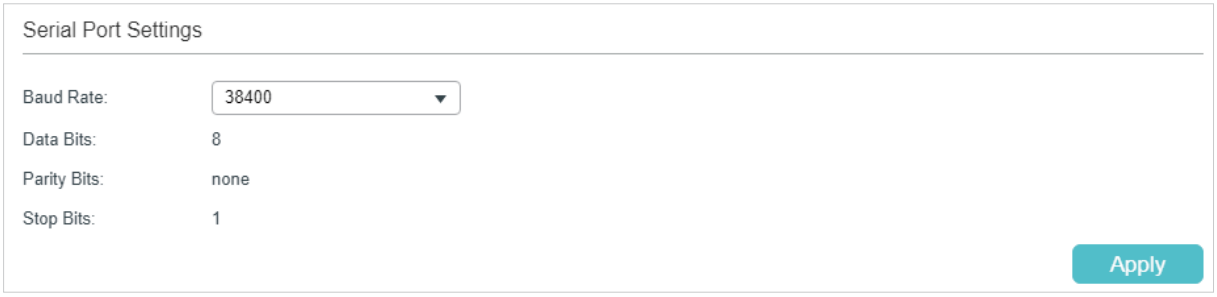

Configure the Baud Rate and click **Apply**.

Baud Rate	Configure the baud rate of the console connection. The default value is 38400 bps.
Data Bits	Displays the data bits.
Parity Bits	Displays the parity bits.
Stop Bits	Displays the stop bits.

2.2 Using the CLI

2.2.1 Configuring the Access Control

Follow these steps to configure the access control:

Step 1	**configure** Enter global configuration mode.

Step 2 Use the following command to control the users' access by limiting the IP address:

user access-control ip-based enable

Configure the control mode as IP-based.

user access-control ip-based { *ip-addr ip-mask* **} [** snmp **] [** telnet **] [** ssh **] [** http **] [** https **] [** ping **] [** all **]**

Only the users within the IP-range you set here are allowed to access the switch.

ip-addr: Specify the IP address of the user.

ip-mask: Specify the subnet mask of the user.

[snmp **] [** telnet **] [** ssh **] [** http **] [** https **] [** ping **] [** all **]**: Select to control the types for users' accessing. By default, these types are all enabled.

Use the following command to control the users' access by limiting the MAC address:

user access-control mac-based enable

Configure the control mode as MAC-based.

user access-control mac-based { *mac-addr* **} [** snmp **] [** telnet **] [** ssh **] [** http **] [** https **] [** ping **] [** all **]**

Only the users with the MAC address you set here are allowed to access the switch.

mac-addr: Specify the MAC address of the user.

[snmp **] [** telnet **] [** ssh **] [** http **] [** https **] [** ping **] [** all **]**: Select to control the types for users' accessing. By default, these types are all enabled.

Use the following command to control the users' access by limiting the ports connected to the users:

user access-control port-based enable

Configure the control mode as Port-based.

user access-control port-based interface { fastEthernet *port-list* **| gigabitEthernet** *port-list* **| ten-gigabitEthernet** *port-list* **} [** snmp **] [** telnet **] [** ssh **] [** http **] [** https **] [** ping **] [** all **]**

Only the users connecting to the ports you set here are allowed to access the switch.

port-list: Specify the list of Ethernet port, in the format of 1/0/1-4. You can appoint 5 ports at most.

[snmp **] [** telnet **] [** ssh **] [** http **] [** https **] [** ping **] [** all **]**: Select to control the types for users' accessing. By default, these types are all enabled.

Step 3 **show user configuration**

Verify the security configuration information of the user authentication information and the access interface.

Step 4 **end**

Return to privileged EXEC mode.

Step 5	**copy running-config startup-config** Save the settings in the configuration file.

The following example shows how to set the type of access control as IP-based. Set the IP address as 192.168.0.100, set the subnet mask as 255.255.255.255 and make the switch support snmp, telnet, http and https.

Switch#configure

Switch(config)#user access-control ip-based enable

Switch(config)#user access-control ip-based 192.168.0.100 255.255.255.255 snmp telnet http https

Switch(config)#show user configuration

User authentication mode: IP based

Index	IP Address	Access Interface
-----	----------	----------
1	192.168.0.100/32	SNMP Telnet HTTP HTTPS

Switch(config)#end

Switch#copy running-config startup-config

2.2.2 Configuring the HTTP Function

Follow these steps to configure the HTTP function:

Step 1	**configure** Enter global configuration mode.
Step 2	**ip http server** Enable the HTTP function. By default, it is enabled.
Step 3	**ip http session timeout** *minutes* Specify the Session Timeout time. The system will log out automatically if users do nothing within the Session Timeout time. *minutes*: Specify the timeout time, which ranges from 5 to 30 minutes. The default value is 10.

Step 4	**ip http max-users** *admin-num operator-num poweruser-num user-num* Specify the maximum number of users that are allowed to connect to the HTTP server. The total number of users should be no more than 16. *admin-num*: Enter the maximum number of users whose access level is Admin. The valid values are from 1 to 16. *operator-num*: Enter the maximum number of users whose access level is Operator. The valid values are from 0 to 15. *poweruser-num*: Enter the maximum number of users whose access level is Power User. The valid values are from 0 to 15. *user-num*: Enter the maximum number of users whose access level is User. The valid values are from 0 to 15.
Step 5	**show ip http configuration** Verify the configuration information of the HTTP server, including status, session timeout, access-control, max-user number and the idle-timeout, etc.
Step 6	**end** Return to privileged EXEC mode.
Step 7	**copy running-config startup-config** Save the settings in the configuration file.

The following example shows how to set the session timeout as 9, set the maximum admin number as 6, and set the maximum operator number as 2, the maximum power user number as 2, the maximum user number as 2.

Switch#configure

Switch(config)#ip http server

Switch(config)#ip http session timeout 9

Switch(config)#ip http max-user 6 2 2 2

Switch(config)#show ip http configuration

HTTP Status:	Enabled
HTTP Port:	80
HTTP Session Timeout:	9
HTTP User Limitation:	Enabled
HTTP Max Users as Admin:	6
HTTP Max Users as Operator:	2
HTTP Max Users as Power User:	2
HTTP Max Users as User:	2

Switch(config)#end

Switch#copy running-config startup-config

2.2.3 Configuring the HTTPS Function

Follow these steps to configure the HTTPS function:

Step 1	**configure** Enter global configuration mode.
Step 2	**ip http secure-server** Enable the HTTPS function. By default, it is enabled.
Step 3	**ip http secure-protocol { [** ssl3 **] [** tls1 **] }** Configure to make the switch support the corresponding protocol. By default, the switch supports SSLv3 and TLSv1. ssl3: Enable the SSL version 3 protocol. SSL is a transport protocol. It can provide server authentication, encryption and message integrity to allow secure HTTP connection. tls1: Enable the TLS version 1 protocol. TLS is s transport protocol upgraded from SSL. It supports different encryption algorithm from SSL, so TLS and SSL are not compatible. TLS can support a more secure connection.
Step 4	**ip http secure-ciphersuite { [3des-ede-cbc-sha] [rc4-128-md5] [rc4-128-sha] [des-cbc-sha] }** Enable the corresponding ciphersuite. By default, these types are all enabled. **3des-ede-cbc-sha**: Key exchange with 3DES and DES-EDE3-CBC for message encryption and SHA for message digest. **rc4-128-md5**: Key exchange with RC4 128-bit encryption and MD5 for message digest. **rc4-128-sha**: Key exchange with RC4 128-bit encryption and SHA for message digest. **des-cbc-sha**: Key exchange with DES-CBC for message encryption and SHA for message digest.
Step 5	**ip http secure-session timeout** *minutes* Specify the Session Timeout time. The system will log out automatically if users do nothing within the Session Timeout time. *minutes*: Specify the timeout time, which ranges from 5 to 30 minutes. The default value is 10.
Step 6	**ip http secure-max-users** *admin-num operator-num poweruser-num user-num* Specify the maximum number of users that are allowed to connect to the HTTPS server. The total number of users should be no more than 16. *admin-num*: Enter the maximum number of users whose access level is Admin. The valid values are from 1 to 16. *operator-num*: Enter the maximum number of users whose access level is Operator. The valid values are from 0 to 15. *poweruser-num*: Enter the maximum number of users whose access level is Power User. The valid values are from 0 to 15. *user-num*: Enter the maximum number of users whose access level is User. The valid values are from 0 to 15.

Step 7	**ip http secure-server download certificate** *ssl-cert* **ip-address** *ip-addr* Download the desired certificate to the switch from TFTP server. *ssl-cert*: Specify the name of the SSL certificate, which ranges from 1 to 25 characters. The certificate must be BASE64 encoded. The SSL certificate and key downloaded must match each other. *ip-addr*: Specify the IP address of the TFTP server. Both IPv4 and IPv6 addresses are supported.
Step 8	**ip http secure-server download key** *ssl-key* **ip-address** *ip-addr* Download the desired key to the switch from TFTP server. *ssl-key*: Specify the name of the key file saved in TFTP server. The key must be BASE64 encoded. *ip-addr*: Specify the IP address of the TFTP server. Both IPv4 and IPv6 addresses are supported.
Step 9	**show ip http secure-server** Verify the global configuration of HTTPS.
Step 10	**end** Return to privileged EXEC mode.
Step 11	**copy running-config startup-config** Save the settings in the configuration file.

The following example shows how to configure the HTTPS function. Enable SSL3 and TLS1 protocol. Enable the ciphersuite of 3des-ede-cbc-sha. Set the session timeout time as 15, the maximum admin number as 2, the maximum operator number as 2, the maximum power user number as 2, the maximum user number as 2. Download the certificate named ca.crt and the key named ca.key from the TFTP server with the IP address 192.168.0.100.

Switch#configure

Switch(config)#ip http secure-server

Switch(config)#ip http secure-protocol ssl3 tls1

Switch(config)#ip http secure-ciphersuite 3des-ede-cbc-sha

Switch(config)#ip http secure-session timeout 15

Switch(config)#ip http secure-max-users 2 2 2 2

Switch(config)#ip http secure-server download certificate ca.crt **ip-address** 192.168.0.100

Start to download SSL certificate.....

Download SSL certificate OK.

Switch(config)#ip http secure-server download key ca.key **ip-address** 192.168.0.100

Start to download SSL key.....

Download SSL key OK.

Switch(config)#show ip http secure-server

HTTPS Status:	Enabled
HTTPS Port:	443
SSL Protocol Level(s):	ssl3 tls1
SSL CipherSuite:	3des-ede-cbc-sha
HTTPS Session Timeout:	15
HTTPS User Limitation:	Enabled
HTTPS Max Users as Admin:	2
HTTPS Max Users as Operator:	2
HTTPS Max Users as Power User:	2
HTTPS Max Users as User:	2

Switch(config)#end

Switch#copy running-config startup-config

2.2.4 Configuring the SSH Feature

Follow these steps to configure the SSH function:

Step 1	**configure** Enter global configuration mode.
Step 2	**ip ssh server** Enable the SSH function. By default, it is disabled.
Step 3	**ip ssh version {** v1 | v2 **}** Configure to make the switch support the corresponding protocol. By default, the switch supports SSHv1 and SSHv3. v1 | v2: Select to enable the corresponding protocol.
Step 4	**ip ssh timeout** *value* Specify the idle timeout time. The system will automatically release the connection when the time is up. *value*: Enter the value of the timeout time, which ranges from 1 to 120 seconds. The default value is 120 seconds.

Step 5	**ip ssh max-client** *num* Specify the maximum number of the connections to the SSH server. New connection will not be established when the number of the connections reaches the maximum number you set. *num*: Enter the number of the connections, which ranges from 1 to 5. The default value is 5.
Step 6	**ip ssh algorithm {** AES128-CBC | AES192-CBC | AES256-CBC | Blowfish-CBC | Cast128-CBC | 3DES-CBC | HMAC-SHA1 | HMAC-MD5 **}** Enable the corresponding algorithm. By default, these types are all enabled. AES128-CBC | AES192-CBC | AES256-CBC | Blowfish-CBC | Cast128-CBC | 3DES-CBC: Specify the encryption algorithm you want the switch supports. HMAC-SHA1 | HMAC-MD5: Specify the data integrity algorithm you want the switch supports.
Step 7	**ip ssh download {** v1 | v2 **}** *key-file* **ip-address** *ip-addr* Select the type of the key file and download the desired file to the switch from TFTP server. v1 | v2: Select the key type. The algorithm of the corresponding type is used for both key generation and authentication. *key-file*: Specify the name of the key file saved in TFTP server. Ensure the key length of the downloaded file is in the range of 512 to 3072 bits. *ip-addr*: Specify the IP address of the TFTP server. Both IPv4 and IPv6 addresses are supported.
Step 8	**show ip ssh** Verify the global configuration of SSH.
Step 9	**end** Return to privileged EXEC mode.
Step 10	**copy running-config startup-config** Save the settings in the configuration file.

Note:

It will take a long time to download the key file. Please wait without any operation.

The following example shows how to configure the SSH function. Set the version as SSH V1 and SSH V2. Enable the AES128-CBC and Cast128-CBC encryption algorithm. Enable the HMAC-MD5 data integrity algorithm. Choose the key type as SSH-2 RSA/DSA.

Switch(config)#ip ssh server

Switch(config)#ip ssh version v1

Switch(config)#ip ssh version v2

Switch(config)#ip ssh timeout 100

Switch(config)#ip ssh max-client 4

Switch(config)#ip ssh algorithm AES128-CBC

Switch(config)#ip ssh algorithm Cast128-CBC

Switch(config)#ip ssh algorithm HMAC-MD5

Switch(config)#ip ssh download v2 publickey **ip-address** 192.168.0.100

Start to download SSH key file.....

Download SSH key file OK.

Switch(config)#show ip ssh

Global Config:

SSH Server: Enabled

Protocol V1: Enabled

Protocol V2: Enabled

Idle Timeout: 100

MAX Clients: 4

Port: 22

Encryption Algorithm:

AES128-CBC: Enabled

AES192-CBC: Disabled

AES256-CBC: Disabled

Blowfish-CBC: Disabled

Cast128-CBC: Enabled

3DES-CBC: Disabled

Data Integrity Algorithm:

HMAC-SHA1: Disabled

HMAC-MD5: Enabled

Key Type: SSH-2 RSA/DSA

Key File:

---- BEGIN SSH2 PUBLIC KEY ----

Comment: “dsa-key-20160711”

Switch(config)#end

Switch#copy running-config startup-config

2.2.5 Configuring the Telnet Function

Follow these steps enable the Telnet function:

Step 1	**configure** Enter global configuration mode.
Step 2	**telnet enable** Enable the telnet function. By default, it is enabled.
Step 3	**telnet port** *port* Specify the port using for Telnet. It ranges from 1 to 65535.
Step 4	**end** Return to privileged EXEC mode.
Step 4	**copy running-config startup-config** Save the settings in the configuration file.

2.2.6 Configuring the Serial Port Parameters

Follow these steps enable the serial port parameters:

Step 1	**configure** Enter global configuration mode.
Step 2	**serial_port baud_rate {** 9600 | 19200 | 38400 | 57600 | 115200 **}** Specify the baud rate of the console connection. 9600 | 19200 | 38400 | 57600 | 115200: Specify the communication baud rate on the console port. The default value is 38400 bps.
Step 3	**end** Return to privileged EXEC mode.
Step 4	**copy running-config startup-config** Save the settings in the configuration file.

3 Appendix: Default Parameters

Default settings of Access Security are listed in the following tables.

Table 3-1 Default Settings of Access Control Configuration

Parameter	Default Setting
Access Control	Disabled

Table 3-2 Default Settings of HTTP Configuration

Parameter	Default Setting
HTTP	Enabled
Port	80
Session Timeout	10 minutes
Number Control	Disabled

Table 3-3 Default Settings of HTTPS Configuration

Parameter	Default Setting
HTTPS	Enabled
SSL Version 3	Enabled
TLS Version 1	Enabled
Port	443
RSA_WITH_RC4_128_MD5	Enabled
RSA_WITH_RC4_128_SHA	Enabled
RSA_WITH_DES_CBC_SHA	Enabled
RSA_WITH_3DES_EDE_CBC_SHA	Enabled
Session Timeout	10 minutes
Number Control	Disabled

Table 3-4 Default Settings of SSH Configuration

Parameter	Default Setting
SSH	Disabled
Protocol V1	Enabled
Protocol V2	Enabled
Idle Timeout	120 seconds
Maximum Connections	5

Parameter	Default Setting
Port	22
AES128-CBC	Enabled
AES192-CBC	Enabled
AES256-CBC	Enabled
Blowfish-CBC	Enabled
Cast128-CBC	Enabled
3DES-CBC	Enabled
HMAC-SHA1	Enabled
HMAC-MD5	Enabled
Key Type:	SSH-2 RSA/DSA

Table 3-5 Default Settings of Telnet Configuration

Parameter	Default Setting
Telnet	Enabled
Port	23

Table 3-6 Default Settings of Serial Port

Parameter	Default Setting
Baud Rate	38400 bps

Part 24

Configuring AAA

CHAPTERS


1. Overview
2. AAA Configuration
3. Configuration Examples
4. Appendix: Default Parameters

1 Overview

AAA stands for authentication, authorization and accounting. On TP-Link switches, this feature is mainly used to authenticate the users trying to log in to the switch or get administrative privileges. The administrator can create guest accounts and an Enable password for other users. The guests do not have administrative privileges without the Enable password provided.

AAA provides a safe and efficient authentication method. The authentication can be processed locally on the switch or centrally on the RADIUS/TACACS+ server(s). As the following figure shows, the network administrator can centrally configure the management accounts of the switches on the RADIUS server and use this server to authenticate the users trying to access the switch or get administrative privileges.

Figure 1-1 Network Topology of AAA

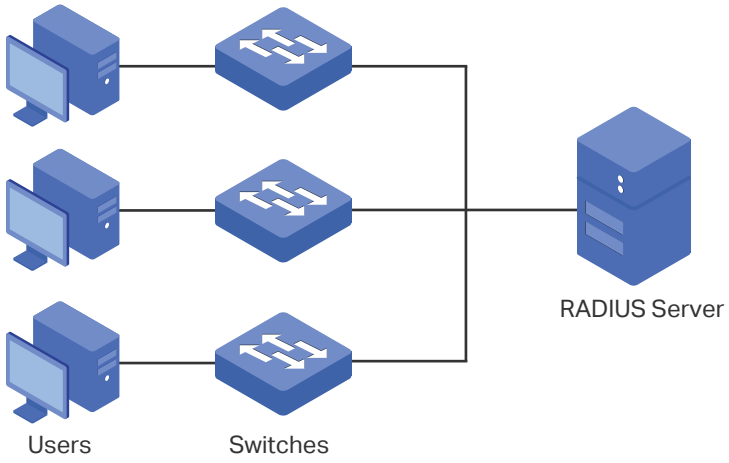

2 AAA Configuration

In the AAA feature, the authentication can be processed locally on the switch or centrally on the RADIUS/TACACS+ server(s). To ensure the stability of the authentication system, you can configure multiple servers and authentication methods at the same time. This chapter introduces how to configure this kind of comprehensive authentication in AAA.

To complete the configuration, follow these steps:

1) Add the servers.
2) Configure the server groups.
3) Configure the method list.
4) Configure the AAA application list.
5) Configure the login account and the Enable password.

Configuration Guidelines

The basic concepts and working mechanism of AAA are as follows:

- AAA Default Setting

By default, the AAA feature is enabled and cannot be disabled.

- Server Group

Multiple servers running the same protocol can be added to a server group, and the servers in the group will authenticate the users in the order they are added. The server that is first added to the group has the highest priority, and is responsible for authentication under normal circumstances. If the first one breaks down or doesn't respond to the authentication request for some reason, the second sever will start working for authentication, and so on.

- Method List

A server group is regarded as a method, and the local authentication is another method. Several methods can be configured to form a method list. The switch uses the first method in the method list to authenticate the user, and if that method fails to respond, the switch selects the next method. This process continues until the user has a successful communication with a method or until all defined methods are exhausted. If the authentication succeeds or the secure server or the local switch denies the user's access, the authentication process stops and no other methods are attempted.

Two types of method list are provided: Login method list for users of all types to access the switch, and Enable method list for guests to get administrative privileges.

- AAA Application List

The switch supports the following access applications: Console, Telnet, SSH and HTTP. You can select the configured authentication method lists for each application.

2.1 Using the GUI


2.1.1 Adding Servers

You can add one or more RADIUS/TACACS+ servers on the switch for authentication. If multiple servers are added, the server that is first added to the group has the highest priority and authenticates the users trying to access the switch. The others act as backup servers in case the first one breaks down.

- Adding RADIUS Server

Choose the menu **SECURITY > AAA > RADIUS Config** and click Add to load the following page.

Figure 2-1 RADIUS Server Configuration

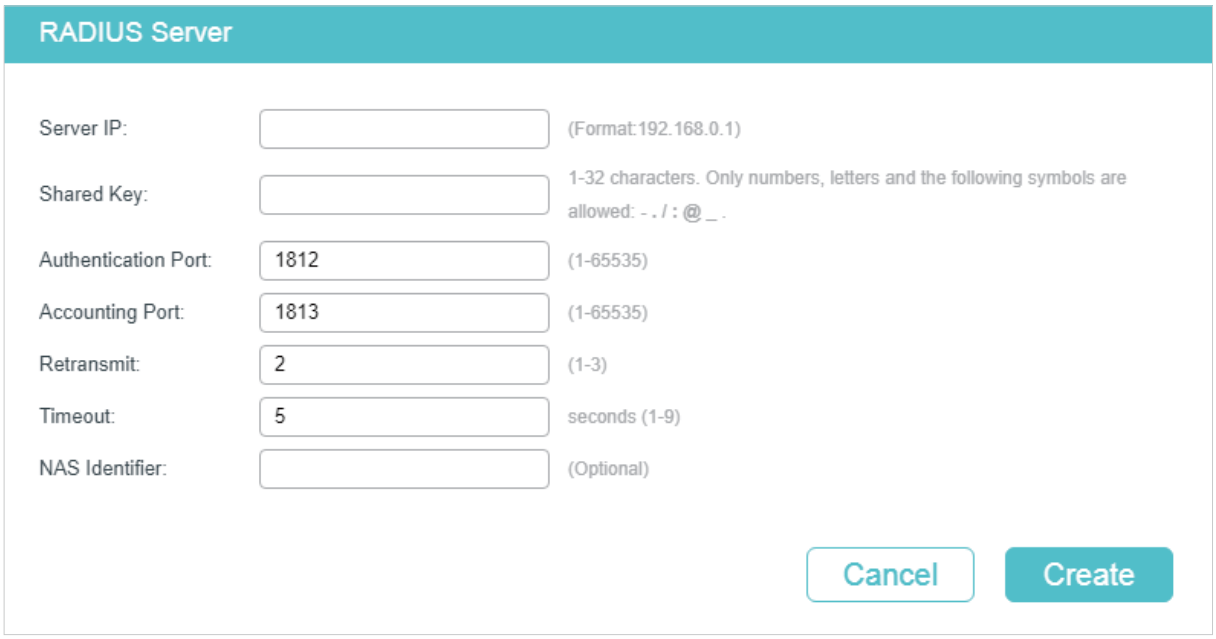

Follow these steps to add a RADIUS server:

1) Configure the following parameters.

Server IP	Enter the IP address of the server running the RADIUS secure protocol.
Shared Key	Enter the shared key between the RADIUS server and the switch. The RADIUS server and the switch use the key string to encrypt passwords and exchange responses.
Authentication Port	Specify the UDP destination port on the RADIUS server for authentication requests. The default setting is 1812.


Accounting Port	Specify the UDP destination port on the RADIUS server for accounting requests. The default setting is 1813. Usually, it is used in the 802.1x feature.
Retransmit	Specify the number of times a request is resent to the server if the server does not respond. The default setting is 2.
Timeout	Specify the time interval that the switch waits for the server to reply before resending. The default setting is 5 seconds.
NAS Identifier	Specify the name of the NAS (Network Access Server) to be contained in RADIUS packets for identification. It ranges from 1 to 31 characters. The default value is the MAC address of the switch. Generally, the NAS indicates the switch itself.

2) Click **Create** to add the RADIUS server on the switch.

■ Adding TACACS+ Server

Choose the menu **SECURITY > AAA > TACACS+ Config** and click ⊕ Add to load the following page.

Figure 2-2 TACACS+ Server Configuration

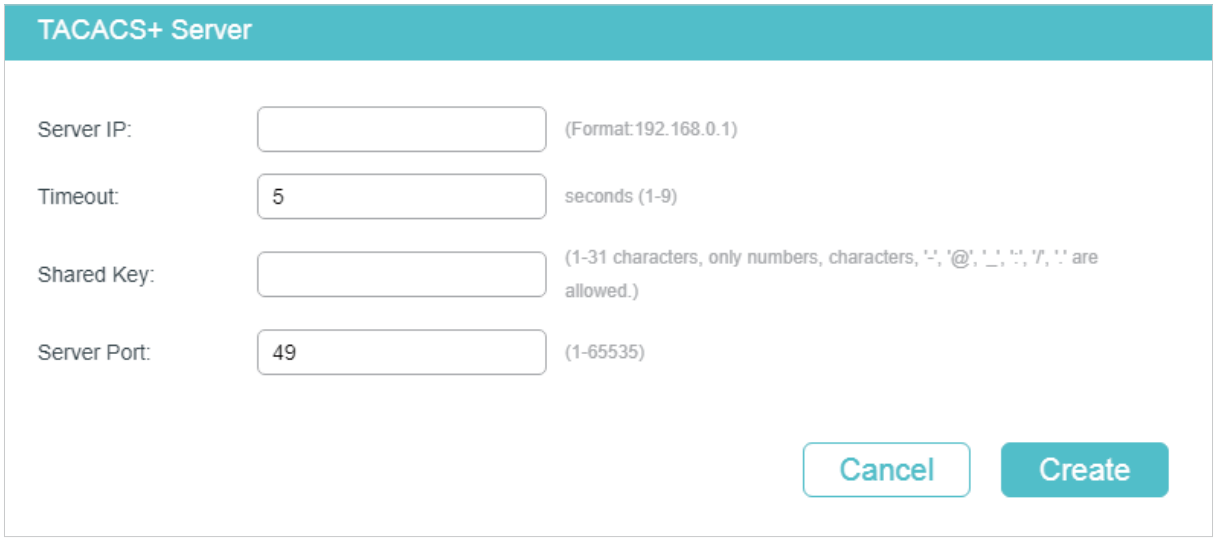

Follow these steps to add a TACACS+ server:

1) Configure the following parameters.

Server IP	Enter the IP address of the server running the TACACS+ secure protocol.
Timeout	Specify the time interval that the switch waits for the server to reply before resending. The default setting is 5 seconds.
Shared Key	Enter the shared key between the TACACS+ server and the switch. The TACACS+ server and the switch use the key string to encrypt passwords and exchange responses.
Server Port	Specify the TCP port used on the TACACS+ server for AAA. The default setting is 49.


2) Click **Create** to add the TACACS+ server on the switch.

2.1.2 Configuring Server Groups

The switch has two built-in server groups, one for RADIUS servers and the other for TACACS+ servers. The servers running the same protocol are automatically added to the default server group. You can add new server groups as needed.

Choose the menu **SECURITY > AAA > Server Group** to load the following page.


Figure 2-3 Add New Server Group

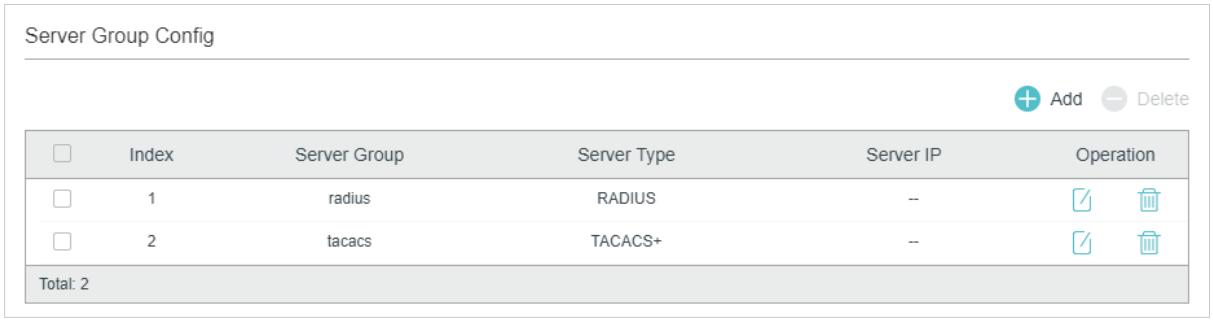

There are two default server groups in the list. You can edit the default server groups or follow these steps to configure a new server group:

1) Click Add and the following window will pop up.

Figure 2-4 Add Server Group

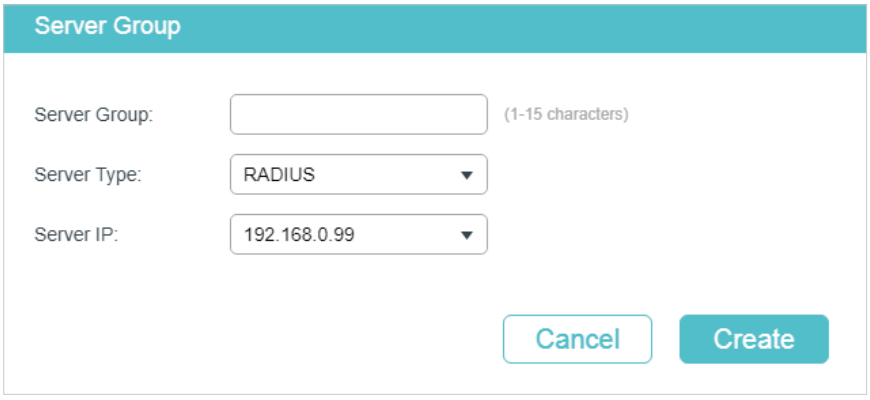

Configure the following parameters:

Server Group	Specify a name for the server group.
Server Type	Select the server type for the group. The following options are provided: RADIUS and TACACS+.
Server IP	Select the IP address of the server which will be added to the server group.


2) Click **Create**.

2.1.3 Configuring the Method List

A method list describes the authentication methods and their sequence to authenticate the users. The switch supports Login Method List for users of all types to gain access to the switch, and Enable Method List for guests to get administrative privileges.

Choose the menu **SECURITY > AAA > Method Config** to load the following page.

Figure 2-5 Method List

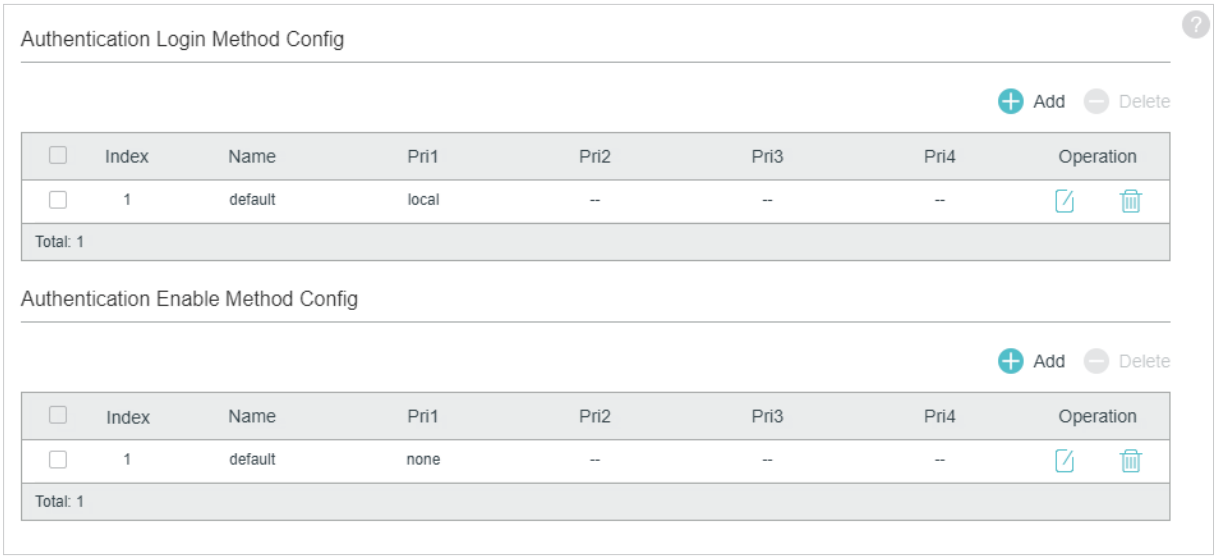


There are two default methods respectively for the Login authentication and the Enable authentication.

You can edit the default methods or follow these steps to add a new method:

1) Click Add in the **Authentication Login Method Config** section or **Authentication Enable Method Config** section to add corresponding type of method list. The following window will pop up.

Figure 2-6 Add New Method

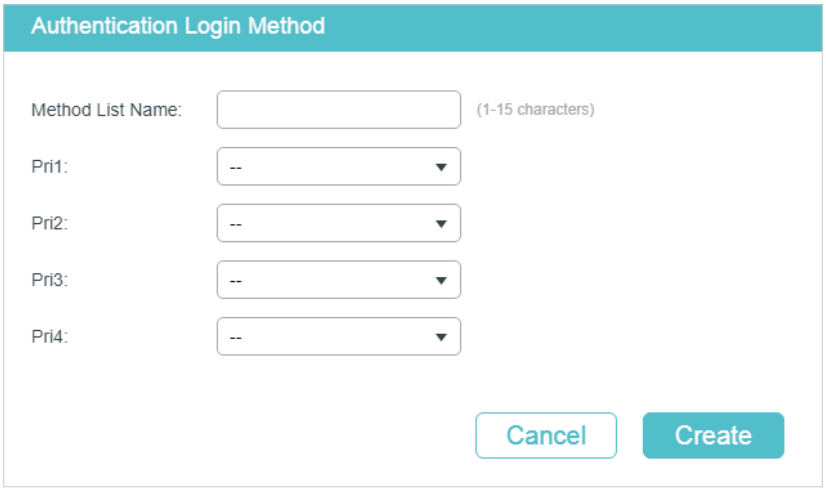

Configure the parameters for the method to be added.

Method List Name	Specify a name for the method.


Pri1- Pri4	Specify the authentication methods in order. The method with priority 1 authenticates a user first, the method with priority 2 is tried if the previous method does not respond, and so on. **local**: Use the local database in the switch for authentication. **none**: No authentication is used. **radius**: Use the remote RADIUS server/server groups for authentication. **tacacs**: Use the remote TACACS+ server/server groups for authentication. **Other user-defined server groups**: Use the user-defined server groups for authentication.

2) Click **Create** to add the new method.

2.1.4 Configuring the AAA Application List

Choose the menu **SECURITY > AAA > Global Config** to load the following page.

Figure 2-7 Configure Application List

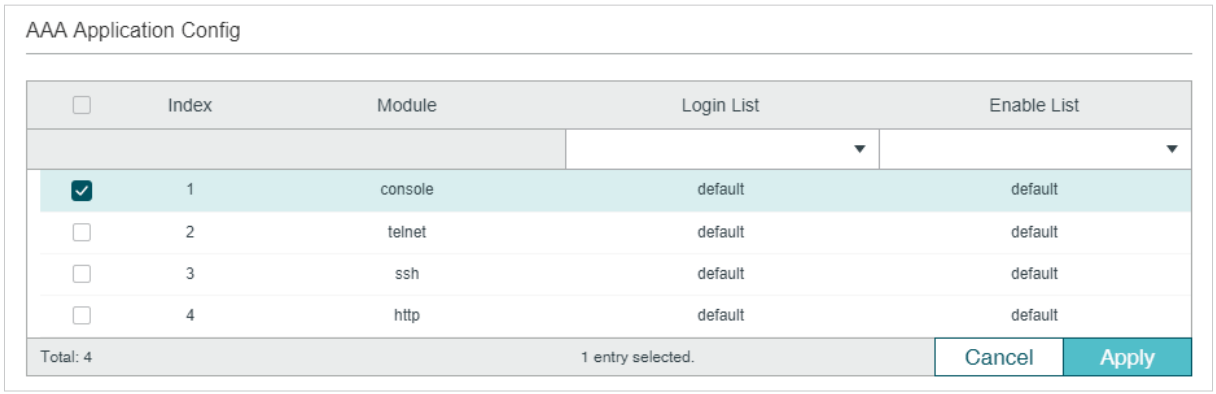

Follow these steps to configure the AAA application list.

1) In the **AAA Application List** section, select an access application and configure the Login list and Enable list.

Module	Displays the configurable applications on the switch: console, telnet, ssh and http.
Login List	Select a previously configured Login method list. This method list will authenticate the users trying to log in to the switch.
Enable List	Select a previously configured Enable method list. This method list will authenticate the users trying to get administrative privileges.

2) Click **Apply**.

2.1.5 Configuring Login Account and Enable Password


The login account and Enable password can be configured locally on the switch or centrally on the RADIUS/TACACS+ server(s).

- On the Switch

The local username and password for login can be configured in the User Management feature. For details, refer to *Managing System*.

To configure the local Enable password for getting administrative privileges, choose the menu **SECURITY > AAA > Global Config** to load the following page.

Figure 2-8 Configure Enable Password

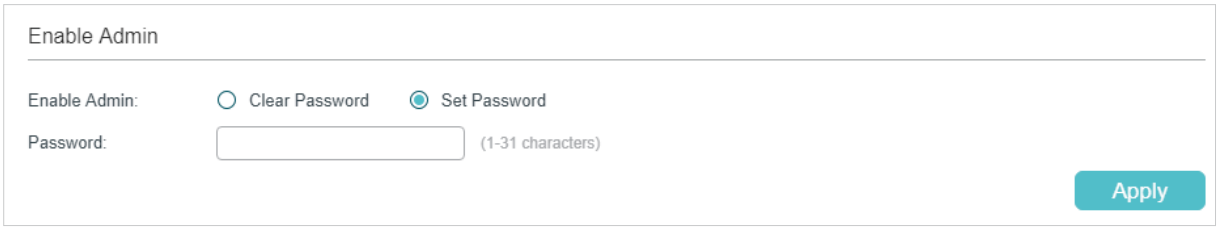

There are two options: **Clear Password** and **Set Password**. You can choose whether the local Enable password is required when the guests try to get administrative privileges. Click **Apply**.

Tips: The logged-in guests can enter the local Enable password on this page to get administrative privileges.

- On the Server

The accounts created by the RADIUS/TACACS+ server can only view the configurations and some network information without the Enable password.

Some configuration principles on the server are as follows:

- For Login authentication configuration, more than one login account can be created on the server. Besides, both the user name and password can be customized.

- For Enable password configuration:

  On RADIUS server, the user name should be set as **$enable$**, and the Enable password is customizable. All the users trying to get administrative privileges share this Enable password.

  On TACACS+ server, configure the value of "enable 15" as the Enable password in the configuration file. All the users trying to get administrative privileges share this Enable password.

2.2 Using the CLI

2.2.1 Adding Servers

You can add one or more RADIUS/TACACS+ servers on the switch for authentication. If multiple servers are added, the server with the highest priority authenticates the users trying to access the switch, and the others act as backup servers in case the first one breaks down.

■ Adding RADIUS Server

Follow these steps to add RADIUS server on the switch:

Step 1	**configure** Enter global configuration mode.
Step 2	**radius-server host** *ip-address* **[auth-port** *port-id* **] [acct-port** *port-id* **] [timeout** *time* **] [retransmit** *number* **] [nas-id** *nas-id* **] key {** [0] *string* **|** 7 *encrypted-string* **}** Add the RADIUS server and configure the related parameters as needed. **host** *ip-address*: Enter the IP address of the server running the RADIUS protocol. **auth-port** *port-id*: Specify the UDP destination port on the RADIUS server for authentication requests. The default setting is 1812. **acct-port** *port-id:* Specify the UDP destination port on the RADIUS server for accounting requests. The default setting is 1813. Usually, it is used in the 802.1X feature. **timeout** *time*: Specify the time interval that the switch waits for the server to reply before resending. The valid values are from 1 to 9 seconds and the default setting is 5 seconds. **retransmit** *number*: Specify the number of times a request is resent to the server if the server does not respond. The valid values are from 1 to 3 and the default setting is 2. **nas-id** *nas-id*: Specify the name of the NAS (Network Access Server) to be contained in RADIUS packets for identification. It ranges from 1 to 31 characters. The default value is the MAC address of the switch. Generally, the NAS indicates the switch itself. **key {** [0] *string* **|** 7 *encrypted-string* **}**: Specify the shared key. 0 and 7 represent the encryption type. 0 indicates that an unencrypted key will follow. 7 indicates that a symmetric encrypted key with a fixed length will follow. By default, the encryption type is 0. *string* is the shared key for the switch and the server, which contains 31 characters at most. *encrypted-string* is a symmetric encrypted key with a fixed length, which you can copy from the configuration file of another switch. The key or encrypted-key you configure here will be displayed in the encrypted form.
Step 3	**show radius-server** Verify the configuration of RADIUS server.
Step 4	**end** Return to privileged EXEC mode.

Step 5	**copy running-config startup-config** Save the settings in the configuration file.

The following example shows how to add a RADIUS server on the switch. Set the IP address of the server as 192.168.0.10, the authentication port as 1812, the shared key as 123456, the timeout as 8 seconds and the retransmit number as 3.

Switch#configure

Switch(config)#radius-server host 192.168.0.10 **auth-port** 1812 **timeout** 8 **retransmit** 3 **key** 123456

Switch(config)#show radius-server

Server Ip	Auth Port	Acct Port	Timeout	Retransmit	NAS Identifier	Shared key
192.168.0.10	1812	1813	5	2	000AEB132397	123456

Switch(config)#end

Switch#copy running-config startup-config

Adding TACACS+ Server

Follow these steps to add TACACS+ server on the switch:

Step 1	**configure** Enter global configuration mode.
Step 2	**tacacs-server host** *ip-address* **[port** *port-id* **] [timeout** *time* **] [key {** [0] *string* **|** 7 *encrypted-string* **}]** Add the RADIUS server and configure the related parameters as needed. **host** *ip-address*: Enter the IP address of the server running the TACACS+ protocol. **port** *port-id*: Specify the TCP destination port on the TACACS+ server for authentication requests. The default setting is 49. **timeout** *time*: Specify the time interval that the switch waits for the server to reply before resending. The valid values are from 1 to 9 seconds and the default setting is 5 seconds. **key {** [0] *string* **|** 7 *encrypted-string* **}**: Specify the shared key. 0 and 7 represent the encryption type. 0 indicates that an unencrypted key will follow. 7 indicates that a symmetric encrypted key with a fixed length will follow. By default, the encryption type is 0. *string* is the shared key for the switch and the server, which contains 31 characters at most. *encrypted-string* is a symmetric encrypted key with a fixed length, which you can copy from the configuration file of another switch. The key or encrypted-key you configured here will be displayed in the encrypted form.
Step 3	**show tacacs-server** Verify the configuration of TACACS+ server.

Step 4	**end** Return to privileged EXEC mode.
Step 5	**copy running-config startup-config** Save the settings in the configuration file.

The following example shows how to add a TACACS+server on the switch. Set the IP address of the server as 192.168.0.20, the authentication port as 49, the shared key as 123456, and the timeout as 8 seconds.

Switch#configure

Switch(config)#tacacs-server host 192.168.0.20 **auth-port** 49 **timeout** 8 **key** 123456

Switch(config)#show tacacs-server

Server Ip	Port	Timeout	Shared key
192.168.0.20	49	8	123456

Switch(config)#end

Switch#copy running-config startup-config

2.2.2 Configuring Server Groups

The switch has two built-in server groups, one for RADIUS and the other for TACACS+. The servers running the same protocol are automatically added to the default server group. You can add new server groups as needed.

The two default server groups cannot be deleted or edited. Follow these steps to add a server group:

Step 1	**configure** Enter global configuration mode.
Step 2	**aaa group {** radius | tacacs **}** *group-name* Create a server group. radius | tacacs: Specify the group type. *group-name*: Specify a name for the group.
Step 3	**server** *ip-address* Add the existing servers to the server group. *ip-address*: Specify IP address of the server to be added to the group.
Step 4	**show aaa group** [*group-name*] Verify the configuration of server group.

Step 5	**end** Return to privileged EXEC mode.
Step 6	**copy running-config startup-config** Save the settings in the configuration file.

The following example shows how to create a RADIUS server group named RADIUS1 and add the existing two RADIUS servers whose IP address is 192.168.0.10 and 192.168.0.20 to the group.

Switch#configure

Switch(config)#aaa group radius RADIUS1

Switch(aaa-group)#server 192.168.0.10

Switch(aaa-group)#server 192.168.0.20

Switch(aaa-group)#show aaa group RADIUS1

192.168.0.10

192.168.0.20

Switch(aaa-group)#end

Switch#copy running-config startup-config

2.2.3 Configuring the Method List

A method list describes the authentication methods and their sequence to authenticate the users. The switch supports Login Method List for users of all types to gain access to the switch, and Enable Method List for guests to get administrative privileges.

Follow these steps to configure the method list:

Step 1	**configure** Enter global configuration mode.
Step 2	**aaa authentication login {** *method-list* **} {** *method1* **} [** *method2* **] [** *method3* **] [** *method4* **]** Configure a login method list. *method-list*: Specify a name for the method list. *method1/method2/method3/method4*: Specify the authentication methods in order. The first method authenticates a user first, the second method is tried if the previous method does not respond, and so on. The default methods include radius, tacacs, local and none. None means no authentication is used for login.

Step 3	**aaa authentication enable {** *method-list* **} {** *method1* **} [** *method2* **] [** *method3* **] [** *method4* **]** Configure an Enable password method list. *method-list*: Specify a name for the method list. *method1/method2/method3/method4*: Specify the authentication methods in order. The default methods include radius, tacacs, local and none. None means no authentication is used for getting administrative privileges.
Step 4	**show aaa authentication** [login | enable] Verify the configuration method list.
Step 5	**end** Return to privileged EXEC mode.
Step 6	**copy running-config startup-config** Save the settings in the configuration file.

The following example shows how to create a Login method list named Login1, and configure the method 1 as the default radius server group and the method 2 as local.

Switch#configure

Switch(config)##aaa authentication login Login1 radius local

Switch(config)#show aaa authentication login

Methodlist	pri1	pri2	pri3	pri4
default	local	--	--	--
Login1	radius	local	--	--

Switch(config)#end

Switch#copy running-config startup-config

The following example shows how to create an Enable method list named Enable1, and configure the method 1 as the default radius server group and the method 2 as local.

Switch#configure

Switch(config)##aaa authentication enable Enable1 radius local

Switch(config)#show aaa authentication enable

Methodlist	pri1	pri2	pri3	pri4
default	local	--	--	--
Enable1	radius	local	--	--

Switch(config)#end

Switch#copy running-config startup-config

2.2.4 Configuring the AAA Application List

You can configure authentication method lists on the following access applications: Console, Telnet, SSH and HTTP.

- Console

Follow these steps to apply the Login and Enable method lists for the application Console:

Step 1	**configure** Enter global configuration mode.
Step 2	**line console** *linenum* Enter line configuration mode. *linenum*: Enter the number of users allowed to login through console port. Its value is 0 in general, for the reason that console input is only active on one console port at a time.
Step 3	**login authentication {** *method-list* **}** Apply the Login method list for the application Console. *method-list*: Specify the name of the Login method list.
Step 4	**enable authentication {** *method-list* **}** Apply the Enable method list for the application Console. *method-list*: Specify the name of the Enable method list.
Step 5	**show aaa global** Verify the configuration of application list.
Step 6	**end** Return to privileged EXEC mode.
Step 7	**copy running-config startup-config** Save the settings in the configuration file.

The following example shows how to apply the existing Login method list named Login1 and Enable method list named Enable1 for the application Console.

Switch#configure

Switch(config)#line console 0

Switch(config-line)#login authentication Login1

Switch(config-line)#enable authentication Enable1

Switch(config-line)#show aaa global

Module	Login List	Enable List
Console	Login1	Enable1
Telnet	default	default
Ssh	default	default
Http	default	default

Switch(config-line)#end

Switch#copy running-config startup-config

- Telnet

Follow these steps to apply the Login and Enable method lists for the application Telnet:

Step 1	**configure** Enter global configuration mode.
Step 2	**line telnet** Enter line configuration mode.
Step 3	**login authentication {** *method-list* **}** Apply the Login method list for the application Telnet. *method-list*: Specify the name of the Login method list.
Step 4	**enable authentication {** *method-list* **}** Apply the Enable method list for the application Telnet. *method-list*: Specify the name of the Enable method list.
Step 5	**show aaa global** Verify the configuration of application list.
Step 6	**end** Return to privileged EXEC mode.
Step 7	**copy running-config startup-config** Save the settings in the configuration file.

The following example shows how to apply the existing Login method list named Login1 and Enable method list named Enable1 for the application Telnet.

Switch#configure

Switch(config)#line telnet

Switch(config-line)#login authentication Login1

Switch(config-line)#enable authentication Enable1

Switch(config-line)#show aaa global

Module	Login List	Enable List
Console	default	default
Telnet	Login1	Enable1
Ssh	default	default
Http	default	default

Switch(config-line)#end

Switch#copy running-config startup-config

- SSH

Follow these steps to apply the Login and Enable method lists for the application SSH:

Step 1	**configure** Enter global configuration mode.
Step 2	**line ssh** Enter line configuration mode.
Step 3	**login authentication {** *method-list* **}** Apply the Login method list for the application SSH. *method-list*: Specify the name of the Login method list.
Step 4	**enable authentication {** *method-list* **}** Apply the Enable method list for the application SSH. *method-list*: Specify the name of the Enable method list.
Step 5	**show aaa global** Verify the configuration of application list.
Step 6	**end** Return to privileged EXEC mode.
Step 7	**copy running-config startup-config** Save the settings in the configuration file.

The following example shows how to apply the existing Login method list named Login1 and Enable method list named Enable1 for the application SSH.

Switch#configure

Switch(config)#line ssh

Switch(config-line)#login authentication Login1

Switch(config-line)#enable authentication Enable1

Switch(config-line)#show aaa global

Module	Login List	Enable List
Console	default	default
Telnet	default	default
Ssh	Login1	Enable1
Http	default	default

Switch(config-line)#end

Switch#copy running-config startup-config

- HTTP

Follow these steps to apply the Login and Enable method lists for the application HTTP:

Step 1	**configure** Enter global configuration mode.
Step 2	**ip http login authentication {** *method-list* **}** Apply the Login method list for the application HTTP. *method-list*: Specify the name of the Login method list.
Step 3	**ip http enable authentication {** *method-list* **}** Apply the Enable method list for the application HTTP. *method-list*: Specify the name of the Enable method list.
Step 4	**show aaa global** Verify the configuration of application list.
Step 5	**end** Return to privileged EXEC mode.
Step 6	**copy running-config startup-config** Save the settings in the configuration file.

The following example shows how to apply the existing Login method list named Login1 and Enable method list named Enable1 for the application HTTP:

Switch#configure

Switch(config)#ip http login authentication Login1

Switch(config)#ip http enable authentication Enable1

Switch(config)#show aaa global

Module	Login List	Enable List
Console	default	default
Telnet	default	default
Ssh	default	default
Http	Login1	Enable1

Switch(config)#end

Switch#copy running-config startup-config

2.2.5 Configuring Login Account and Enable Password

The login account and Enable password can be configured locally on the switch or centrally on the RADIUS/TACACS+ server(s).

- On the Switch

The local username and password for login can be configured in the User Management feature. For details, refer to *Managing System*.

To configure the local Enable password for getting administrative privileges, follow these steps:

Step 1	**configure** Enter global configuration mode.
Step 2	**enable admin password {** [0] *password* **|** 7 *encrypted-password* **}** Set the Enable password. This command uses symmetric encryption. 0 and 7 represent the encryption type. 0 indicates that an unencrypted key will follow. 7 indicates that a symmetric encrypted key with a fixed length will follow. By default, the encryption type is 0. *password* is a string from 1 to 31 alphanumeric characters or symbols. *encrypted-password* is a symmetric encrypted key with a fixed length, which you can copy from the configuration file of another switch. The key or encrypted-key you configured here will be displayed in the encrypted form. **enable admin secret {** [0] *password* **|** 5 *encrypted-password* **}** Set the Enable password. This command uses MD5 encryption. 0 and 5 are the encryption type. 0 indicates that an unencrypted key will follow. 5 indicates that an MD5 encrypted password with fixed length will follow. By default, the encryption type is 0. *password* is a string from 1 to 31 alphanumeric characters or symbols. *encrypted-password* is an MD5 encrypted password with fixed length, which you can copy from another switch's configuration file.
Step 3	**end** Return to privileged EXEC mode.

Step 4	**copy running-config startup-config** Save the settings in the configuration file.

On the Server

The accounts created by the RADIUS/TACACS+ server can only view the configurations and some network information without the Enable password.

Some configuration principles on the server are as follows:

- For Login authentication configuration, more than one login account can be created on the server. Besides, both the user name and password can be customized.

- For Enable password configuration:

  On RADIUS server, the user name should be set as **$enable$**, and the Enable password is customizable. All the users trying to get administrative privileges share this Enable password.

  On TACACS+ server, configure the value of "enable 15" as the Enable password in the configuration file. All the users trying to get administrative privileges share this Enable password.

Tips: The logged-in guests can get administrative privileges by using the command **enable-admin** and providing the Enable password.


3 Configuration Examples

3.1 Network Requirements

As shown below, the switch needs to be managed remotely via Telnet. In addition, the senior administrator of the company wants to create an account for the less senior administrators, who can only view the configurations and some network information without the Enable password provided.

Two RADIUS servers are deployed in the network to provide a safer authenticate method for the administrators trying to log in or get administrative privileges. If RADIUS Server 1 breaks down and doesn't respond to the authentication request, RADIUS Server 2 will work, so as to ensure the stability of the authentication system.

Figure 3-1 Network Topology

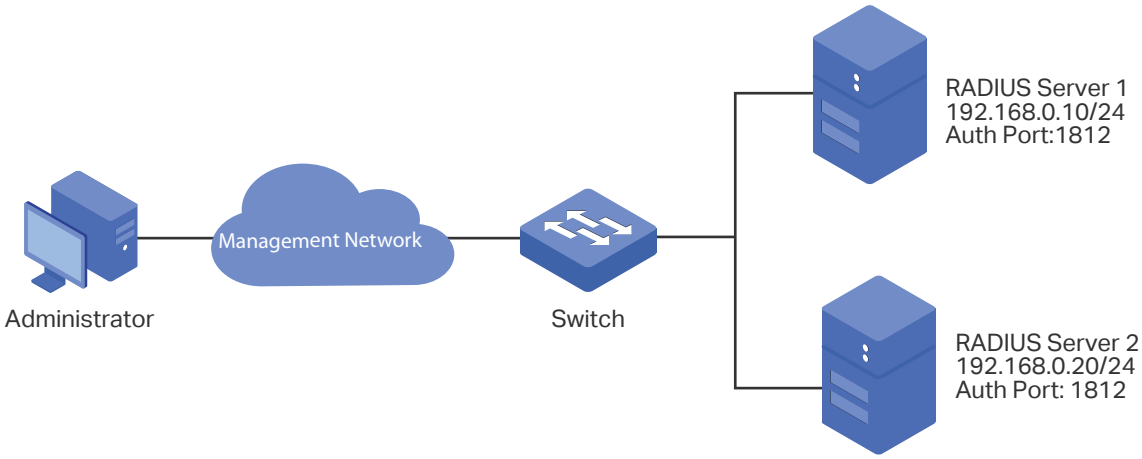

3.2 Configuration Scheme

To implement this requirement, the senior administrator can create the login account and the Enable password on the two RADIUS servers, and configure the AAA feature on the switch. The IP addresses of the two RADIUS servers are 192.168.0.10/24 and 192.168.0.20/24; the authentication port number is 1812; the shared key is 123456.

The overview of configuration on the switch is as follows:


1) Add the two RADIUS servers on the switch.
2) Create a new RADIUS server group and add the two servers to the group. Make sure that RADIUS Server 1 is the first server for authentication.
3) Configure the method list.
4) Configure the AAA application list.

Demonstrated with T2600G-28TS, the following sections provide configuration procedure in two ways: using the GUI and using the CLI.

3.3 Using the GUI


1) Choose the menu **SECURITY > AAA > RADIUS Config** and click Add to load the following page. Configure the Server IP as 192.168.0.10, the Shared Key as 123456, the Authentication Port as 1812, and keep the other parameters as default. Click **Create** to add RADIUS Server 1 on the switch.

Figure 3-2 Add RADIUS Server 1

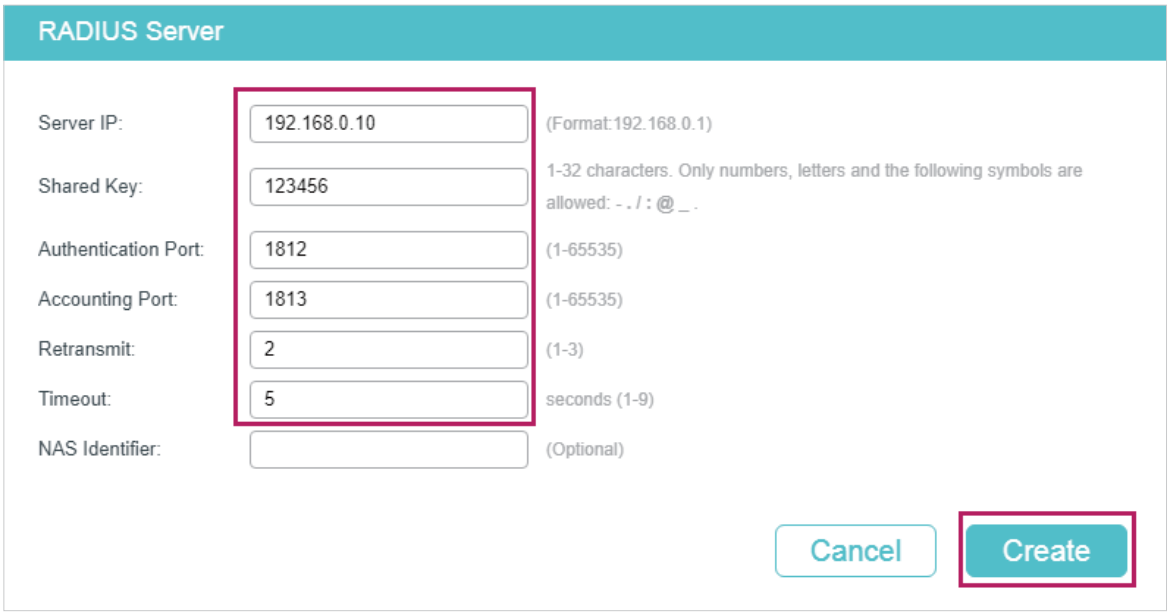


2) On the same page, click Add to load the following page. Configure the Server IP as 192.168.0.20, the Shared Key as 123456, the Auth Port as 1812, and keep the other parameters as default. Click **Create** to add RADIUS Server 2 on the switch

Figure 3-3 Add RADIUS Server 2

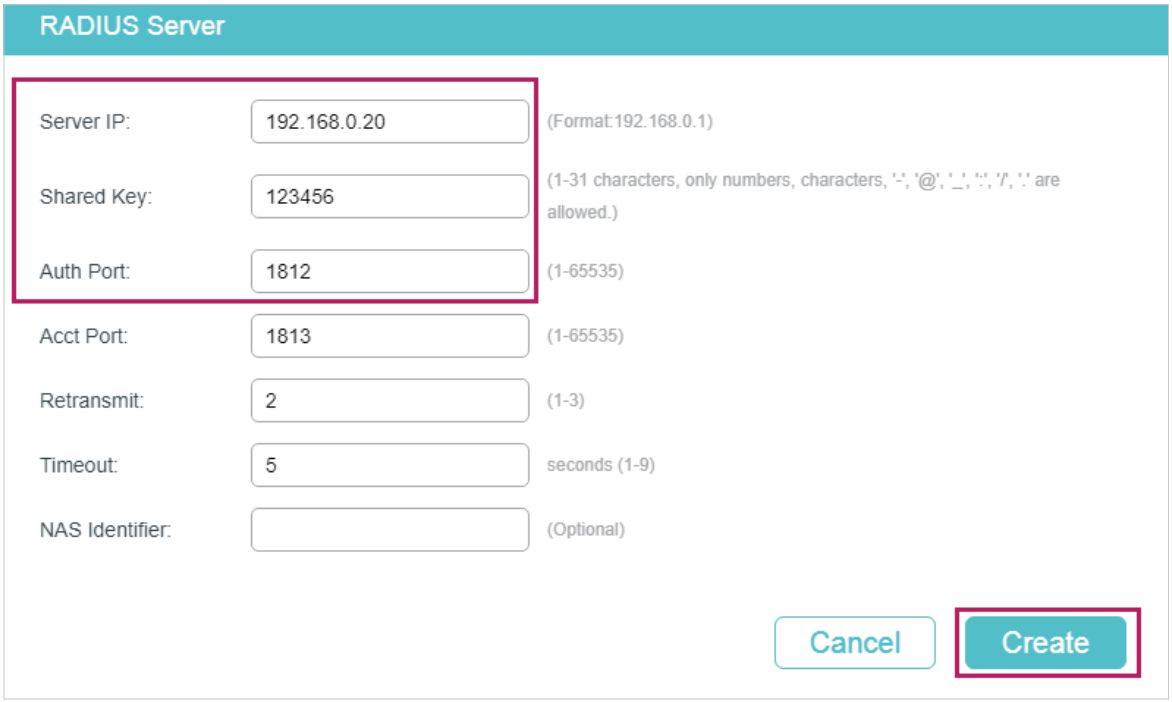


3) Choose the menu **SECURITY > AAA > Server Group** to load the following page. Click Add. Specify the group name as RADIUS1 and the server type as RADIUS. Select 192.168.0.10 and 192.168.0.20 to from the drop-down list. Click **Create** to create the server group.

Figure 3-4 Create Server Group

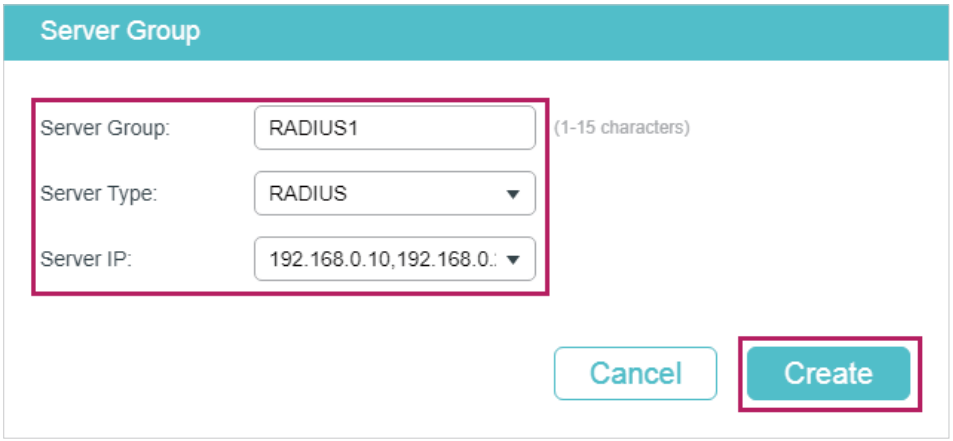


4) Choose the menu **SECURITY > AAA > Method Config** and click Add in the **Authentication Login Method Config** section. Specify the Method List Name as MethodLogin and select the Pri1 as RADIUS1. Click **Create** to set the method list for the Login authentication.

Figure 3-5 Configure Login Method Config

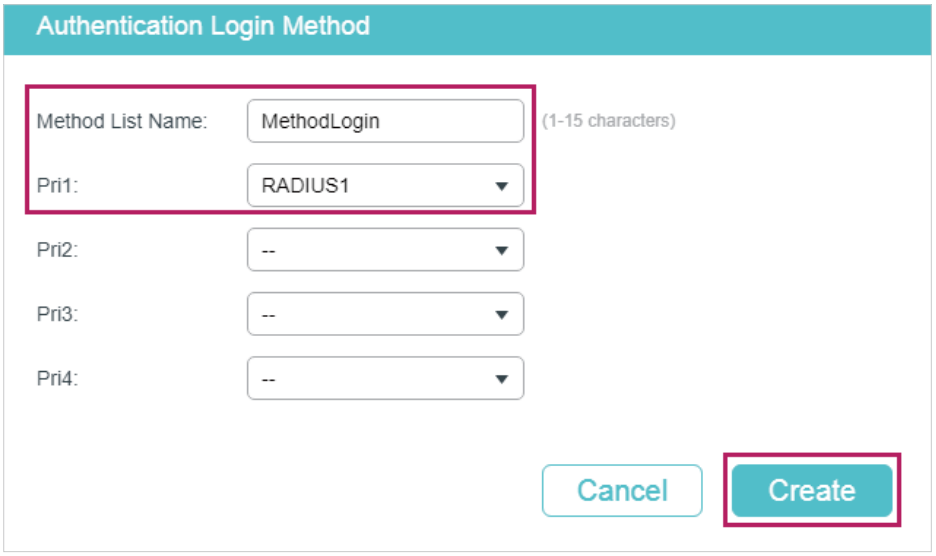


5) On the same page, click Add in the **Authentication Eanble Method Config** section. Specify the Method List Name as MethodEnable and select the Pri1 as RADIUS1. Click **Create** to set the method list for the Enable password authentication.

Figure 3-6 Configure Enable Method Config

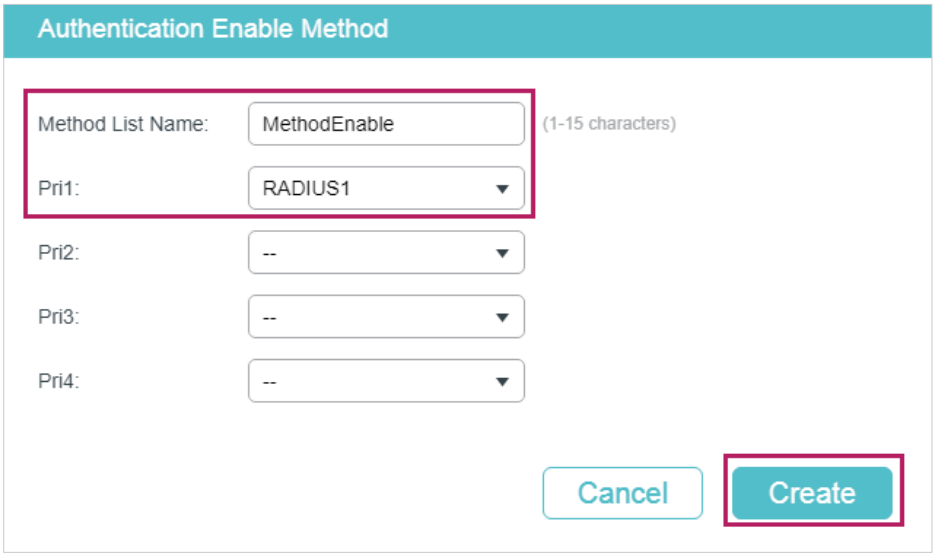

6) Choose the menu **SECURITY > AAA > Global Config** to load the following page. In the **AAA Application List** section, select telnet and configure the Login List as Method-Login and Enable List as Method-Enable. Then click **Apply**.

Figure 3-7 Configure AAA Application Config

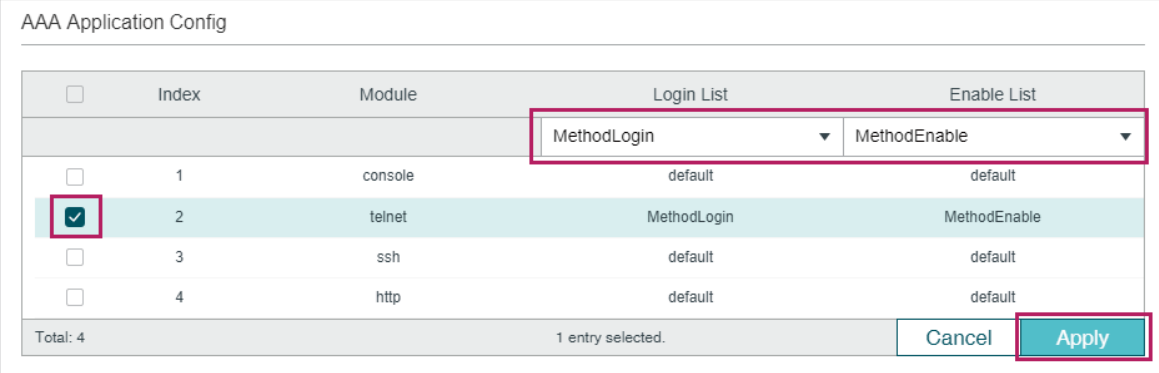

7) Click Save to save the settings.

3.4 Using the CLI

1) Add RADIUS Server 1 and RADIUS Server 2 on the switch.

   Switch(config)#radius-server host 192.168.0.10 auth-port 1812 key 123456

   Switch(config)#radius-server host 192.168.0.20 auth-port 1812 key 123456

2) Create a new server group named RADIUS1 and add the two RADIUS servers to the server group.

   Switch(config)#aaa group radius RADIUS1

   Switch(aaa-group)#server 192.168.0.10

   Switch(aaa-group)#server 192.168.0.20

   Switch(aaa-group)#exit

3) Create two method lists: Method-Login and Method-Enable, and configure the server group RADIUS1 as the authentication method for the two method lists.

   Switch(config)#aaa authentication login Method-Login RADIUS1

   Switch(config)#aaa authentication enable Method-Enable RADIUS1

4) Configure Method-Login and Method-Enable as the authentication method for the Telnet application.

   Switch(config)#line telnet

   Switch(config-line)#login authentication Method-Login

   Switch(config-line)#enable authentication Method-Enable

   Switch(config-line)#end

   Switch#copy running-config startup-config

Verify the Configuration

Verify the configuration of the RADIUS servers:

Switch#show radius-server

Server Ip	Auth Port	Acct Port	Timeout	Retransmit	NAS Identifier	Shared key
192.168.0.10	1812	1813	5	2	000AEB132397	123456
192.168.0.20	1812	1813	5	2	000AEB132397	123456

Verify the configuration of server group RADIUS1:

Switch#show aaa group RADIUS1

192.168.0.10

192.168.0.20

Verify the configuration of the method lists:

Switch#show aaa authentication

Authentication Login Methodlist:

Methodlist	pri1	pri2	pri3	pri4
default	local	--	--	--
Method-Login	RADIUS1	--	--	--

Authentication Enable Methodlist:

Methodlist	pri1	pri2	pri3	pri4
default	none	--	--	--
Method-Enable	RADIUS1	--	--	--

...

Verify the status of the AAA feature and the configuration of the AAA application list:

Switch#show aaa global

Module	Login List	Enable List
Console	default	default
Telnet	Method-Login	Method-Enable
SSH	default	default
Http	default	default

4 Appendix: Default Parameters

Default settings of AAA are listed in the following tables.

Table 4-1 AAA

Parameter	Default Setting
Global Config	
AAA Feature	Enable
RADIUS Config	
Server IP	None
Shared Key	None
Auth Port	1812
Acct Port	1813
Retransmit	2
Timeout	5 seconds
NAS Identifier	The MAC address of the switch.
TACACS+ Config	
Server IP	None
Timeout	5 seconds
Shared Key	None
Port	49
Server Group: There are two default server groups: radius and tacacs.	
Method List	
Authentication Login Method List	List name: default Pri1: local
Authentication Enable Method List	List name: default Pri1: none

Parameter	Default Setting
AAA Application List	
console	Login List: default Enable List: default
telnet	Login List: default Enable List: default
ssh	Login List: default Enable List: default
http	Login List: default Enable List: default

Part 25

Configuring 802.1x

CHAPTERS


1. Overview
2. 802.1x Configuration
3. Configuration Example
4. Appendix: Default Parameters

1 Overview

802.1x protocol is a protocol for port-based Network Access Control. It is used to authenticate and control access from devices connected to the ports. If the device connected to the port is authenticated by the authentication server successfully, its request to access the LAN will be accepted; if not, its request will be denied.

802.1x authentication uses client-server model which contains three device roles: client/supplicant, authenticator and authentication server. This is described in the figure below:

Figure 1-1 802.1x Authentication Model

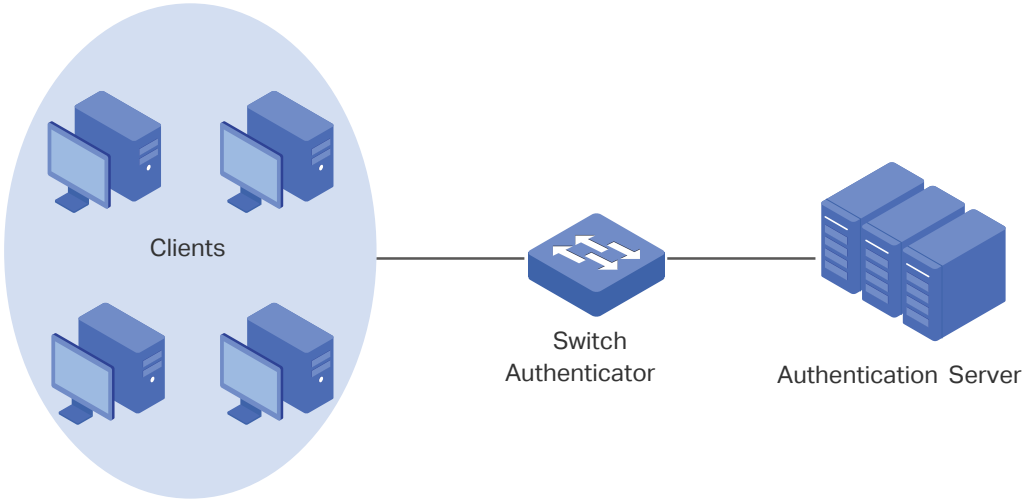

- Client

A client, usually a computer, is connected to the authenticator via a physical port. We recommend that you install TP-Link 802.1x authentication client software on the client hosts, enabling them to request 802.1x authentication to access the LAN.

- Authenticator

An authenticator is usually a network device that supports 802.1x protocol. As the above figure shows, the switch is an authenticator.

The authenticator acts as an intermediate proxy between the client and the authentication server. The authenticator requests user information from the client and sends it to the authentication server; also, the authenticator obtains responses from the authentication server and send them to the client. The authenticator allows authenticated clients to access the LAN through the connected ports but denies the unauthenticated clients.

- Authentication Server

The authentication server is usually the host running the RADIUS server program. It stores information of clients, confirms whether a client is legal and informs the authenticator whether a client is authenticated.

2 802.1x Configuration

To complete the 802.1x configuration, follow these steps:

1) Configure the RADIUS server.
2) Configure 802.1x globally.
3) Configure 802.1x on ports.

In addition, you can view the authenticator state.

Configuration Guidelines

802.1x authentication and Port Security cannot be enabled at the same time. Before enabling 802.1x authentication, make sure that Port Security is disabled.

2.1 Using the GUI


2.1.1 Configuring the RADIUS Server

Configure the parameters of RADIUS sever and configure the RADIUS server group.

- Adding the RADIUS Server

Choose the menu **SECURITY > AAA > RADIUS Config** and click Add to load the following page.

Figure 2-1 Adding RADIUS Server

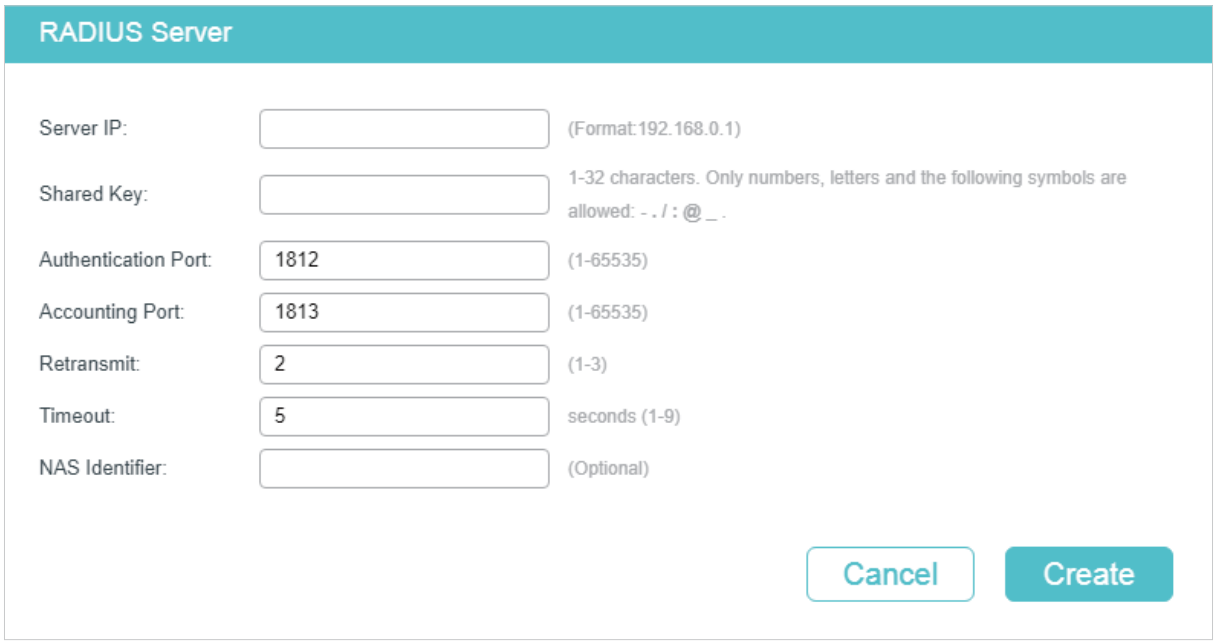

Follow these steps to add a RADIUS server:

1) Configure the parameters of the RADIUS server.


Server IP	Enter the IP address of the server running the RADIUS secure protocol.
Shared Key	Enter the shared key between the RADIUS server and the switch. The RADIUS server and the switch use the key string to encrypt passwords and exchange responses.
Authentication Port	Specify the UDP destination port on the RADIUS server for authentication requests. The default setting is 1812.
Accounting Port	Specify the UDP destination port on the RADIUS server for accounting requests. The default setting is 1813.
Retransmit	Specify the number of times a request is resent to the server if the server does not respond. The default setting is 2.
Timeout	Specify the time interval that the switch waits for the server to reply before resending. The default setting is 5 seconds.
NAS Identifier	Specify the name of the NAS (Network Access Server) to be contained in RADIUS packets for identification. It ranges from 1 to 31 characters. The default value is the MAC address of the switch. Generally, the NAS indicates the switch itself.

2) Click **Apply**.

■ Configuring the RADIUS Server Group

Choose the menu **SECURITY > AAA > Server Group** to load the following page.

Figure 2-2 Adding a Server Group

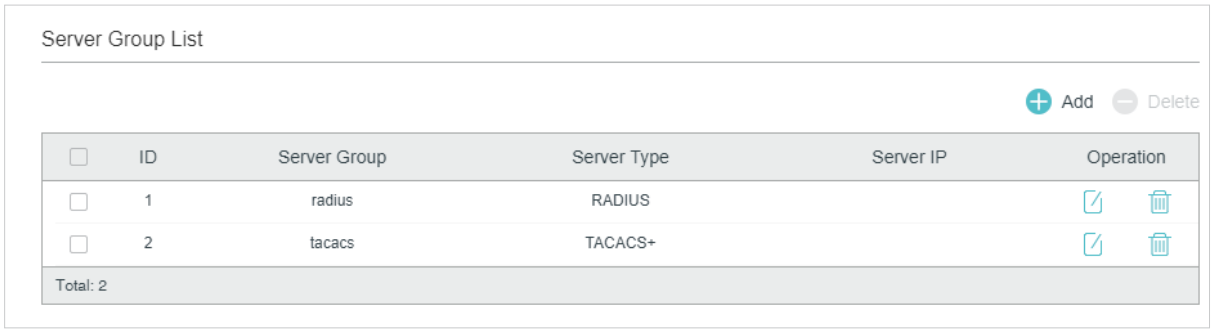


Follow these steps to add the RADIUS server to a server group:

1) Click to edit the default **radius** server group or click Add to add a new server group.


   If you click , the following window will pop up. Select a RADIUS server and click **Save**.

Figure 2-3 Editing Server Group

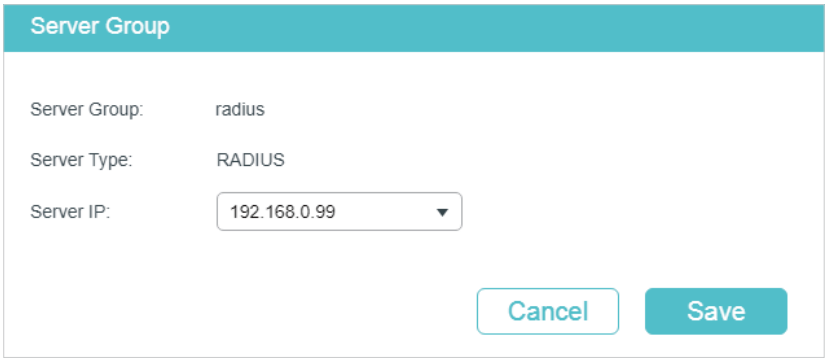

If you click Add , the following window will pop up. Specify a name for the server group, select the server type as RADIUS and select the IP address of the RADIUS server. Click **Save**.


Figure 2-4 Adding Server Group

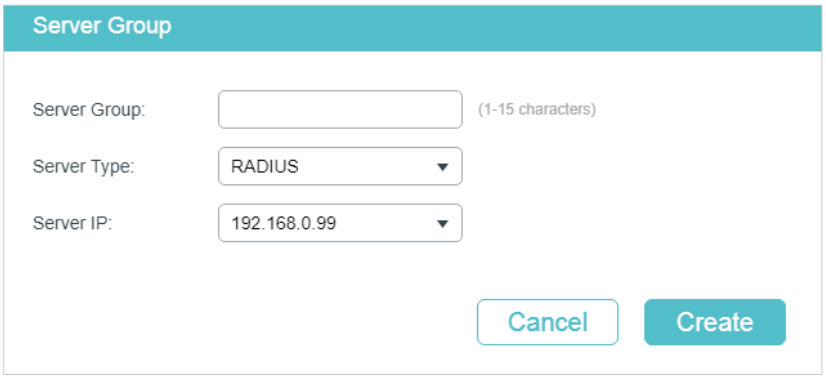

Configuring the Dot1x List

Choose the menu **SECURITY > AAA > Dot1x List** to load the following page.

Figure 2-5 Configuring the Dot1x List

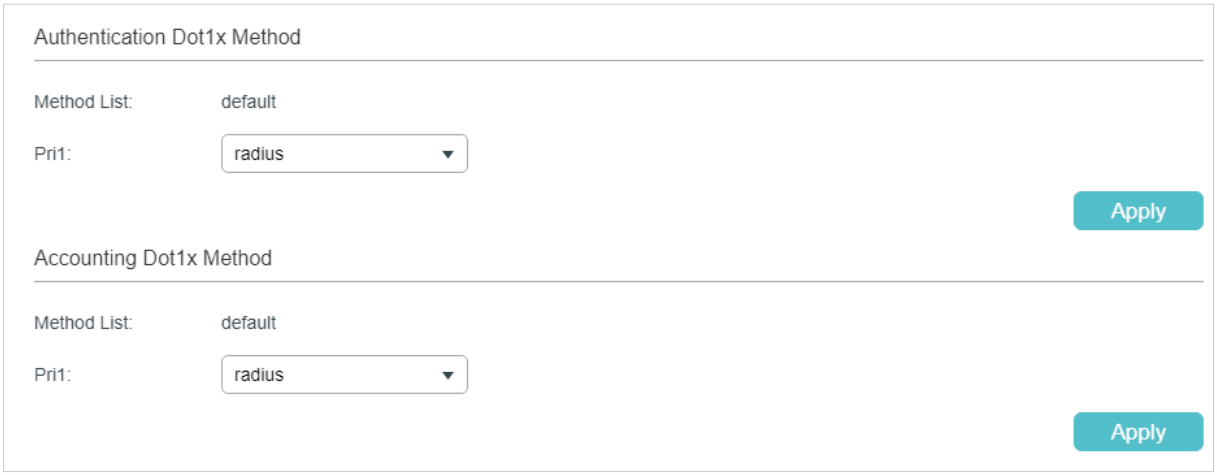

Follow these steps to configure RADIUS server groups for 802.1x authentication and accounting:


1) In the **Authentication Dot1x Method** section, select an existing RADIUS server group for authentication from the Pri1 drop-down list and click **Apply**.

2) In the **Accounting Dot1x Method** section, select an existing RADIUS server group for accounting from the Pri1 drop-down list and click **Apply**.

2.1.2 Configuring 802.1x Globally

Choose the menu **SECURITY > 802.1x > Global Config** to load the following page.

Figure 2-6 Global Config

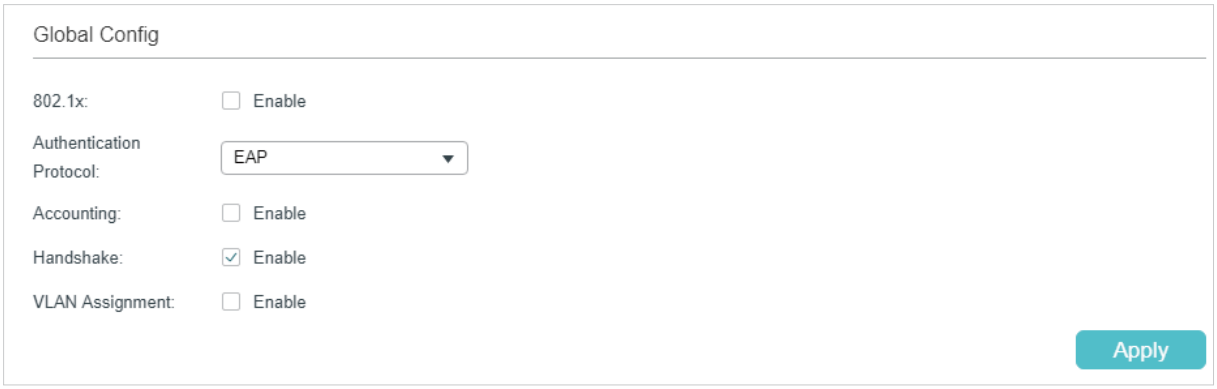

Follow these steps to configure 802.1x global parameters:

1) In the **Global Config** section, configure the following parameters.

802.1x	Enable or disable 802.1x globally.
Auth Protocol	Select the 802.1x authentication protocol. **PAP**: The 802.1x authentication system uses EAP packets to exchange information between the switch and the client. The transmission of EAP (Extensible Authentication Protocol) packets is terminated at the switch and the EAP packets are converted to other protocol (such as RADIUS) packets, and transmitted to the authentication server. **EAP**: The 802.1x authentication system uses EAP packets to exchange information between the switch and the client. The EAP packets with authentication data are encapsulated in the advanced protocol (such as RADIUS) packets, and transmitted to the authentication server.
Accounting	Enable or disable 802.1x accounting feature.
Handshake	Enable or disable the Handshake feature. The Handshake feature is used to detect the connection status between the TP-Link 802.1x Client and the switch. Please disable Handshake feature if you are using other client softwares instead of TP-Link 802.1x Client.


VLAN Assignment	Enable or disable the 802.1x VLAN assignment feature. 802.1x VLAN assignment is a technology allowing the RADIUS server to send the VLAN assignment to the port when the port is authenticated. If the assigned VLAN does not exist on the switch, the switch will create the related VLAN automatically, add the authenticated port to the VLAN and change the PVID based on the assigned VLAN. If the assigned VLAN exists on the switch, the switch will directly add the authenticated port to the related VLAN and change the PVID instead of creating a new VLAN. If no VLAN is supplied by the RADIUS server or if 802.1x authentication is disabled, the port will be in its original VLAN after successful authentication.

2) Click **Apply**.

2.1.3 Configuring 802.1x on Ports

Choose the menu **SECURITY > 802.1x > Port Config** to load the following page.

Figure 2-7 Port Config

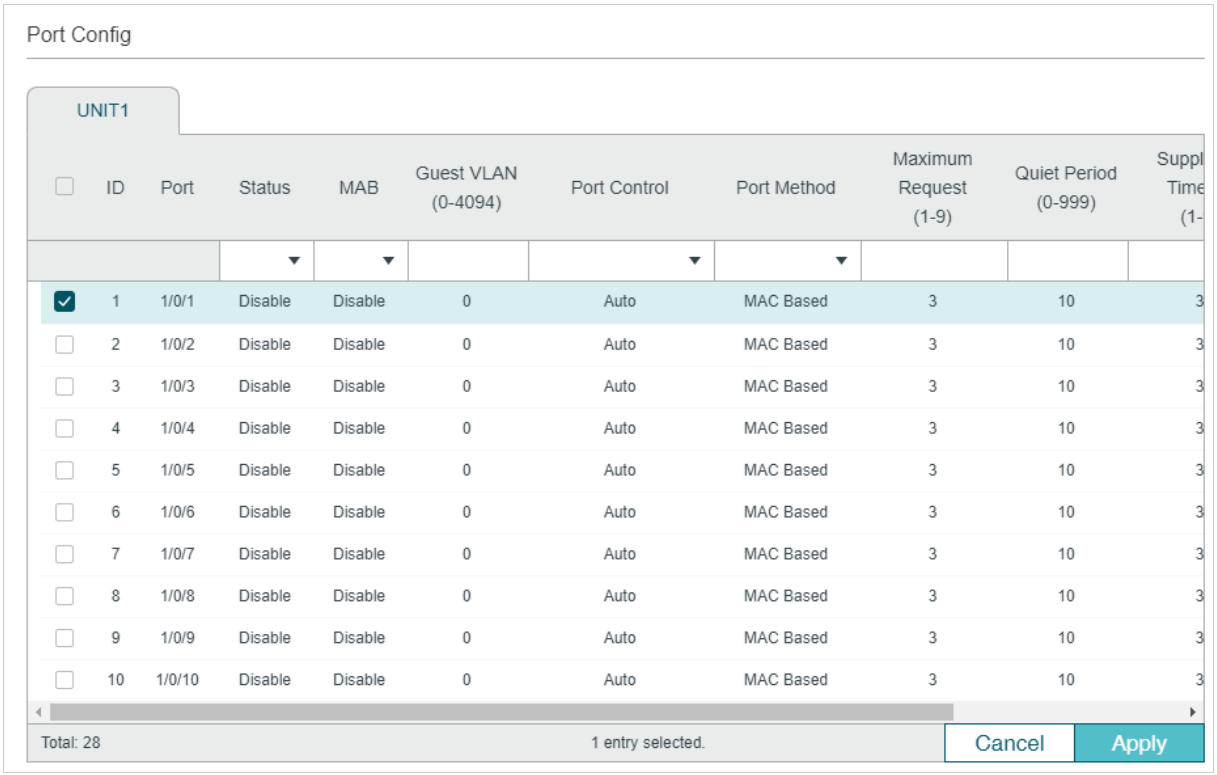

Follow these steps to configure 802.1x authentication on the desired port:

1) Select one or more ports and configure the following parameters:

Status	Enable 802.1x authentication on the port.

MAB	Select whether to enable the MAB (MAC-Based Authentication Bypass) feature for the port. With MAB feature enabled, the switch automatically sends the authentication server a RADIUS access request frame with the client's MAC address as the username and password. It is also necessary to configure the RADIUS server with the client's information for authentication. You can enable this feature on IEEE 802.1x ports connected to devices without 802.1x capability. For example, most printers, IP phones and fax machines do not have 802.1x capability. *Note:* MAB cannot work if Guest VLAN is enabled.
Guest VLAN	Specify a Guest VLAN ID. 0 means that Guest VLAN is disabled. The configured VLAN must be an existing 802.1Q VLAN. With Guest VLAN enabled, a port can access resources in the guest VLAN even though the port is not yet authenticated; if guest VLAN is disabled and the port is not authenticated, the port cannot visit any resource in the LAN.
Port Control	Select the control mode for the port. By default, it is Auto. **Auto**: If this option is selected, the port can access the network only when it is authenticated. **Force-Authorized**: If this option is selected, the port can access the network without authentication. **Force-Unauthorized**: If this option is selected, the port can never be authenticated.
Port Method	Select the port method. By default, it is MAC Based. **MAC Based**: All clients connected to the port need to be authenticated. **Port Based**: If a client connected to the port is authenticated, other clients can access the LAN without authentication.
Maximum Request (1-9)	Specify the maximum number of attempts to send the authentication packet. It ranges from 1 to 9 times and the default is 3 times.
Quiet Period (1-999)	Specify the Quiet Period. It ranges from 1 to 999 seconds and the default time is 10 seconds. The quiet period starts after the authentication fails. During the quiet period, the switch does not process authentication requests from the same client.
Supplicant Timeout (1-9)	Specify the maximum time which the switch waits for a response from the client. It ranges from 1 to 9 seconds and the default time is 3 seconds. If the switch does not receive any reply from the client within the specified time, it will resend the request.
Authorized	Displays whether the port is authorized or not.
LAG	Displays the LAG the port belongs to.

2) Click **Apply**.


Note:

If a port is in an LAG, its 802.1x authentication function cannot be enabled. Also, a port with 802.1x authentication enabled cannot be added to any LAG.

2.1.4 View the Authenticator State

Choose the menu **SECURITY > 802.1x > Authenticator State** to load the following page.

Figure 2-8 View Authenticator State

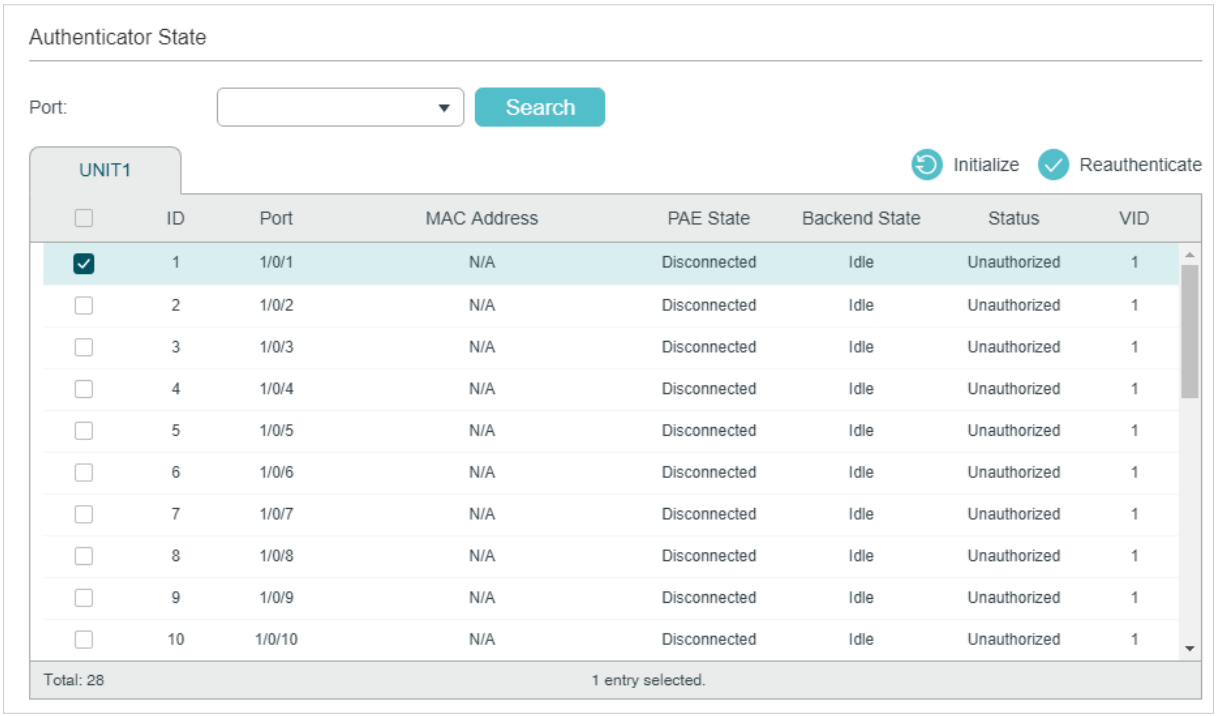

On this page, you can view the authentication status of each port:

Port	Displays the port number.
MAC Address	Displays the MAC address of the authenticated device. When the port method is Port Based, the MAC address of the first authenticated device wil be displayed with a suffix “p”.
PAE State	Displays the current state of the authenticator PAE state machine. Possible values are: Initialize, Disconnected, Connecting, Authenticating, Authenticated, Aborting, Held, ForceAuthorized and ForceUnauthorized.
Backend State	Displays the current state of the backend authentication state machine. Possible values are: Request, Response, Success, Fail, Timeout, Initialize and Idle.
Status	Displays whether the port is authorized or not.
VID	Displays the VLAN ID assigned by the authenticator to the supplicant device when the related port is authorized. If the related port is unauthorized and there is a Guest VLAN ID, the Guest VLAN ID will be displayed.

2.2 Using the CLI

2.2.1 Configuring the RADIUS Server

Follow these steps to configure RADIUS:

Step 1	**configure** Enter global configuration mode.
Step 2	**radius-server host** *ip-address* **[auth-port** *port-id* **] [acct-port** *port-id* **] [timeout** *time* **] [retransmit** *number* **] [nas-id** *nas-id* **] key {** [0] *string* **|** 7 *encrypted-string* **}** Add the RADIUS server and configure the related parameters as needed. **host** *ip-address*: Enter the IP address of the server running the RADIUS protocol. **auth-port** *port-id*: Specify the UDP destination port on the RADIUS server for authentication requests. The default setting is 1812. **acct-port** *port-id:* Specify the UDP destination port on the RADIUS server for accounting requests. The default setting is 1813. Generally, the accounting feature is not used in the authentication account management. **timeout** *time*: Specify the time interval that the switch waits for the server to reply before resending. The valid values are from 1 to 9 seconds and the default setting is 5 seconds. **retransmit** *number*: Specify the number of times a request is resent to the server if the server does not respond. The valid values are from 1 to 3 and the default setting is 2. **nas-id** *nas-id:* Specify the name of the NAS (Network Access Server) to be contained in RADIUS packets for identification. It ranges from 1 to 31 characters. The default value is the MAC address of the switch. Generally, the NAS indicates the switch itself. **key {** [0] *string* **|** 7 *encrypted-string* **}**: Specify the shared key. 0 and 7 prevent the encryption type. 0 indicates that an unencrypted key will follow. 7 indicates that a symmetric encrypted key with a fixed length will follow. By default, the encryption type is 0. *string* is the shared key for the switch and the server, which contains 31 characters at most. *encrypted-string* is a symmetric encrypted key with a fixed length, which you can copy from the configuration file of another switch. The key or encrypted-key you configured here will be displayed in the encrypted form.
Step 3	**aaa group** radius *group-name* Create a RADIUS server group. radius: Specify the group type as radius. *group-name*: Specify a name for the group.
Step 4	**server** *ip-address* Add the existing servers to the server group. *ip-address*: Specify IP address of the server to be added to the group.
Step 5	**exit** Return to global configuration mode.

Step 6	**aaa authentication dot1x default** { *method* } Select the RADIUS group for 802.1x authentication. *method:* Specify the RADIUS group for 802.1x authentication. **aaa accounting dot1x default** { *method* } Select the RADIUS group for 802.1x accounting. *method:* Specify the RADIUS group for 802.1x accounting. *Note*: If multiple RADIUS servers are available, you are suggested to add them to different server groups respectively for authentication and accounting.
Step 7	**show radius-server** (Optional) Verify the configuration of RADIUS server.
Step 8	**show aaa group** [*group-name*] (Optional) Verify the configuration of server group.
Step 9	**show aaa authentication** dot1x (Optional) Verify the authentication method list.
Step 10	**show aaa accounting** dot1x (Optional) Verify the accounting method list.
Step 11	**end** Return to privileged EXEC mode.
Step 12	**copy running-config startup-config** Save the settings in the configuration file.

The following example shows how to enable AAA, add a RADIUS server to the server group named radius1, and apply this server group to the 802.1x authentication. The IP address of the RADIUS server is 192.168.0.100; the shared key is 123456; the authentication port is 1812; the accounting port is 1813.

Switch#configure

Switch(config)#radius-server host 192.168.0.100 **auth-port** 1812 **acct-port** 1813 **key** 123456

Switch(config)#aaa group radius radius1

Switch(aaa-group)#server 192.168.0.100

Switch(aaa-group)#exit

Switch(config)#aaa authentication dot1x default radius1

Switch(config)#aaa accounting dot1x default radius1

Switch(config)#show radius-server

Server Ip	Auth Port	Acct Port	Timeout	Retransmit	NAS Identifier	Shared key
192.168.0.100	1812	1813	5	2	000AEB132397	123456

Switch(config)#show aaa group radius1

192.168.0.100

Switch(config)#show aaa authentication dot1x

Methodlist	pri1	pri2	pri3	pri4
default	radius1	--	--	--

Switch(config)#show aaa accounting dot1x

Methodlist	pri1	pri2	pri3	pri4
default	radius1	--	--	--

Switch(config)#end

Switch#copy running-config startup-config

2.2.2 Configuring 802.1x Globally

Follow these steps to configure 802.1x globally:

Step 1	**configure** Enter global configuration mode.
Step 2	**dot1x system-auth-control** Enable 802.1x authentication globally.

Step 3	**dot1x auth-protocol** { pap | eap } Configure the 802.1x authentication protocol. pap: Specify the authentication protocol as PAP. If this option is selected, the 802.1x authentication system uses EAP (Extensible Authentication Protocol) packets to exchange information between the switch and the client. The transmission of EAP packets is terminated at the switch and the EAP packets are converted to other protocol (such as RADIUS) packets, and transmitted to the authentication server. eap: Specify the authentication protocol as EAP. If this option is selected, the 802.1x authentication system uses EAP packets to exchange information between the switch and the client. The EAP packets with authentication data are encapsulated in the advanced protocol (such as RADIUS) packets, and transmitted to the authentication server.
Step 4	**dot1x accounting** (Optional) Enable the accounting feature.
Step 5	**dot1x handshake** (Optional) Enable the Handshake feature. The Handshake feature is used to detect the connection status between the TP-Link 802.1x Client and the switch. Please disable Handshake feature if you are using other client softwares instead of TP-Link 802.1x Client.
Step 6	**dot1x vlan-assignment** (Optional) Enable or disable the 802.1x VLAN assignment feature. 802.1x VLAN assignment is a technology allowing the RADIUS server to send the VLAN assignment to the port when the port is authenticated. If the assigned VLAN does not exist on the switch, the switch will create the related VLAN automatically, add the authenticated port to the VLAN and change the PVID based on the assigned VLAN. If the assigned VLAN exists on the switch, the switch will directly add the authenticated port to the related VLAN and change the PVID instead of creating a new VLAN. If no VLAN is supplied by the RADIUS server or if 802.1x authentication is disabled, the port will be in its original VLAN after successful authentication.
Step 7	**show dot1x global** (Optional) Verify global configurations of 802.1x.
Step 8	**end** Return to privileged EXEC mode.
Step 9	**copy running-config startup-config** Save the settings in the configuration file.

The following example shows how to enable 802.1x authentication, configure PAP as the authentication method and keep other parameters as default:

Switch#configure

Switch(config)#dot1x system-auth-control

Switch(config)#dot1x auth-protocol pap

Switch(config)#show dot1x global

802.1X State: Enabled

Authentication Protocol: PAP

Handshake State: Enabled

802.1X Accounting State: Disabled

802.1X VLAN Assignment State: Disabled

Switch(config)#end

Switch#copy running-config startup-config

2.2.3 Configuring 802.1x on Ports

Follow these steps to configure the port:

Step 1	**configure** Enter global configuration mode.
Step 2	**interface {fastEthernet** *port* **| range fastEthernet** *port-list* **| gigabitEthernet** *port* **| range gigabitEthernet** *port-list* **| ten-gigabitEthernet** *port* **| range ten-gigabitEthernet** *port-list* **}** Enter interface configuration mode. *port:* Enter the ID of the port to be configured.
Step 3	**dot1x** Enable 802.1x authentication for the port.
Step 4	**dot1x mab** Enable the MAB (MAC-Based Authentication Bypass) feature for the port. With MAB feature enabled, the switch automatically sends the authentication server a RADIUS access request frame with the client's MAC address as the username and password. It is also necessary to configure the RADIUS server with the client's information for authentication. You can enable this feature on IEEE 802.1x ports connected to devices without 802.1x capability. For example, most printers, IP phones and fax machines do not have 802.1x capability. *Note:* MAB cannot work if Guest VLAN is enabled.

Step 5	**dot1x guest-vlan** *vid* (Optional) Configure guest VLAN on the port. *vid:* Specify the ID of the VLAN to be configured as the guest VLAN. The valid values are from 0 to 4094. 0 means that Guest VLAN is disabled on the port. The configured VLAN must be an existing 802.1Q VLAN. Clients in the guest VLAN can only access resources from specific VLANs. *Note*: To use Guest VLAN, the control type of the port should be configured as port-based.
Step 6	**dot1x port-control** { auto | authorized-force | unauthorized-force } Configure the control mode for the port. By default, it is auto. auto: If this option is selected, the port can access the network only when it is authenticated. authorized-force: If this option is selected, the port can access the network without authentication. unauthorized-force: If this option is selected, the port can never be authenticated.
Step 7	**dot1x port-method** { mac-based | port-based } Configure the control type for the port. By default, it is mac-based. mac-based**:** All clients connected to the port need to be authenticated. port-based**:** If a client connected to the port is authenticated, other clients can access the LAN without authentication.
Step 8	**dot1x max-req** *times* Specify the maximum number of attempts to send the authentication packet for the client. *times:* The maximum attempts for the client to send the authentication packet. It ranges from 1 to 9 and the default is 3.
Step 9	**dot1x quiet-period** [time] (Optional) Enable the quiet feature for 802.1x authentication and configure the quiet period. time: Set a value between 1 and 999 seconds for the quiet period. It is 10 seconds by default. The quiet period starts after the authentication fails. During the quiet period, the switch does not process authentication requests from the same client.
Step 10	**dot1x timeout supp-timeout** *time* Configure the supplicant timeout period. *time*: Specify the maximum time for which the switch waits for response from the client. It ranges from 1 to 9 seconds and the default time is 3 seconds. If the switch does not receive any reply from the client within the specified time, it will resend the request.
Step 11	**show dot1x interface [fastEthernet** *port* **|gigabitEthernet** *port* **| ten-gigabitEthernet** *port***]** (Optional) Verify the configurations of 802.1x authentication on the port. *port:* Enter the ID of the port to be configured. If no specific port is entered, the switch will show configurations of all ports.

Step 12	**end** Return to privileged EXEC mode.
Step 13	**copy running-config startup-config** Save the settings in the configuration file.

The following example shows how to enable 802.1x authentication on port 1/0/2, configure the control type as port-based, and keep other parameters as default:

Switch#configure

Switch(config)#interface gigabitEthernet 1/0/2

Switch(config-if)#dot1x

Switch(config-if)#dot1x port-method port-based

Switch(config-if)#show dot1x interface gigabitEthernet 1/0/2

Port	State	MAB State	GuestVLAN	PortControl	PortMethod
----	-----	---------	---------	----------	----------
Gi1/0/2	disabled	disabled	0	auto	port-based

MaxReq	QuietPeriod	SuppTimeout	Authorized	LAG
------	----------	----------	----------	---
3	10	3	unauthorized	N/A

Switch(config-if)#end

Switch#copy running-config startup-config

2.2.4 Viewing Authenticator State

You can view the authenticator state. If needed, you can also initialize or reauthenticate the specific client:

Step 1	**show dot1x auth-state** Displays the authenticator state.
Step 2	**configure** Enter global configuration mode.

Step 3	**interface {fastEthernet** *port* **| range fastEthernet** *port-list* **| gigabitEthernet** *port* **| range gigabitEthernet** *port-list* **| ten-gigabitEthernet** *port* **| range ten-gigabitEthernet** *port-list***}** Enter interface configuration mode. *port:* Enter the ID of the port to be configured.
Step 4	**dot1x auth-init** [**mac** *mac-address*] Initialize the specific client. To access the network, the client needs to provide the correct information to pass the authentication again. *mac-address:* Enter the MAC address of the client that will be unauthorized.
Step 5	**dot1x auth-reauth** [**mac** *mac-address*] Reauthenticate the specific client. *mac-address:* Enter the MAC address of the client that will be reauthenticated.
Step 6	**end** Return to privileged EXEC mode.
Step 7	**copy running-config startup-config** Save the settings in the configuration file.

3 Configuration Example

3.1 Network Requirements

The network administrator wants to control access from the end users (clients) in the company. It is required that all clients need to be authenticated separately and only the authenticated clients can access the internet.


3.2 Configuration Scheme

- To authenticate clients separately, enable 802.1x authentication, configure the control mode as auto, and set the control type as MAC based.
- Enable 802.1x authentication on the ports connected to clients.
- Keep 802.1x authentication disabled on ports connected to the authentication server and the internet, which ensures unrestricted connections between the switch and the authentication server or the internet.

3.3 Network Topology

As shown in the following figure, Switch A acts as the authenticator. Port 1/0/1 is connected to the client, port 1/0/2 is connected to the RADIUS server, and port 1/0/3 is connected to the internet.

Figure 3-1 Network Topology

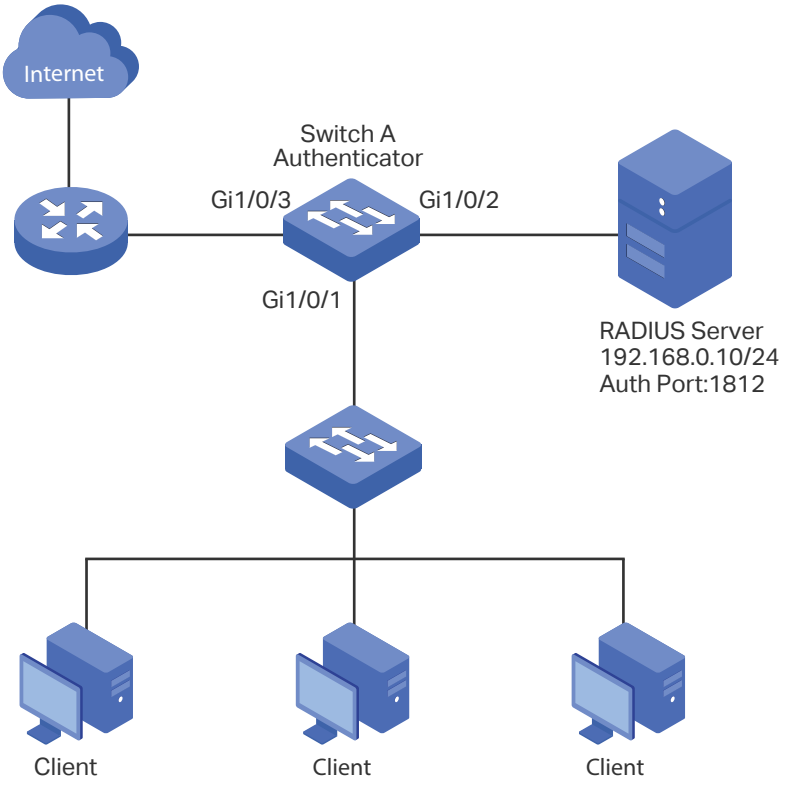


Demonstrated with T2600G-28TS acting as the authenticator, the following sections provide configuration procedure in two ways: using the GUI and using the CLI.

3.4 Using the GUI


1) Choose the menu **SECURITY > AAA > RADIUS Config** and click Add to load the following page. Configure the parameters of the RADIUS server and click **Create**.

Figure 3-2 Adding RADIUS Server

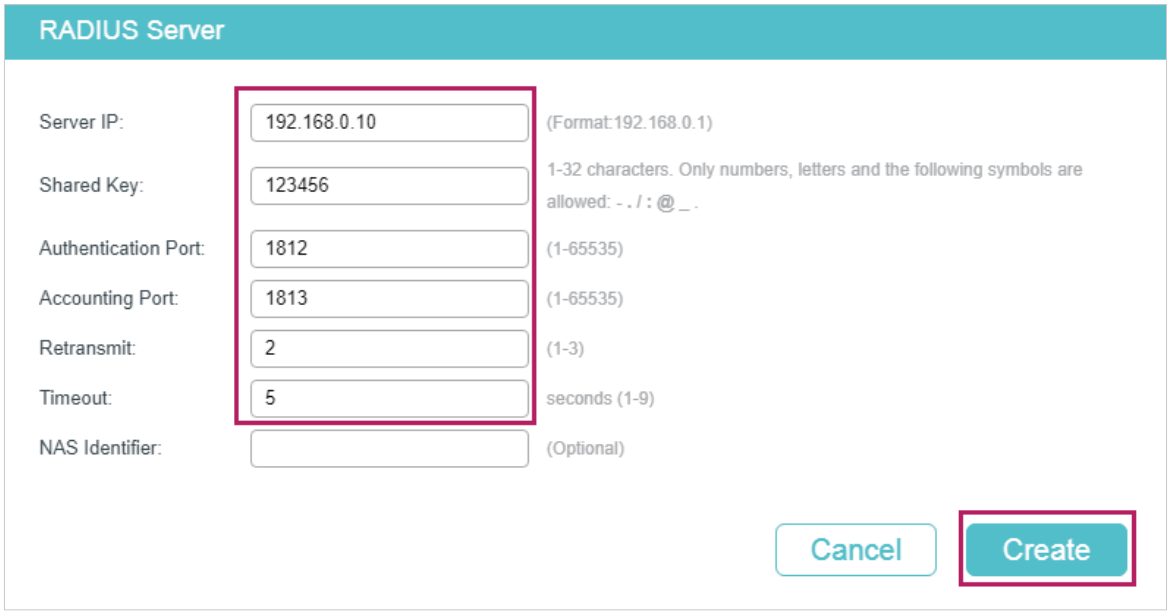


2) Choose the menu **SECURITY > AAA > Server Group** and click Add to load the following page. Specify the group name as RADIUS1, select the server type as RADIUS and server IP as 192.168.0.10. Click **Create**.

Figure 3-3 Creating Server Group

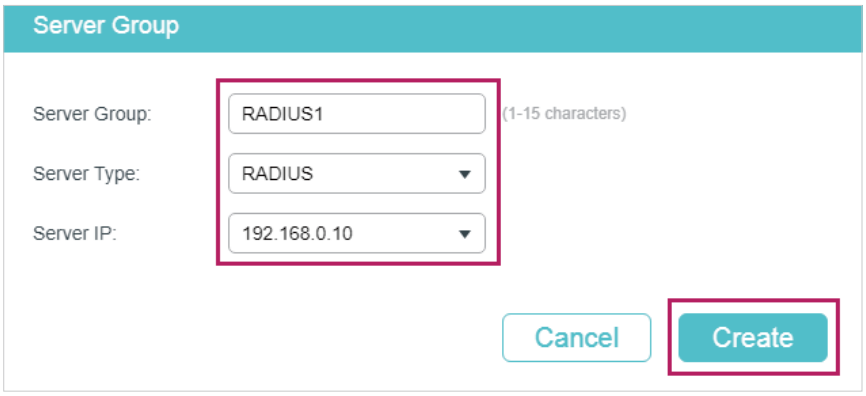


3) Choose the menu **SECURITY > AAA > Dot1x List** to load the following page. In the **Authentication Dot1x Method** section, select RADIUS1 as the RADIUS server group for authentication, and click **Apply**.

Figure 3-4 Configuring Authentication RADIUS Server

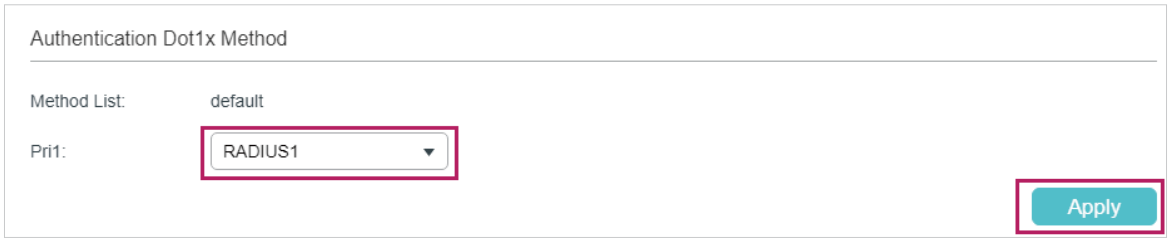


4) Choose the menu **SECURITY > 802.1x > Global Config** to load the following page. Enable 802.1x authentication and configure the Authentication Method as EAP. Keep the default authentication settings. Click **Apply**.

Figure 3-5 Configuring Global Settings

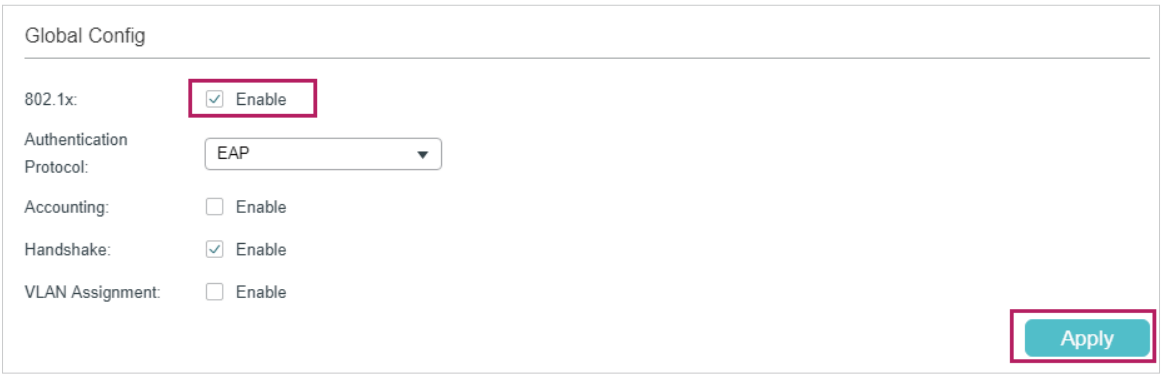

5) Choose the menu **SECURITY > 802.1x > Port Config** to load the following page. For port 1/0/1, enable 802.1x authentication, set the Control Mode as auto and set the Control Type as MAC Based; For port 1/0/2 and port 1/0/3, disable 802.1x authentication.

Figure 3-6 Configuring Port

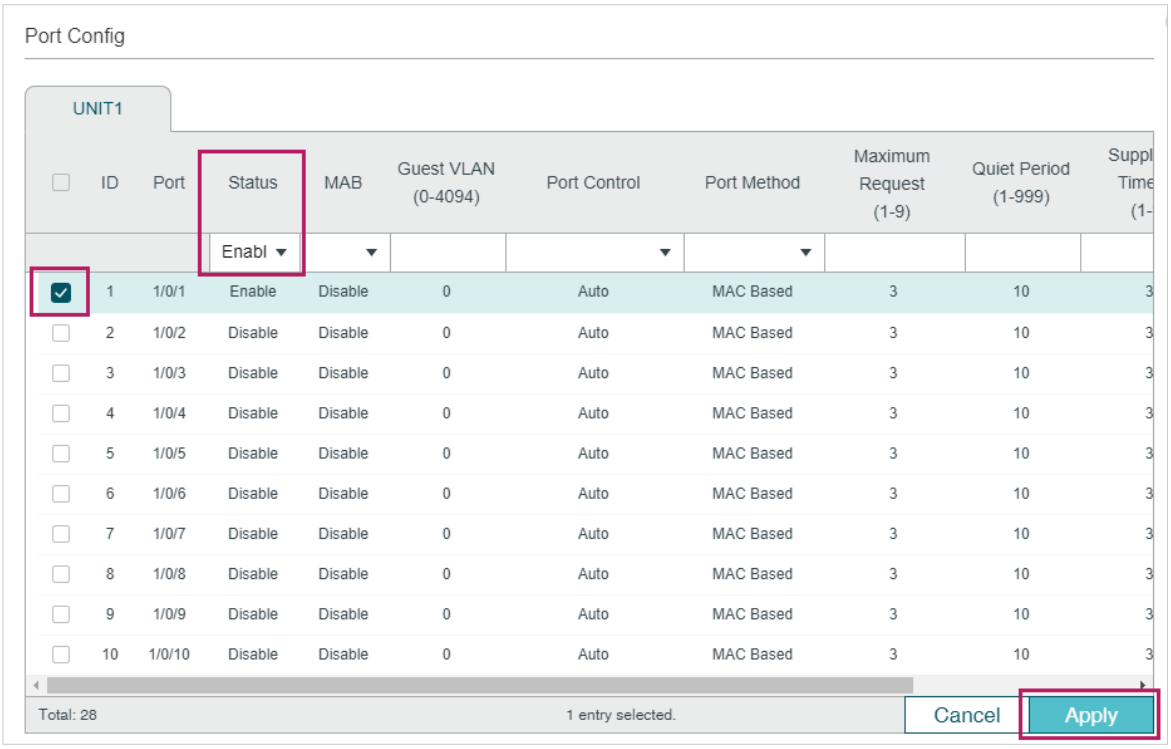

6) Click Save to save the settings.

3.5 Using the CLI

1) Configure the RADIUS parameters.

Switch_A(config)#radius-server host 192.168.0.10 auth-port 1812 key 123456

Switch_A(config)#aaa group radius RADIUS1

Switch_A(aaa-group)#server 192.168.0.10

Switch_A(aaa-group)#exit

Switch_A(config)#aaa authentication dot1x default RADIUS1

2) Globally enable 802.1x authentication and set the authentication protocol.

Switch_A(config)#dot1x system-auth-control

Switch_A(config)#dot1x auth-protocol eap

3) Disable 802.1x authentication on port 1/0/2 and port 1/0/3. Enable 802.1x authentication on port 1/0/1, set the control mode as auto, and set the control type as MAC based.

Switch_A(config)#interface gigabitEthernet 1/0/2

Switch_A(config-if)#no dot1x

Switch_A(config-if)#exit

```
Switch_A(config)#interface gigabitEthernet 1/0/3
Switch_A(config-if)#no dot1x
Switch_A(config-if)#exit
Switch_A(config)#interface gigabitEthernet 1/0/1
Switch_A(config-if)#dot1x
Switch_A(config-if)#dot1x port-method mac-based
Switch_A(config-if)#dot1x port-control auto
Switch_A(config-if)#exit
```

Verify the Configurations

Verify the global configurations of 802.1x authentication:

```
Switch_A#show dot1x global
 802.1X State:                Enabled
 Authentication Protocol:     EAP
 Handshake State:             Enabled
 802.1X Accounting State:     Disabled
 802.1X VLAN Assignment State:  Disabled
```

Verify the configurations of 802.1x authentication on the port:

```
Switch_A#show dot1x interface
Port       State      MAB State   GuestVLAN   PortControl     PortMethod
----       -----      ---------   ---------   -----------     ----------
Gi1/0/1    enabled    disabled    0           auto            mac-based
Gi1/0/2    disabled   disabled    0           auto            mac-based
Gi1/0/3    disabled   disabled    0           auto            mac-based
...
MaxReq   QuietPeriod   SuppTimeout   Authorized      LAG
------   -----------   -----------   ----------      ---
3        10            3             unauthorized    N/A
3        10            3             unauthorized    N/A
3        10            3             unauthorized    N/A
```

...

Verify the configurations of RADIUS :

Switch_A#show aaa global

Module	Login List	Enable List
Console	default	default
Telnet	default	default
Ssh	default	default
Http	default	default

Switch_A#show aaa authentication dot1x

Methodlist	pri1	pri2	pri3	pri4
default	RADIUS1	--	--	--

Switch_A#show aaa group RADIUS1

192.168.0.10

4 Appendix: Default Parameters

Default settings of 802.1x are listed in the following table.

Table 4-1 Default Settings of 802.1x

Parameter	Default Setting
Global Config	
802.1x Authentication	Disable
Authentication Method	EAP
Handshake	Enable
Accounting	Disable
VLAN Assignment	Disable
Port Config	
802.1x Status	Disable
MAB	Disable
Guest VLAN	Disable
Port Control	Auto
Guest VLAN	0
Maximum Request	3
Quiet Period	10 seconds
Supplicant Timeout	3 seconds
Port Method	MAC Based
Dot1X List	
Authentication Dot1x Method List	List Name: default Pri1: radius
Accounting Dot1x Method List	List Name: default Pri1: radius

Part 26

Configuring Port Security

CHAPTERS

1. Overview
2. Port Security Configuration
3. Appendix: Default Parameters

1 Overview


You can use the Port Security feature to limit the number of MAC addresses that can be learned on each port, thus preventing the MAC address table from being exhausted by the attack packets. In addtion, the switch can send a notification if the number of learned MAC addresses on the port exceeds the limit.

2 Port Security Configuration

2.1 Using the GUI

Choose the menu **SECURITY > Port Security** to load the following page.

Figure 2-1 Port Security

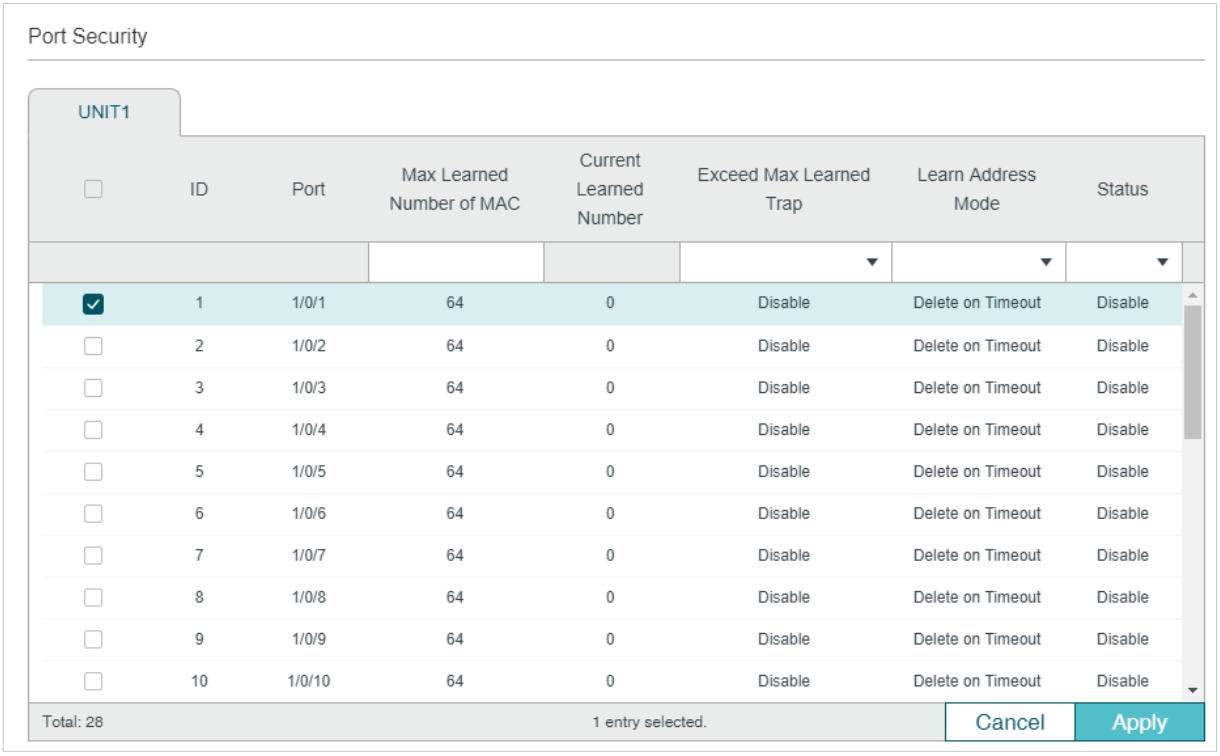

Follow these steps to configure Port Security:

1) Select one or more ports and configure the following parameters.

Port	Displays the port number.
Max Learned Number of MAC	Specify the maximum number of MAC addresses that can be learned on the port. When the learned MAC address number reaches the limit, the port will stop learning. It ranges from 0 to 64. The default value is 64.
Current Learned MAC	Displays the current number of MAC addresses that have been learned on the port.
Exceed Max Learned Trap	Enable Exceed Max Learned, and when the maximum number of learned MAC addresses on the specified port is exceeded, a notification will be generated and sent to the management host.

Learn Address Mode	Select the learn mode of the MAC addresses on the port. Three modes are provided: **Delete on Timeout**: The switch will delete the MAC addresses that are not used or updated within the aging time. It is the default setting. **Delete on Reboot**: The learned MAC addresses are out of the influence of the aging time and can only be deleted manually. The learned entries will be cleared after the switch is rebooted. **Permanent**: The learned MAC addresses are out of the influence of the aging time and can only be deleted manually. The learned entries will be saved even the switch is rebooted.
Status	Select the status of Port Security. Three kinds of status can be selected: **Drop**: When the number of learned MAC addresses reaches the limit, the port will stop learning and discard the packets with the MAC addresses that have not been learned. **Forward**: When the number of learned MAC addresses reaches the limit, the port will stop learning but send the packets with the MAC addresses that have not been learned. **Disable**: The number limit on the port is not effective, and the switch follows the original forwarding rules. It is the default setting.

2) Click **Apply**.

Note:

- Port Security cannot be enabled on the member ports of a LAG, and the port with Port Security enabled cannot be added to a LAG.
- On one port, Port Security and 802.1x cannot be enabled at the same time.

2.2 Using the CLI

Follow these steps to configure Port Security:

Step 1	**configure** Enter global configuration mode.
Step 2	**interface { fastEthernet** *port* **| range fastEthernet** *port-list* **| gigabitEthernet** *port* **| range gigabitEthernet** *port-list* **| ten-gigabitEthernet** *port* **| range ten-gigabitEthernet** *port-list* **}** Enter interface configuration mode.

Step 3	**mac address-table max-mac-count { [max-number** *num*] **[exceed-max-learned** enable | disable**] [mode** { dynamic | static | permanent } **] [status** { forward | drop | disable } **]}** Enable the port security feature of the port and configure the related parameters. *num*: The maximum number of MAC addresses that can be learned on the port. The valid values are from 0 to 64. The default value is 64. **exceed-max-learned:** With exceed-max-learned enabled, when the maximum number of MAC addresses on the specified port is exceeded, a notification will be generated and sent to the management host. enable: Enable exceed-max-learned. disable: Disable exceed-max-learned. **mode**: Learn mode of the MAC address. There are three modes: dynamic: The switch will delete the MAC addresses that are not used or updated within the aging time. static: The learned MAC addresses are out of the influence of the aging time and can only be deleted manually. The learned entries will be cleared after the switch is rebooted. permanent: The learned MAC address is out of the influence of the aging time and can only be deleted manually. The learned entries will be saved even the switch is rebooted. **status**: Status of port security feature. By default, it is disabled. drop: When the number of learned MAC addresses reaches the limit, the port will stop learning and discard the packets with the MAC addresses that have not been learned. forward: When the number of learned MAC addresses reaches the limit, the port will stop learning but send the packets with the MAC addresses that have not been learned. disable: The number limit on the port is not effective, and the switch follows the original forwarding rules. It is the default setting.
Step 4	**show mac address-table max-mac-count interface { fastEthernet** *port* **| gigabitEthernet** *port* **| ten-gigabitEthernet** *port* **}** Verify the Port Security configuration and the current learned MAC addresses of the port.
Step 5	**end** Return to privileged EXEC mode.
Step 6	**copy running-config startup-config** Save the settings in the configuration file.

Note:

- Port Security cannot be enabled on the member port of a LAG, and the port with Port Security enabled cannot be added to a LAG.
- On one port, Port Security and 802.1x cannot be enabled at the same time.

The following example shows how to set the maximum number of MAC addresses that can be learned on port 1/0/1 as 30, enable exceed-max-leaned feature and configure the mode as permanent and the status as drop:

Switch#configure

Switch(config)#interface gigabitEthernet 1/0/1

Switch(config-if)#mac address-table max-mac-count max-number 30 **exceed-max-learned** enable **mode** permanent **status** drop

Switch(config-if)#show mac address-table max-mac-count interface gigabitEthernet 1/0/1

Port	Max-learn	Current-learn	Exceed Max Limit	Mode	Status
----	---------	-----------	----------	------	--------
Gi1/0/1	30	0	disable	permanent	drop

Switch(config-if)#end

Switch#copy running-config startup-config

3 Appendix: Default Parameters

Default settings of Port Security are listed in the following table.

Table 3-1 Default Parameters of Port Security

Parameter	Default Setting
Max Learned Number of MAC	64
Current Learned Number	0
Exceed Max Learned Trap	Disable
Learn Address Mode	Delete on Timeout
Status	Disable

Part 27

Configuring ACL

CHAPTERS

1. Overview
2. ACL Configuration
3. Configuration Example for ACL
4. Appendix: Default Parameters

1 Overview

ACL (Access Control List) filters traffic as it passes through a switch, and permits or denies packets crossing specified interfaces or VLANs. It accurately identifies and processes the packets based on the ACL rules. In this way, ACL helps to limit network traffic, manage network access behaviors, forward packets to specified ports and more.

To configure ACL, follow these steps:

1) Configure a time range during which the ACL is in effect.
2) Create an ACL and configure the rules to filter different packets.
3) Bind the ACL to a port or VLAN to make it effective.

Configuration Guidelines

- A packet "matches" an ACL rule when it meets the rule's matching criteria. The resulting action will be either to "permit" or "deny" the packet that matches the rule.

- If no ACL rule is configured, the packets will be forwarded without being processed by the ACL. If there is configured ACL rules and no matching rule is found, the packets will be dropped.

2 ACL Configuration

2.1 Using the GUI

2.1.1 Configuring Time Range

Some ACL-based services or features may need to be limited to take effect only during a specified time period. In this case, you can configure a time range for the ACL. For details about Time Range configuration, please refer to *Managing System*.

2.1.2 Creating an ACL

You can create different types of ACL and define the rules based on source MAC or IP address, destination MAC or IP address, protocol type, port number and so on.

MAC ACL: MAC ACL uses source and destination MAC address for matching operations.

IP ACL: IP ACL uses source and destination IP address, IP protocols and so on for matching operations.


Combined ACL: Combined ACL uses source and destination MAC address, and source and destination IP address for matching operations.

IPv6 ACL: IPv6 ACL uses source and destination IPv6 address for matching operations.

Packet Content ACL: Packet Content ACL analyzes and processes data packets based on 4 chunk match conditions, each chunk can specify a user-defined 4-byte segment carried in the packet's first 128 bytes.

Choose the menu **SECURITY > ACL > ACL Config** and click Add to load the following page.

Figure 2-1 Creating an ACL

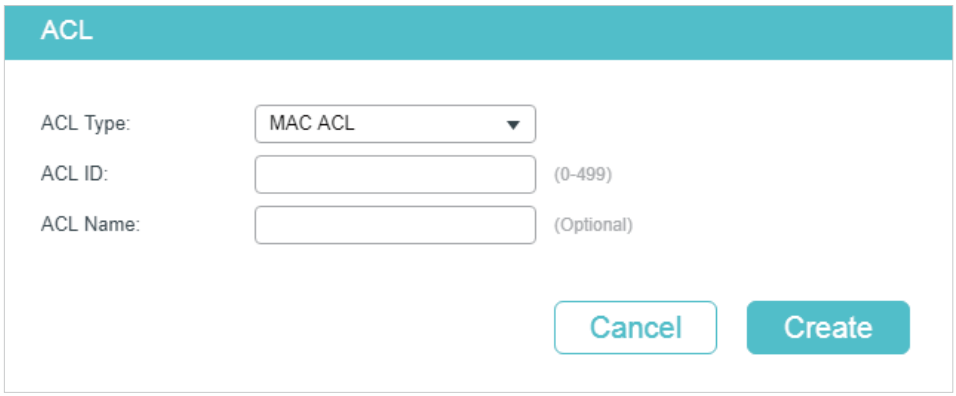

Follow these steps to create an ACL:

1) Choose one ACL type and enter a number to identify the ACL.

2) (Optional) Assign a name to the ACL.

3) Click **Create**.

Note:

The supported ACL type and ID range varies on different switch models. Please refer to the on-screen information.


2.1.3 Configuring ACL Rules

Note:

Every ACL has an implicit deny all rule at the end of an ACL rule list. That is, if an ACL is applied to a packet and none of the explicit rules match, then the final implicit deny all rule takes effect and the packet is dropped.

The created ACL will be displayed on the **SECURITY > ACL > ACL Config** page.

Figure 2-2 Editing ACL

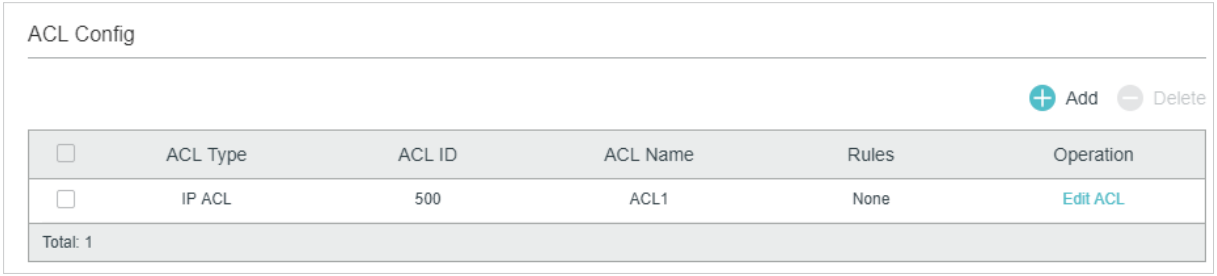


Click **Edit ACL** in the **Operation** column. Then you can configure rules for this ACL.

The following sections introduce how to configure MAC ACL, IP ACL, Combined ACL, IPv6 ACL and Packet Content ACL.

Configuring MAC ACL Rule


Click **Edit ACL** for a MAC ACL entry to load the following page.

Figure 2-3 Configuring the MAC ACL Rule

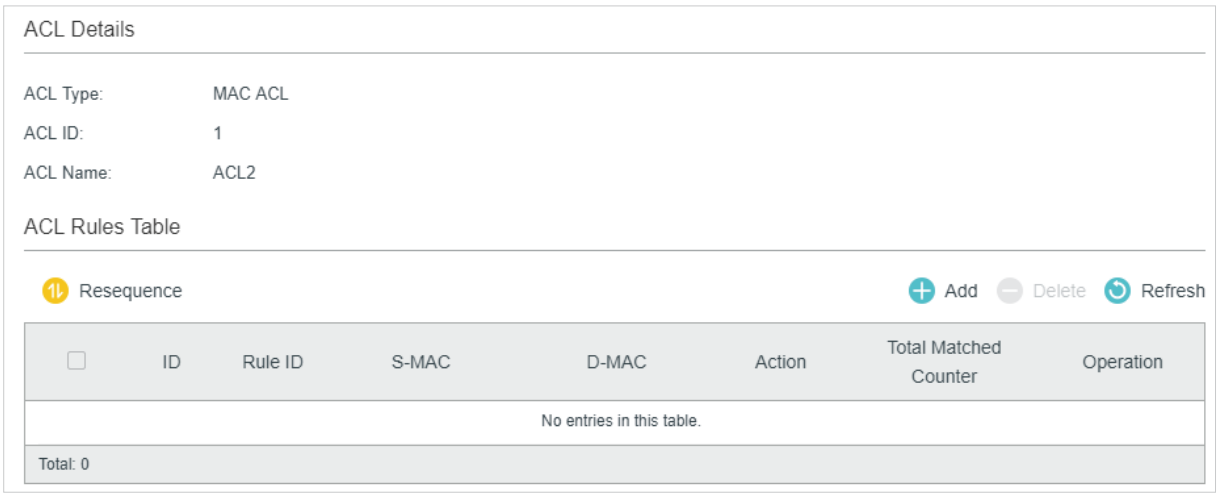

In **ACL Rules Table** section, click Add and the following page will appear.

Figure 2-4 Configuring the MAC ACL Rule

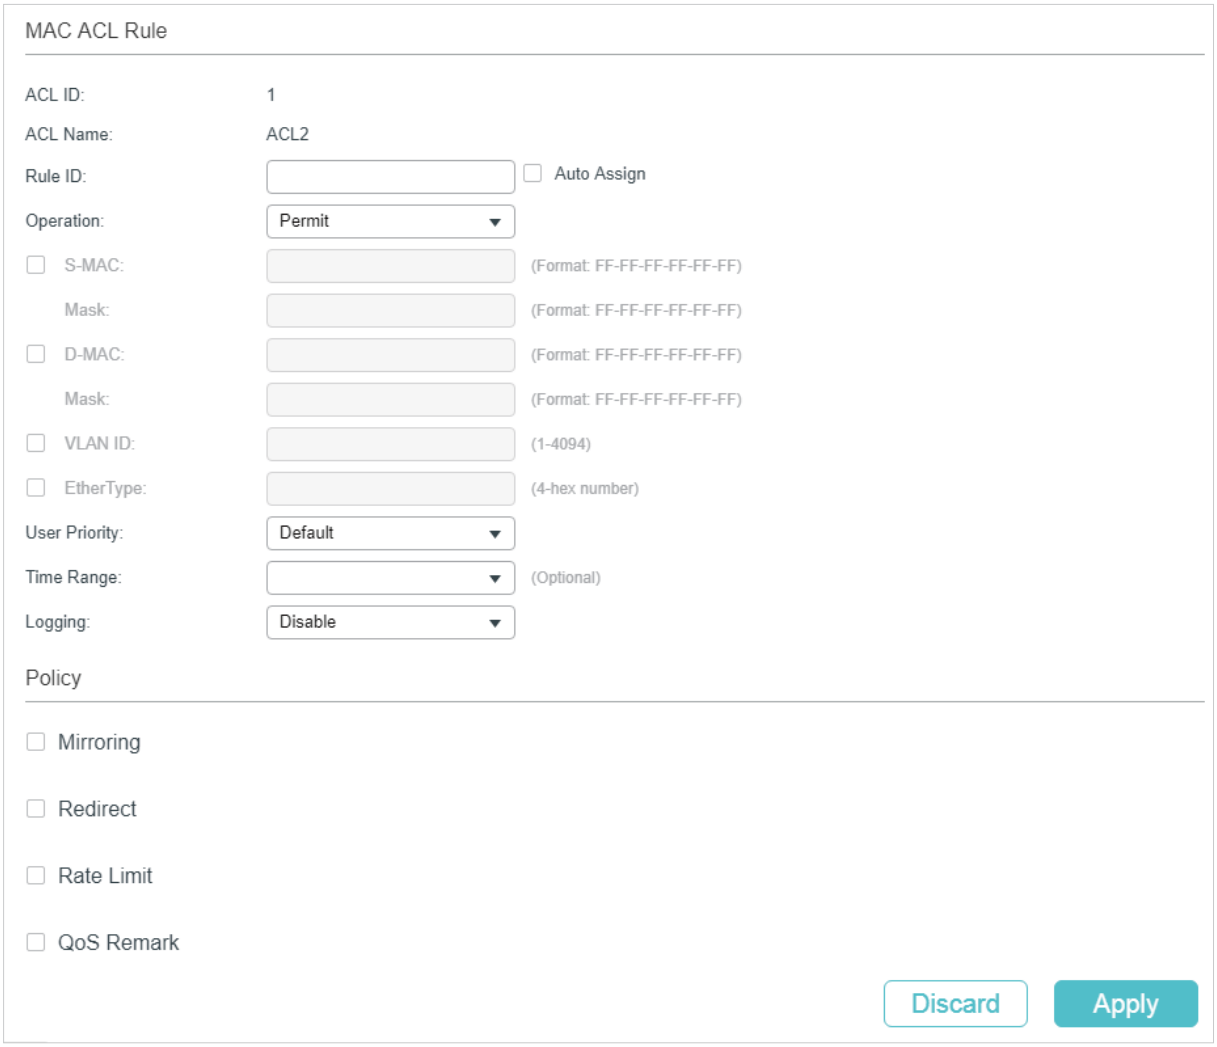

Follow these steps to configure the MAC ACL rule:


1) In the **MAC ACL Rule** section, configure the following parameters:

Rule ID	Enter an ID number to identify the rule. It should not be the same as any current rule ID in the same ACL. For the convenience of inserting new rules to an ACL, you should set the appropriate interval between rule IDs. If you select **Auto Assign**, the rule ID will be assigned automatically by the system and the default increment between neighboring rule IDs is 5.
Operation	Select an action to be taken when a packet matches the rule. **Permit**: To forward the matched packets. **Deny**: To discard the matched packets.
S-MAC/Mask	Enter the source MAC address with a mask. A value of 1 in the mask indicates that the corresponding bit in the address will be matched.

D-MAC/Mask	Enter the destination MAC address with a mask. A value of 1 in the mask indicates that the corresponding bit in the address will be matched.
VLAN ID	Enter the ID number of the VLAN to which the ACL will apply.
EtherType	Specify the EtherType to be matched using 4 hexadecimal numbers.
User Priority	Specify the User Priority to be matched.
Time Range	Select a time range during which the rule will take effect. The default value is No Limit, which means the rule is always in effect. The Time Range referenced here can be created on the **SYSTEM > Time Range** page.
Logging	Enable Logging function for the ACL rule. Then the times that the rule is matched will be logged every 5 minutes and a related trap will be generated. You can refer to Total Matched Counter in the ACL Rules Table to view the matching times.


2) In the **Policy** section, enable or disable the Mirroring feature for the matched packets. With this option enabled, choose a destination port to which the packets will be mirrored.

Figure 2-5 Configuring Mirroring

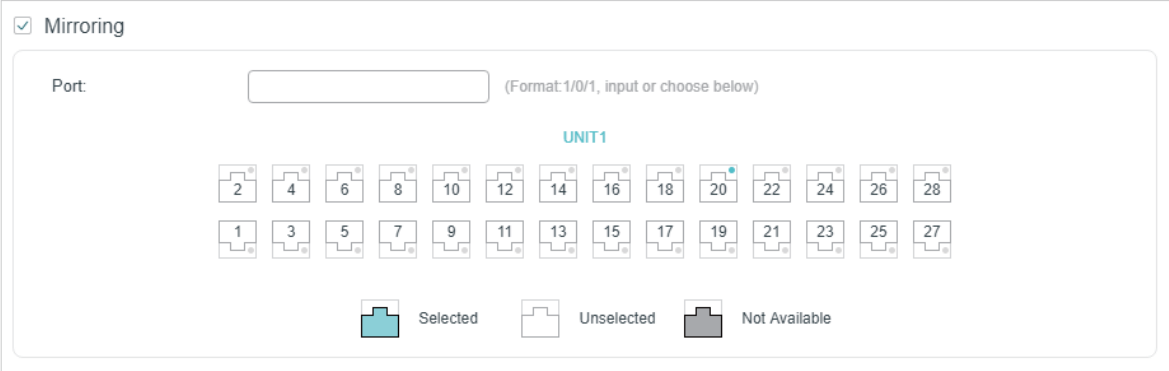

3) In the **Policy** section, enable or disable the Redirect feature for the matched packets. With this option enabled, choose a destination port to which the packets will be redirected.

Figure 2-6 Configuring Redirect

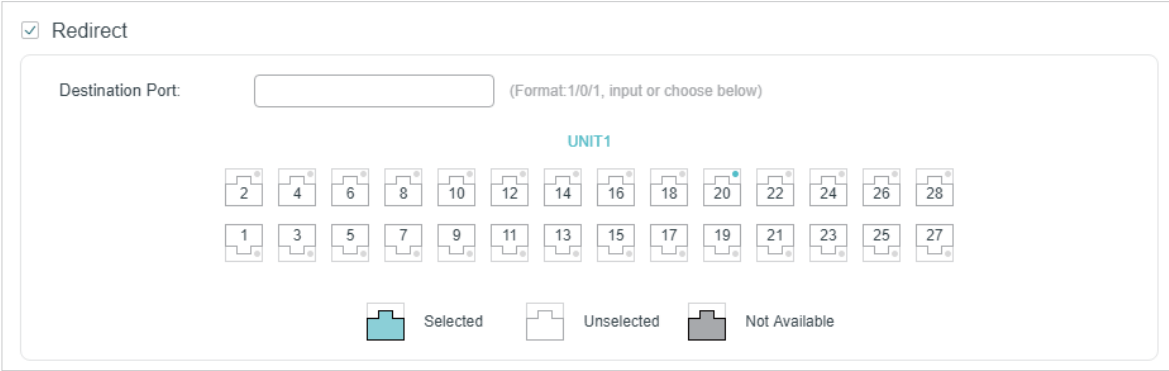


Note:

In the Mirroring feature, the matched packets will be copied to the destination port and the original forwarding will not be affected. While in the Redirect feature, the matched packets will be forwarded only on the destination port.

4) In the **Policy** section, enable or disable the Rate Limit feature for the matched packets. With this option enabled, configure the related parameters.


Figure 2-7 Configuring Rate Limit

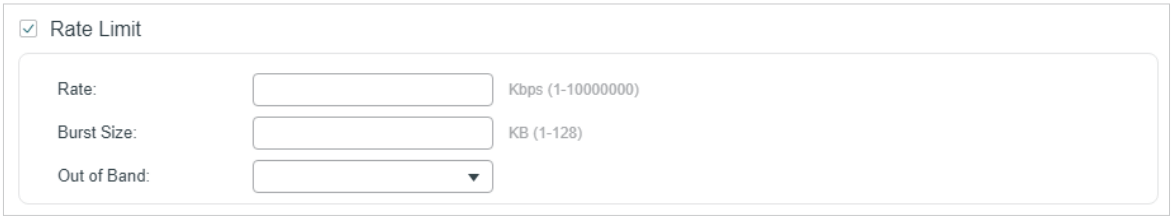

Rate	Specify the transmission rate for the matched packets.
Burst Size	Specify the maximum number of bytes allowed in one second.
Out of Band	Select the action for the packets whose rate is beyond the specified rate. **None:** The packets will be forwarded normally. **Drop:** The packets will be discarded. **Remark DSCP:** You can specify a DSCP value, and the DSCP field of the packets will be changed to the specified one. Note: Remark DSCP is not available for T2600G-18TS.

5) In the **Policy** section, enable or disable the QoS Remark feature for the matched packets. With this option enabled, configure the related parameters, and the remarked values will take effect in the QoS processing on the switch.

Figure 2-8 Configuring QoS Remark

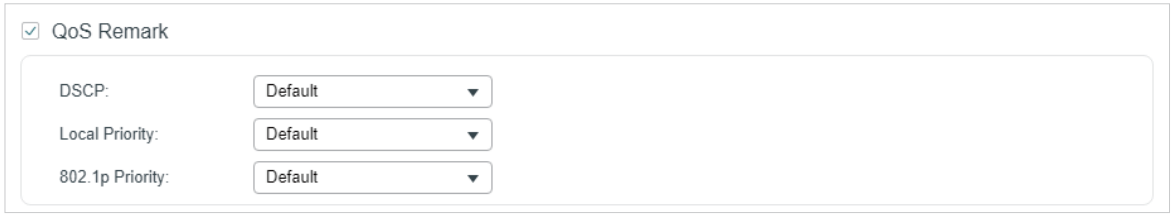

DSCP	Specify the DSCP field for the matched packets. The DSCP field of the packets will be changed to the specified one.
Local Priority	Specify the local priority for the matched packets. The local priority of the packets will be changed to the specified one.
802.1p Priority	Specify the 802.1p priority for the matched packets. The 802.1p priority of the packets will be changed to the specified one.

6) Click **Apply**.

Configuring IP ACL Rule


Click **Edit ACL** for an IP ACL entry to load the following page.

Figure 2-9 Configuring the IP ACL Rule



In **ACL Rules Table** section, click Add and the following page will appear.

Figure 2-10 Configuring the IP ACL Rule

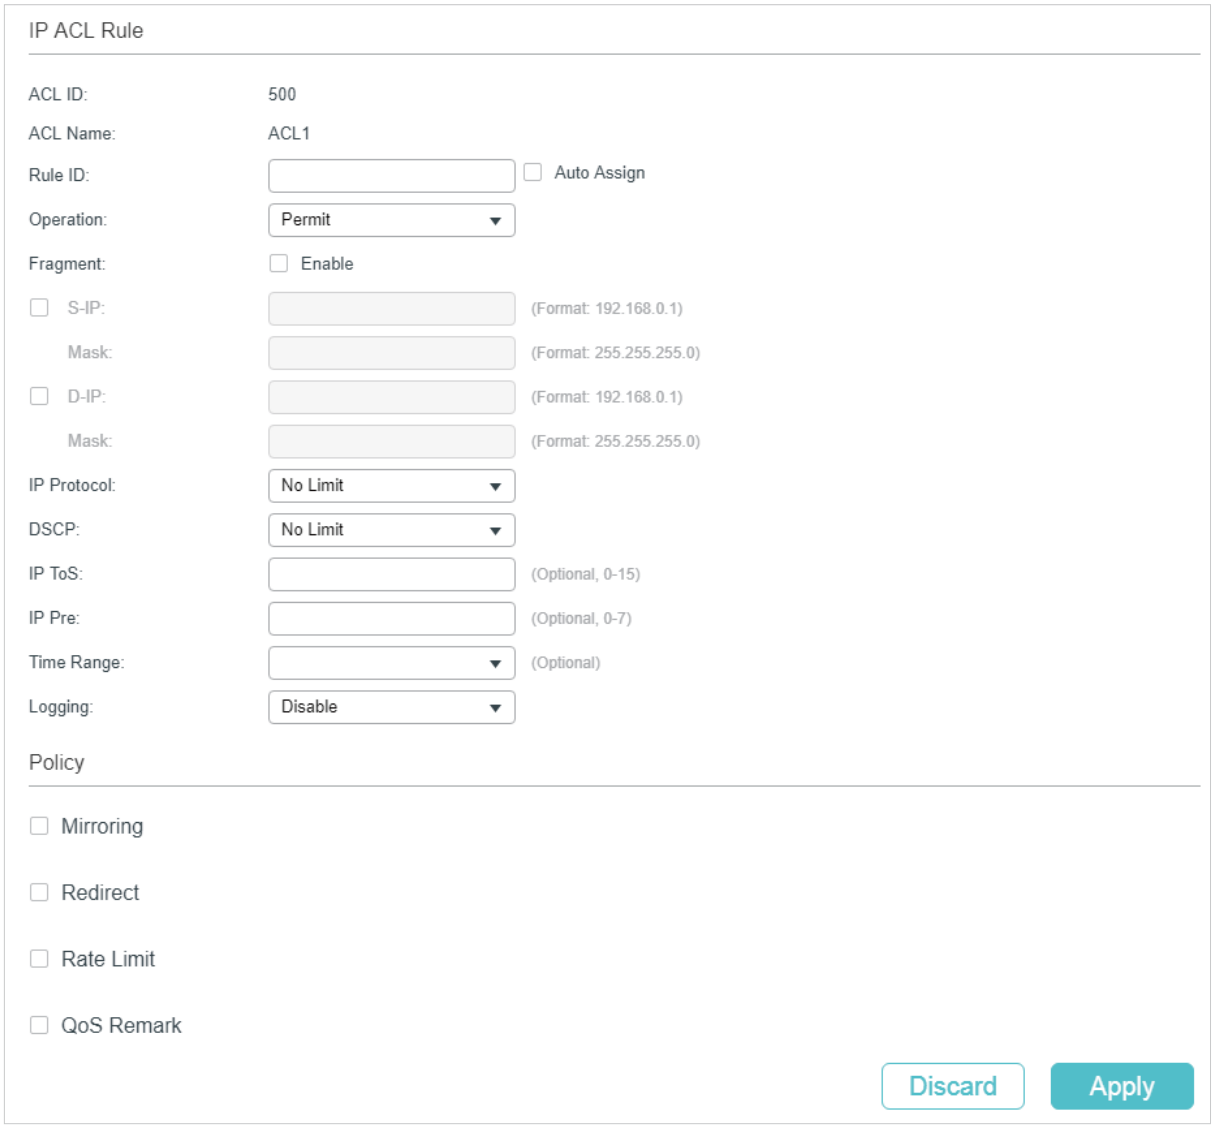

Follow these steps to configure the IP ACL rule:


1) In the **IP ACL Rule** section, configure the following parameters:

Rule ID	Enter an ID number to identify the rule. It should not be the same as any current rule ID in the same ACL. If you select Auto Assign, the rule ID will be assigned automatically and the interval between rule IDs is 5.
Operation	Select an action to be taken when a packet matches the rule. **Permit**: To forward the matched packets. **Deny**: To discard the matched packets.
Fragment	With this option selected, the rule will be applied to all fragment packets except for the last fragment packet in the fragment packet group. **Note**: Fragment is not available for T2600G-18TS.

S-IP/Mask	Enter the source IP address with a mask. A value of 1 in the mask indicates that the corresponding bit in the address will be matched.
D-IP/Mask	Enter the destination IP address with a mask. A value of 1 in the mask indicates that the corresponding bit in the address will be matched.
IP Protocol	Select a protocol type from the drop-down list. The default is No Limit, which indicates that packets of all protocols will be matched. You can also select User-defined to customize the IP protocol.
TCP Flag	If TCP protocol is selected, you can configure the TCP Flag to be used for the rule's matching operations. There are six flags and each has three options, which are *, 0 and 1. The default is *, which indicates that the flag is not used for matching operations. **URG**: Urgent flag. **ACK**: Acknowledge flag. **PSH**: Push flag. **RST**: Reset flag. **SYN**: Synchronize flag. **FIN**: Finish flag.
S-Port / D-Port	If TCP/UDP is selected as the IP protocol, specify the source and destination port number with a mask. **Value**: Specify the port number. **Mask**: Specify the port mask with 4 hexadacimal numbers.
DSCP	Specify a DSCP value to be matched between 0 and 63. The default is No Limit.
IP ToS	Specify an IP ToS value to be matched between 0 and 15. The default is No Limit.
IP Pre	Specify an IP Precedence value to be matched to be matched between 0 and 7. The default is No Limit.
Time Range	Select a time range during which the rule will take effect. The default value is No Limit, which means the rule is always in effect. The Time Range referenced here can be created on the **SYSTEM > Time Range** page.
Logging	Enable Logging function for the ACL rule. Then the times that the rule is matched will be logged every 5 minutes and a related trap will be generated. You can refer to Total Matched Counter in the ACL Rules Table to view the matching times.


2) In the **Policy** section, enable or disable the Mirroring feature for the matched packets. With this option enabled, choose a destination port to which the packets will be mirrored.

Figure 2-11 Configuring Mirroring

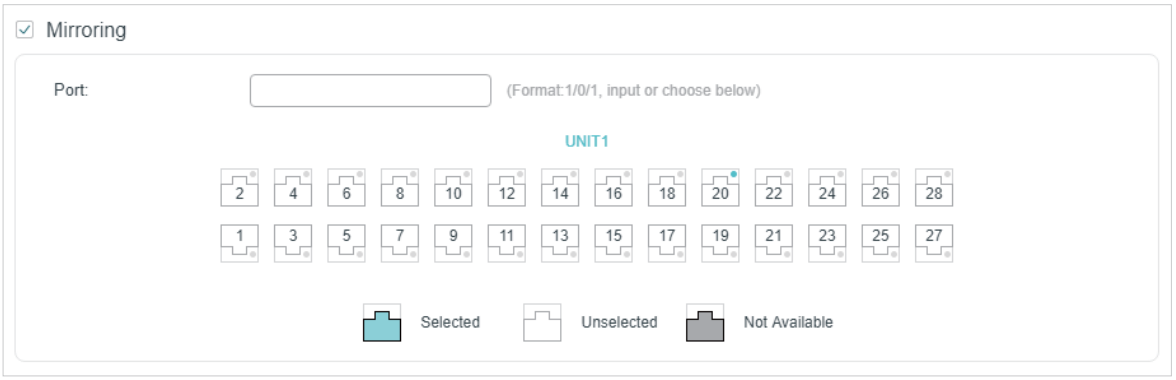

3) In the **Policy** section, enable or disable the Redirect feature for the matched packets. With this option enabled, choose a destination port to which the packets will be redirected.

Figure 2-12 Configuring Redirect

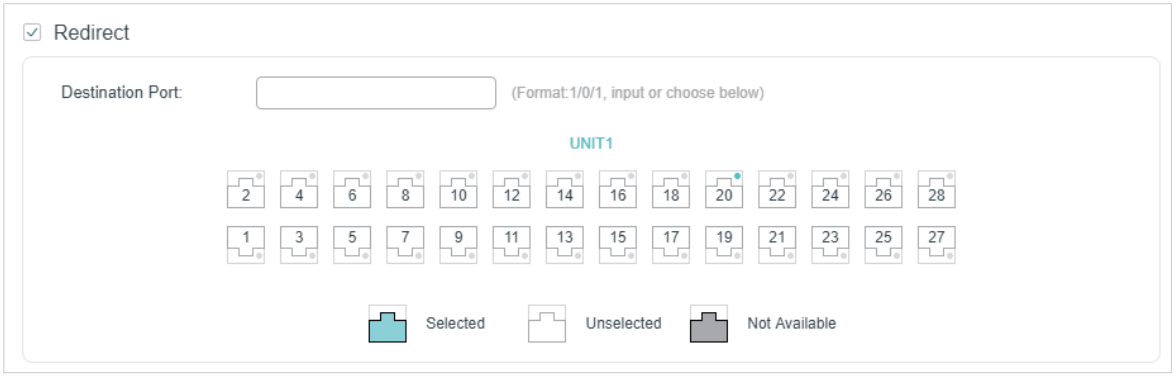


Note:

In the Mirroring feature, the matched packets will be copied to the destination port and the original forwarding will not be affected. While in the Redirect feature, the matched packets will be forwarded only on the destination port.

4) In the **Policy** section, enable or disable the Rate Limit feature for the matched packets. With this option enabled, configure the related parameters.

Figure 2-13 Configuring Rate Limit

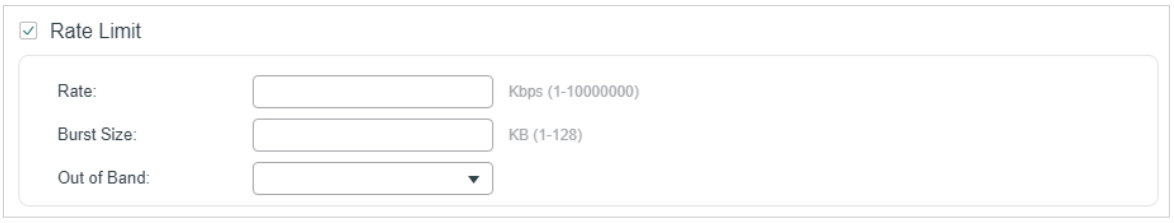

Rate	Specify the transmission rate for the matched packets.
Burst Size	Specify the maximum number of bytes allowed in one second.

Out of Band	Select the action for the packets whose rate is beyond the specified rate. **None:** The packets will be forwarded normally. **Drop:** The packets will be discarded. **Remark DSCP:** You can specify a DSCP value, and the DSCP field of the packets will be changed to the specified one. Note: Remark DSCP is not available for T2600G-18TS.

5) In the **Policy** section, enable or disable the QoS Remark feature for the matched packets. With this option enabled, configure the related parameters, and the remarked values will take effect in the QoS processing on the switch.

Figure 2-14 Configuring QoS Remark



DSCP	Specify the DSCP field for the matched packets. The DSCP field of the packets will be changed to the specified one.
Local Priority	Specify the local priority for the matched packets. The local priority of the packets will be changed to the specified one.
802.1p Priority	Specify the 802.1p priority for the matched packets. The 802.1p priority of the packets will be changed to the specified one.

6) Click **Apply**.

Configuring Combined ACL Rule


Click **Edit ACL** for a Combined ACL entry to load the following page.

Figure 2-15 Configuring the Combined ACL Rule



In **ACL Rules Table** section, click Add and the following page will appear.

Figure 2-16 Configuring the Combined ACL Rule

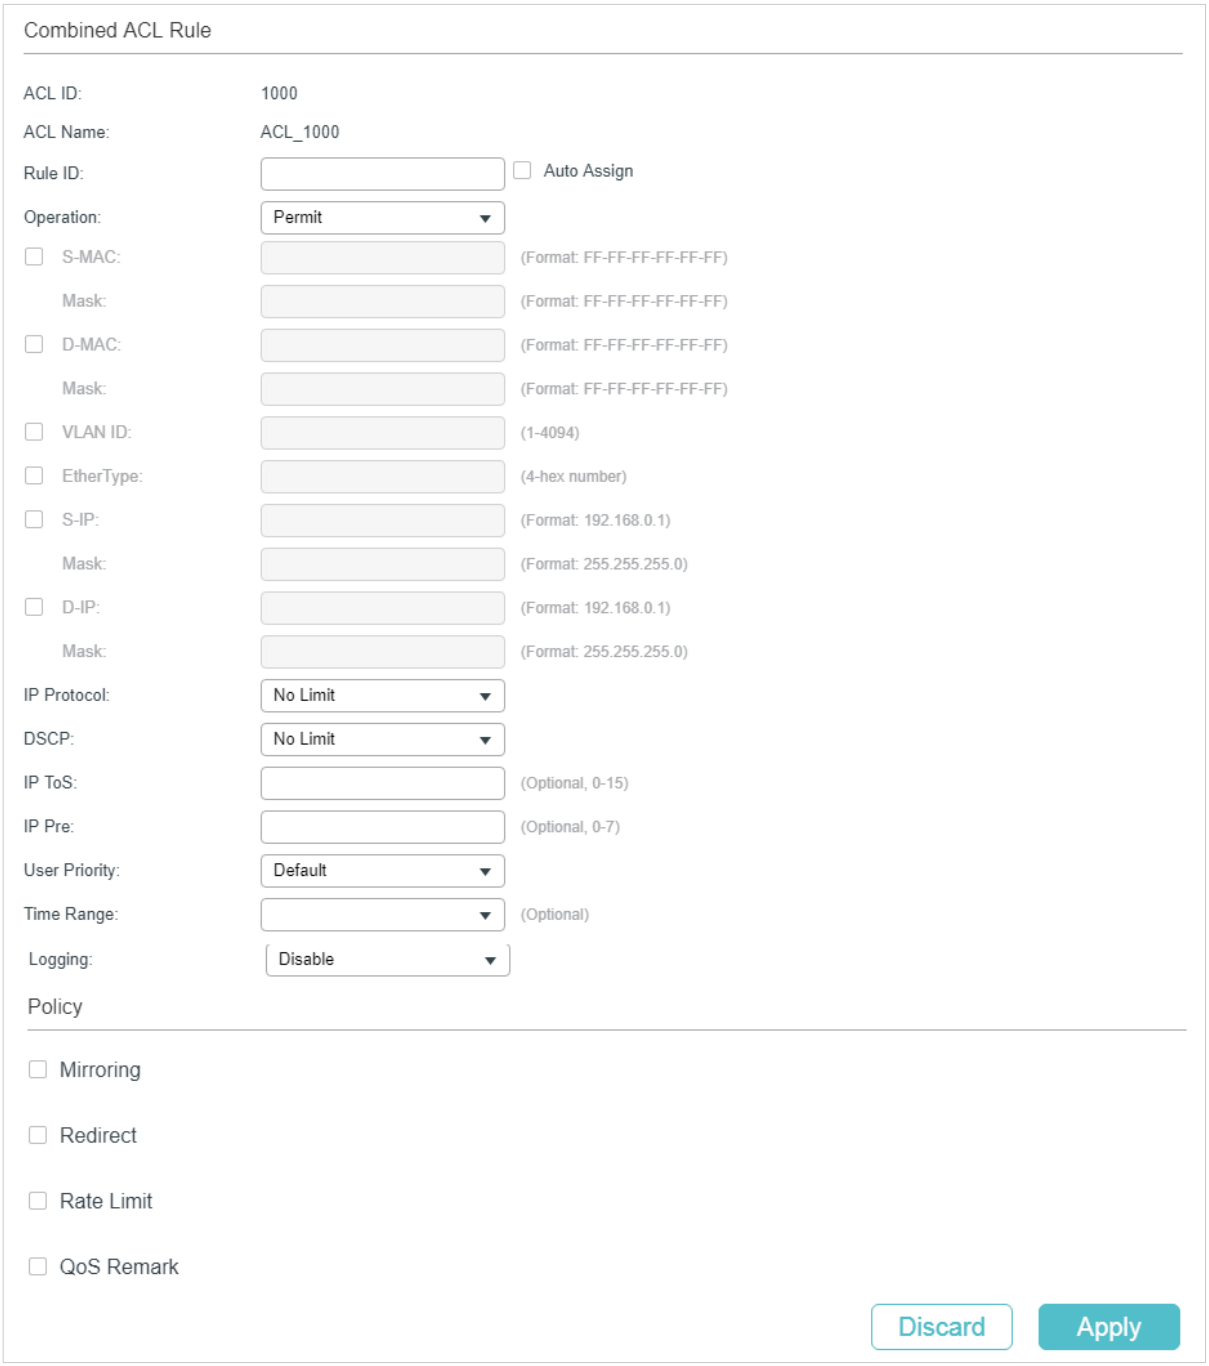

Follow these steps to configure the Combined ACL rule:


1) In the **Combined ACL Rule** section, configure the following parameters:

Rule ID	Enter an ID number to identify the rule. It should not be the same as any current rule ID in the same ACL. For the convenience of inserting new rules to an ACL, you should set the appropriate interval between rule IDs. If you select **Auto Assign**, the rule ID will be assigned automatically by the system and the default increment between neighboring rule IDs is 5.
Operation	Select an action to be taken when a packet matches the rule. **Permit**: To forward the matched packets. **Deny**: To discard the matched packets.
S-MAC/Mask	Enter the source MAC address with a mask. A value of 1 in the mask indicates that the corresponding bit in the address will be matched.
D-MAC/Mask	Enter the destination IP address with a mask. A value of 1 in the mask indicates that the corresponding bit in the address will be matched.
VLAN ID	Enter the ID number of the VLAN to which the ACL will apply.
EtherType	Specify the EtherType to be matched using 4 hexadecimal numbers.
S-IP/Mask	Enter the source IP address with a mask. A value of 1 in the mask indicates that the corresponding bit in the address will be matched.
D-IP/Mask	Enter the destination IP address with a mask. A value of 1 in the mask indicates that the corresponding bit in the address will be matched.
IP Protocol	Select a protocol type from the drop-down list. The default is No Limit, which indicates that packets of all protocols will be matched. You can also select User-defined to customize the IP protocol.
TCP Flag	If TCP protocol is selected, you can configure the TCP Flag to be used for the rule's matching operations. There are six flags and each has three options, which are *, 0 and 1. The default is *, which indicates that the flag is not used for matching operations. **URG**: Urgent flag. **ACK**: Acknowledge flag. **PSH**: Push flag. **RST**: Reset flag. **SYN**: Synchronize flag. **FIN**: Finish flag.
S-Port / D-Port	If TCP/UDP is selected as the IP protocol, specify the source and destination port number with a mask. **Value**: Specify the port number. **Mask**: Specify the port mask with 4 hexadacimal numbers.
DSCP	Specify a DSCP value to be matched between 0 and 63. The default is No Limit.

IP ToS	Specify an IP ToS value to be matched between 0 and 15. The default is No Limit.
IP Pre	Specify an IP Precedence value to be matched to be matched between 0 and 7. The default is No Limit.
User Priority	Specify the User Priority to be matched.
Time Range	Select a time range during which the rule will take effect. The default value is No Limit, which means the rule is always in effect. The Time Range referenced here can be created on the **SYSTEM > Time Range** page.
Logging	Enable Logging function for the ACL rule. Then the times that the rule is matched will be logged every 5 minutes and a related trap will be generated. You can refer to Total Matched Counter in the ACL Rules Table to view the matching times.


2) In the **Policy** section, enable or disable the Mirroring feature for the matched packets. With this option enabled, choose a destination port to which the packets will be mirrored.

Figure 2-17 Configuring Mirroring

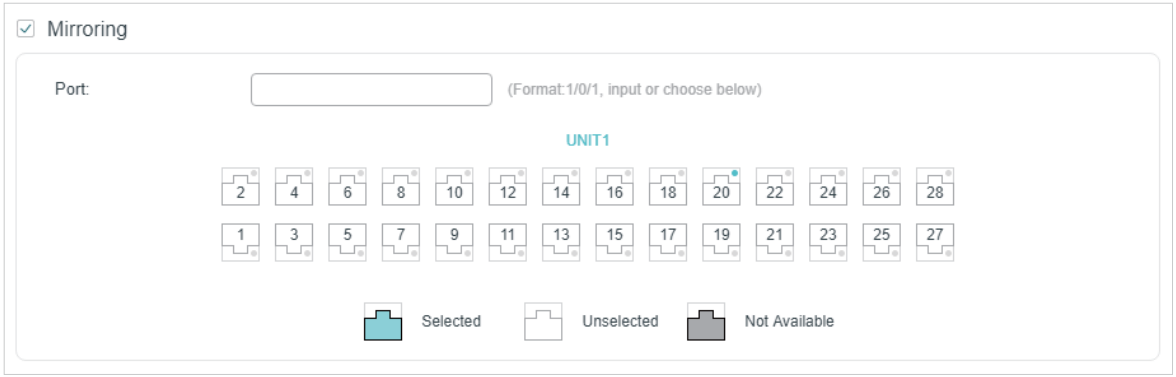

3) In the **Policy** section, enable or disable the Redirect feature for the matched packets. With this option enabled, choose a destination port to which the packets will be redirected.

Figure 2-18 Configuring Redirect

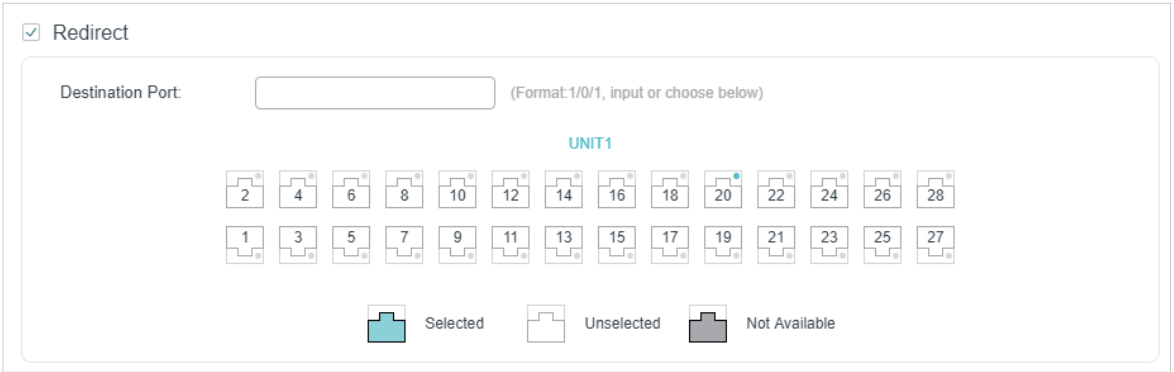


Note:

In the Mirroring feature, the matched packets will be copied to the destination port and the original forwarding will not be affected. While in the Redirect feature, the matched packets will be forwarded only on the destination port.

4) In the **Policy** section, enable or disable the Rate Limit feature for the matched packets. With this option enabled, configure the related parameters.


Figure 2-19 Configuring Rate Limit

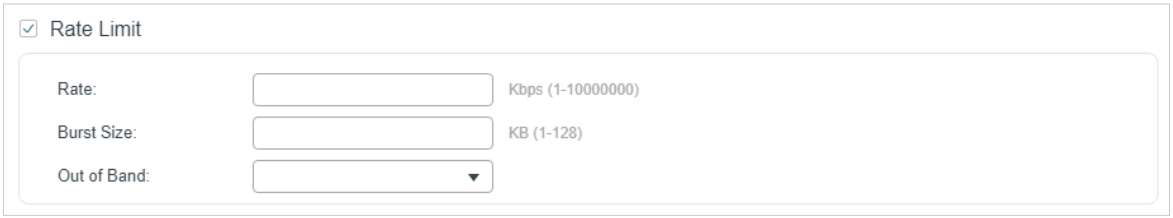

Rate	Specify the transmission rate for the matched packets.
Burst Size	Specify the maximum number of bytes allowed in one second.
Out of Band	Select the action for the packets whose rate is beyond the specified rate. **None:** The packets will be forwarded normally. **Drop:** The packets will be discarded. **Remark DSCP:** You can specify a DSCP value, and the DSCP field of the packets will be changed to the specified one. Note: Remark DSCP is not available for T2600G-18TS.

5) In the **Policy** section, enable or disable the QoS Remark feature for the matched packets. With this option enabled, configure the related parameters, and the remarked values will take effect in the QoS processing on the switch.

Figure 2-20 Configuring QoS Remark

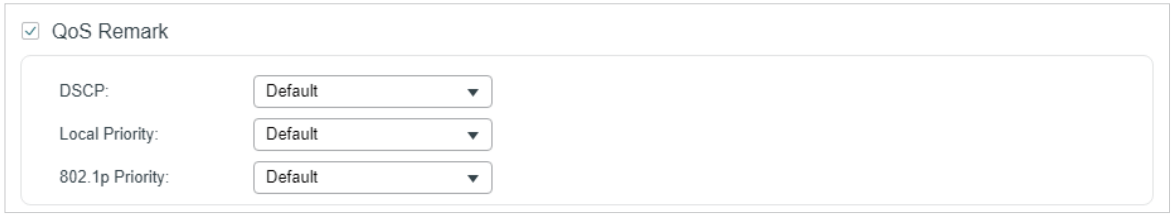


DSCP	Specify the DSCP field for the matched packets. The DSCP field of the packets will be changed to the specified one.
Local Priority	Specify the local priority for the matched packets. The local priority of the packets will be changed to the specified one.
802.1p Priority	Specify the 802.1p priority for the matched packets. The 802.1p priority of the packets will be changed to the specified one.

6) Click **Apply**.

Configuring the IPv6 ACL Rule


Click **Edit ACL** for an IPv6 ACL entry to load the following page.

Figure 2-21 Configuring the IPv6 ACL Rule

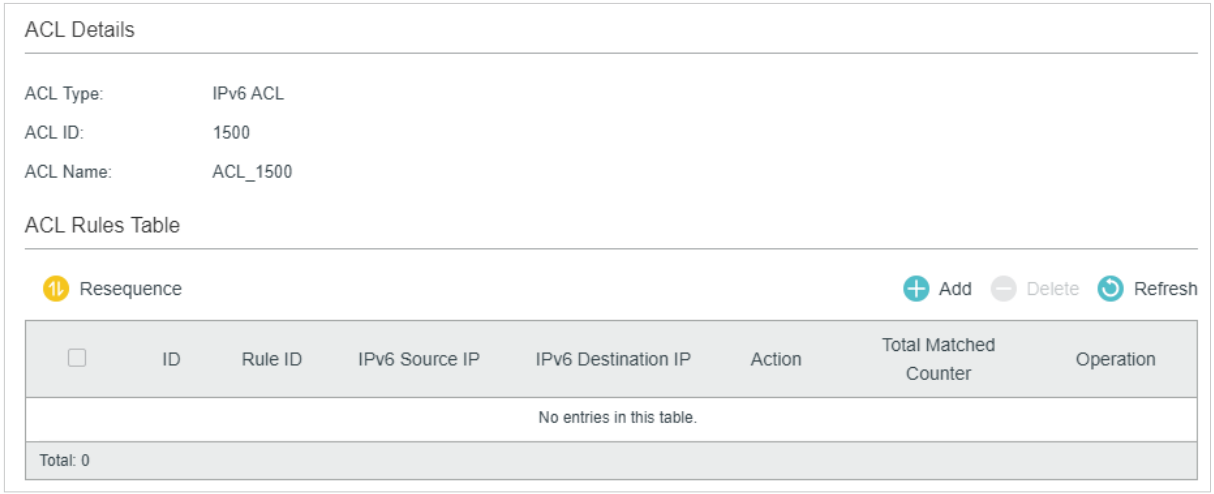

In **ACL Rules Table** section, click Add and the following page will appear.

Figure 2-22 Configuring the IPv6 ACL Rule

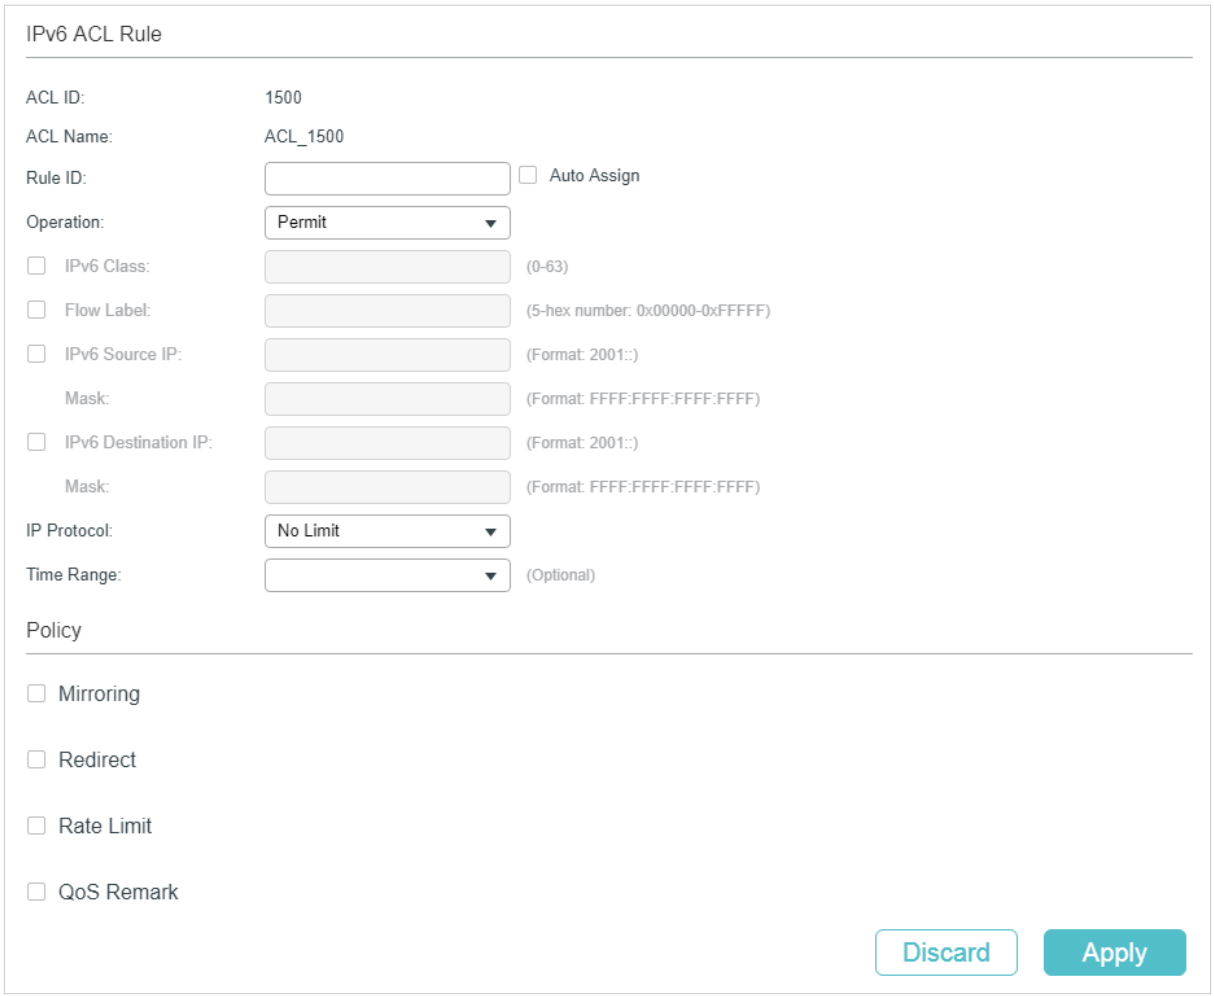


Follow these steps to configure the IPv6 ACL rule:

1) In the **IPv6 ACL Rule** section, configure the following parameters:

Rule ID	Enter an ID number to identify the rule. It should not be the same as any current rule ID in the same ACL. If you select Auto Assign, the rule ID will be assigned automatically and the interval between rule IDs is 5.
Operation	Select an action to be taken when a packet matches the rule. **Permit**: To forward the matched packets. **Deny**: To discard the matched packets.
IPv6 Class	Specify an IPv6 class value to be matched. The switch will check the class field of the IPv6 header.
Flow Label	Specify a Flow Label value to be matched.
IPv6 Source IP	Enter the source IPv6 address to be matched. All types of IPv6 address will be checked. You may enter a complete 128-bit IPv6 address but only the first 64 bits will be valid.
Mask	The mask is required if the source IPv6 address is entered. Enter the mask in complete format (for example, FFFF:FFFF:0000:FFFF). The IP address mask specifies which bits in the source IPv6 address to match the rule. A value of 1 in the mask indicates that the corresponding bit in the address will be matched.
IPv6 Destination IP	Enter the destination IPv6 address to be matched. All types of IPv6 address will be checked. You may enter a complete 128-bit IPv6 address but only the first 64 bits will be valid.
Mask	The mask is required if the destination IPv6 address is entered. Enter the complete mask (for example, FFFF:FFFF:0000:FFFF). The IP address mask specifies which bits in the source IP address to match the rule. A value of 1 in the mask indicates that the corresponding bit in the address will be matched.
IP Protocol	Select a protocol type from the drop-down list. **No Limit:** Packets of all protocols will be matched. **UDP:** Specify the source port and destination port for the UDP packet to be matched. **TCP**: Specify the source port and destination port for the TCP packet to be matched. **User-defined**: You can customize an IP protocol.
S-Port / D-Port	If TCP/UDP is selected as the IP protocol, specify the source and destination port numbers.
Time Range	Select a time range during which the rule will take effect. The default value is No Limit, which means the rule is always in effect. The Time Range referenced here can be created on the **SYSTEM > Time Range** page.


2) In the **Policy** section, enable or disable the Mirroring feature for the matched packets. With this option enabled, choose a destination port to which the packets will be mirrored.

Figure 2-23 Configuring Mirroring

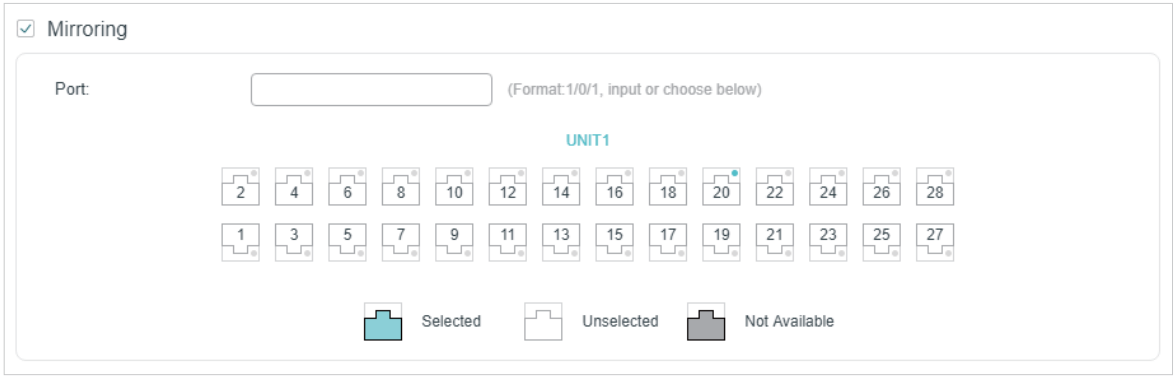

3) In the **Policy** section, enable or disable the Redirect feature for the matched packets. With this option enabled, choose a destination port to which the packets will be redirected.

Figure 2-24 Configuring Redirect

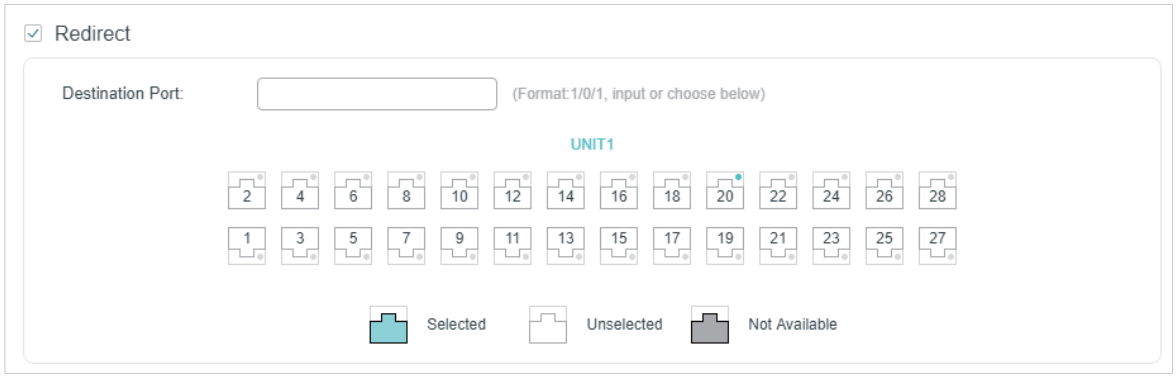


Note:

In the Mirroring feature, the matched packets will be copied to the destination port and the original forwarding will not be affected. While in the Redirect feature, the matched packets will be forwarded only on the destination port.

4) In the **Policy** section, enable or disable the Rate Limit feature for the matched packets. With this option enabled, configure the related parameters.

Figure 2-25 Configuring Rate Limit

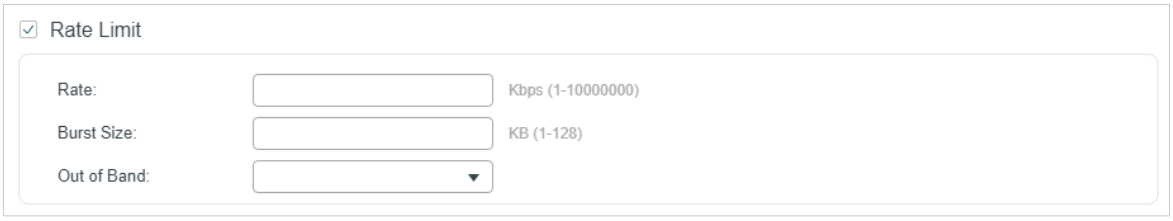


Rate	Specify the transmission rate for the matched packets.

Burst Size	Specify the number of bytes allowed in one second.
Out of Band	Select the action for the packets whose rate is beyond the specified rate. **None:** The packets will be forwarded normally. **Drop:** The packets will be discarded. **Remark DSCP:** You can specify a DSCP value, and the DSCP field of the packets will be changed to the specified one. Note: Remark DSCP is not available for T2600G-18TS.

5) In the **Policy** section, enable or disable the QoS Remark feature for the matched packets. With this option enabled, configure the related parameters, and the remarked values will take effect in the QoS processing on the switch.

Figure 2-26 Configuring QoS Remark

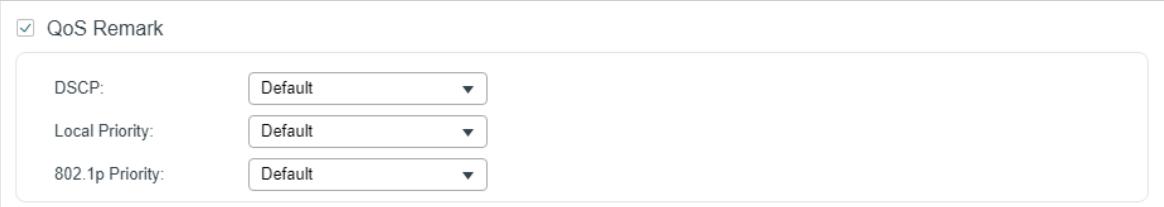

DSCP	Specify the DSCP field for the matched packets. The DSCP field of the packets will be changed to the specified one.
Local Priority	Specify the local priority for the matched packets. The local priority of the packets will be changed to the specified one.
802.1p Priority	Specify the 802.1p priority for the matched packets. The 802.1p priority of the packets will be changed to the specified one.

6) Click **Apply**.


Configuring the Packet Content ACL Rule

Note:

Packet Content ACL is not available for T2600G-18TS.

Click **Edit ACL** for a Packet Content ACL entry to load the following page.

Figure 2-27 Configuring the Packet Content ACL Rule

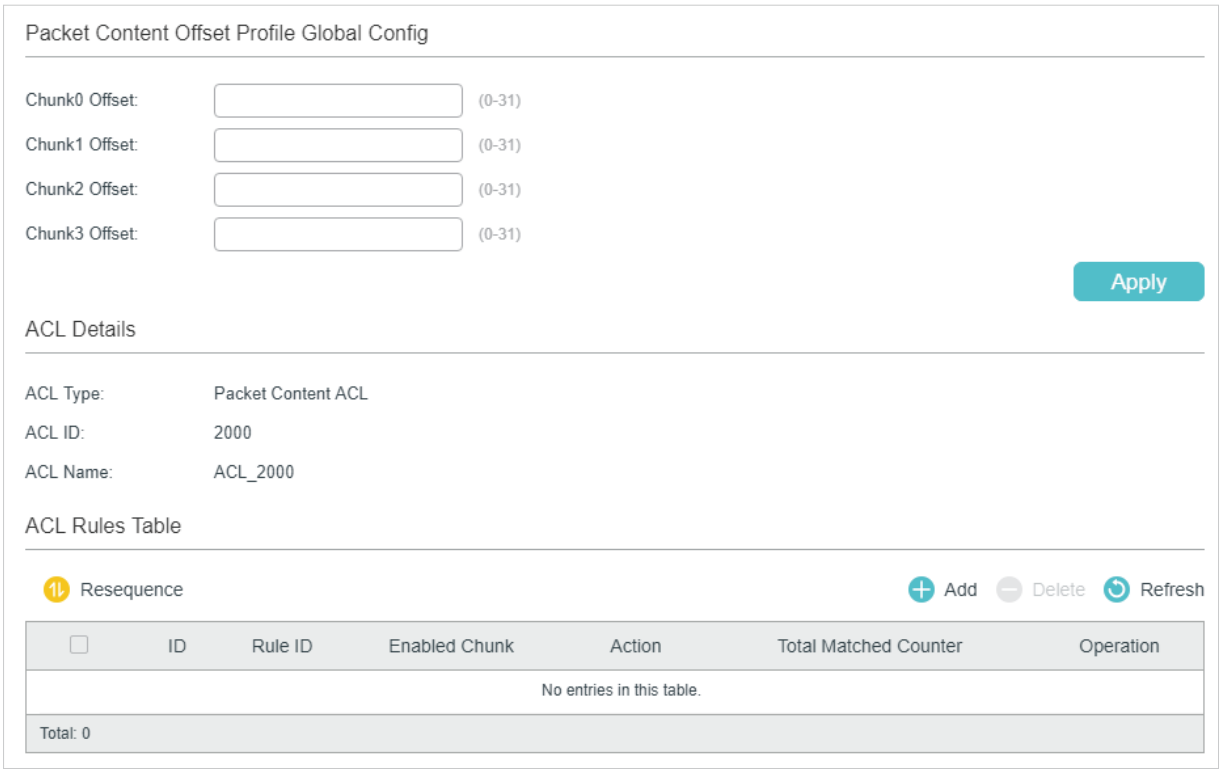


In the **Packet Content Offset Profile Global Config** section, configure the Chunk Offset. Click **Apply**.

Chunk0 Offset/ Chunk1 Offset/ Chunk2 Offset/ Chunk3 Offset	Enter the offset of a chunk. Packet Content ACL analyzes and processes data packets based on 4 chunk match conditions, and each chunk can specify a user-defined 4-byte segment carried in the packet's first 128 bytes. Offset 31 matches the 127, 128, 1, 2 bytes of the packet, offset 0 matches the 3,4,5,6 bytes of the packet, and so on, for the rest of the offset value. *Note:* All 4 chunks must be set at the same time.

In **ACL Rules Table** section, click Add and the following page will appear.

Figure 2-28 Configuring the Packet Content ACL Rule

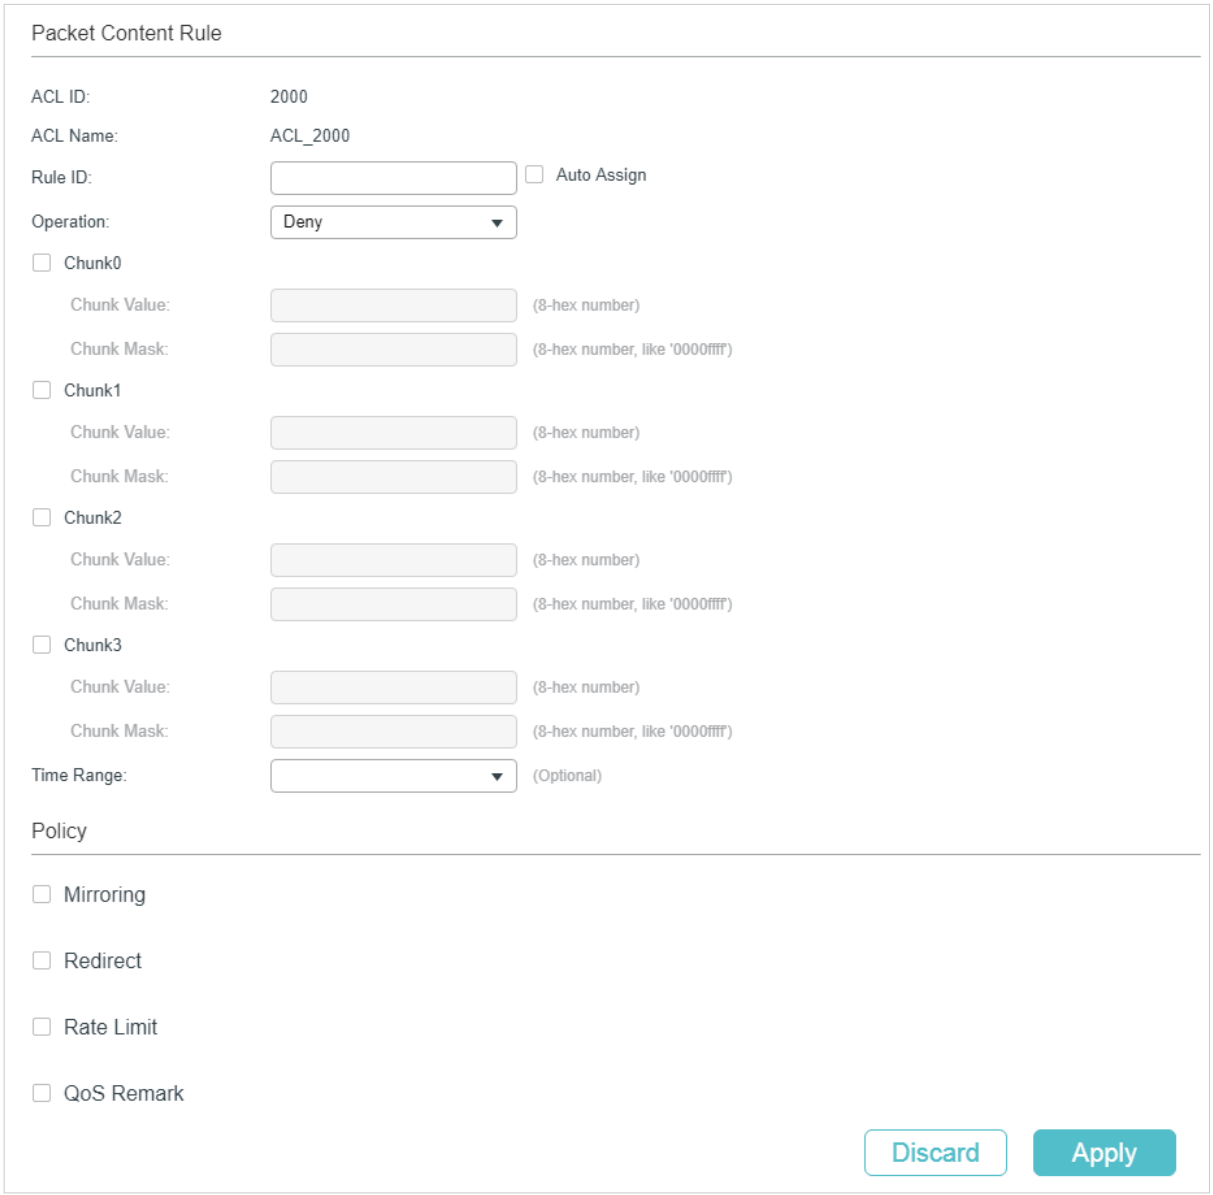


Follow these steps to configure the Packet Content ACL rule:

1) In the **Packet Content Rule** section, configure the following parameters:

Rule ID	Enter an ID number to identify the rule. It should not be the same as any current rule ID in the same ACL. If you select Auto Assign, the rule ID will be assigned automatically and the interval between rule IDs is 5.
Operation	Select an action to be taken when a packet matches the rule. **Permit**: To forward the matched packets. **Deny**: To discard the matched packets.
Chunk0-Chunk3	Specify the EtherType to be matched using 4 hexadecimal numbers.
Chunk Value	Enter the 4-byte value in hexadecimal for the desired chunk, like '0000ffff'. The Packet Content ACL will check this chunk of packets to examine if the packets match the rule or not.
Chunk Mask	Enter the 4-byte mask in hexadecimal for the desired chunk. The mask must be written completely in 4-byte hex mode, like '0000ffff'. The mask specifies which bits to match the rule.
Time Range	Select a time range during which the rule will take effect. The default value is No Limit, which means the rule is always in effect. The Time Range referenced here can be created on the **SYSTEM > Time Range** page.
Logging	Enable Logging function for the ACL rule. Then the times that the rule is matched will be logged every 5 minutes and a related trap will be generated. You can refer to Total Matched Counter in the ACL Rules Table to view the matching times.


2) In the **Policy** section, enable or disable the Mirroring feature for the matched packets. With this option enabled, choose a destination port to which the packets will be mirrored.

Figure 2-29 Configuring Mirroring

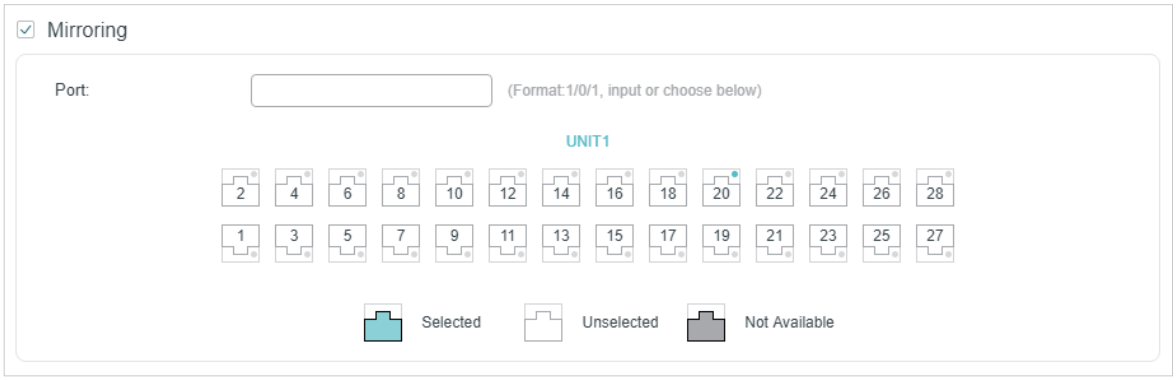

3) In the **Policy** section, enable or disable the Redirect feature for the matched packets. With this option enabled, choose a destination port to which the packets will be redirected.

Figure 2-30 Configuring Redirect

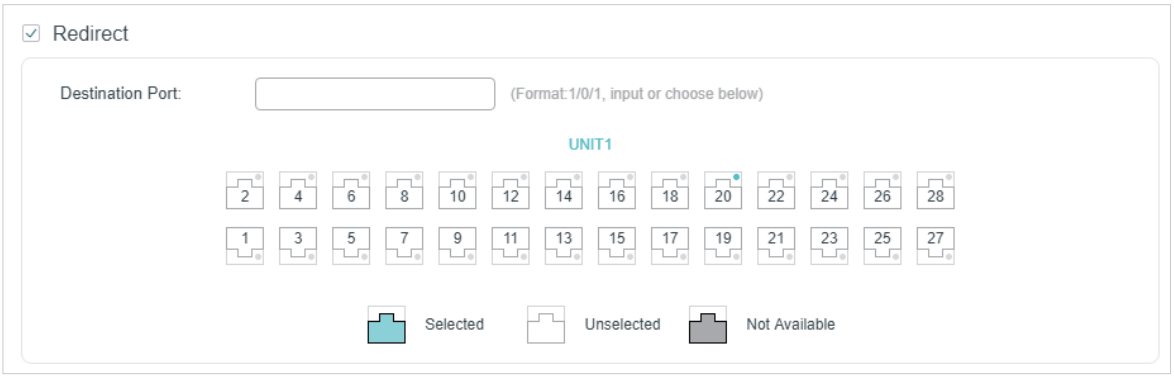


Note:

In the Mirroring feature, the matched packets will be copied to the destination port and the original forwarding will not be affected. While in the Redirect feature, the matched packets will be forwarded only on the destination port.

4) In the **Policy** section, enable or disable the Rate Limit feature for the matched packets. With this option enabled, configure the related parameters.


Figure 2-31 Configuring Rate Limit

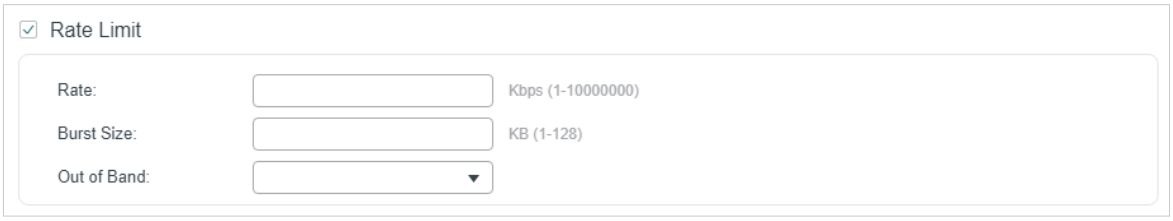

Rate	Specify the transmission rate for the matched packets.
Burst Size	Specify the maximum number of bytes allowed in one second.
Out of Band	Select the action for the packets whose rate is beyond the specified rate. **None:** The packets will be forwarded normally. **Drop:** The packets will be discarded. **Remark DSCP:** You can specify a DSCP value, and the DSCP field of the packets will be changed to the specified one.

5) In the **Policy** section, enable or disable the QoS Remark feature for the matched packets. With this option enabled, configure the related parameters, and the remarked values will take effect in the QoS processing on the switch.

Figure 2-32 Configuring QoS Remark

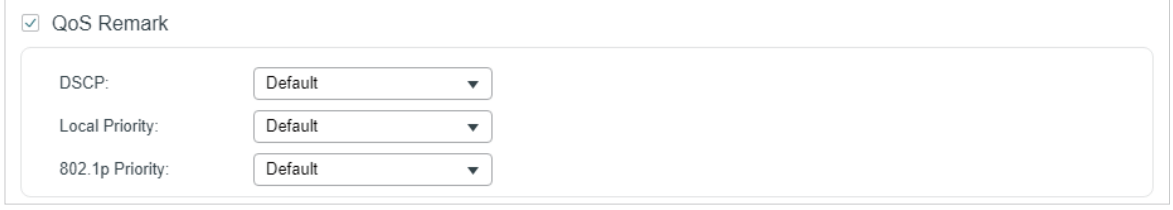

DSCP	Specify the DSCP field for the matched packets. The DSCP field of the packets will be changed to the specified one.
Local Priority	Specify the local priority for the matched packets. The local priority of the packets will be changed to the specified one.
802.1p Priority	Specify the 802.1p priority for the matched packets. The 802.1p priority of the packets will be changed to the specified one.


6) Click **Apply**.

Viewing the ACL Rules

The rules in an ACL are listed in ascending order of their rule IDs. The switch matches a received packet with the rules in order. When a packet matches a rule, the switch stops the match process and performs the action defined in the rule.

Click **Edit ACL** for an entry you have created and you can view the rule table. We take IP ACL rules table for example.

Figure 2-33 Viewing ACL Rules Table

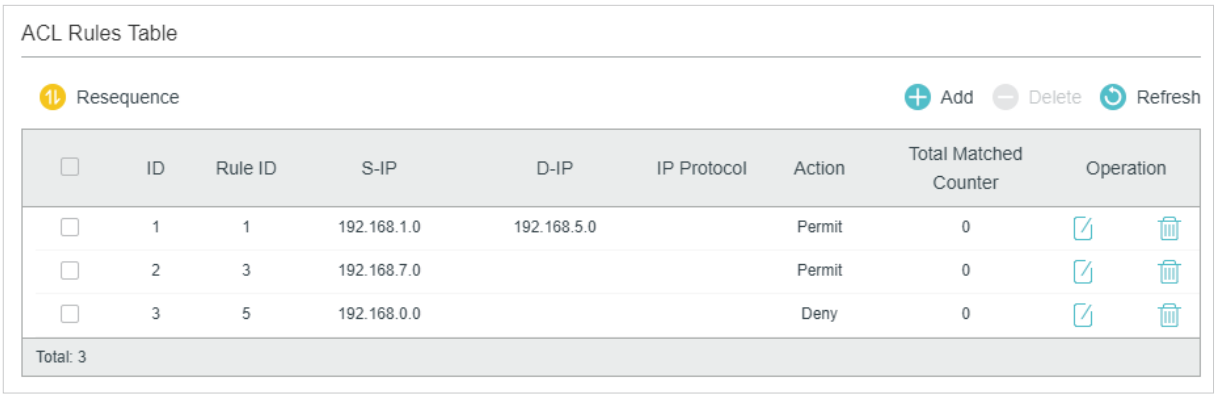

Here you can view and edit the ACL rules. You can also click **Resequence** to resequence the rules by providing a Start Rule ID and Step value.

2.1.4 Configuring ACL Binding

You can bind the ACL to a port or a VLAN. The received packets on the port or in the VLAN will then be matched and processed according to the ACL rules. An ACL takes effect only after it is bound to a port or VLAN.


Note:

- Different types of ACLs cannot be bound to the same port or VLAN.
- Multiple ACLs of the same type can be bound to the same port or VLAN. The switch matches the received packets using the ACLs in order. The ACL that is bound earlier has a higher priority.

Binding the ACL to a Port

Choose the menu **SECURITY > ACL > ACL Binding > Port Binding** and click Add to load the following page.

Figure 2-34 Binding the ACL to a Port

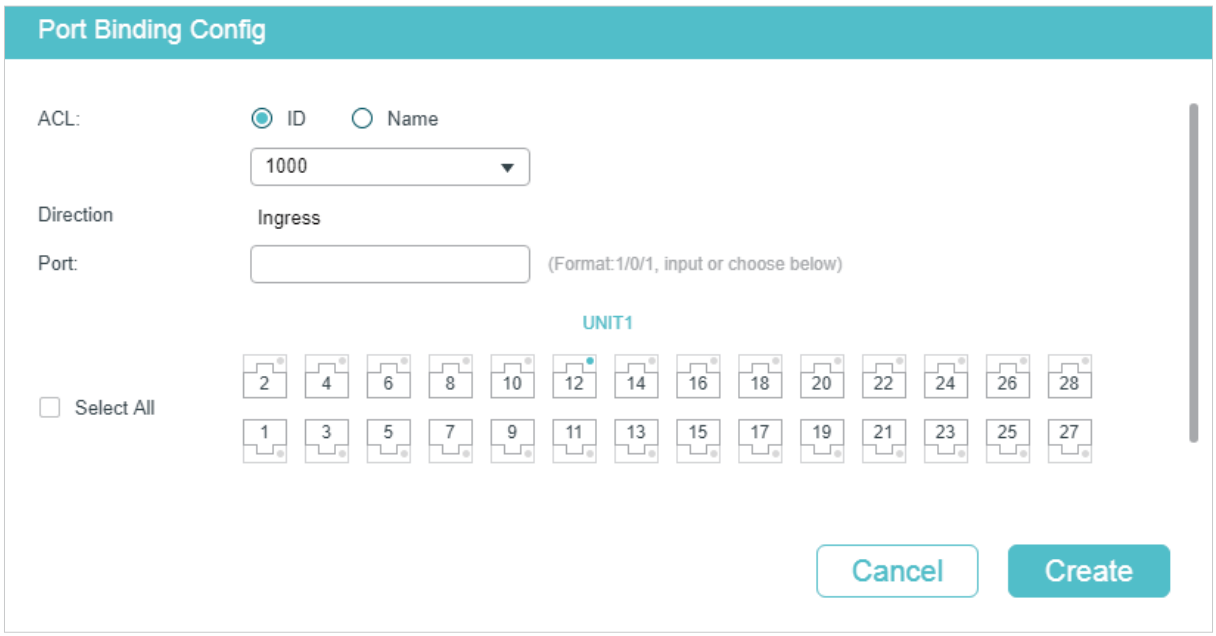


Follow these steps to bind the ACL to a Port:

1) Choose ID or Name to be used for matching the ACL. Then select an ACL from the drop-down list.
2) Specify the port to be bound.
3) Click **Create**.

Binding the ACL to a VLAN

Choose the menu **SECURITY > ACL > ACL Binding > VLAN Binding** to load the following page.

Figure 2-35 Binding the ACL to a VLAN

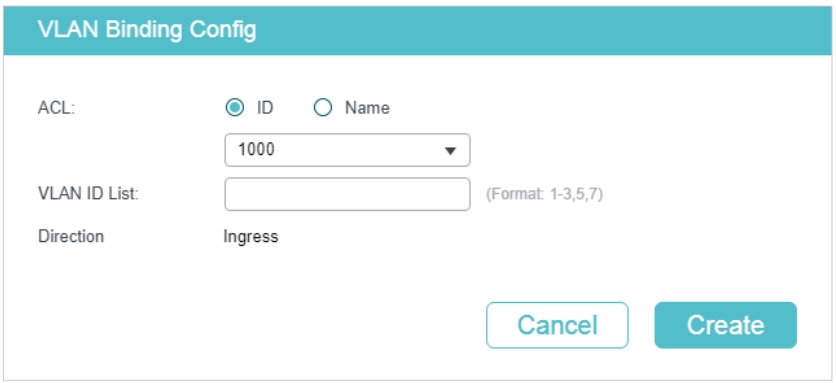

Follow these steps to bind the ACL to a VLAN:

1) Choose ID or Name to be used for matching the ACL. Then select an ACL from the drop-down list.
2) Enter the ID of the VLAN to be bound.
3) Click **Create**.

2.2 Using the CLI

2.2.1 Configuring Time Range

Some ACL-based services or features may need to be limited to take effect only during a specified time period. In this case, you can configure a time range for the ACL. For details about Time Range Configuration, please refer to *Managing System*.

2.2.2 Configuring ACL

Follow the steps to create different types of ACL and configure the ACL rules.

You can define the rules based on source or destination IP address, source or destination MAC address, protocol type, port number and others.

- **MAC ACL**

Step 1	**configure** Enter global configuration mode.
Step 2	**access-list create** *acl-id* **[name** *acl-name***]** Create a MAC ACL. *acl-id*: Enter an ACL ID. The ID ranges from 0 to 499. *acl-name*: Enter a name to identify the ACL.

Step 3	**access-list mac** *acl-id-or-name* **rule** { auto | *rule-id* } { deny | permit } **logging** {enable | disable} [**smac** *source-mac* **smask** *source-mac-mask*] [**dmac** *destination-mac* **dmask** *destination-mac-mask*] [**type** ether-type] [**pri** *dot1p-priority*] [**vid** *vlan-id*] [**tseg** *time-range-name*] Add a MAC ACL Rule. *acl-id-or-name*: Enter the ID or name of the ACL that you want to add a rule for. *auto:* The rule ID will be assigned automatically and the interval between rule IDs is 5. *rule-id*: Assign an ID to the rule. deny | permit: Specify the action to be taken with the packets that match the rule. By default, it is set to permit. The packets will be discarded if “deny” is selected and forwarded if “permit” is selected. **logging** {enable | disable}: Enable or disable Logging function for the ACL rule. If "enable" is selected, the times that the rule is matched will be logged every 5 minutes. With ACL Counter trap enabled, a related trap will be generated if the matching times changes. *source-mac*: Enter the source MAC address. The format is FF:FF:FF:FF:FF:FF. *source-mac-mask*: Enter the mask of the source MAC address. This is required if a source MAC address is entered. The format is FF:FF:FF:FF:FF:FF. *destination-mac*: Enter the destination MAC address. The format is FF:FF:FF:FF:FF:FF. *destination-mac-mask*: Enter the mask of the destination MAC address. This is required if a destination MAC address is entered. The format is FF:FF:FF:FF:FF:FF. ether-type: Specify an Ethernet-type with 4 hexadecimal numbers. *dot1p-priority*: The user priority ranges from 0 to 7. The default is No Limit. *vlan-id*: The VLAN ID ranges from 1 to 4094. *time-range-name*: The name of the time-range. The default is No Limit.
Step 4	**exit** Return to global configuration mode.
Step 5	**show access-list** [*acl-id-or-name*] Display the current ACL configuration. *acl-id-or-name*: The ID number or name of the ACL.
Step 6	**end** Return to privileged EXEC mode.
Step 7	**copy running-config startup-config** Save the settings in the configuration file.

The following example shows how to create MAC ACL 50 and configure Rule 5 to permit packets with source MAC address 00:34:A2:D4:34:B5:

Switch#configure

Switch(config)#access-list create 50

Switch(config-mac-acl)#access-list mac 50 **rule** 5 **permit logging** disable **smac** 00:34:A2:D4:34:B5 **smask** FF:FF:FF:FF:FF:FF

Switch(config-mac-acl)#exit

Switch(config)#show access-list 50

MAC access list 50 name: ACL_50

rule 5 permit logging disable smac 00:34:a2:d4:34:b5 smask ff:ff:ff:ff:ff:ff

Switch(config)#end

Switch#copy running-config startup-config

■ IP ACL

Step 1	**configure** Enter global configuration mode.
Step 2	**access-list create** *acl-id* **[name** *acl-name***]** Create an IP ACL. *acl-id*: Enter an ACL ID. The ID ranges from 500 to 999. *acl-name*: Enter a name to identify the ACL.
Step 3	**access-list ip** *acl-id-or-name* **rule** {auto | *rule-id* } {deny | permit} **logging** {enable | disable} [**sip** *sip-address* **sip-mask** *sip-address-mask*] [**dip** *dip-address* **dip-mask** *dip-address-mask*] [**dscp** *dscp-value*] [**tos** *tos-value*] [**pre** *pre-value*] [**frag** {enable | disable}] [**protocol** *protocol* [**s-port** *s-port-number* **s-port-mask** *s-port-mask*] [**d-port** *d-port-number* **d-port-mask** *d-port-mask*] [**tcpflag** *tcpflag*]] [**tseg** *time-range-name*] Add rules to the ACL. *acl-id-or-name*: Enter the ID or name of the ACL that you want to add a rule for. *auto:* The rule ID will be assigned automatically and the interval between rule IDs is 5. *rule-id*: Assign an ID to the rule. deny | permit: Specify the action to be taken with the packets that match the rule. Deny means to discard; permit means to forward. By default, it is set to permit. **logging** {enable | disable}: Enable or disable Logging function for the ACL rule. If "enable" is selected, the times that the rule is matched will be logged every 5 minutes. With ACL Counter trap enabled, a related trap will be generated if the matching times changes. *sip-address:* Enter the source IP address. *sip-address-mask*: Enter the mask of the source IP address. This is required if a source IP address is entered. *dip-address:* Enter the destination IP address. *dip-address-mask:* Enter the mask of the destination IP address. This is required if a destination IP address is entered.

dscp-value: Specify the DSCP value between 0 and 63.

tos-value: Specify an IP ToS value to be matched between 0 and 15.

pre-value: Specify an IP Precedence value to be matched between 0 and 7.

frag {enable | disable}**:** Enable or disable matching of fragmented packets. The default is disable. When enabled, the rule will apply to all fragmented packets and always permit to forward the last fragment of a packet.
Note: **frag** {enable | disable} is not available T2600G-18TS.

protocol: Specify a protocol number between 0 and 255.

s-port-number: With TCP or UDP configured as the protocol, specify the source port number.

s-port-mask: With TCP or UDP configured as the protocol, specify the source port mask with 4 hexadacimal numbers.

d-port-number: With TCP or UDP configured as the protocol, specify the destination port number.

d-port-mask: With TCP or UDP configured as the protocol, specify the destination port mask with 4 hexadacimal numbers.

tcpflag: With TCP configured as the protocol, specify the flag value using either binary numbers or * (for example, 01*010*). The default is *, which indicates that the flag will not be matched.

The flags are URG (Urgent flag), ACK (Acknowledge Flag), PSH (Push Flag), RST (Reset Flag), SYN (Synchronize Flag) and FIN (Finish Flag).

time-range-name: The name of the time-range. The default is No Limit.

Step 4	**end** Return to privileged EXEC mode.
Step 5	**copy running-config startup-config** Save the settings in the configuration file.

The following example shows how to create IP ACL 600, and configure Rule 1 to permit packets with source IP address 192.168.1.100:

Switch#configure

Switch(config)#access-list create 600

Switch(config)#access-list ip 600 **rule** 1 **permit logging** disable **sip** 192.168.1.100 **sip-mask** 255.255.255.255

Switch(config)#show access-list 600

IP access list 600 name: ACL_600

rule 1 permit logging disable sip 192.168.1.100 smask 255.255.255.255

Switch(config)#end

Switch#copy running-config startup-config

Combined ACL

Step 1 **configure**

Enter global configuration mode

Step 2 **access-list create** *acl-id* **[name** *acl-name***]**

Create a Combined ACL.

acl-id: Enter an ACL ID. The ID ranges from 1000 to 1499.

acl-name: Enter a name to identify the ACL.

Step 3 **access-list combined** *acl-id-or-name* **rule** {auto | *rule-id* } {deny | permit} **logging** {enable | disable} [**smac** *source-mac-address* **smask** *source-mac-mask*] [**dmac** *dest-mac-address* **dmask** *dest-mac-mask*] [**vid** *vlan-id*] [**type** *ether-type*] [**pri** *priority*] [**sip** *sip-address* **sip-mask** *sip-address-mask*] [**dip** *dip-address* **dip-mask** *dip-address-mask*] [**dscp** *dscp-value*] [**tos** *tos-value*] [**pre** *pre-value*] [**protocol** *protocol* [**s-port** *s-port-number* **s-port-mask** *s-port-mask*] [**d-port** *d-port-number* **d-port-mask** *d-port-mask*] [**tcpflag** *tcpflag*]] [**tseg** *time-range-name*]

Add rules to the ACL.

acl-id-or-name: Enter the ID or name of the ACL that you want to add a rule for.

auto: The rule ID will be assigned automatically and the interval between rule IDs is 5.

rule-id: Assign an ID to the rule.

deny | permit: Specify the action to be taken with the packets that match the rule. Deny means to discard; permit means to forward. By default, it is set to permit.

logging {enable | disable}: Enable or disable Logging function for the ACL rule. If "enable" is selected, the times that the rule is matched will be logged every 5 minutes. With ACL Counter trap enabled, a related trap will be generated if the matching times changes.

source-mac-address: Enter the source MAC address.

source-mac-mask: Enter the source MAC address mask.

dest-mac-address: Enter the destination MAC address.

dest-mac-mask: Enter the destination MAC address mask. This is required if a destination MAC address is entered.

vlan-id: The VLAN ID ranges from 1 to 4094.

ether-type: Specify the Ethernet-type with 4 hexadecimal numbers.

priority: The user priority ranges from 0 to 7. The default is No Limit.

sip-address: Enter the source IP address.

sip-address-mask: Enter the mask of the source IP address. It is required if source IP address is entered.

dip-address: This is required if a source IP address is entered.

dip-address-mask: Enter the destination IP address mask. This is required if a destination IP address is entered.

dscp-value: Specify the DSCP value between 0 and 63.

tos-value: Specify an IP ToS value to be matched between 0 and 15.

pre-value: Specify an IP Precedence value to be matched between 0 and 7.

protocol: Specify a protocol number between 0 and 255.

s-port-number: With TCP or UDP configured as the protocol, specify the source port number.

s-port-mask: With TCP or UDP configured as the protocol, specify the source port mask with 4 hexadacimal numbers.

d-port-number: With TCP or UDP configured as the protocol, specify the destination port number.

d-port-mask: With TCP or UDP configured as the protocol, specify the destination port mask with 4 hexadacimal numbers.

tcpflag: With TCP configured as the protocol, specify the flag value using either binary numbers or * (for example, 01*010*). The default is *, which indicates that the flag will not be matched.

The flags are URG (Urgent flag), ACK (Acknowledge Flag), PSH (Push Flag), RST (Reset Flag), SYN (Synchronize Flag), and FIN (Finish Flag).

time-range-name: The name of the time-range. The default is No Limit.

Step 4	**end** Return to privileged EXEC mode.
Step 5	**copy running-config startup-config** Save the settings in the configuration file.

The following example shows how to create Combined ACL 1100 and configure Rule 1 to deny packets with source IP address 192.168.3.100 in VLAN 2:

Switch#configure

Switch(config)#access-list create 1100

Switch(config)#access-list combined 1100 **logging** disable **rule** 1 **permit vid** 2 **sip** 192.168.3.100 **sip-mask** 255.255.255.255

Switch(config)#show access-list 2600

Combined access list 2600 name: ACL_2600

rule 1 permit logging disable vid 2 sip 192.168.3.100 sip-mask 255.255.255.255

Switch(config)#end

Switch#copy running-config startup-config

■ IPv6 ACL

Step 1	**configure** Enter global configuration mode

Step 2	**access-list create** *acl-id* **[name** *acl-name***]** Create an IPv6 ACL. *acl-id*: Enter an ACL ID. The ID ranges from 1500 to 1999. *acl-name*: Enter a name to identify the ACL.
Step 3	**access-list ipv6** *acl-id-or-name* **rule** {auto | *rule-id* } {deny | permit} **logging** {enable | disable} [**class** *class-value*] [**flow-label** *flow-label-value*] [**sip** *source-ip-address* **sip-mask** *source-ip-mask*] [**dip** *destination-ip-address* **dip-mask** *destination-ip-mask*] [**s-port** *source-port-number*] [**d-port** *destination-port-number*] [**tseg** *time-range-name*] Add rules to the ACL. *acl-id-or-name*: Enter the ID or name of the ACL that you want to add a rule for. *auto:* The rule ID will be assigned automatically and the interval between rule IDs is 5. *rule-id*: Assign an ID to the rule. deny | permit: Specify the action to be taken with the packets that match the rule. Deny means to discard; permit means to forward. By default, it is set to permit. **logging** {enable | disable}: Enable or disable Logging function for the ACL rule. If "enable" is selected, the times that the rule is matched will be logged every 5 minutes. With ACL Counter trap enabled, a related trap will be generated if the matching times changes. *class-value*: Specify a class value to be matched. It ranges from 0 to 63. *flow-label-value*: Specify a Flow Label value to be matched. *source-ip-address:* Enter the source IP address. Enter the destination IPv6 address to be matched. All types of IPv6 address will be checked. You may enter a complete 128-bit IPv6 address but only the first 64 bits will be valid. *source-ip-mask:* Enter the source IP address mask. The mask is required if the source IPv6 address is entered. Enter the mask in complete format (for example, ffff:ffff:0000:ffff). The mask specifies which bits in the source IPv6 address to match the rule. *destination-ip-address*: Enter the destination IPv6 address to be matched. All types of IPv6 address will be checked. You may enter a complete 128-bit IPv6 addresses but only the first 64 bits will be valid. *destination-ip-mask:* Enter the source IP address mask. The mask is required if the source IPv6 address is entered. Enter the mask in complete format (for example, ffff:ffff:0000:ffff). The mask specifies which bits in the source IPv6 address to match the rule. *source-port-number*: Enter the TCP/UDP source port if TCP/UDP protocol is selected. *destination-port-number*: Enter the TCP/UDP destination port if TCP/UDP protocol is selected. *time-range-name*: The name of the time-range. The default is No Limit.
Step 4	**end** Return to privileged EXEC mode.
Step 5	**copy running-config startup-config** Save the settings in the configuration file.

The following example shows how to create IPv6 ACL 1600 and configure Rule 1 to deny packets with source IPv6 address CDCD:910A:2222:5498:8475:1111:3900:2020:

Switch#configure

Switch(config)#access-list create 1600

Switch(config)#access-list ipv6 1600 **rule** 1 **deny logging** disable **sip** CDCD:910A:2222:5498:8475:1111:3900:2020 **sip-mask** ffff:ffff:ffff:ffff

Switch(config)#show access-list 1600

IPv6 access list 1600 name: ACL_1600

rule 1 deny logging disable sip cdcd:910a:2222:5498:8475:1111:3900:2020 sip-mask ffff:ff

ff:ffff:ffff

Switch(config)#end

Switch#copy running-config startup-config

Packet Content ACL

Note:

Packet Content ACL is not available for T2600G-18TS.

Step 1	**configure** Enter global configuration mode
Step 2	**access-list create** *acl-id* **[name** *acl-name***]** Create a Packet Content ACL. *acl-id*: Enter an ACL ID. The ID ranges from 2000 to 2499. *acl-name*: Enter a name to identify the ACL.
Step 3	**access-list packet-content profile chunk-offset0** *offset0* **chunk-offset1** *offset1* **chunk-offset2** *offset2* **chunk-offset3** *offset3* Specify the offset of each chunk, all the 4 chunks must be set at the same time. *offset0* **-***offset3*: Specify the offset of each chunk, the value ranges from 0 to 31. When the offset is set as 31, it matches the first 127,128, 1, 2 bytes of the packet; when the offset is set as 0, it matches the 3, 4, 5, 6 bytes, and so on, for the rest of the offset value.

Step 4	**access-list packet-content config** *acl-id-or-name* **rule** { auto | *rule-id* } {deny | permit} **logging** { enable | disable } [**chunk0** *value* **mask0** *mask*] [**chunk1** *value* **mask1** *mask*] [**chunk2** *value* **mask2** *mask*] [**chunk3** *value* **mask3** *mask*] [**tseg** *time-range-name*] Add rules to the ACL. *acl-id-or-name*: Enter the ID or name of the ACL that you want to add a rule for. auto*:* The rule ID will be assigned automatically and the interval between rule IDs is 5. *rule-id*: Assign an ID to the rule. deny | permit: Specify the action to be taken with the packets that match the rule. Deny means to discard; permit means to forward. By default, it is set to permit. **logging** { enable | disable} : Enable or disable Logging function for the ACL rule. If "enable" is selected, the times that the rule is matched will be logged every 5 minutes. With ACL Counter trap enabled, a related trap will be generated if the matching times changes. *value***:** Enter the 4-byte value in hexadecimal for the desired chunk, like '0000ffff'. The Packet Content ACL will check this chunk of packets to examine if the packets match the rule or not. *mask:* Enter the 4-byte mask in hexadecimal for the desired chunk. The mask must be written completely in 4-byte hex mode, like '0000ffff'. The mask specifies which bits to match the rule. *time-range-name*: The name of the time-range. The default is No Limit.
Step 5	**end** Return to privileged EXEC mode.
Step 6	**copy running-config startup-config** Save the settings in the configuration file.

The following example shows how to create Packet Content ACL 2000, and deny the packets with the value of its chunk1 0x58:

Switch#configure

Switch(config)#access-list create 2000

Switch(config)#access-list packet-content profile chunk-offset0 offset0 **chunk-offset1** offset1 **chunk-offset2** offset2 **chunk-offset3** offset3

Switch(config)#packet-content config 2000 **rule** 10 deny **logging** disable **chunk**1 58 **mask1** ffffffff

Switch(config)#show access-list 2000

Packet content access list 2000 name: ACL_2000

rule 10 deny logging disable chunk1 value 0x58 mask 0xffffffff

Switch(config)#end

Switch#copy running-config startup-config

Resequencing Rules

You can resequence the rules by providing a Start Rule ID and Step value.

Step 1	**configure** Enter global configuration mode.
Step 2	**access-list resequence** *acl-id-or-name* **start** *start-rule-id* **step** *rule-id-step-value* Resequence the rules of the specific ACL. *acl-id-or-name*: Enter the ID or name of the ACL. *start-rule-id*: Enter the start rule ID. *rule-id-step-value*: Enter the Step value.
Step 3	**end** Return to privileged EXEC mode.
Step 4	**copy running-config startup-config** Save the settings in the configuration file.

The following example shows how to resequence the rules of MAC ACL 100: set the start rule ID as 1 and the step value as 10:

Switch#configure

Switch(config)#access-list resequence 100 **start** 1 **step** 10

Switch(config)#show access-list 100

MAC access list 100 name: "ACL_100"

rule 1 deny logging disable smac aa:bb:cc:dd:ee:ff smask ff:ff:ff:ff:ff:ff

rule 11 permit logging disable vid 18

rule 21 permit logging disable dmac aa:cc:ee:ff:dd:33 dmask ff:ff:ff:ff:ff:ff

Switch(config)#end

Switch#copy running-config startup-config

2.2.3 Configuring Policy

Policy allows you to further process the matched packets through operations such as mirroring, rate-limiting, redirecting, or changing priority.

Follow the steps below to configure the policy actions for an ACL rule.

Step 1	**configure** Enter global configuration mode.

Step 2	**access-list action** *acl-id-or-name* **rule** *rule-id* Configure the policy actions for an ACL rule. *acl-id-or-name*: Enter the ID or name of the ACL. *rule-id*: Enter the ID of the ACL rule.
Step 3	**redirect interface** { **fastEthernet** *port* | **gigabitEthernet** *port* | **ten-gigabitEthernet** *port* } (Optional) Define the policy to redirect the matched packets to the desired port. *port*: The destination port to which the packets will be redirected. The default is All. **s-mirror interface** { **fastEthernet** *port* | **gigabitEthernet** *port* | **ten-gigabitEthernet** *port* } (Optional) Define the policy to mirror the matched packets to the desired port. *port*: The destination port to which the packets will be mirrored. **s-condition rate** *rate* **burst** *burst-size* **osd** { **none | discard | remark dscp** *dscp* } (Optional) Define the policy to monitor the rate of the matched packets. *rate*: Specify a rate from 1 to 1000000 kbps. *burst-size*: Specify the number of bytes allowed in one second ranging from 1 to 128. **osd**: Select either "none", "discard" or "remark dscp" as the action to be taken for the packets whose rate is beyond the specified rate. The default is None. When "remark dscp" is selected, you also need to specify the DSCP value for the matched packets. The DSCP value ranges from 0 to 63. Note: Remark DSCP is not available for T2600G-18TS. **qos-remark** [**dscp** *dscp*] [**priority** *pri*] [**dot1p** *pri*] (Optional) Define the policy to remark priority for the matched packets. *dscp*: Specify the DSCP region for the data packets. The value ranges from 0 to 63. **priority** *pri*: Specify the local priority for the data packets. The value ranges from 0 to 7. **dot1p** *pri:* Specify the 802.1p priority for the data packets. The value ranges from 0 to 7.
Step 4	**end** Return to privileged EXEC mode.
Step 5	**copy running-config startup-config** Save the settings in the configuration file.

Redirect the matched packets to port 1/0/4 for rule 1 of MAC ACL 10:

Switch#configure

Switch(config)#access-list action 10 rule 1

Switch(config-action)#redirect interface gigabitEthernet 1/0/4

Switch(config-action)#exit

Switch(config)#show access-list 10

MAC access list 10 name: ACL_10

rule 5 permit logging disable action redirect Gi1/0/4

Switch(config)#end

Switch#copy running-config startup-config

2.2.4 Configuring ACL Binding

You can bind the ACL to a port or a VLAN. The received packets on the port or in the VLAN will then be matched and processed according to the ACL rules. An ACL takes effect only after it is bound to a port or VLAN.

Note:

- Different types of ACLs cannot be bound to the same port or VLAN.
- Multiple ACLs of the same type can be bound to the same port or VLAN. The switch matches the received packets using the ACLs in order. The ACL that is bound earlier has a higher priority.

Follow the steps below to bind ACL to a port or a VLAN:

Step 1	**configure** Enter global configuration mode
Step 2	**access-list bind** *acl-id-or-name* **interface** { [**vlan** *vlan-list*] | [**fastEthernet** *port-list*] | [**gigabitEthernet** *port-list*] | [**ten-gigabitEthernet** *port-list*] } Bind the ACL to a port or a VLAN. *acl-id-or-name*: Enter the ID or name of the ACL that you want to add a rule for. *vlan-list*: Specify the ID or the ID list of the VLAN(s) that you want to bind the ACL to. The valid values are from 1 to 4094, for example, 2-3,5. *port-list*: Specify the number or the list of the Ethernet port that you want to bind the ACL to.
Step 3	**show access-list bind** View the ACL binding configuration.
Step 4	**end** Return to privileged EXEC mode.
Step 5	**copy running-config startup-config** Save the settings in the configuration file.

The following example shows how to bind ACL 1 to port 3 and VLAN 4:

Switch#configure

Switch(config)#access-list bind 1 **interface vlan** 4 **gigabitEthernet** 1/0/3

SSwitch(config)#show access-list bind

ACL ID	ACL NAME	Interface/VID	Direction	Type
---	---	---	---	---
1	ACL_1	Gi1/0/3	Ingress	Port
1	ACL_1	4	Ingress	VLAN

Switch(config)#end

Switch#copy running-config startup-config

2.2.5 Viewing ACL Counting

You can use the following command to view the number of matched packets of each ACL in the privileged EXEC mode and any other configuration mode:

show access-list *acl-id-or-name* **counter**

View the number of matched packets of the specific ACL.

acl-id-or-name: Specify the ID or name of the ACL to be viewed.

3 Configuration Example for ACL


3.1 Configuration Example for MAC ACL

3.1.1 Network Requirements

A company forbids the employees in the R&D department to visit the internal forum during work hours. While the manager of the R&D department can get access to the internal forum without limitation.

As shown below, the internal forum server is connected to the switch via port 1/0/1, and computers in the R&D department are connected to the switch via port 1/0/2.

Figure 3-1 Network Topology

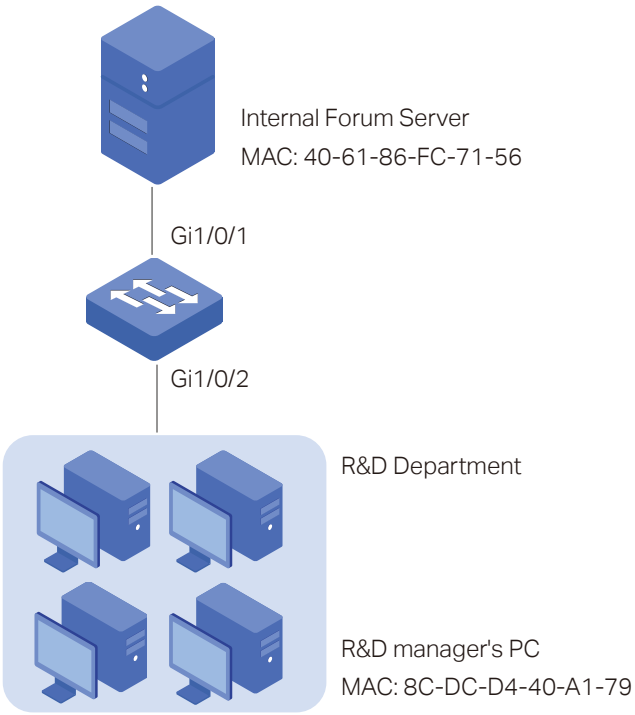

3.1.2 Configuration Scheme

To meet the requirements above, you can set up packet filtering by creating an MAC ACL and configuring rules for it.

- Time Range Configuration

Create a time range entry for the work hour of the company. Apply the time range to the ACL rule which blocks the access to internal forum server.

- ACL Configuration

Create a MAC ACL and configure the following rules for it:

- Configure a permit rule to match packets with source MAC address 8C-DC-D4-40-A1-79 and destination MAC address 40-61-86-FC-71-56. This rule allows the manager of R&D department to visit internal forum at any time.
- Configure a deny rule to match packets with destination MAC address 40-61-86-FC-71-56 and apply the time range of work hours. This rule forbids the employees in the R&D department to visit the internal forum during work hours.
- Configure a permit rule to match all the packets that do not match neither of the above rules.

- Binding Configuration


Bind the MAC ACL to port 1/0/2 so that the ACL rules will be applied to the computer of the devices in the R&D department which are restricted to the internal forum during work hours.

Demonstrated with T2600G-28TS, the following sections explain the configuration procedure in two ways: using the GUI and using the CLI.

3.1.3 Using the GUI


1) Choose the menu **SYSTEM** > **Time Range > Time Range Config** and click Add to load the following page. Create a time range named Work_time.

Figure 3-2 Configuring Time Range

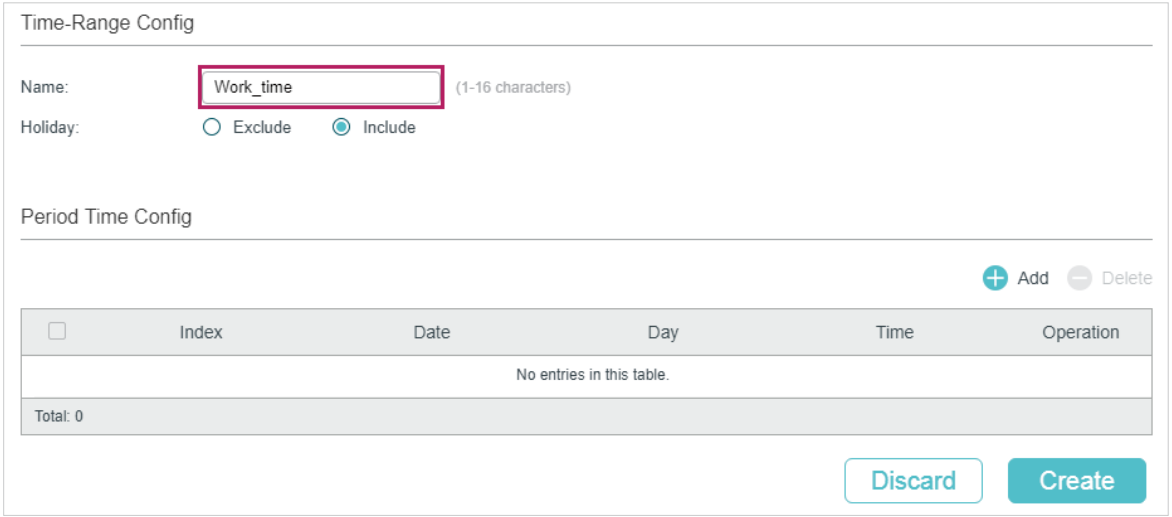


2) In the **Period Time Config** section, click Add and the following window will pop up. Add the work hour of the company in the **Period Time** and click **Save**.

Figure 3-3 Adding Period Time

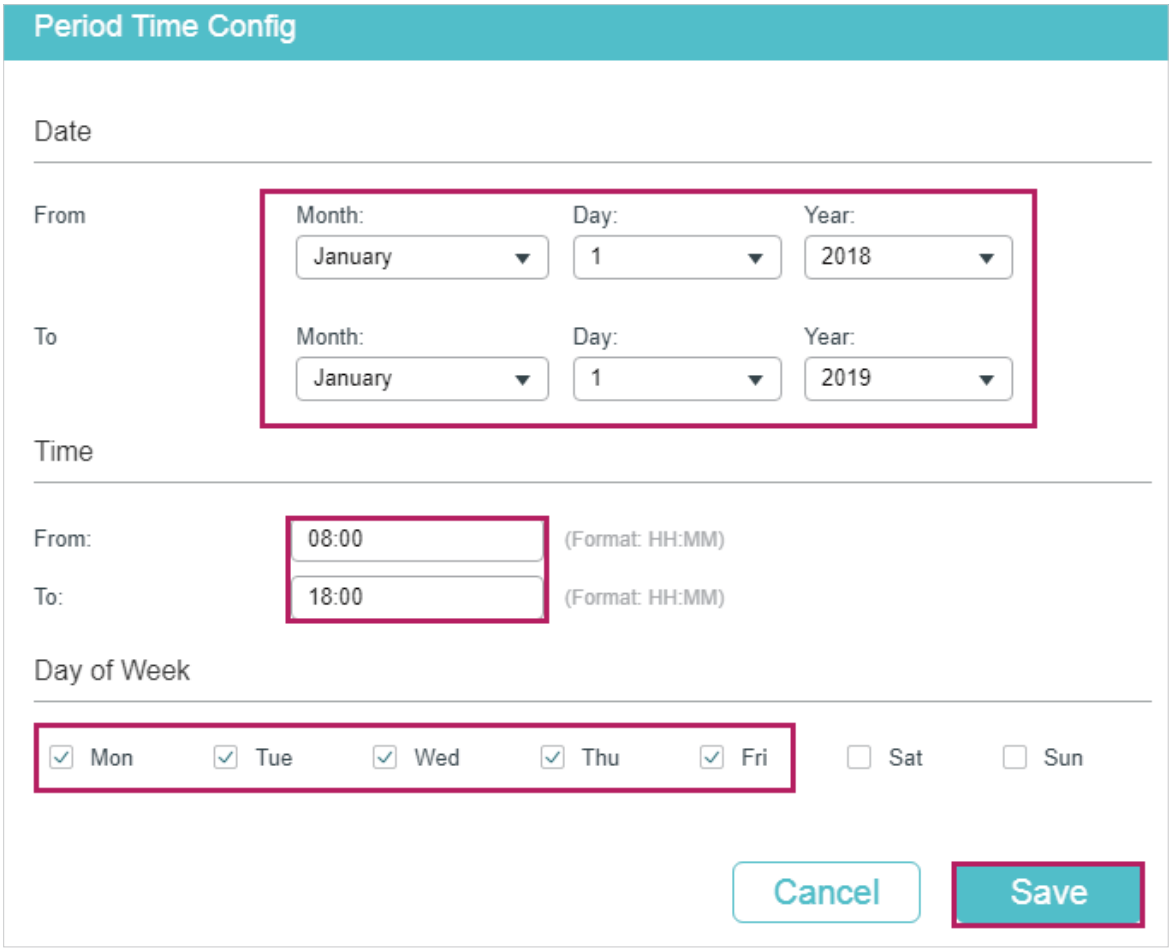


3) After adding the Period Time, click **Create** to save the time range entry.

Figure 3-4 Creating Time Range

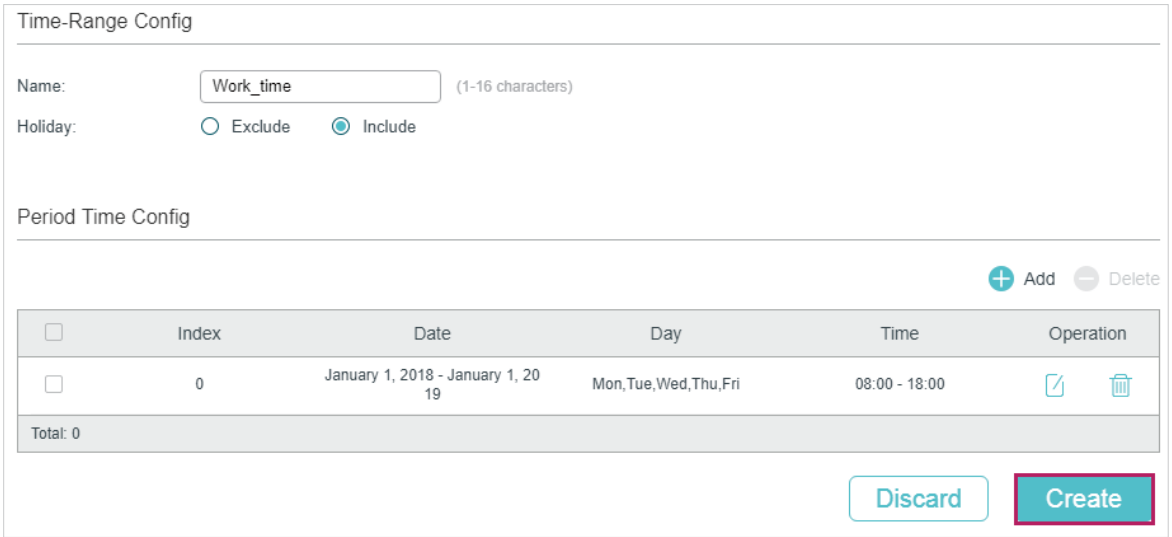


4) Choose the menu **SECURITY > ACL > ACL Config** and click Add to load the following page. Then create a MAC ACL for the marketing department.

Figure 3-5 Creating a MAC ACL

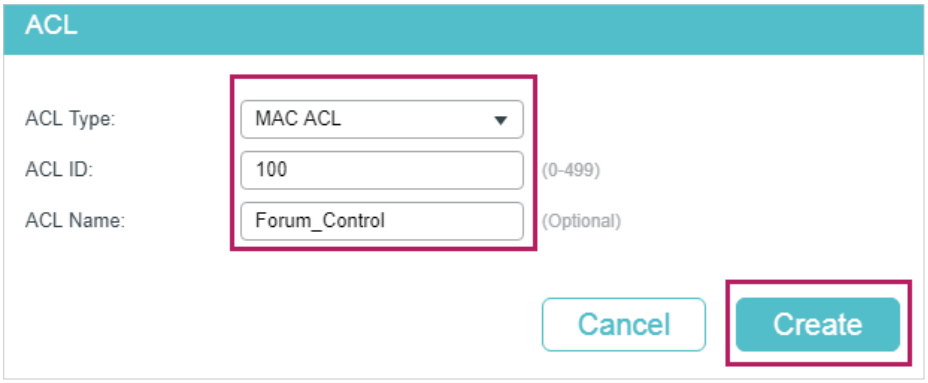


5) Click **Edit ACL** in the Operation column.

Figure 3-6 Editing the MAC ACL

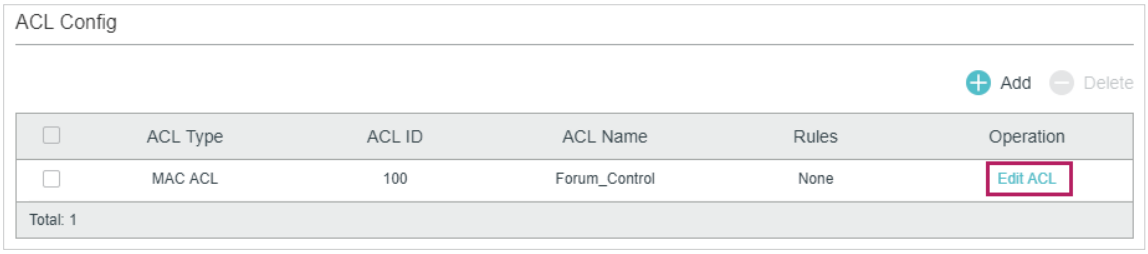


6) On the ACL configuration page, click Add.

Figure 3-7 Editing the MAC ACL

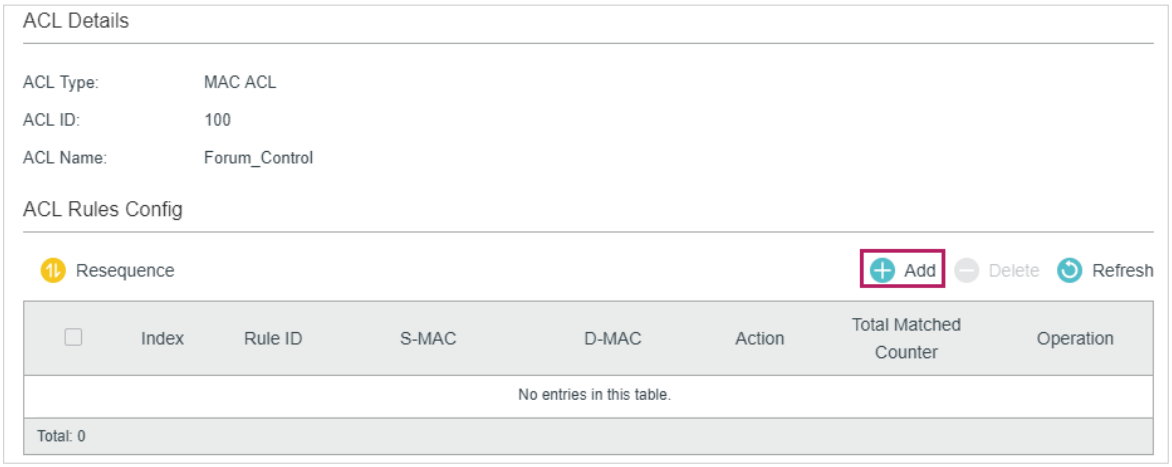


7) Configure rule 5 to permit packets with the source MAC address 8C-DC-D4-40-A1-79 and destination MAC address 40-61-86-FC-71-56.

Figure 3-8 Configuring Rule 5

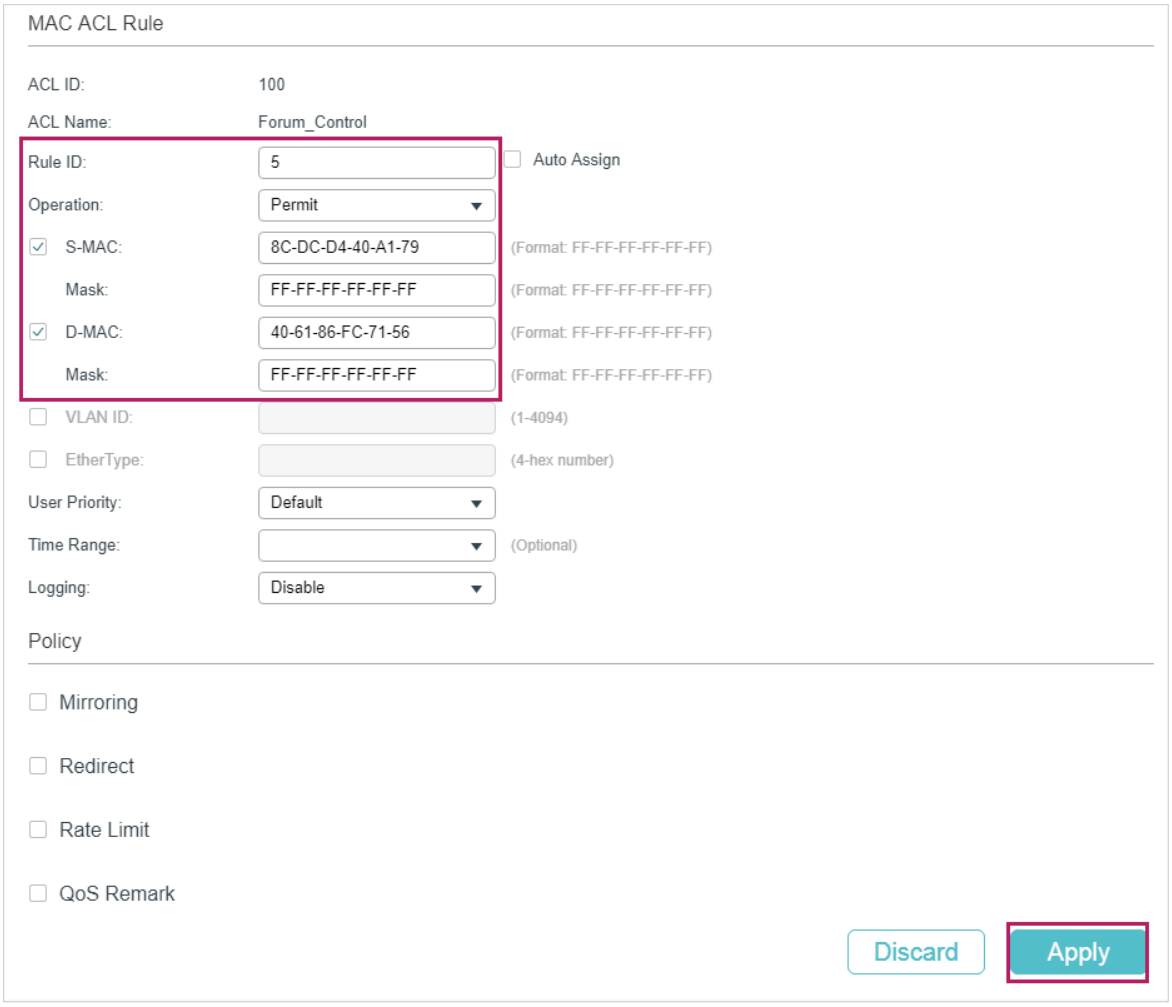


8) In the same way, configure rule 15 to deny packets with destination MAC address 40-61-86-FC-71-56 and apply the time range of work hours.

Figure 3-9 Configuring Rule 15

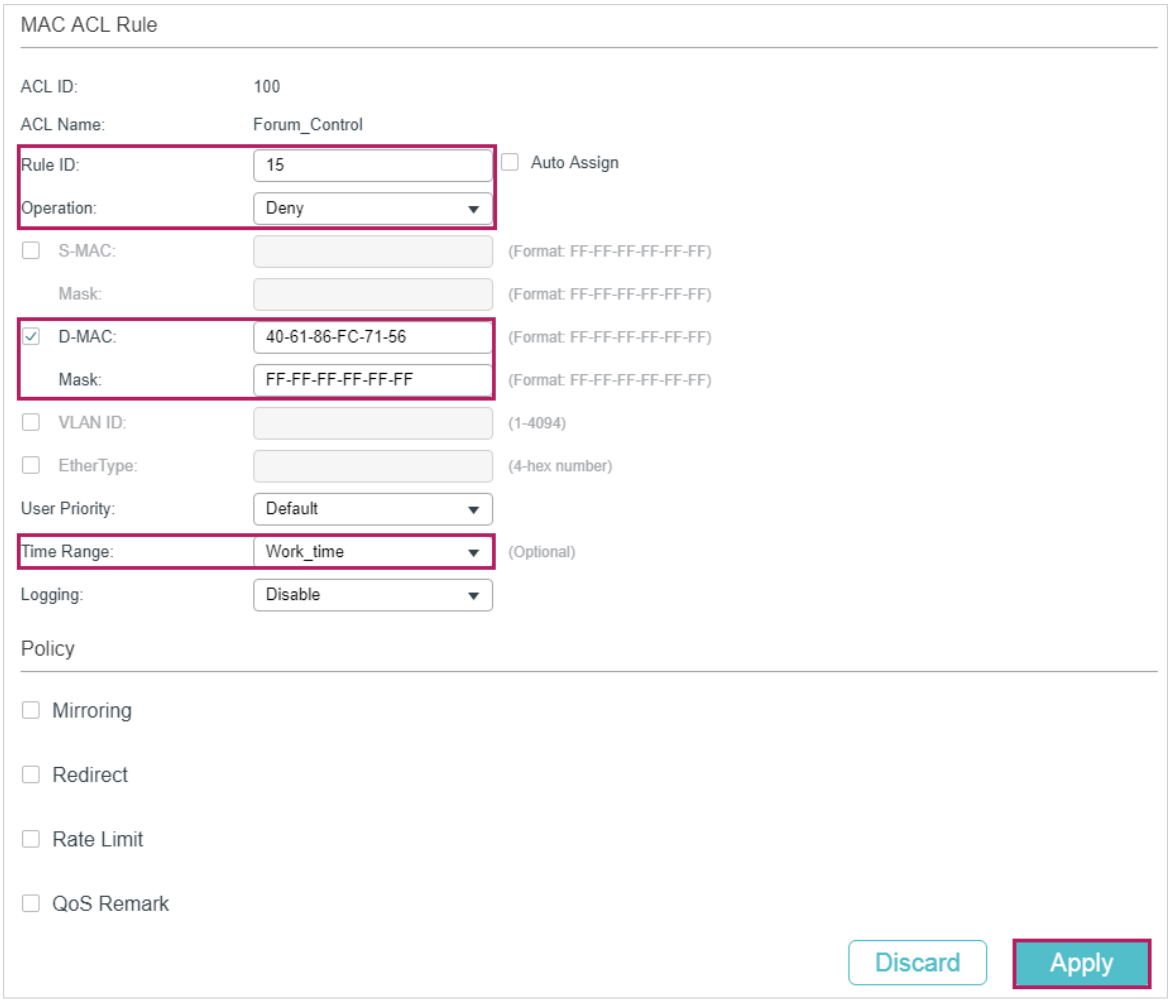


9) Configure rule 25 to permit all the packets that do not match neither of the above rules.

Figure 3-10 Configuring Rule 25

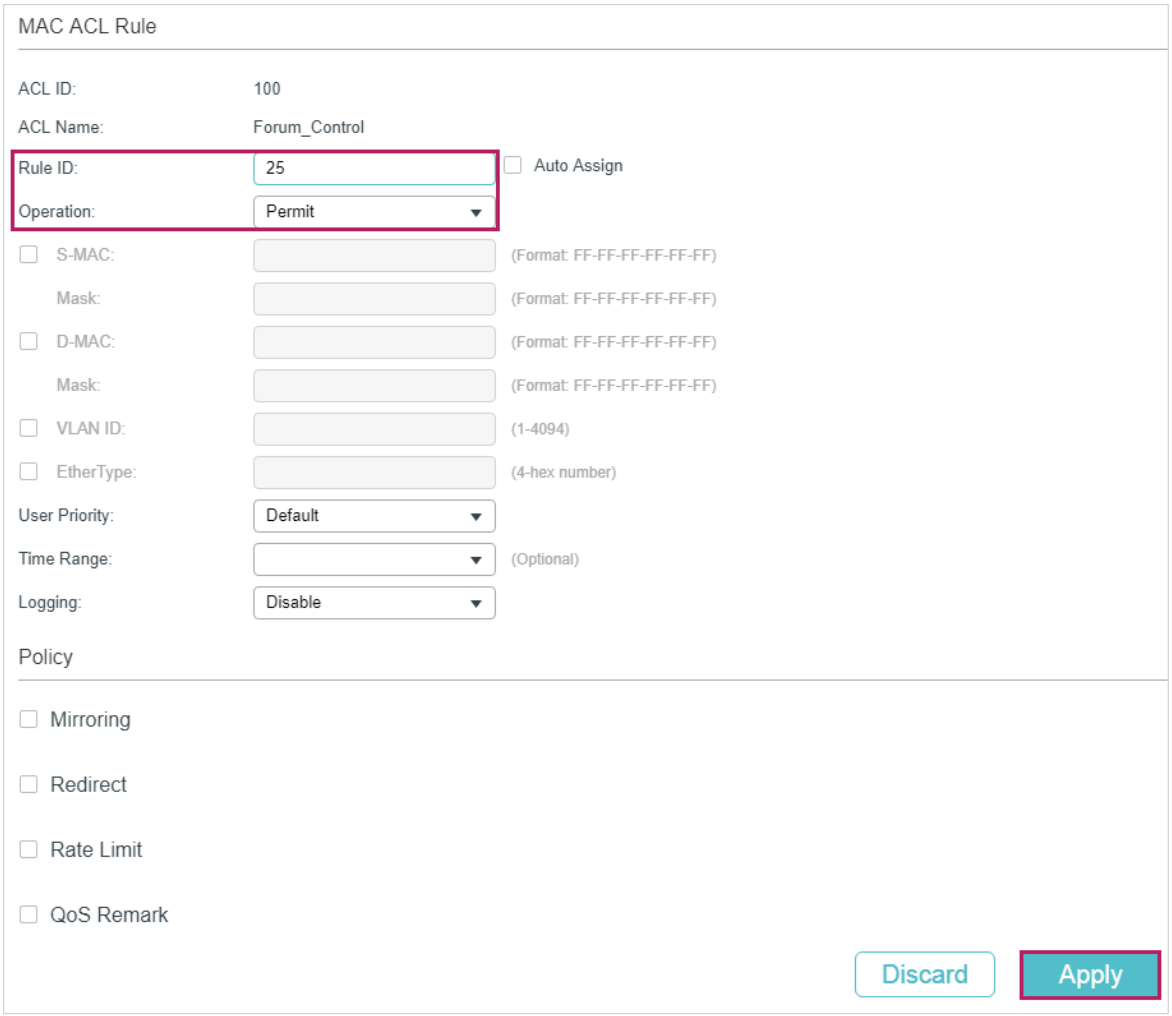

10) Choose the menu **SECURITY > ACL > ACL Binding** and click Add to load the following page. Bind ACL 100 to port 1/0/2 to make it take effect.

Figure 3-11 Binding the ACL to Port 1/0/2

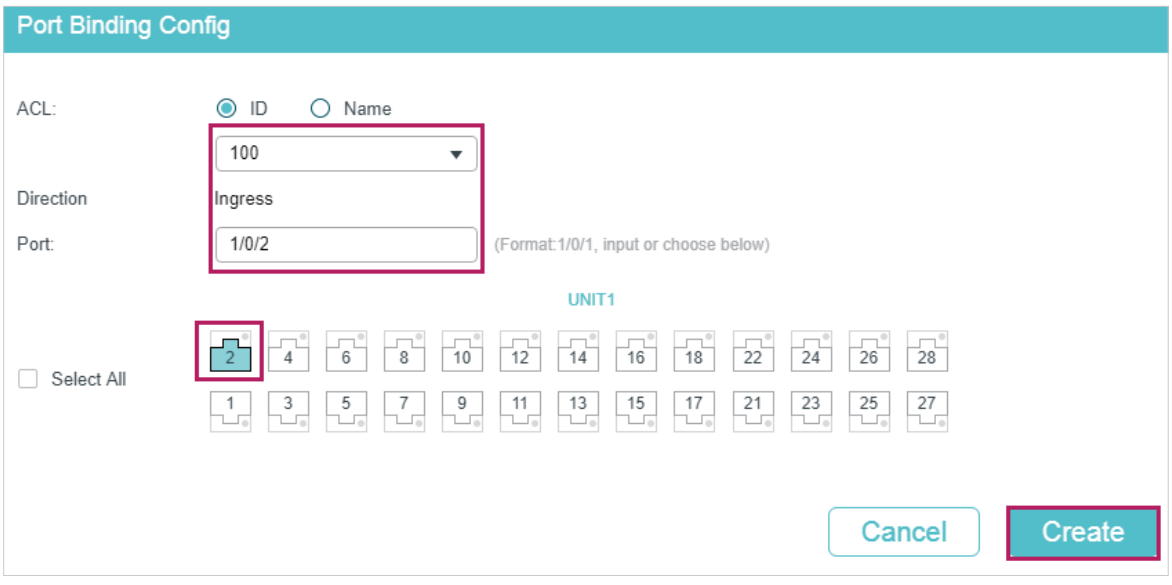

11) Click  to save the settings.

3.1.4 Using the CLI

1) Create a time range entry .

   Switch#config

   Switch(config)#time-range Work_time

   Switch(config-time-range)#holiday include

   Switch(config-time-range)#absolute from 01/01/2018 to 01/01/2019

   Switch(config-time-range)#periodic start 08:00 end 18:00 day-of-the-week 1,2,3,4,5

   Switch(config-time-range)#end

   Switch#copy running-config startup-config

2) Create a MAC ACL.

   Switch#configure

   Switch(config)#access-list create 100 name Forum_Control

3) Configure rule 5 to permit packets with source MAC address 8C-DC-D4-40-A1-79 and destination MAC address 40-61-86-FC-71-56.

   Switch(config)#access-list mac 100 rule 5 permit logging disable smac 8C:DC:D4:40:A1:79 smask FF: FF: FF: FF: FF: FF dmac 40:61:86:FC:71:56 dmask FF: FF: FF: FF: FF: FF

4) Configure rule 15 to deny packets with destination MAC address 40-61-86-FC-71-56.

   Switch(config)#access-list mac 100 rule 15 deny logging disable dmac 40:61:86:FC:71:56 dmask FF: FF: FF: FF: FF: FF tseg Work_time

5) Configure rule 25 to permit all the packets. The rule makes sure that the traffic to other network resources will not be blocked by the switch.

   Switch(config)#access-list mac 100 rule 25 permit logging disable

6) Bind ACL100 to port 1/0/2.

   Switch(config)#access-list bind 100 interface gigabitEthernet 1/0/2

   Switch(config)#end

   Switch#copy running-config startup-config

Verify the Configurations

Verify the MAC ACL 100:

Switch#show access-list 100

MAC access list 100 name: “Forum_Control”

rule 5 permit logging disable smac 8c:dc:d4:40:a1:79 smask ff:ff:ff:ff:ff:ff dmac 40:61:86:fc:71:56 dmask ff:ff:ff:ff:ff:ff

rule 15 deny logging disable dmac 40:61:86:fc:71:56 dmask ff:ff:ff:ff:ff:ff tseg “Work_time”

rule 25 permit logging disable

Switch#show access-list bind


ACL ID	ACL NAME	Interface/VID	Direction	Type
100	Forum_Control	Gi1/0/2	Ingress	Port

3.2 Configuration Example for IP ACL

3.2.1 Network Requirements

As shown below, a company's internal server group can provide different types of services. Computers in the Marketing department are connected to the switch via port 1/0/1, and the internal server group is connected to the switch via port 1/0/2.

Figure 3-12 Network Topology

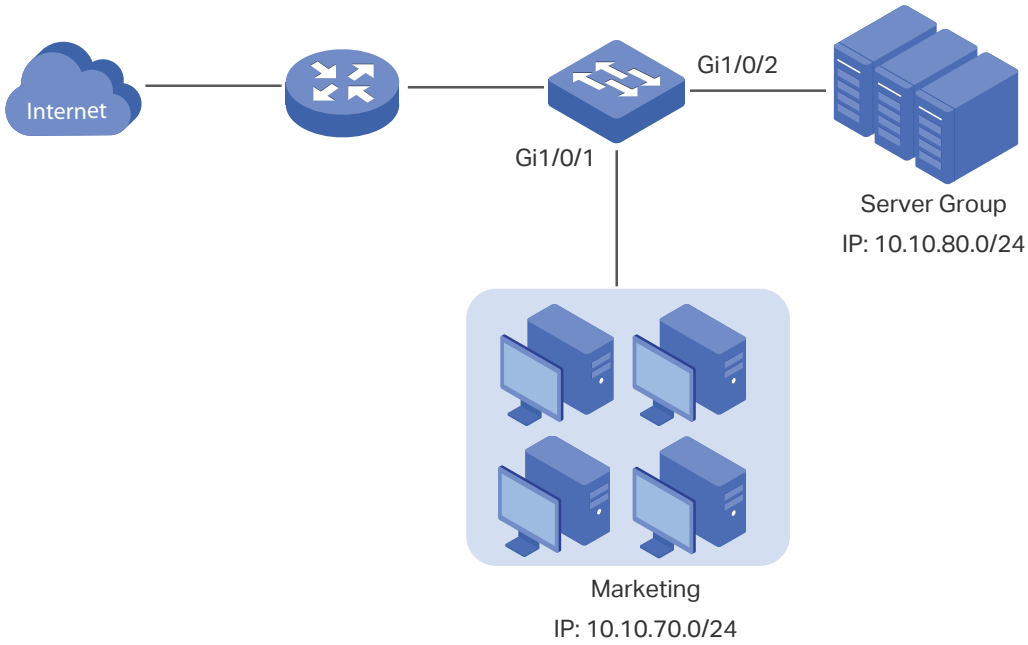

It is required that:

- The Marketing department can only access internal server group in the intranet.
- The Marketing department can only visit http and https websites on the internet.

3.2.2 Configuration Scheme

To meet the requirements above, you can set up packet filtering by creating an IP ACL and configuring rules for it.

- ACL Configuration

Create an IP ACL and configure the following rules for it:

- Configure a permit rule to match packets with source IP address 10.10.70.0/24, and destination IP address 10.10.80.0/24. This rule allows the Marketing department to access internal network servers from intranet.
- Configure four permit rules to match the packets with source IP address 10.10.70.0/24, and destination ports TCP 80, TCP 443 and TCP/UDP 53. These allow the Marketing department to visit http and https websites on the internet.
- Configure a deny rule to match the packets with source IP address 10.10.70.0/24. This rule blocks other network services.

The switch matches the packets with the rules in order, starting with Rule 1. If a packet matches a rule, the switch stops the matching process and initiates the action defined in the rule.

- Binding Configuration


Bind the IP ACL to port 1/0/1 so that the ACL rules will apply to the Marketing department only.

Demonstrated with T2600G-28TS, the following sections explain the configuration procedure in two ways: using the GUI and using the CLI.

3.2.3 Using the GUI

1) Choose the menu **SECURITY > ACL > ACL Config** and click Add to load the following page. Then create an IP ACL for the marketing department.

Figure 3-13 Creating an IP ACL

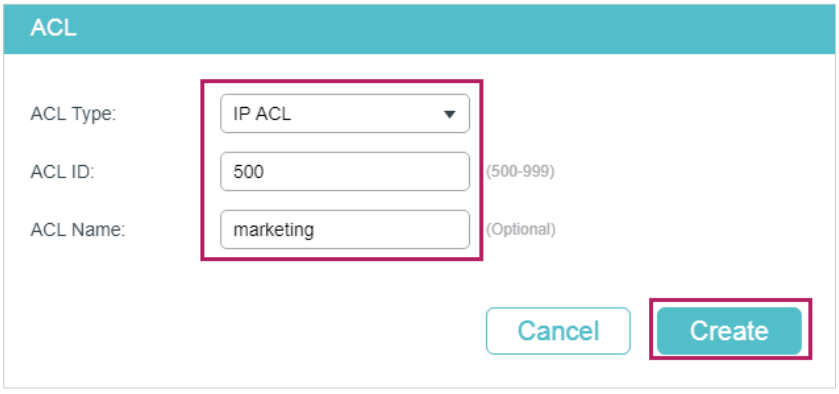


2) Click **Edit ACL** in the Operation column.

Figure 3-14 Editing IP ACL




3) On the ACL configuration page, click Add.

Figure 3-15 Editing IP AC

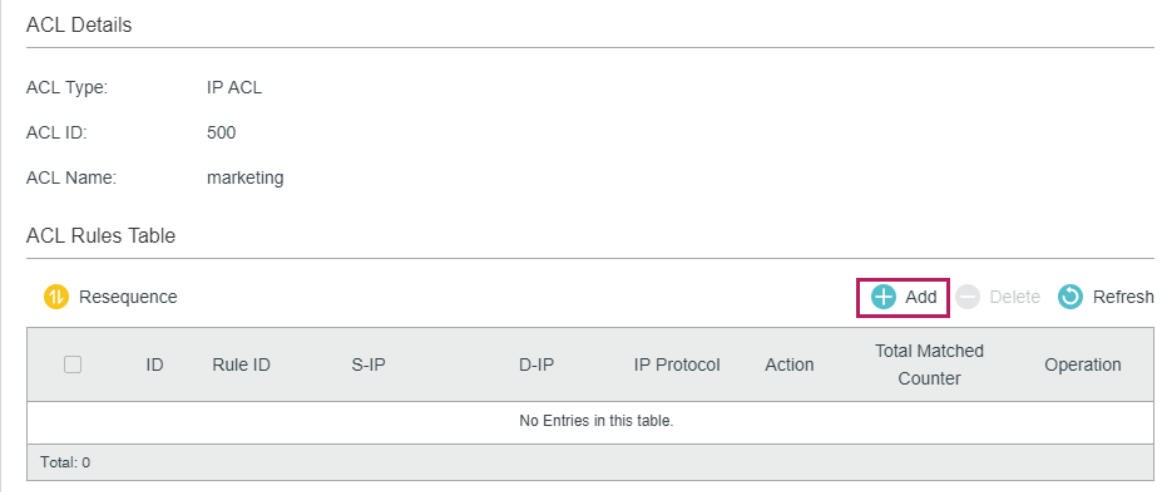

4) Configure rule 1 to permit packets with the source IP address 10.10.70.0/24 and destination IP address 10.10.80.0/24.

Figure 3-16 Configuring Rule 1

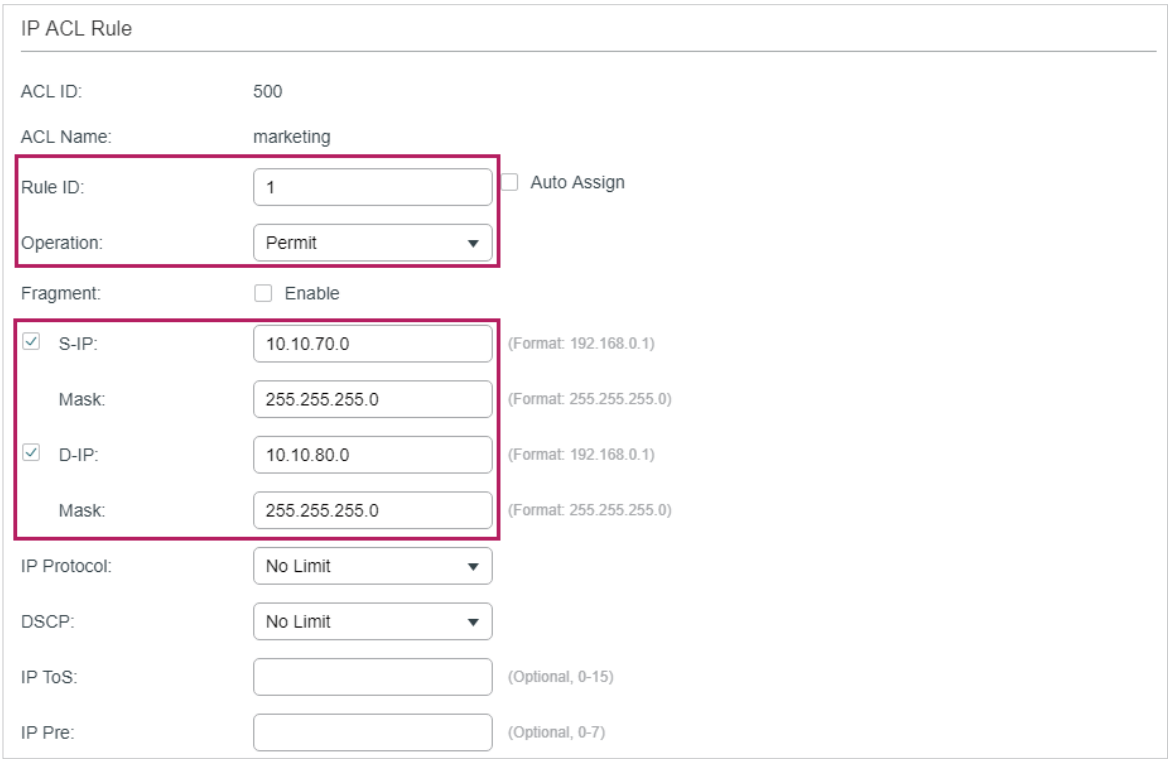

5) In the same way, configure rule 2 and rule 3 to permit packets with source IP 10.10.70.0 and destination port TCP 80 (http service port) and TCP 443 (https service port).

Figure 3-17 Configuring Rule 2


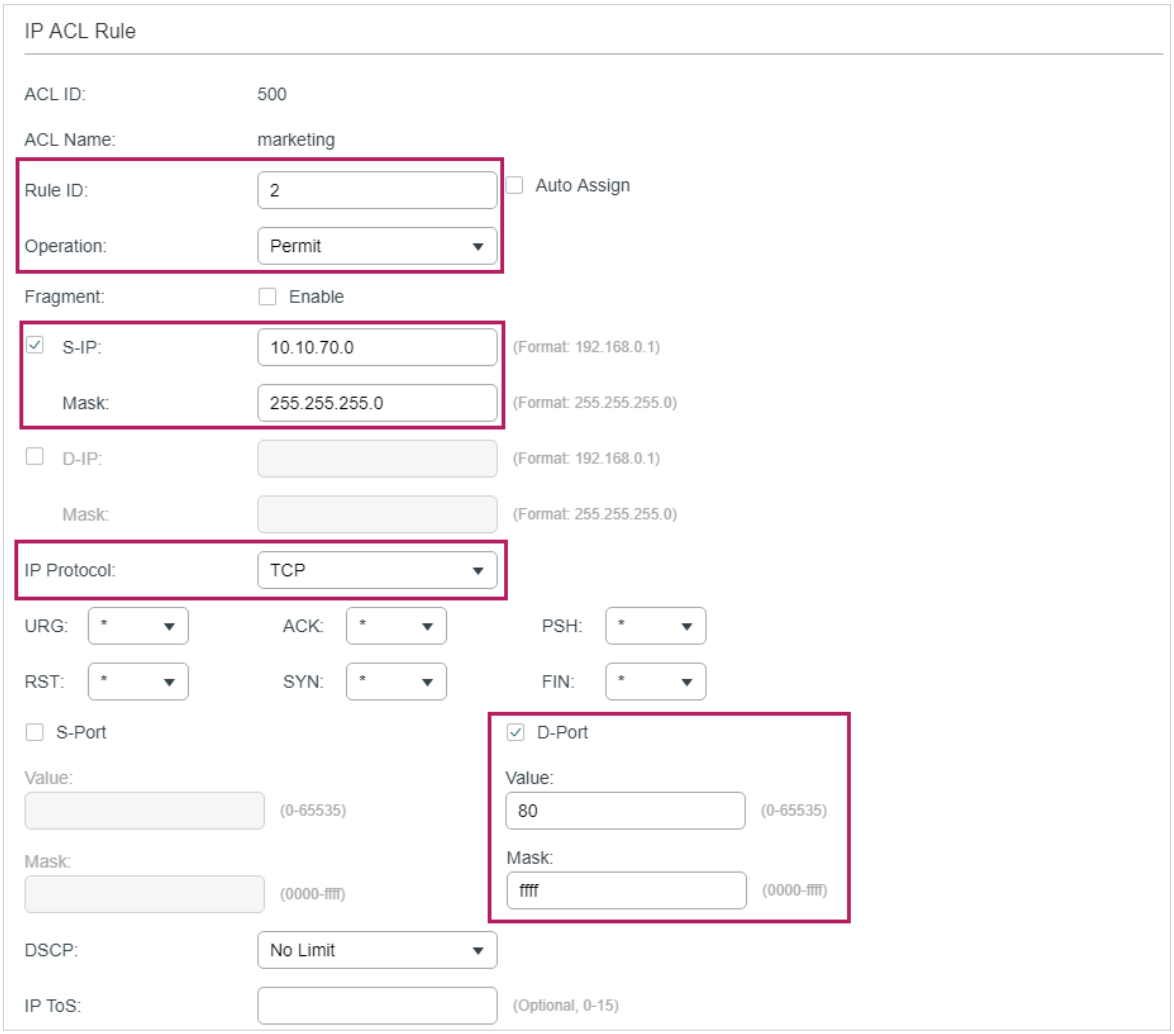


Figure 3-18 Configuring Rule 3

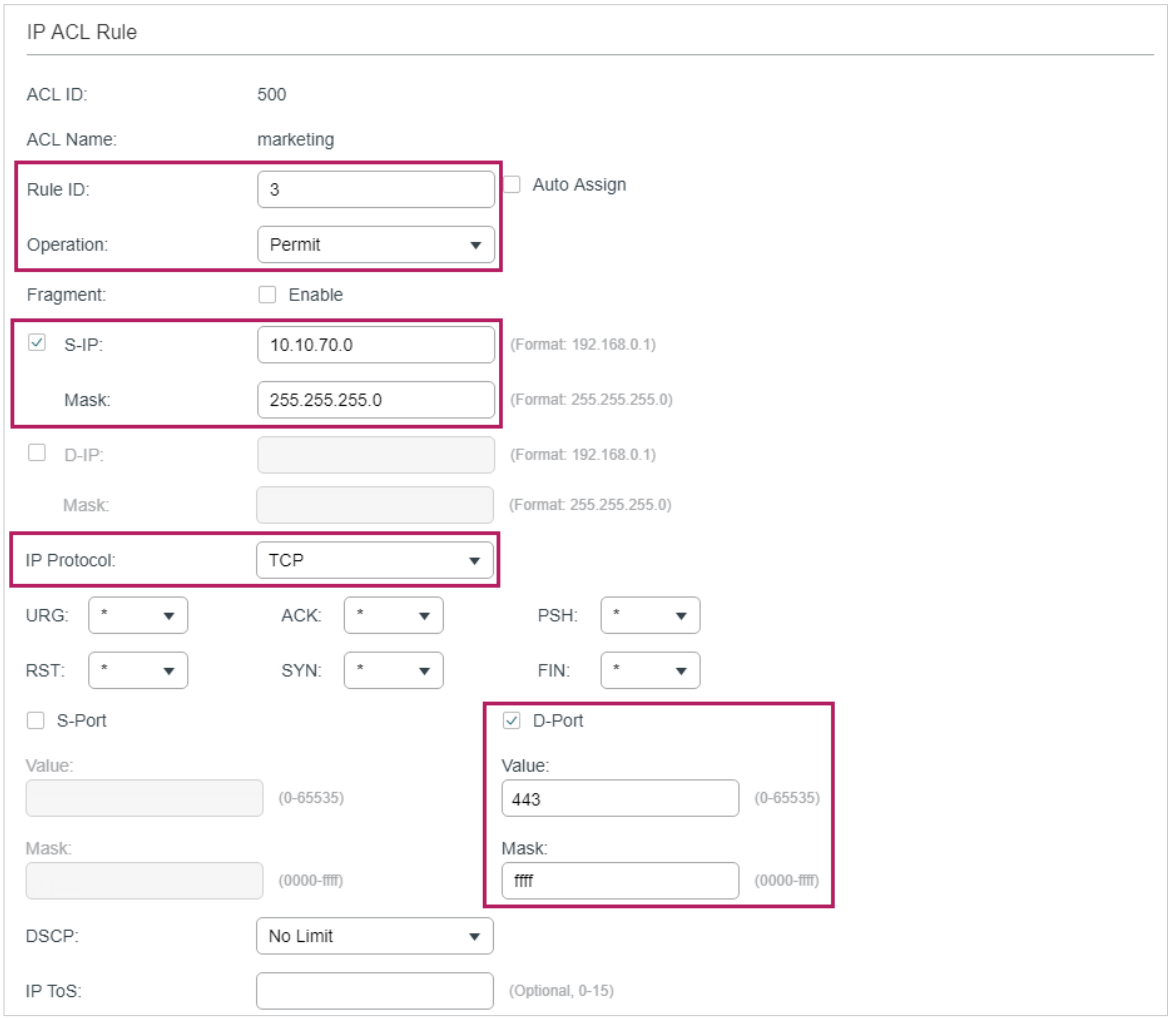

6) In the same way, configure rule 4 and rule 5 to permit packets with source IP 10.10.70.0 and with destination port TCP 53 or UDP 53 (DNS service port).

Figure 3-19 Configuring Rule 4



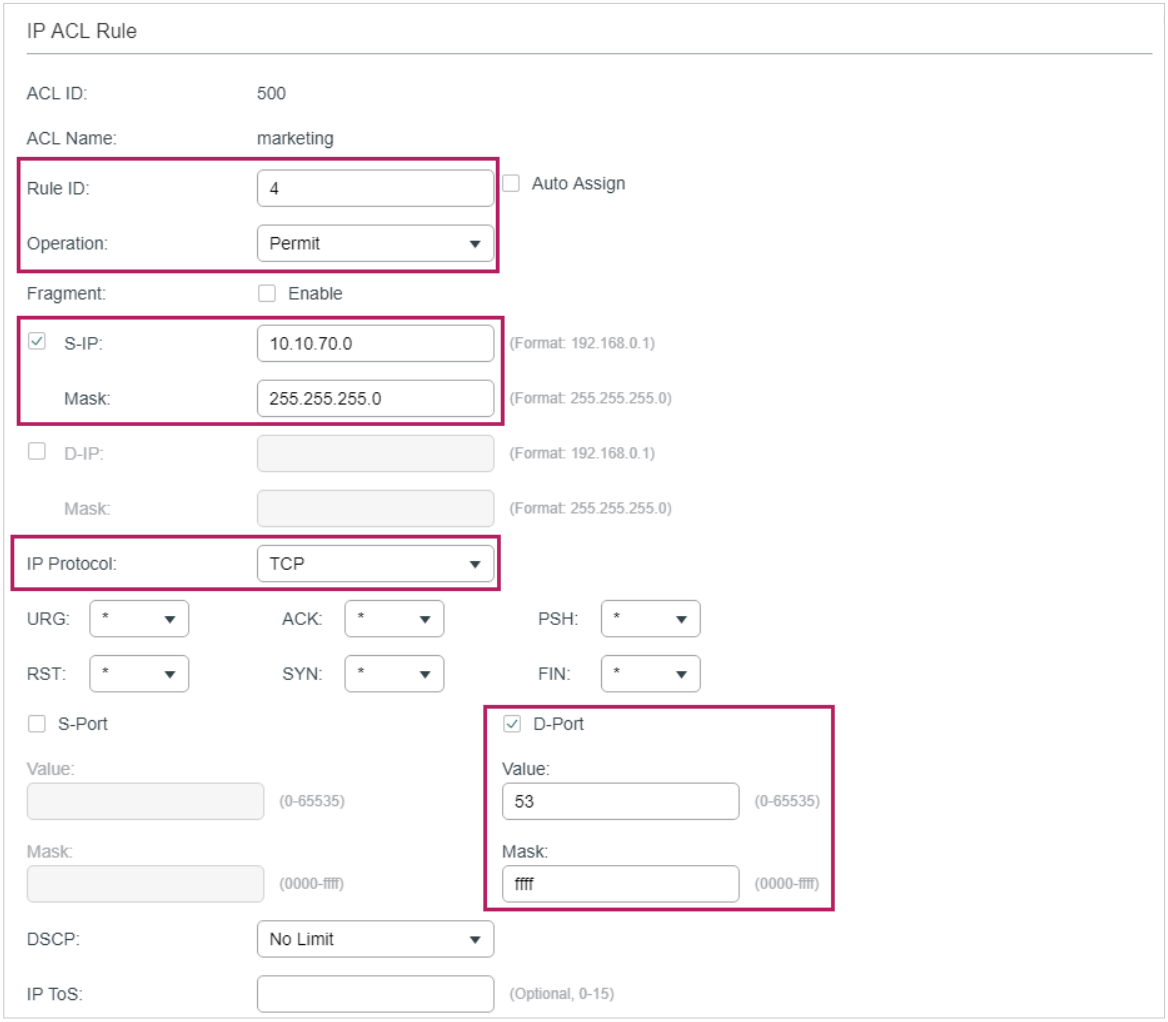


Figure 3-20 Configuring Rule 5

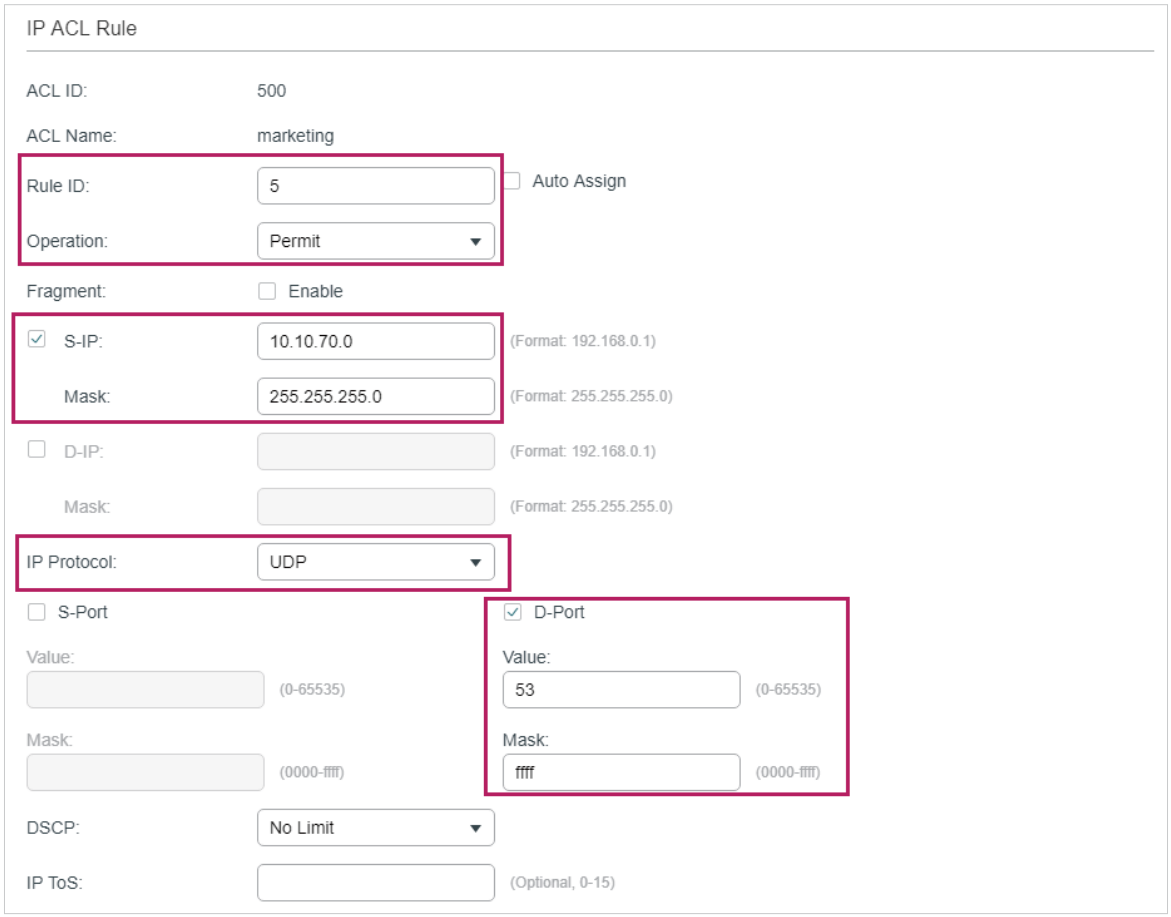


7) In the same way, configure rule 6 to deny packets with source IP 10.10.70.0.

Figure 3-21 Configuring Rule 6

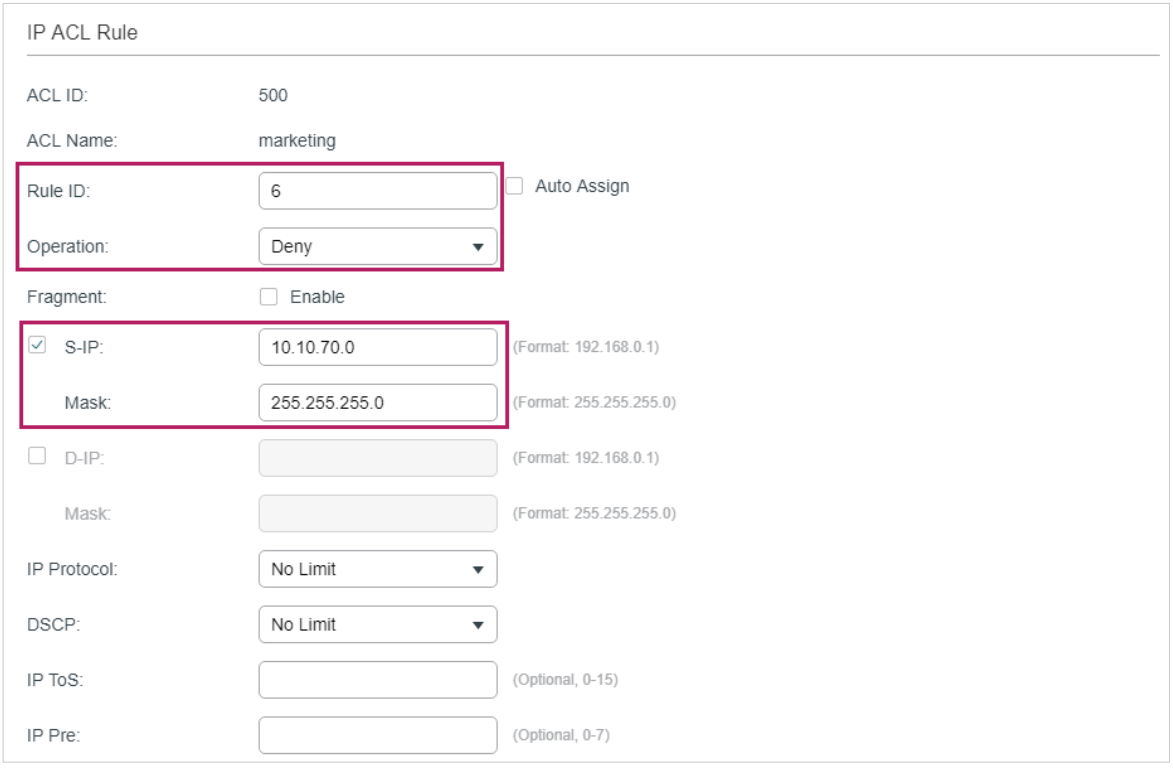

8) Choose the menu **SECURITY > ACL > ACL Binding** and click Add to load the following page. Bind ACL Marketing to port 1/0/1 to make it take effect.

Figure 3-22 Binding the ACL to Port 1/0/1

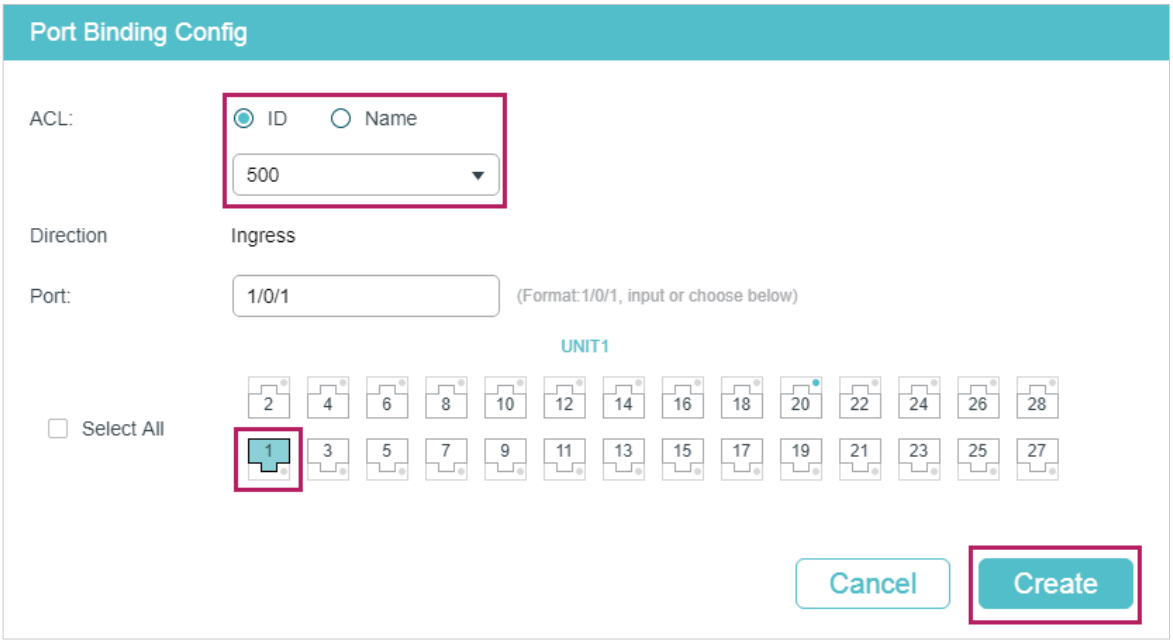

9) Click Save to save the settings.

3.2.4 Using the CLI

1) Create an IP ACL.

Switch#configure

Switch(config)#access-list create 500 name marketing

2) Configure rule 1 to permit packets with source IP 10.10.70.0/24 and destination IP 10.10.80.0/24.

Switch(config)#access-list ip 500 rule 1 permit logging disable sip 10.10.70.0 sip-mask 255.255.255.0 dip 10.10.80.0 dmask 255.255.255.0

3) Configure rule 2 and Rule 3 to permit packets with source IP 10.10.70.0/24, and destination port TCP 80 (http service port) or TCP 443 (https service port).

Switch(config)#access-list ip 500 rule 2 permit logging disable sip 10.10.70.0 sip-mask 255.255.255.0 protocol 6 d-port 80 d-port-mask ffff

Switch(config)#access-list ip 500 rule 3 permit logging disable sip 10.10.70.0 sip-mask 255.255.255.0 protocol 6 d-port 443 d-port-mask ffff

4) Configure rule 4 and rule 5 to permit packets with source IP 10.10.70.0/24, and destination port TCP53 or UDP 53.

Switch(config)#access-list ip 500 rule 4 permit logging disable sip 10.10.70.0 sip-mask 255.255.255.0 protocol 6 d-port 53 d-port-mask ffff

Switch(config)#access-list ip 500 rule 5 permit logging disable sip 10.10.70.0 sip-amask 255.255.255.0 protocol 17 d-port 53 d-port-mask ffff

5) Configure rule 6 to deny packets with source IP 10.10.70.0/24.

Switch(config)#access-list ip 500 rule 2 deny logging disable sip 10.10.70.0 sip-mask 255.255.255.0

6) Bind ACL500 to port 1.

Switch(config)#access-list bind 500 interface gigabitEthernet 1/0/1

Switch(config)#end

Switch#copy running-config startup-config

Verify the Configurations

Verify the IP ACL 500:

Switch#show access-list 500

rule 1 permit logging disable sip 10.10.70.0 smask 255.255.255.0 dip 10.10.80.0 dmask 255.255.255.0

rule 2 permit logging disable sip 10.10.70.0 smask 255.255.255.0 protocol 6 d-port 80

rule 3 permit logging disable sip 10.10.70.0 smask 255.255.255.0 protocol 6 d-port 443

rule 4 permit logging disable sip 10.10.70.0 smask 255.255.255.0 protocol 6 d-port 53

rule 5 permit logging disable sip 10.10.70.0 smask 255.255.255.0 protocol 17 d-port 53

rule 6 deny loggin disable sip 10.10.70.0 smask 255.255.255.0

Switch#show access-list bind


ACL ID	ACL NAME	Interface/VID	Direction	Type
500	marketing	Gi1/0/1	Ingress	Port

3.3 Configuration Example for Combined ACL

3.3.1 Network Requirements

To enhance network security, a company requires that only the network administrator can log in to the switch through Telnet connection. The computers are connected to the switch via port 1/0/2. The network topology is shown as below.

Figure 3-23 Network Topology

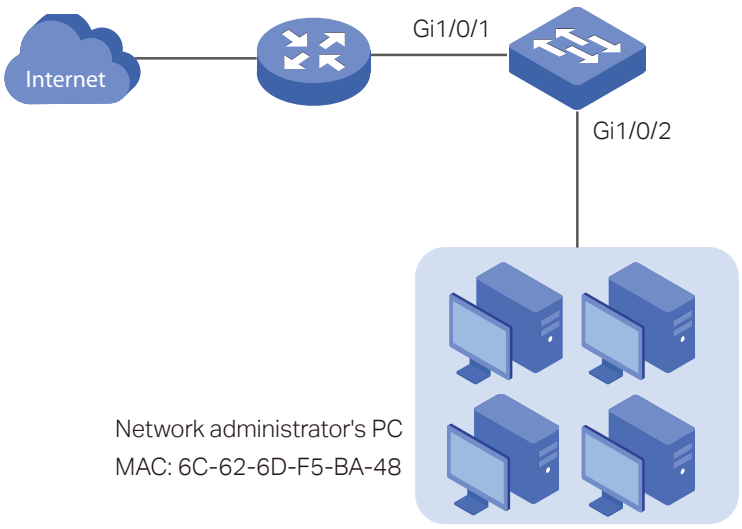

3.3.2 Configuration Scheme

To meet the requirements above, you can set up packet filtering by creating a Combined ACL and configuring rules for it.

- ACL Configuration

Create a Combined ACL and configure the following rules for it:

- Configure a permit rule to match packets with source MAC address 6C-62-6D-F5-BA-48, and destination port TCP 23. This rule allows the computer of the network administrator to access the switch through Telnet connection.

- Configure a deny rule to match all the packets except the packets with source MAC address 6C-62-6D-F5-BA-48 and destination port TCP 23. This rule blocks the Telnet connection to the switch of other computers.

- Configure a permit rule to match all the packets. This rule allows that other devices are given the network services except Telnet connection.

The switch matches the packets with the rules in order, starting with Rule 1. If a packet matches a rule, the switch stops the matching process and initiates the action defined in the rule.

- Binding Configuration


Bind the Combined ACL to port 1/0/2 so that the ACL rules will be applied to the computer of the network administrator and the devices which are restricted to Telnet connection.

Demonstrated with T2600G-28TS, the following sections explain the configuration procedure in two ways: using the GUI and using the CLI.

3.3.3 Using the GUI


1) Choose the menu **SECURITY > ACL > ACL Config** and click Add to load the following page. Then create a Combined ACL for the marketing department.

Figure 3-24 Creating an Combined ACL

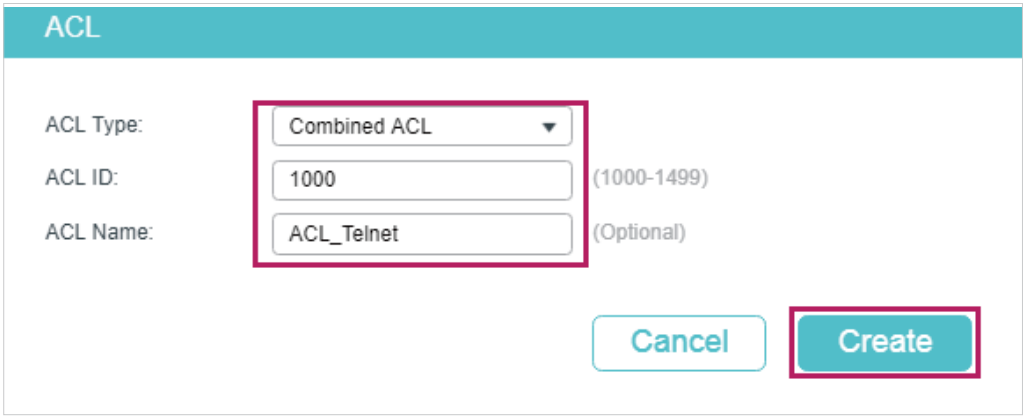

2) Click **Edit ACL** in the Operation column.

Figure 3-25 Editing Combined ACL

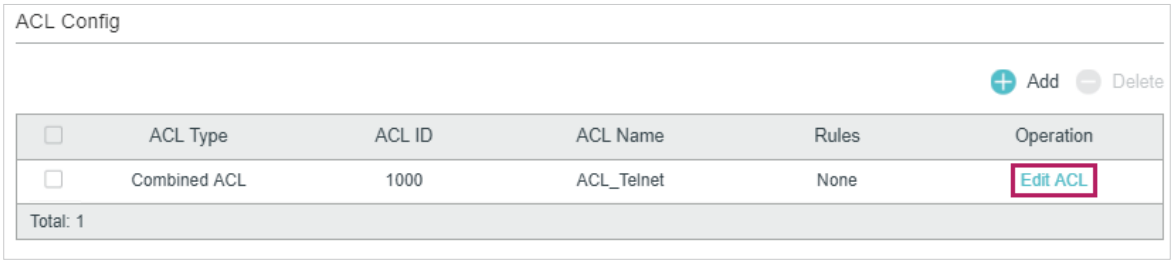


3) On the ACL configuration page, click Add.

Figure 3-26 Editing Combined ACL




4) Configure rule 5 to permit packets with the source MAC address 6C-62-6D-F5-BA-48 and destination port TCP 23 (Telnet service port).

Figure 3-27 Configuring Rule 5

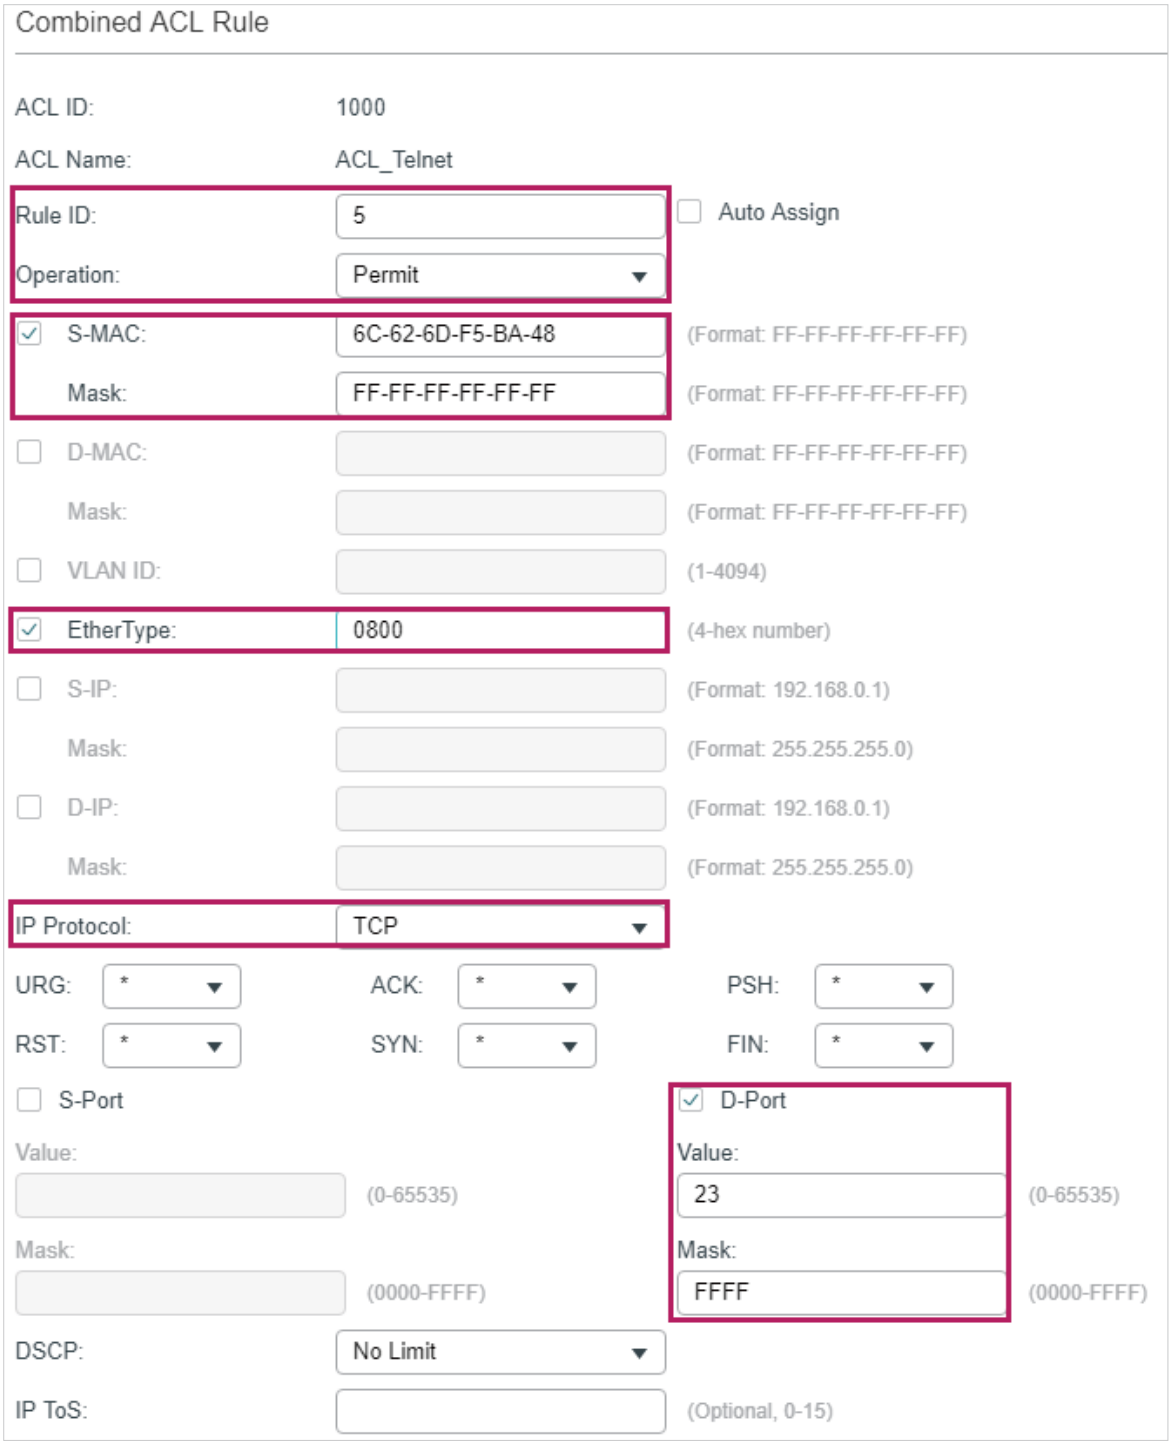


5) Configure rule 15 to deny all the packets except the packet with source MAC address 6C-62-6D-F5-BA-48, and destination port TCP 23 (Telnet service port).

Figure 3-28 Configuring Rule 15

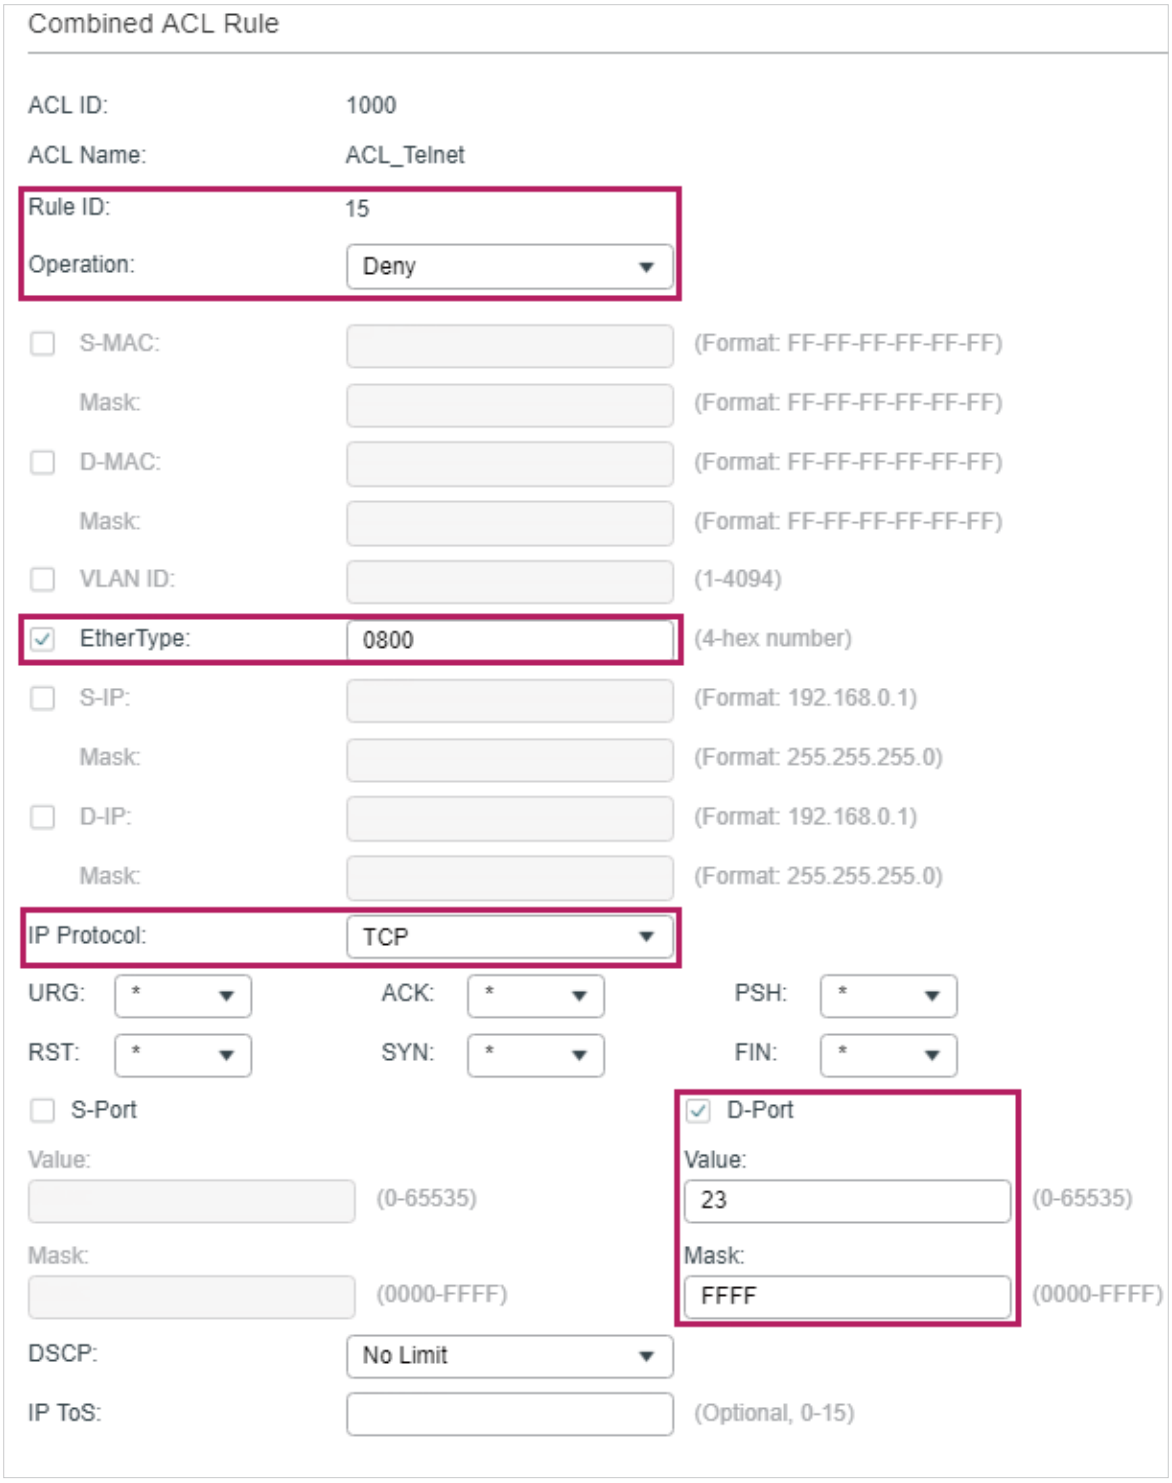


6) In the same way, configure rule 25 to permit all the packets. The rule makes sure that all devices can get other network services normally.

Figure 3-29 Configuring Rule 25

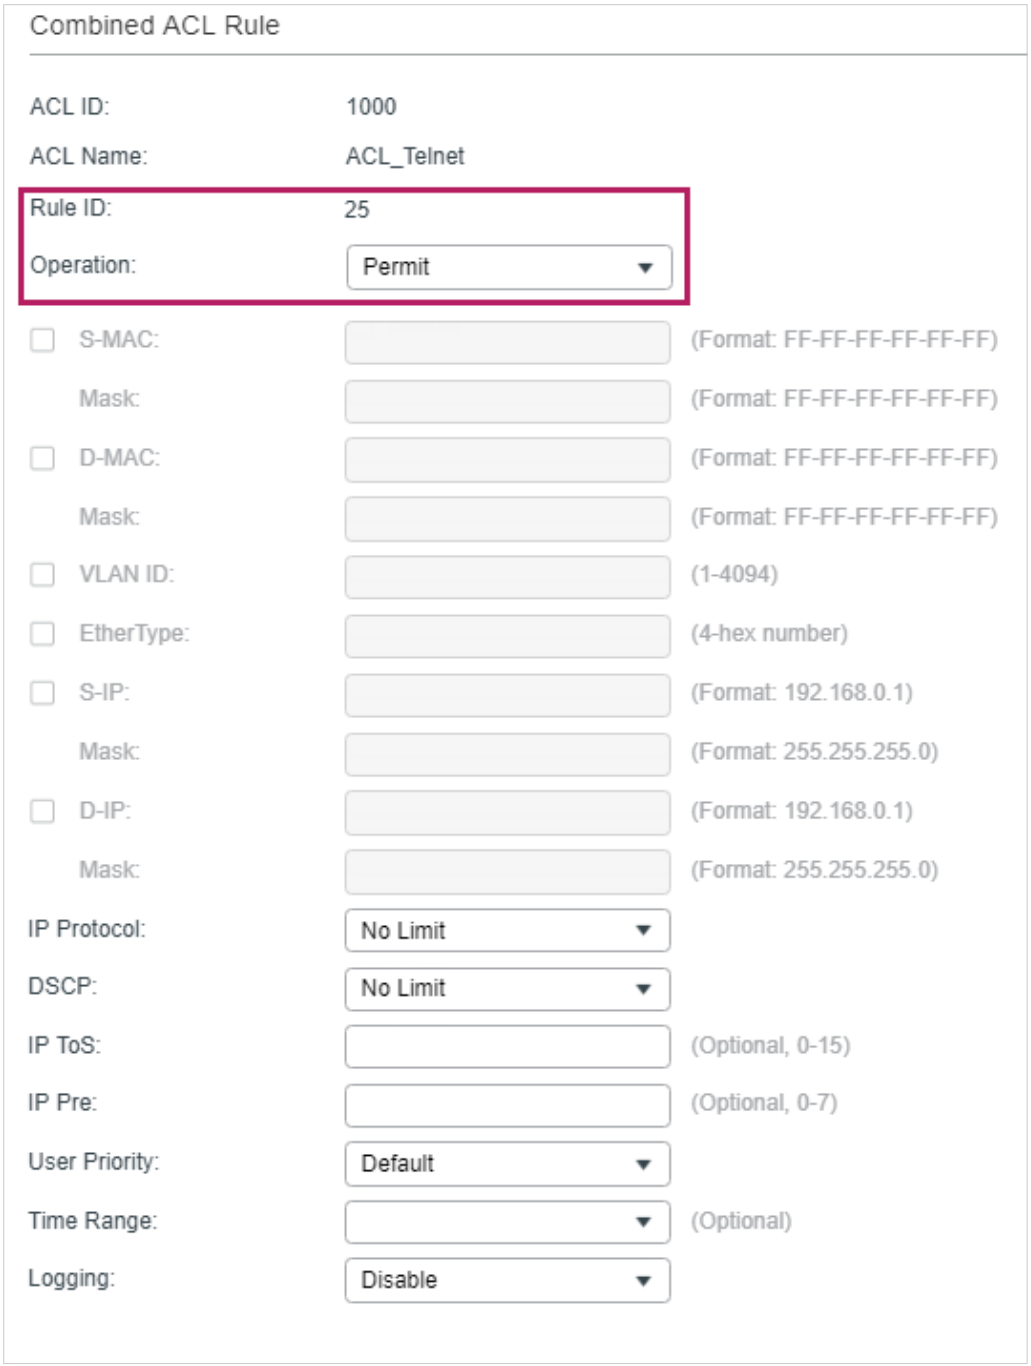

7) Choose the menu **SECURITY > ACL > ACL Binding** and click Add to load the following page. Bind the Policy ACL_Telnet to port 1/0/2 to make it take effect.

Figure 3-30 Binding the ACL to Port 1/0/2

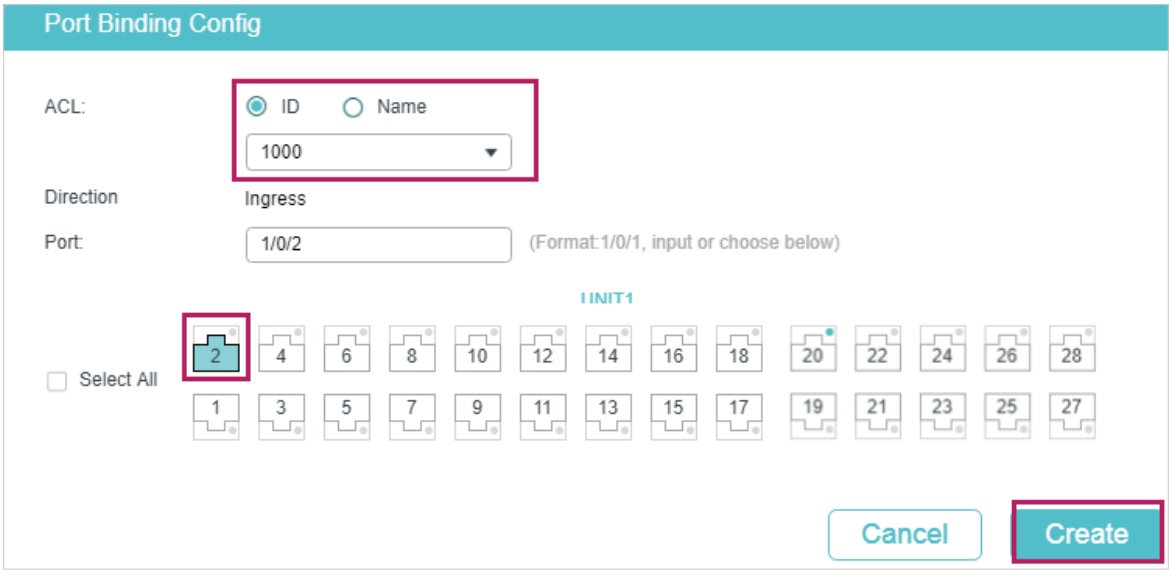

8) Click Save to save the settings.

3.3.4 Using the CLI

1) Create a Combined ACL.

Switch#configure

Switch(config)#access-list create 1000 name ACL_Telnet

2) Configure rule 5 to permit packets with the source MAC address 6C-62-6D-F5-BA-48 and destination port TCP 23 (Telnet service port).

Switch(config)#access-list combined 1000 rule 5 permit logging disable smac 6C:62:6D:F5:BA: 48 smask FF: FF: FF: FF: FF: FF type 0800 protocol 6 d-port 23 d-port-mask FFFF

3) Configure rule 15 to deny all the packets except the packet with source MAC address 6C-62-6D-F5-BA-48, and destination port TCP 23 (Telnet service port).

Switch(config)#access-list combined 1000 rule 15 deny logging disable type 0800 protocol 6 d-port 23 d-port-mask FFFF

4) Configure rule 25 to permit all the packets. The rule makes sure that all devices can get other network services normally.

Switch(config)#access-list combined 1000 rule 25 permit logging disable type 0800 protocol 6 d-port 23 d-port-mask FFFF

5) Bind ACL500 to port 1/0/2.

Switch(config)#access-list bind 500 interface gigabitEthernet 1/0/2

Switch(config)#end

Switch#copy running-config startup-config

Verify the Configurations

Verify the Combined ACL 1000:

Switch#show access-list 1000

Combined access list 1000 name: "ACL_Telnet"

rule 5 permit logging disable smac 6c:62:6d:f5:ba:48 smask ff:ff:ff:ff:ff:ff type 0800 protocol 6 d-port 23

rule 15 deny logging disable type 0800 protocol 6 d-port 23

rule 25 permit logging disable

Switch#show access-list bind

ACL ID	ACL NAME	Interface/VID	Direction	Type
1000	ACL_Telnet	Gi1/0/2	Ingress	Port

4 Appendix: Default Parameters

The default settings of ACL are listed in the following tables:

Table 4-1 MAC ACL

Parameter	Default Setting
Operation	Permit
User Priority	No Limit
Time-Range	No Limit

Table 4-2 IP ACL

Parameter	Default Setting
Operation	Permit
IP Protocol	All
DSCP	No Limit
IP ToS	No Limit
IP Pre	No Limit
Time-Range	No Limit

Table 4-3 IPv6 ACL

Parameter	Default Setting
Operation	Permit
Time-Range	No Limit

Table 4-4 Combined ACL

Parameter	Default Setting
Operation	Permit
Time-Range	No Limit

Table 4-5 Packet Content ACL

Parameter	Default Setting
Operation	Permit
Time-Range	No Limit

Table 4-6 Policy

Parameter	Default Setting
Mirroring	Disabled
Redirect	Disabled
Rate Limit	Disabled
QoS Remark	Disabled

Part 28

Configuring IPv4 IMPB

CHAPTERS

1. IPv4 IMPB
2. IP-MAC Binding Configuration
3. ARP Detection Configuration
4. IPv4 Source Guard Configuration
5. Configuration Examples
6. Appendix: Default Parameters

1 IPv4 IMPB

1.1 Overview

IPv4 IMPB (IP-MAC-Port Binding) is used to bind the IP address, MAC address, VLAN ID and the connected port number of the specified host. Basing on the binding table, the switch can prevent the ARP cheating attacks with the ARP Detection feature and filter the packets that don't match the binding entries with the IP Source Guard feature.

1.2 Supported Features

IP-MAC Binding

This feature is used to add binding entries. The binding entries can be manually configured, or learned by ARP scanning or DHCP snooping. The features ARP Detection and IPv4 Source Guard are based on the IP-MAC Binding entries.

ARP Detection

In an actual complex network, there are high security risks during ARP implementation procedure. The cheating attacks against ARP, such as imitating gateway, cheating gateway, cheating terminal hosts and ARP flooding attack, frequently occur to the network. ARP Detection can prevent the network from these ARP attacks.

- Prevent ARP Cheating Attacks

Based on the IP-MAC Binding entries, the ARP Detection can be configured to detect the ARP packets and filter the illegal ones so as to prevent the network from ARP cheating attacks.

- Prevent ARP Flooding Attack

You can limit the receiving speed of the legal ARP packets on the port to avoid ARP flooding attack.

IPv4 Source Guard

IPv4 Source Guard is used to filter the IPv4 packets based on the IP-MAC Binding table. Only the packets that match the binding rules are forwarded.

2 IP-MAC Binding Configuration

You can add IP-MAC Binding entries in three ways:

- Manual Binding
- Via ARP Scanning
- Via DHCP Snooping

Additionally, you can view, search and edit the entries in the Binding Table.


2.1 Using the GUI

2.1.1 Binding Entries Manually

You can manually bind the IP address, MAC address, VLAN ID and the Port number together on the condition that you have got the detailed information of the hosts.

Choose the menu **SECURITY > IPv4 IMPB > IP-MAC Binding > Manual Binding** and click Add to load the following page.

Figure 2-1 Manual Binding

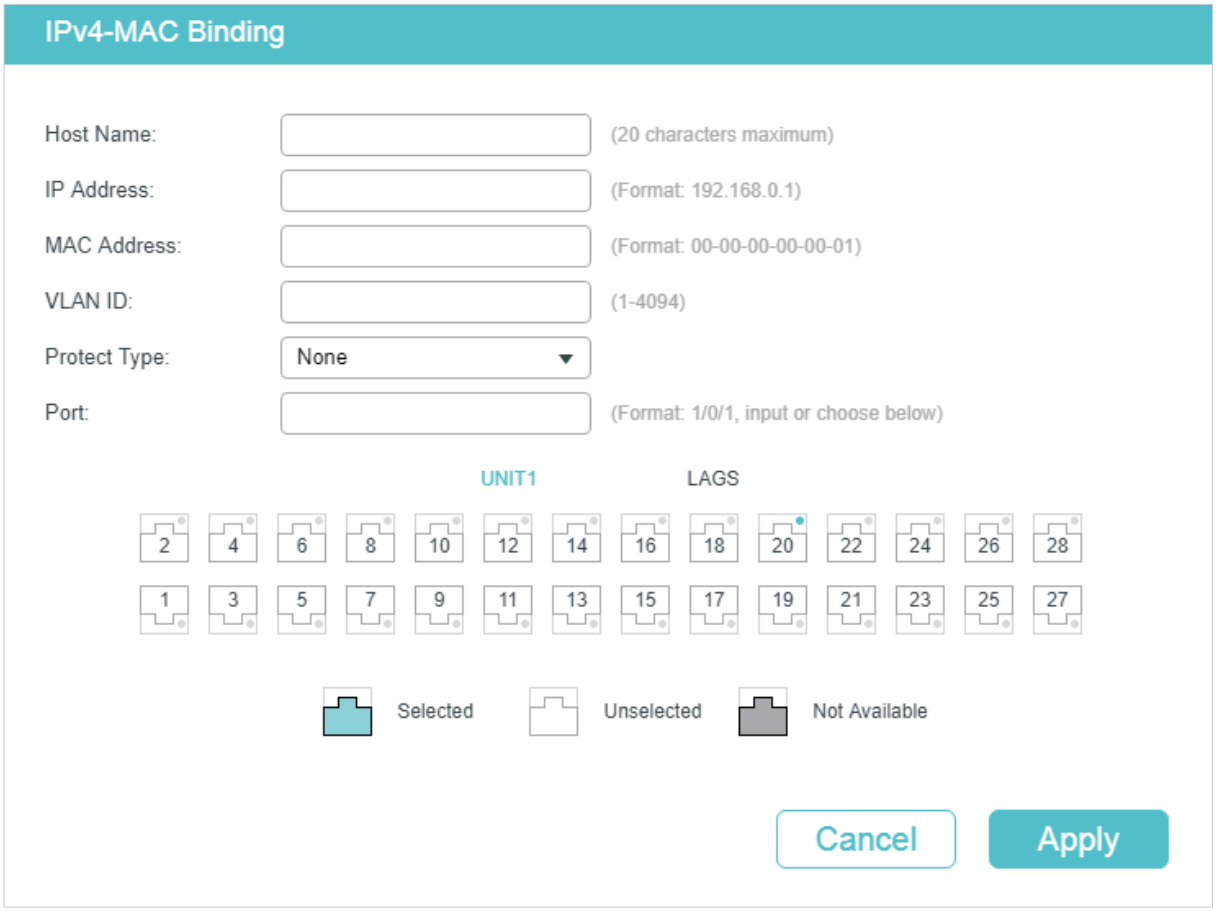

Follow these steps to manually create an IP-MAC Binding entry:

1) Enter the following information to specify a host.

Host Name	Enter the host name for identification.
IP Address	Enter the IP address.
MAC Address	Enter the MAC address.
VLAN ID	Enter the VLAN ID.

2) Select protect type for the entry.

Protect Type	Select the protect type for the entry. The entry will be applied to to the specific feature. The following options are provided: **None**: This entry will not be applied to any feature. **ARP Detection**: This entry will be applied to the ARP Detection feature. **IP Source Guard**: This entry will be applied to the IPv4 Source Guard feature. **Both**: This entry will be applied to both of the features.

3) Enter or select the port that is connected to this host.

4) Click **Apply**.

2.1.2 Binding Entries via ARP Scanning


With ARP Scanning, the switch sends the ARP request packets of the specified IP field to the hosts. Upon receiving the ARP reply packet, the switch can get the IP address, MAC address, VLAN ID and the connected port number of the host. You can bind these entries conveniently.

Note:

Before using this feature, make sure that your network is safe and the hosts are not suffering from ARP attacks at present; otherwise, you may obtain incorrect IP-MAC Binding entries. If your network is being attacked, it's recommended to bind the entries manually.

Choose the menu **SECURITY > IPv4 IMPB > IP-MAC Binding > ARP Scanning** to load the following page.

Figure 2-2 ARP Scanning

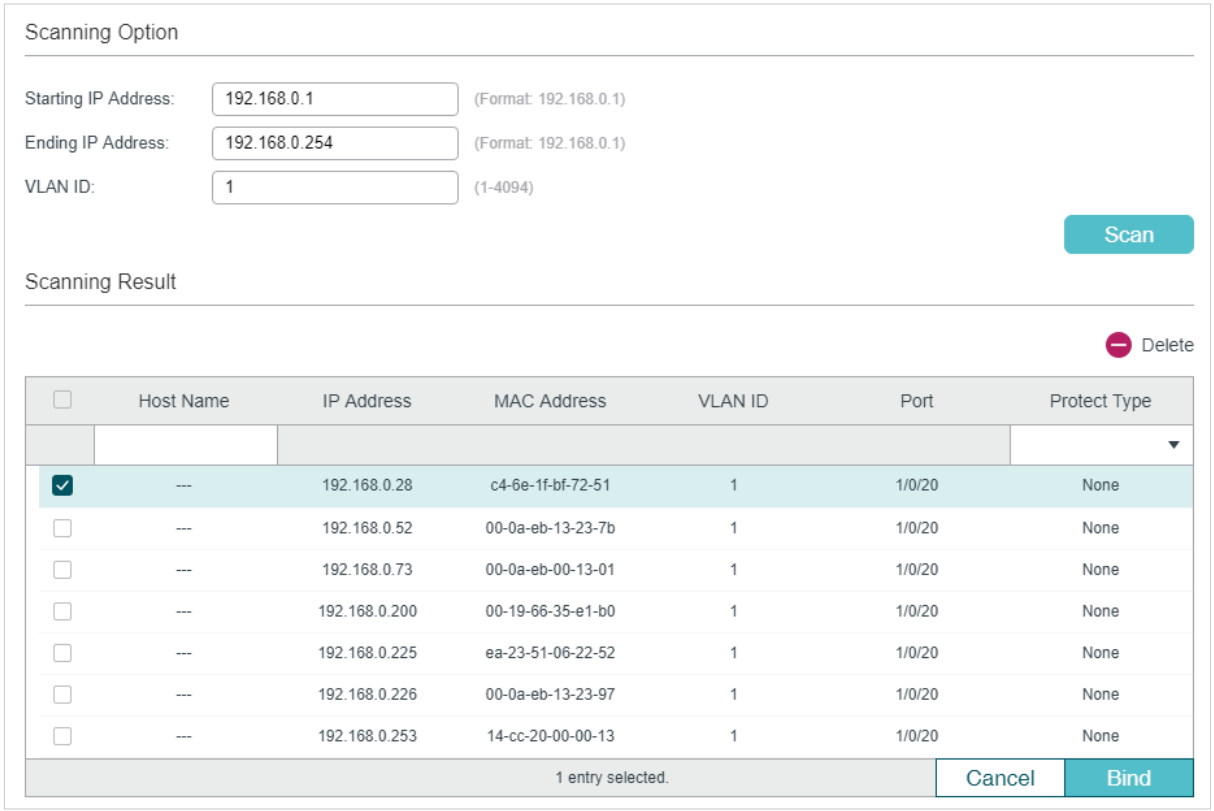

Follow these steps to configure IP-MAC Binding via ARP scanning:

1) In the **Scanning Option** section, specify an IP address range and a VLAN ID. Then click **Scan** to scan the entries in the specified IP address range and VLAN.

Starting IP Address/Ending IP Address	Specify an IP range by entering a start and end IP address.

VLAN ID	Specify a VLAN ID.

2) In the **Scanning Result** section, select one or more entries and configure the relevant parameters. Then click **Bind**.


Host Name	Enter a host name for identification.
IP Address	Displays the IP address.
MAC Address	Displays the MAC address.
VLAN ID	Displays the VLAN ID.
Port	Displays the port number.
Protect Type	Select the protect type for the entry. The entry will be applied to to the specific feature. The following options are provided: **None**: This entry will not be applied to any feature. **ARP Detection**: This entry will be applied to the ARP Detection feature. **IP Source Guard**: This entry will be applied to the IP Source Guard feature. **Both** This entry will be applied to both of the features.

2.1.3 Binding Entries via DHCP Snooping

With DHCP Snooping enabled, the switch can monitor the IP address obtaining process of the host, and record the IP address, MAC address, VLAN ID and the connected port number of the host.

Choose the menu **SECURITY > IPv4 IMPB > IP-MAC Binding > DHCP Snooping** to load the following page.

Figure 2-3 DHCP Snooping

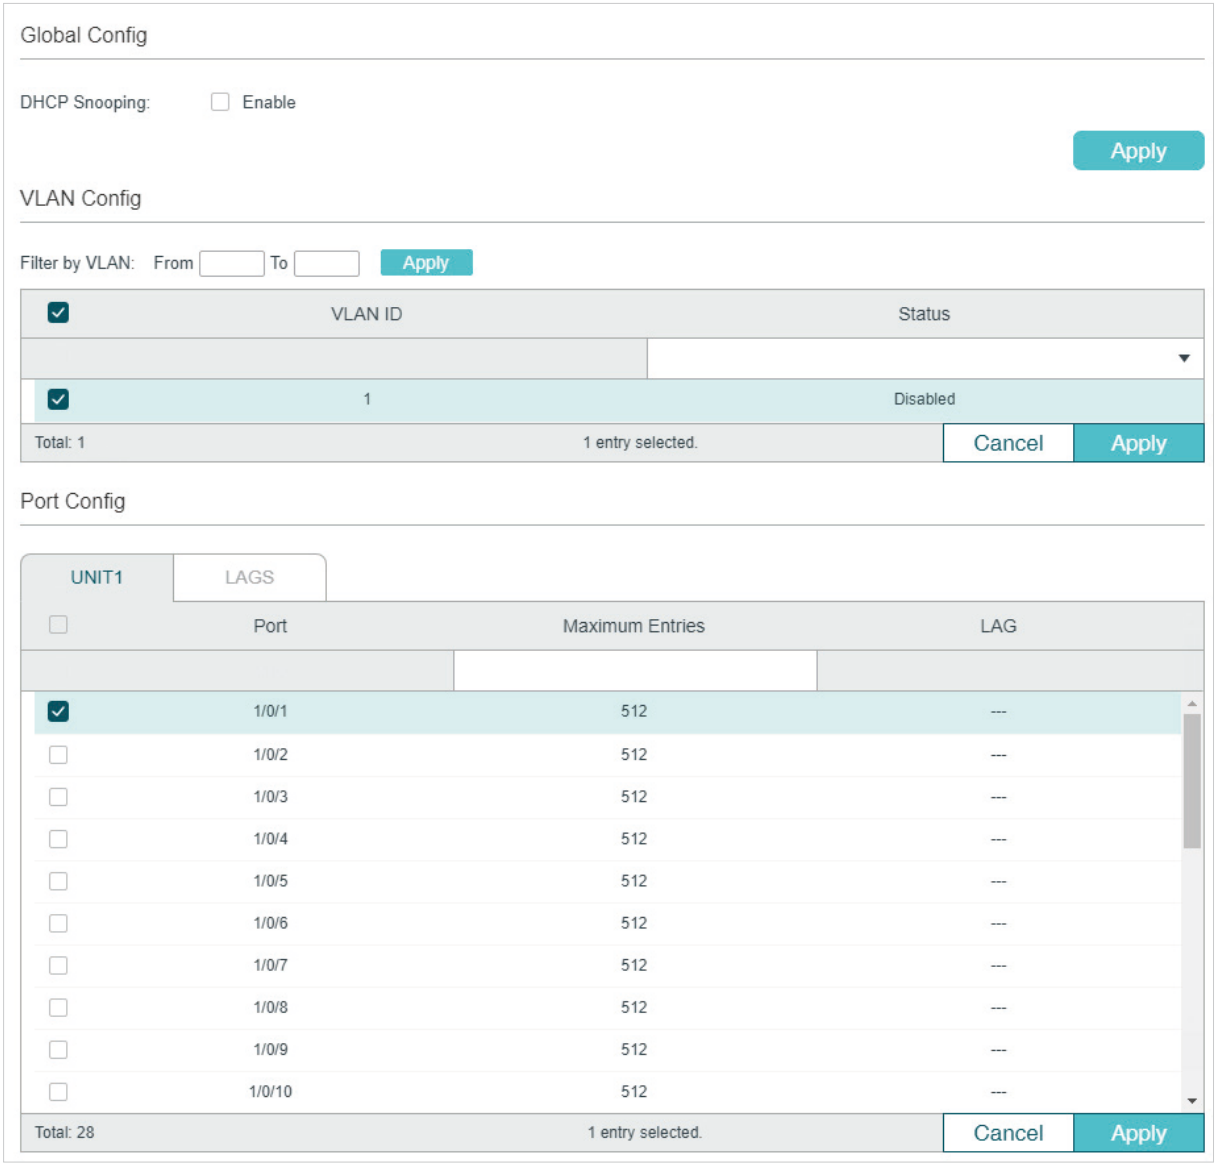

Follow these steps to configure IP-MAC Binding via DHCP Snooping:

1) In the **Global Config** section, globally enable DHCP Snooping. Click **Apply**.

2) In the **VLAN Config** section, enable DHCP Snooping on a VLAN or range of VLANs. Click **Apply**.

VLAN ID	Displays the VLAN ID.
Status	Enable or disable DHCP Snooping on the VLAN.

3) In the **Port Config** section, configure the maximum number of binding entries a port can learn via DHCP snooping. Click **Apply**.

Port	Displays the port number.

Maximum Entries	Configure the maximum number of binding entries a port can learn via DHCP snooping
LAG	Displays the LAG that the port is in.


4) The learned entries will be displayed in the Binding Table. You can go to **SECURITY > IPv4 IMPB > IP-MAC Binding > Binding Table** to view or edit the entries.

2.1.4 Viewing the Binding Entries

In the Binding Table, you can view, search and edit the specified binding entries.

Choose the menu **SECURITY > IPv4 IMPB > IP-MAC Binding > Binding Table** to load the following page.

Figure 2-4 Binding Table

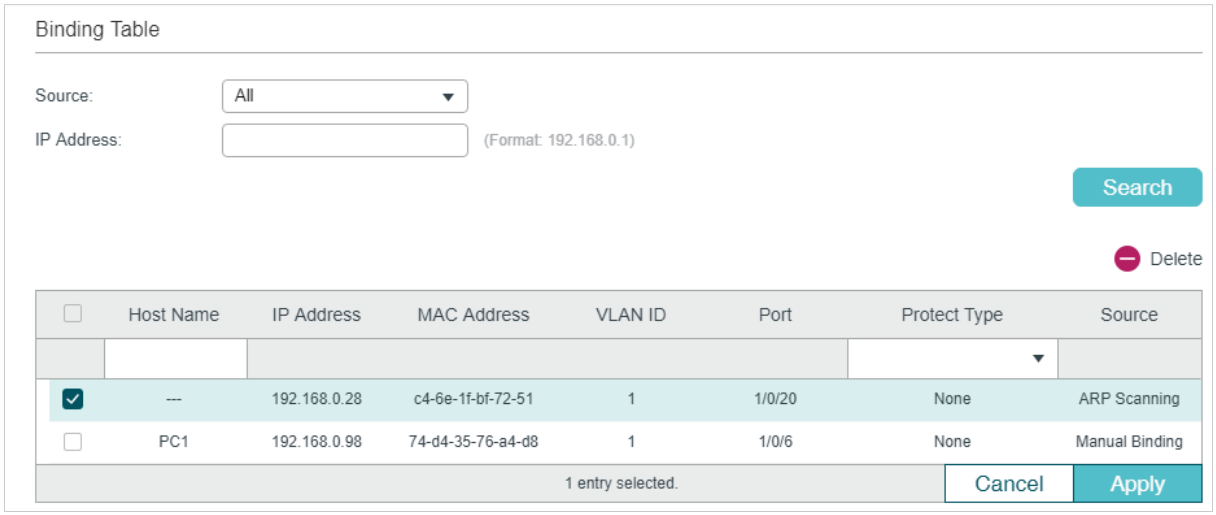

You can specify the search criteria to search your desired entries.

Source	Select the source of the entry and click **Search**. **All**: Displays the entries from all sources. **Manual Binding**: Displays the manually bound entries. **ARP Scanning**: Displays the binding entries learned from ARP Scanning. **DHCP Snooping**: Displays the binding entries learned from DHCP Snooping.
IP	Enter an IP address and click **Search** to search the specific entry.

Additionally, you select one or more entries to edit the host name and protect type and click **Apply**.

Host Name	Enter a host name for identification.
IP Address	Displays the IP address.
MAC Address	Displays the MAC address.

VLAN ID	Displays the VLAN ID.
Port	Displays the port number.
Protect Type	Select the protect type for the entry. The entry will be applied to to the specific feature. The following options are provided: **None**: This entry will not be applied to any feature. **ARP Detection**: This entry will be applied to the ARP Detection feature. **IP Source Guard**: This entry will be applied to the IP Source Guard feature. **Both**: This entry will be applied to both of the features.
Source	Displays the source of the entry.

2.2 Using the CLI

Binding entries via ARP scanning is not supported by the CLI. The following sections introduce how to bind entries manually and via DHCP Snooping and view the binding entries.

2.2.1 Binding Entries Manually

You can manually bind the IP address, MAC address, VLAN ID and the Port number together on the condition that you have got the detailed information of the hosts.

Follow these steps to manually bind entries:

Step 1	**configure** Enter global configuration mode.

Step 2	**ip source binding** *hostname ip-addr mac-addr* **vlan** *vlan-id* **interface { fastEthernet** *port* | **gigabitEthernet** *port* | **ten-gigabitEthernet** *port* | **port-channel** *port-channel-id* **} {** none | arp-detection | ip-verify-source | both **}** Manually bind the host name, IP address, MAC address, VLAN ID and port number of the host, and configure the protect type for the host. *hostname*: Specify a name for the host. It contains 20 characters at most. *ip-addr*: Enter the IP address of the host. *mac-addr*: Enter the MAC address of the host, in the format of xx:xx:xx:xx:xx:xx. *vlan-id*: Enter the VLAN ID of the host. *port*: Enter the number of the port on which the host is connected. none | arp-detection | ip-verify-source | both: Specify the protect type for the entry. None indicates this entry will not be applied to any feature; arp-detection indicates this entry will be applied to ARP Detection; ip-verify-source indicates this entry will be applied to IPv4 Source Guard.
Step 3	**show ip source binding** Verify the binding entry.
Step 4	**end** Return to privileged EXEC mode.
Step 5	**copy running-config startup-config** Save the settings in the configuration file.

The following example shows how to bind an entry with the hostname host1, IP address 192.168.0.55, MAC address 74:d4:35:76:a4:d8, VLAN ID 10, port number 1/0/5, and enable this entry for the ARP detection feature.

Switch#configure

Switch(config)#ip source binding host1 192.168.0.55 74:d4:35:76:a4:d8 **vlan** 10 **interface gigabitEthernet** 1/0/5 arp-detection

Switch(config)#show ip source binding

U	Host	IP-Addr	MAC-Addr	VID	Port	ACL	SOURCE
-	----	-------	--------	---	----	---	------
1	host1	192.168.0.55	74:d4:35:76:a4:d8	10	Gi1/0/5	ARP-D	Manual

Notice:

1.Here, 'ARP-D' for 'ARP-Detection',and'IP-V-S' for 'IP-Verify-Source'.

Switch(config)#end

Switch#copy running-config startup-config

2.2.2 Binding Entries via DHCP Snooping

Follow these steps to bind entries via DHCP Snooping:

Step 1	**configure** Enter global configuration mode.
Step 2	**ip dhcp snooping** Globally enable DHCP Snooping.
Step 3	**ip dhcp snooping vlan** *vlan-range* Enable DHCP Snooping on the specified VLAN. *vlan-range:* Enter the vlan range in the format of 1-3, 5.
Step 4	**interface { fastEthernet** *port* **| range fastEthernet** *port-list* **| gigabitEthernet** *port* **| range gigabitEthernet** *port-list* **| ten-gigabitEthernet** *port* **| range ten-gigabitEthernet** *port-list* **| interface port-channel** *port-channel-id* **| interface range port-channel** *port-channel-id-list* **}** Enter interface configuration mode.
Step 5	**ip dhcp snooping max-entries** *value* Configure the maximum number of binding entries the port can learn via DHCP snooping. *value:* Enter the value of maximum number of entries. The valid values are from 0 to 512.
Step 6	**show ip dhcp snooping** Verify global configuration of DHCP Snooping.
Step 7	**end** Return to privileged EXEC mode.
Step 8	**copy running-config startup-config** Save the settings in the configuration file.

The following example shows how to enable DHCP Snooping globally and on VLAN 5, and set the maximum number of binding entries port 1/0/1 can learn via DHCP snooping as 100:

Switch#configure

Switch(config)#ip dhcp snooping

Switch(config)#ip dhcp snooping vlan 5

Switch(config)#interface gigabitEthernet 1/0/1

Switch(config-if)#ip dhcp snooping max-entries 100

Switch(config-if)#show ip dhcp snooping

Global Status: Enable

VLAN ID: 5

Switch(config-if)#show ip dhcp snooping interface gigabitEthernet 1/0/1

Interface max-entries LAG

--- --- ---

Gi1/0/1 100 N/A

Switch(config-if)#end

Switch#copy running-config startup-config

2.2.3 Viewing Binding Entries

On privileged EXEC mode or any other configuration mode, you can use the following command to view binding entries:

show ip source binding

View the information of binding entries, including the host name, IP address, MAC address, VLAN ID, port number and protect type.

3 ARP Detection Configuration

To complete ARP Detection configuration, follow these steps:

1) Add IP-MAC Binding entries.
2) Enable ARP Detection.
3) Configure ARP Detection on ports.
4) View ARP statistics.

3.1 Using the GUI


3.1.1 Adding IP-MAC Binding Entries

In ARP Detection, the switch detects the ARP packets based on the binding entries in the IP-MAC Binding Table. So before configuring ARP Detection, you need to complete IP-MAC Binding configuration. For details, refer to *IP-MAC Binding Configuration*.

3.1.2 Enabling ARP Detection

Choose the menu **SECURITY > IPv4 IMPB > ARP Detection > Global Config** to load the following page.

Figure 3-1 ARP Detection Global Config

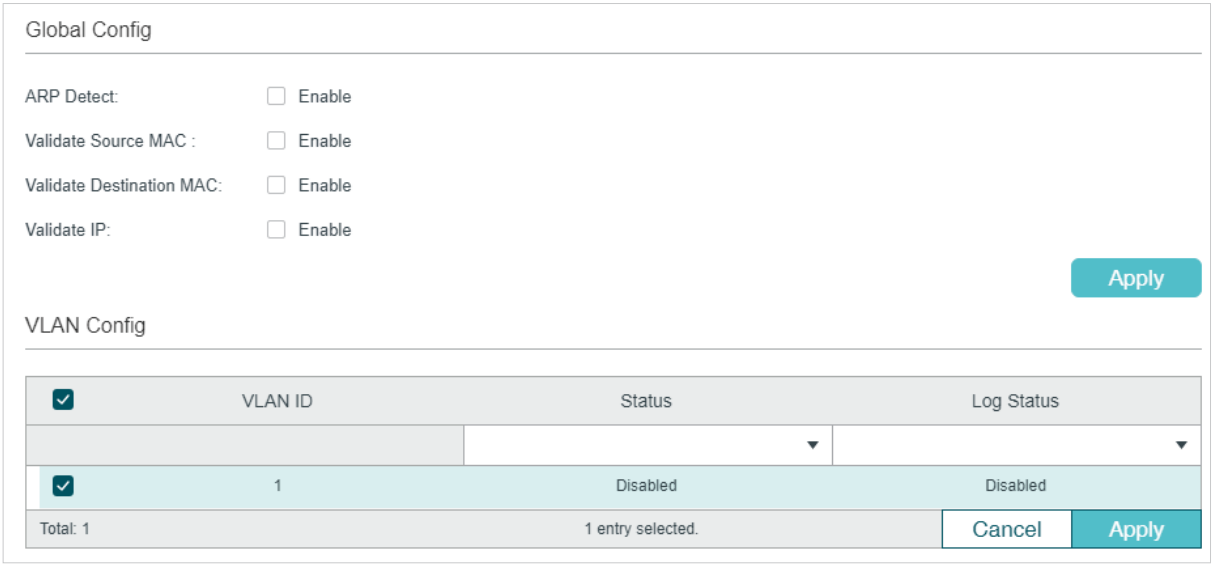

Follow these steps to enable ARP Detection:

1) In the **Global Config** section, enable ARP Detection and configure the related parameters. Click **Apply**.

ARP Detect	Enable or disable ARP Detection globally.
Validate Source MAC	Enable or disable the switch to check whether the source MAC address and the sender MAC address are the same when receiving an ARP packet. If not, the ARP packet will be discarded.
Validate Destination MAC	Enable or disable the switch to check whether the destination MAC address and the target MAC address are the same when receiving an ARP reply packet. If not, the ARP packet will be discarded.
Validate IP	Enable or disable the switch to check whether the sender IP address of all ARP packets and the target IP address of ARP reply packets are legal. The illegal ARP packets will be discarded, including broadcast addresses, multicast addresses, Class E addresses, loopback addresses (127.0.0.0/8) and the following address: 0.0.0.0.


2) In the **VLAN Config** section, enable ARP Detection on the selected VLANs. Click **Apply**.

VLAN ID	Displays the VLAN ID.
Status	Enable or disable ARP Detection on the VLAN.
Log Status	Enable or disable Log feature on the VLAN. With this feature enabled, the switch generates a log when an illegal ARP packet is discarded.

3.1.3 Configuring ARP Detection on Ports

Choose the menu **SECURITY > IPv4 IMPB > ARP Detection >Port Config** to load the following page.

Figure 3-2 ARP Detection on Port

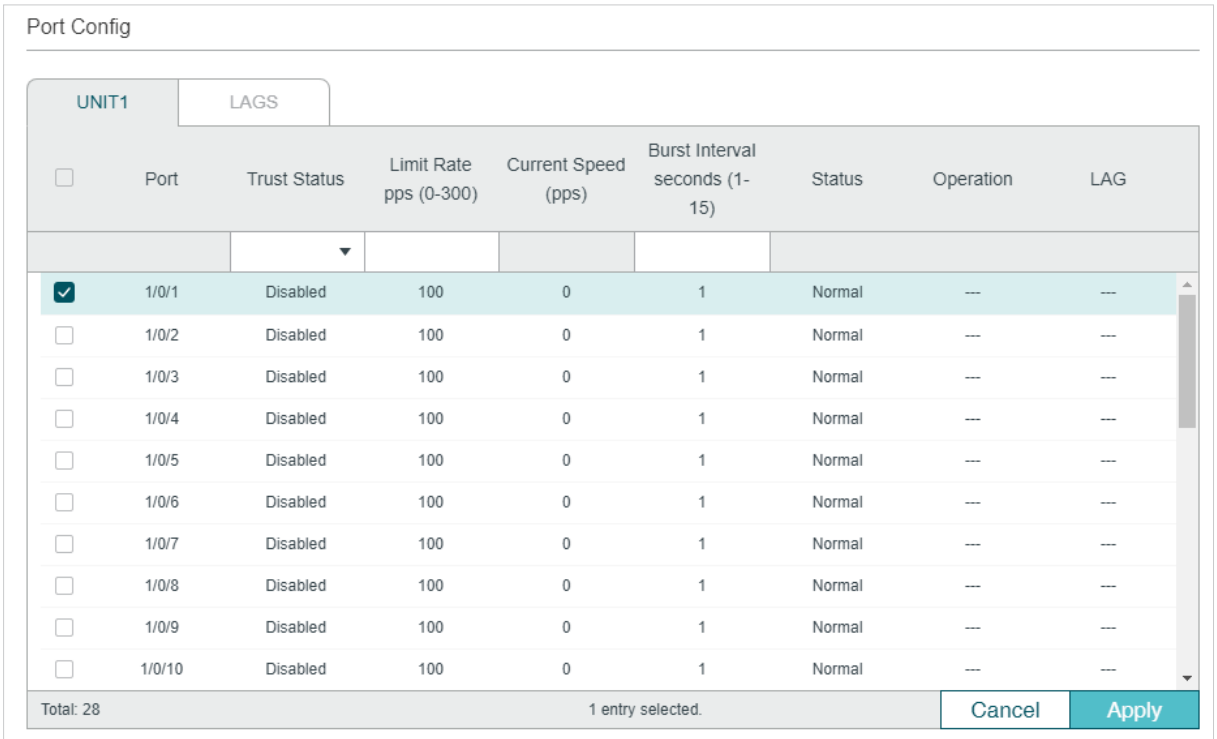

Follow these steps to configure ARP Detection on ports:

1) Select one or more ports and configure the parameters.

Trust Status	Enable or disable this port to be a trusted port. On a trusted port, the ARP packets are forwarded directly without checked. The specific ports, such as up-link ports and routing ports are suggested to be set as trusted.
Limit Rate	Specify the maximum number of the ARP packets that can be received on the port per second.
Current Speed	Displays the current speed of receiving the ARP packets on the port.
Burst Interval	Specify a time range. If the average speed of received ARP packets in this time range reaches the limit, the port will be shut down.
Status	Displays the status of the ARP attack: **Normal**: The forwarding of ARP packets on the port is normal. **Down:** The transmission speed of the legal ARP packet exceeds the defined value. The port will be shut down for 300 seconds. You can also click the Recovery button to recover
Operation	If Status is changed to Down, there will be a **Recover** button. You can click the button to restore the port to the normal status.
LAG	Displays the LAG that the port is in.


2) Click **Apply**.

3.1.4 Viewing ARP Statistics

You can view the number of the illegal ARP packets received on each port, which facilitates you to locate the network malfunction and take the related protection measures.

Choose the menu **SECURITY > IPv4 IMPB > ARP Detection > ARP Statistics** to load the following page.

Figure 3-3 View ARP Statistics

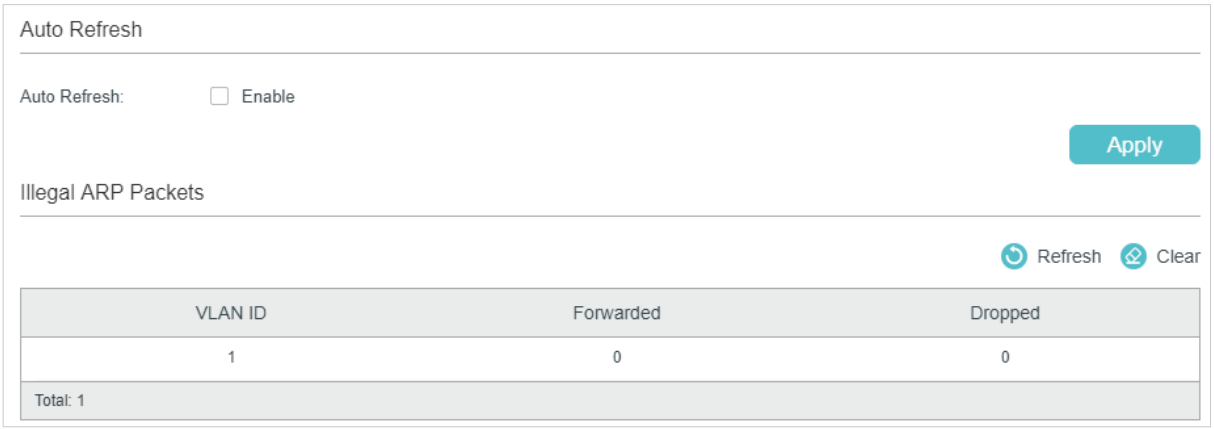

In the **Auto Refresh** section, you can enable the auto refresh feature and specify the refresh interval, and thus the web page will be automatically refreshed.

In the **Illegal ARP Packet** section, you can view the number of illegal ARP packets in each VLAN.

VLAN ID	Displays the VLAN ID.
Forwarded	Displays the number of forwarded ARP packets in this VLAN.
Dropped	Displays the number of dropped ARP packets in this VLAN.

3.2 Using the CLI

3.2.1 Adding IP-MAC Binding Entries

In ARP Detection, the switch detects the ARP packets based on the binding entries in the IP-MAC Binding Table. So before configuring ARP Detection, you need to complete IP-MAC Binding configuration. For details, refer to *IP-MAC Binding Configuration*.

3.2.2 Enabling ARP Detection

Follow these steps to enable ARP Detection:

Step 1	**configure** Enter global configuration mode.
Step 2	**ip arp inspection** Globally enable the ARP Detection feature.
Step 3	**ip arp inspection validate {** src-mac | dst-mac | ip **}** Configure the switch to check the IP address or MAC address of the received packets. src-mac: Enable the switch to check whether the source MAC address and the sender MAC address are the same when receiving an ARP packet. If not, the ARP packet will be discarded. dst-mac: Enable the switch to check whether the sender IP address of all ARP packets and the target IP address of ARP reply packets are legal. The illegal packets will be discarded. ip: Enable or disable the switch to check whether the sender IP address of all ARP packets and the target IP address of ARP reply packets are legal. The illegal ARP packets will be discarded, including broadcast addresses, multicast addresses, Class E addresses, loopback addresses (127.0.0.0/8) and the following address: 0.0.0.0.

Step 4	**ip arp inspection vlan** *vlan-list* **[logging]** Enable ARP Detection on one or more 802.1Q VLANs that already exist. *vlan-list*: Enter the VLAN ID. The format is 1,5-9. **logging**: Enable the Log feature to make the switch generate a log when an ARP packet is discarded.
Step 5	**show ip arp inspection** Verify the ARP Detection configuration.
Step 6	**end** Return to privileged EXEC mode.
Step 7	**copy running-config startup-config** Save the settings in the configuration file.

The following example shows how to enable ARP Detection globally and on VLAN 2, and enable the switch to check whether the source MAC address and the sender MAC address are the same when receiving an ARP packet:

Switch#configure

Switch(config)#ip arp inspection

Switch(config)#ip arp inspection validate src-mac

Switch(config)#ip arp inspection vlan 2

Switch(config)#show ip arp inspection

Global Status: Enable

Verify SMAC: Enable

Verify DMAC: Disable

Verify IP: Disable

Switch(config)#show ip arp inspection vlan

VID	Enable status	Log Status
----	----------	----------
1	Disable	Disable
2	Enable	Disable

Switch(config)#end

Switch#copy running-config startup-config

3.2.3 Configuring ARP Detection on Ports

Follow these steps to configure ARP Detection on ports:

Step 1	**configure** Enter global configuration mode.
Step 2	**interface { fastEthernet** *port* **| range fastEthernet** *port-list* **| gigabitEthernet** *port* **| range gigabitEthernet** *port-list* **| ten-gigabitEthernet** *port* **| range ten-gigabitEthernet** *port-list* **}** Enter interface configuration mode.
Step 3	**ip arp inspection trust** Configure the port as a trusted port, on which the ARP Detection function will not take effect. The specific ports, such as up-linked ports and routing ports are suggested to be set as trusted ports.
Step 4	**ip arp inspection limit-rate** *value* Specify the maximum number of the ARP packets can be received on the port per second. *value:* Specify the limit rate value. The valid values are from 0 to 300 pps (packets/second), and the default value is 100.
Step 5	**ip arp inspection burst-interval** *value* Specify a time range. If the average speed of received ARP packets in this time range reach the limit, the port will be shut down. *value:* Specify the time range. The valid values are from 1 to 15 seconds, and the default value is 1 second.
Step 6	**show ip arp inspection interface** View the configurations and status of the ports.
Step 7	**ip arp inspection recover** (Optional) For ports on which the speed of receiving ARP packets has exceeded the limit, use this command to restore the port from Down status to Normal status.
Step 8	**end** Return to privileged EXEC mode.
Step 9	**copy running-config startup-config** Save the settings in the configuration file.

The following example shows how to set port 1/02 as a trusted port, and set limit-rate as 20 pps and burst interval as 2 seconds on port 1/0/2:

Switch#configure

Switch(config)#interface gigabitEthernet 1/0/2

Switch(config-if)#ip arp inspection trust

Switch(config-if)#ip arp inspection limit-rate 20

Switch(config-if)#ip arp inspection burst-interval 2

Switch(config-if)#show ip arp inspection interface gigabitEthernet 1/0/2

Interface	Trust state	limit Rate(pps)	Current speed(pps)	Burst Interval	Status	LAG
---	---	---	---	---	---	---
Gi1/0/2	Enable	20	0	2	---	N/A

Switch(config-if)#end

Switch#copy running-config startup-config

The following example shows how to restore the port 1/0/1 that is in Down status to Normal status:

Switch#configure

Switch(config)#interface gigabitEthernet 1/0/1

Switch(config-if)#ip arp inspection recover

Switch(config-if)#end

Switch#copy running-config startup-config

3.2.4 Viewing ARP Statistics

On privileged EXEC mode or any other configuration mode, you can use the following command to view ARP statistics:

show ip arp inspection statistics

View the ARP statistics on each port, including the number of forwarded ARP packets and the number of dropped ARP packets.

4 IPv4 Source Guard Configuration

To complete IPv4 Source Guard configuration, follow these steps:

1) Add IP-MAC Binding entries.
2) Configure IPv4 Source Guard.

4.1 Using the GUI


4.1.1 Adding IP-MAC Binding Entries

In IPv4 Source Guard, the switch filters the packets that do not match the rules of IPv4-MAC Binding Table. So before configuring ARP Detection, you need to complete IP-MAC Binding configuration. For details, refer to *IP-MAC Binding Configuration*.

4.1.2 Configuring IPv4 Source Guard

Choose the menu **SECURITY > IPv4 IMPB > IPv4 Source Guard** to load the following page.

Figure 4-1 IPv4 Source Guard Config

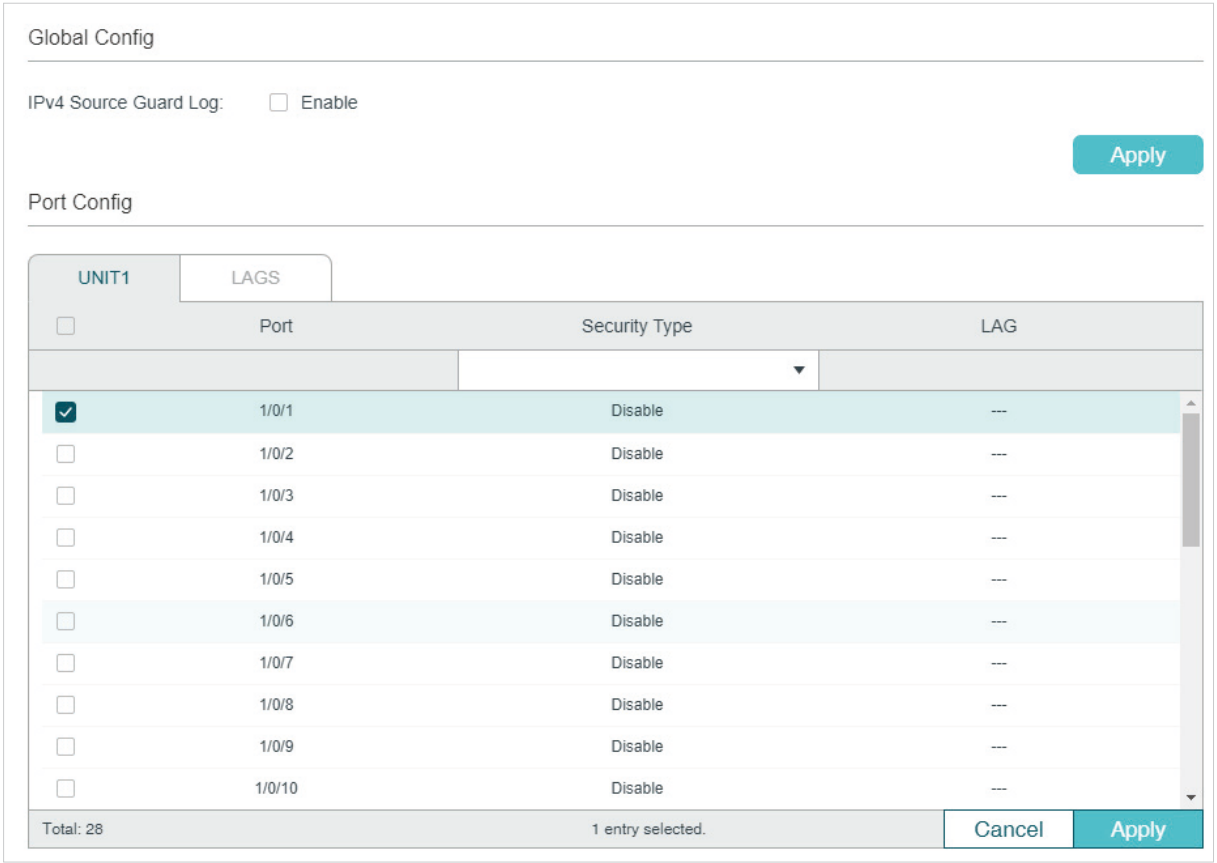

Follow these steps to configure IPv4 Source Guard:

1) In the **Global Config** section, choose whether to enable the Log feature. Click **Apply**.

Pv4 Source Guard Log	Enable or disable IPv4 Source Guard Log feature. With this feature enabled, the switch generates a log when illegal packets are received.

2) In the **Port Config** section, configure the protect type for ports and click **Apply**.

Port	Displays the port number.
Security Type	Select Security Type on the port for IPv4 packets. The following options are provided: **Disable:** The IP Source Guard feature is disabled on the port. **SIP:** Only the packet with its source IP address port number matching the IPv4-MAC binding rules can be processed, otherwise the packet will be discarded. Note: SIP is only available for T2600G-18TS. **SIP+MAC**: Only the packet with its source IP address, source MAC address and port number matching the IPv4-MAC binding rules can be processed, otherwise the packet will be discarded.
LAG	Displays the LAG that the port is in.

4.2 Using the CLI

4.2.1 Adding IP-MAC Binding Entries

In IPv4 Source Guard, the switch filters the packets that do not match the rules of IPv4-MAC Binding Table. So before configuring ARP Detection, you need to complete IP-MAC Binding configuration. For details, refer to *IP-MAC Binding Configuration*.

4.2.2 Configuring IPv4 Source Guard

Follow these steps to configure IPv4 Source Guard:

Step 1	**configure** Enter global configuration mode.
Step 2	**interface { fastEthernet** *port* **| range fastEthernet** *port-list* **| gigabitEthernet** *port* **| range gigabitEthernet** *port-list* **| ten-gigabitEthernet** *port* **| range ten-gigabitEthernet** *port-list* **}** Enter interface configuration mode.

Step 3	**ip verify source {** sip | sip+mac **}** Enable IP Source Guard for IPv4 packets. sip*:* Only the packet with its source IP address and port number matching the IP-MAC binding rules can be processed, otherwise the packet will be discarded. Note: SIP is only available for T2600G-18TS. sip+mac*:* Only the packet with its source IP address, source MAC address and port number matching the IP-MAC binding rules can be processed, otherwise the packet will be discarded.
Step 4	**show ip verify source [interface { fastEthernet** *port* **| gigabitEthernet** *port* **| ten-gigabitEthernet** *port* **| port-channel** *port-channel-id* **}]** Verify the IP Source Guard configuration for IPv4 packets.
Step 5	**end** Return to privileged EXEC mode.
Step 6	**copy running-config startup-config** Save the settings in the configuration file.

The following example shows how to enable IPv4 Source Guard on port 1/0/1:

Switch#configure

Switch(config)#interface gigabitEthernet 1/0/1

Switch(config-if)#ip verify source sip+mac

Switch(config-if)#show ip verify source interface gigabitEthernet 1/0/1

Port Security-Type LAG

---- ------------ ----

Gi1/0/1 SIP+MAC N/A

Switch(config-if)#end

Switch#copy running-config startup-config


5 Configuration Examples

5.1 Example for ARP Detection

5.1.1 Network Requirements

As shown below, User 1 and User 2 are legal users in the LAN and connected to port 1/0/1 and port 1/0/2. Both of them are in the default VLAN 1. The router has been configured with security feature to prevent attacks from the WAN. Now the network administrator wants to configure Switch A to prevent ARP attacks from the LAN.

Figure 5-1 Network Topology

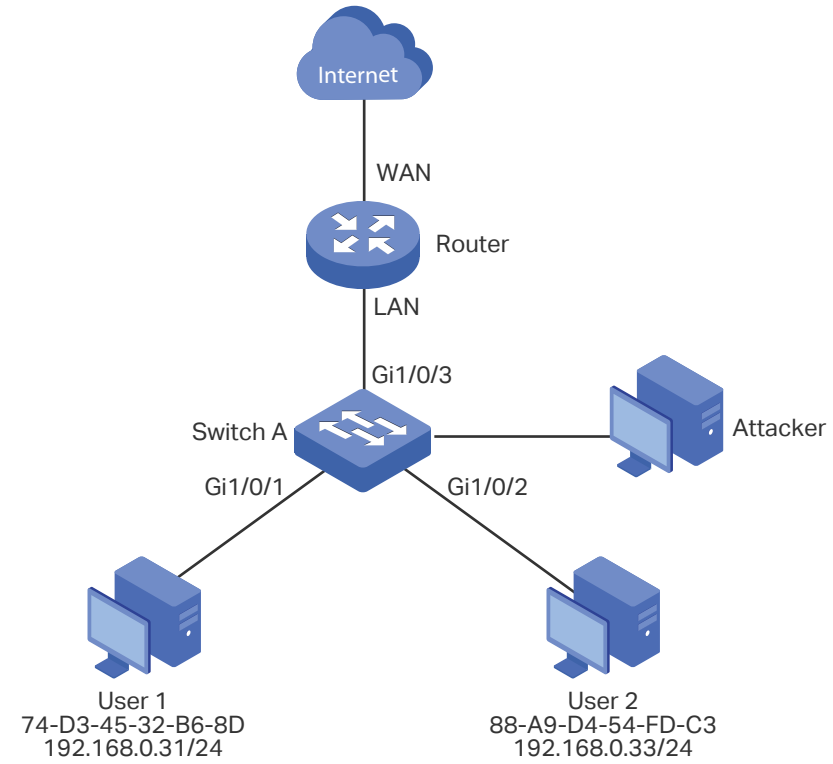

5.1.2 Configuration Scheme

To meet the requirement, you can configure ARP Detection to prevent the network from ARP attacks in the LAN.

The overview of configurations on the switch is as follows:

1) Configure IP-MAC Binding. The binding entries for User 1 and User 2 should be manually bound.
2) Configure ARP Detection globally.


3) Configure ARP Detection on ports. Since port 1/0/3 is connected to the gateway router, set port 1/0/3 as trusted port. To prevent ARP flooding attacks, limit the speed of receiving the legal ARP packets on all ports.

Demonstrated with T2600G-28TS, the following sections provide configuration procedure in two ways: using the GUI and using the CLI.

5.1.3 Using the GUI

1) Choose the menu **SECURITY > IPv4 IMBP > IP-MAC Binding > Manual Binding** and click Add to load the following page. Enter the host name, IP address, MAC address and VLAN ID of User 1, select the protect type as ARP Detection, and select port 1/0/1 on the panel. Click **Apply**.

Figure 5-2 Binding Entry for User 1

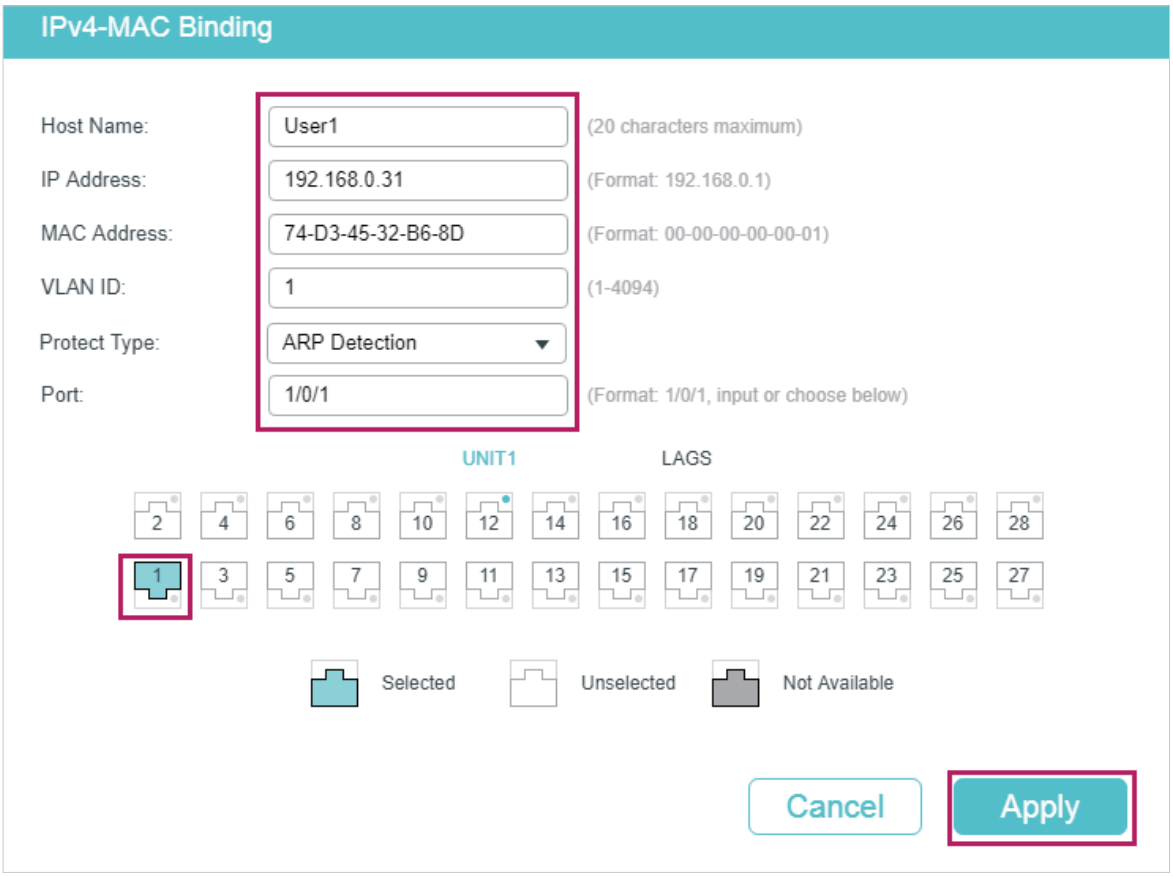


2) On the same page, add a binding entry for User 2. Enter the host name, IP address, MAC address and VLAN ID of User 2, select the protect type as ARP Detection, and select port 1/0/2 on the panel. Click **Apply**.

Figure 5-3 Binding Entry for User 2




3) Choose the menu **SECURITY > IPv4 IMBP > ARP Detection > Global Config** to load the following page. Enable APP Detect, Validate Source MAC, Validate Destination MAC and Validate IP, and click **Apply**. Select VLAN 1, change Status as Enabled and click **Apply**.

Figure 5-4 Enable ARP Detection

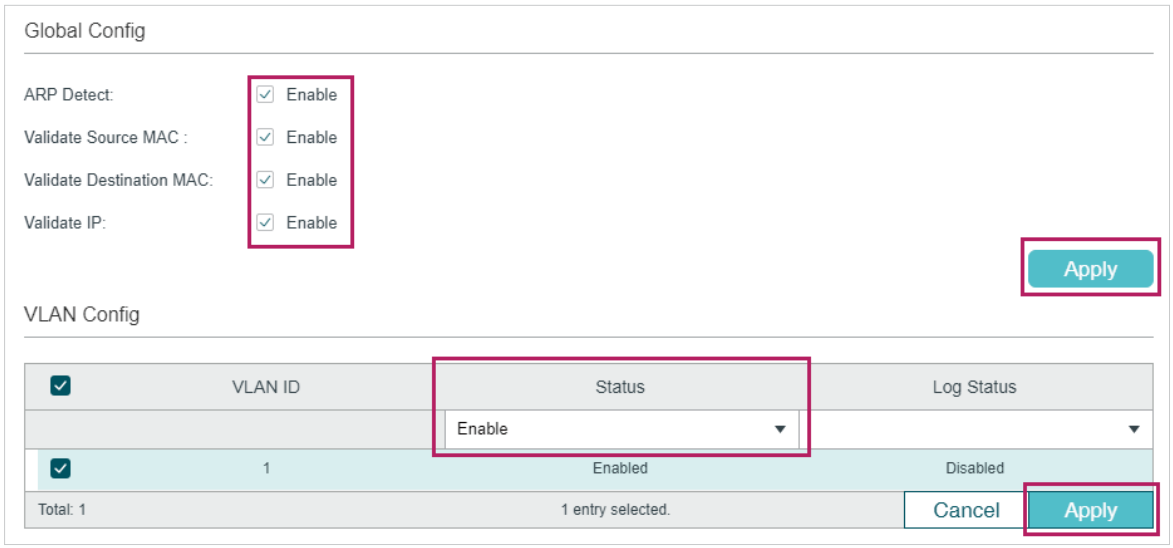

4) Choose the menu **SECURITY > IPv4 IMBP > ARP Detection > Port Config** to load the following page. By default, all ports are enabled with ARP Detection and ARP flooding defend. Configure port 1/0/3 as trusted port and keep other defend parameters as default. Click **Apply**.

Figure 5-5 Port Config

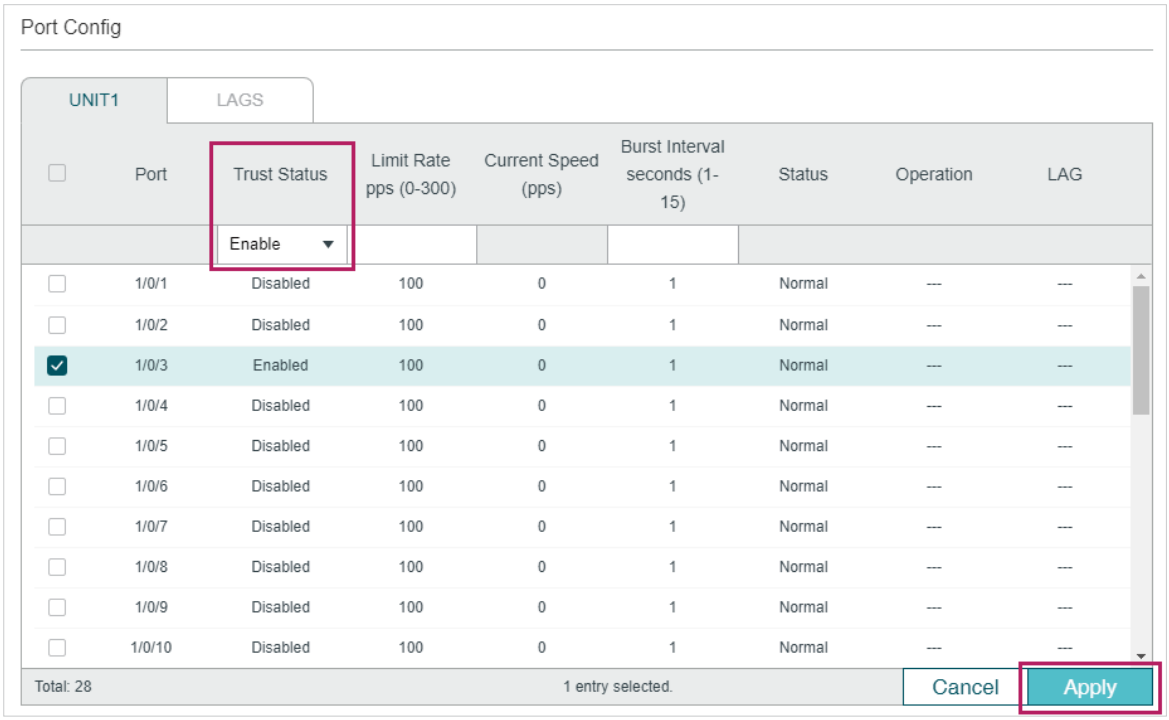

5) Click Save to save the settings.

5.1.4 Using the CLI

1) Manually bind the entries for User 1 and User 2.

Switch_A#configure

Switch_A(config)#ip source binding User1 192.168.0.31 74:d3:45:32:b6:8d vlan 1 interface gigabitEthernet 1/0/1 arp-detection

Switch_A(config)#ip source binding User1 192.168.0.32 88:a9:d4:54:fd:c3 vlan 1 interface gigabitEthernet 1/0/2 arp-detection

2) Enable ARP Detection globally and on VLAN 1.

Switch_A(config)#ip arp inspection

Switch_A(config)#ip arp inspection vlan 1

3) Configure port 1/0/3 as trusted port.

Switch_A(config)#interface gigabitEthernet 1/0/3

Switch_A(config-if)#ip arp inspection trust

Switch_A(config-if)#end

Switch_A#copy running-config startup-config

Verify the Configuration

Verify the IP-MAC Binding entries:

Switch_A#show ip source binding

U	Host	IP-Addr	MAC-Addr	VID	Port	ACL	SOURCE
-	----	-------	--------	---	----	---	------
1	User1	192.168.0.31	74:d3:45:32:b6:8d	1	Gi1/0/1	ARP-D	Manual
1	User2	192.168.0.33	88:a9:d4:54:fd:c3	1	Gi1/0/2	ARP-D	Manual

Notice:

1.Here, 'ARP-D' for 'ARP-Detection',and'IP-V-S' for 'IP-Verify-Source'.

Verify the global configuration of ARP Detection:

Switch_A#show ip arp inspection

Global Status: Enable

Verify SMAC: Enable

Verify DMAC: Enable

Verify IP: Enable

Verify the ARP Detection configuration on VLAN:

Switch_A#show ip arp inspection vlan

VID	Enable status	Log Status
----	----------	----------
1	Enable	Disable

Verify the ARP Detection configuration on ports:

Switch_A#show ip arp inspection interface

Interface	Trust state	limit Rate(pps)	Current speed(pps)	Burst Interval	Status	LAG
---	---	---	---	---	---	---
Gi1/0/1	Disable	100	0	1	---	N/A
Gi1/0/2	Disable	100	0	1	---	N/A
Gi1/0/3	Enable	100	0	1	---	N/A


...

5.2 Example for IP Source Guard

5.2.1 Network Requirements

As shown below, the legal host connects to the switch via port 1/0/1 and belongs to the default VLAN 1. It is required that only the legal host can access the network via port 1/0/1, and other unknown hosts will be blocked when trying to access the network via ports 1/0/1-3.

Figure 5-6 Network Topology

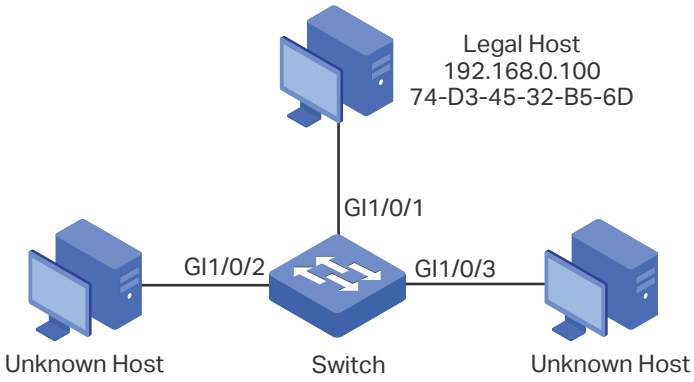

5.2.2 Configuration Scheme

To implement this requirement, you can use IP-MAC Binding and IP Source Guard to filter out the packets received from the unknown hosts. The overview of configuration on the switch is as follows:


1) Bind the MAC address, IP address, connected port number and VLAN ID of the legal host with IP-MAC Binding.
2) Enable IP Source Guard on ports 1/0/1-3.

Demonstrated with T2600G-28TS, the following sections provide configuration procedure in two ways: using the GUI and using the CLI.

5.2.3 Using the GUI


1) Choose the menu **SECURITY > IPv4 IMPB > IP-MAC Binding > Manual Binding** and click Add to load the following page. Enter the host name, IP address, MAC address and VLAN ID of the legal host, select the protect type as , and select port 1/0/1 on the panel. Click **Apply**.

Figure 5-7 Manual Binding

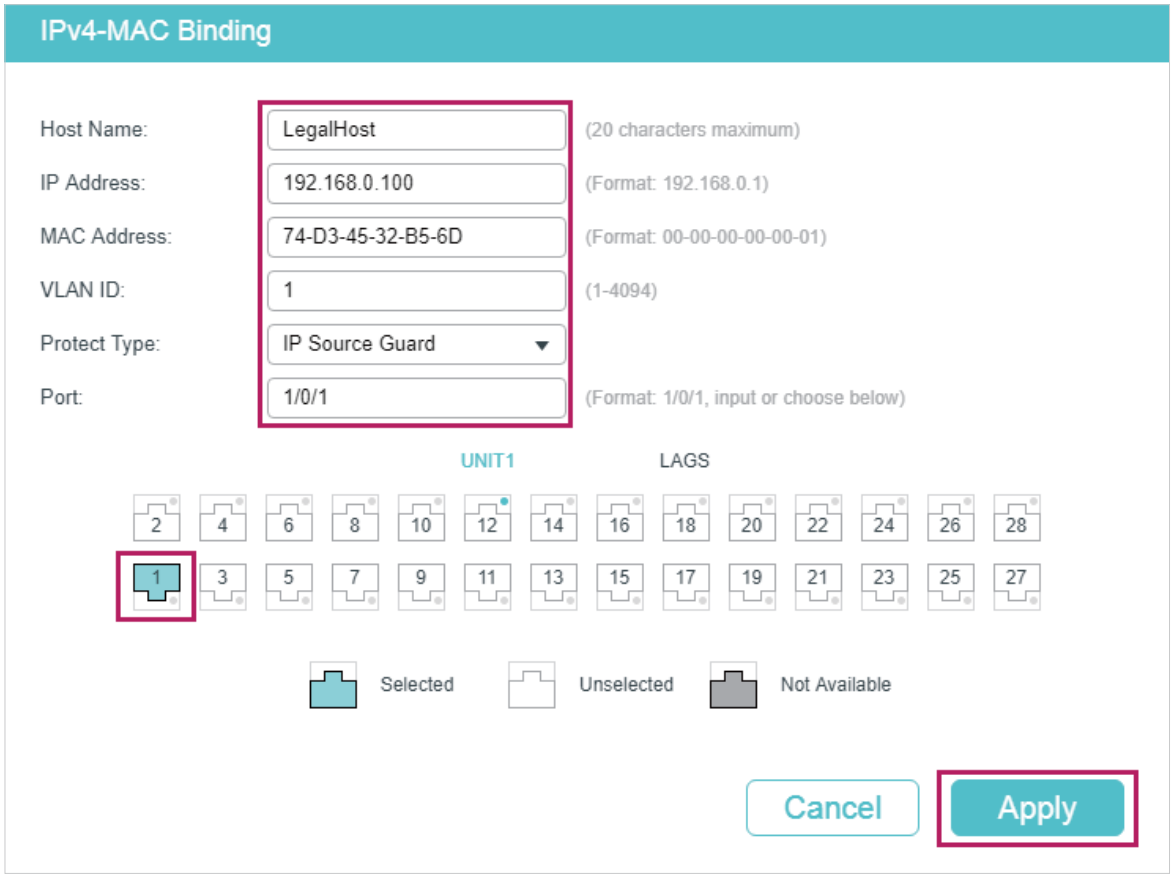

2) Choose the menu **SECURITY > IPv4 IMPB > IPv4 Source Guard** to load the following page. Enable IPv4 Source Guard Logging to make the switch generate logs when receiving illegal packets, and click **Apply**. Select ports 1/0/1-3, configure the Security Type as SIP+MAC, and click **Apply**.

Figure 5-8 IPv4 Source Guard

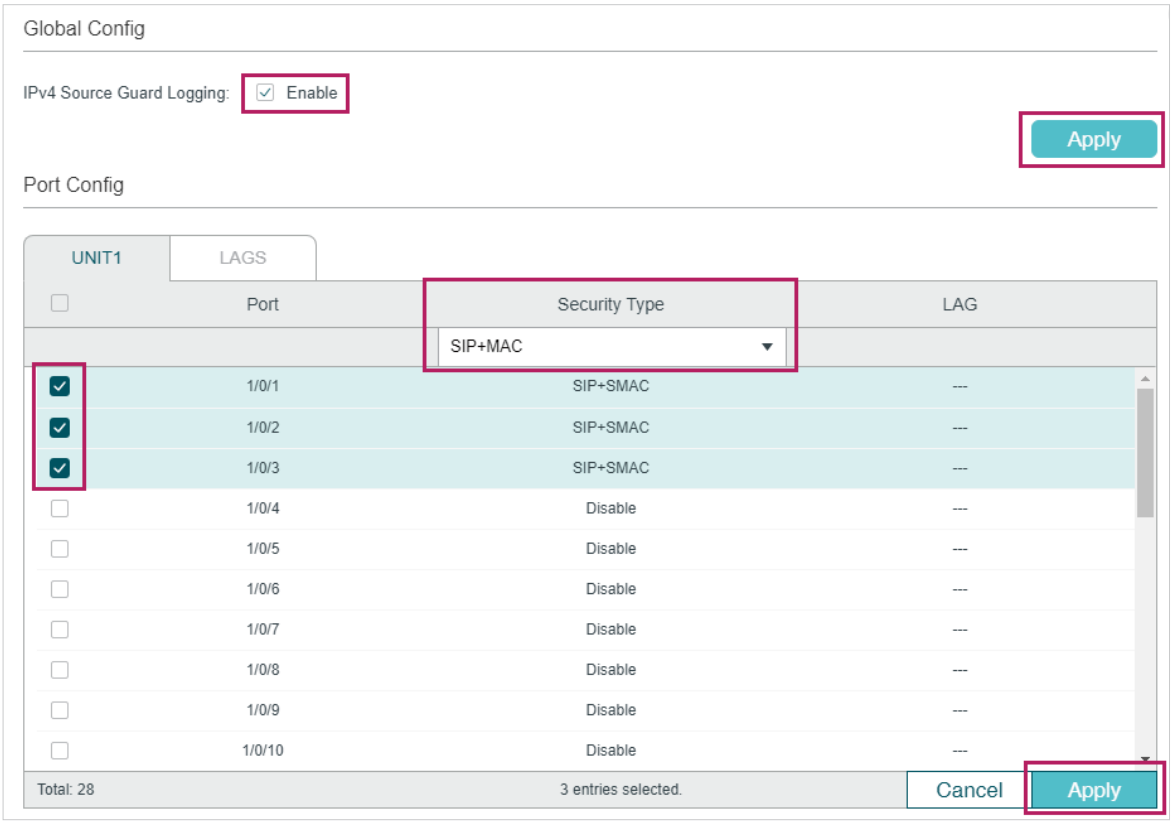

3) Click Save to save the settings.

5.2.4 Using the CLI

1) Manually bind the IP address, MAC address, VLAN ID and connected port number of the legal host, and apply this entry to the IP Source Guard feature.

Switch#configure

Switch(config)#ip source binding legal-host 192.168.0.100 74:d3:45:32:b5:6d vlan 1 interface gigabitEthernet 1/0/1 ip-verify-source

2) Enable the log feature and IP Source Guard on ports 1/0/1-3.

Switch(config)# ip verify source logging

Switch(config)# interface range gigabitEthernet 1/0/1-3

Switch(config-if-range)#ip verify source sip+mac

Switch(config-if-range)#end

Switch#copy running-config startup-config

Verify the Configuration

Verify the binding entry:

Switch#show ip source binding

U	Host	IP-Addr	MAC-Addr	VID	Port	ACL	SOURCE
-	----	-------	--------	---	----	---	------
1	User1	192.168.0.100	74:d3:45:32:b5:6d	1	Gi1/0/1	IP-V-S	Manual

Notice:

1.Here, 'ARP-D' for 'ARP-Detection',and'IP-V-S' for 'IP-Verify-Source'.

Verify the configuration of IP Source Guard:

Switch#show ip verify source

IP Source Guard log: Enabled

Port	Security-Type	LAG
Gi1/0/1	SIP+MAC	N/A
Gi1/0/2	SIP+MAC	N/A
Gi1/0/3	SIP+MAC	N/A

...

6 Appendix: Default Parameters

Default settings of DHCP Snooping are listed in the following table:

Table 6-1 DHCP Snooping

Parameter	Default Setting
Global Config	
DHCP Snooping	Disable
VLAN Config	
Status	Disable
Port Config	
Maximum Entry	512

Default settings of ARP Detection are listed in the following table:

Table 6-2 ARP Detection

Parameter	Default Setting
Global Config	
ARP Detect	Disable
Validate Source MAC	Disable
Validate Destination MAC	Disable
Validate IP	Disable
VLAN Config	
Status	Disable
Log Status	Disable
Port Config	
Trust Status	Disable
Limit Rate	100 pps

Parameter	Default Setting
Burst Interval	1 second
ARP Statistics	
Auto Refresh	Disable
Refresh Interval	5 seconds

Default settings of IPv4 Source Guard are listed in the following table:

Table 6-3 ARP Detection

Parameter	Default Setting
Global Config	
IPv4 Source Guard Log:	Disable
Port Config	
Security Type	Disable

Part 29

Configuring IPv6 IMPB

CHAPTERS

1. IPv6 IMPB
2. IPv6-MAC Binding Configuration
3. ND Detection Configuration
4. IPv6 Source Guard Configuration
5. Configuration Examples
6. Appendix: Default Parameters

1 IPv6 IMPB

1.1 Overview

IPv6 IMPB (IP-MAC-Port Binding) is used to bind the IPv6 address, MAC address, VLAN ID and the connected port number of the specified host. Basing on the binding table, the switch can prevent ND attacks with the ND Detection feature and filter the packets that don't match the binding entries with the IPv6 Source Guard feature.

1.2 Supported Features

IPv6-MAC Binding

This feature is used to add binding entries. The binding entries can be manually configured, or learned by ND Snooping or DHCPv6 snooping. The features ND Detection and IPv6 Source Guard are based on the IPv6-MAC Binding entries.


ND Detection

Because of the absence of security mechanism, IPv6 ND (Neighbor Discovery) protocol is easy to be exploited by attackers. ND detection feature uses the entries in the IPv6-MAC binding table to filter the forged ND packets and prevent the ND attacks.

The application topology of ND Detection is as the following figure shows. The port that is connected to the gateway should be configured as trusted port, and other ports should be configured as untrusted ports. The forwarding principles of ND packets are as follows:

- All ND packets received on the trusted port will be forwarded without checked.
- RS (Router Solicitation) and NS (Neighbor Solicitation) packets with their source IPv6 addresses unspecified, such as the RS packet for IPv6 address request and the NS packet for duplicate address detection, will not be checked on both kinds of ports.
- RA (Router Advertisement) and RR (Router Redirect) packets received on the untrusted port will be discarded directly, and other ND packets will be checked: The switch will use the IPv6-MAC binding table to compare the IPv6 address, MAC address, VLAN ID and receiving port between the entry and the ND packet. If a match is found, the ND packet is considered legal and will be forwarded; if no match is found, the ND packet is considered illegal and will be discarded.

Figure 1-1 Network Topology of ND Detection

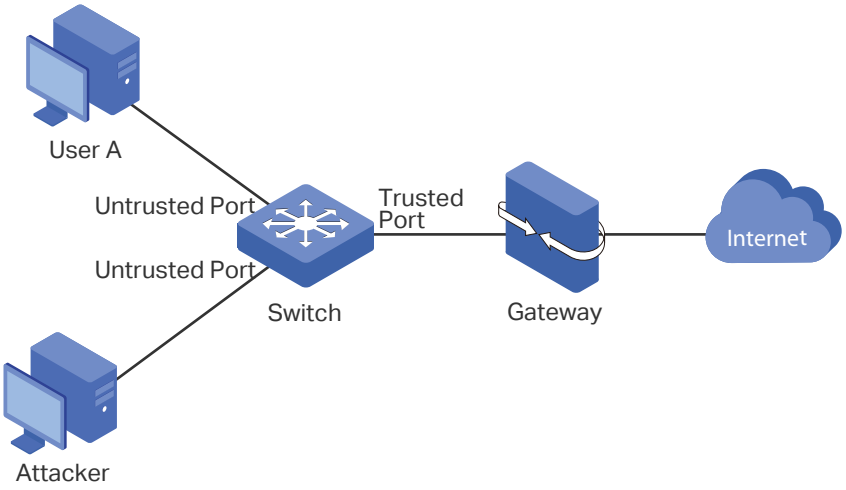

IPv6 Source Guard

IPv6 Source Guard is used to filter the IPv6 packets based on the IPv6-MAC Binding table. Only the packets that match the binding rules are forwarded.

2 IPv6-MAC Binding Configuration

You can add IPv6-MAC Binding entries in three ways:

- Manual Binding
- Via ND Snooping
- Via DHCPv6 Snooping

Additionally, you can view, search and edit the entries in the Binding Table.


2.1 Using the GUI

2.1.1 Binding Entries Manually

You can manually bind the IPv6 address, MAC address, VLAN ID and the Port number together on the condition that you have got the detailed information of the hosts.

Choose the menu **SECURITY > IPv6 IMPB > IPv6-MAC Binding > Manual Binding** and click Add to load the following page.

Figure 2-1 Manual Binding

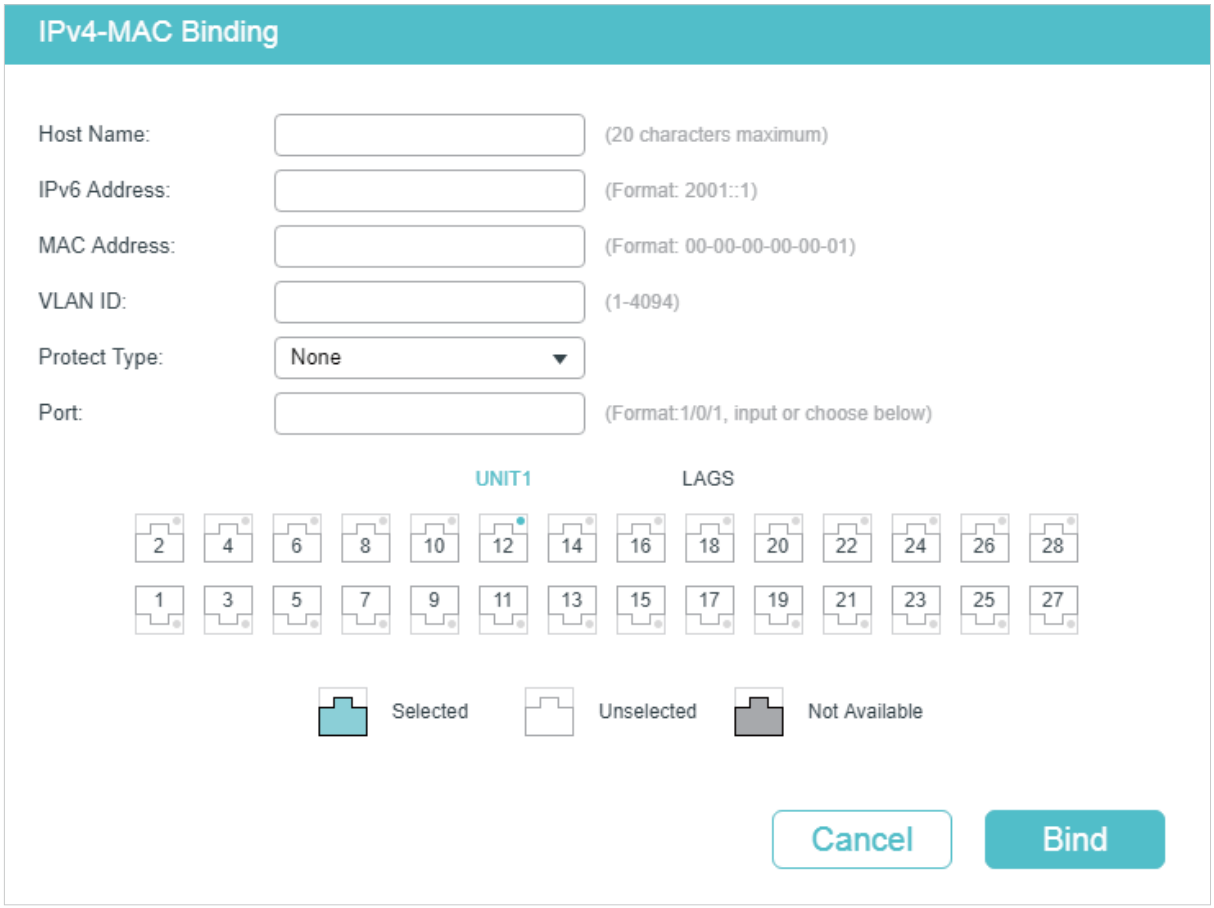

Follow these steps to manually create an IPv6-MAC Binding entry:

1) Enter the following information to specify a host.

Host Name	Enter the host name for identification.
IPv6 Address	Enter the IPv6 address.
MAC Address	Enter the MAC address.
VLAN ID	Enter the VLAN ID.

2) Select protect type for the entry.

Protect Type	Select the protect type for the entry. The entry will be applied to to the specific feature. The following options are provided: **None**: This entry will not be applied to any feature. **ND Detection**: This entry will be applied to the ND Detection feature. **IPv6 Source Guard**: This entry will be applied to the IPv6 Source Guard feature. **Both**: This entry will be applied to both of the features.

3) Enter or select the port that is connected to this host.

4) Click **Apply**.

2.1.2 Binding Entries via ND Snooping


With ND Snooping, the switch monitors the ND packets, and records the IPv6 addresses, MAC addresses, VLAN IDs and the connected port numbers of the IPv6 hosts. You can bind these entries conveniently.

Note:

Before using this feature, make sure that your network is safe and the hosts are not suffering from ND attacks at present; otherwise, you may obtain incorrect IPv6-MAC Binding entries. If your network is being attacked, it's recommended to bind the entries manually.

Choose the menu **SECURITY > IPv6 IMPB > IPv6-MAC Binding > ND Snooping** to load the following page.

Figure 2-2 ND Snooping

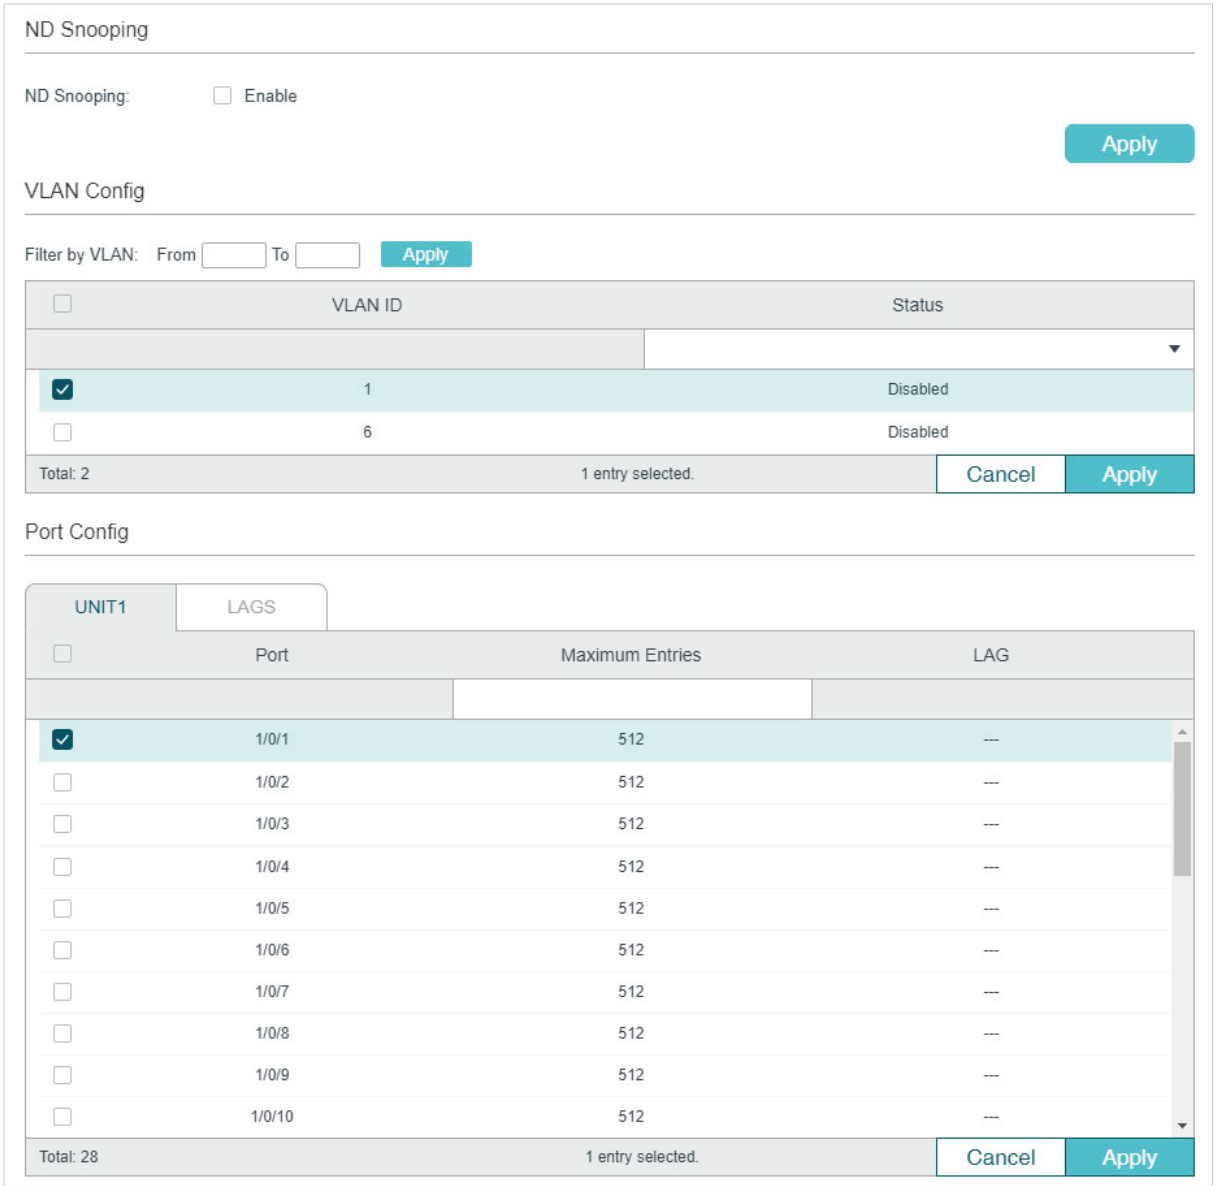

Follow these steps to configure IPv6-MAC Binding via ND Snooping:

1) In the **ND Snooping** section, enable ND Snooping and click **Apply**.

2) In the **VLAN Config** section, select one or more VLANs and enable ND Snooping. Click **Apply**.

VLAN ID	Displays the VLAN ID.
Status	Enable or disable ND Snooping on the VLAN.

3) In the **Port Config** section, configure the maximum number of entries a port can learn via ND snooping. Click **Apply**.

Port	Displays the port number.
Maximum Entries	Configure the maximum number of binding entries a port can learn via ND snooping.
LAG	Displays the LAG that the port is in.


4) The learned entries will be displayed in the Binding Table. You can go to **SECURITY > IPv6 IMPB > IPv6-MAC Binding > Binding Table** to view or edit the entries.

2.1.3 Binding Entries via DHCPv6 Snooping

With DHCPv6 Snooping enabled, the switch can monitor the IP address obtaining process of the host, and record the IPv6 address, MAC address, VLAN ID and the connected port number of the host.

Choose the menu **SECURITY > IPv6 IMPB > IPv6-MAC Binding > DHCPv6 Snooping** to load the following page.

Figure 2-3 DHCPv6 Snooping

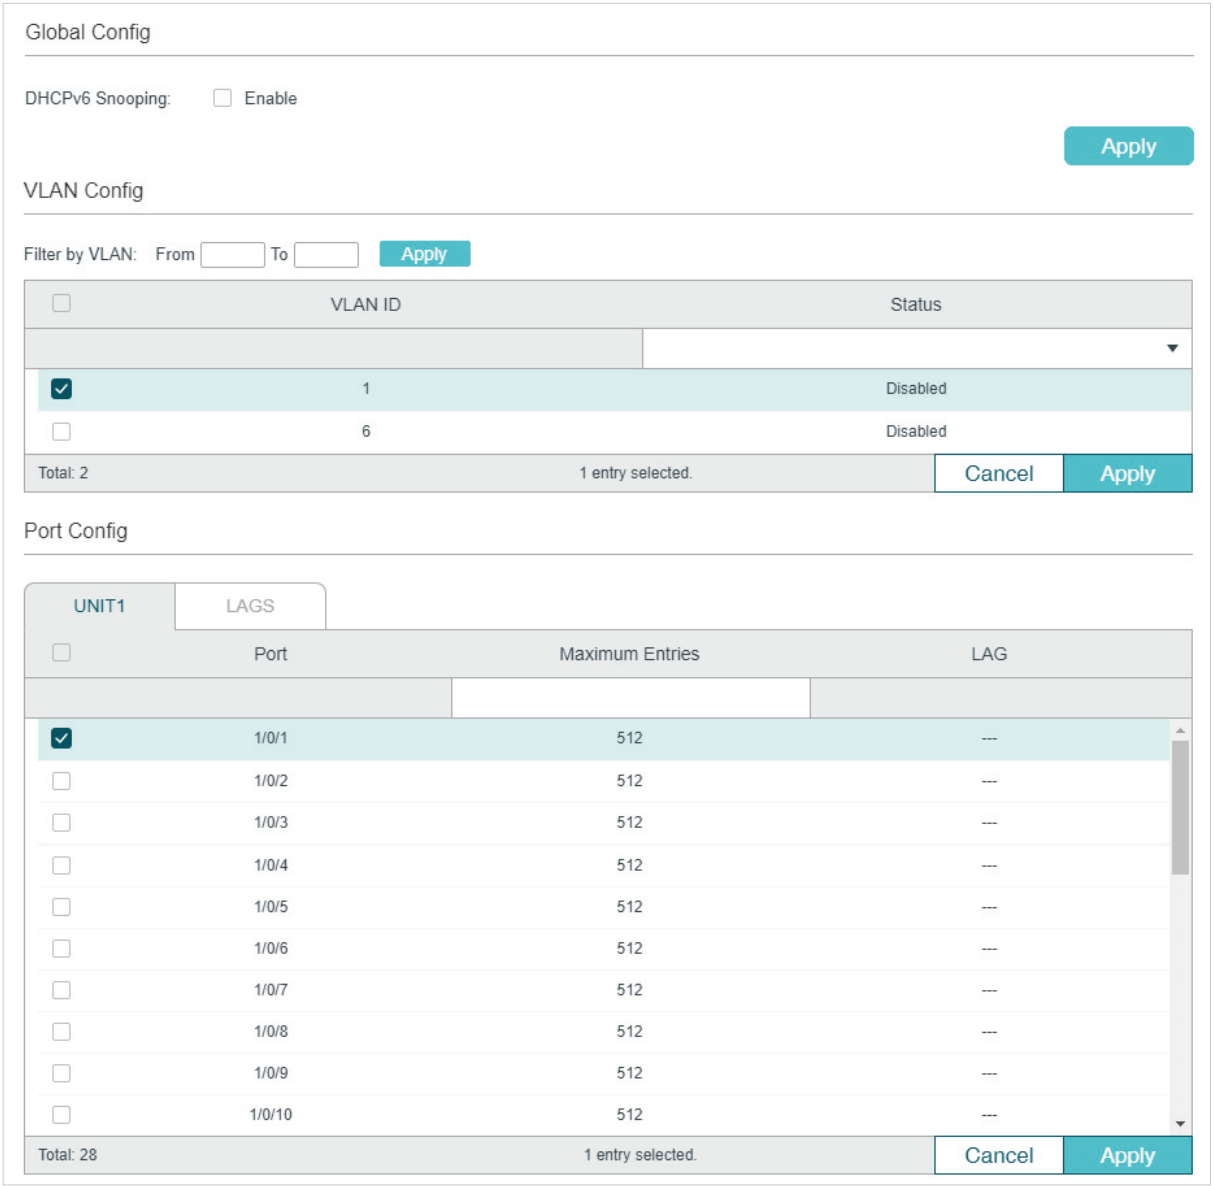

Follow these steps to configure IPv6-MAC Binding via DHCPv6 Snooping:

1) In the **Global Config** section, globally enable DHCPv6 Snooping. Click **Apply**.

2) In the **VLAN Config** section, enable DHCPv6 Snooping on a VLAN or range of VLANs. Click **Apply**.

VLAN ID	Displays the VLAN ID.
Status	Enable or disable DHCPv6 Snooping on the VLAN.

3) In the **Port Config** section, configure the maximum number of binding entries a port can learn via DHCPv6 snooping. Click **Apply**.

Port	Displays the port number.

Maximum Entries	Configure the maximum number of binding entries a port can learn via DHCPv6 snooping.
LAG	Displays the LAG that the port is in.


4) The learned entries will be displayed in the Binding Table. You can go to **SECURITY > IPv6 IMPB > IPv6-MAC Binding > Binding Table** to view or edit the entries.

2.1.4 Viewing the Binding Entries

In the Binding Table, you can view, search and edit the specified binding entries.

Choose the menu **SECURITY > IPv6 IMPB > IPv6-MAC Binding > Binding Table** to load the following page.

Figure 2-4 Binding Table

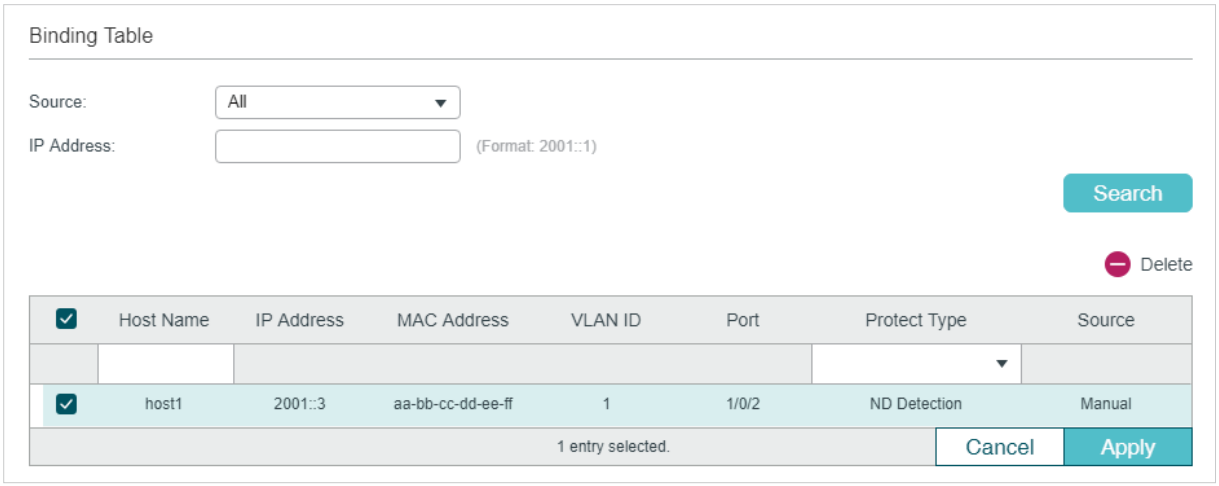

You can specify the search criteria to search your desired entries.

Source	Select the source of the entry and click **Search**. **All**: Displays the entries from all sources. **Manual Binding**: Displays the manually bound entries. **ND Snooping**: Displays the binding entries learned from ND Snooping. **DHCPv6 Snooping**: Displays the binding entries learned from DHCP Snooping.
IP	Enter an IP address and click **Search** to search the specific entry.

Additionally, you select one or more entries to edit the host name and protect type and click **Apply**.

Host Name	Enter a host name for identification.
IP Address	Displays the IPv6 address.
MAC Address	Displays the MAC address.

VLAN ID	Displays the VLAN ID.
Port	Displays the port number.
Protect Type	Select the protect type for the entry. The entry will be applied to to the specific feature. The following options are provided: **None**: This entry will not be applied to any feature. **ND Detection**: This entry will be applied to the ND Detection feature. **IPv6 Source Guard**: This entry will be applied to the IP Source Guard feature. **Both**: This entry will be applied to both of the features.
Source	Displays the source of the entry.

2.2 Using the CLI

The following sections introduce how to bind entries manually and via ND Snooping and DHCP Snooping, and how to view the binding entries.

2.2.1 Binding Entries Manually

You can manually bind the IPv6 address, MAC address, VLAN ID and the Port number together on the condition that you have got the detailed information of the hosts.

Follow these steps to manually bind entries:

Step 1	**configure** Enter global configuration mode.

Step 2	**ipv6 source binding** *hostname ipv6-addr mac-addr* **vlan** *vlan-id* **interface { fastEthernet** *port* **| gigabitEthernet** *port* **| ten-gigabitEthernet** *port* **| port-channel** *port-channel-id* **} {** none | nd-detection | ipv6-verify-source | both **}** Manually bind the host name, IP address, MAC address, VLAN ID and port number of the host, and configure the protect type for the host. *hostname*: Specify a name for the host. It contains 20 characters at most. *ipv6-addr*: Enter the IPv6 address of the host. *mac-addr*: Enter the MAC address of the host, in the format of xx:xx:xx:xx:xx:xx. *vlan-id*: Enter the VLAN ID of the host. *port*: Enter the number of the port on which the host is connected. none | nd-detection | ipv6-verify-source | both: Specify the protect type for the entry. None indicates this entry will not be applied to any feature; nd-detection indicates this entry will be applied to ND Detection; ipv6-verify-source indicates this entry will be applied to IP Source Guard; both indicates this entry will be applied to both ND Detection and IP Source Guard.
Step 3	**show ip source binding** Verify the binding entry.
Step 4	**end** Return to privileged EXEC mode.
Step 5	**copy running-config startup-config** Save the settings in the configuration file.

The following example shows how to bind an entry with the hostname host1, IPv6 address 2001:0:9d38:90d5::34, MAC address AA-BB-CC-DD-EE-FF, VLAN ID 10, port number 1/0/5, and enable this entry for ND Detection.

Switch#configure

Switch(config)#ipv6 source binding host1 2001:0:9d38:90d5::34 aa:bb:cc:dd:ee:ff **vlan** 10 **interface gigabitEthernet** 1/0/5 nd-detection

Switch(config)#show ipv6 source binding

U	Host	IP-Addr	MAC-Addr	VID	Port	ACL	Source
-	----	-------	--------	---	----	---	------
1	host1	2001:0:9d38:90d5::34	aa:bb:cc:dd:ee:ff	10	Gi1/0/5	ND-D	Manual

Switch(config)#end

Switch#copy running-config startup-config

2.2.2 Binding Entries via ND Snooping

Follow these steps to bind entries via ND Snooping:

Step 1	**configure** Enter global configuration mode.
Step 2	**ipv6 nd snooping** Globally enable ND Snooping.
Step 3	**ipv6 nd snooping vlan** *vlan-range* Enable ND Snooping on the specified VLAN. *vlan-range:* Enter the vlan range in the format of 1-3, 5.
Step 4	**interface { fastEthernet** *port* **| range fastEthernet** *port-list* **| gigabitEthernet** *port* **| range gigabitEthernet** *port-list* **| ten-gigabitEthernet** *port* **| range ten-gigabitEthernet** *port-list***}** Enter interface configuration mode.
Step 5	**ipv6 nd snooping max-entries** *value* Configure the maximum number of ND binding entries a port can learn via ND snooping. *value:* Enter the maximum number of ND binding entries a port can learn via ND snooping. The valid values are from 0 to 1024, and the default is 1024.
Step 6	**show ipv6 nd snooping** Verify the global configuration of IPv6 ND Snooping
Step 7	**show ipv6 nd snooping interface { fastEthernet** *port* **| gigabitEthernet** *port* **| ten-gigabitEthernet** *port* **}** Verify the IPv6 ND Snooping configuration of the specific port.
Step 8	**end** Return to privileged EXEC mode.
Step 9	**copy running-config startup-config** Save the settings in the configuration file.

The following example shows how to enable ND Snooping globally and on VLAN 1.

Switch#configure

Switch(config)#ipv6 nd snooping

Switch(config)#ipv6 nd snooping vlan 1

Switch(config)#show ipv6 nd snooping

Global Status: Enable

VLAN ID: 1

Switch(config)#end

Switch#copy running-config startup-config

The following example shows how to configure the maximum number of entries that can be learned on port 1/0/1:

Switch#configure

Switch(config)#interface gigabitEthernet 1/0/1

Switch(config-if)#ipv6 nd snooping max-entries 1000

Switch(config-if)#show ipv6 nd snooping interface gigabitEthernet 1/0/1

Interface	max-entries	LAG
---	---	---
Gi1/0/1	1000	N/A

Switch(config-if)#end

Switch#copy running-config startup-config

2.2.3 Binding Entries via DHCPv6 Snooping

Follow these steps to bind entries via DHCP Snooping:

Step 1	**configure** Enter global configuration mode.
Step 2	**ipv6 dhcp snooping** Globally enable DHCPv6 Snooping.
Step 3	**ipv6 dhcp snooping vlan** *vlan-range* Enable DHCPv6 Snooping on the specified VLAN. *vlan-range:* Enter the vlan range in the format of 1-3, 5.
Step 4	**interface { fastEthernet** *port* **| range fastEthernet** *port-list* **| gigabitEthernet** *port* **| range gigabitEthernet** *port-list* **| ten-gigabitEthernet** *port* **| range ten-gigabitEthernet** *port-list* **| interface port-channel** *port-channel-id* **| interface range port-channel** *port-channel-id-list* **}** Enter interface configuration mode.
Step 5	**ipv6 dhcp snooping max-entries** *value* Configure the maximum number of binding entries the port can learn via DHCPv6 snooping. *value:* Enter the value of maximum number of entries. The valid values are from 0 to 512.
Step 6	**show ip dhcp snooping** Verify global configuration of DHCPv6 Snooping.

Step 7	**end** Return to privileged EXEC mode.
Step 8	**copy running-config startup-config** Save the settings in the configuration file.

The following example shows how to enable DHCPv6 Snooping globally and on VLAN 5, and set the maximum number of binding entries port 1/0/1 can learn via DHCPv6 snooping as 100:

Switch#configure

Switch(config)#ipv6 dhcp snooping

Switch(config)#ipv6 dhcp snooping vlan 5

Switch(config)#interface gigabitEthernet 1/0/1

Switch(config-if)#ipv6 dhcp snooping max-entries 100

Switch(config-if)#show ipv6 dhcp snooping

Global Status: Enable

VLAN ID: 5

Switch(config-if)#show ipv6 dhcp snooping interface gigabitEthernet 1/0/1

Interface max-entries LAG

--- --- ---

Gi1/0/1 100 N/A

Switch(config-if)#end

Switch#copy running-config startup-config

2.2.4 Viewing Binding Entries

On privileged EXEC mode or any other configuration mode, you can use the following command to view binding entries:

show ipv6 source binding View the information of binding entries, including the host name, IP address, MAC address, VLAN ID, port number and protect type.

3 ND Detection Configuration

To complete ND Detection configuration, follow these steps:

1) Add IPv6-MAC Binding entries.
2) Enable ND Detection.
3) Configure ND Detection on ports.
4) View ND statistics.

3.1 Using the GUI


3.1.1 Adding IPv6-MAC Binding Entries

The ND Detection feature allows the switch to detect the ND packets based on the binding entries in the IPv6-MAC Binding Table and filter out the illegal ND packets. Before configuring ND Detection, complete IPv6-MAC Binding configuration. For details, refer to *IPv6-MAC Binding Configuration*.

3.1.2 Enabling ND Detection

Choose the menu **SECURITY > IPv6 IMPB > ND Detection > Global Config** to load the following page.

Figure 3-1 ND Detection Global Config

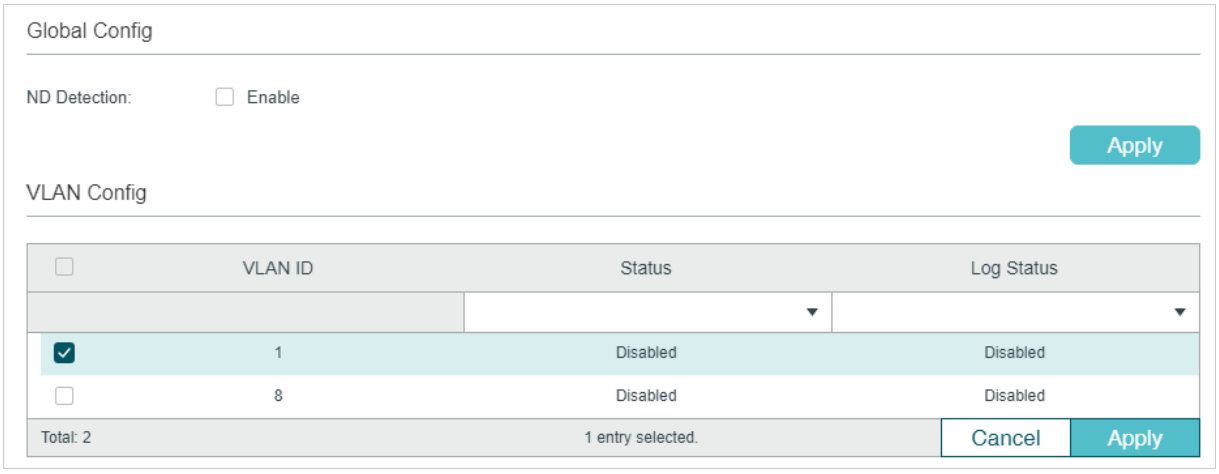

Follow these steps to enable ND Detection:

1) In the **Global Config** section, enable ND Detection and configure the related parameters. Click **Apply**.

ND Detection	Enable or disable ND Detection globally.


2) In the **VLAN Config** section, enable ND Detection on the selected VLANs. Click **Apply**.

VLAN ID	Displays the VLAN ID.
Status	Enable or disable ND Detection on the VLAN.
Log Status	Enable or disable Log feature on the VLAN. With this feature enabled, the switch generates a log when an illegal ND packet is discarded.

3.1.3 Configuring ND Detection on Ports

Choose the menu **SECURITY > IPv6 IMPB > ND Detection >Port Config** to load the following page.

Figure 3-2 ND Detection on Port

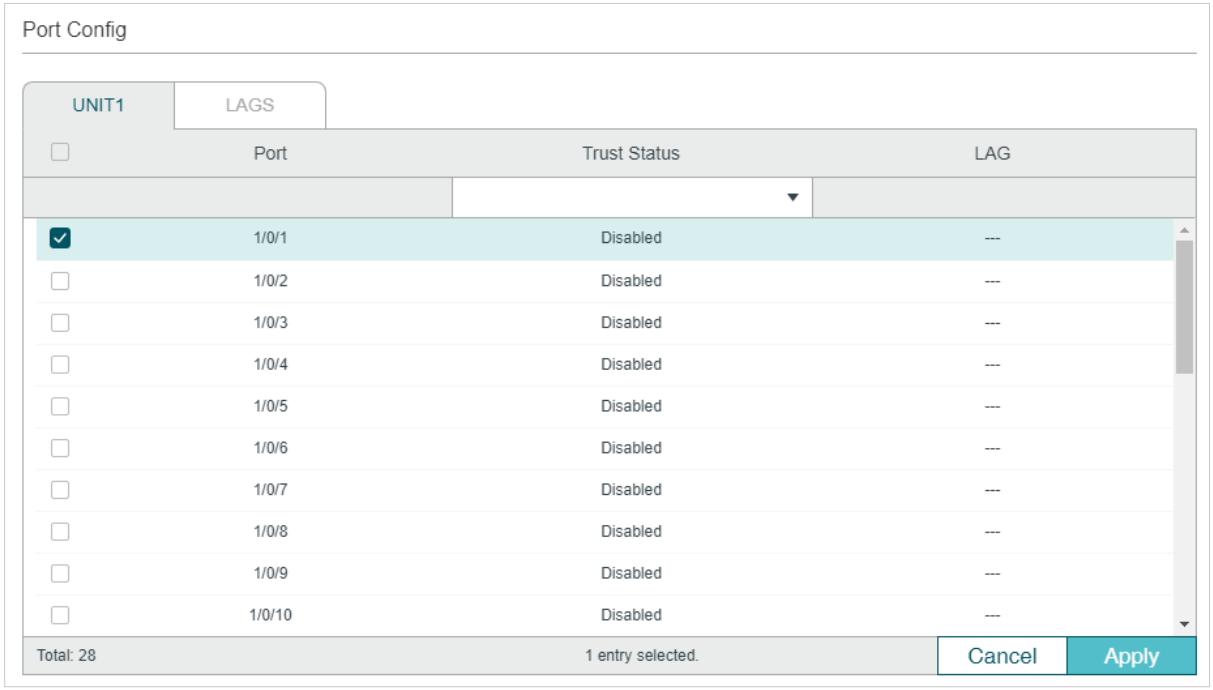

Follow these steps to configure ND Detection on ports:

1) Select one or more ports and configure the parameters.

Port	Displays the port number.
Trust Status	Enable or disable this port to be a trusted port. On a trusted port, the ND packets are forwarded directly without checked. The specific ports, such as up-link ports and routing ports are suggested to be set as trusted.
LAG	Displays the LAG that the port is in.


2) Click **Apply**.

3.1.4 Viewing ND Statistics

You can view the number of the illegal ND packets received on each port, which facilitates you to locate the network malfunction and take the related protection measures.

Choose the menu **SECURITY > IPv6 IMPB > ND Detection > ND Statistics** to load the following page.

Figure 3-3 View ND Statistics

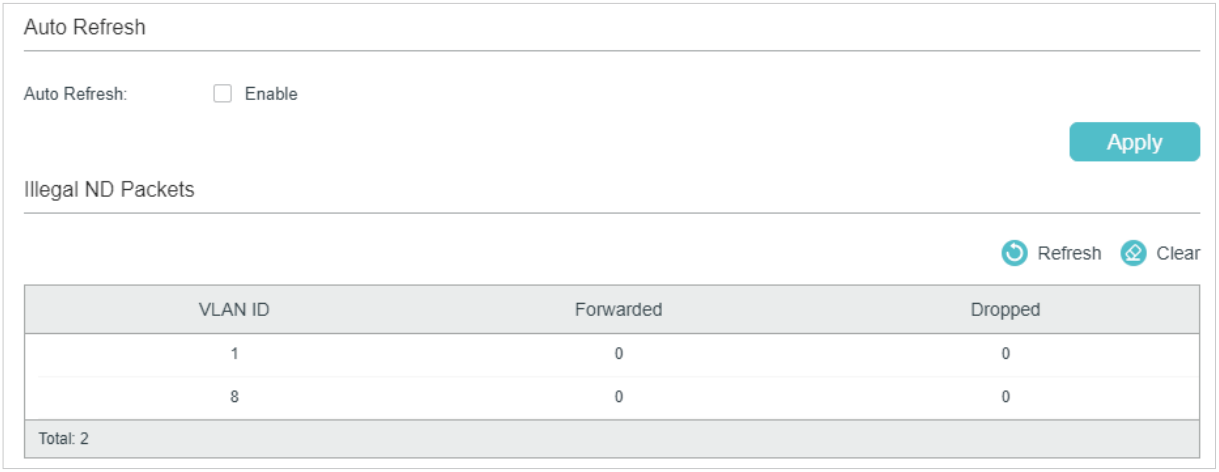

In the **Auto Refresh** section, you can enable the auto refresh feature and specify the refresh interval, and thus the web page will be automatically refreshed.

In the **Illegal ND Packet** section, you can view the number of illegal ND packets in each VLAN.

VLAN ID	Displays the VLAN ID.
Forwarded	Displays the number of forwarded ND packets in this VLAN.
Dropped	Displays the number of dropped ND packets in this VLAN.

3.2 Using the CLI

3.2.1 Adding IPv6-MAC Binding Entries

The ND Detection feature allows the switch to detect the ND packets based on the binding entries in the IPv6-MAC Binding Table and filter out the illegal ND packets. Before configuring ND Detection, complete IPv6-MAC Binding configuration. For details, refer to *IPv6-MAC Binding Configuration*.

3.2.2 Enabling ND Detection

Follow these steps to enable ND Detection:

Step 1	**configure** Enter global configuration mode.
Step 2	**ipv6 nd detection** Globally enable the ND Detection feature.

Step 3	**ipv6 nd detection vlan** *vlan-range* Enable ND Detection on the specified VLAN. *vlan-range:* Enter the vlan range in the format of 1-3, 5.
Step 5	**show ipv6 nd detection** Verify the global ND Detection configuration.
Step 6	**end** Return to privileged EXEC mode.
Step 7	**copy running-config startup-config** Save the settings in the configuration file.

The following example shows how to enable ND Detection globally and on VLAN 1:

Switch#configure

Switch(config)#ipv6 nd detection

Switch(config)#ipv6 nd detection vlan 1

Switch(config)#show ipv6 nd detection

Global Status: Enable

VLAN ID: 1

Switch(config)#end

Switch#copy running-config startup-config

3.2.3 Configuring ND Detection on Ports

Follow these steps to configure ND Detection on ports:

Step 1	**configure** Enter global configuration mode.
Step 2	**interface { fastEthernet** *port* **| range fastEthernet** *port-list* **| gigabitEthernet** *port* **| range gigabitEthernet** *port-list* **| ten-gigabitEthernet** *port* **| range ten-gigabitEthernet** *port-list* **}** Enter interface configuration mode.
Step 3	**ipv6 nd detection trust** Configure the port as a trusted port, on which the ND packets will not be checked. The specific ports, such as up-linked ports and routing ports are suggested to be set as trusted ports.
Step 4	**show ipv6 nd detection interface { fastEthernet** *port* **| gigabitEthernet** *port* **| ten-gigabitEthernet** *port* **| port-channel** *port-channel-id* **}** Verify the global ND Detection configuration of the port.

Step 5	**end** Return to privileged EXEC mode.
Step 6	**copy running-config startup-config** Save the settings in the configuration file.

The following example shows how to configure port 1/0/1 as trusted port:

Switch#configure

Switch(config)#interface gigabitEthernet 1/0/1

Switch(config-if)#ipv6 nd detection trust

Switch(config-if)#show ipv6 nd detection interface gigabitEthernet 1/0/1

Interface Trusted LAG

--------- ------- ---

Gi1/0/1 Enable N/A

Switch(config-if)#end

Switch#copy running-config startup-config

3.2.4 Viewing ND Statistics

On privileged EXEC mode or any other configuration mode, you can use the following command to view ND statistics:

show ipv6 nd detection statistics

View the ND statistics on each port, including the number of forwarded ND packets and the number of dropped ND packets.

4 IPv6 Source Guard Configuration

To complete IPv6 Source Guard configuration, follow these steps:

1) Add IP-MAC Binding entries.
2) Configure IPv6 Source Guard.

4.1 Using the GUI

4.1.1 Adding IPv6-MAC Binding Entries


The ND Detection feature allows the switch to detect the ND packets based on the binding entries in the IPv6-MAC Binding Table and filter out the illegal ND packets. Before configuring ND Detection, complete IPv6-MAC Binding configuration. For details, refer to *IPv6-MAC Binding Configuration*.

4.1.2 Configuring IPv6 Source Guard

Before configuring IPv6 Source Guard, you need to configure the SDM template as EnterpriseV6.

Choose the menu **SECURITY > IPv6 IMPB > IPv6 Source Guard** to load the following page.

Figure 4-1 IPv6 Source Guard Config

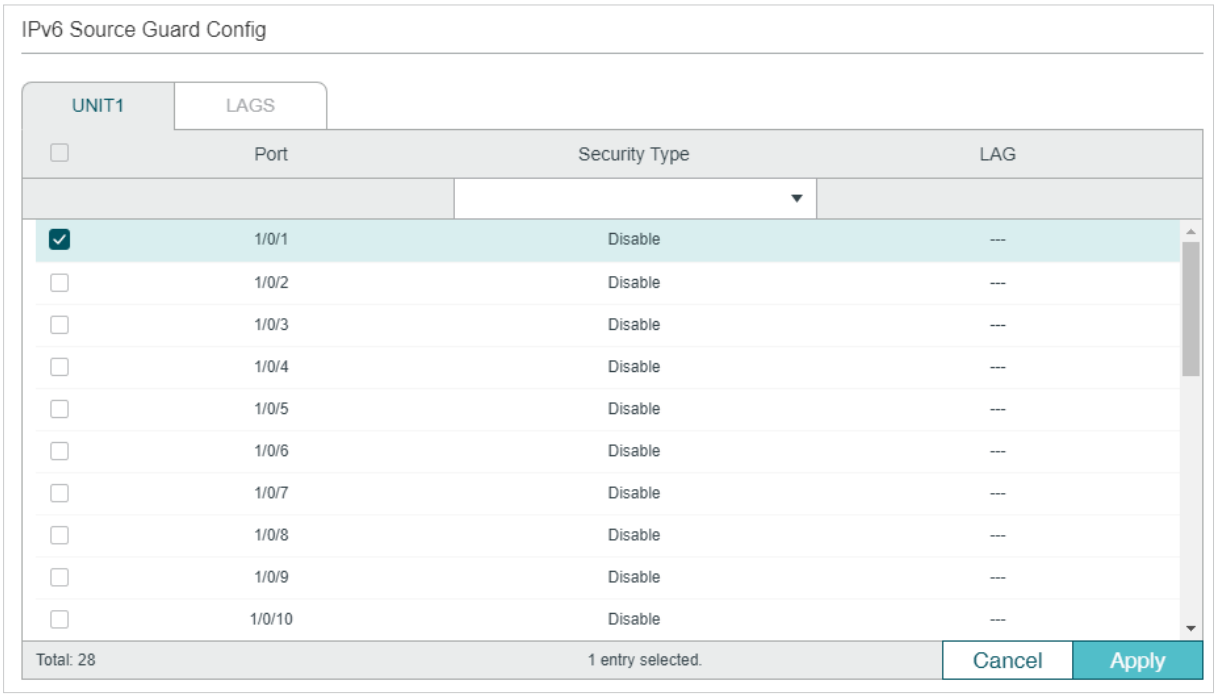

Follow these steps to configure IPv6 Source Guard:

1) Select one or more ports and configure the protect type for ports.

Port	Displays the port number.
Security Type	Select Security Type on the port for IPv6 packets. The following options are provided: **Disable:** The IP Source Guard feature is disabled on the port. **SIPv6**: Only the Packets with its source IPv6 address and port number matching the IPv6-MAC binding rules can be processed, otherwise the packet will be discarded. **SIPv6+MAC**: Only the packet with its source IPv6 address, source MAC address and port number matching the IPv6-MAC binding rules can be processed, otherwise the packet will be discarded.
LAG	Displays the LAG that the port belongs to.

2) Click **Apply**.

4.2 Using the CLI

4.2.1 Adding IPv6-MAC Binding Entries

The ND Detection feature allows the switch to detect the ND packets based on the binding entries in the IPv6-MAC Binding Table and filter out the illegal ND packets. Before configuring ND Detection, complete IPv6-MAC Binding configuration. For details, refer to *IPv6-MAC Binding Configuration*.

4.2.2 Configuring IPv6 Source Guard

Before configuring IPv6 Source Guard, you need to configure the SDM template as EnterpriseV6.

Follow these steps to configure IPv6 Source Guard:

Step 1	**configure** Enter global configuration mode.
Step 2	**interface { fastEthernet** *port* **| range fastEthernet** *port-list* **| gigabitEthernet** *port* **| range gigabitEthernet** *port-list* **| ten-gigabitEthernet** *port* **| range ten-gigabitEthernet** *port-list* **}** Enter interface configuration mode.
Step 3	**ipv6 verify source {** sipv6 | sipv6+mac **}** Enable IPv6 Source Guard for IPv6 packets. sipv6: Only the packet with its source IP address and port number matching the IPv6-MAC binding rules can be processed, otherwise the packet will be discarded. sipv6+mac: Only the packet with its source IP address, source MAC address and port number matching the IPv6-MAC binding rules can be processed, otherwise the packet will be discarded.

Step 4	**show ipv6 verify source [interface { fastEthernet** *port* **| gigabitEthernet** *port* **| ten-gigabitEthernet** *port* **| port-channel** *port-channel-id* **}]** Verify the IP Source Guard configuration for IPv6 packets.
Step 5	**end** Return to privileged EXEC mode.
Step 6	**copy running-config startup-config** Save the settings in the configuration file.

The following example shows how to enable IPv6 Source Guard on port 1/0/1:

Switch#configure

Switch(config)#interface gigabitEthernet 1/0/1

Switch(config-if)#ipv6 verify source sipv6+mac

Switch(config-if)#show ipv6 verify source interface gigabitEthernet 1/0/1

Port Security-Type LAG

---- ------------ ----

Gi1/0/1 SIPv6+MAC N/A

Switch(config-if)#end

Switch#copy running-config startup-config


5 Configuration Examples

5.1 Example for ND Detection

5.1.1 Network Requirements

As shown below, User 1 and User 2 are legal IPv6 users in the LAN and connected to port 1/0/1 and port 1/0/2. Both of them are in the default VLAN 1. The router has been configured with security feature to prevent attacks from the WAN. Now the network administrator wants to configure Switch A to prevent ND attacks from the LAN.

Figure 5-1 Network Topology

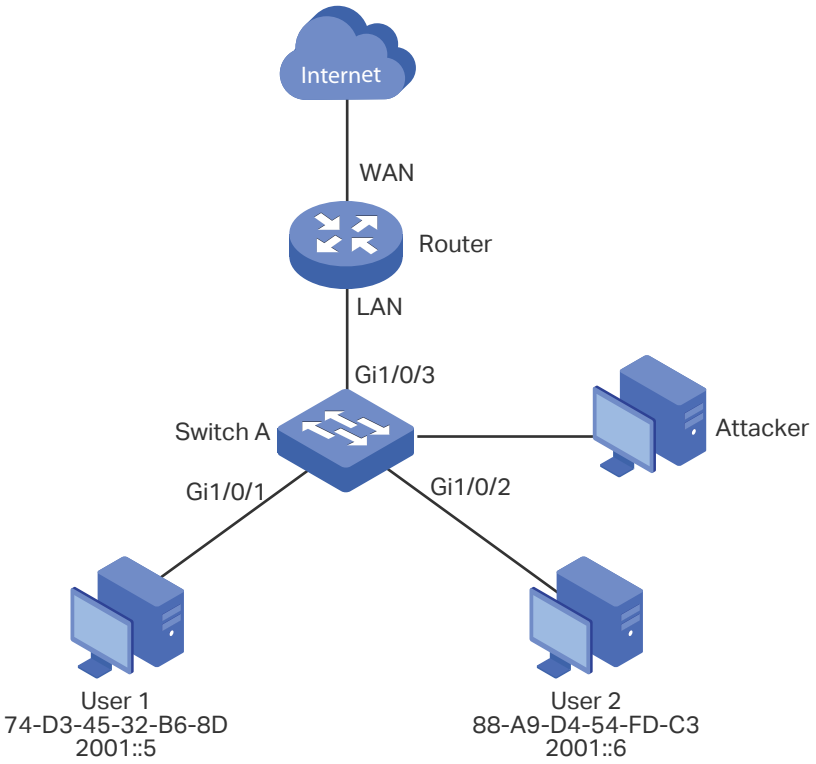

5.1.2 Configuration Scheme

To meet the requirement, you can configure ND Detection to prevent the network from ND attacks in the LAN.

The overview of configurations on the switch is as follows:

1) Configure IPv6-MAC Binding. The binding entries for User 1 and User 2 should be manually bound.
2) Configure ND Detection globally.


3) Configure ND Detection on ports. Since port 1/0/3 is connected to the gateway router, set port 1/0/3 as trusted port.

Demonstrated with T2600G-28TS, the following sections provide configuration procedure in two ways: using the GUI and using the CLI.

5.1.3 Using the GUI


1) Choose the menu **SECURITY > IPv6 IMBP > IPv6-MAC Binding > Manual Binding** and click Add to load the following page. Enter the host name, IPv6 address, MAC address and VLAN ID of User 1, select the protect type as ND Detection, and select port 1/0/1 on the panel. Click **Apply**.

Figure 5-2 Binding Entry for User 1

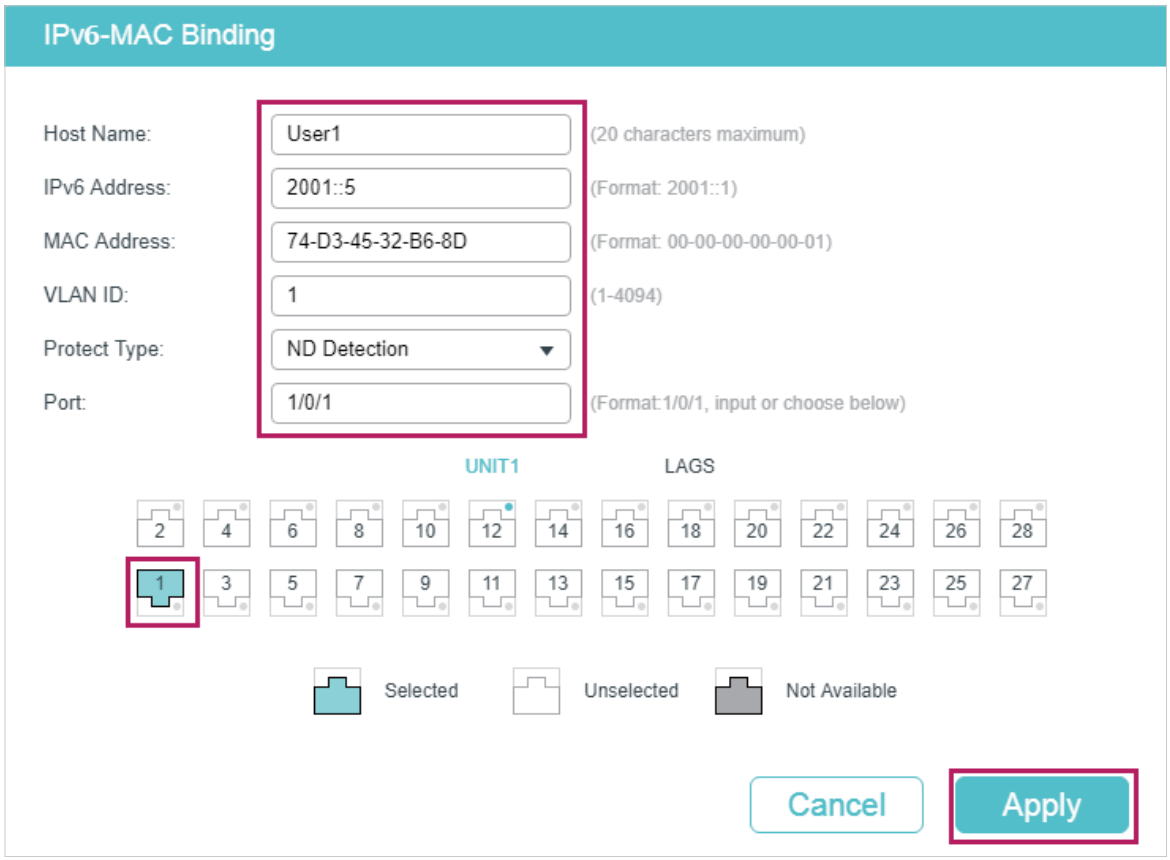


2) In the same way, add a binding entry for User 2. Enter the host name, IPv6 address, MAC address and VLAN ID of User 2, select the protect type as ND Detection, and select port 1/0/2 on the panel. Click **Apply**.

Figure 5-3 Binding Entry for User 2

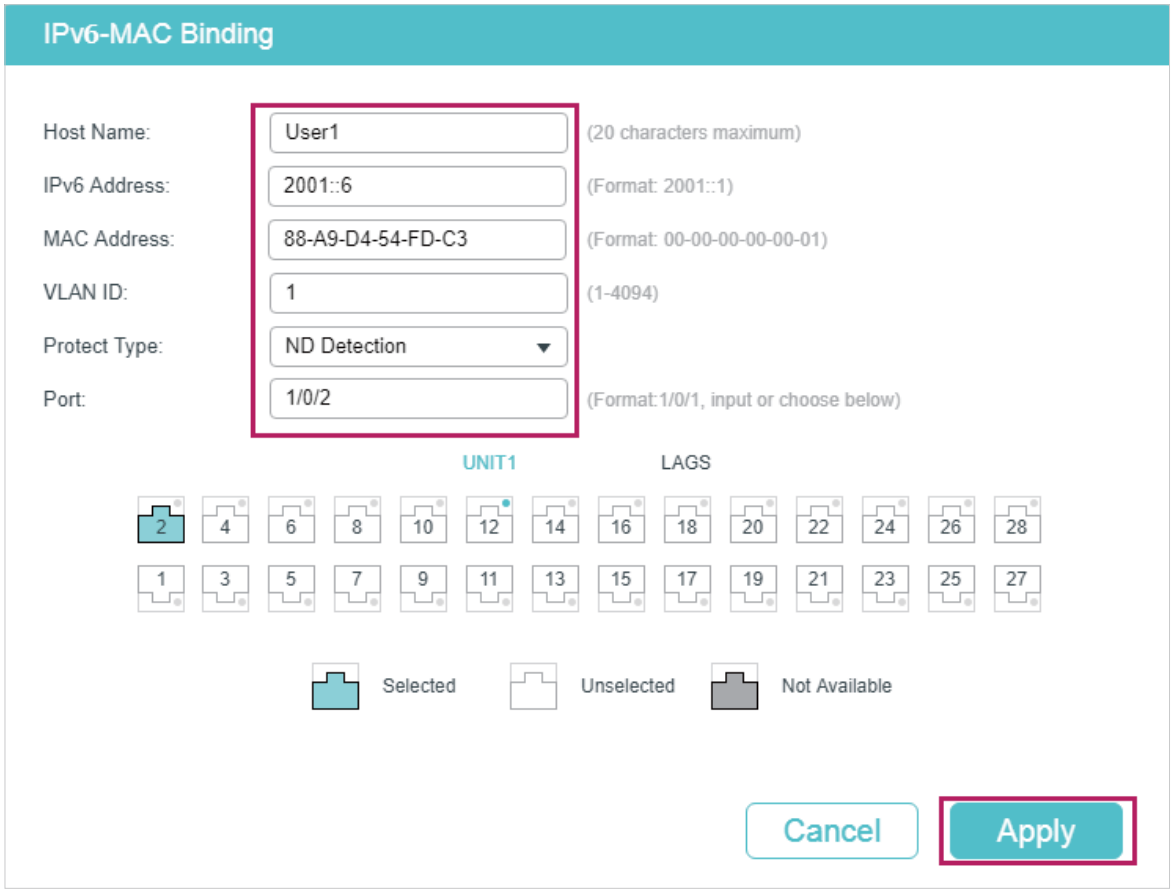


3) Choose the menu **SECURITY > IPv6 IMBP > ND Detection > Global Config** to load the following page. Enable ND Detection and click **Apply**. Select VLAN 1, change Status as Enabled and click **Apply**.

Figure 5-4 Enable ND Detection

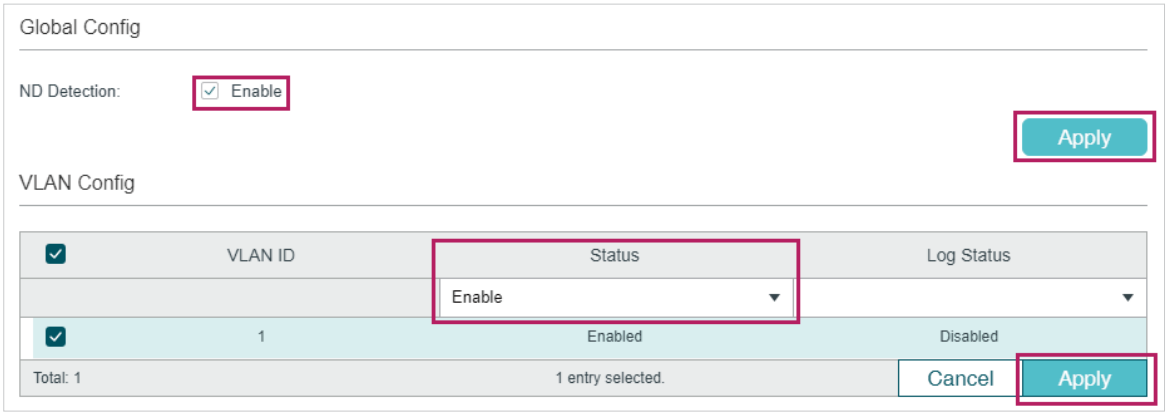

4) Choose the menu **SECURITY > IPv6 IMBP > ND Detection > Port Config** to load the following page. By default, all ports are enabled with ND Detection. Since port 1/0/3 is connected to the gateway router, configure port 1/0/3 as trusted port. Click **Apply**.

Figure 5-5 Port Config

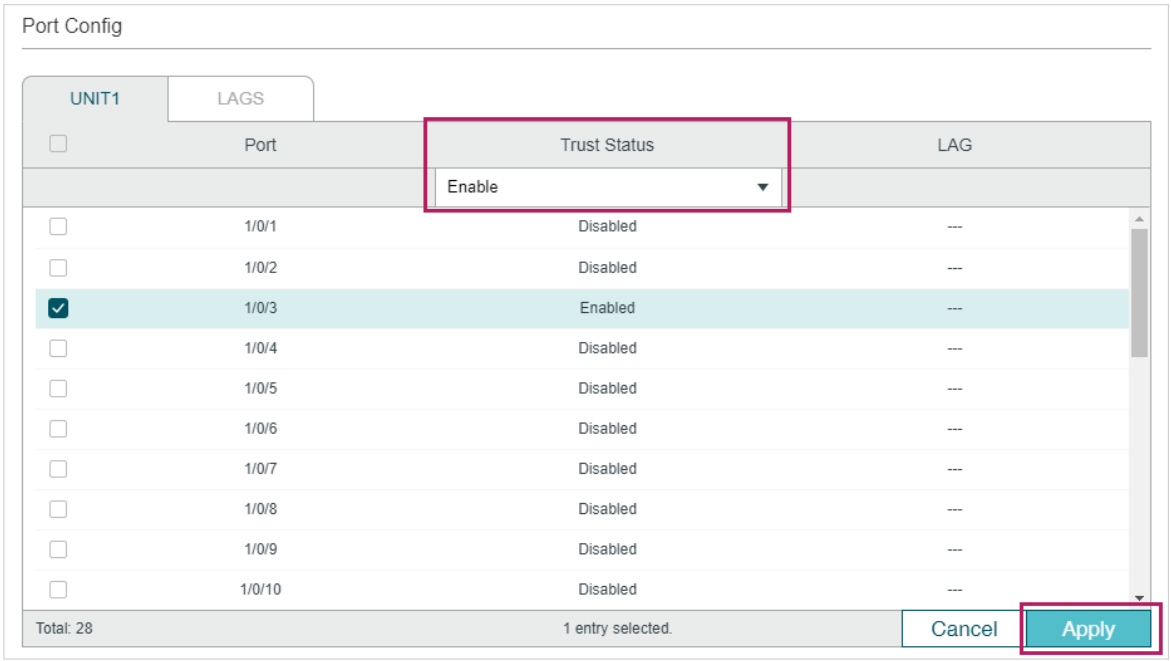

5) Click Save to save the settings.

5.1.4 Using the CLI

1) Manually bind the entries for User 1 and User 2.

Switch_A#configure

Switch_A(config)#ipv6 source binding User1 2001::5 74:d3:45:32:b6:8d vlan 1 interface gigabitEthernet 1/0/1 nd-detection

Switch_A(config)#ip source binding User1 2001::6 88:a9:d4:54:fd:c3 vlan 1 interface gigabitEthernet 1/0/2 nd-detection

2) Enable ND Detection globally and on VLAN 1.

Switch_A(config)#ipv6 nd detection vlan 1

3) Configure port 1/0/3 as trusted port.

Switch_A(config)#interface gigabitEthernet 1/0/3

Switch_A(config-if)#ipv6 nd detection trust

Switch_A(config-if)#end

Switch_A#copy running-config startup-config

Verify the Configuration

Verify the IPv6-MAC Binding entries:

Switch_A#show ipv6 source binding

U Host IP-Addr MAC-Addr VID Port ACL SOURCE

-	----	-------	--------	---	----	---	------
1	User1	2001::5	74:d3:45:32:b6:8d	1	Gi1/0/1	ND-D	Manual
1	User2	2001::6	88:a9:d4:54:fd:c3	1	Gi1/0/2	ND-D	Manual

Notice:

1.Here, 'ND-D' for 'ND-Detection',and'IP-V-S' for 'IP-Verify-Source'.

Verify the global configuration of ND Detection:

Switch_A#show ipv6 nd detection

Global Status: Enable

Verify the ND Detection configuration on VLAN:

Switch_A#show ipv6 nd detection vlan

VID	Enable status	Log Status
1	Enable	Disable

Verify the ND Detection configuration on ports:

Switch_A#show ipv6 nd detection interface

Interface	Trusted	LAG
Gi1/0/1	Disable	N/A
Gi1/0/2	Disable	N/A
Gi1/0/3	Enable	N/A

...


5.2 Example for IPv6 Source Guard

5.2.1 Network Requirements

As shown below, the legal IPv6 host connects to the switch via port 1/0/1 and belongs to the default VLAN 1. It is required that only the legal host can access the network via port

1/0/1, and other unknown hosts will be blocked when trying to access the network via ports 1/0/1-3.

Figure 5-6 Network Topology

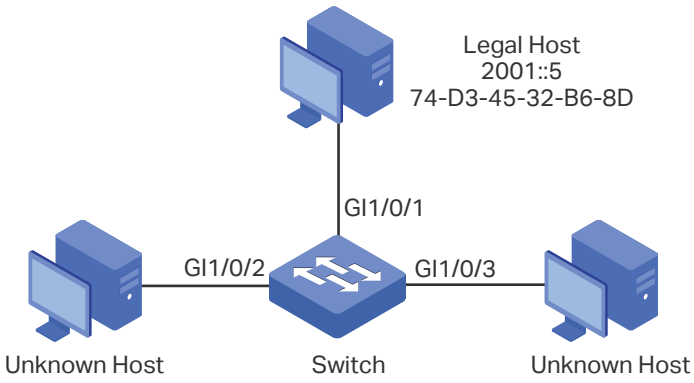

5.2.2 Configuration Scheme

To implement this requirement, you can use IPv6-MAC Binding and IPv6 Source Guard to filter out the packets received from the unknown hosts. The overview of configuration on the switch is as follows:


1) Bind the MAC address, IPv6 address, connected port number and VLAN ID of the legal host with IPv6-MAC Binding.
2) Enable IPv6 Source Guard on ports 1/0/1-3.

Demonstrated with T2600G-28TS, the following sections provide configuration procedure in two ways: using the GUI and using the CLI.

5.2.3 Using the GUI


1) Choose the menu **SECURITY > IPv6 IMPB > IPv6-MAC Binding > Manual Binding** and click Add to load the following page. Enter the host name, IPv6 address, MAC address and VLAN ID of the legal host, select the protect type as , and select port 1/0/1 on the panel. Click **Apply**.

Figure 5-7 Manual Binding

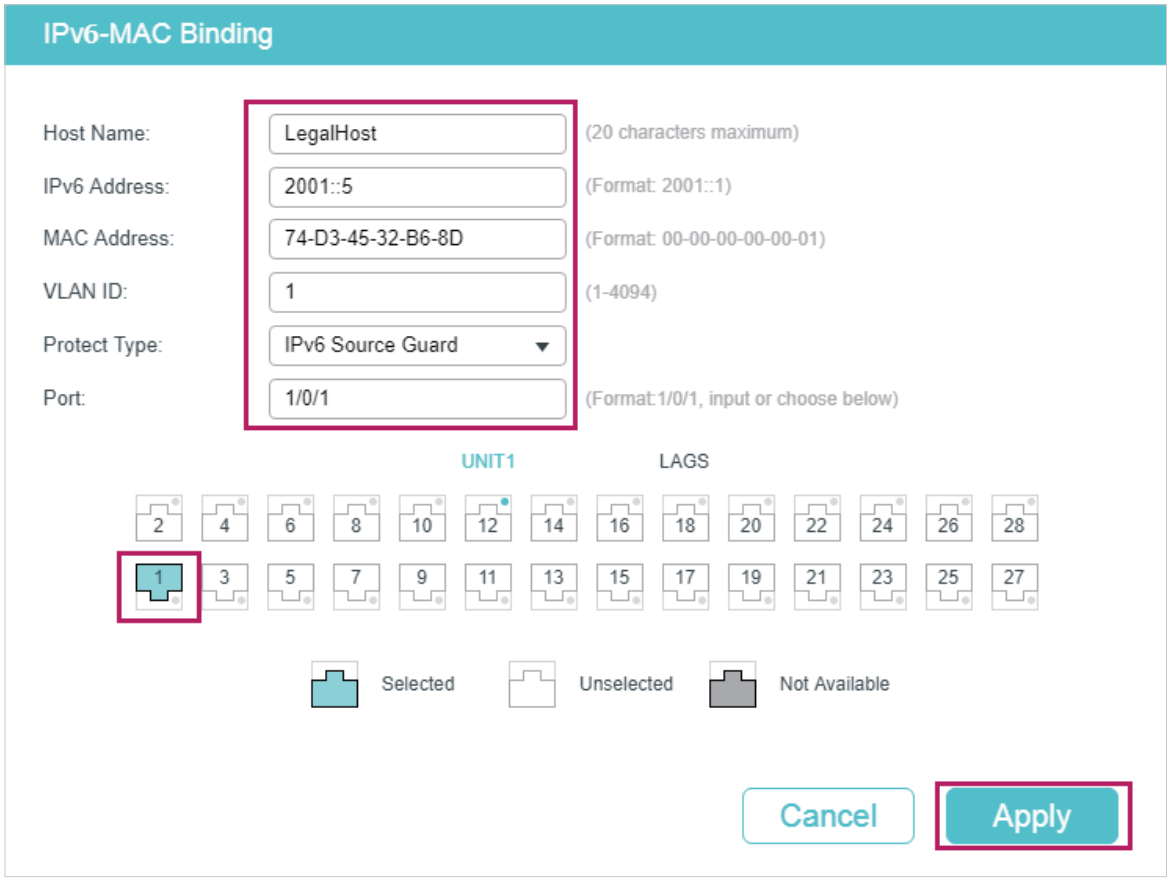

2) Choose the menu **SECURITY > IPv6 IMPB > IPv6 Source Guard** to load the following page. Select ports 1/0/1-3, configure the Security Type as SIP+MAC, and click **Apply**.

Figure 5-8 IPv6 Source Guard

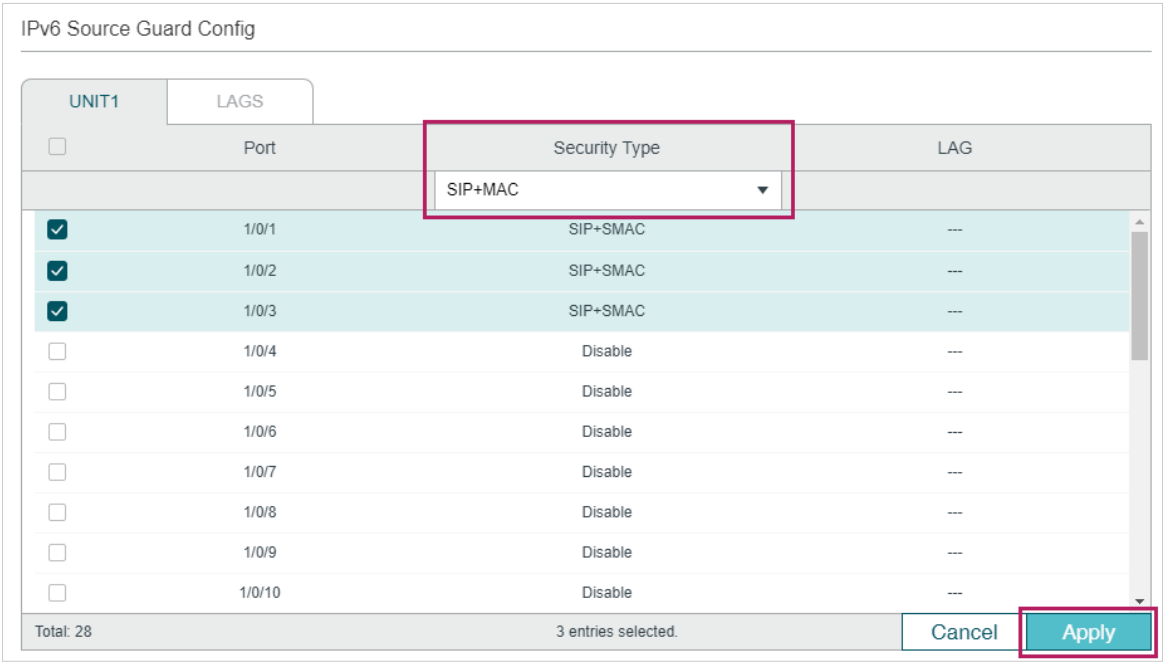

3) Click Save to save the settings.

5.2.4 Using the CLI

1) Manually bind the IPv6 address, MAC address, VLAN ID and connected port number of the legal host, and apply this entry to the IPv6 Source Guard feature.

   Switch#configure

   Switch(config)#ipv6 source binding legal-host 2001::5 74:d3:45:32:b6:8d vlan 1 interface gigabitEthernet 1/0/1 ipv6-verify-source

2) Enable IPv6 Source Guard on ports 1/0/1-3.

   Switch(config)# ipv6 verify source

   Switch(config)# interface range gigabitEthernet 1/0/1-3

   Switch(config-if-range)#ipv6 verify source sipv6+mac

   Switch(config-if-range)#end

   Switch#copy running-config startup-config

Verify the Configuration

Verify the binding entry:

Switch#show ip source binding

U	Host	IP-Addr	MAC-Addr	VID	Port	ACL	SOURCE
-	----	-------	--------	---	----	---	------
1	legal-host	2001::5	74:d3:45:32:b6:8d	1	Gi1/0/1	IP-V-S	Manual

Notice:

1.Here, 'ND-D' for 'ND-Detection',and'IP-V-S' for 'IP-Verify-Source'.

Verify the configuration of IPv6 Source Guard:

Switch#show ipv6 verify source

Port	Security-Type	LAG
Gi1/0/1	SIP+MAC	N/A
Gi1/0/2	SIP+MAC	N/A
Gi1/0/3	SIP+MAC	N/A

...

6 Appendix: Default Parameters

Default settings of DHCP Snooping are listed in the following table:

Table 6-1 DHCPv6 Snooping

Parameter	Default Setting
Global Config	
DHCPv6 Snooping	Disable
VLAN Config	
Status	Disable
Port Config	
Maximum Entry	512

Default settings of ND Detection are listed in the following table:

Table 6-2 ND Detection

Parameter	Default Setting
Global Config	
ND Detection	Disable
VLAN Config	
Status	Disable
Log Status	Disable
Port Config	
Trust Status	Disable
ND Statistics	
Auto Refresh	Disable
Refresh Interval	5 seconds

Default settings of IPv6 Source Guard are listed in the following table:

Table 6-3 ND Detection

Parameter	Default Setting
Port Config	
Security Type	Disable

Part 30

Configuring DHCP Filter

CHAPTERS

1. DHCP Filter
2. DHCPv4 Filter Configuration
3. DHCPv6 Filter Configuration
4. Configuration Examples
5. Appendix: Default Parameters

1 DHCP Filter


1.1 Overview

During the working process of DHCP, generally there is no authentication mechanism between the DHCP server and the clients. If there are several DHCP servers on the network, security problems and network interference will happen. DHCP Filter resolves this problem.

With DHCP Filter configured, the switch can check whether the received DHCP packets are legal and discard the illegal ones. In this way, DHCP Filter ensures that users get IP addresses only from the legal DHCP server and enhances the network security.

As the following figure shows, there are both legal and illegal DHCP servers on the network. You can configure DHCP Server1 as a legal DHCP server by providing the IP address and port number of DHCP Server1. When receiving the DHCP respond packets, the switch will forward the packets from the legal DHCP server.

Figure 1-1 Network Topology

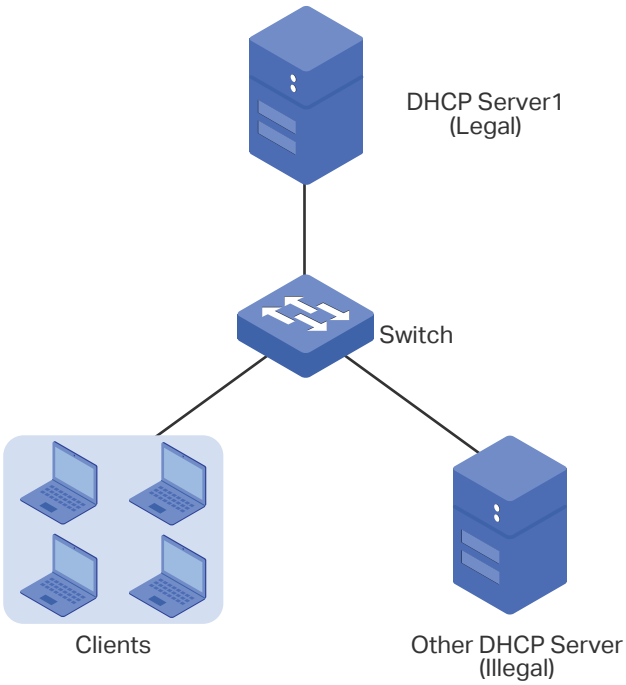

Additionally, you can limit the forwarding rate of DHCP packets on each port.

1.2 Supported Features

The switch supports DHCPv4 Filter and DHCPv6 Filter.

DHCPv4 Filter

DHCPv4 Filter is used for DHCPv4 servers and IPv4 clients.

DHCPv6 Filter

DHCPv6 Filter is used for DHCPv6 servers and IPv6 clients.

2 DHCPv4 Filter Configuration

To complete DHCPv4 Filter configuration, follow these steps:


1) Configure the basic DHCPv4 Filter parameters.
2) Configure legal DHCPv4 servers.

2.1 Using the GUI

2.1.1 Configuring the Basic DHCPv4 Filter Parameters

Choose the menu **SECURITY > DHCP Filter > DHCPv4 Filter > Basic Config** to load the following page.

Figure 2-1 DHCPv4 Filter Basic Config

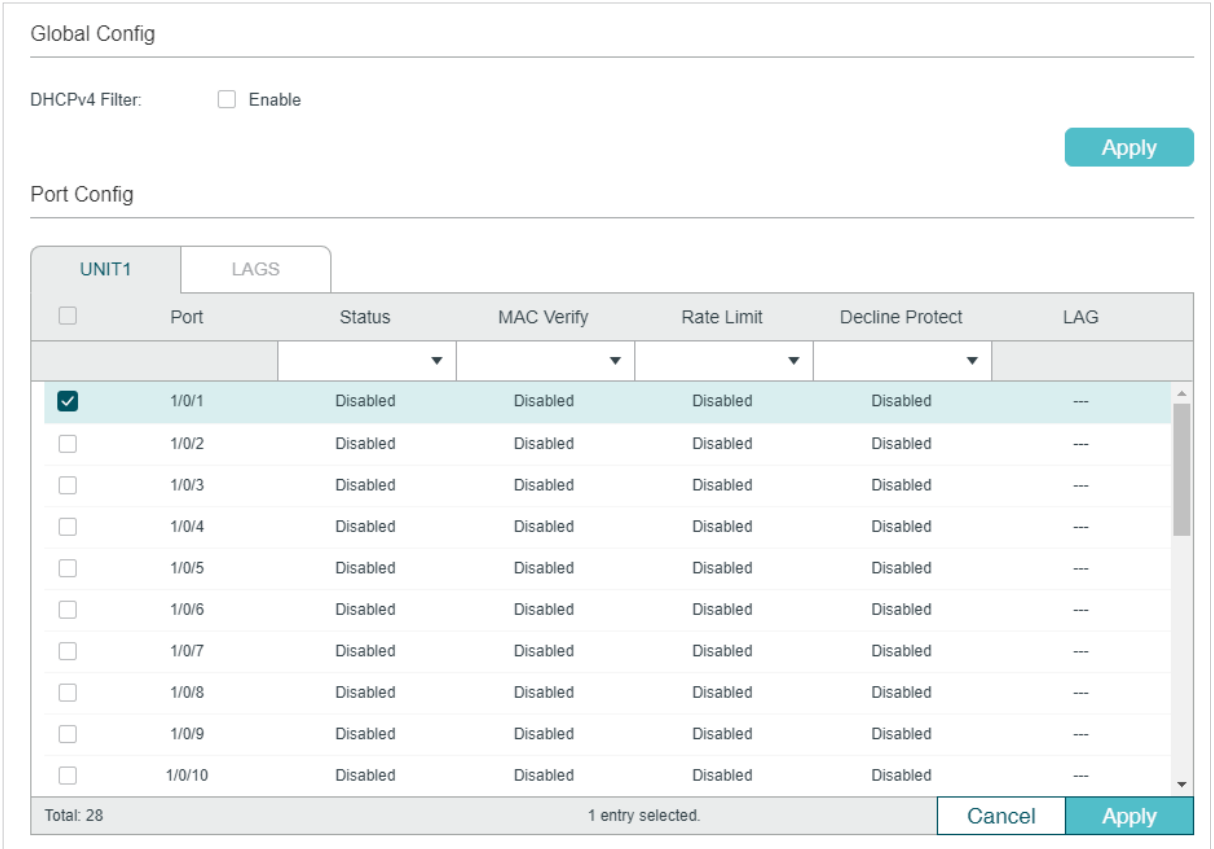

Follow these steps to complete the basic settings of DHCPv4 Filter:

1) In the **Global Config** section, enable DHCPv4 globally.
2) In the **Port Config** section, select one or more ports and configure the related parameters.

Port	Displays the port number.
Status	Enable or disable DHCPv4 Filter feature on the port.
MAC Verify	Enable or disable the MAC Verify feature. There are two fields in the DHCPv4 packet that contain the MAC address of the host. The MAC Verify feature compares the two fields of a DHCPv4 packet and discards the packet if the two fields are different. This prevents the IP address resource on the DHCPv4 server from being exhausted by forged MAC addresses.
Rate Limit	Select to enable the rate limit feature and specify the maximum number of DHCPv4 packets that can be forwarded on the port per second. The excessive DHCPv4 packets will be discarded.
Decline Protect	Select to enable the decline protect feature and specify the maximum number of Decline packets that can be forwarded on the port per second. The excessive Decline packets will be discarded.
LAG	Displays the LAG that the port is in.

3) Click **Apply**.


Note:

The member port of an LAG (Link Aggregation Group) follows the configuration of the LAG and not its own. The configurations of the port can take effect only after it leaves the LAG.

2.1.2 Configuring Legal DHCPv4 Servers

Choose the menu **SECURITY > DHCP Filter > DHCPv4 Filter > Legal DHCPv4 Servers** and click Add to load the following page.

Figure 2-2 Adding Legal DHCPv4 Server

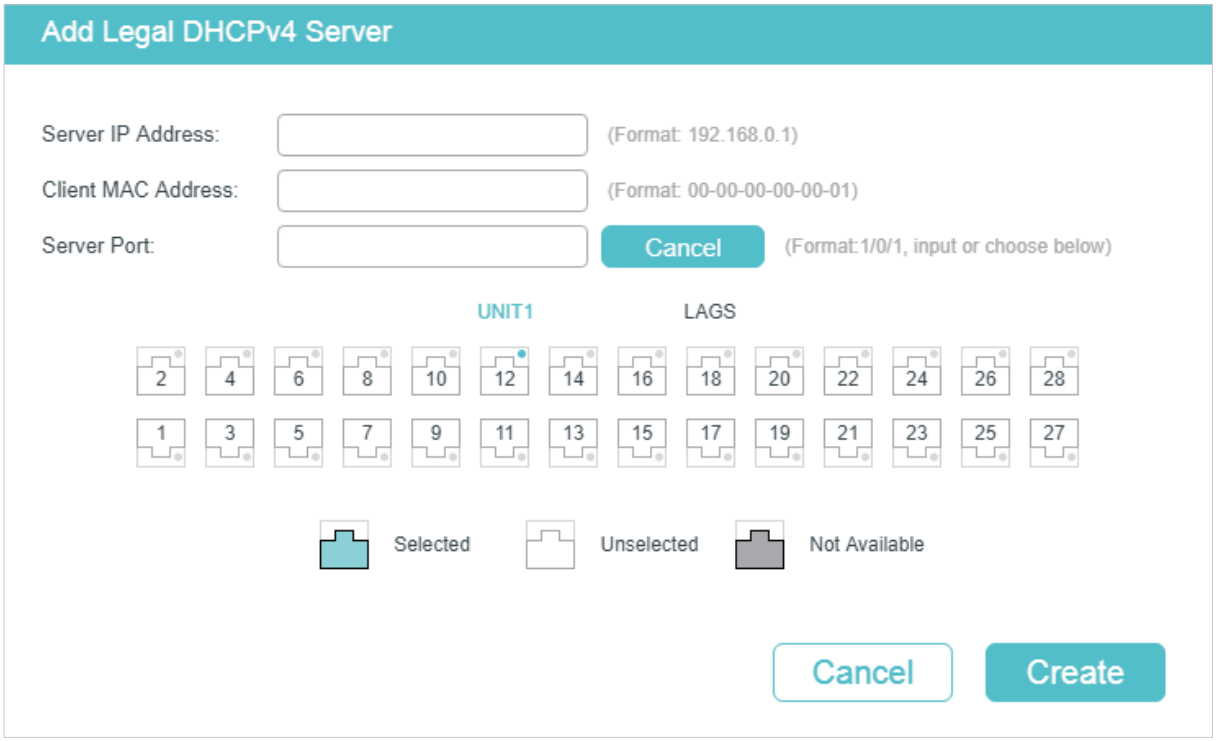

Follow these steps to add a legal DHCPv4 server:

1) Configure the following parameters:

Server IP Address	Specify the IP address of the legal DHCPv4 server.
Client MAC Address	(Optional) Specify the MAC address of the DHCP Client. You can also keep this field empty, which represents for all DHCP clients.
Server Port	Select the port that the legal DHCPv4 server is connected.

2) Click **Create**.

2.2 Using the CLI

2.2.1 Configuring the Basic DHCPv4 Filter Parameters

Follow these steps to complete the basic settings of DHCPv4 Filter:

Step 1	**configure** Enter global configuration mode.

Step 2	**ip dhcp filter** Enable DHCPv4 Filter globally.
Step 3	**interface { fastEthernet** *port* **| range fastEthernet** *port-list* **| gigabitEthernet** *port* **| range gigabitEthernet** *port-list* **| ten-gigabitEthernet** *port* **| range ten-gigabitEthernet** *port-list* **| interface port-channel** *port-channel-id* **| interface range port-channel** *port-channel-id-list* **}** Enter interface configuration mode.
Step 4	**ip dhcp filter** Enable DHCPv4 Filter on the port.
Step 5	**ip dhcp filter mac-verify** Enable the MAC Verify feature. There are two fields in the DHCP packet that contain the MAC address of the host. The MAC Verify feature compares the two fields of a DHCP packet and discards the packet if the two fields are different. This prevents the IP address resource on the DHCP server from being exhausted by forged MAC addresses.
Step 6	**ip dhcp filter limit rate** *value* Enable the limit rate feature and specify the maximum number of DHCP messages that can be forwarded on the port per second. The excessive DHCP packets will be discarded. *value:* Specify the limit rate value. The following options are provided: 0, 5,10,15,20,25 and 30 (packets/second). The default value is 0, which indicates disabling limit rate.
Step 7	**ip dhcp filter decline rate** *value* Enable the decline protect feature and specify the maximum number of Decline packets can be forwarded per second on the port. The excessive Decline packets will be discarded. *value:* Specify the limit rate value of Decline packets. The following options are provided: 0, 5,10,15,20,25 and 30 (packets/second). The default value is 0, which indicates disabling this feature.
Step 8	**show ip dhcp filter** Verify the global DHCPv4 Filter configuration.
Step 9	**show ip dhcp filter interface [fastEthernet** *port* **| gigabitEthernet** *port* **| ten-gigabitEthernet** *port* **| port-channel** *port-channel-id* **]** Verify the DHCPv4 Filter configuration of the port.
Step 10	**end** Return to privileged EXEC mode.
Step 11	**copy running-config startup-config** Save the settings in the configuration file.

Note:

The member port of an LAG (Link Aggregation Group) follows the configuration of the LAG and not its own. The configurations of the port can take effect only after it leaves the LAG.

The following example shows how to enable DHCPv4 Filter globally and how to enable DHCPv4 Filter, enable the MAC verify feature, set the limit rate as 10 pps and set the decline rate as 20 pps on port 1/0/1:

Switch#configure

Switch(config)#ip dhcp filter

Switch(config)#interface gigabitEthernet 1/0/1

Switch(config-if)#ip dhcp filter

Switch(config-if)#ip dhcp filter mac-verify

Switch(config-if)#ip dhcp filter limit rate 10

Switch(config-if)#ip dhcp filter decline rate 20

Switch(config-if)##show ip dhcp filter

Global Status: Enable

Switch(config-if)#show ip dhcp filter interface gigabitEthernet 1/0/1

Interface	state	MAC-Verify	Limit-Rate	Dec-rate	LAG
---	---	---	---	---	---
Gi1/0/1	Enable	Enable	10	20	N/A

Switch(config-if)#end

Switch#copy running-config startup-config

2.2.2 Configuring Legal DHCPv4 Servers

Follow these steps configure legal DHCPv4 servers:

Step 1	**configure** Enter global configuration mode.
Step 2	**ip dhcp filter server permit-entry server-ip** *ipAddr* **client-mac** macAddr **interface { fastEthernet** *port-list* **| gigabitEthernet** *port-list* **| ten-gigabitEthernet** *port-list* **| port-channel** *port-channel-id* **}** Create an entry for the legal DHCPv4 server. *ipAddr*: Specify the IP address of the legal DHCPv4 server. macAddr : Specify the MAC address of the DHCP Client. The value “all” means all client mac addresses. *port-list* | *port-channel-id*: Specify the port that the legal DHCPv4 server is connected to.
Step 3	**show ip dhcp filter server permit-entry** Verify configured legal DHCPv4 server information.

Step 4	**end** Return to privileged EXEC mode.
Step 5	**copy running-config startup-config** Save the settings in the configuration file.

The following example shows how to create an entry for the legal DHCPv4 server whose IP address is 192.168.0.100 and connected port number is 1/0/1 without client MAC address restricted:

Switch#configure

Switch(config)#ip dhcp filter server permit-entry server-ip 192.168.0.100 **client-mac** all **interface gigabitEthernet** 1/0/1

Switch(config)#show ip dhcp filter server permit-entry

Server IP	Client MAC	Interface
192.168.0.100	all	Gi1/0/1

Switch(config)#end

Switch#copy running-config startup-config

3 DHCPv6 Filter Configuration

To complete DHCPv6 Filter configuration, follow these steps:


1) Configure the basic DHCPv6 Filter parameters.
2) Configure legal DHCPv6 servers.

3.1 Using the GUI

3.1.1 Configuring the Basic DHCPv6 Filter Parameters

Choose the menu **SECURITY > DHCP Filter > DHCPv6 Filter > Basic Config** to load the following page.

Figure 3-1 DHCPv6 Filter Basic Config

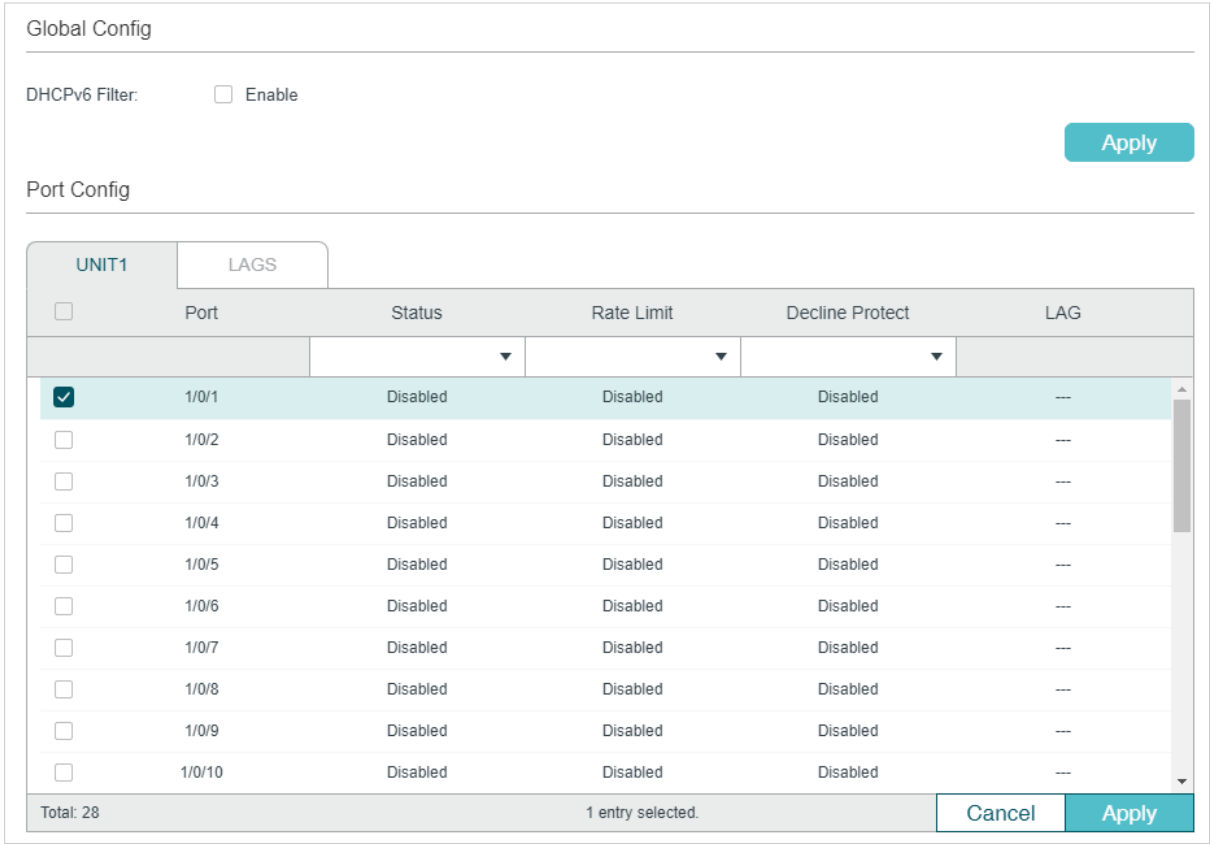

Follow these steps to complete the basic settings of DHCPv6 Filter:

1) In the **Global Config** section, enable DHCPv6 globally.
2) In the **Port Config** section, select one or more ports and configure the related parameters.

Port	Displays the port number.

Status	Enable or disable DHCPv6 Filter feature on the port.
Rate Limit	Select to enable the rate limit feature and specify the maximum number of DHCPv6 packets that can be forwarded on the port per second. The excessive DHCPv6 packets will be discarded.
Decline Protect	Select to enable the decline protect feature and specify the maximum number of DHCPv6 Decline packets that can be forwarded on the port per second. The excessive DHCPv6 Decline packets will be discarded.
LAG	Displays the LAG that the port is in.

3) Click **Apply**.


Note:

The member port of an LAG (Link Aggregation Group) follows the configuration of the LAG and not its own. The configurations of the port can take effect only after it leaves the LAG.

3.1.2 Configuring Legal DHCPv6 Servers

Choose the menu **SECURITY > DHCP Filter > DHCPv6 Filter > Legal DHCPv6 Servers** and click Add to load the following page.

Figure 3-2 Adding Legal DHCPv6 Server

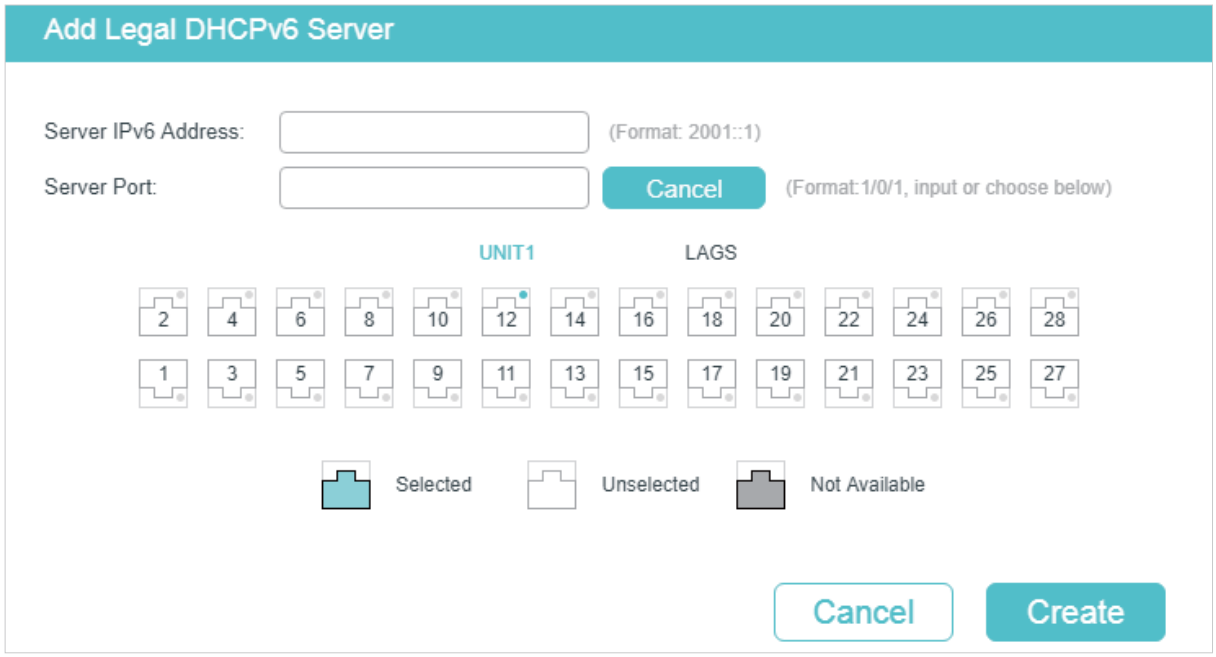

Follow these steps to add a legal DHCPv6 server:

1) Configure the following parameters:

Server IPv6 Address	Specify the IP address of the legal DHCPv6 server.
Server Port	Select the port that the legal DHCPv6 server is connected.

2) Click **Create**.

3.2 Using the CLI

3.2.1 Configuring the Basic DHCPv6 Filter Parameters

Follow these steps to complete the basic settings of DHCPv6 Filter:

Step 1	**configure** Enter global configuration mode.
Step 2	**ipv6 dhcp filter** Enable DHCPv6 Filter globally.
Step 3	**interface { fastEthernet** *port* **| range fastEthernet** *port-list* **| gigabitEthernet** *port* **| range gigabitEthernet** *port-list* **| ten-gigabitEthernet** *port* **| range ten-gigabitEthernet** *port-list* **| interface port-channel** *port-channel-id* **| interface range port-channel** *port-channel-id-list* **}** Enter interface configuration mode.
Step 4	**ipv6 dhcp filter** Enable DHCPv6 Filter on the port.
Step 5	**ipv6 dhcp filter limit rate** *value* Enable the limit rate feature and specify the maximum number of DHCP messages that can be forwarded on the port per second. The excessive DHCP packets will be discarded. *value:* Specify the limit rate value. The following options are provided: 0, 5,10,15,20,25 and 30 (packets/second). The default value is 0, which indicates disabling limit rate.
Step 6	**ipv6 dhcp filter decline rate** *value* Enable the decline protect feature and specify the maximum number of Decline packets can be forwarded per second on the port. The excessive Decline packets will be discarded. *value:* Specify the limit rate value of Decline packets. The following options are provided: 0, 5,10,15,20,25 and 30 (packets/second). The default value is 0, which indicates disabling this feature.
Step 7	**show ipv6 dhcp filter** Verify the global DHCPv6 Filter configuration.
Step 8	**show ipv6 dhcp filter interface [fastEthernet** *port* **| gigabitEthernet** *port* **| ten-gigabitEthernet** *port* **| port-channel** *port-channel-id* **]** Verify the DHCPv6 Filter configuration of the port.
Step 9	**end** Return to privileged EXEC mode.
Step 10	**copy running-config startup-config** Save the settings in the configuration file.

Note:

The member port of an LAG (Link Aggregation Group) follows the configuration of the LAG and not its own. The configurations of the port can take effect only after it leaves the LAG.

The following example shows how to enable DHCPv6 Filter globally and how to enable DHCPv6 Filter, set the limit rate as 10 pps and set the decline rate as 20 pps on port 1/0/1:

Switch#configure

Switch(config)#ipv6 dhcp filter

Switch(config)#interface gigabitEthernet 1/0/1

Switch(config-if)#ipv6 dhcp filter

Switch(config-if)#ipv6 dhcp filter limit rate 10

Switch(config-if)#ipv6 dhcp filter decline rate 20

Switch(config-if)##show ipv6 dhcp filter

Global Status: Enable

Switch(config-if)#show ip dhcp filter interface gigabitEthernet 1/0/1

Interface	state	Limit-Rate	Dec-rate	LAG
---	---	---	---	---
Gi1/0/1	Enable	10	20	N/A

Switch(config-if)#end

Switch#copy running-config startup-config

3.2.2 Configuring Legal DHCPv6 Servers

Follow these steps configure legal DHCPv6 servers:

Step 1	**configure** Enter global configuration mode.
Step 2	**ipv6 dhcp filter server permit-entry server-ip** *ipAddr* **interface { fastEthernet** *port-list* **| gigabitEthernet** *port-list* **| ten-gigabitEthernet** *port-list* **| port-channel** *port-channel-id* **}** Create an entry for the legal DHCPv6 server. *ipAddr*: Specify the IPv6 address of the legal DHCPv6 server. *port-list* | *port-channel-id*: Specify the port that the legal DHCPv6 server is connected to.
Step 3	**show ip dhcp filter server permit-entry** Verify configured legal DHCPv6 server information.

Step 4	**end** Return to privileged EXEC mode.
Step 5	**copy running-config startup-config** Save the settings in the configuration file.

The following example shows how to create an entry for the legal DHCPv6 server whose IPv6 address is 2001::54 and connected port number is 1/0/1:

Switch#configure

Switch(config)#ipv6 dhcp filter server permit-entry server-ip 2001::54 **interface gigabitEthernet** 1/0/1

Switch(config)#show ipv6 dhcp filter server permit-entry

Server IP Interface

---------- ---------

2001::54 Gi1/0/1

Switch(config)#end

Switch#copy running-config startup-config


4 Configuration Examples

4.1 Example for DHCPv4 Filter

4.1.1 Network Requirements

As shown below, all the DHCPv4 clients get IP addresses from the legal DHCPv4 server, and any other DHCPv4 server in the LAN is regarded as illegal. Now it is required that only the legal DHCPv4 server is allowed to assign IP addresses to the clients.

Figure 4-1 Network Topology

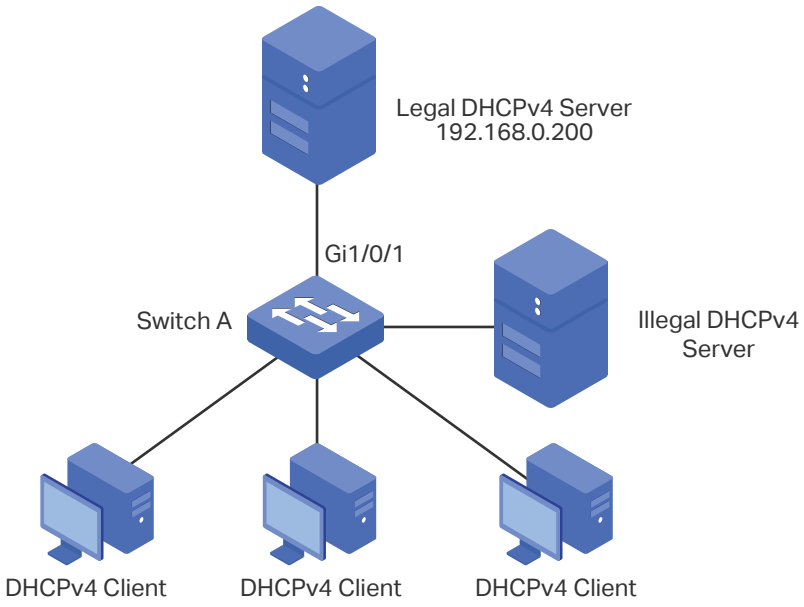

4.1.2 Configuration Scheme

To meet the requirements, you can configure DHCPv4 Filter to filter the DHCPv4 packets from the illegal DHCPv4 server.

The overview of configuration is as follows:


1) Enable DHCPv4 Filter globally and on all ports.
2) Create an entry for the legal DHCPv4 server.

Demonstrated with T2600G-28TS, the following sections provide configuration procedure in two ways: using the GUI and using the CLI.

4.1.3 Using the GUI


1) Choose the menu **SECURITY > DHCP Filter > DHCPv4 Filter > Basic Config** to load the following page. Enable DHCPv4 Filter globally and click **Apply**. Select all ports, change Status as Enable, and click **Apply**.

Figure 4-2 Basic Config

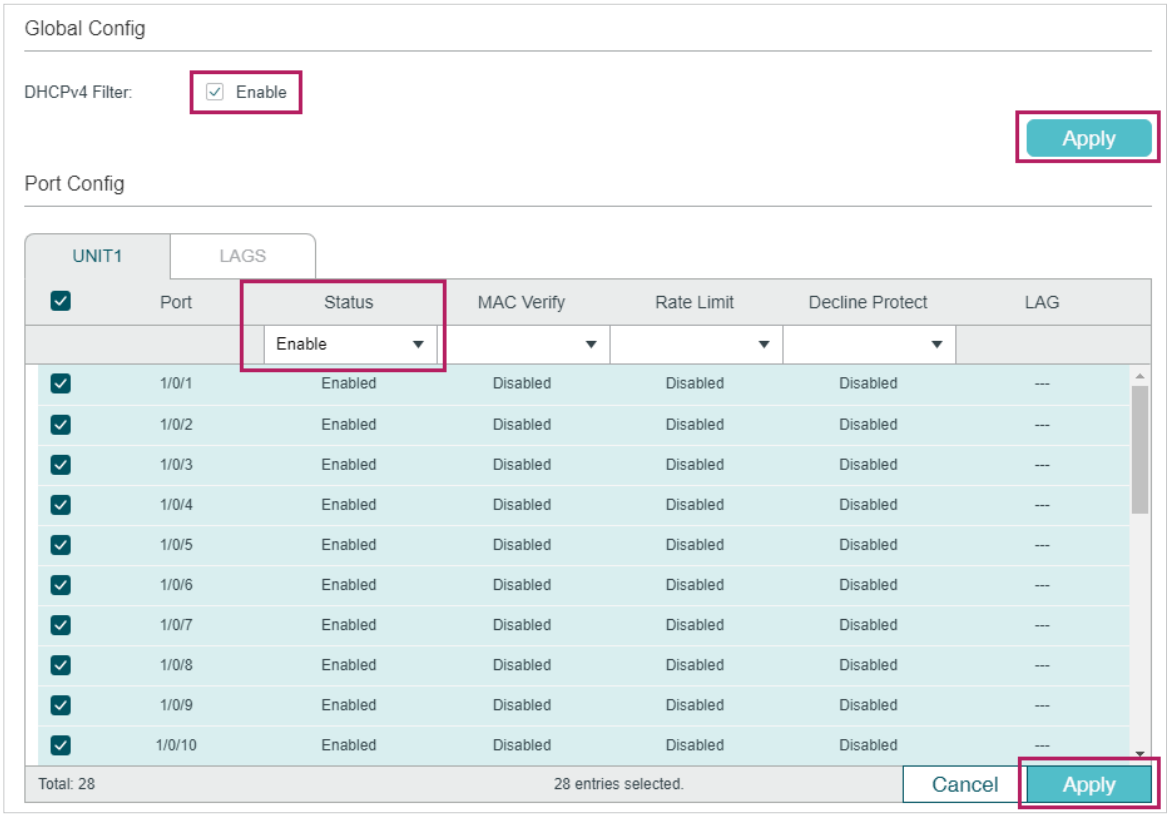

2) Choose the menu **SECURITY > DHCP Filter > DHCPv4 Filter > Legal DHCPv4 Servers** and click Add to load the following page. Specify the IP address and connected port number of the legal DHCPv4 server. Click **Create**.

Figure 4-3 Create Entry for Legal DHCPv4 Server

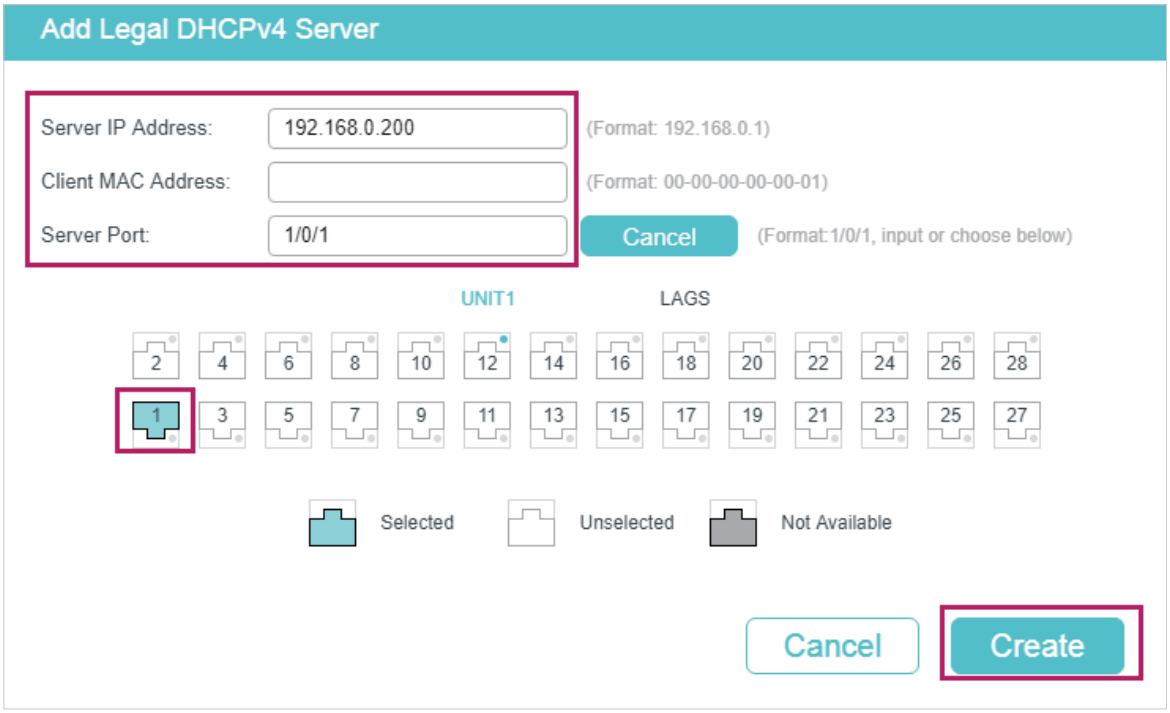

3) Click Save to save the settings.

4.1.4 Using the CLI

1) Enable DHCPv4 Filter globally and on all pots:

Switch_A#configure

Switch_A(config)#ip dhcp filter

Switch_A(config)#interface range gigabitEthernet 1/0/1-28

Switch_A(config-if-range)#ip dhcp filter

Switch_A(config-if-range)#exit

2) Create an entry for the legal DHCPv4 server:

Switch_A(config)#ip dhcp filter server permit-entry server-ip 192.168.0.200 client-mac all interface gigabitEthernet 1/0/1

Switch_A(config)#end

Switch_A#copy running-config startup-config

Verify the Configuration

Verify the global DHCPv4 Filter configuration:

Switch_A#show ip dhcp filter

Global Status: Enable

Verify the DHCPv4 Filter configuration on ports:

```
Switch_A#show ip dhcp filter interface
Interface   state     MAC-Verify  Limit-Rate      Dec-rate     LAG
---------   -------   ----------  ----------      --------     ---
Gi1/0/1     Enable    Disable     Disable         Disable      N/A
Gi1/0/2     Enable    Disable     Disable         Disable      N/A
Gi1/0/3     Enable    Disable     Disable         Disable      N/A
Gi1/0/4     Enable    Disable     Disable         Disable      N/A
...
```

Verify the legal DHCPv4 server configuration:


```
Switch_A#show ip dhcp filter server permit-entry
Server IP         Client MAC        Interface
---------------   ----------------  ---------
192.168.0.200     all               Gi1/0/1
```

4.2 Example for DHCPv6 Filter

4.2.1 Network Requirements

As shown below, all the DHCPv6 clients get IP addresses from the legal DHCPv6 server, and any other DHCPv6 server in the LAN is regarded as illegal. Now it is required that only the legal DHCPv6 server is allowed to assign IP addresses to the clients.

Figure 4-1 Network Topology

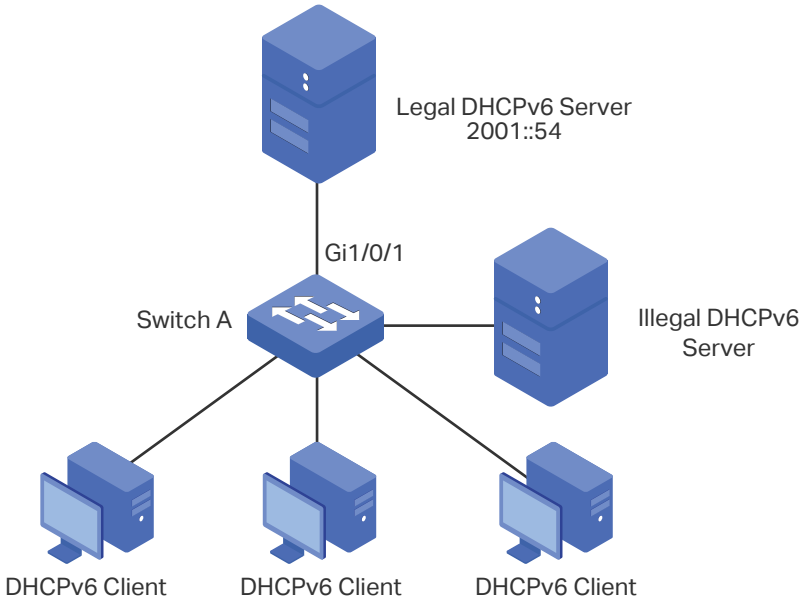

4.2.2 Configuration Scheme

To meet the requirements, you can configure DHCPv6 Filter to filter the DHCPv6 packets from the illegal DHCPv6 server.

The overview of configuration is as follows:


1) Enable DHCPv6 Filter globally and on all ports.
2) Create an entry for the legal DHCPv6 server.

Demonstrated with T2600G-28TS, the following sections provide configuration procedure in two ways: using the GUI and using the CLI.

4.2.3 Using the GUI


1) Choose the menu **SECURITY > DHCP Filter > DHCPv6 Filter > Basic Config** to load the following page. Enable DHCPv6 Filter globally and click **Apply**. Select all ports, change Status as Enable, and click **Apply**.

Figure 4-2 Basic Config

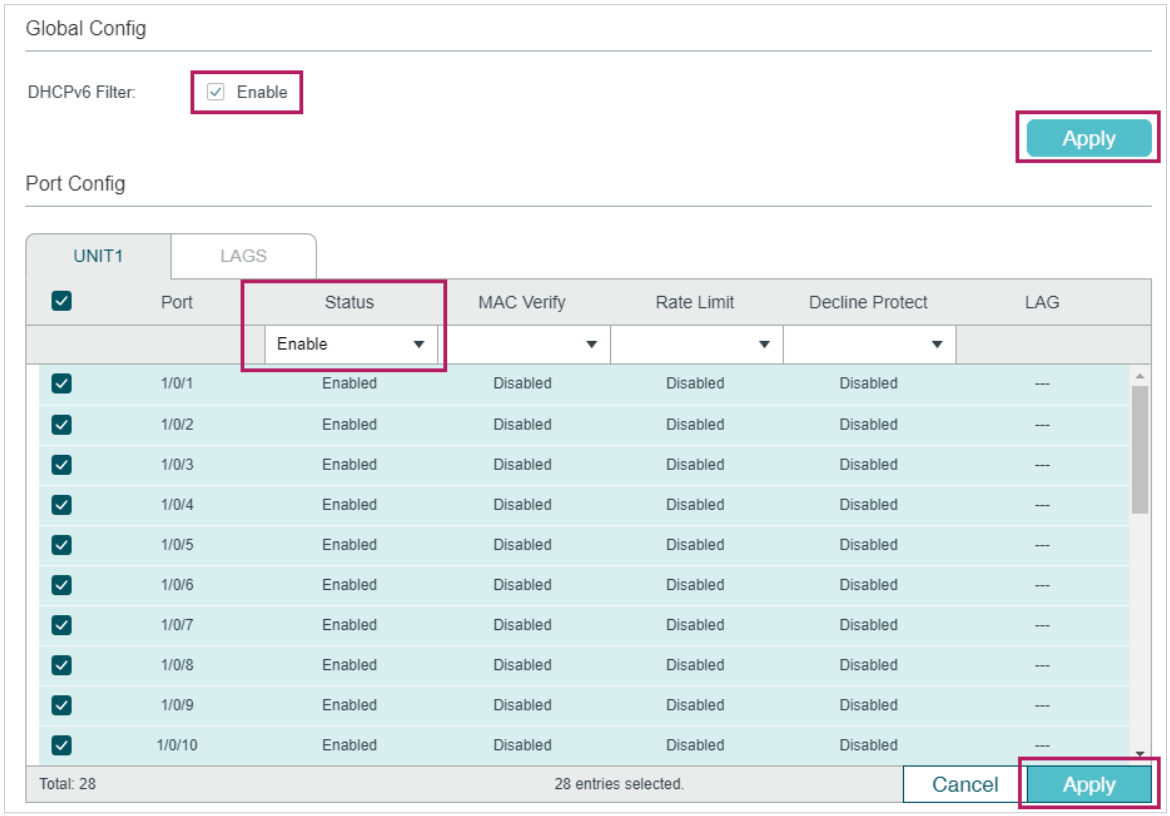

2) Choose the menu **SECURITY > DHCP Filter > DHCPv6 Filter > Legal DHCPv6 Servers** and click Add to load the following page. Specify the IP address and connected port number of the legal DHCPv6 server. Click **Create**.

Figure 4-3 Create Entry for Legal DHCPv6 Server

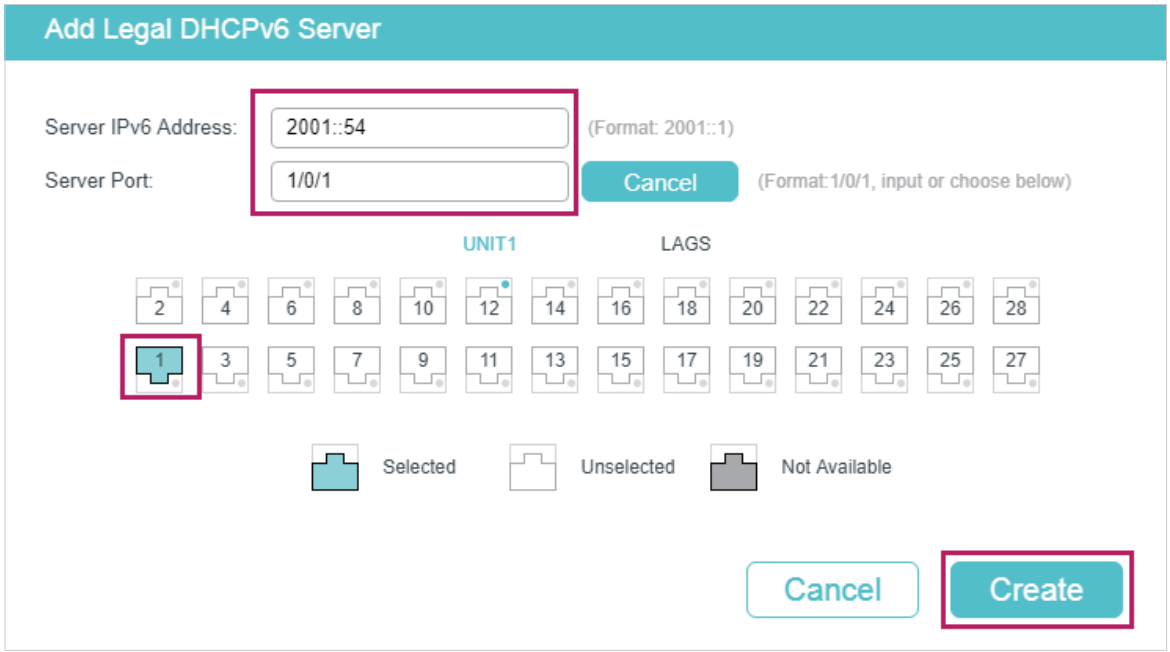

3) Click Save to save the settings.

4.2.4 Using the CLI

1) Enable DHCPv6 Filter globally and on all pots:

   Switch_A#configure

   Switch_A(config)#ipv6 dhcp filter

   Switch_A(config)#interface range gigabitEthernet 1/0/1-28

   Switch_A(config-if-range)#ipv6 dhcp filter

   Switch_A(config-if-range)#exit

2) Create an entry for the legal DHCPv6 server:

   Switch_A(config)#ipv6 dhcp filter server permit-entry server-ip 2001::54 interface gigabitEthernet 1/0/1

   Switch_A(config)#end

   Switch_A#copy running-config startup-config

Verify the Configuration

Verify the global DHCPv6 Filter configuration:

Switch_A#show ipv6 dhcp filter

Global Status: Enable

Verify the DHCPv6 Filter configuration on ports:

Switch_A#show ipv6 dhcp filter interface

Interface	state	Limit-Rate	Dec-rate	LAG
---	---	---	---	---
Gi1/0/1	Enable	Disable	Disable	N/A
Gi1/0/2	Enable	Disable	Disable	N/A
Gi1/0/3	Enable	Disable	Disable	N/A
Gi1/0/4	Enable	Disable	Disable	N/A

...

Verify the legal DHCPv6 server configuration:

Switch_A#show ipv6 dhcp filter server permit-entry

Server IP	Interface
---	---
2001::54	Gi1/0/1

5 Appendix: Default Parameters

Default settings of DHCPv4 Filter are listed in the following table:

Table 5-1 DHCPv4 Filter

Parameter	Default Setting
Global Config	
DHCPv4 Filter	Disable
Port Config	
Status	Disable
MAC Verify	Disable
Rate Limit	Disable
Decline Protect	Disable

Table 5-2 DHCPv6 Filter

Parameter	Default Setting
Global Config	
DHCPv6 Filter	Disable
Port Config	
Status	Disable
Rate Limit	Disable
Decline Protect	Disable

Part 31

Configuring DoS Defend

CHAPTERS

1. Overview
2. DoS Defend Configuration
3. Appendix: Default Parameters

1 Overview

The DoS (Denial of Service) defend feature provides protection against DoS attacks. DoS attacks occupy the network bandwidth maliciously by sending numerous service requests to the hosts. It results in an abnormal service or breakdown of the network.


With DoS Defend feature, the switch can analyze the specific fields of the IP packets, distinguish the malicious DoS attack packets and discard them directly. Also, DoS Defend feature can limit the transmission rate of legal packets. When the number of legal packets exceeds the threshold value and may incur a breakdown of the network, the switch will discard the packets.

2 DoS Defend Configuration

2.1 Using the GUI

Choose the menu **SECURITY > DoS Defend** to load the following page.

Figure 2-1 DoS Defend

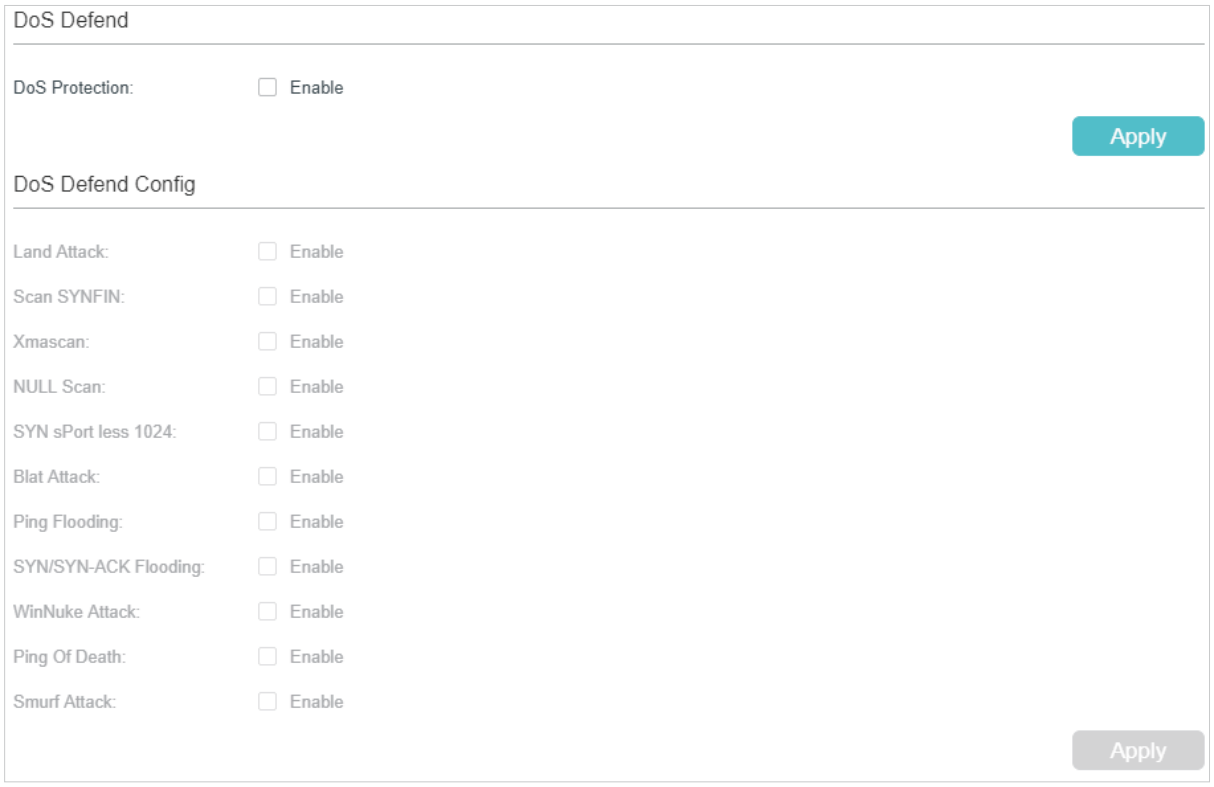

Follow these steps to configure DoS Defend:

1) In the **DoS Defend** section, enable DoS Protection and click **Apply**.
2) In the **DoS Defend Config** section, select one or more defend types according to your needs and click **Apply**. The following table introduces each type of DoS attack.

Land Attack	The attacker sends a specific fake SYN (synchronous) packet to the destination host. Because both of the source IP address and the destination IP address of the SYN packet are set to be the IP address of the host, the host will be trapped in an endless circle of building the initial connection.
Scan SYNFIN	The attacker sends the packet with its SYN field and the FIN field set to 1. The SYN field is used to request initial connection whereas the FIN field is used to request disconnection. Therefore, the packet of this type is illegal.
Xmascan	The attacker sends the illegal packet with its TCP index, FIN, URG and PSH field set to 1.

NULL Scan	The attacker sends the illegal packet with its TCP index and all the control fields set to 0. During the TCP connection and data transmission, the packets with all control fields set to 0 are considered illegal.
SYN sPort less 1024	The attacker sends the illegal packet with its TCP SYN field set to 1 and source port smaller than 1024.
Blat Attack	The attacker sends the illegal packet with the same source port and destination port on Layer 4 and with its URG field set to 1. Similar to the Land Attack, the system performance of the attacked host is reduced because the Host circularly attempts to build a connection with the attacker.
Ping Flooding	The attacker floods the destination system with Ping packets, creating a broadcast storm that makes it impossible for the system to respond to legal communication.
SYN/SYN-ACK Flooding	The attacker uses a fake IP address to send TCP request packets to the server. Upon receiving the request packets, the server responds with SYN-ACK packets. Since the IP address is fake, no response will be returned. The server will keep on sending SYN-ACK packets. If the attacker sends overflowing fake request packets, the network resource will be occupied maliciously and the requests of the legal clients will be denied.
WinNuke Attack	Because the Operation System with bugs cannot correctly process the URG (Urgent Pointer) of TCP packets, the attacker sends this type of packets to the TCP port139 (NetBIOS) of the host with the Operation System bugs, which will cause the host with a blue screen.
Ping of Death	Ping of Death attack means that the attacker sends abnormal ping packets larger than 65535 bytes to cause system crash on the target computer. Note: Only T2600G-18TS supports Ping of Death.
Smurf Attack	Smurf attack is a distributed denial-of-service attack in which large numbers of Internet Control Message Protocol (ICMP) packets with the intended victim's spoofed source IP are broadcast to a computer network using an IP broadcast address. Most devices on a network will, by default, respond to this by sending a reply to the source IP address. If the number of machines on the network that receive and respond to these packets is very large, the victim's computer will be flooded with traffic. Note: Only T2600G-18TS supports Smurf Attack.

3) Click **Apply**.

2.2 Using the CLI

Follow these steps to configure DoS Defend:

Step 1	**configure** Enter global configuration mode.

Step 2 **ip dos-prevent**

Globally enable the DoS defend feature.

Step 3 **ip dos-prevent type {** land | scan-synfin | xma-scan | null-scan | port-less-1024 | blat | ping-flood | syn-flood | win-nuke | ping-of-death | smurf**}**

Configure one or more defend types according to your needs. The types of DoS attack are introduced as follows.

land: The attacker sends a specific fake SYN (synchronous) packet to the destination host. Because both the source IP address and the destination IP address of the SYN packet are set to be the IP address of the host, the host will be trapped in an endless circle of building the initial connection.

scan-synfin: The attacker sends the packet with its SYN field and the FIN field set to 1. The SYN field is used to request initial connection whereas the FIN field is used to request disconnection. Therefore, a packet of this type is illegal.

xma-scan: The attacker sends the illegal packet with its TCP index, FIN, URG and PSH field set to 1.

null-scan: The attacker sends the illegal packet with its TCP index and all the control fields set to 0. During the TCP connection and data transmission, the packets with all the control fields set to 0 are considered as the illegal packets.

port-less-1024: The attacker sends the illegal packet with its TCP SYN field set to 1 and source port smaller than 1024.

blat: The attacker sends the illegal packet with the same source port and destination port on Layer 4 and with its URG field set to 1. Similar to the Land Attack, the system performance of the attacked host is reduced because the Host circularly attempts to build a connection with the attacker.

ping-flood: The attacker floods the destination system with Ping packets, creating a broadcast storm that makes it impossible for system to respond to legal communication.

syn-flood: The attacker uses a fake IP address to send TCP request packets to the server. Upon receiving the request packets, the server responds with SYN-ACK packets. Since the IP address is fake, no response will be returned. The server will keep on sending SYN-ACK packets. If the attacker sends overflowing fake request packets, the network resource will be occupied maliciously and the requests of the legal clients will be denied.

win-nuke: An Operation System with bugs cannot process the URG (Urgent Pointer) of TCP packets. If the attacker sends TCP packets to port139 (NetBIOS) of the host with Operation System bugs, it will cause blue screen.

ping-of-death: Ping of Death attack means that the attacker sends abnormal ping packets larger than 65535 bytes to cause system crash on the target computer.

Note: Only T2600G-18TS supports Ping of Death.

smurf: Smurf attack is a distributed denial-of-service attack in which large numbers of Internet Control Message Protocol (ICMP) packets with the intended victim's spoofed source IP are broadcast to a computer network using an IP broadcast address. Most devices on a network will, by default, respond to this by sending a reply to the source IP address. If the number of machines on the network that receive and respond to these packets is very large, the victim's computer will be flooded with traffic.

Note: Only T2600G-18TS supports Smurf Attack.

Step 4 **show ip dos-prevent**

Verify the DoS Defend configuration.

Step 5 **end**

Return to privileged EXEC mode.

Step 6	**copy running-config startup-config** Save the settings in the configuration file.

The following example shows how to enable the DoS Defend type named land:

Switch#configure

Switch(config)#ip dos-prevent

Switch(config)#ip dos-prevent type land

Switch(config)#show ip dos-prevent

DoS Prevention State: Enabled

Type	Status
----	------
Land Attack	Enabled
Scan SYNFIN	Disabled
Xmascan	Disabled
NULL Scan	Disabled
SYN sPort less 1024	Disabled
Blat Attack	Disabled
Ping Flooding	Disabled
SYN/SYN-ACK Flooding	Disabled
WinNuke Attack	Disabled

Switch(config)#end

Switch#copy running-config startup-config

3 Appendix: Default Parameters

Default settings of Network Security are listed in the following tables.

Table 3-1 DoS Defend

Parameter	Default Setting
DoS Defend	Disabled

Part 32

Monitoring the System

CHAPTERS

1. Overview
2. Monitoring the CPU
3. Monitoring the Memory

1 Overview

With System Monitor function, you can:

- Monitor the CPU utilization of the switch.
- Monitor the memory utilization of the switch.


The CPU utilization should be always under 80%, and excessive use may result in switch malfunctions. For example, the switch fails to respond to management requests (ICMP ping, SNMP timeouts, slow Telnet or SSH sessions). You can monitor the system to verify a CPU utilization problem.

2 Monitoring the CPU

2.1 Using the GUI

Choose the menu **MAINTENANCE > System Monitor > CPU Monitor** to load the following page.

Figure 2-1 Monitoring the CPU

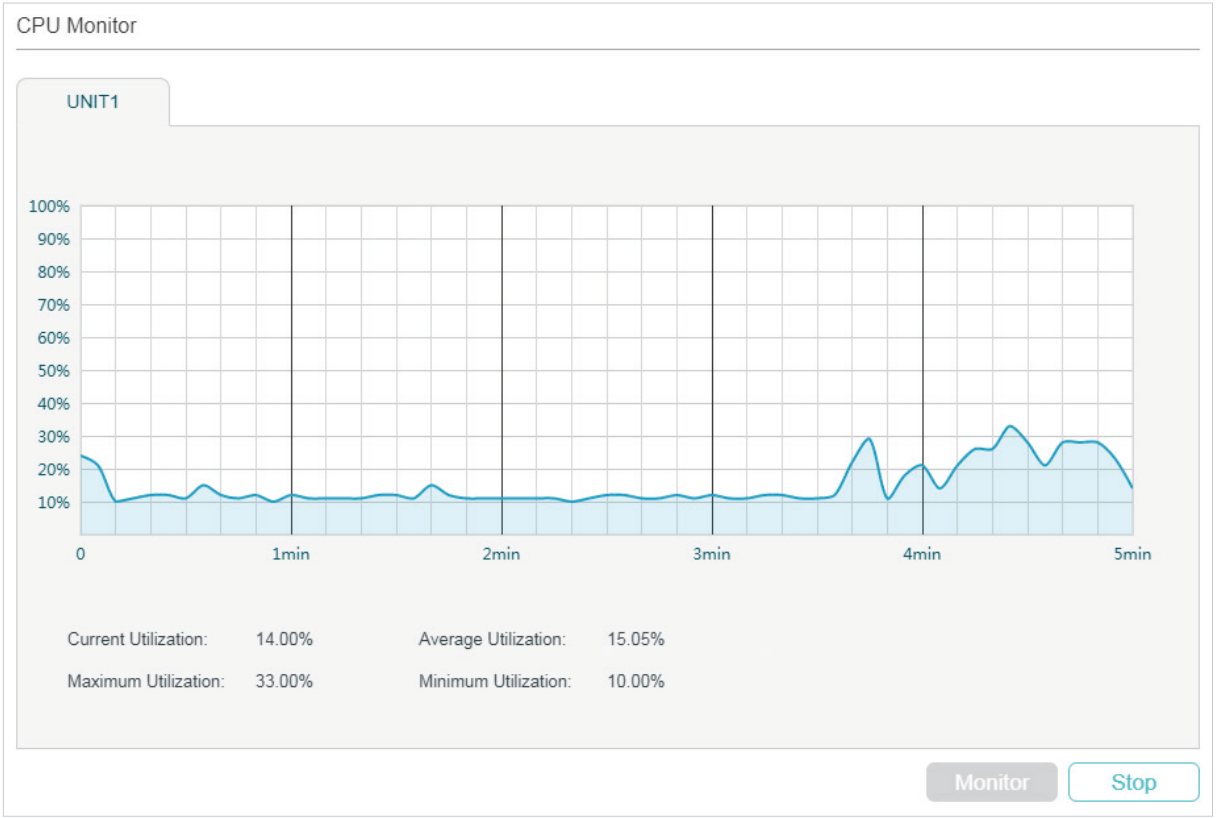

Click **Monitor** to enable the switch to monitor and display its CPU utilization rate every five seconds.

2.2 Using the CLI

On privileged EXEC mode or any other configuration mode, you can use the following command to view the CPU utilization:

show cpu-utilization

View the memory utilization of the switch in the last 5 seconds, 1minute and 5minutes.

The following example shows how to monitor the CPU:

Switch#show cpu-utilization


```
Unit   |                CPU Utilization
No.    |  Five-Seconds  One-Minute  Five-Minutes
------+-----------------------------------------------
1      |  13%           13%         13%
```

3 Monitoring the Memory

3.1 Using the GUI

Choose the menu **MAINTENANCE > System Monitor > Memory Monitor** to load the following page.

Figure 3-1 Monitoing the Memory

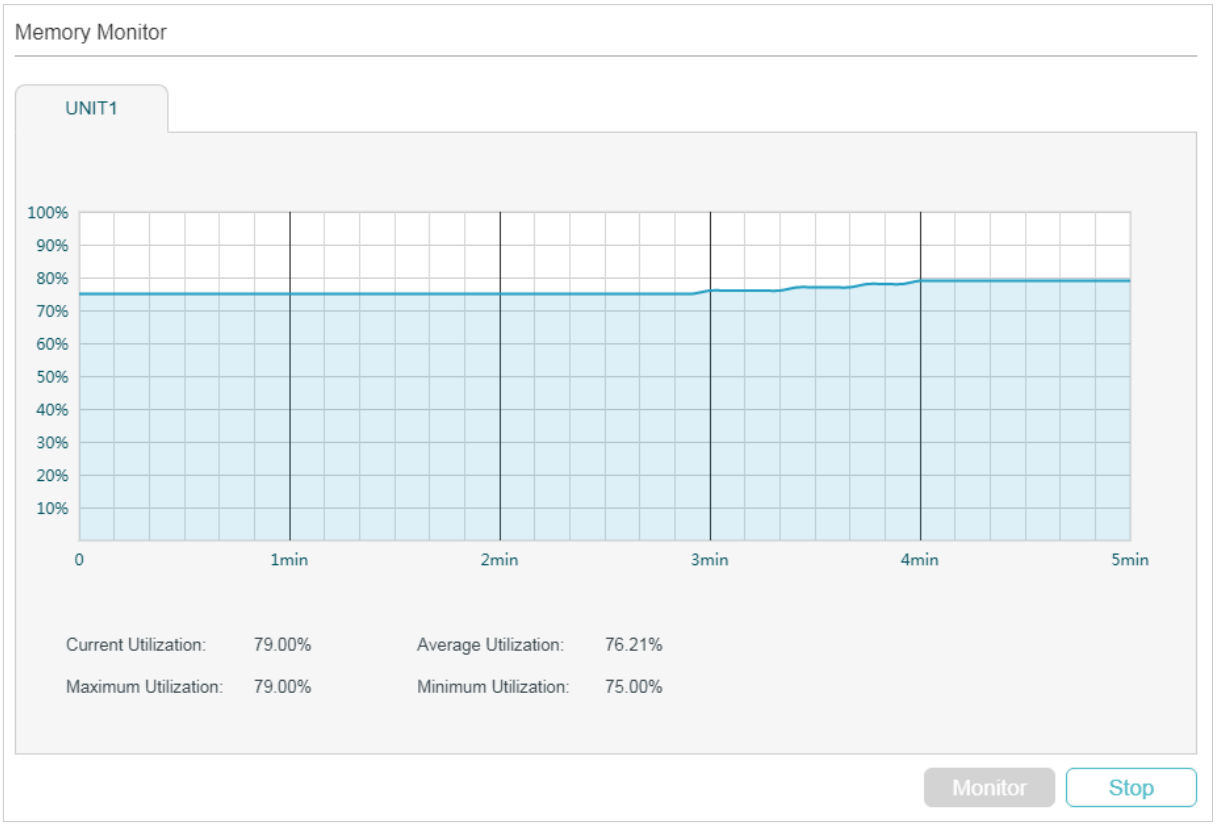

Click **Monitor** to enable the switch to monitor and display its memory utilization rate every five seconds.

3.2 Using the CLI

On privileged EXEC mode or any other configuration mode, you can use the following command to view the memory utilization:

show memory-utilization

View the current memory utilization of the switch.

The following example shows how to monitor the memory:

Switch#show memory-utilization

```
Unit   |   Current Memory Utilization
------+--------------------------
1      |   74%
```

Part 33

Monitoring Traffic

CHAPTERS

1. Traffic Monitor
2. Appendix: Default Parameters


1 Traffic Monitor

With Traffic Monitor function, you can monitor each port's traffic information, including the traffic summary and traffic statistics in detail.

1.1 Using the GUI

Choose the menu **MAINTENANCE > Traffic Monitor** to load the following page.

Figure 1-1 Traffic Summary

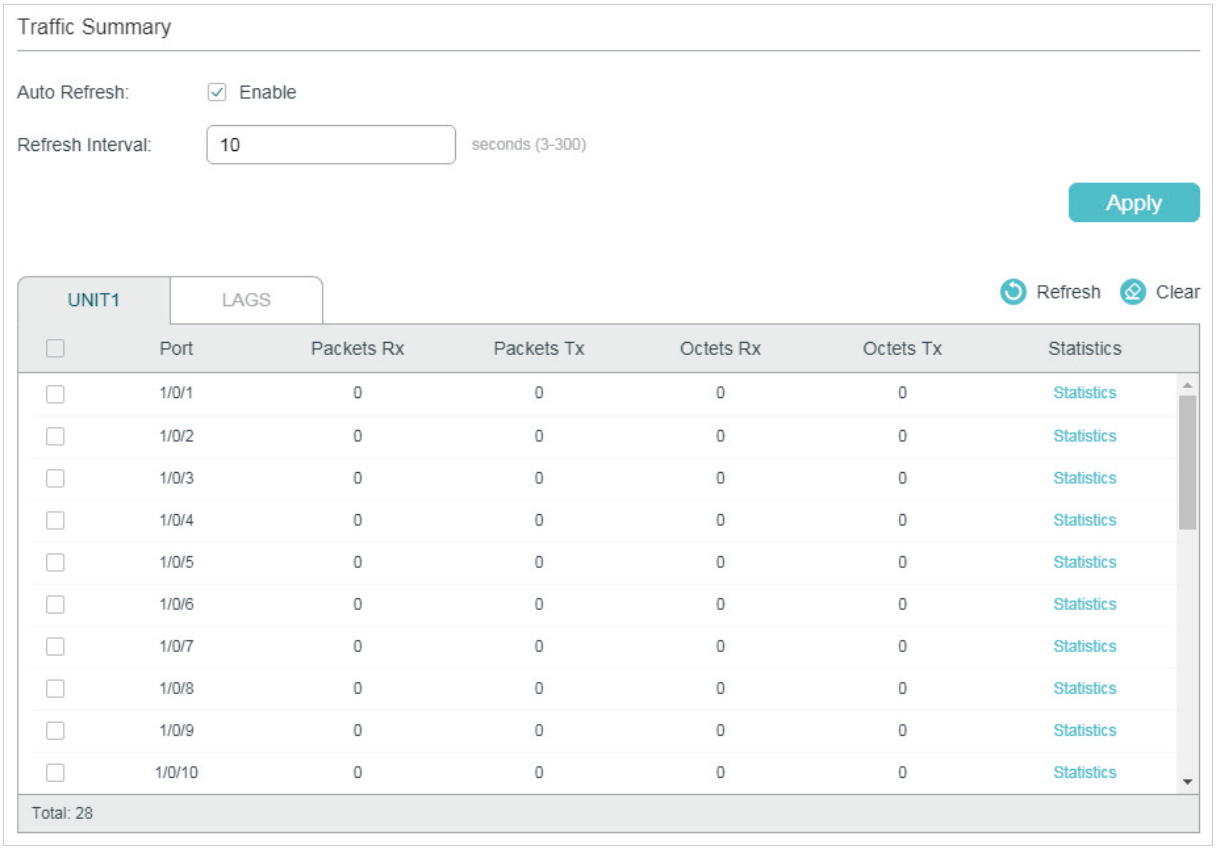

Follow these steps to view the traffic summary of each port:

1) To get the real-time traffic summary, enable **Auto Refresh**, or click **Refresh**.

Auto Refresh:	With this option enabled, the switch will automatically refresh the traffic summary.
Refresh Interval:	Specify the time interval for the switch to refresh the traffic summary.


2) In the **Traffic Summary** section, click **UNIT1** to show the information of the physical ports, and click **LAGS** to show the information of the LAGs.

Packets Rx:	Displays the number of packets received on the port. Error packets are not counted.

Packets Tx:	Displays the number of packets transmitted on the port. Error packets are not counted.
Octets Rx:	Displays the number of octets received on the port. Error octets are counted.
Octets Tx:	Displays the number of octets transmitted on the port. Error octets are counted .

To view a port's traffic statistics in detail, click **Statistics** on the right side of the entry.

Figure 1-2 Traffic Statistics

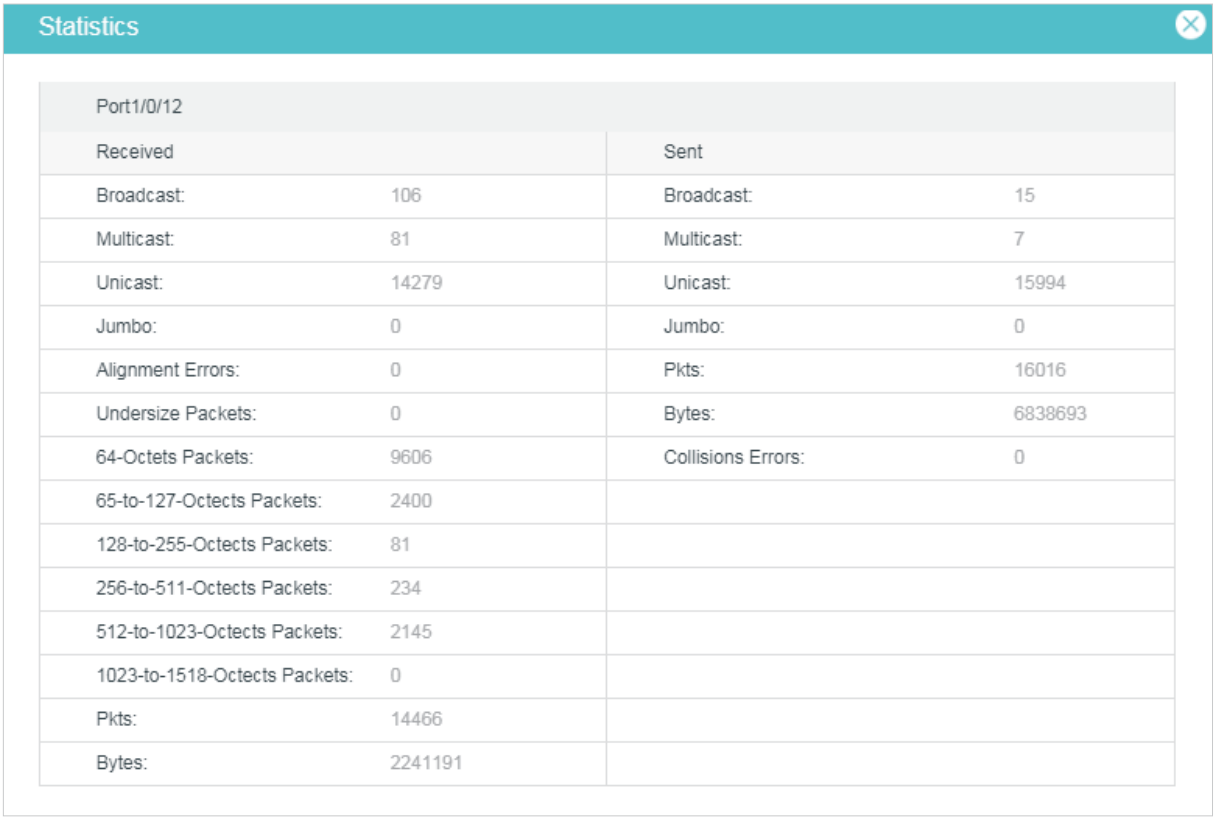

Received:	Displays the detailed information of received packets. Broadcast: Displays the number of valid broadcast packets received on the port. Error frames are not counted. Multicast: Displays the number of valid multicast packets received on the port. Error frames are not counted. Unicast: Displays the number of valid unicast packets received on the port. Error frames are not counted. Jumbo: Displays the number of valid jumbo packets received on the port. Error frames are not counted. Alignment Errors: Displays the number of the received packets that have a Frame Check Sequence (FCS) with a non-integral octet (Alignment Error). The size of the packet is between 64 bytes and 1518 bytes. Undersize Packets: Displays the number of the received packets (excluding error packets) that are less than 64 bytes long. 64-Octets Packets: Displays the number of the received packets (including error packets) that are 64 bytes long. 65-to-127-Octects Packets: Displays the number of the received packets (including error packets) that are between 65 and 127 bytes long. 128-to-255-Octects Packets: Displays the number of the received packets (including error packets) that are between 128 and 255 bytes long. 256-to-511-Octects Packets: Displays the number of the received packets (including error packets) that are between 256 and 511 bytes long. 512-to-1023-Octects Packets: Displays the number of the received packets (including error packets) that are between 512 and 1023 bytes long. 1023-to-1518-Octects Packets: Displays the number of the received packets (including error packets) that are between 512 and 1023 bytes long. Pkts: Displays the number of packets received on the port. Error packets are not counted. Bytes: Displays the number of bytes received on the port. Error packets are not counted.

Sent:	Displays the detailed information of sent packets. Broadcast: Displays the number of valid broadcast packets transmitted on the port. Error frames are not counted. Multicast: Displays the number of valid multicast packets transmitted on the port. Error frames are not counted. Unicast: Displays the number of valid unicast packets transmitted on the port. Error frames are not counted. Pkts: Displays the number of packets transmitted on the port. Error packets are not counted. Bytes: Displays the number of bytes transmitted on the port. Error packets are not counted. Collisions: Displays the number of collisions experienced by a half-duplex port during packet transmissions.

1.2 Using the CLI

On privileged EXEC mode or any other configuration mode, you can use the following command to view the traffic information of each port or LAG:

show interface counters [fastEthernet *port* **| gigabitEthernet** *port* **| ten-gigabitEthernet** *port* **| port-channel** *port-channel-id* **]**

port: The port number.

port-channel-id : The group number of the LAG.

If you enter no port number or group number, the information of all ports and LAGs will be displayed.

The displaying information includes:

Tx Collisions: Displays the number of collisions experienced by a port during packet transmissions.

Tx Ucast / Tx Mcast / Tx Bcast / Tx Jumbo: Displays the number of valid unicast / multicast / broadcast / jumbo packets transmitted on the port. Error frames are not counted.

Tx Pkts: Displays the number of packets transmitted on the port. Error packets are not counted.

Tx Bytes: Displays the number of bytes transmitted on the port. Error packets are not counted.

Rx Ucast / Rx Mcast / Rx Bcast / Rx Jumbo: Displays the number of valid unicast / multicast / broadcast / jumbo packets received on the port. Error frames are not counted.

Rx Alignment: Displays the number of the received packets that have a Frame Check Sequence (FCS) with a non-integral octet (Alignment Error). The size of the packet is between 64 bytes and 1518 bytes.

Rx UnderSize: Displays the number of the received packets (excluding error packets) that are less than 64 bytes long.

Rx 64Pkts: Displays the number of the received packets (including error packets) that are 64 bytes long.

Rx 65-127Pkts: Displays the number of the received packets (including error packets) that are between 65 and 127 bytes long.

Rx 128-255Pkts: Displays the number of the received packets (including error packets) that are between 128 and 255 bytes long.

Rx 256-511Pkts: Displays the number of the received packets (including error packets) that are between 256 and 511 bytes long.

Rx 512-1023Pkts: Displays the number of the received packets (including error packets) that are between 512 and 1023 bytes long.

Rx 1024-1518Pkts: Displays the number of the received packets (including error packets) that are between 1024 and 1518 bytes long.

Rx Pkts: Displays the number of packets received on the port. Error packets are not counted.

Rx Bytes: Displays the number of bytes received on the port. Error packets are not counted.

2 Appendix: Default Parameters

Table 2-1 Traffic Statistics Monitoring

Parameter	Default Setting
Traffic Summary	
Auto Refresh	Disable
Refresh Rate	10 seconds

Part 34

Mirroring Traffic

CHAPTERS

1. Mirroring
2. Configuration Examples
3. Appendix: Default Parameters


1 Mirroring

You can analyze network traffic and troubleshoot network problems using Mirroring. Mirroring allows the switch to send a copy of the traffic that passes through specified sources (ports, LAGs or the CPU) to a destination port. It does not affect the switching of network traffic on source ports, LAGs or the CPU.

1.1 Using the GUI


Choose the menu **MAINTENANCE > Mirroring** to load the following page.

Figure 1-1 Port Mirroring Session List

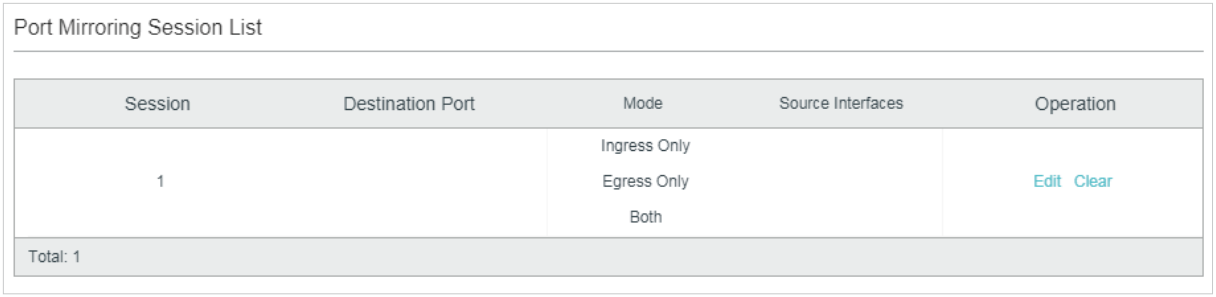

The above page displays a mirroring session, and no more session can be created. Click **Edit** to configure this mirroring session on the following page.

Figure 1-2 Configure the Mirroring Session

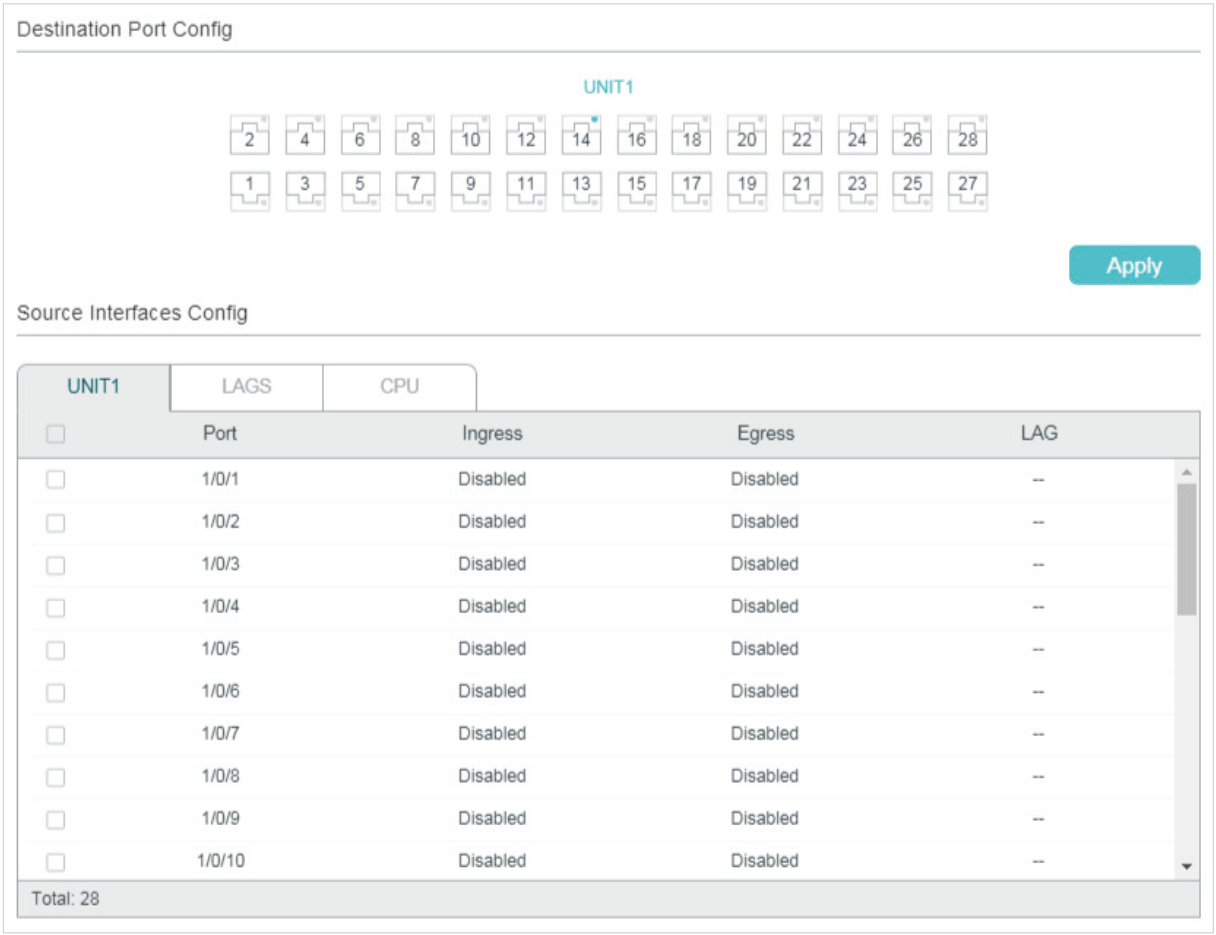

Follow these steps to configure the mirroring session:

1) In the **Destination Port Config** section, specify a destination port for the mirroring session, and click **Apply**.

2) In the **Source Interfaces Config** section, specify the source interfaces and click **Apply**. Traffic passing through the source interfaces will be mirrored to the destination port. There are three source interface types: port, LAG, and CPU. Choose one or more types according to your need.

UNIT1	Select the desired ports as the source interfaces. The switch will send a copy of traffic passing through the port to the destination port.
LAGS	Select the desired LAGs as the source interfaces. The switch will send a copy of traffic passing through the LAG members to the destination port.
CPU	When selected, the switch will send a copy of traffic passing through the CPU to the destination port.
Ingress	With this option enabled, the packets received by the corresponding interface (port, LAG or CPU) will be copied to the destination port. By default, it is disabled.
Egress	With this option enabled, the packets sent by the corresponding interface (port, LAG or CPU) will be copied to the destination port. By default, it is disabled.

Note:

- The member ports of an LAG cannot be set as a destination port or source port.
- A port cannot be set as the destination port and source port at the same time.

1.2 Using the CLI

Follow these steps to configure Mirroring.

Step 1	**configure** Enter global configuration mode.
Step 2	**monitor session** *session_num* **destination interface { fastEthernet** *port* **| gigabitEthernet** *port* **| ten-gigabitEthernet** *port***}** Enable the port mirror function and set the destination port. *session_num*: The monitor session number. It can only be specified as 1. *port*: The destination port number. You can specify only one destination port for the mirror session.
Step 3	**monitor session** *session_num* **source { cpu** *cpu_numbr* **| interface { fastEthernet** *port-list* **| gigabitEthernet** *port-list* **| ten-gigabitEthernet** *port-list* **| port-channel** *port-channel-id* **}}** *mode* Configure ports or LAGs as the monitored interfaces. *session_num*: The monitor session number. It can only be specified as 1. *cpu_number*: The CPU number. It can only be specified as 1. *port-list*: List of source ports. It is multi-optional. *mode*: The monitor mode. There are three options: **rx**, **tx** and **both**: **rx**: The incoming packets of the source port will be copied to the destination port. **tx**: The outgoing packets of the source port will be copied to the destination port. **both**: Both of the incoming and outgoing packets on source port can be copied to the destination port. *Note:* You can configure one or more source interface types (ports, LAGs and the CPU) according to your needs.
Step 4	**show monitor session** Verify the Port Mirror configuration.
Step 5	**end** Return to privileged EXEC mode.
Step 6	**copy running-config startup-config** Save the settings in the configuration file.

The following example shows how to copy the received and transmitted packets on port 1/0/1,2,3 and the CPU to port 1/0/10.

Switch#configure

Switch(config)#monitor session 1 **destination interface gigabitEthernet** 1/0/10

Switch(config)#monitor session 1 **source interface gigabitEthernet** 1/0/1-3 both

Switch(config)#monitor session 1 **source cpu** 1 both

Switch(config)#show monitor session

Monitor Session: 1

Destination Port: Gi1/0/10

Source Ports(Ingress): Gi1/0/1-3

Source Ports(Egress): Gi1/0/1-3

Source CPU(Ingress): cpu1

Source CPU(Egress): cpu1

Switch(config-if)#end


Switch#copy running-config startup-config

2 Configuration Examples

2.1 Network Requirements

As shown below, several hosts and a network analyzer are directly connected to the switch. For network security and troubleshooting, the network manager needs to use the network analyzer to monitor the data packets from the end hosts.

Figure 2-1 Network Topology

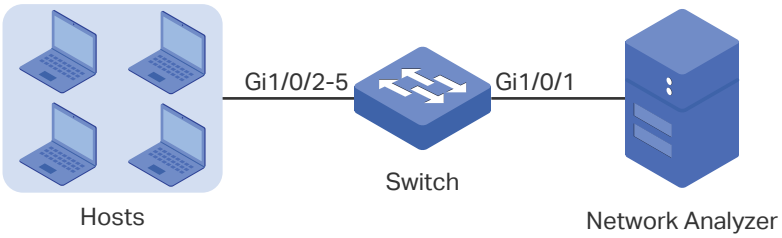

2.2 Configuration Scheme

To implement this requirement, you can use Mirroring feature to copy the packets from ports 1/0/2-5 to port 1/0/1. The overview of configuration is as follows:


1) Specify ports 1/0/2-5 as the source ports, allowing the switch to copy the packets from the hosts.
2) Specify port 1/0/1 as the destination port so that the network analyzer can receive mirrored packets from the hosts.

Demonstrated with T2600G-28TS, the following sections provide configuration procedure in two ways: using the GUI and using the CLI.

2.3 Using the GUI

1) Choose the menu **MAINTENANCE > Mirroring** to load the following page. It displays the information of the mirroring session.

Figure 2-2 Mirror Session List

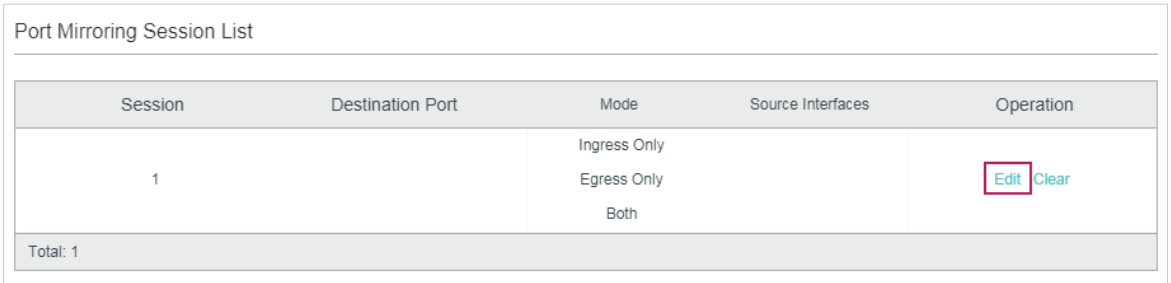


2) Click **Edit** on the above page to load the following page. In the **Destination Port Config** section, select port 1/0/1 as the destination port and click **Apply**.

Figure 2-3 Destination Port Configuration



3) In the **Source Interfaces Config** section, select ports 1/0/2-5 as the source ports, and enable **Ingress** and **Egress** to allow the received and sent packets to be copied to the destination port. Then click **Apply.**

Figure 2-4 Source Port Configuration

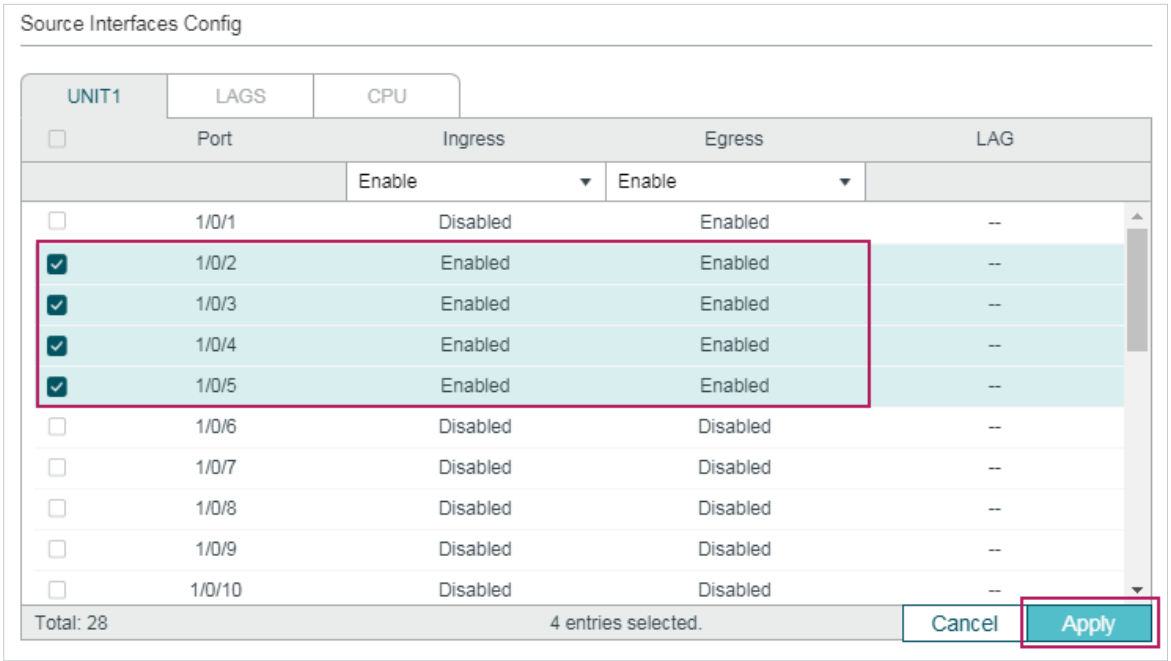

4) Click Save to save the settings.

2.4 Using the CLI

Switch#configure

Switch(config)#monitor session 1 destination interface gigabitEthernet 1/0/1

Switch(config)#monitor session 1 source interface gigabitEthernet 1/0/2-5 both

Switch(config)#end

Switch#copy running-config startup-config

Verify the Configuration

Switch#show monitor session 1

Monitor Session:	1
Destination Port:	Gi1/0/1
Source Ports(Ingress):	Gi1/0/2-5
Source Ports(Egress):	Gi1/0/2-5

3 Appendix: Default Parameters

Default settings of Switching are listed in th following tables.

Table 3-1 Configurations for Ports

Parameter	Default Setting
Ingress	Disabled
Egress	Disabled

Part 35

Configuring sFlow

CHAPTERS

1. Overview
2. sFlow Configuration
3. Configuration Example
4. Appendix: Default Parameters

1 Overview

sFlow (Sampled Flow) is a technology for monitoring high-speed switched and routed networks. It provide complete visibility into network activity. With sFlow, you can analyze traffic statistics and monitor the network usage, thus implement effective management and control of network resources.

The sFlow monitoring system consists of an sFlow Agent and an sFlow Collector.

sFlow Agent

The sFlow Agent is embedded in a switch or router or in a standalone probe. It uses sampling technology to capture traffic statistics from the device it is monitoring, and packages the sampled data into sFlow datagrams. sFlow datagrams are used to immediately forward the sampled data to an sFlow Collector for analysis.

The switch provides a packet-based sFlow, which samples one packet out of a specified number of packets.

sFlow Collector

The sFlow Collector is installed in a host. It analyzes sFlow datagrams to produce a rich, real-time, network-wide view of traffic flows.

2 sFlow Configuration

To complete the configuration, follow these steps:

1) Configure the sFlow Agent.
2) Configure the sFlow Collector.
3) Configure the sFlow Sampler.

Configuration Guidelines


To get analytic results, you should choose a proper collector. For details on sFlow collectors, refer to https://www.sflow.org.

2.1 Using the GUI

2.1.1 Configuring the sFlow Agent

Choose the menu **MAINTENANCE > sFlow > sFlow Agent** to load the following page.

Figure 2-1 Configuring the sFlow Agent

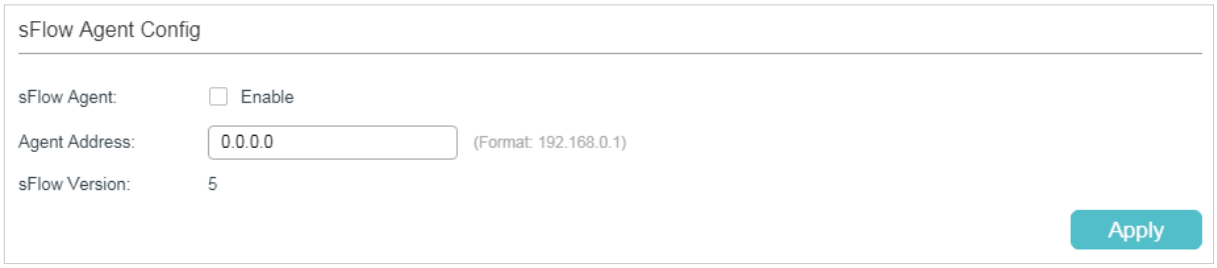

Follow these steps to configure the sFlow Agent:

1) Enable the sFlow function, specify the sFlow Agent IP address.


sFlow Agent	Enable or disable sFlow Agent. When enabled, the switch acts as an sFlow Agent.
Agent Address	Enter the IP address of the sFlow Agent. Normally it is the management IP address of the switch.
sFlow Version	The sFlow version is v5.

2) Click **Apply**.

2.1.2 Configuring the sFlow Collector

Choose the menu **MAINTENANCE > sFlow > sFlow Collector** to load the following page.

Figure 2-2 Configuring the sFlow Collector

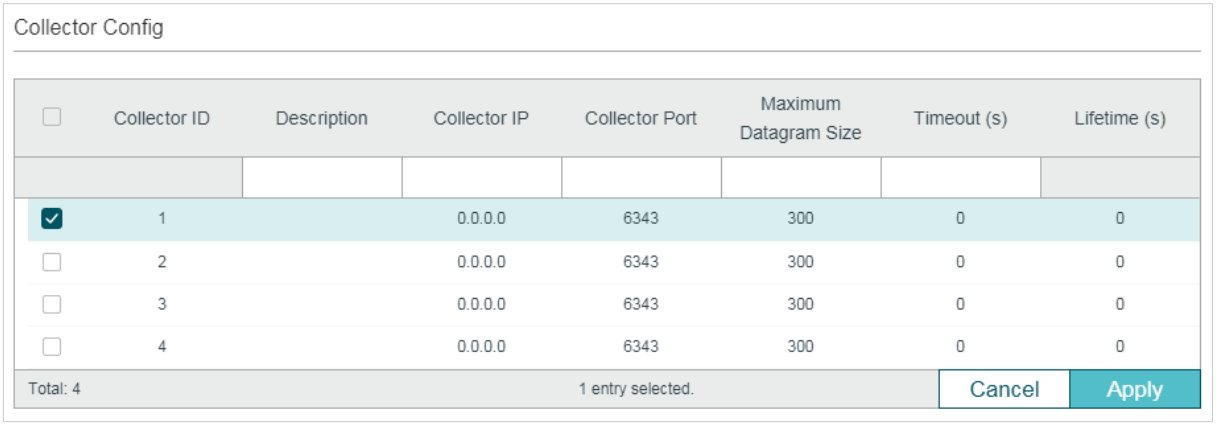

Follow these steps to configure the sFlow Collector:

1) Select a Collector and configure the relevant parameters.

Collector ID	Displays the Collector ID. The switch supports 4 collectors at most.
Description	Give the collector a description for identification with 16 characters at most.
Collector IP	Enter the IP address of the host that runs the sFlow Collector.
Collector Port	Specify the UDP port number for the sFlow collector. The default is port 6343.
Maximum Datagram Size	Specify the maximum number of data bytes that can be sent in a single sample datagram. Valid values are from 300 to 1400 bytes and the default is 300 bytes.
Timeout (s)	Specify the aging time after which the sFlow Collector will become invalid. Valid values are from 0 to 2000000 seconds; the default is 0, which means the collector is always valid.
Lifetime (s)	Displays the remaining time of the collector. Lifetime counts down from Timeout.


2) Click **Apply**.

2.1.3 Configuring the sFlow Sampler

An sFlow Sampler is a data source that collects flow samples. Usually the ports act as sFlow Samplers.

Choose the menu **MAINTENANCE > sFlow> sFlow Sampler** to load the following page.

Figure 2-3 Configuring the sFlow Sampler

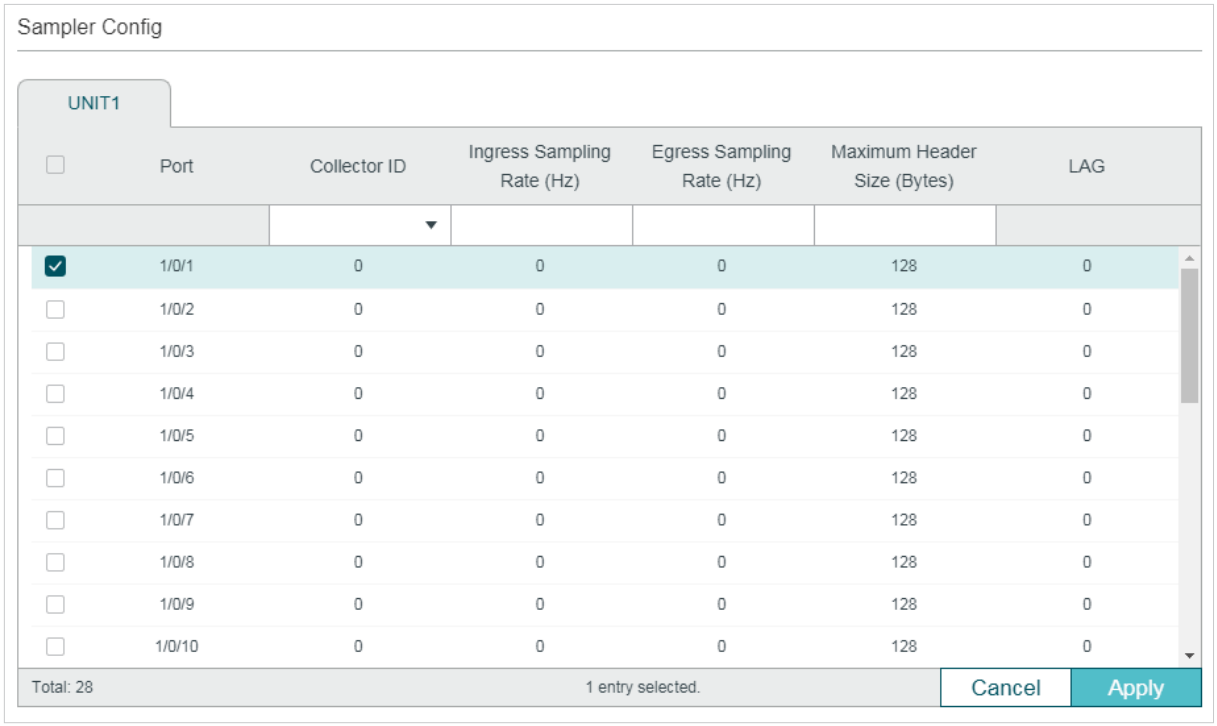

Follow these steps to configure the sFlow Sampler:

1) Set one or more ports to be Samplers and configure the relevant parameters . One port can be bound to only one collector.

Collector ID	Choose a collector to be bound with the port.
Ingress Sampling Rate (Hz)	Specify the ingress sampling frequency; the sampler takes one packet out of the specified number of packets. Valid values are from 1024 to 65535. The default is 0 which means no packets will be sampled.
Egress Sampling Rate (Hz)	Specify the egress sampling frequency; the sampler takes one packet out of the specified number of packets. Valid values are from 1024 to 65535. The default is 0 which means no packets will be sampled.
Maximum Header Size (Bytes)	Specify the maximum number of bytes that should be copied from a sampled packet. Valid values are from 18 to 256 bytes and the default is 128 bytes.
LAG	Displays the LAG the port belongs to.

2) Click **Apply**.

2.2 Using the CLI

Follow these steps to configure the sFlow:

Step 1	**configure** Enter global configuration mode.
Step 2	**sflow address** { *ipv4-addr* } Configure the IP address of sFlow Agent. *ipv4-addr*: Enter the management IP address of the switch to monitor traffic on the switch ports.
Step 3	**sflow enable** Enable the sFlow function.
Step 4	**sflow collector collector-ID** *value* { [**descript** *descript*]	[**ip** *ip*]	[**port** *port*]	[**maxData** *maxData*]	[**timeout** *timeout*] } Configure parameters of the sFlow collector. *value*: Enter the ID of the sFlow collector. The values are from 1 to 4. *descript*: Give a collector description for identification with 16 characters at most. *ip*: Enter the IP address of the host that runs the sFlow collector. *port*: Enter the UDP port number for the sFlow collector. The default is port 6343. *maxData*: Specify the maximum number of data bytes that can be sent in a single sample datagram. The values are from 300 to 1400 bytes; the default is 300 bytes. *timeout*: Specify the aging time after which the sFlow collector will become invalid. The values are from 0 to 2000000 seconds; the default is 0, which means the collector is always valid.
Step 5	**interface {fastEthernet** *port* **| range fastEthernet** *port-list* **| gigabitEthernet** *port* **| range gigabitEthernet** *port-list* **| ten-gigabitEthernet** *port* **| range ten-gigabitEthernet** *port-list* **]** Configure the sampler on the specified ports. *port/port-list:* The number or the list of the Ethernet ports that you want to monitor.
Step 6	**sflow sampler** { [**collector-ID** *value*]	[**ingRate** *ingress-rate*] [**egRate** *egress-rate*]	[**maxHeader** *maxHeader*] } Configure parameters of the sFlow sampler. *value*: Enter the ID of the sFlow collector which the sFlow sampler will send sFlow datagrams to. The values are from 0 to 4. 0 means sampling feature is disabled on the port. *ingress-rate*: Specify the ingress sampling frequency. The samplers takes one packet out of the specified number of packets. Valid values are from 1024 to 65535. The default is 0 which means no packets will be sampled. *egress-rate*: Specify the egress sampling frequency. The samplers takes one packet out of the specified number of packets. Valid values are from 1024 to 65535. The default is 0 which means no packets will be sampled. *maxHeader*: Specify the maximum number of bytes that should be copied from a sampled packet. Valid values are from 18 to 256 bytes and the default is 128 bytes.

Step 7	**show sflow** { [global] | [collector] | [sampler] } Verify the sFlow configurations. global: View the global configuration of sFlow. collector: View the global configuration of the sFlow collector. sampler: View the global configuration of the sFlow sampler.
Step 8	**end** Return to privileged EXEC mode.
Step 9	**copy running-config startup-config** Save the settings in the configuration file.

The following example shows how to configure the switch whose IP address is 192.168.0.1 to send sFlow packets to the host whose IP address is 192.168.0.100. Set the sFlow agent IP address as 192.168.0.1, the sFlow collector IP address 1 as 192.168.0.100; configure Gigabit Ethernet port 1 as the sFlow sampler, the Collector-ID as 1, and the ingress rate as 1024:

Switch#configure

Switch(config)#sflow address 192.168.0.1

Switch(config)#sflow enable

Switch(config)#sflow collector collector-ID 1 **ip** 192.168.0.100

Switch(config)# sflow collector collector-ID 1 **port** 6343

Switch(config)#interface gigabitEthernet 1/0/1

Switch(config-if)#sflow sampler collector-ID 1

Switch(config-if)#sflow sampler ingRate 1024

Switch(config-if)#show sflow global

sFlow Status: Enable

Agent Address: 192.168.0.1

sFlow Version: v5

Switch(config-if)#show sflow collector

Collector	Col-IP	Col-Port	MaxData	Timeout	Lifetime	Description
1	192.168.0.100	6343	300	0	0	

...

Switch(config-if)#show sflow sampler

Port	Collector	IngRate	EgRate	MaxHeader	LAG
Gi1/0/1	1	1024	0	128	N/A
Gi1/0/2	0	0	0	128	N/A
Gi1/0/3	0	0	0	128	N/A

...

Switch(config-if)#end


Switch#copy running-config startup-config

3 Configuration Example

3.1 Network Requirements

The company network manager needs to monitor and analyze the network usage in department A.

Figure 3-1 Network Topology

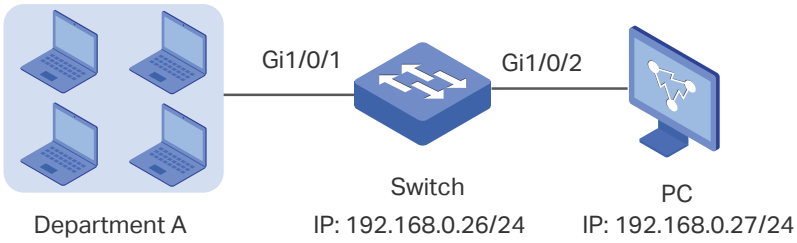

3.2 Configuration Scheme


The network manager can configure sFlow to monitor and analyze the network. Set the switch as the sFlow Agent that collects traffic data on port 1/0/1, and configure an sFlow Collector on the PC to process sFlow packets and display results.

Demonstrated with T2600G-28TS, this chapter provides configuration procedures in two ways: using the GUI and Using the CLI.

3.3 Using the GUI


1) Choose the menu **MAINTENANCE > sFlow > sFlow Agent** to load the following page. Enable sFlow Agent, set the switch IP address 192.168.0.26 as the Agent address, and click **Apply**.

Figure 3-2 Configuring sFlow Agent

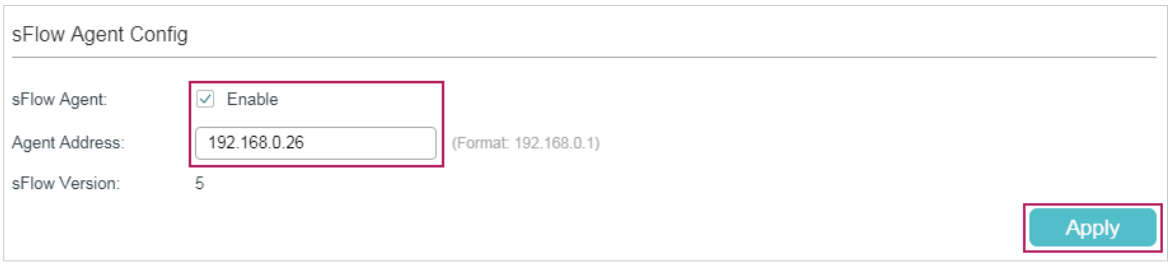


2) Choose the menu **MAINTENANCE > sFlow > sFlow Collector** to load the following page. Select Collector 1, enter the PC's IP address 192.168.0.27 as the Collector IP address, and click **Apply**.

Figure 3-3 Configuring sFlow Collector

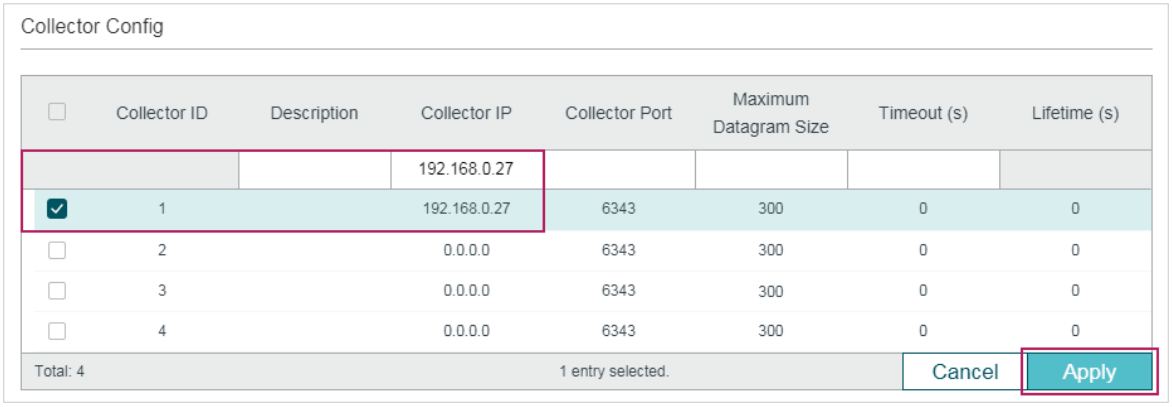

3) Choose the menu **MAINTENANCE > sFlow > sFlow Sampler** to load the following page. Select Collector 1 for port 1/0/1, set the ingress rate as 1024, then click **Apply**.

Figure 3-4 Configuring sFlow Sampler

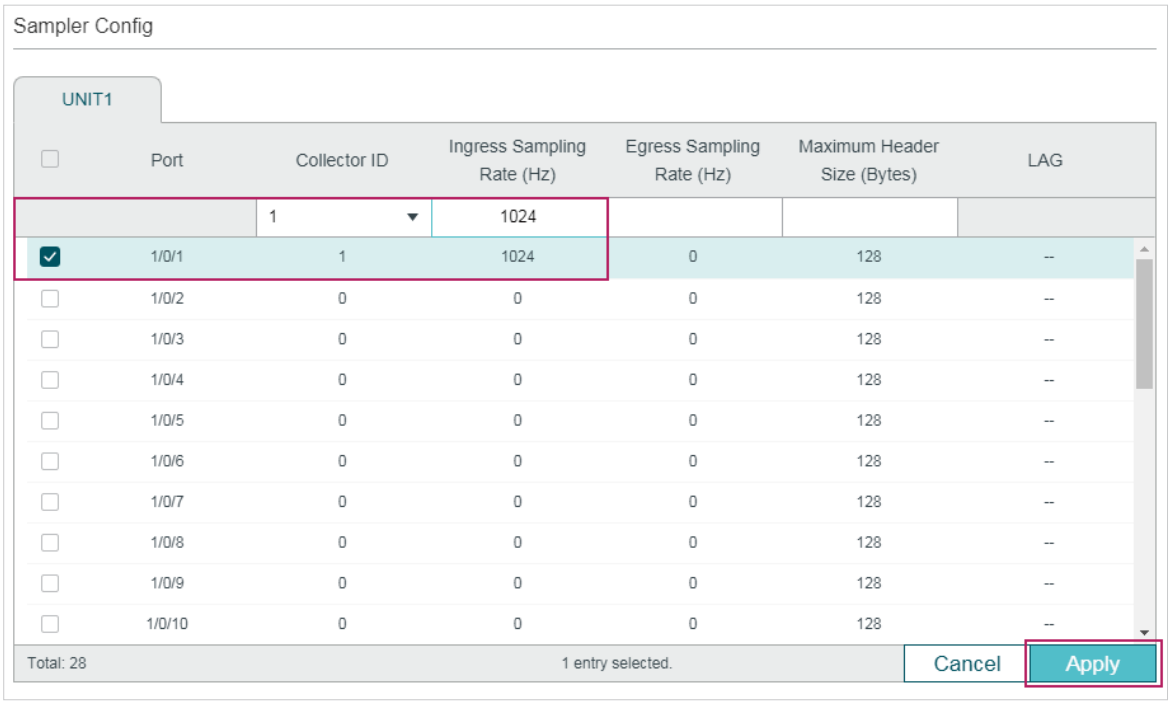

4) Click Save to save the settings.

3.4 Using the CLI

1) Configure the sFlow Agent.

Switch#configure

Switch(config)#sflow address 192.168.0.26

Switch(config)#sflow enable

2) Configure the sFlow collector.

Switch(config)#sflow collector collector-ID 1 ip 192.168.0.27

Switch(config)# sflow collector collector-ID 1 port 6343

3) Configure the sFlow sampler.

Switch(config)#interface gigabitEthernet 1/0/1

Switch(config-if)#sflow sampler collector-ID 1

Switch(config-if)#sflow sampler ingRate 1024

Switch(config-if)#end

Switch#copy running-config startup-config

Verify the Configurations

Verify the configuration of global sFlow:

Switch#show sflow global

sFlow Status: Enable

Agent Address: 192.168.0.26

sFlow Version: v5

Verify the configuration of sFlow collector:

Switch#show sflow collector

Collector	Col-IP	Col-Port	MaxData	Timeout	Lifetime	Description
1	192.168.0.27	6343	300	0	0	
2	0.0.0.0	6343	300	0	0	
3	0.0.0.0	6343	300	0	0	
4	0.0.0.0	6343	300	0	0	

Verify the configuration of sFlow sampler:

Switch#show sflow sampler

Port	Collector	IngRate	EgRate	MaxHeader	LAG
Gi1/0/1	1	1024	0	128	N/A
Gi1/0/2	0	0	0	128	N/A

...

4 Appendix: Default Parameters

Default settings of maintenance are listed in the following tables.

Table 4-1 Default Settings of sFlow

Parameter	Default Setting
sFlow Agent	
sFlow Agent	Disabled
Agent Address	0.0.0.0
sFlow Version	5
sFlow Collector	
Collector IP	0.0.0.0
Collector Port	6343
Maximum Datagram Size	300 bytes
Timeout (s)	0
sFlow Sampler	
Collector ID	0, indicates sampling feature is disabled on the port.
Ingress Sampling Rate (Hz)	0
Egress Sampling Rate (Hz)	0
Maximum Header Size (Bytes)	128

Part 36

Configuring OAM

CHAPTERS

1. Ethernet OAM
2. Ethernet OAM Configurations
3. Viewing OAM Statistics
4. Configuration Example
5. Appendix: Default Parameters

1 Ethernet OAM

1.1 Overview

Ethernet OAM (Operation, Administration, and Maintenance) is a Layer 2 protocol for monitoring and troubleshooting Ethernet networks. It can monitor link performance, monitor faults and generate alarms so that a network administrator can manage the network effectively. TP-Link switches support EFM OAM which is defined in IEEE 802.3ah.

The following basic concepts of OAM will be introduced: OAM entity, OAMPDUs (OAM Protocol Data Units), and OAM connection.

OAM Entity

A port that is enabled with OAM on the switch is called an OAM entity.

OAMPDUs


Through OAMPDUs exchanged between OAM entities, failure conditions on the network are reported to network administrators. The OAMPDUs are defined as follows:

- **Information OAMPDU**: The Information OAMPDU is used to send state information, such as local information, remote information, and user-defined information, to the remote OAM entity for maintaining OAM connection.
- **Event Notification OAMPDU**: The Event Notification OAMPDU is used for the Link Monitoring feature. The local OAM entity can use the Event Notification OAMPDU to notify the remote OAM entity that a fault has occurred to the link.
- **Loopback Control OAMPDU**: Loopback Control OAMPDU is used for the Remote Loopback feature. The local OAM entity can control OAM remote loopback state of the remote OAM entity through the Loopback Control OAMPDU.

OAM Connection

OAM connection is established between OAM entities before OAM works. An OAM entity can operate in two modes: active and passive. Only the active OAM entity can initiate an OAM connection; the passive OAM entity waits and responds to OAM connection establishment requests. So at least one of the two entities should be in active mode.

Figure 1-1 OAM Connection Establishment

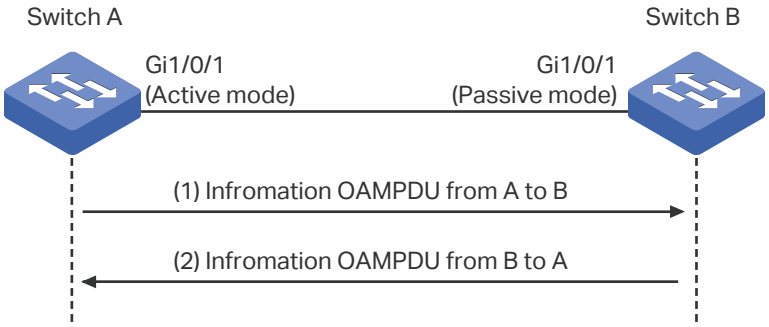

As the above figure shows, the OAM entity on Switch A is in active mode, and that on Switch B is in passive mode. Switch A initiates an OAM connection by sending an Information OAMPDU. Switch B compares the OAM information in the received OAMPDU with its own and sends back an Information OAMPDU to Switch A. If the OAM information of the two entities matches, an OAM connection will be established. After that, the two OAM entities will exchange Information OAMPDUs periodically to keep the OAM connection valid.

1.2 Supported Features

The switch supports the following OAM features: Link Monitoring, Remote Failure Indication (RFI), and Remote Loopback.

Link Monitoring

Link Monitoring is for monitoring link performance under various circumstances. When problems are detected on the link, the OAM entity will send its remote peer the Event Notification OAMPDUs to report link events.

The link events are described as follows:

Table 1-1 OAM Link Events

OAM Link Events	Definition
Error Symbol Period	An Error Symbol Period event occurs if the number of error symbols exceeds the defined threshold within a specific period of time.
Error Frame	An Error Frame event occurs if the number of error frames exceeds the defined threshold within a specific period of time.
Error Frame Period	An Error Frame Period event occurs if the number of error frames in a specific number of received frames exceeds the defined threshold.
Error Frame Seconds	An Error Frame Seconds event occurs if the number of error frame seconds exceeds the threshold within a specific period of time. A second is defined as an error frame second if error frames occur within that second.

Remote Failure Indication (RFI)

With Remote Failure Indication, an OAM entity can send the failure conditions of the link, such as disruption in traffic because of the device failure, to its peer through Information OAMPDUs. This allows the network administrator to stay informed of the link faults and take action quickly. The switch supports two kinds of failure conditions:


Dying Gasp: An unrecoverable fault, such as power failure, occurs.

Critical Event: Unspecified critical event occurs.

Remote Loopback

With Remote Loopback, administrators can test link performance including the delay, jitter, and frame loss rate during installation or troubleshooting.

Figure 1-2 Remote Loopback

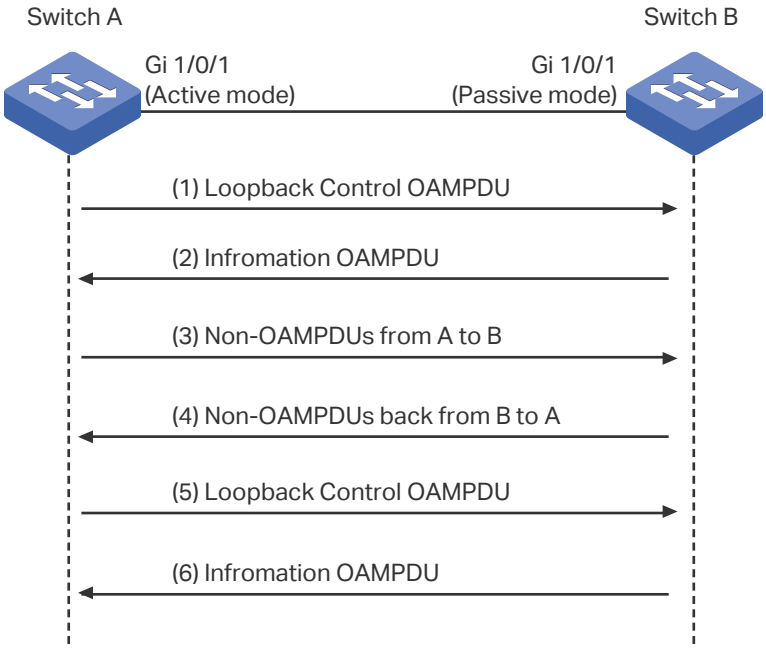

As the above figure shows, the OAM connection has been established between the two entities. The OAM entity on Switch A is in active mode, and that on Switch B is in passive mode.

The working mechanism of Remote Loopback is as follows:

1) Switch A sends a Loopback Control OAMPDU to put the peer into remote loopback mode. Note that at least one of the two entities should be configured in active mode because only the entity in active mode can generate Loopback Control OAMPDU.
2) After receiving the Loopback Control OAMPDU, Switch B turns into remote loopback mode and sends an Information OAMPDU to inform its state updating.
3) Switch A sends Non-OAMPDU packets to Switch B for link testing.
4) Switch B receives the testing packets and sends back these packets along the original path. Through these returned packets, administrators can test the link performance.

5) When Remote Loopback is finished, Switch A sends a Loopback Control OAMPDU to disable the remote loopback mode on Switch B.

6) Switch B receives the Loopback Control OAMPDU and exits remote loopback mode. Besides, Switch B sends an Information OAMPDU to inform its state updating.

TP-Link switches can act as Switch A and initiate Remote Loopback request.

2 Ethernet OAM Configurations

To complete OAM configurations, follow these steps:


1) Enable OAM and configure OAM mode on the port.
2) Configure the following OAM features according to your needs:
   - Link Monitoring
   - Remote Failure Indication (RFI)
   - Remote Loopback
3) View the OAM status on the port.

2.1 Using the GUI

2.1.1 Enabling OAM and Configuring OAM Mode

Choose the menu **MAINTENANCE > Ethernet OAM > Basic Config > Basic Config** to load the following page.

Figure 2-1 Basic Configuration

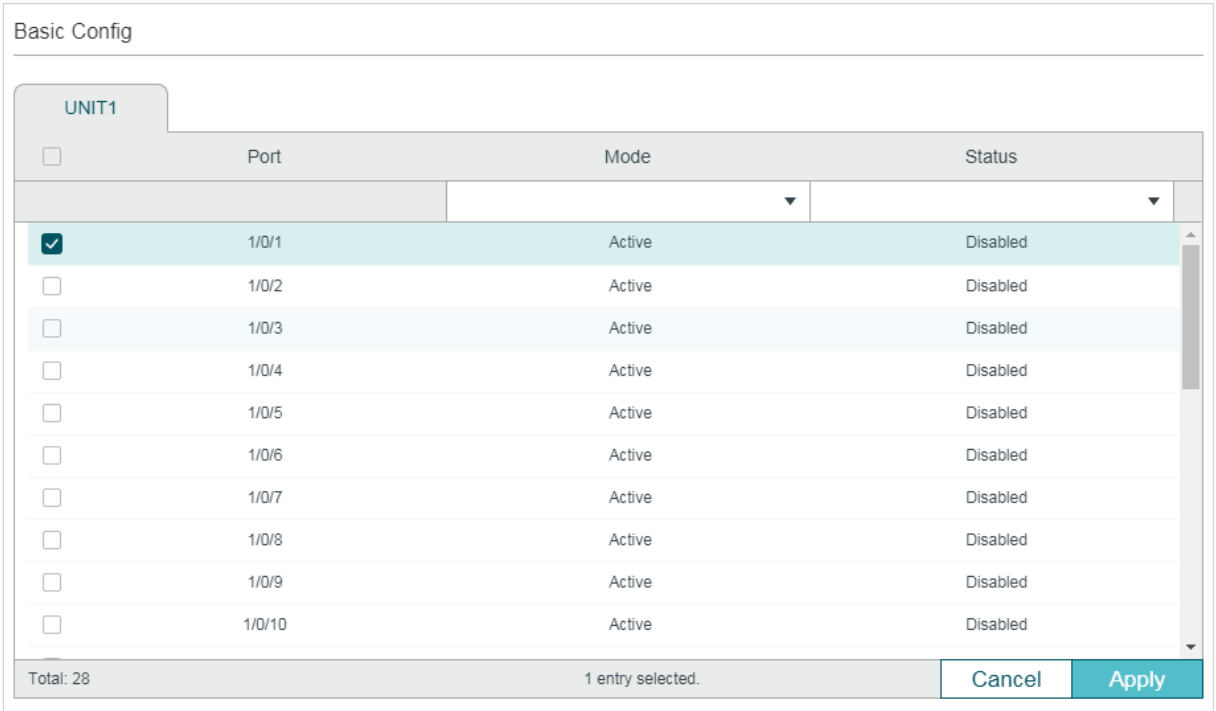

Follow these steps to complete the basic OAM configuration:

1) Select one or more ports, configure the OAM mode and enable OAM.


Mode	Select OAM mode for the port. **Active:** The port in this mode can initiate OAM connection. It is the default setting. **Passive:** The port in this mode cannot initiate OAM connection or send loopback control OAMPDUs. *Note:* OAM connection cannot be established between two ports in passive mode. Make sure that at least one side is in active mode.
Status	Enable or disable OAM on the port. By default, it is disabled.

2) Click **Apply**.

2.1.2 Configuring Link Monitoring

Choose the menu **MAINTENANCE > Ethernet OAM > Link Monitoring > Link Monitoring** to load the following page.

Figure 2-2 Configure Link Monitoring

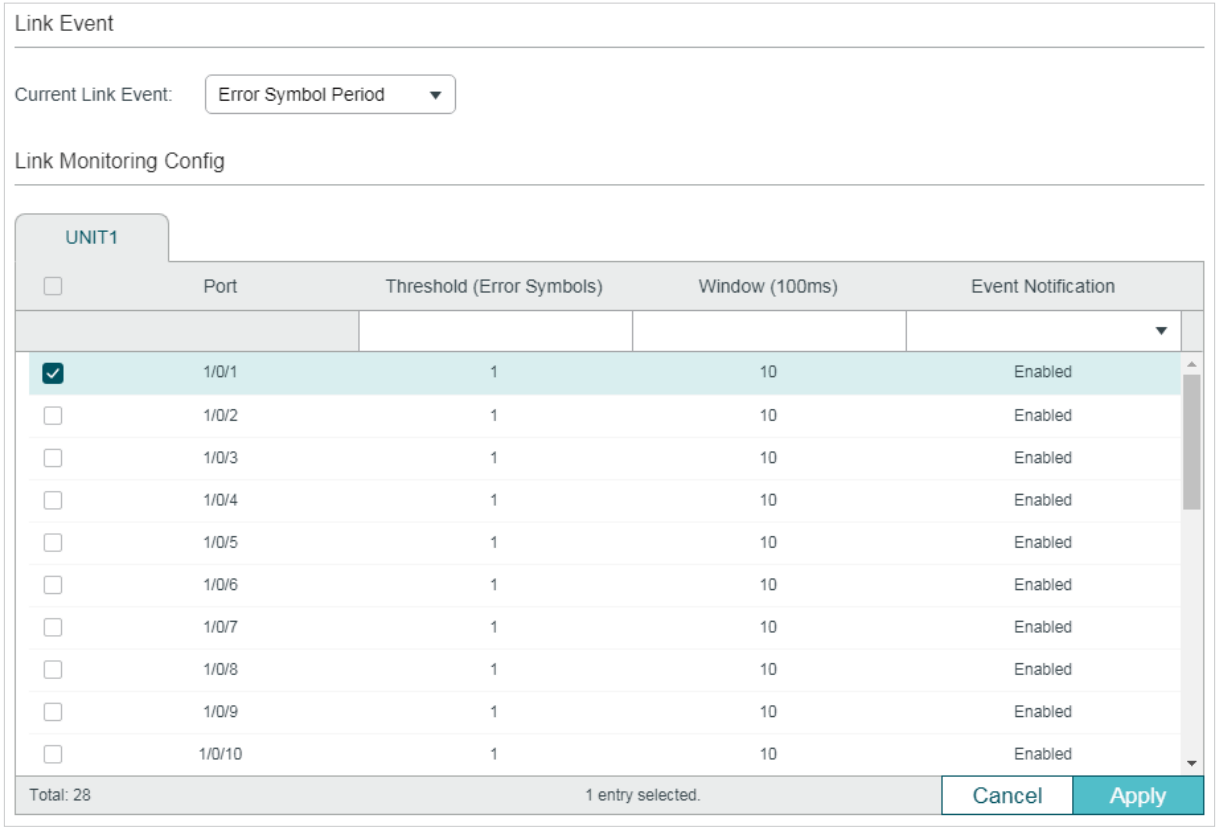

Follow these steps to configure Link Monitoring:

1) In the **Link Event** section, select a Link Event type to configure.

Current Link Event	Select Link Event type. The following options are provided: **Error Symbol Period**: An Error Symbol Period event occurs if the number of error symbols exceeds the defined threshold within a specific period of time. **Error Frame**: An Error Frame event occurs if the number of error frames exceeds the defined threshold within a specific period of time. **Error Frame Period**: An Error Frame Period event occurs if the number of error frames in a specific number of received frames exceeds the defined threshold. **Error Frame Seconds**: An Error Frame Seconds event occurs if the number of error frame seconds exceeds the threshold within a specific period of time. A second is defined as an error frame second if error frames occur within that second.

2) In the **Link Monitoring Config** section, select one or more ports, and configure the threshold and period for the selected link event.


Threshold	Specify the threshold for the selected link event. **Threshold (Error Symbols)**: If you select **Error Symbol Period** as the link event type, specify the threshold of received error symbols within a specific period of time. Valid error frame values are from 1 to 4294967295, and the default value is 1. **Threshold (Error Frames)**: If you select **Error Frame** or **Error Frame Period** as the link event type, specify the threshold of error frames within a specific period of time or in specific number of received frames. Valid error frame values are from 1 to 4294967295, and the default value is 1. **Threshold (Error Seconds)**: If you select **Error Frame Seconds** as the link event type, specify the threshold of error frame seconds. Valid values are from 1 to 900, and the default value is 1.
Window	Specify the period for the selected link event. **Window (100ms)**: If you select **Error Symbol Period**, **Error Frame** or **Error Frame Seconds** as the link event type, specify the time period in units of 100ms (for example, 2 refers to 200ms), in which if the received errors exceed the threshold, a link event will be generated. For **Error Symbol Period** and **Error Frame**, valid values are from 10*100 to 600*100 ms. For **Error Frame Seconds**, valid values are from 100*100 to 9000*100 ms. **Window (Frames)**: If you select **Error Frame Period** as the link event type, specify the number of frames, in which if the frame errors exceed the threshold, a link event will be generated. Valid values are from 148810 to 89286000 frames, and the default value is 1488100 frames.
Event Notification	Enable or disable notifications to report the link event. By default, all types of link event can be reported.

3) Click **Apply**.

2.1.3 Configuring RFI

Choose the menu **MAINTENANCE > Ethernet OAM > Remote Failure Indication** to load the following page.

Figure 2-3 Configure RFI

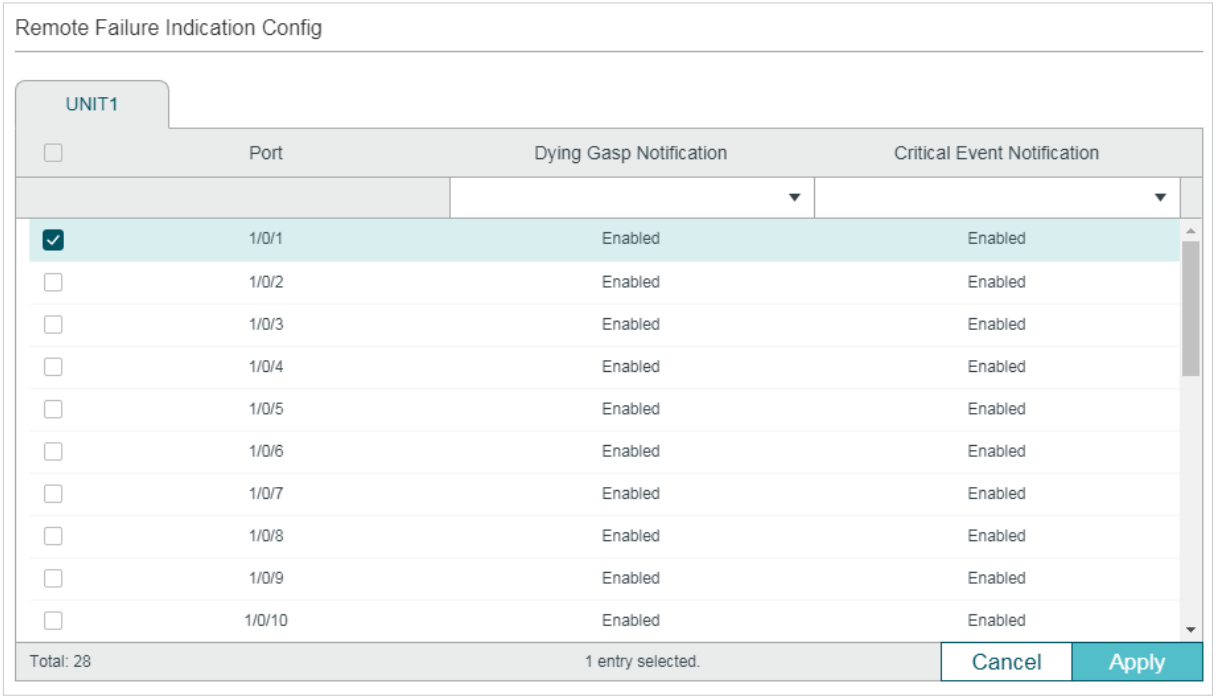

Follow these steps to configure Remote Failure Indication:

1) Select one or more ports and configure the Dying Gasp Notification and Critical Event Notification features.


Dying Gasp Notification	With Dying Gasp Notification enabled, if the switch detects an unrecoverable fault on the network, it will report this condition locally and send Information OAMPDU to notify the peer.
Critical Event Notification	With Critical Event Notification enabled, if the switch detects an unspecified critical event occurs, it will report this condition locally and send Information OAMPDU to notify the peer.

2) Click **Apply**.

2.1.4 Configuring Remote Loopback

Choose the menu **MAINTENANCE > Ethernet OAM > Remote Loopbak** to load the following page.

Figure 2-4 Configure Remote Loopback

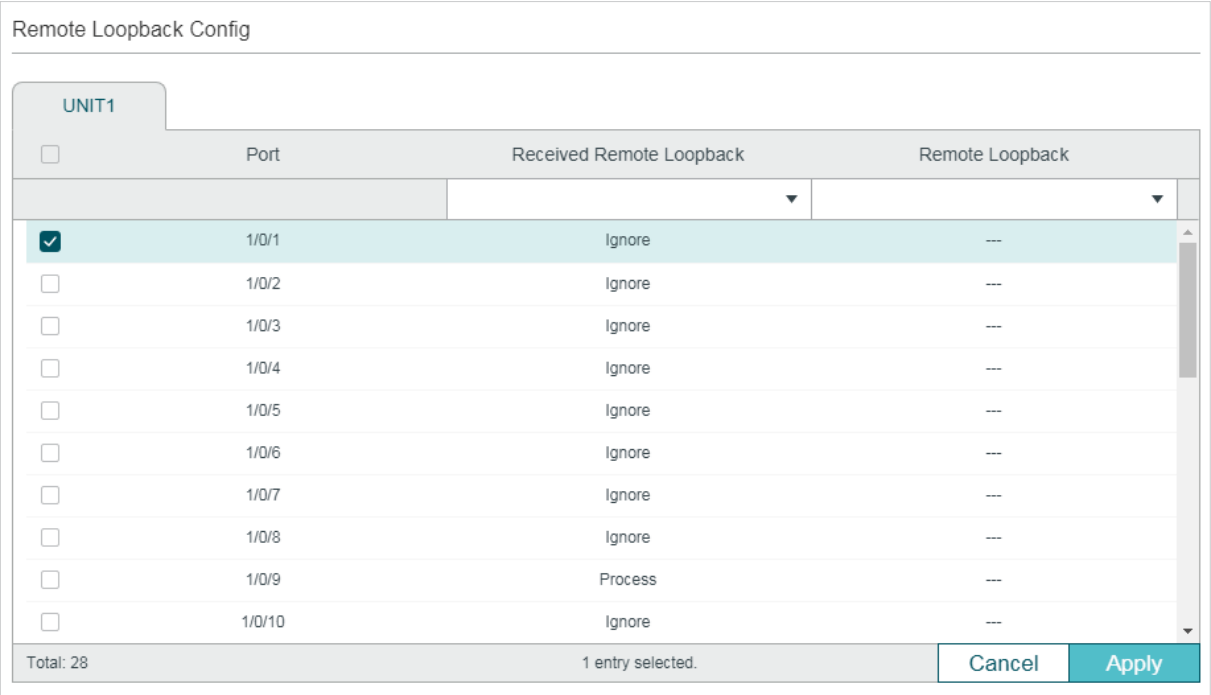

Follow these steps to configure Remote Loopback:

1) Select one or more ports and configure the relevant options.


Received Remote Loopback	Choose to ignore or to process the received remote loopback requests.
Remote Loopback	Start or stop the remote loopback process. The port to be configured should be in active mode and has established OAM connection with the peer. **Start**: Request the remote peer to start the OAM remote loopback mode. **Stop**: Request the remote peer to stop the OAM remote loopback mode.

2) Click **Apply**.

2.1.5 Viewing OAM Status

Choose the menu **MAINTENANCE > Ethernet OAM > Basic Config > Discovery Info** to load the following page.

Figure 2-5 View OAM Status

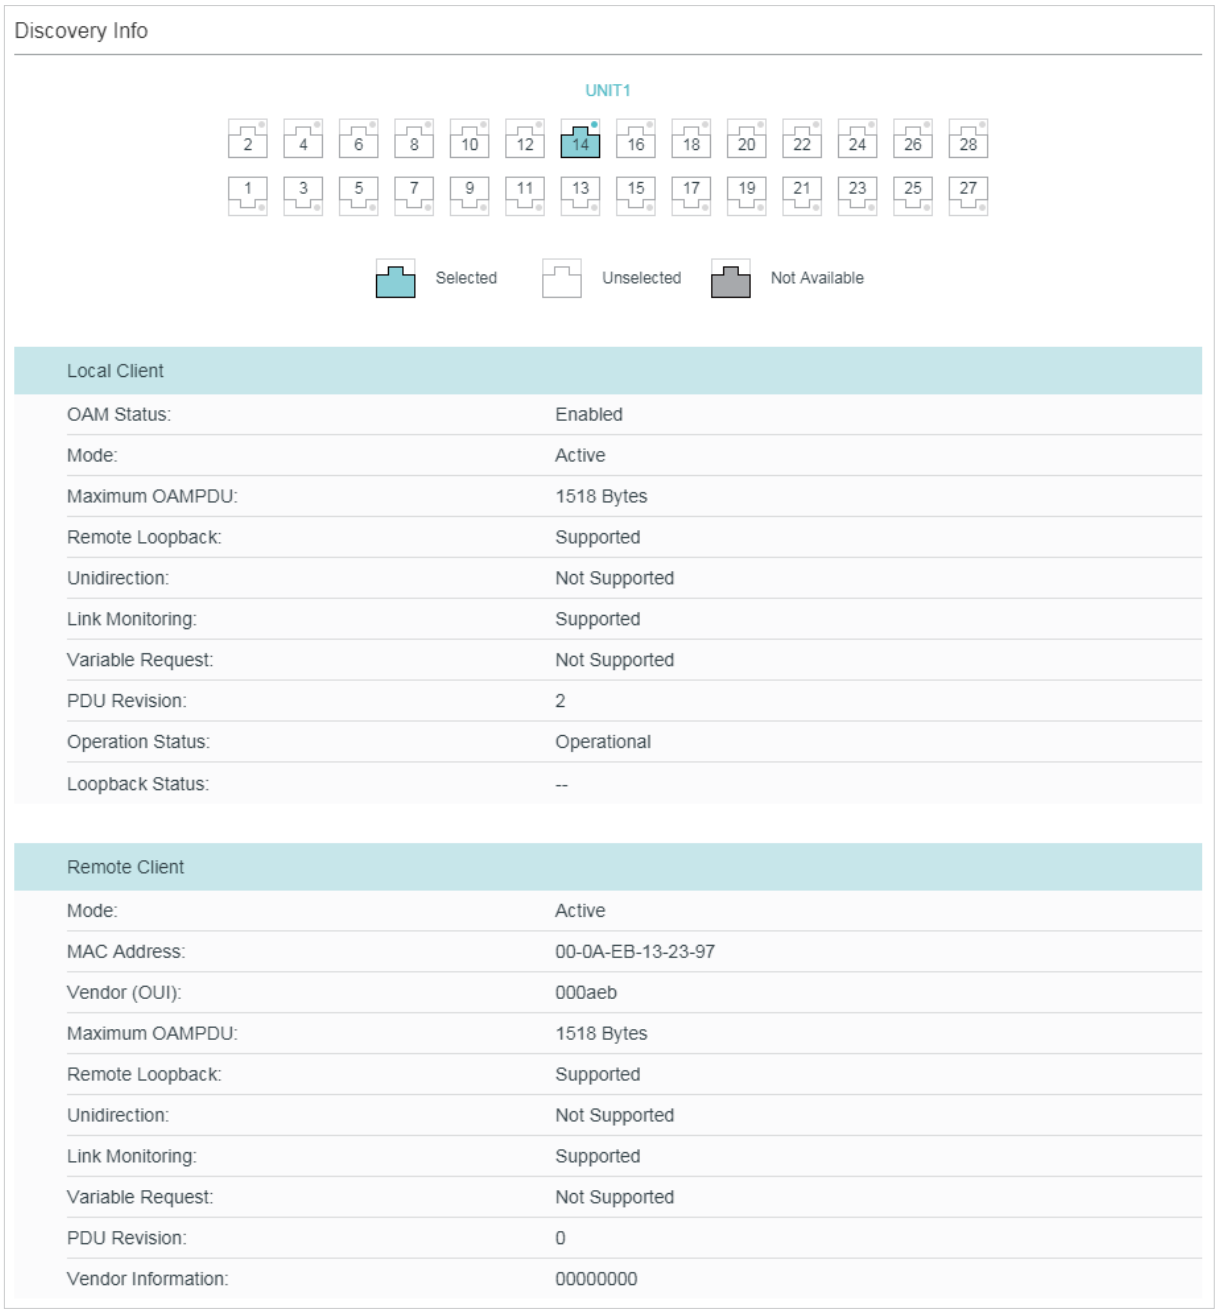

Select a port to view whether the OAM connection is established with the peer. Additionally, you can view the OAM information of the local and the remote entities.

The OAM information of the local entity is as follows:

OAM Status	Displays whether OAM is enabled.
Mode	Displays the OAM mode of the local entity.

Maximum OAMPDU	Displays the maximum size of OAMPDU.
Remote Loopback	Displays whether the local entity supports Remote Loopback.
Unidirection	Displays whether the local entity supports Unidirection.
Link Monitoring	Displays whether the local entity supports Link Monitoring.
Variable Request	Displays whether the local entity supports Variable Request.
PDU Revision	Displays the PDU Revision of the local entity.
Operation Status	Displays the status of OAM connection: **Disable**: OAM is disabled on the port. **LinkFault**: The link between the local entity and the remote entity is down. **PassiveWait**: The port is in passive mode and is waiting to see if the peer device is OAM capable. **ActiveSendLocal**: The port is in active mode and is sending local information. **SendLocalAndRemote**: The local port has discovered the peer but has not yet accepted or rejected the configuration of the peer. **SendLocalAndRemoteOK**: The local device agrees the OAM peer entity. **PeeringLocallyRejected**: The local OAM entity rejects the remote peer OAM entity. **PeeringRemotelyRejected**: The remote OAM entity rejects the local device. **NonOperHalfDuplex**: Ethernet OAM is enabled but the port is in half-duplex operation. You should configure the port as a full-duplex port. **Operational**: OAM connection is established with the peer and OAM works normally.
Loopback Status	Displays the loopback status. **No Loopback**: Neither the local entity nor the remote entity is in the loopback mode. **Local Loopback**: The local entity is in the loopback mode. **Remote Loopback**: The remote entity is in the loopback mode.

The OAM information of the remote entity is as follows:

Mode	Displays the OAM mode of the remote entity.
MAC Address	Displays the MAC address of the remote entity.
Vendor (OUI)	Displays the Vendor's OUI of the remote entity.

Maximum OAMPDU	Displays the maximum size of OAMPDU.
Remote Loopback	Displays whether the remote entity supports Remote Loopback.
Unidirection	Displays whether the remote entity supports Unidirection.
Link Monitoring	Displays whether the remote entity supports Link Monitoring.
Variable Request	Displays whether the remote entity supports Variable Request.
PDU Revision	Displays the PDU Revision of the remote entity.
Vendor Information	Displays the vendor information of the remote entity.

2.2 Using the CLI

2.2.1 Enabling OAM and Configuring OAM Mode

Follow these steps to enable OAM and configure OAM mode on the port:

Step 1	**configure** Enter global configuration mode.
Step 2	**interface {fastEthernet** *port* **| range fastEthernet** *port-list* **| gigabitEthernet** *port* **| range gigabitEthernet** *port-list* **| ten-gigabitEthernet** *port* **| range ten-gigabitEthernet** *port-list***}** Enter interface configuration mode.
Step 3	**ethernet-oam** Enable OAM on the port.
Step 4	**ethernet-oam mode** { passive | active } Configure the OAM mode of the port. passive: Specify the OAM mode as passive. The port in this mode cannot initiate OAM connection or send Loopback Control OAMPDU. active: Specify the OAM mode as active. The port in this mode can initiate OAM connection. It is the default setting. *Note*: OAM connection cannot be established between two ports in passive mode. Make sure that at least one side is in active mode.
Step 5	**show ethernet-oam configuration [interface fastEthernet** { *port* **|** *port-list* } **| interface gigabitEthernet** { *port* **|** *port-list* } **| ten-gigabitEthernet** { *port* **|** *port-list* } **]** Verify the OAM configuration.

Step 6	**end** Return to privileged EXEC mode.
Step 7	**copy running-config startup-config** Save the settings in the configuration file.

The following example shows how to enable OAM and configure the OAM mode as passive on port 1/0/1.

Switch#configure

Switch(config)#interface gigabitEthernet 1/0/1

Switch(config-if)#ethernet-oam

Switch(config-if)#ethernet-oam mode passive

Switch(config-if)#show ethernet-oam configuration interface gigabitEthernet 1/0/1

Gi1/0/1

OAM : Enabled

Mode : Passive

...

Switch(config-if)#end

Switch#copy running-config startup-config

2.2.2 Configuring Link Monitoring

With Link Monitoring, the following link events can be reported: Error Symbol Period, Error Frame, Error Frame Period, Error Frame Seconds.

- Configuring Error Symbol Period Event

An Error Symbol Period event occurs if the number of symbol errors exceeds the defined threshold within a specific period of time.

Follow these steps to configure the Error Symbol Period event:

Step 1	**configure** Enter global configuration mode.
Step 2	**interface {fastEthernet** *port* **| range fastEthernet** *port-list* **| gigabitEthernet** *port* **| range gigabitEthernet** *port-list* **| ten-gigabitEthernet** *port* **| range ten-gigabitEthernet** *port-list***}** Enter interface configuration mode.

Step 3	**ethernet-oam link-monitor symbol-period** [**threshold** *threshold*] [**window** *window*] [**notify** {disable | enable}] Configure the relevant parameters of Error Symbol Period event. *threshold*: Specify the threshold of received symbol errors within a specific period of time. Valid values are from 1 to 4294967295, and the default value is 1. *window*: Specify the time period in units of 100ms (for example, 2 refers to 200ms), in which if the received errors exceed the threshold, a link event will be generated. Valid values are from 10*100 to 600*100 ms, and the default value is 10*100 ms. disable | enable: Enable or disable notifications to report the link event. By default, it is enabled.
Step 4	**show ethernet-oam configuration [interface fastEthernet** { *port* **|** *port-list* } **| interface gigabitEthernet** { *port* **|** *port-list* } **| interface ten-gigabitEthernet** { *port* **|** *port-list* }**]** Verify the OAM configuration.
Step 5	**end** Return to privileged EXEC mode.
Step 6	**copy running-config startup-config** Save the settings in the configuration file.

The following example shows how to enable Error Frame event notification and configure the threshold as 1 and the window as 1000 ms (10*100 ms) on port 1/0/1:

Switch#configure

Switch(config)#interface gigabitEthernet 1/0/1

Switch(config-if)#ethernet-oam link-monitor symbol-period threshold 1 **window** 10 **notify** enable

Switch(config-if)#show ethernet-oam configuration interface gigabitEthernet 1/0/1

Gi1/0/1

...

Symbol Period Error

Notify State	: Enabled
Window	: 1000 milliseconds
Threshold	: 1 Error Symbol

...

Switch(config-if)#end

Switch#copy running-config startup-config

Configuring Error Frame Event

An Error Frame event occurs if the number of frame errors exceeds the defined threshold within a specific period of time.

Follow these steps to configure the Error Frame event:

Step 1	**configure** Enter global configuration mode.
Step 2	**interface {fastEthernet** *port* **| range fastEthernet** *port-list* **| gigabitEthernet** *port* **| range gigabitEthernet** *port-list* **| ten-gigabitEthernet** *port* **| range ten-gigabitEthernet** *port-list***}** Enter interface configuration mode.
Step 3	**ethernet-oam link-monitor frame [threshold** *threshold* **] [window** *window* **] [notify** {disable | enable}] Configure the relevant parameters of Error Frame event. *threshold*: Specify the threshold of received frame errors within a specific period of time. Valid values are from 1 to 4294967295, and the default value is 1. *window*: Specify the time period in units of 100ms (for example, 2 refers to 200ms), in which if the number of received errors exceeds the threshold, a link event will be generated. Valid values are from 10*100 to 600*100 ms, and the default value is 10*100 ms. disable | enable: Enable or disable notifications to report the link event. By default, it is enabled.
Step 4	**show ethernet-oam configuration [interface fastEthernet** { *port* **|** *port-list* } **| interface gigabitEthernet** { *port* **|** *port-list* } **| ten-gigabitEthernet** { *port* **|** *port-list* }**]** Verify the OAM configuration.
Step 5	**end** Return to privileged EXEC mode.
Step 6	**copy running-config startup-config** Save the settings in the configuration file.

The following example shows how to enable Error Frame notification and configure the threshold as 1 and the window as 2000 ms (20*100 ms) on port 1/0/1:

Switch#configure

Switch(config)#interface gigabitEthernet 1/0/1

Switch(config-if)#ethernet-oam link-monitor frame threshold 1 **window** 20 **notify** enable

Switch(config-if)#show ethernet-oam configuration interface gigabitEthernet 1/0/1

Gi1/0/1

...

Frame Error

Notify State : Enabled

Window : 2000 milliseconds

Threshold : 1 Error Frame

...

Switch(config-if)#end

Switch#copy running-config startup-config

Configuring Error Frame Period Event

An Error Frame Period event occurs if the number of frame errors in specific number of received frames exceeds the defined threshold.

Follow these steps to configure the Error Frame Period event:

Step 1	**configure** Enter global configuration mode.
Step 2	**interface {fastEthernet** *port* **| range fastEthernet** *port-list* **| gigabitEthernet** *port* **| range gigabitEthernet** *port-list* **| ten-gigabitEthernet** *port* **| range ten-gigabitEthernet** *port-list***}** Enter interface configuration mode.
Step 3	**ethernet-oam link-monitor frame-period** [**threshold** *threshold*] [**window** *window*] [**notify** {disable | enable}] Configure the relevant parameters of Error Frame Period. *threshold*: Specify the threshold of received symbol errors in specific number of received frames. Valid values are from 1 to 4294967295, and the default value is 1. *window*: Specify the number of frames, in which if the frame errors exceed the threshold, a link event will be generated. Valid values are from 148810 to 89286000, and the default value is 1488100. disable | enable: Enable or disable the port to report the failure condition.
Step 4	**show ethernet-oam configuration [interface fastEthernet** { *port* **|** *port-list* } **| interface gigabitEthernet** { *port* **|** *port-list* } **| ten-gigabitEthernet** { *port* **|** *port-list* } **]** Verify the OAM configuration.
Step 5	**end** Return to privileged EXEC mode.
Step 6	**copy running-config startup-config** Save the settings in the configuration file.

The following example shows how to enable Error Frame Period notification and configure the threshold as 1 and the window as 1488100 on port 1/0/1:

Switch#configure

Switch(config)#interface gigabitEthernet 1/0/1

Switch(config-if)#ethernet-oam link-monitor frame-period threshold 1 **window** 1488100 **notify** enable

Switch(config-if)#show ethernet-oam configuration interface gigabitEthernet 1/0/1

Gi1/0/1

...

Frame Period Error

Notify State : Enabled

Window : 1488100 Frames

Threshold : 1 Error Frame

...

Switch(config-if)#end

Switch#copy running-config startup-config

■ Configuring Error Frame Seconds Event

An Error Frame Seconds event occurs if the number of error frame seconds exceeds the threshold within a specific period of time. A second is called an error frame second if error frames occur in the second.

Follow these steps to configure Error Frame Seconds event:

Step 1	**configure** Enter global configuration mode.
Step 2	**interface {fastEthernet** *port* **| range fastEthernet** *port-list* **| gigabitEthernet** *port* **| range gigabitEthernet** *port-list* **| ten-gigabitEthernet** *port* **| range ten-gigabitEthernet** *port-list***}** Enter interface configuration mode.

Step 3	**ethernet-oam link-monitor frame-seconds** [**threshold** *threshold*] [**window** *window*] [**notify** {disable | enable}] Configure the relevant parameters of Error Frame Period. *threshold*: Specify the threshold of received error frame seconds within a specific period of time. Valid values are from 1 to 900, and the default value is 1. *window*: Specify the period time in 100ms, in which if the received errors exceed the threshold, a link event will be generated. Valid values are from 100*100 to 9000*100 ms, and the default value is 600*100 ms. disable | enable : Enable or disable the port to report the failure condition.
Step 4	**show ethernet-oam configuration [interface fastEthernet** { *port* **|** *port-list* } **| interface gigabitEthernet** { *port* **|** *port-list* } **| ten-gigabitEthernet** { *port* **|** *port-list* } **]** Verify the OAM configuration.
Step 5	**end** Return to privileged EXEC mode.
Step 6	**copy running-config startup-config** Save the settings in the configuration file.

The following example shows how to enable Error Frame Seconds notification and configure the threshold as 1 and the window as 80000 ms (800*100 ms)on port 1/0/1:

Switch#configure

Switch(config)#interface gigabitEthernet 1/0/1

Switch(config-if)#ethernet-oam link-monitor frame-seconds threshold 1 **window** 800 **notify** enable

Switch(config-if)#show ethernet-oam configuration interface gigabitEthernet 1/0/1

Gi1/0/1

...

Frame Seconds Error

Notify State : Enabled

Window : 80000 milliseconds

Threshold : 1 Error Seconds

...

Switch(config-if)#end

Switch#copy running-config startup-config

2.2.3 Configuring Remote Failure Indication

Follow these steps to configure Remote Failure Indication:

Step 1	**configure** Enter global configuration mode.
Step 2	**interface {fastEthernet** *port* **| range fastEthernet** *port-list* **| gigabitEthernet** *port* **| range gigabitEthernet** *port-list* **| ten-gigabitEthernet** *port* **| range ten-gigabitEthernet** *port-list***}** Enter interface configuration mode.
Step 3	**ethernet-oam remote-failure {** dying-gasp | critical-event **} notify {** disable | enable **}** Configure the Dying Gasp Notification and Critical Event Notification features on the port. dying-gasp: Enable Dying Gasp Notification, and if the switch detects an unrecoverable fault on the network, such as power failure, occurs, it will send Information OAMPDU to notify the peer. critical-event: Enable Critical Event Notification, and if the switch detects an unspecified critical event occurs, it will send Information OAMPDU to notify the peer. disable | enable: Enable or disable notification to report the link events.
Step 4	**show ethernet-oam configuration [interface fastEthernet** { *port* **|** *port-list* } **| interface gigabitEthernet** { *port* **|** *port-list* } **| ten-gigabitEthernet** { *port* **|** *port-list* }**]** Verify the OAM configuration.
Step 5	**end** Return to privileged EXEC mode.
Step 6	**copy running-config startup-config** Save the settings in the configuration file.

The following example shows how to enable Dying Gasp and Critical Event on port 1/0/1:

Switch#configure

Switch(config)#interface gigabitEthernet 1/0/1

Switch(config-if)#ethernet-oam remote-failure dying-gasp **notify** enable

Switch(config-if)#ethernet-oam remote-failure critical-event **notify** enable

Switch(config-if)#show ethernet-oam configuration interface gigabitEthernet 1/0/1

Gi1/0/1

...

Dying Gasp : Enabled

Critical Event : Enabled

...

Switch(config-if)#end

Switch#copy running-config startup-config

2.2.4 Configuring Remote Loopback

Follow these steps to configure Remote Loopback:

Step 1	**configure** Enter global configuration mode.
Step 2	**interface {fastEthernet** *port* **| range fastEthernet** *port-list* **| gigabitEthernet** *port* **| range gigabitEthernet** *port-list* **| ten-gigabitEthernet** *port* **| range ten-gigabitEthernet** *port-list***}** Enter interface configuration mode.
Step 3	**ethernet-oam remote-loopback received-remote-loopback {** process | ignore **}** Configure the port to ignore or to process the received remote loopback request.
Step 4	**ethernet-oam remote-loopback {** start | stop **}** Request the remote peer to start or stop the OAM remote loopback mode. The port to be configured here should be in active mode that has established OAM connection with the peer.
Step 5	**show ethernet-oam configuration [interface fastEthernet** { *port* **|** *port-list* } **| interface gigabitEthernet** { *port* **|** *port-list* } **| ten-gigabitEthernet** { *port* **|** *port-list* }**]** Verify the OAM configuration.
Step 6	**end** Return to privileged EXEC mode.
Step 7	**copy running-config startup-config** Save the settings in the configuration file.

The following example shows how to start the OAM remote loopback mode of the peer on port 1/0/1:

Switch#configure

Switch(config)#interface gigabitEthernet 1/0/1

Switch(config-if)# ethernet-oam remote-loopback start

2.2.5 Verifying OAM Connection

On privileged EXEC mode or any other configuration mode, you can use the following command to view whether the OAM connection is established with the peer. Additionally, you can view the OAM information of the local entity and the remote entity.

show ethernet-oam status [interface fastEthernet { *port* **|** *port-list* } **| interface gigabitEthernet** { *port* **|** *port-list* } **| ten-gigabitEthernet** { *port* **|** *port-list* }**]**

View the OAM status and the relevant information of the specified port, including the local entity and the remote entity.

The displayed OAM information of the local entity is as follows:

OAM: Displays whether OAM is enabled.

Mode: Displays OAM mode of the local entity.

Max OAMPDU: Displays the maximum size of OAMPDU.

Remote Loopback: Displays whether the local entity supports Remote Loopback.

Unidirection: Displays whether the local entity supports Unidireciton.

Link Monitoring: Displays whether the local entity supports Link Monitoring.

Variable Request: Displays whether the local entity supports Variable Request.

PDU Revision: Displays the PDU Revision of the local entity.

Operation Status: Displays the status of OAM connection, including:

Disable: OAM is disabled on the port.

LinkFault: The link between the local entity and the remote entity is down.

PassiveWait: The port is in passive mode and is waiting to see if the peer device is OAM capable.

ActiveSendLocal: The port is in active mode and is sending local information.

SendLocalAndRemote: The local port has discovered the peer but has not yet accepted or rejected the configuration of the peer.

SendLocalAndRemoteOK: The local device agrees the OAM peer entity.

PeeringLocallyRejected: The local OAM entity rejects the remote peer OAM entity.

PeeringRemotelyRejected: The remote OAM entity rejects the local device.

NonOperHalfDuplex: Ethernet OAM is enabled but the port is in half-duplex operation. You should configure the port as a full-duplex port.

Operational: OAM connection is established with the peer and OAM works normally.

Loopback Status: Displays the loopback status, including:

No Loopback: Neither the local client nor the remote client is in the loopback mode.

Local Loopback: The local client is in the loopback mode.

Remote Loopback: The remote client is in the loopback mode.

The displayed OAM information of the remote entity is as follows:

Mode: Displays OAM mode of the local entity.

MAC Address: Displays the MAC address of the remote entity.

Vendor (OUI): Displays the Vendor's OUI of the remote entity.

Max OAMPDU: Displays the maximum size of OAMPDU.

Remote Loopback: Displays whether the remote entity supports Remote Loopback.

Unidirection: Displays whether the remote entity supports Unidireciton.

Link Monitoring: Displays whether the remote entity supports Link Monitoring.

Variable Request: Displays whether the remote entity supports Variable Request.

PDU Revision: Displays the PDU Revision of the remote entity.

Vendor Information: Displays the vendor information of the remote entity.

The following example shows how to view the OAM status of port 1/0/1:

Switch(config)#show ethernet-oam status interface gigabitEthernet 1/0/1

Gi1/0/1

Local Client

OAM : Enabled

Mode : Active

Max OAMPDU : 1518 Bytes

Remote Loopback : Supported

Unidirection : Not Supported

Link Monitoring : Supported

Variable Request : Not Supported

PDU Revision : 1

Operation Status : Operational

Loopback Status : No Loopback

Remote Client

Mode : Passive

MAC Address : 18-A6-F7-DB-63-81

Vendor(OUI) : 000aeb

Max OAMPDU : 1518 Bytes

Remote Loopback : Supported

Unidirection : Not Supported

Link Monitoring : Supported

Variable Request : Not Supported

PDU Revision : 1

Loopback Status : No Loopback

Vendor Information : 00000000

3 Viewing OAM Statistics

You can view the following OAM statistics:


- OAMPDUs
- Event Logs

3.1 Using the GUI

3.1.1 Viewing OAMPDUs

Choose the menu **MAINTENANCE > Ethernet OAM > Statistics > OAMPDUs Statistics** to load the following page.

Figure 3-1 OAMPDUs Statistics

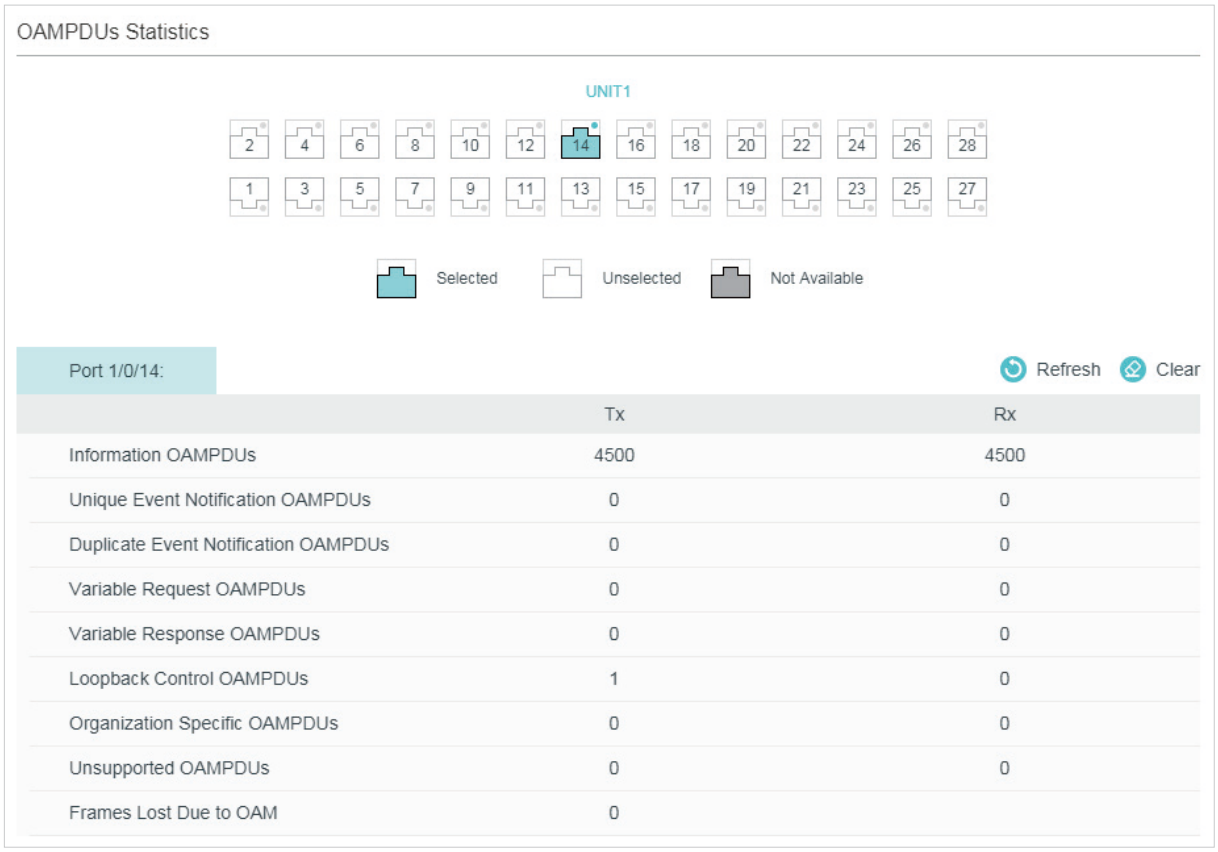

Select a port and view the number of different OAMPDUs transmitted and received on it:


Tx	Displays the number of OAMPDUs that have been transmitted on the port.
Rx	Displays the number of OAMPDUs that have been received on the port.

Information OAMPDUs	Displays the number of Information OAMPDUs that have been transmitted or received on the port.
Unique Event Notification OAMPDUs	Displays the number of Unique Event Notification OAMPDUs that have been transmitted or received on the port.
Duplicate Event Notification OAMPDUs	Displays the number of Duplicate Event Notification OAMPDUs that have been transmitted or received on the port.
Variable Request OAMPDUs	Displays the number of Variable Request OAMPDUs that have been transmitted or received on the port.
Variable Response OAMPDUs	Displays the number of Variable Response OAMPDUs that have been transmitted or received on the port.
Loopback Control OAMPDUs	Displays the number of Loopback Control OAMPDUs that have been transmitted or received on the port.
Organization Specific OAMPDUs	Displays the number of Organization Specific OAMPDUs that have been transmitted or received on the port.
Unsupported OAMPDUs	Displays the number of Unsupported OAMPDUs that have been transmitted or received on the port.
Frames Lost Due To OAM	Displays the number of frames that are not transmitted successfully on the OAM sublayer but not due to an internal OAM error.

3.1.2 Viewing Event Logs

Choose the menu **MAINTENANCE > Ethernet OAM > Statistics > Event Logs Statistics** to load the following page.

Figure 3-2 Event Logs Statistics

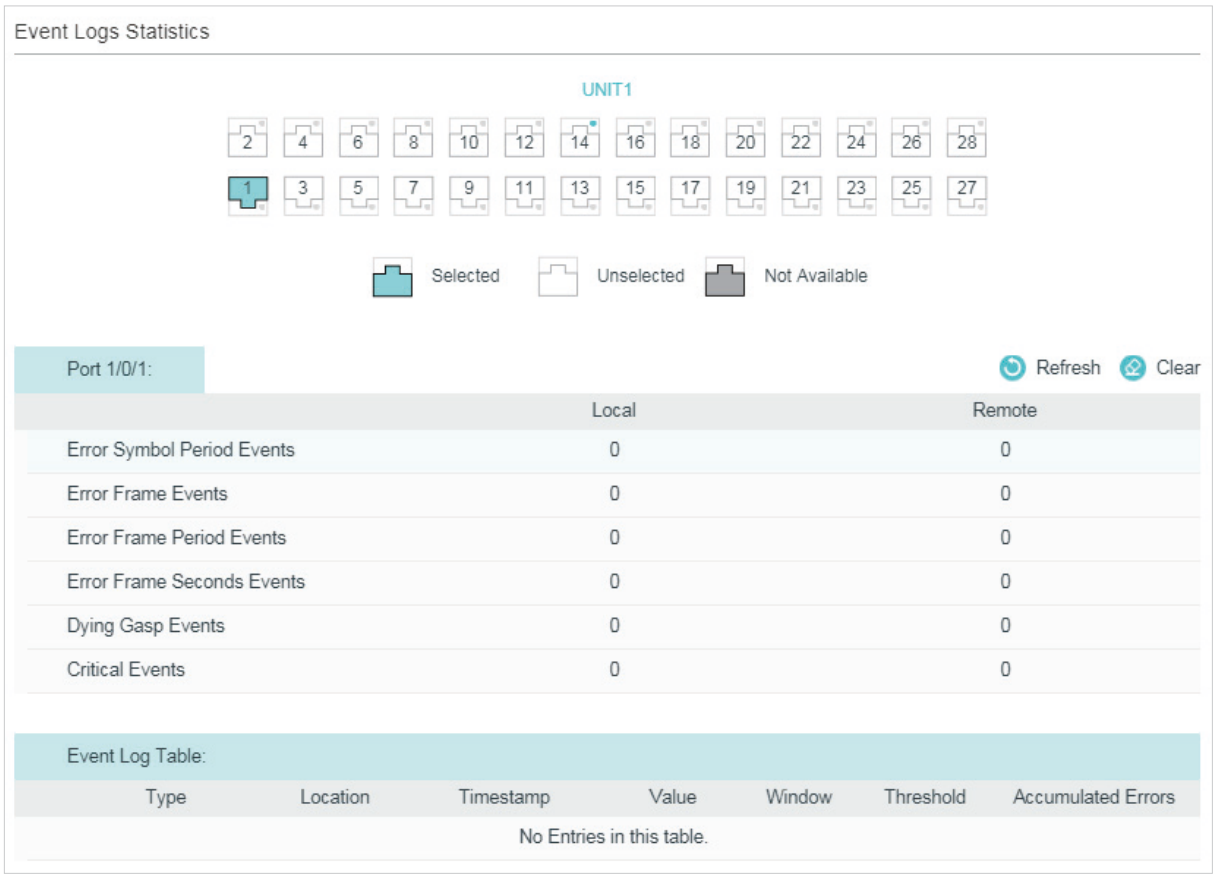

Select a port and view the local and remote event logs on it.

Local	Displays the number of link events that have occurred on the local link.
Remote	Displays the number of link events that have occurred on the remote link.
Error Symbol Period Events	Displays the number of error symbol period link events that have occurred on the local link or remote link.
Error Frame Events	Displays the number of error frame link events that have occurred on the local link or remote link.
Error Frame Period Events	Displays the number of error frame period link events that have occurred on the local link or remote link.
Error Frame Seconds Events	Displays the number of error frame seconds link events that have occurred on the local link or remote link.
Dying Gasp Events	Displays the number of Dying Gasp link events that have occurred on the local link or remote link.

Critical Events	Displays the number of Critical Event link events that have occurred on the local link or remote link.

Additionally, you can view the detailed information of the event logs in the **Event Log Table** section.

Type	Displays the types of the link event.
Location	Displays the location where the link event occurred.
Timestamp	Displays the time reference when the link event occurred.
Value	Displays the number of symbol errors or frame errors in the period.
Window	Displays the period of the link event.
Threshold	Displays the threshold of the errors.
Accumulated Errors	Displays the number of errors that have been detected since the OAM feature was last reset.

3.2 Using the CLI

3.2.1 Viewing OAMPDUs

On privileged EXEC mode or any other configuration mode, you can use the following command to view the number of OAMPDUs received and sent on the specified port.

show ethernet-oam statistics [interface fastEthernet { *port* **|** *port-list* } **| interface gigabitEthernet** { *port* **|** *port-list* } **| ten-gigabitEthernet** { *port* **|** *port-list* }**]**

View the number of different OAMPDUs transmitted and received on the specified port, including Information OAMPDU, Unique Event Notification OAMPDU, Duplicate Event Notification OAMPDU, Loopback Control OAMPDU, Variable Request OAMPDU, Variable Response OAMPDU, Organization Specific OAMPDUs, Unsupported OAMPDU, and Frames Lost Due To OAM (frames that are not transmitted successfully on the OAM sublayer but not due to an internal OAM error).

The following example shows how to view the transmitted and received OAMDPUs on port 1/0/1.

Switch#show ethernet-oam statistics interface gigabitEthernet 1/0/1

Gi1/0/1

Information OAMPDU TX : 28

Information OAMPDU RX : 28

Unique Event Notification OAMPDU TX : 0

Unique Event Notification OAMPDU RX : 0

Duplicate Event Notification OAMPDU TX : 0

Duplicate Event Notification OAMPDU RX : 0

Loopback Control OAMPDU TX : 1

Loopback Control OAMPDU RX : 0

Variable Request OAMPDU TX : 0

Variable Request OAMPDU RX : 0

Variable Response OAMPDU TX : 0

Variable Response OAMPDU RX : 0

Organization Specific OAMPDUs TX : 0

Organization Specific OAMPDUs RX : 0

Unsupported OAMPDU TX : 0

Unsupported OAMPDU RX : 0

Frames Lost Due To OAM : 0

3.2.2 Viewing Event Logs

On privileged EXEC mode or any other configuration mode, you can use the following command to view the local and remote event logs on the specified port.

show ethernet-oam event-log [interface fastEthernet { *port* **|** *port-list* } **| interface gigabitEthernet** { *port* **|** *port-list* } **| ten-gigabitEthernet** { *port* **|** *port-list* }**]**

View the local and remote event logs on the specified port.

An event list will be displayed, including the following information:

Type: Displays the type of the link event.

Location: Displays the location where the link event occurred (local or remote).

Timestamp: Displays the time reference when the link event occurred.

And the number of local and remote event logs will be displayed, including the following events:

Error Symbol Event: Displays the number of error symbol period link events that have occurred on the local link or remote link.

Error Frame Event: Displays the number of error frame link events that have occurred on the local link or remote link.

Error Frame Period Event: Displays the number of error frame period link events that have occurred on the local link or remote link.

Error Frame Seconds Event: Displays the number of error frame seconds link events that have occurred on the local link or remote link.

Dying Gasp: Displays the number of Dying Gasp link events that have occurred on the local link or remote link.

Critical Event: Displays the number of Critical Event link events that have occurred on the local link or remote link.

The following example shows how to view the event logs on port 1/0/1.

Switch#show ethernet-oam event-log interface gigabitEthernet 1/0/1

Gi1/0/1

Event Listing

Type Location Time Stamp

--- --- ---

Critical Event Remote 2016-01-01 08:08:00

Local Event Statistics

Error Symbol Event : 0

Error Frame Event : 0

Error Frame Period Event : 0

Error Frame Seconds Event : 0

Dying Gasp : 0

Critical Event : 0

Remote Event Statistics

Error Symbol Event : 0

Error Frame Event : 0

Error Frame Period Event : 0

Error Frame Seconds Event : 0

Dying Gasp : 0

Critical Event : 1

4 Configuration Example

4.1 Network Requirements

A network administrator wants to manage and troubleshoot the network more effectively, requiring that the link failure and frame errors on the link between Switch A and Switch B can be monitored and reported via the Ethernet OAM feature.

Figure 4-1 Network Topology



4.1.1 Configuration Scheme

To meet the requirement, configure OAM on port 1/0/1 of each switch. Two features can be configured: Link Monitoring and Remote Failure Indication. With Link Monitoring, the frame errors on the link can be monitored and reported; with Remote Failure Indication, the link failure can be monitored and reported.

The overview of configuration is as follows:

1) Enable OAM and configure the OAM mode for port 1/0/1 on each switch. Here we configure OAM mode of the port on Switch A as active, and that on switch B as passive.
2) Configure Link Monitoring for port 1/0/1 on each switch.
3) Configure Remote Failure Indication for port 1/0/1 on each switch.


Demonstrated with T2600G-28TS, the following sections provide configuration procedure in two ways: using the GUI and using the CLI.

4.1.2 Using the GUI

The configurations for Switch A and Switch B are similar. We take Switch A as an example.


1) Choose the menu **MAINTENANCE > Ethernet OAM > Basic Config > Basic Config** to load the following page. Select port 1/0/1, and configure the mode as Active and the state as Enable. Click **Apply**.

Figure 4-2 Basic Configuration

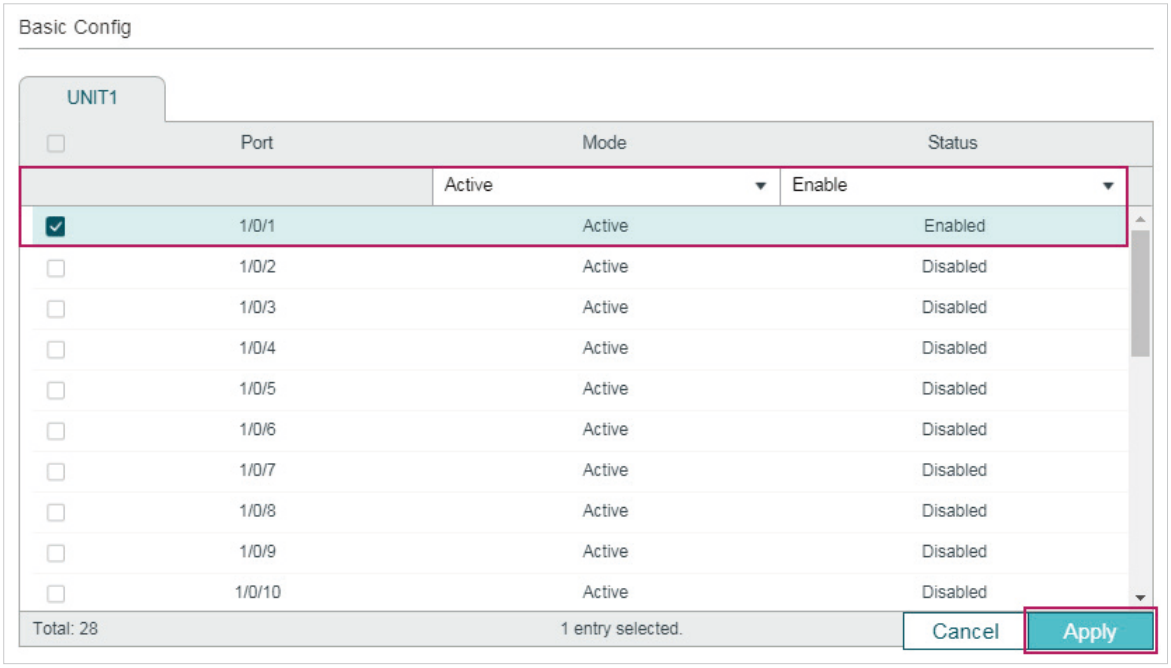


2) Choose the menu **MAINTENANCE > Ethernet OAM > Link Monitoring** to load the following page. Select each Link Event type and configure the relevant parameters on port 1/0/1. Make sure that Event Notification is enabled and specify the threshold and window according to your needs. Here we keep the default parameters. Click **Apply**.

Figure 4-3 Link Monitoring Configuration

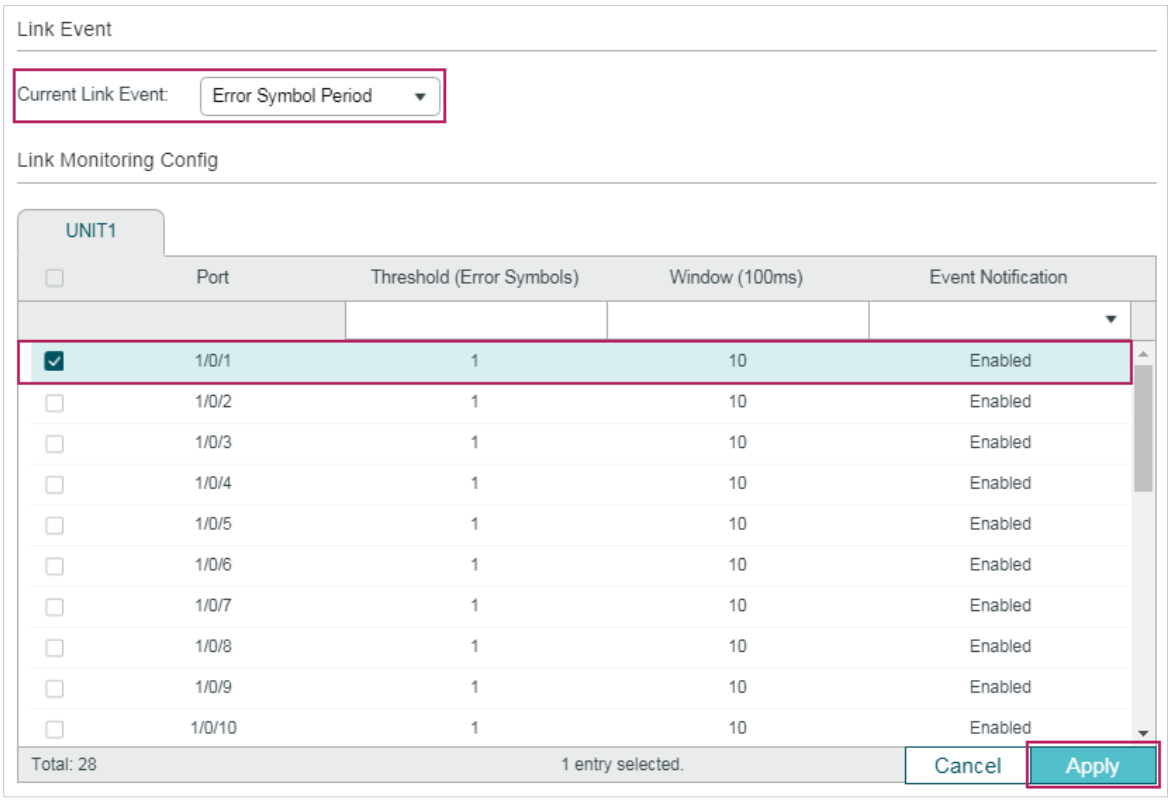


3) Choose the menu **MAINTENANCE > Ethernet OAM > Remote Failure Indication** to load the following page. Select port 1/0/1 and enable Dying Gasp Notification and Critical Event Notification. Click **Apply**.

Figure 4-4 Remote Failure Indication Configuration

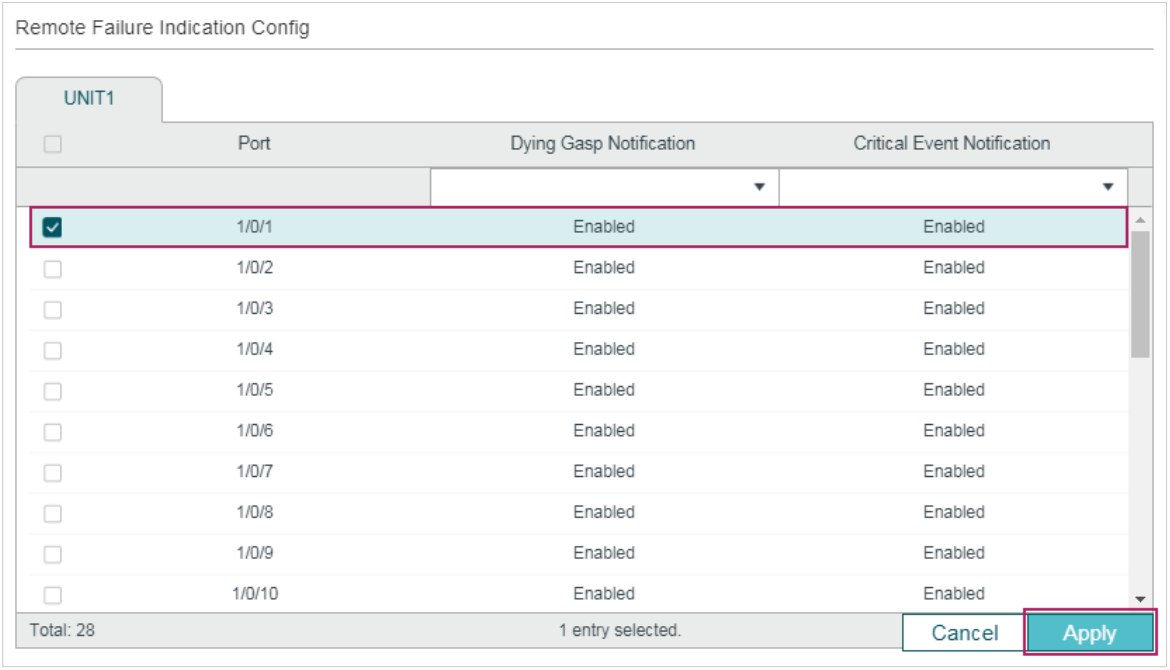

4) Choose the menu **MAINTENANCE > Ethernet OAM > Basic Config > Discovery Info** to load the following page. Select port 1/0/1 to check the OAM status. When the connection status becomes **Operational**, it indicates that OAM connection has been established and OAM works normally.


Figure 4-5 Discovery Infomation

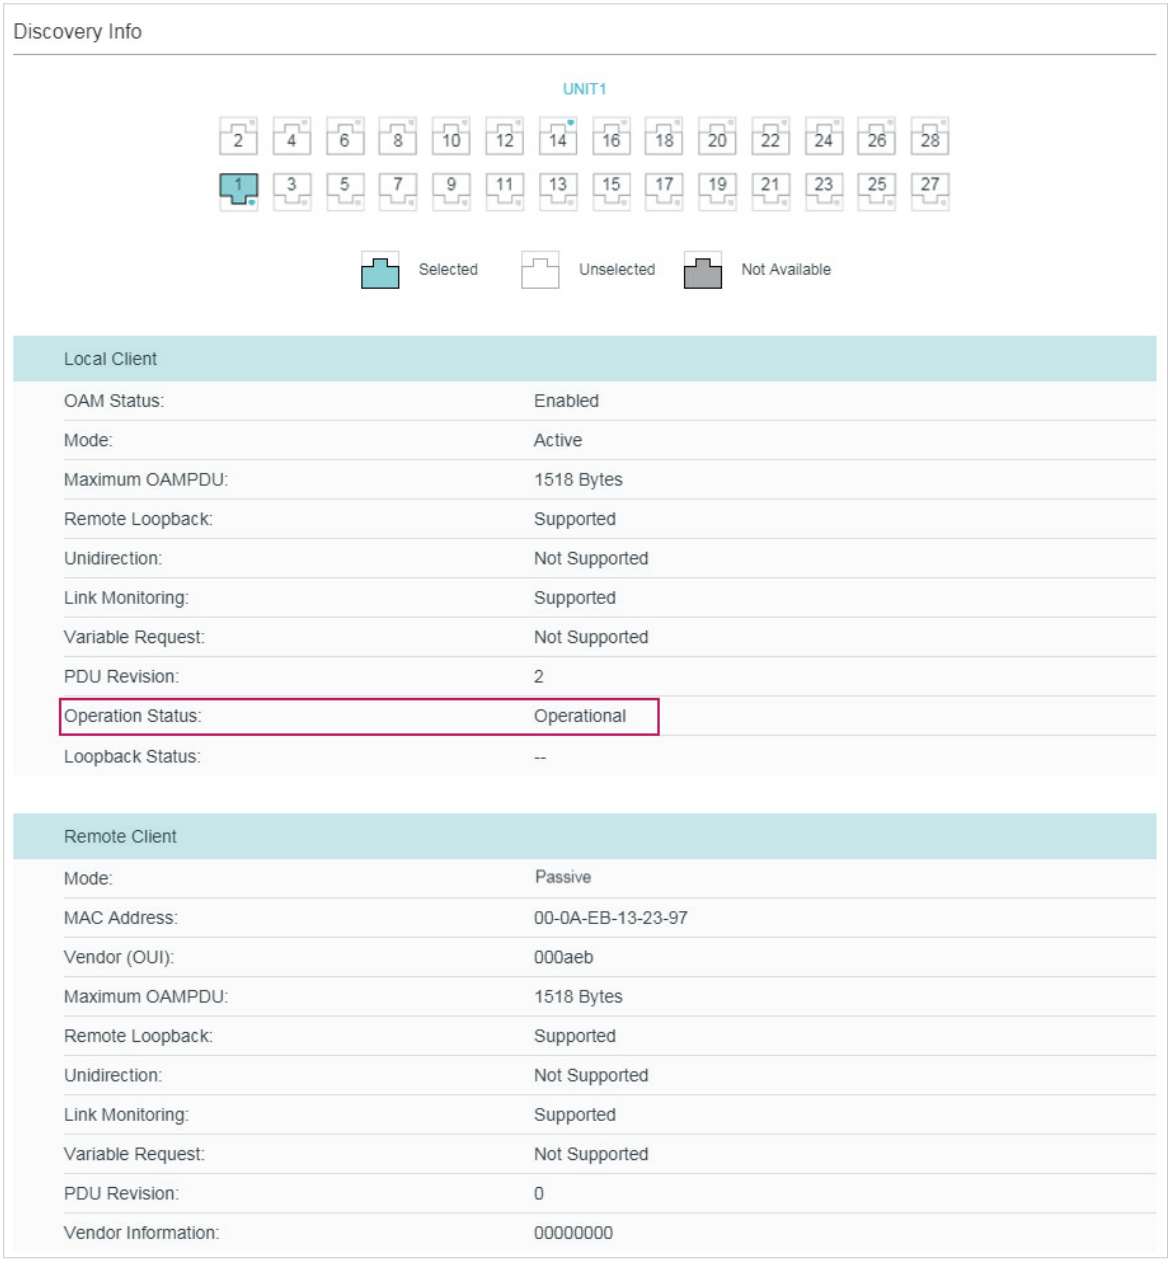

5) Click Save to save the settings.

6) Choose the menu **MAINTENANCE > Ethernet OAM > Statistics > Event Log** to load the following page. Select port 1/0/1 to view the event logs on the port.

Figure 4-6 OAM Event Logs

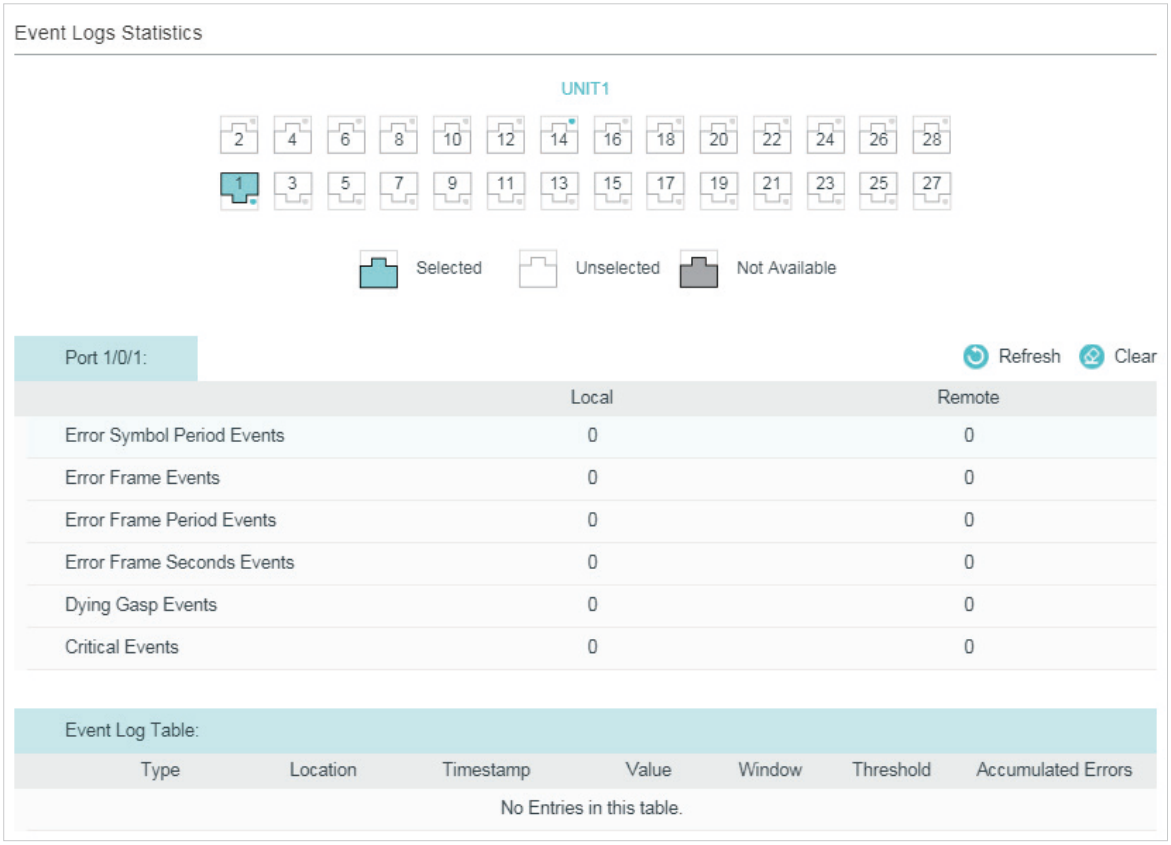

4.1.3 Using the CLI

1) Enable OAM and configure OAM mode as active on port 1/0/1.

   Switch_A#configure

   Switch_A(config)# interface gigabitEthernet 1/0/1

   Switch_A(config-if)#ethernet-oam

   Switch_A(config-if)#ethernet-oam mode active

2) Configure Link Monitoring on the port. Enable Event Notification and keep the threshold and window as the default.

   Switch_A(config-if)#ethernet-oam link-monitor symbol-period notify enable

   Switch_A(config-if)#ethernet-oam link-monitor frame-period notify enable

   Switch_A(config-if)#ethernet-oam link-monitor frame notify enable

   Switch_A(config-if)#ethernet-oam link-monitor frame-seconds notify enable

3) Configure Remote Failure Indication on the port. Enable Dying Gasp Notification and Critical Event Notification.

   Switch_A(config-if)#ethernet-oam remote-failure critical-event notify enable

   Switch_A(config-if)#ethernet-oam remote-failure dying-gasp notify enable

```
Switch_A(config-if)#ethernet-oam link-monitor frame-period notify enable
Switch_A(config-if)#ethernet-oam link-monitor frame notify enable
Switch_A(config-if)#end
Switch_A#copy running-config startup-config
```

Verify the Configuration

Verify the configuration of OAM:

```
Switch_A#show ethernet-oam configuration interface gigabitEthernet 1/0/1
Gi1/0/1
------------------------------------------------------------
OAM             : Enabled
Mode            : Active
Dying Gasp      : Enabled
Critical Event  : Enabled
Remote Loopback OAMPDU : Not Processed

Symbol Period Error
 Notify State   : Enabled
 Window         : 1000 milliseconds
 Threshold      : 1 Error Symbol

Frame Error
 Notify State   : Enabled
 Window         : 1000 milliseconds
 Threshold      : 1 Error Frame

Frame Period Error
 Notify State   : Enabled
 Window         : 148810 Frames
 Threshold      : 1 Error Frame
```

Frame Seconds Error

Notify State : Enabled

Window : 60000 milliseconds

Threshold : 1 Error Seconds

Verify the OAM connection:

Switch_A#show ethernet-oam status interface gigabitEthernet 1/0/1

Gi1/0/1

Local Client

OAM : Enabled

Mode : Active

Max OAMPDU : 1518 Bytes

Remote Loopback : Supported

Unidirection : Not Supported

Link Monitoring : Supported

Variable Request : Not Supported

PDU Revision : 2

Operation Status : Operational

Loopback Status : No Loopback

Remote Client

Mode : Passive

MAC Address : 18-A6-F7-DB-63-81

Vendor(OUI) : 000aeb

Max OAMPDU : 1518 Bytes

Remote Loopback : Supported

Unidirection : Not Supported

Link Monitoring : Supported

```
Variable Request     : Not Supported
PDU Revision         : 1
Loopback Status      : No Loopback
Vendor Information   : 00000000

View the OAM event logs:
Switch_A#show ethernet-oam event-log interface gigabitEthernet 1/0/1
Gi1/0/1
Event Listing
-------------------------------------------------------------
Type              Location              Time Stamp
---------------   ------------          --------------------
Critical Event    Remote                2016-01-01 08:08:00

Local Event Statistics
   Error Symbol Event        : 0
   Error Frame Event         : 0
   Error Frame Period Event    : 0
   Error Frame Seconds Event   : 0
   Dying Gasp                : 0
   Critical Event            : 0
Remote Event Statistics
   Error Symbol Event        : 0
   Error Frame Event         : 0
   Error Frame Period Event    : 0
   Error Frame Seconds Event   : 0
   Dying Gasp                : 0
   Critical Event            : 1
```

5 Appendix: Default Parameters

Default settings of Ethernet OAM are listed in the following tables.

Table 5-1 Ethernet OAM

Parameter	Default Setting
Basic Config	
Mode	Active
Status	Disabled
Link Monitoring	
Error Symbol Period	Threshold : 1 error symbol Window: 10*100 ms Event Notification: Enabled
Error Frame	Threshold : 1 error frame Window: 10*100 ms Event Notification: Enabled
Error Frame Period	Threshold : 1 error frame Window: 1488100 frames Event Notification: Enabled
Error Frame Seconds	Threshold : 1 error second Window: 600*100 ms Event Notification: Enabled
Remote Failure Indication	
Dying Gasp Notification	Enabled
Critical Event Notification	Enabled
Remote Loopback	
Received Remote Loopback	Ignore

Part 37

Configuring DLDP

CHAPTERS

1. Overview
2. DLDP Configuration
3. Appendix: Default Parameters

1 Overview

DLDP (Device Link Detection Protocol) is a Layer 2 protocol that enables devices connected through fiber or twisted-pair Ethernet cables to detect whether a unidirectional link exists.

A unidirectional link occurs whenever traffic sent by a local device is received by its peer device but traffic from the peer device is not received by the local device.

Unidirectional links can cause a variety of problems, such as spanning-tree topology loops. Once detecting a unidirectional link, DLDP can shut down the related port automatically or inform users.

2 DLDP Configuration


Configuration Guidelines

- A DLDP-capable port cannot detect a unidirectional link if it is connected to a DLDP-incapable port of another switch.
- To detect unidirectional links, make sure DLDP is enabled on both sides of the links.

2.1 Using the GUI

Choose the menu **MAINTENANCE > DLDP** to load the following page.

Figure 2-1 Configure DLDP

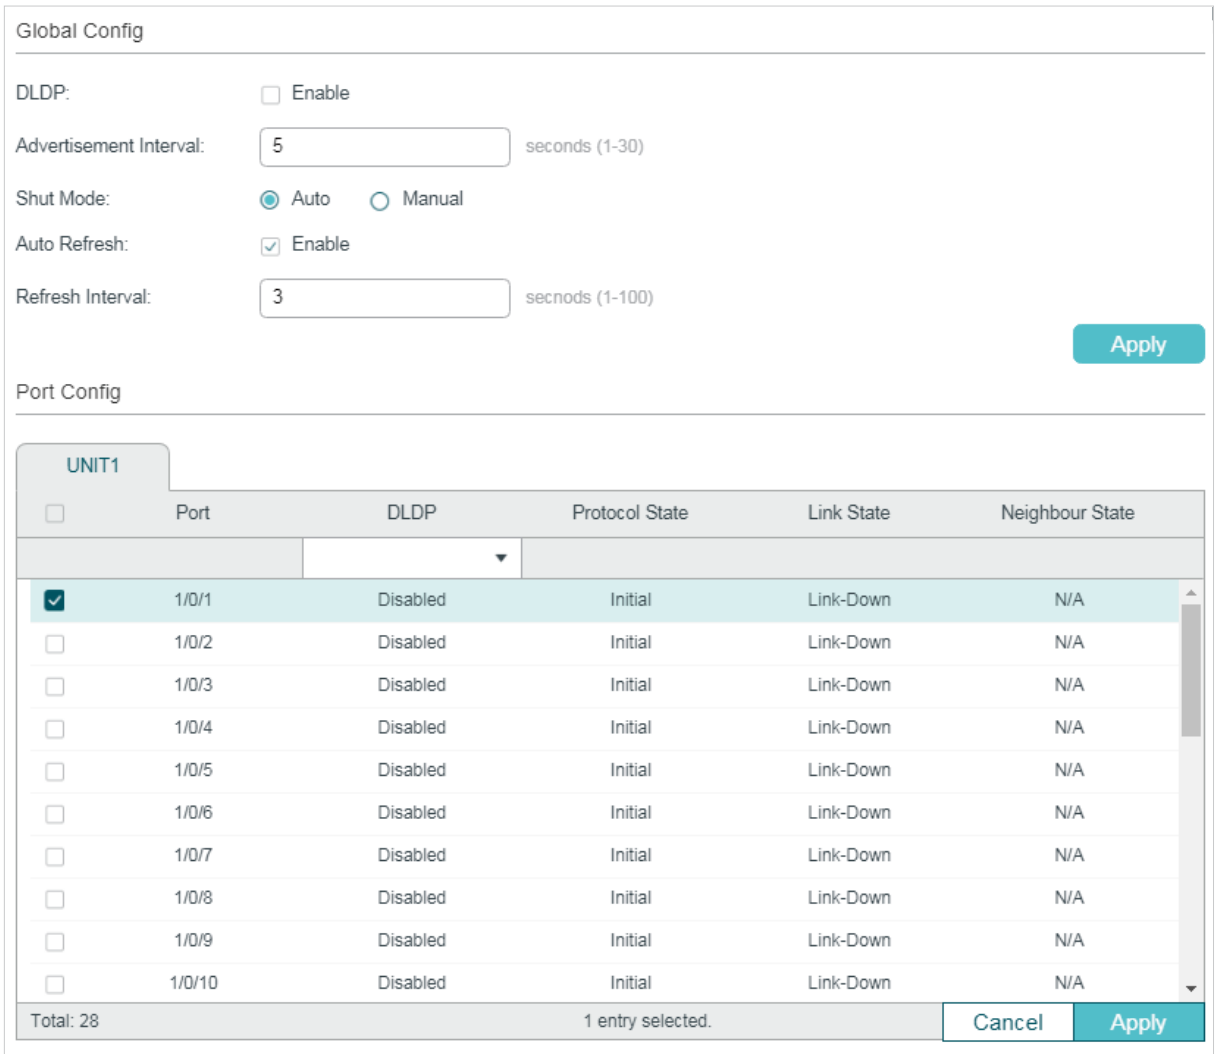

Follow these steps to configure DLDP:

1) In the **Global Config** section, enable DLDP and configure the relevant parameters. Click **Apply**.

DLDP State	Enable or disable DLDP globally.
Advertisement Interval	Configure the interval to send advertisement packets. Valid values are from 1 to 30 seconds, and the default value is 5 seconds.
Shut Mode	Choose how to shut down the port when a unidirectional link is detected: **Auto**: When a unidirectional link is detected on a port, DLDP will generate logs and traps then shut down the port, and DLDP on this port will change to Disabled. **Manual**: When a unidirectional link is detected on a port, DLDP will generate logs and traps, and then users can manually shut down the unidirectional link ports.
Auto Refresh	With this option enabled, the switch will automatically refresh the DLDP information.
Refresh Interval	Specify the time interval at which the switch will refresh the DLDP information. Valid values are from 1 to 100 seconds, and the default value is 3 seconds.

2) In the **Port Config** section, select one or more ports, enable DLDP and click **Apply**. Then you can view the relevant DLDP information in the table.

DLDP	Enable or disable DLDP on the port.
Protocol State	Displays the DLDP protocol state. **Initial**: DLDP is disabled. **Inactive**: DLDP is enabled but the link is down. **Active**: DLDP is enabled and the link is up, or the neighbor entries in this device are empty. **Advertisement**: No unidirectional link is detected (the device has established bidirectional links with all its neighbors) or DLDP has remained in an Active status for more than 5 seconds. **Probe**: In this state, the device will send out Probe packets to detect whether the link is unidirectional. The port enters this state from the Active state if it receives a packet from an unknown neighbor. **Disable**: A unidirectional link is detected.
Link State	Displays the link state. **Link-Down**: The link is down. **Link-Up**: The link is up.
Neighbour State	Displays the neighbour state. **Unknown**: Link detection is in progress. **Unidirectional**: The link between the port and the neighbor is unidirectional. **Bidirectional**: The link between the port and the neighbor is bidirectional.

2.2 Using the CLI

Follow these steps to configure DLDP:

Step 1	**configure** Enter global configuration mode.
Step 2	**dldp** Globally enable DLDP.
Step 3	**dldp interval** *interval-time* Configure the interval of sending advertisement packets on ports that are in the advertisement state. *interval-time*: Specify the interval time. The valid values are from 1 to 30 seconds. By default, it is 5 seconds.
Step 3	**dldp shut-mode** { auto | manual } Configure the DLDP shutdown mode when a unidirectional link is detected. auto: The switch automatically shuts down ports when a unidirectional link is detected. It is the default setting. manual: The switch displays an alert when a unidirectional link is detected. Then the users can manually shut down the unidirectional link ports.
Step 4	**interface {fastEthernet** *port* **| range fastEthernet** *port-list* **| gigabitEthernet** *port* **| range gigabitEthernet** *port-list* **| ten-gigabitEthernet** *port* **| range ten-gigabitEthernet** *port-list***}** Enter interface configuration mode.
Step 5	**dldp** Enable DLDP on the specified port.
Step 6	**show dldp** Verify the global DLDP configuration.
Step 7	**show dldp interface** Verify the DLDP configuration of the ports.
Step 8	**end** Return to privileged EXEC mode.
Step 9	**copy running-config startup-config** Save the settings in the configuration file.

The following example shows how to enable DLDP globally, configure the DLDP interval as 10 seconds and specify the shutdown mode as auto.

Switch#configure

Switch(config)#dldp

Switch(config)#dldp interval 10

Switch(config)#dldp shut-mode auto

Switch(config)#show dldp

DLDP Global State: Enable

DLDP Message Interval: 10

DLDP Shut Mode: Auto

Switch(config)#end

Switch#copy running-config startup-config

The following example shows how to enable DLDP on port 1/0/1.

Switch#configure

Switch(config)#interface gigabitEthernet 1/0/1

Switch(config-if)#dldp

Switch(config-if)#show dldp interface

Port	DLDP State	Protocol State	Link State	Neighbor State
----	----------	--------------	----------	--------------
Gi1/0/1	Enable	Inactive	Link-Down	N/A
Gi1/0/2	Disable	Initial	Link-Down	N/A

...

Switch(config-if)#end

Switch#copy running-config startup-config

3 Appendix: Default Parameters

Default settings of DLDP are listed in the following table.

Table 3-1 Default Settings of DLDP

Parameter	Default Setting
Global Config	
DLDP State	Disable
Advertisement Interval	5 seconds
Shut Mode	Auto
Auto Refresh	Disabled
Refresh Interval	3 seconds
Port Config	
DLDP	Disabled

Part 38

Configuring SNMP & RMON

CHAPTERS

1. SNMP
2. SNMP Configurations
3. Notification Configurations
4. RMON
5. RMON Configurations
6. Configuration Example
7. Appendix: Default Parameters


1 SNMP

1.1 Overview

SNMP (Simple Network Management Protocol) is a standard network management protocol, widely used on TCP/IP networks. It facilitates device management using NMS (Network Management System) software. With SNMP, network managers can view or modify network device information, and troubleshoot according to notifications sent by those devices in a timely manner.

As the following figure shows, the SNMP system consists of an SNMP manager, an SNMP agent, and a MIB (Management Information Base). The SNMP manager can be part of an NMS such as tpNMS. The agent and MIB reside on the managed device such as the switch, router, host or printer. To configure SNMP on the switch, you define the relationship between the manager and the agent.

Figure 1-1 SNMP System

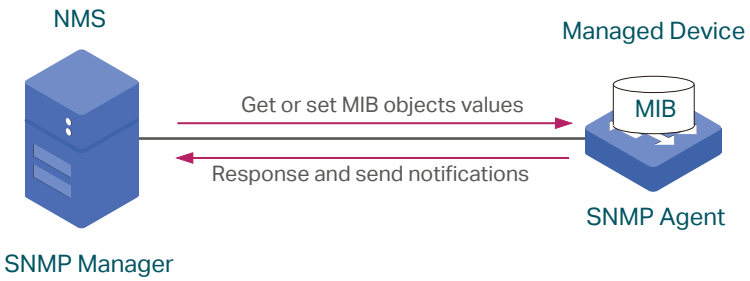

1.2 Basic Concepts

The following basic concepts of SNMP will be introduced: SNMP manager, SNMP agent, MIB (Management Information Base), SNMP entity, SNMP engine, and SNMP version.

SNMP Manager

The SNMP manager uses SNMP to monitor and control SNMP agents, providing a friendly management interface for the administrator to manage network devices conveniently. It can get an MIB objects values from an agent or store a value of MIB object into the agent. Also, it receives notifications from the agents so as to learn the condition of the network.

SNMP Agent


An SNMP agent is a process running on the managed device. It contains MIB objects whose values can be requested or changed by the SNMP manager. An agent can send unsolicited trap messages to notify the SNMP manager that a significant event has occurred on the agent.

MIB

A MIB is a collection of managed objects that is organized hierarchically. The objects define the attributes of the managed device, including the names, status, access rights, and data types. Each object can be addressed through an object identifier (OID).

As the following figure shows, the MIB hierarchy can be depicted as a tree with a nameless root, the levels of which are assigned by different organizations. The top-level MIB object IDs belong to different standards organizations, while lower-level object IDs are allocated by associated organizations. Vendors can define private branches that include managed objects for their own products.

Figure 1-2 MIB Tree

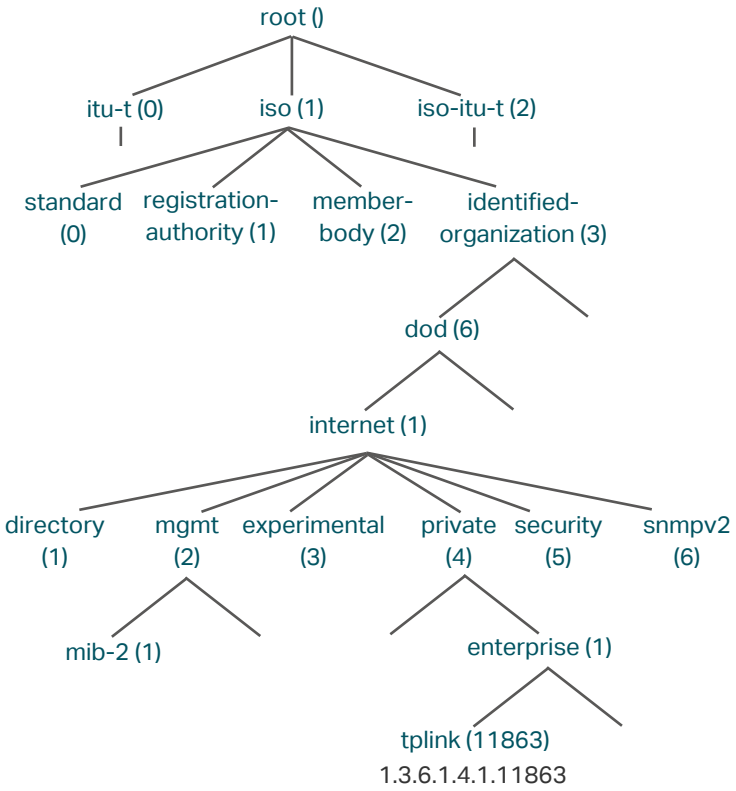

TP-Link switches provide private MIBs that can be identified by the OID 1.3.6.1.4.1.11863. The MIB file can be found on the provided CD or the download center of our official website: https://www.tp-link.com/en/download-center.html.

Also, TP-Link switches support the following public MIBs:

- LLDP.mib
- LLDP-Ext-Dot1.mib
- LLDP-Ext-MED.mib
- RFC1213.mib
- RFC1493-Bridge.mib
- RFC1757-RMON.mib
- RFC2618-RADIUS-Auth-Client.mib

- RFC2620-RADIUS-Acc-Client.mib
- RFC2674-pBridge.mib
- RFC2674-qBridge.mib
- RFC2863-pBridge.mib
- RFC2925-Disman-Ping.mib
- RFC2925-Disman-Traceroute.mib

For detail information about the supported public MIBs, see *Supported Public MIBs for TP-Link Switches* which can be found on the training center of our website:

https://www.tp-link.com/en/configuration-guides.html

SNMP Entity

An SNMP entity is a device running the SNMP protocol. Both the SNMP manager and SNMP agent are SNMP entities.

SNMP Engine

An SNMP engine is a part of the SNMP entity. Every SNMP entity has one and only one engine. An SNMP engine provides services for ending and receiving messages, authenticating and encrypting messages, and controlling access to managed objects.

An SNMP engine can be uniquely identified by an engine ID within an administrative domain. Since there is a one-to-one association between SNMP engines and SNMP entities, we can also use the engine ID to uniquely and unambiguously identify the SNMP entity within that administrative domain.

SNMP Version

The device supports three SNMP versions: SNMPv1, SNMPv2c and SNMPv3. *Table 1-1* lists features supported by different SNMP versions, and *Table 1-2* shows corresponding application scenarios.

Table 1-1 Features Supported by Different SNMP Versions

Feature	SNMPv1	SNMPv2c	SNMPv3
Access Control	Based on SNMP Community and MIB View	Based on SNMP Community and MIB View	Based on SNMP User, Group, and MIB View
Authentication and Privacy	Based on Community Name	Based on Community Name	Supported authentication and privacy modes are as follows: Authentication: MD5/SHA Privacy: DES
Trap	Supported	Supported	Supported
Inform	Not supported	Supported	Supported

Table 1-2 Application Scenarios of Different Versions

Version	Application Scenario
SNMPv1	Applicable to small-scale networks with simple networking, low security requirements or good stability (such as campus networks and small enterprise networks).
SNMPv2c	Applicable to medium and large-scale networks with low security requirements and those with good security (such as VPNs), but with busy services in which the traffic congestion may occur. You can configure Inform to ensure that the notifications from managed devices are received by network managers.
SNMPv3	Applicable to networks of various scales, particularly those that have high security requirements and require devices to be managed by authenticated administrators (such as when data needs to be transferred on public networks).

2 SNMP Configurations

To complete the SNMP configuration, choose an SNMP version according to network requirements and supportability of the NMS software, and then follow these steps:

- Choose SNMPv1 or SNMPv2c

1) Enable SNMP.
2) Create an SNMP view for managed objects.
3) Create a community, specify the accessible view and the corresponding access rights.

- Choose SNMPv3


1) Enable SNMP.
2) Create an SNMP view for managed objects.
3) Create an SNMP group, and specify the access rights.
4) Create SNMP users, and configure the authentication mode, privacy mode and corresponding passwords.

2.1 Using the GUI

2.1.1 Enabling SNMP

Choose the **MAINTENANCE > SNMP > Global Config** to load the following page.

Figure 2-1 Global Config

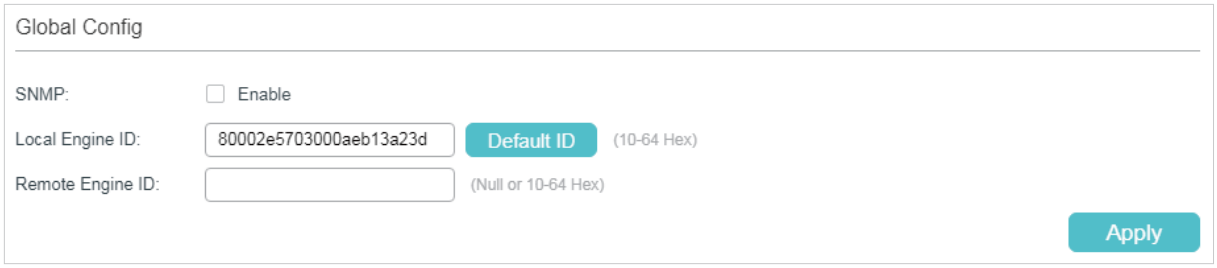

Follow these steps to configure SNMP globally:

1) In the **Global Config** section, enable SNMP and configure the local and remote engine ID.

SNMP	Enable or disable SNMP globally.

Local Engine ID	Set the engine ID of the local SNMP agent (the switch) with 10 to 64 hexadecimal digits. By default, the switch generates the engine ID using TP-Link's enterprise number (80002e5703) and its own MAC address. The local engine ID is a unique alphanumeric string used to identify the SNMP engine. As an SNMP agent contains only one SNMP engine, the local engine ID can uniquely identify the SNMP agent.
Remote Engine ID	Set the ID of the remote SNMP manager with 10 to 64 hexadecimal digits. If no remote SNMP manager is needed, you can leave this field empty. The remote engine ID is a unique alphanumeric string. It is used to identify the SNMP engine on the remote device thats receives inform messages from Switch.

2) Click **Apply**.


Note:

- The engine ID must contain an even number of characters.
- Changing the value of the SNMP engine ID has important side effects. In SNMPv3, a user's password is converted to an MD5 or SHA security digest based on the password and the engine ID. If the value of local engine ID changes, the switch will automatically delete all SNMPv3 local users as their security digests become invalid. Similarly, all SNMPv3 remote users will be deleted if the value of remote engine ID changes.

2.1.2 Creating an SNMP View

Choose the menu **MAINTENANCE > SNMP > Global Config** to load the following page.

Figure 2-2 SNMP View Config

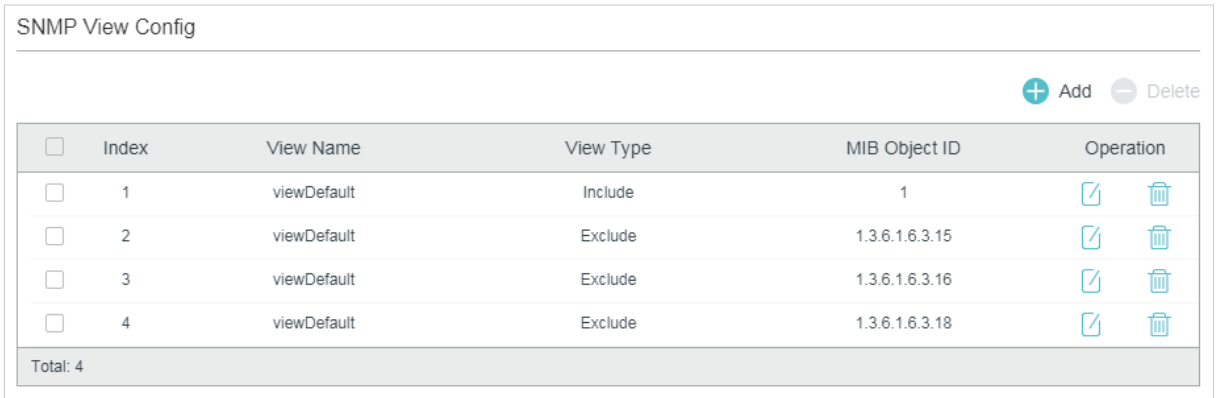


NMS manages MIB objects based on the SNMP view. An SNMP view is a subset of a MIB. The system provides a default view named viewDefault, and you can create other SNMP views according to your needs.

Follow these steps to create an SNMP view:

1) Click Add to load the following page. Enter a view name, and specify the view type and a MIB object that is related to the view.

Figure 2-3 Creating an SNMP View

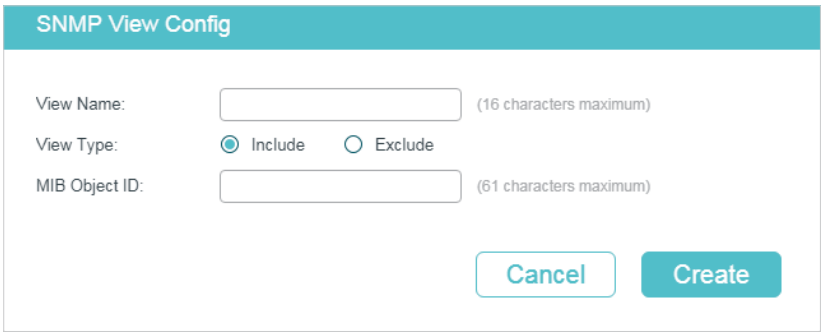


View Name	Set the view name with 1 to 16 characters. A complete view consists of all MIB objects that have the same view name.
View Type	Set the view to include or exclude the related MIB object. By default, it is include. **Include:** The NMS can view or manage the function indicated by the object. **Exclude:** The NMS cannot view or manage the function indicated by the object.
MIB Object ID	Enter a MIB Object ID to specify a specific function of the device. When a MIB Object ID is specified, all its child Object IDs are specified. For specific ID rules, refer to the device related MIBs.

2) Click **Create**.

2.1.3 Creating SNMP Communities (For SNMP v1/v2c)

Choose the menu **MAINTENANCE > SNMP > SNMP v1/v2c** and click Add to load the following page.

Figure 2-4 Creating an SNMP Community

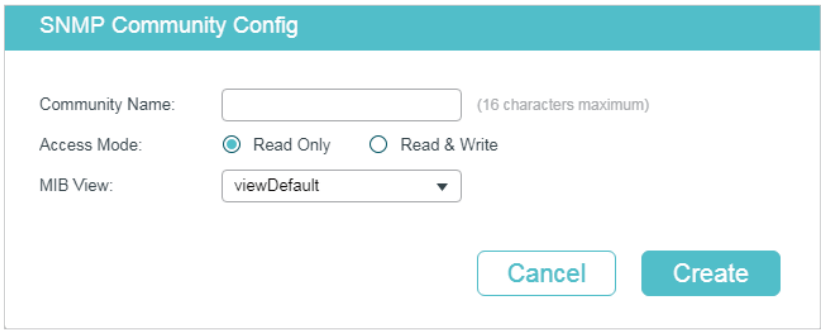

1) Set the community name, access rights and the related view.

Community Name	Configure the community name. This community name is used like a password to give the NMS access to MIB objects in the switch's SNMP agent.
Access Mode	Specify the access right to the related view. The default is read-only. **Read Only:** The NMS can view but not modify parameters of the specified view. **Read & Write:** The NMS can view and modify parameters of the specified view.

MIB View	Choose an SNMP view that allows the community to access. The default view is viewDefault.


2) Click **Create**.

2.1.4 Creating an SNMP Group (For SNMP v3)

Create an SNMP group and configure related parameters.

Choose the menu **MAINTENANCE > SNMP > SNMP v3 > SNMP Group** and click Add to load the following page.

Figure 2-5 Creating an SNMP Group

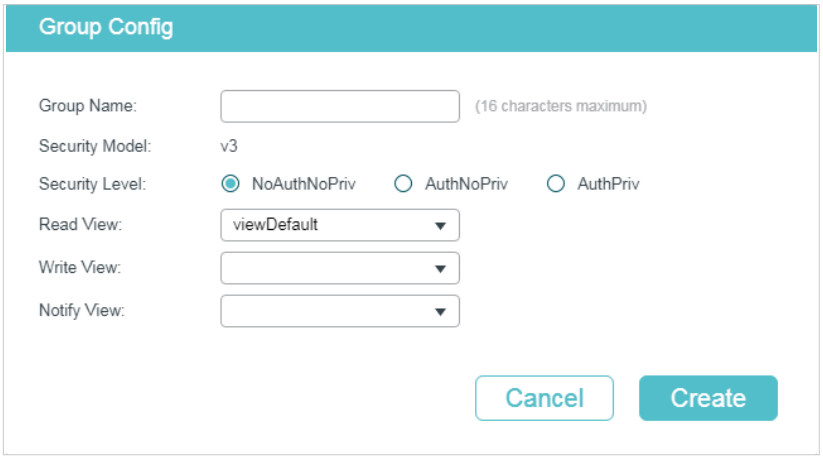

Follow these steps to create an SNMP Group:

1) Assign a name to the group, then set the security level and the read view, write view and notify view.

Group Name	Set the SNMP group name. You may enter 1 to 16 characters. The identifier of a group consists of a group name, security model and security level. Groups of the same identifier are recognized as being in the same group.
Security Model	Displays the security model. SNMPv3 uses v3, the most secure model.
Security Level	Set the security level which for the SNMPv3 group. The default is NoAuthNoPriv. **NoAuthNoPriv:** No authentication mode or privacy mode is applied to check or encrypt packets. **AuthNoPriv:** An authentication mode is applied to check packets, but no privacy mode is applied to encrypt them. **AuthPriv:** An authentication mode and a privacy mode are applied to check and encrypt packets.
Read View	Choose a view to allow parameters to be viewed but not modified by the NMS. The view is necessary for any group. By default, the view is viewDefault. To modify parameters of a view, you need to add it to Write View.


Write View	Choose a view to allow parameters to be modified but not viewed by the NMS. The default is none. The view in Write View should also be added to Read View.
Notify View	Choose a view to allow it to send notifications to the NMS.

2) Click **Create**.

2.1.5 Creating SNMP Users (For SNMP v3)

Choose the menu **MAINTENANCE > SNMP > SNMP v3 > SNMP User** and click Add to load the following page.

Figure 2-6 Creating an SNMP User

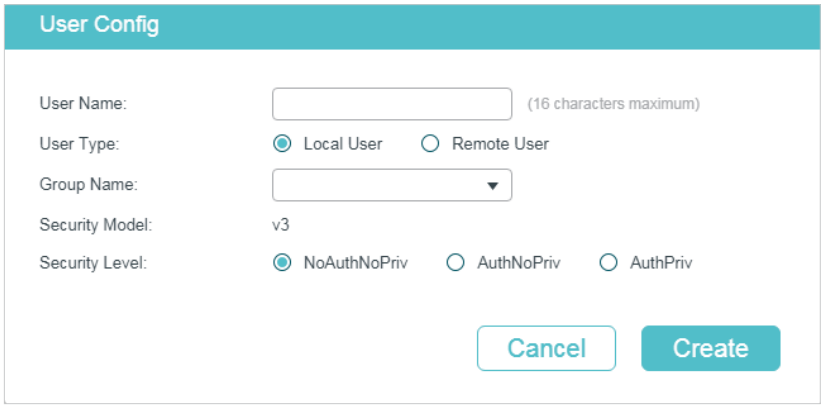

Follow these steps to create an SNMP user:

1) Specify the user name, user type and the group which the user belongs to. Then configure the security level.

User Name	Set the SNMP user name. You may use 1 to 16 characters. For different entries, user names cannot be the same.
User Type	Choose a user type to indicate the location of the user. The default is Local User. **Local User:** The user resides on the local engine, which is the SNMP agent of the switch. **Remote User:** The user resides on the NMS. As the remote engine ID and user password are used to compute the authentication and privacy digests, before configuring a remote user, you need to set the remote engine ID first.
Group Name	Choose the group that the user belongs to. Users with the same Group Name, Security Model and Security Level will be in the same group.
Security Model	Displays the security model. SNMPv3 uses v3, the most secure model.

Security Level	Set the security level. The security level from highest to lowest is: NoAuthNoPriv, AuthNoPriv, AuthPriv, and the default is NoAuthNoPriv. The security level of the user should not be lower than the group it belongs to. **NoAuthNoPriv:** Uses a username match for authentication, and no encryption is implemented. **AuthNoPriv:** An authentication mode is applied to check packets, but no privacy mode is applied to encrypt them. **AuthPriv:** An authentication mode and a privacy mode are applied to check and encrypt packets.

2) If you have chosen **AuthNoPriv** or **AuthPriv** as the security level, you need to set corresponding Authentication Mode or Privacy Mode. If not, skip the step.

Authentication Mode	With AuthNoPriv or AuthPriv selected, configure the authentication mode and password. Two authentication modes are provided: **MD5:** Enable the HMAC-MD5 algorithm for authentication. **SHA:** Enable the SHA (Secure Hash Algorithm) algorithm for authentication. SHA algorithm is securer than MD5 algorithm.
Authentication Password	Set the password for authentication.
Privacy Mode	With AuthPriv selected, configure the privacy mode and password for encryption. The switch uses the DES (Data Encryption Standard) algorithm for encryption.
Privacy Password	Set the password for encryption.

3) Click **Create**.

2.2 Using the CLI

2.2.1 Enabling SNMP

Step 1	**configure** Enter global configuration mode.
Step 2	**snmp-server** Enabling SNMP.

Step 3	**snmp-server engineID** {[**local** *local-engineID*] [**remote** *remote-engineID*]} Configure the local engine ID and the remote engine ID. *local-engineID:* Enter the engine ID of the local SNMP agent (the switch) with 10 to 64 hexadecimal digits. By default, the switch generates the engine ID using TP-Link's enterprise number (80002e5703) and its own MAC address. The local engine ID is a unique alphanumeric string used to identify the SNMP engine. As an SNMP agent contains only one SNMP engine, the local engine ID can uniquely identify the SNMP agent. *remote-engineID:* Enter the remote engine ID with 10 to 64 hexadecimal digits. The ID must contain an even number of characters. The remote engine ID is a unique alphanumeric string. It is used to identify the SNMP engine on the remote device that receives inform messages from switch. *Note:* Changing the value of the SNMP engine ID has important side effects. In SNMPv3, a user's password is converted to an MD5 or SHA security digest based on the password and the engine ID. If the value of local engine ID changes, the switch will automatically delete all SNMPv3 local users as their security digests become invalid. Similarly, all SNMPv3 remote users will be deleted if the value of remote engine ID changes.
Step 4	**show snmp-server** Displays the global settings of SNMP.
Step 5	**show smnp-server engineID** Displays the engine ID of SNMP.
Step 6	**end** Return to privileged EXEC mode.
Step 7	**copy running-config startup-config** Save the settings in the configuration file.

The following example shows how to enable SNMP and set 123456789a as the remote engine ID:

Switch#configure

Switch(config)#snmp-server

Switch(config)#snmp-server engineID remote 123456789a

Switch(config)#show snmp-server

SNMP agent is enabled.

0 SNMP packets input

0 Bad SNMP version errors

0 Unknown community name

0 Illegal operation for community name supplied

0 Encoding errors

0 Number of requested variables

0 Number of altered variables

0 Get-request PDUs

0 Get-next PDUs

0 Set-request PDUs

0 SNMP packets output

0 Too big errors (Maximum packet size 1500)

0 No such name errors

0 Bad value errors

0 General errors

0 Response PDUs

0 Trap PDUs

Switch(config)#show snmp-server engineID

Local engine ID: 80002e5703000aeb13a23d

Remote engine ID: 123456789a

Switch(config)#end

Switch#copy running-config startup-config

2.2.2 Creating an SNMP View

Specify the OID (Object Identifier) of the view to determine objects to be managed.

Step 1	**configure** Enter global configuration mode.
Step 2	**snmp-server view** *name mib-oid* {include | exclude} Configure the view. *name:* Enter a view name with 1 to 16 characters. You can create multiple entries with each associated to a MIB object. A complete view consists of all MIB objects that have the same view name. *mib-oid:* Enter the MIB object ID with 1 to 61 characters. include | exclude: Specify a view type. Include indicates that objects of the view can be managed by the NMS, while exclude indicates that objects of the view cannot be managed by the NMS.

Step 3	**show snmp-server view** Displays the view table.
Step 4	**end** Return to Privileged EXEC Mode.
Step 5	**copy running-config startup-config** Save the settings in the configuration file.

The following example shows how to set a view to allow the NMS to manage all function. Name the view as View:

Switch#configure

Switch(config)#snmp-server view View 1 include

Switch(config)#show snmp-server view

No. View Name Type MOID

--- ---------- ------- ----

1 viewDefault include 1

2 viewDefault exclude 1.3.6.1.6.3.15

3 viewDefault exclude 1.3.6.1.6.3.16

4 viewDefault exclude 1.3.6.1.6.3.18

5 View include 1

Switch(config)#end

Switch#copy running-config startup-config

2.2.3 Creating SNMP Communities (For SNMP v1/v2c)

For SNMPv1 and SNMPv2c the Community Name is used for authentication, functioning as the password.

Step 1	**configure** Enter global configuration mode.

Step 2	**snmp-server community** *name* { read-only | read-write } [*mib-view*] Configure the community. *name:* Enter a group name with 1 to 16 characters. *read-only | read-write:* Choose an access permissions for the community. Read-only indicates that the NMS can view but cannot modify parameters of the view, while read-write indicates that the NMS can both view and modify. *mib-view:* Enter a view to allow it to be accessed by the community. The name contains 1 to 61 characters. The default view is viewDefault.
Step 3	**show snmp-server community** Displays community entries.
Step 4	**end** Return to privileged EXEC mode.
Step 5	**copy running-config startup-config** Save the settings in the configuration file.

The following example shows how to set an SNMP community. Name the community as the nms-monitor, and allow the NMS to view and modify parameters of View:

Switch#configure

Switch(config)#snmp-server community nms-monitor read-write View

Switch(config)#show snmp-server community

Index	Name	Type	MIB-View
1	nms-monitor	read-write	View

Switch(config)#end

Switch#copy running-config startup-config

2.2.4 Creating an SNMP Group (For SNMPv3)

Create an SNMP group and set user access control with read, write and notify views. Meanwhile, set the authentication and privacy modes to secure the communication between the NMS and managed devices.

Step 1	**configure** Enter global configuration mode.

Step 2	**snmp-server group** *name* [**smode** v3] [**slev** {noAuthNoPriv | authNoPriv | authPriv}] [**read** *read-view*] [**write** *write-view*] [**notify** *notify-view*] Create an SNMP group. *name:* Enter the group name with 1 to 16 characters. The identifier of a group consists of a group name, security model and security level. Groups of the same identifier are recognized as being in the same group. v3: Configure the security mode for the group. v3 indicates SNMPv3, the most secure model. noAuthNoPriv | authNoPriv | authPriv*:* Choose a security level among noAuthNoPriv (no authorization and no encryption), authNoPriv (authorization and no encryption), authPriv (authorization and encryption). The default is noAuthNoPriv. Please note that if you have chosen v1 or v2c as the security mode, the security level cannot be configured. *read-view:* Set the view to be the Read view. Then the NMS can view parameters of the specified view. *write-view:* Set the view to be the Write view. Then the NMS can modify parameters of the specified view. Please note that the view in the Write view should also be in the Read view. *notify-view:* Set the view to be the Notify view. Then the NMS can get notifications of the specified view from the agent.
Step 3	**show snmp-server group** Displays SNMP group entries.
Step 4	**end** Return to Privileged EXEC Mode.
Step 5	**copy running-config startup-config** Save the settings in the configuration file.

The following example shows how to create an SNMPv3 group with the group name as nms1, the security level as authPriv, and the Read and Notify view are both View1:

Switch#configure

Switch(config)#snmp-server group nms1 **smode** v3 **slev** authPriv **read** View1 **notify** View1

Switch(config)#show snmp-server group

No.	Name	Sec-Mode	Sec-Lev	Read-View	Write-View	Notify-View
---	--------	----------	----------	----------	----------	----------
1	nms1	v3	authPriv	View1		View1

Switch(config)#end

Switch#copy running-config startup-config

2.2.5 Creating SNMP Users (For SNMPv3)

Configure users of the SNMP group. Users belong to the group, and use the same security level and access rights as the group.

Step 1	**configure** Enter global configuration mode.
Step 2	**snmp-server user** *name* { local | remote } *group-name* [**smode** v3] [**slev** { noAuthNoPriv | authNoPriv | authPriv }] [**cmode** { none | MD5 | SHA }] [**cpwd** *confirm-pwd*] [**emode** { none | DES }] [**epwd** *encrypt-pwd*] Configure users of the SNMP group. *name:* Enter the user name with 1 to 16 characters. local | remote*:* Choose a user type. Local indicates that the user is connected to a local SNMP engine, while remote means that the user is connected to a remote SNMP engine. As the remote engine ID and user password are used to compute the authentication and privacy digests, before configuring a remote user, you need to set the remote engine ID first. *group-name:* Enter the name of the group which the user belongs to. The group is determined by the group name, security mode and security level. v3*:* Configure the security mode for the user. v3 indicates SNMPv3, the most secure model. noAuthNoPriv | authNoPriv | authPriv*:* Choose a security level from noAuthNoPriv (no authorization and no encryption), authNoPriv (authorization and no encryption), authPriv (authorization and encryption). The security level from highest to lowest is: noAuthNoPriv, authNoPriv, authPriv, and the default is noAuthNoPriv. The security level of the user should not be lower than the group it belongs to. none | MD5 | SHA: Choose an authentication algorithm. SHA authentication mode has a higher security than MD5 mode. By default, the Authentication Mode is none. *confirm-pwd:* Enter an authentication password with 1 to 16 characters excluding question mark and space. This password in the configuration file will be displayed in the symmetric encrypted form. none | DES*:* Choose a privacy mode. None indicates no privacy method is used, and DES indicates DES encryption method is used. By default, the Privacy Mode is none. *encrypt-pwd:* Enter a privacy password with 1 to 16 characters excluding question mark and space. This password in the configuration file will be displayed in the symmetric encrypted form.
Step 3	**show snmp-server user** Displays the information of SNMP users.
Step 4	**end** Return to privileged EXEC mode.
Step 5	**copy running-config startup-config** Save the settings in the configuration file.

The following example shows how to create an SNMP user and add it to group nms1. Name the user as admin, and set the user as a remote user, SNMPv3 as the security mode, authPriv as the security level, SHA as the authentication algorithm, 1234 as the authentication password, DES as the privacy algorithm and 1234 as the privacy password:

Switch#configure

Switch(config)#snmp-server user admin remote nms1 **smode** v3 **slev** authPriv **cmode** SHA **cpwd** 1234 **emode** DES **epwd** 1234

Switch(config)#show snmp-server user

No.	U-Name	U-Type	G-Name	S-Mode	S-Lev	A-Mode	P-Mode
---	------	------	------	------	-----	------	------
1	admin	remote	nms1	v3	authPriv	SHA	DES

Switch(config)#end

Switch#copy running-config startup-config

3 Notification Configurations

With Notification enabled, the switch can send notifications to the NMS about important events relating to the device's operation. This facilitates the monitoring and management of the NMS.

To configure SNMP notification, follow these steps:

1) Configure the information of NMS hosts.
2) Enable SNMP traps.

Configuration Guidelines


To guarantee the communication between the switch and the NMS, ensure the switch and the NMS are able to reach one another.

3.1 Using the GUI

3.1.1 Configuring the Information of NMS Hosts

Choose the menu **MAINTENANCE > SNMP > Notification > Notification Config** and click Add to load the following page.

Figure 3-1 Adding an NMS Host

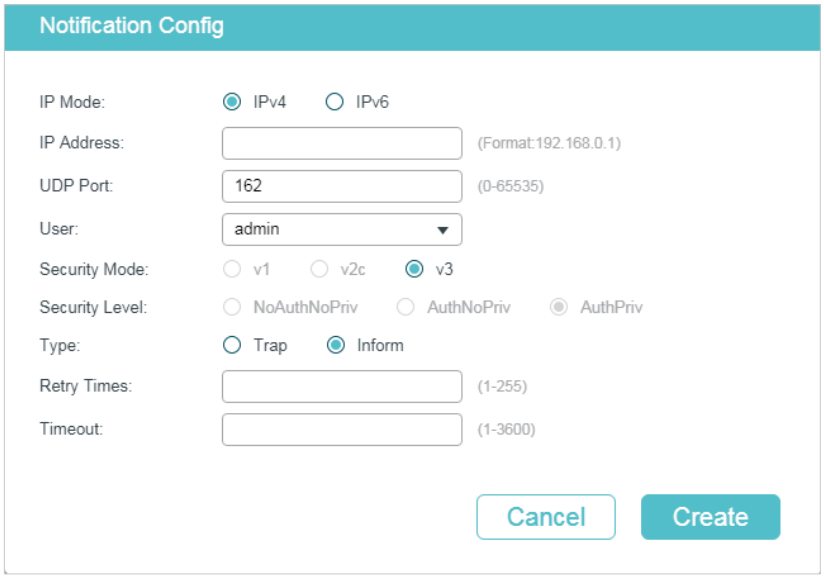

Follow these steps to add an NMS host:

1) Choose the IP mode according to the network environment, and specify the IP address of the NMS host and the UDP port that receives notifications.

IP Mode	Choose an IP mode for the NMS host.
IP Address	If you set the **IP Mode** as IPv4, specify an IPv4 address for the NMS host. If you set the **IP Mode** as IPv6, specify an IPv6 address for the NMS host.
UDP Port	Specify a UDP port on the NMS host to receive notifications. The default is port 162. For communication security, we recommend that you change the port number under the condition that communications on other UDP ports are not affected.

2) Specify the user name or community name used by the NMS host, and configure the security model and security level based on the settings of the user or community.

User Name	Choose the user name or community name used by the NMS host.
Security Mode	If a community name (created for SNMPv1/v2c) is entered in User Name, specify the security mode as v1 or v2c. If a user name (created for SNMPv3) is entered in User Name, here displays the security mode as v3. The NMS host should use the corresponding SNMP version.
Security Level	If Security Level is v3, displays the security level of the user.

3) Choose a notification type based on the SNMP version. If you choose the Inform type, you need to set retry times and timeout interval.


Type	Choose a notification type for the NMS host. For SNMPv1, the supported type is trap. For SNMPv2c and SNMPv3, you can configure the type as trap or inform. Trap: The switch will send Trap messages to the NMS host when certain events occur. When the NMS host receives a Trap message, it will not send a response to the switch. Thus the switch cannot tell whether a message is received or not, and the messages that are not received will not be resent. Inform: The switch will send Inform messages to the NMS host when certain events occur. When the NMS host receives an Inform message, it sends a response to the switch. If the switch does not receive a response within the timeout interval, it will resend the Inform message. Therefore, Informs are more reliable than Traps.
Retry	Set the retry times for Informs. The switch will resend the Inform message if it does not receive response from the NMS host within the timeout interval. It will stop sending Inform messages when the retry time reaches the limit.
Timeout	Set the length of time that the switch waits for a response from the NMS host after sending an inform message.

4) Click **Create**.

3.1.2 Enabling SNMP Traps

Choose the menu **MAINTENANCE > SNMP > Notification > Trap Config** to load the following page.

Figure 3-2 Enabling SNMP Traps

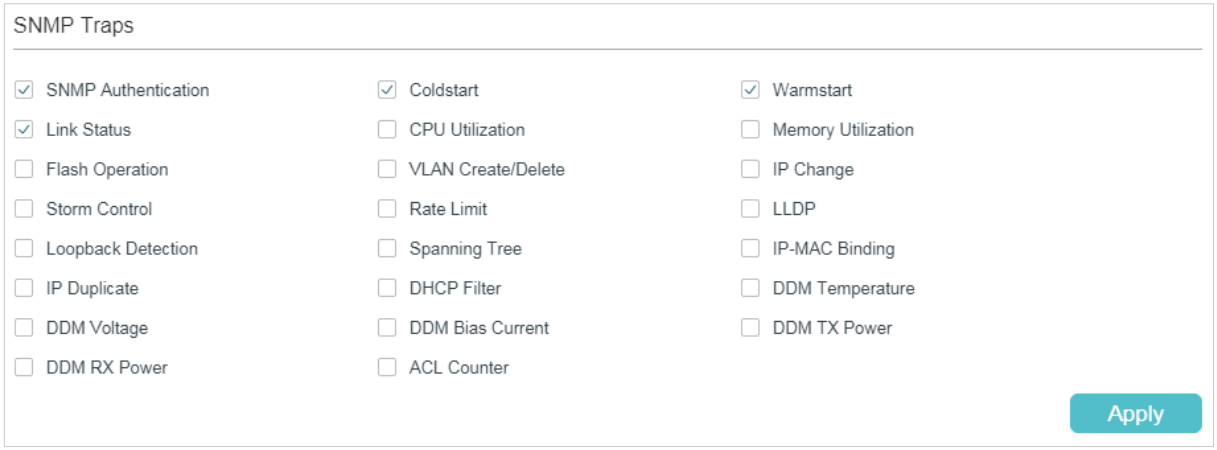

The supported traps are listed on the page. Follow these steps to enable any or all of these traps:

1) Select the traps to enable according to your needs.

SNMP Authentication	Triggered when a received SNMP request fails the authentication.
Coldstart	Indicates an SNMP initialization caused by the reinitialization of the switch system. The trap can be triggered when you reboot the switch.
Warmstart	Indicates the SNMP feature on the switch is reinitialized with the physical configuration unchanged. The trap can be triggered if you disable and then enable SNMP after the SNMP is completely configured and enabled.
Link Status	Triggered when the switch detects a link status change.
CPU Utilization	Triggered when the utilization rate of the CPU has exceeded the limit that you have set. The limit of CPU utilization rate for the switch is 80% by default.
Memory Utilization	Triggered when the memory utilization exceeds 80%.
Flash Operation	Triggered when flash is modified during operations such as backup, reset, firmware upgrade, configuration import, and so on.
VLAN Create/Delete	Triggered when certain VLANs are created or deleted successfully.
IP Change	Monitors the IP address changes of each interface. The trap can be triggered when the IP address of any interface is changed.
Storm Control	Monitors whether the storm rate has reached the limit that you have set. The trap can be triggered when the feature is enabled and broadcast/multicast/unknown-unicast frames are sent to the port with a rate higher than what you have set.

Rate Limit	Monitors whether the bandwidth has reached the limit you have set. The trap can be triggered when the Rate Limit feature is enabled and packets are sent to the port with a rate higher than what you have set.
LLDP	Indicates LLDP topology changes. The trap can be triggered when a new remote device attached to a local port, or a remote device disconnected or moved from one port to another.
Loopback Detection	Triggered when the switch detects a loopback with loopback detection feature, or when a loopback is cleared.
Spanning Tree	Indicates spanning tree changes. The trap can be triggered in the following situations: a port changes from non-forwarding state to forwarding state or the other way round; a port receives a packet with TC flag or a TCN packet.
PoE	Only for products that support PoE feature. Allow all PoE-related traps, including: **Over-max-pwr-budget**: Triggered when the total power required by the connected PDs exceeds the maximum power the PoE switch can supply. **Port-pwr-change**: Triggered when a port starts to supply power or stops supplying power. **Port-pwr-deny**: Triggered when the switch powers off PDs on low-priority PoE ports. When the total power required by the connected PDs exceeds the system power limit, the switch will power off PDs on low-priority PoE ports to ensure stable running of the other PDs. **Port-pwr-over-30w**: Triggered when the power required by the connected PD exceeds 30 watts. **Port-pwr-overload**: Triggered when the power required by the connected PD exceeds the maximum power the port can supply. **Port-short-circuit**: Triggered when a short circuit is detected on a port. **Thermal-shutdown**: Triggered when the PSE chip overheats. The switch will stop supplying power in this case.
IP-MAC Binding	Triggered in the following two situations: the ARP Inspection feature is enabled and the switch receives an illegal ARP packet; or the IPv4 Source Guard feature is enabled and the switch receives an illegal IP packet.
IP Duplicate	Triggered when the switch detects an IP conflict event.
DHCP Filter	Triggered when the DHCPv4 Filter feature is enabled and the switch receives DHCP packets from an illegal DHCP server.
DDM Temperature	Only T2600G-28TS supports DDM traps. Monitors the temperature of SFP modules inserted into the SFP ports on the switch. The trap can be triggered when the temperature of any SFP module has reached the warning or alarm threshold.

DDM Voltage	Only T2600G-28TS supports DDM traps. Monitors the voltage of SFP modules inserted into the SFP ports on the switch. The trap can be triggered when the voltage of any SFP module has reached the warning or alarm threshold.
DDM Bias Current	Only T2600G-28TS supports DDM traps. Monitors the bias current of SFP modules inserted into the SFP ports on the switch. The trap can be triggered when the bias current of any SFP module has reached the warning or alarm threshold.
DDM TX Power	Only T2600G-28TS supports DDM traps. Monitors the TX Power of SFP modules inserted into the SFP ports on the switch. The trap can be triggered when the TX Power of any SFP module has reached the warning or alarm threshold.
DDM RX Power	Only T2600G-28TS supports DDM traps. Monitors the RX Power of SFP modules inserted into the SFP ports on the switch. The trap can be triggered when the RX Power of any SFP module has reached the warning or alarm threshold.
ACL Counter	Monitors matched ACL information, including the matched ACL ID, rule ID and the number of the matched packets. With both this trap and the **Logging** feature in ACL rule settings enabled, the switch will check the matched ACL information every five minutes and send SNMP traps if there is any updated information.

2) Click **Apply**.

3.2 Using the CLI

3.2.1 Configuring the NMS Host

Configure parameters of the NMS host and packet handling mechanism.

Step 1	**configure** Enter global configuration mode.

Step 2	**snmp-server host** *ip udp-port user-name* [**smode** { v1 | v2c | v3 }] [**slev** {noAuthNoPriv | authNoPriv | authPriv }] [**type** { trap | inform}] [**retries** *retries*] [**timeout** *timeout*] Configure parameters of the NMS host and packet handling mechanism. *ip:* Specify the IP address of the NMS host in IPv4 or IPv6. Please make sure the IP addresses of the NMS host and the switch are able to reach to each other. *udp-port:* Specify a UDP port on the NMS host to receive notifications. The default is port 162. For communication security, we recommend that you change the port number under the condition that communications on other UDP ports are not affected. *user-name:* Enter the name used by the NMS host. When the NMS host uses SNMPv1 or SNMPv2c, enter the Community Name; when the NMS host uses SNMPv3, enter the User Name of the SNMP Group. v1 | v2c | v3: Choose the security mode used by the user from the following: SNMPv1, SNMPv2c, SNMPv3. The NMS host should use the corresponding SNMP version. noAuthNoPriv | authNoPriv | authPriv: For SNMPv3 groups, choose a security level from noAuthNoPriv (no authorization and no encryption), authNoPriv (authorization and no encryption), authPriv (authorization and encryption). The defaut is noAuthNoPriv. Please note that if you have chosen v1 or v2c as the security mode, security level cannot be configured. trap | inform: Choose a notification type for the NMS host. For SNMPv1, the supported type is trap. For SNMPv2c and SNMPv3, you can configure the type as trap or inform. When the NMS host receives a trap message, it will not send a response to the switch. Thus the switch cannot tell whether a message is received or not, and the messages that are not received will not be resent. When the NMS host receives an Inform message, it sends a response to the switch. If the switch does not receive a response within the Timeout interval, it will resend the Inform message. Therefore, Informs are more reliable than Traps. *retries:* Set the retry times for Inform messages. The range is 1 to 255 and the default is 3. The switch will resend the Inform message if it does not receive response from the NMS host within the timeout interval. And it will stop sending Inform message when the retry times reaches the limit. *timeout:* Set the length of time that the switch waits for a response. The range is 1 to 3600 seconds; the default is 100 seconds. The switch will resend the Inform message if it does not receive a response from the NMS host within the timeout interval.
Step 3	**show snmp-server host** Displays the information of the host.
Step 4	**end** Return to privileged EXEC mode.
Step 5	**copy running-config startup-config** Save the settings in the configuration file.

The following example shows how to set the NMS host IP address as 192.30.1.222, UDP port as port 162, name used by the NMS host as admin, security model as SNMPv3,

security level as authPriv, notification type as Inform, retry times as 3, and the timeout interval as 100 seconds:

Switch#configure

Switch(config)#snmp-server host 192.30.1.222 162 admin **smode** v3 **slev** authPriv **type** inform **retries** 3 **timeout** 100

Switch(config)#show snmp-server host

No.	Des-IP	UDP	Name	SecMode	SecLev	Type	Retry	Timeout
---	------	-----	----	-------	------	----	-----	-------
1	192.30.1.222	162	admin	v3	authPriv	inform	3	100

Switch(config)#end

Switch#copy running-config startup-config

3.2.2 Enabling SNMP Traps

The switch supports multiple SNMP traps like SNMP standard traps, ACL traps, and VLAN traps. You can enable any or all of the traps according to your needs.

- Enabling the SNMP Standard Traps Globally

Step 1	**configure** Enter global configuration mode.
Step 2	**snmp-server traps snmp [** linkup | linkdown | warmstart | coldstart | auth-failure **]** Enable the corresponding SNMP standard traps. The command without parameter enables all SNMP standard traps. All SNMP standard traps are enabled by default. linkup: Indicates a port status changes from linkdown to linkup, and can be triggered when you connect a device to a port. linkdown: Indicates a port status changes from linkup to linkdown, and can be triggered when you disconnect a device to a port. warmstart: Indicates the SNMP feature on the switch is reinitialized with the physical configuration unchanged. The trap can be triggered if you disable and then enable SNMP after the SNMP is completely configured and enabled. coldstart: Indicates an SNMP initialization caused by the reinitialization of the switch system. The trap can be triggered when you reboot the switch. auth-failure: Triggered when a received SNMP request fails the authentication.
Step 3	**end** Return to privileged EXEC mode.
Step 4	**copy running-config startup-config** Save the settings in the configuration file.

The following example shows how to configure the switch to send linkup traps:

Switch#configure

Switch(config)#snmp-server traps snmp linkup

Switch(config)#end

Switch#copy running-config startup-config

Enabling the SNMP Extended Traps Globally

Step 1	**configure** Enter global configuration mode.
Step 2	**snmp-server traps** { rate-limit | cpu | flash | lldp remtableschange | lldp topologychange | loopback-detection | storm-control | spanning-tree | memory } Enable the corresponding SNMP extended traps. All SNMP extended traps are disabled by default. rate-limit: Monitors whether the bandwidth has reached the limit you have set. The trap can be triggered when the Rate Limit feature is enabled and packets are sent to the port with a rate higher than what you have set. cpu: Monitors the load status of the switch CPU. The trap can be triggered when the utilization rate of the CPU has exceeded the limit that you have set. The limit of CPU utilization rate for the switch is 80% by default. flash: Triggered when flash is modified during operations such as backup, reset, firmware upgrade, configuration import, and so on. lldp remtableschange: A lldp RemTablesChange notification is sent when the value of lldp StatsRemTableLastChangeTime changes. It can be utilized by an NMS host to trigger LLDP remote systems table maintenance polls. lldp topologychange: A notification generated by the local device to sense the change in the topology that indicates a new remote device attached to a local port, or a remote device disconnected or moved from one port to another. loopback-detection: The feature is used to detect loopbacks. And the trap is disabled by default. The system will generate the trap when a loopback is detected or cleared. storm-control: The feature is used to monitor network storms. And the trap is disabled by default. The system will generate the trap when the rate of broadcast or multicast reaches the limit of storm control. spanning-tree: The feature is used to monitor the spanning tree status. And the trap is disabled by default. The system will generate the trap in the following situations: a port changes from non-forwarding state to forwarding state or the other way round; a port receives a packet with TC flag or a TCN packet. memory: The feature is used to monitor the memory. And the trap is disabled by default. The system will generate the trap when the memory utilization exceeds 80%.
Step 3	**end** Return to privileged EXEC mode.

Step 4	**copy running-config startup-config** Save the settings in the configuration file.

The following example shows how to configure the switch to enable bandwidth-control traps:

Switch#configure

Switch(config)#snmp-server traps bandwidth-control

Switch(config)#end

Switch#copy running-config startup-config

Enabling the DDM Traps Globally

Note:

Only T2600G-28TS supports DDM traps.

Step 1	**configure** Enter global configuration mode.
Step 2	**snmp-server traps ddm** [temperature | voltage | bias_current | tx_power | rx_power] Enable the corresponding DDM traps. DDM function is used to monitor the status of the SFP modules inserted into the SFP ports on the switch. The command without parameter enables all SNMP DDM traps. All DDM traps are disabled by default. temperature: Monitors the temperature of SFP modules inserted into the SFP ports on the switch. The trap can be triggered when the temperature of any SFP module has reached the warning or alarm threshold. voltage: Monitors the voltage of SFP modules inserted into the SFP ports on the switch. The trap can be triggered when the voltage of any SFP module has reached the warning or alarm threshold. bias_current: Monitors the bias current of SFP modules inserted into the SFP ports on the switch. The trap can be triggered when the bias current of any SFP module has reached the warning or alarm threshold. tx_power: Monitors the TX Power of SFP modules inserted into the SFP ports on the switch. The trap can be triggered when the TX Power of any SFP module has reached the warning or alarm threshold. rx_power: Monitors the RX Power of SFP modules inserted into the SFP ports on the switch. The trap can be triggered when the RX Power of any SFP module has reached the warning or alarm threshold.
Step 3	**end** Return to privileged EXEC mode.
Step 4	**copy running-config startup-config** Save the settings in the configuration file.

The following example shows how to configure the switch to enable DDM temperature trap:

Switch#configure

Switch(config)#snmp-server traps DDM temperature

Switch(config)#end

Switch#copy running-config startup-config

■ Enabling the VLAN Traps Globally

Step 1	**configure** Enter global configuration mode.
Step 2	**snmp-server traps vlan** [create | delete] Enable the corresponding VLAN traps. The command without parameter enables all SNMP VLAN traps. All VLAN traps are disabled by default. create: Triggered when certain VLANs are created successfully. delete: Triggered when certain VLANs are deleted successfully.
Step 3	**end** Return to privileged EXEC mode.
Step 4	**copy running-config startup-config** Save the settings in the configuration file.

The following example shows how to configure the switch to enable all the SNMP VLAN traps:

Switch#configure

Switch(config)#snmp-server traps vlan

Switch(config)#end

Switch#copy running-config startup-config

■ Enabling the SNMP Security Traps Globally

Step 1	**configure** Enter global configuration mode.
Step 2	**snmp-server traps security** { dhcp-filter | ip-mac-binding } Enable the corresponding security traps. All security traps are disabled by default. dhcp-filter: Triggered when the DHCPv4 Filter feature is enabled and the switch receives DHCP packets from an illegal DHCP server. ip-mac-binding: Triggered when the ARP Inspection feature is enabled and the switch receives an illegal ARP packet, or the IPv4 Source Guard feature is enabled and the switch receives an illegal IP packet.

Step 3	**end** Return to privileged EXEC mode.
Step 4	**copy running-config startup-config** Save the settings in the configuration file.

The following example shows how to configure the switch to enable DHCP filter trap:

Switch#configure

Switch(config)#snmp-server traps security dhcp-filter

Switch(config)#end

Switch#copy running-config startup-config

■ Enabling the ACL Trap Globally

Step 1	**configure** Enter global configuration mode.
Step 2	**snmp-server traps security acl** Enable the ACL trap. It is disabled by default. The trap monitors matched ACL information, including the matched ACL ID, rule ID and the number of the matched packets. With both this trap and the **Logging** feature in ACL rule settings enabled, the switch will check the matched ACL information every five minutes and send SNMP traps if there is any updated information.
Step 3	**end** Return to privileged EXEC mode.
Step 4	**copy running-config startup-config** Save the settings in the configuration file.

The following example shows how to configure the switch to enable ACL trap:

Switch#configure

Switch(config)#snmp-server traps acl

Switch(config)#end

Switch#copy running-config startup-config

■ Enabling the IP Traps Globally

Step 1	**configure** Enter global configuration mode.

Step 2	**snmp-server traps ip** { change | duplicate } Enable the IP traps. All IP traps are disabled by default. change: Triggered when the DHCPv4 Filter feature is enabled and the switch receives DHCP packets from an illegal DHCP server. duplicate: Monitors the IP address changes of each port. It is triggered when the IP address of any port is changed.
Step 3	**end** Return to privileged EXEC mode.
Step 4	**copy running-config startup-config** Save the settings in the configuration file.

The following example shows how to configure the switch to enable IP-Change trap:

Switch#configure

Switch(config)#snmp-server traps ip change

Switch(config)#end

Switch#copy running-config startup-config

- Enabling the SNMP PoE Traps Globally

Note:

Only T2600G-28MPS supports PoE traps.

Step 1	**configure** Enter global configuration mode.

Step 2	**snmp-server traps power** [over-max-pwr-budget | port-pwr-change | port-pwr-deny | port-pwr-over-30w | port-pwr-overload | port-short-circuit | thermal-shutdown] Enable the PoE traps. The command without parameter enables all PoE traps. All PoE traps are disabled by default. over-max-pwr-budget: Triggered when the total power required by the connected PDs exceeds the maximum power the PoE switch can supply. port-pwr-change: Triggered when the total power required by the connected PDs exceeds the maximum power the PoE switch can supply. port-pwr-deny: Triggered when the switch powers off PDs on low-priority PoE ports. When the total power required by the connected PDs exceeds the system power limit, the switch will power off PDs on low-priority PoE ports to ensure stable running of the other PDs. port-pwr-over-30w: Triggered when the power required by the connected PD exceeds 30 watts. port-pwr-overload: Triggered when the power required by the connected PD exceeds the maximum power the port can supply. port-short-circuit: Triggered when a short circuit is detected on a port. thermal-shutdown: Triggered when the PSE chip overheats. The switch will stop supplying power in this case.
Step 3	**end** Return to privileged EXEC mode.
Step 4	**copy running-config startup-config** Save the settings in the configuration file.

The following example shows how to configure the switch to enable all PoE traps:

Switch#configure

Switch(config)#snmp-server traps power

Switch(config)#end

Switch#copy running-config startup-config

■ Enabling the Link-status Trap for Ports

Step 1	**configure** Enter global configuration mode.
Step 2	**interface {fastEthernet** *port* **| range fastEthernet** *port-list* **| gigabitEthernet** *port* **| range gigabitEthernet** *port-list* **| ten-gigabitEthernet** *port* **| range ten-gigabitEthernet** *port-list* **}** Configure notification traps on the specified ports. *port/port-list:* The number or the list of the Ethernet ports that you desire to configure notification traps.

Step 3	**snmp-server traps link-status** Enable the link-status trap. It is triggered when the switch detects a link status change. By default, it is disabled.
Step 4	**end** Return to privileged EXEC mode.
Step 5	**copy running-config startup-config** Save the settings in the configuration file.

The following example shows how to configure the switch to enable link-status trap:

Switch#configure

Switch(config)#interface gigabitEthernet 1/0/1

Switch(config-if)#snmp-server traps link-status

Switch(config-if)#end

Switch#copy running-config startup-config

4 RMON

RMON (Remote Network Monitoring) together with the SNMP system allows the network manager to monitor remote network devices efficiently. RMON reduces traffic flow between the NMS and managed devices, which is convenient for management in large networks.

RMON includes two parts: the NMS and the Agents running on every network device. The NMS is usually a host that runs the management software to manage Agents of network devices. And the Agent is usually a switch or router that collects traffic statistics (such as total packets on a network segment during a certain time period, or total correct packets that are sent to a host). Based on SNMP protocol, the NMS collects network data through communication with Agents. However, the NMS cannot obtain every datum of RMON MIB because of the limited device resources. Generally, the NMS can only get information of the following four groups: Statistics, History, Event and Alarm.

- **Statistics:** Collects Ethernet statistics (like the total received bytes, the total broadcast packets, and the total packets of the specified size) on an interface.
- **History:** Collects a history group of statistics on Ethernet ports for a specified polling interval.
- **Event:** Specifies the action to take when an event is triggered by an alarm. The action can be to generate a log entry or an SNMP trap.
- **Alarm:** Monitors a specific MIB object for a specified interval, triggers an event at a specified value (rising threshold or falling threshold).

5 RMON Configurations

With RMON configurations, you can:

- Configuring the Statistics group.
- Configuring the History group.
- Configuring the Event group.
- Configuring the Alarm group.

Configuration Guidelines


To ensure that the NMS receives notifications normally, please complete configurations of SNMP and SNMP Notification before RMON configurations.

5.1 Using the GUI

5.1.1 Configuring Statistics Group

Choose the menu **MAINTENANCE > SNMP > RMON > Statistics** and click Add to load the following page.

Figure 5-1 Creating a Statistics Entry

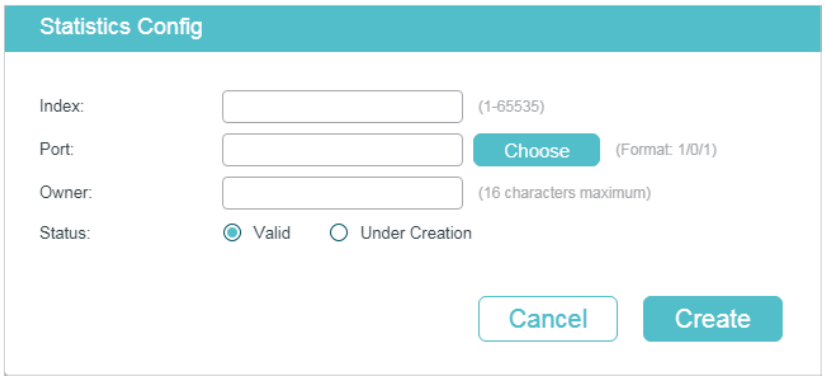

Follow these steps to configure the Statistics group:

1) Specify the entry index, the port to be monitored, and the owner name of the entry. Set the entry as Valid or Under Creation.

Index	Enter the index of the entry.
Port	Click **Choose** to specify an Ethernet port to be monitored in the entry, or enter the port number in the format of 1/0/1.
Owner	Enter the owner name of the entry with1 to 16 characters.


Status	Set the entry as Valid or Under Creation. By default, it is Valid. The switch start to collect Ethernet statistics for a Statistics entry since the entry status is configured as valid. **Valid**: The entry is created and valid. **Under Creation**: The entry is created but invalid.

2) Click **Create**.

5.1.2 Configuring History Group

Choose the menu **MAINTENANCE > SNMP > RMON > History** to load the following page.

Figure 5-2 Configuring the History Entry

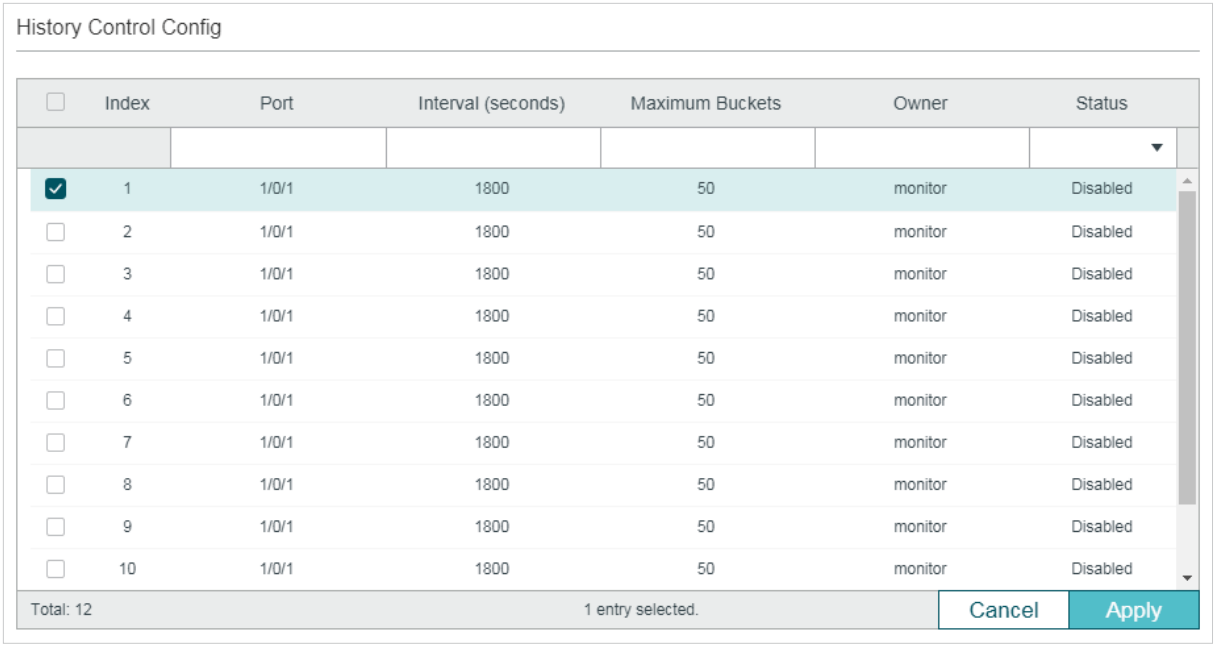

Follow these steps to configure the History group:

1) Select a History entry, and specify a port to be monitored.

Index	Displays the index of History entries. The switch supports up to 12 History entries.
Port	Specify a port in 1/0/1 format to be monitored.

2) Set the sample interval and the maximum buckets of History entries.

Interval (seconds)	Specify the number of seconds in each polling cycle. Valid values are from 10 to 3600 seconds and the default is 1800 seconds. Every history entry has its own timer. For the monitored port, the switch samples packet information and generates a record in every interval.
Maximum Buckets	Set the maximum number of records for the History entry. When the number of records exceeds the limit, the earliest record will be overwritten. Valid values are from 10 to 130 and the default is 50.

3) Enter the owner name, and set the status of the entry. Click **Apply**.

Owner	Enter the owner name of the entry with 1 to 16 characters. By default, it is monitor.
Status	Enable or disable the entry. By default, it is disabled. **Enable**: The entry is enabled. **Disable**: The entry is disabled.


Note:

To change the parameters of a History entry, please enable the entry at the same time, otherwise the change cannot take effect.

5.1.3 Configuring Event Group

Choose the menu **MAINTENANCE > SNMP > RMON > Event** to load the following page.

Figure 5-3 Configuring the Event Entry

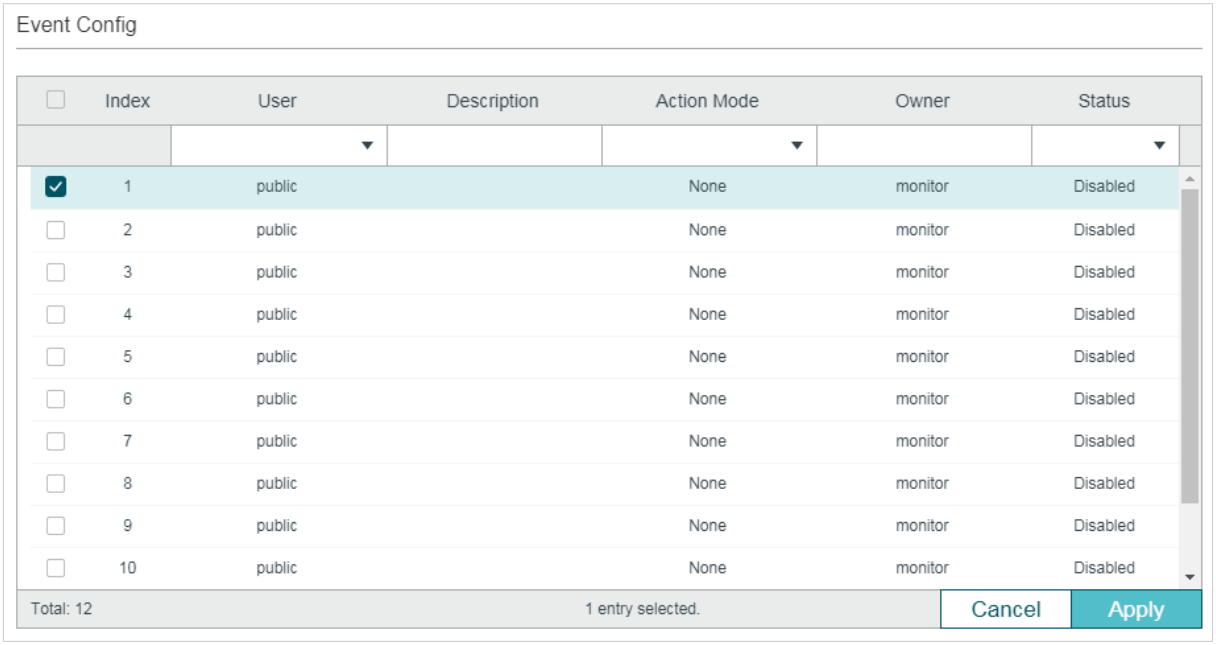

Follow these steps to configure the Event group:

1) Choose an Event entry, and set the SNMP User of the entry.

Index	Displays the index of Event entries. The switch supports up to 12 Event entries.
User	Choose an SNMP user name or community name for the entry. The name should be the same as what you have set in SNMP previously.

2) Set the description and action to be taken when the event is triggered.

Description	Enter an brief description of this event to make identifying it easier.

Action Mode	Specify the action for the switch to take when the event is triggered. **None**: No action. It is the default setting. **Log**: The switch records the event in the log, and the NMS should initiate requests to get notifications. **Notify**: The switch initiates notifications to the NMS. **Log & Notify**: The switch records the event in the log and sends notifications to the NMS.

3) Enter the owner name, and set the status of the entry. Click **Apply**.


Owner	Enter the owner name of the entry with 1 to 16 characters. By default, it is monitor.
Status	Enable or disable the entry. By default, it is disabled. **Enable**: The entry is enabled. **Disable**: The entry is disabled.

5.1.4 Configuring Alarm Group

Before you begin, please complete configurations of Statistics entries and Event entries, because the Alarm entries must be associated with Statistics and Event entries.

Choose the menu **MAINTENANCE > SNMP > RMON > Alarm** to load the following page.

Figure 5-4 Configuring the Alarm Entry

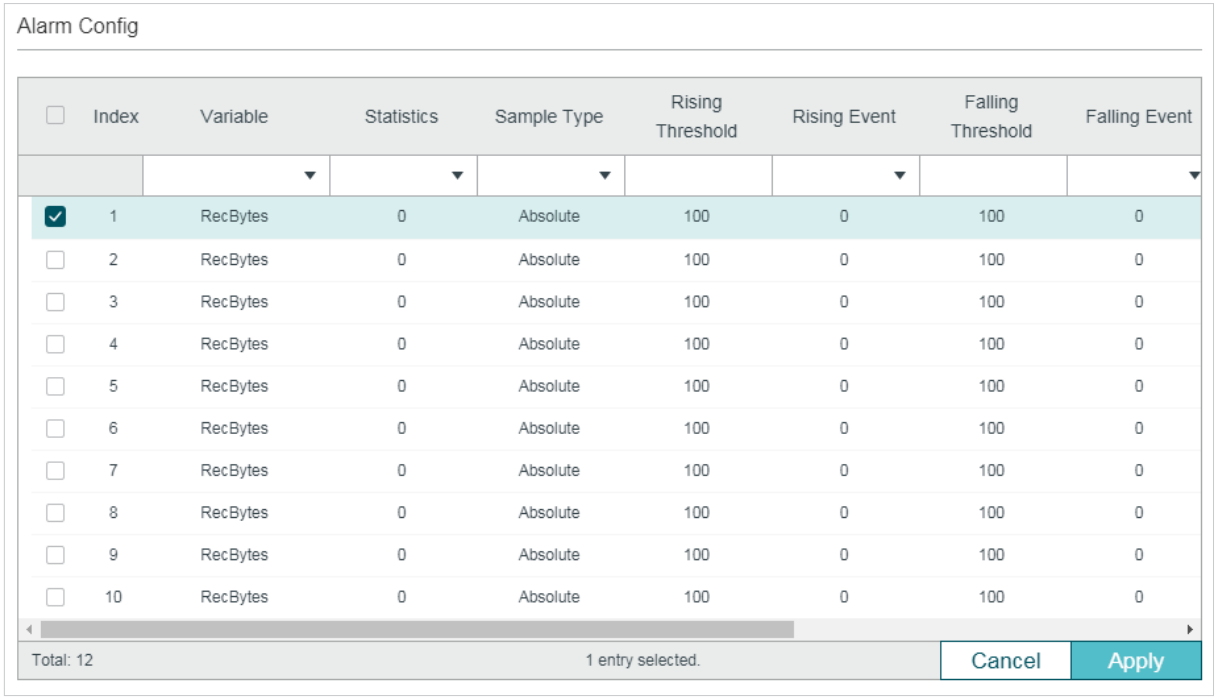

Follow these steps to configure the Alarm group:

1) Select an alarm entry, choose a variable to be monitored, and associate the entry with a statistics entry.

Index	Displays the index of Alarm entries. The switch supports up to 12 Alarm entries.
Variable	Set the alarm variable to be monitored. The switch will monitor the specified variable in sample intervals and act in the set way when the alarm is triggered. The default variable is RecBytes. **RecBytes**: Total received bytes. **RecPackets**: Total received packets. **BPackets**: Total broadcast packets. **MPackets**: Total multicast packets. **CRC&Align ERR**: Packets that range from 64 to 1518 bytes and contain FCS Error or Alignment Error. **Undersize**: Packets that are smaller than 64 bytes. **Oversize**: Packets that are larger than 1518 bytes. **Jabbers**: Packets that are sent when port collisions occur. **Collisions**: Collision times in the network segment. **64, 65-127, 128-255, 256-511, 512-1023, 1024-10240**: Total packets of the specified size.
Statistics	Associate the Alarm entry with a Statistics entry. Then the switch monitors the specified variable of the Statistics entry.

2) Set the sample type, the rising and falling threshold, the corresponding event action mode, and the alarm type of the entry.

Sample Type	Set the sampling method of the specified variable; the default is absolute. **Absolute**: Compare the sampling value against the preset threshold. **Delta**: The switch obtains the difference between the sampling values of the current interval and the previous interval, and then compares the difference against the preset threshold.
Rising Threshold	Set the rising threshold of the variable. When the sampled value exceeds the threshold, the system will trigger the corresponding **Rising Event**. Valid values are from 1 to 2147483647 and the default is 100.
Rising Event	Specify the index of the Event entry that will be triggered when the sampled value exceeds the preset threshold. The Event entry specified here should be enabled first.

Falling Threshold	Set the falling threshold of the variable. When the sampled value is below the threshold, the system will trigger the corresponding **Falling Event**. Valid values are from 1 to 2147483647 and the default is 100.
Falling Event	Specify the index of the Event entry that will be triggered when the sampled value is below the preset threshold. The Event entry specified here should be enabled first.
Alarm Type	Specify the alarm type for the entry. By default, the alarm type is all. **Rising**: The alarm is triggered only when the sampled value exceeds the rising threshold. **Falling**: The alarm is triggered only when the sampled value is below the falling threshold. **All**: The alarm is triggered when the sampled value exceeds the rising threshold or is below the falling threshold.

3) Enter the owner name, and set the status of the entry. Click **Apply**.

Interval (seconds)	Set the sampling interval. Valid values are from 10 to 3600 seconds and the default is 1800 seconds.
Owner	Enter the owner name of the entry with 1 to 16 characters. By default, it is monitor.
Status	Enable or disable the entry. By default, it is disabled. **Enable**: The entry is enabled. **Disable**: The entry is disabled.

5.2 Using the CLI

5.2.1 Configuring Statistics

Step 1	**configure** Enter global configuration mode.

Step 2	**rmon statistics** *index* **interface interface** { **fastEthernet** *port* | **gigabitEthernet** *port* | **ten-gigabitEthernet** *port* } [**owner** *owner-name*] [**status** { underCreation | valid }] Configure RMON Statistic entries. *index:* Enter the ID of the statistics entry from 1 to 65535 in the format of 1-3 or 5. *port:* Enter the port number in 1/0/1 format to bind it to the entry. *owner-name:* Enter the owner name of the entry with 1 to 16 characters. The default name is monitor. underCreation | valid: Enter the status of the entry. UnderCreation indicates that the entry is created but invalid, while valid indicates the entry is created and valid. By default, it is valid. The switch start to collect Ethernet statistics for a Statistics entry since the entry status is configured as valid.
Step 3	**show rmon statistics** [*index*] Displays the statistics entries and their configurations. *index:* Enter the index of statistics entries that you want to view. The ranges are from 1 to 65535.
Step 4	**end** Return to privileged EXEC mode.
Step 5	**copy running-config startup-config** Save the settings in the configuration file.

The following example shows how to create two Statistics entries on the switch to monitor port 1/0/1 and 1/0/2 respectively. The owner of the entries are both monitor and the status are both valid:

Switch#configure

Switch(config)#rmon statistics 1 **interface gigabitEthernet** 1/0/1 **owner** monitor **status** valid

Switch(config)#rmon statistics 2 **interface gigabitEthernet** 1/0/2 **owner** monitor **status** valid

Switch(config)#show rmon statistics

Index	Port	Owner	State
-----	----	-----	-----
1	Gi1/0/1	monitor	valid
2	Gi1/0/2	monitor	valid

Switch(config)#end

Switch#copy running-config startup-config

5.2.2 Configuring History

Step 1	**configure** Enter global configuration mode.
Step 2	**rmon history** *index* **interface** { **fastEthernet** *port* | **gigabitEthernet** *port* | **ten-gigabitEthernet** *port* } [**interval** *seconds*] [**owner** *owner-name*] [**buckets** *number*] Configuring RMON History entries. *index:* Enter the index of the History entry from 1 to 12 in the format of 1-3 or 5. *port:* Enter the port number in 1/0/1 format to bind it to the entry. *seconds:* Set the sample interval. The values are from 10 to 3600 seconds; the default is 1800 seconds. *owner-name:* Enter the owner name of the entry with 1 to 16 characters. The default name is monitor. *number:* Set the maximum number of records for the history entry. When the number of records exceeds the limit, the earliest record will be overwritten. The values are from 10 to 130; the default is 50.
Step 3	**show rmon history** [*index*] Displays the specified History entry and related configurations. *index:* Enter the index of history entries that you want to view. The range is 1 to 12, and the format is 1-3 or 5.
Step 4	**end** Return to privileged EXEC mode.
Step 5	**copy running-config startup-config** Save the settings in the configuration file.

The following example shows how to create a History entry on the switch to monitor port 1/0/1. Set the sample interval as 100 seconds, maximum buckets as 50, and the owner as monitor:

Switch#configure

Switch(config)#rmon history 1 **interface gigabitEthernet** 1/0/1 **interval** 100 **owner** monitor **buckets** 50

Switch(config)#show rmon history

Index	Port	Interval	Buckets	Owner	State
1	Gi1/0/1	100	50	monitor	Enable

Switch(config)#end

Switch#copy running-config startup-config

5.2.3 Configuring Event

Step 1	**configure** Enter global configuration mode.
Step 2	**rmon event** *index* [**user** *user-name*] [**description** *description*] [**type** { none | log | notify | log-notify }] [**owner** *owner-name*] Configuring RMON Event entries. *index:* Enter the index of the Event entry from 1 to12 in the format of 1-3 or 5. *user-name:* Enter the SNMP user name or community name of the entry. The name should be what you have set in SNMP previously. The default name is public. *description:* Give a description to the entry with 1 to 16 characters. By default, the description is empty. none | log | notify | log-notify: Specify the action type of the event; then the switch will take the specified action to deal with the event. By default, the type is none. None indicates the switch takes no action, log indicates the switch records the event, notify indicates the switch sends notifications to the NMS, and log-notify indicates the switch records the event and sends notifications to the NMS. *owner-name:* Enter the owner name of the entry with 1 to 16 characters. The default name is monitor.
Step 3	**show rmon event** [*index*] Displays the specified Event entry and related configurations. *index:* Enter the index of Event entries that you want to view. The range is 1 to 12, and the format is 1-3 or 5.
Step 4	**end** Return to privileged EXEC mode.
Step 5	**copy running-config startup-config** Save the settings in the configuration file.

The following example shows how to create an Event entry on the switch. Set the user name as admin, the event type as Notify (set the switch to initiate notifications to the NMS), and the owner as monitor:

Switch#configure

Switch(config)#rmon event 1 **user** admin **description** rising-notify **type** notify **owner** monitor

Switch(config)#show rmon event

Index	User	Description	Type	Owner	State
1	admin	rising-notify	Notify	monitor	Enable

Switch(config)#end

Switch#copy running-config startup-config

5.2.4 Configuring Alarm

Step 1	**configure** Enter global configuration mode.
Step 2	**rmon alarm** *index* **stats-index** *sindex* [**alarm-variable** { revbyte | revpkt | bpkt | mpkt | crc-align | undersize | oversize | jabber | collision | 64 | 65-127 | 128-255 | 256-511 | 512-1023 | 1024-10240}] [**s-type** {absolute | delta}] [**rising-threshold** *r-hold*] [**rising-event-index** *r-event*] [**falling-threshold** *f-hold*] [**falling-event-index** *f-event*] [**a-type** {rise | fall | all}] [**owner** *owner-name*] [**interval** *interval*] Configuring RMON alarm entries. *index:* Enter the index of the alarm entry from 1 to12 in the format of 1-3 or 5. *sindex:* Set the index of the related statistics entry from 1 to 65535. *revbyte | revpkt | bpkt | mpkt | crc-align | undersize | oversize | jabber | collision | 64 | 65- 127 | 128-255 | 256-511 | 512-1023 | 1024-10240:* Choose an alarm variable to monitor. The switch will monitor the specified variable in sample intervals and act in the set way when the alarm is triggered. The default variable is revbyte. revbyte means total received bytes; revpkt means total received packets; bpkt means total broadcast packets. mpkt means total multicast packets; crc-align means packets that range from 64 to 1518 bytes and contain FCS Error or Alignment Error; undersize means packets that are smaller than 64 bytes; oversize means packets that are larger than 1518 bytes; jabber means packets that are sent when port collisions occur; collision means the collision times in the network segment; 64 | 65-127 | 128-255 | 256-511 | 512-1023 | 1024-10240 means total packets of the specified size. absolute | delta: Choose the sampling method of the specified variable. The default is absolute. In the absolute mode, the switch compares the sampling value against the preset threshold; in the delta mode, the switch obtains the difference between the sampling values of the current interval and the previous interval, and then compares the difference against the preset threshold. *r-hold:* Enter the rising threshold from 1 to 2147483647; the default is 100. *r-event:* Enter the Event entry index from 1 to 12 to bind it to the rising threshold. The event entry will be triggered when the sampling value exceeds the preset threshold. The Event entry specified here should be enabled first. *f-hold:* Enter a falling threshold from 1 to 2147483647; the default is 100.

	f-event: Enter the Event entry index from 1 to 12 to bind it to the falling threshold. The Event entry will be triggered when the sampling value goes below the preset threshold. The Event entry specified here should be enabled first. rise | fall | all: Choose an alarm type; the default is all. Rise indicates that the alarm is triggered only when the sampled value exceeds the rising threshold. Fall indicates that the alarm is triggered only when the sampled value is below the falling threshold. All indicates that the alarm is triggered when the sampled value exceeds the rising threshold or is below the falling threshold. *owner-name:* Enter the owner name of the entry using 1 to 16 characters. The default name is monitor. *interval:* Set the sampling interval. The value ranges from 10 to 3600 seconds; the default is 1800 seconds.
Step 3	**show rmon alarm** [*index*] Displays the specified alarm entry and related configurations. *index:* Enter the index of alarm entries that you want to view. The range is 1 to 12, and the format is 1-3 or 5.
Step 4	**end** Return to privileged EXEC mode.
Step 5	**copy running-config startup-config** Save the settings in the configuration file.

The following example shows how to set an alarm entry to monitor BPackets on the switch. Set the related Statistics entry ID as 1, the sample type as Absolute, the rising threshold as 3000, the related rising event entry index as 1, the falling threshold as 2000, the related falling event index as 2, the alarm type as all, the notification interval as 10 seconds, and the owner of the entry as monitor:

Switch#configure

Switch(config)#rmon alarm 1 **stats-index** 1 **alarm-variable** bpkt **s-type** absolute **rising-threshold** 3000 **rising-event-index** 1 **falling-threshold** 2000 **falling-event-index** 2 **a-type** all **interval** 10 **owner** monitor

Switch(config)#show rmon alarm

Index-State: 1-Enabled

Statistics index: 1

Alarm variable: BPkt

Sample Type: Absolute

RHold-REvent: 3000-1

FHold-FEvent: 2000-2

Alarm startup: All

Interval: 10

Owner: monitor

Switch(config)#end

Switch#copy running-config startup-config

6 Configuration Example


6.1 Network Requirements

The following figure shows the network topology of a company. The company has requirements as follows:

1) Monitor traffic flow of ports 1/0/1 and 1/0/2 on Switch A, and send notifications to the NMS when the actual rate of transmitting and receiving packets exceeds the preset threshold.
2) Monitor the sending status of ports 1/0/1 and 1/0/2 on Switch A, and regularly collect and save data for follow-up checks. Specifically, during the sample interval, switch A should notify the NMS when the number of packets transmitted and received on the port exceeds the preset threshold; Switch A should record but not notify the NMS when the number of packets transmitted and received is below the threshold.

The NMS host with IP address 192.168.1.222 is connected to the core switch, Switch B. Switch A is connected to Switch B via port 1/0/3. And port 1/0/3 and the NMS are able to reach one another.

Figure 6-1 Network Topology

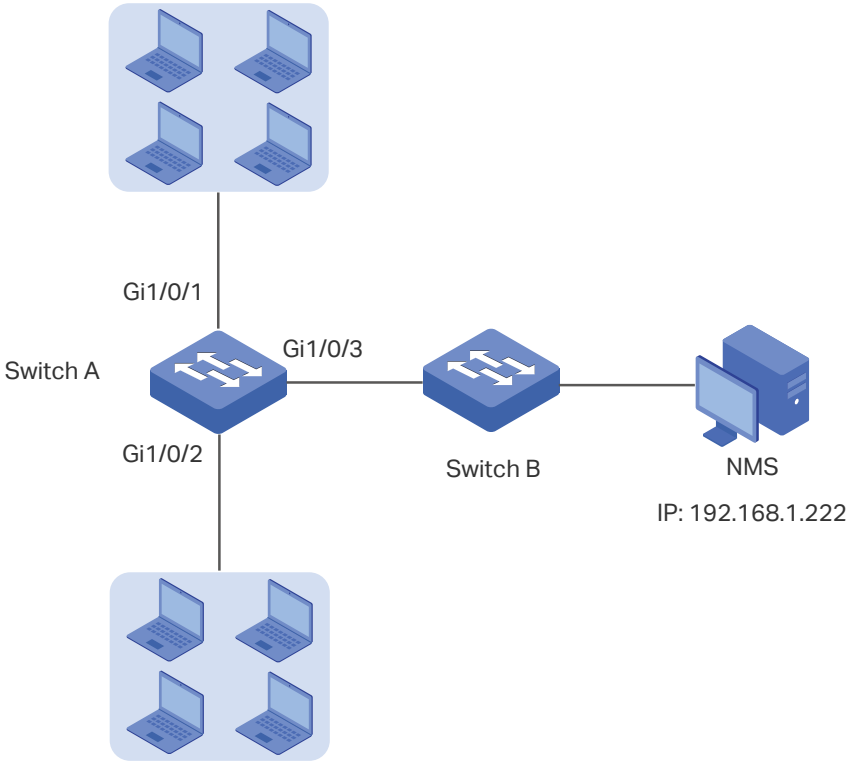

6.2 Configuration Scheme

1) Set a limit on the rate of the specified ports, and then enable SNMP on Switch A. Configure SNMP and Notification, and enable Trap notifications on the ports. Switch A can then send notifications to the NMS when the actual rate exceeds the preset threshold.
2) After SNMP and Notification configurations, you need to create Statistic entries on the ports to monitor the real-time transmitting and receiving of packets and create History entries to regularly collect and save related data. Create two Event entries: one is the notify type used to notify the NMS, the other is the log type used to record related events. In addition, create an Alarm entry to monitor BPackets (Broadcast Packets), set the rising threshold and falling threshold, and bind the rising event to the notify event entry, and the falling event to the log event entry.

Demonstrated with T2600G-28TS, this chapter provides configuration procedures in two ways: using the GUI and using the CLI.

6.3 Using the GUI


- Configuring Rate Limit on ports

  Configure the rate limit on required ports. For detailed configuration, please refer to *Configuring QoS*.

- Configuring SNMP


1) Choose **MAINTENANCE > SNMP > Global Config** to load the following page. In the **Global Config** section, enable SNMP, and set the Remote Engine ID as 123456789a. Click **Apply**.

Figure 6-2 Enabling SNMP

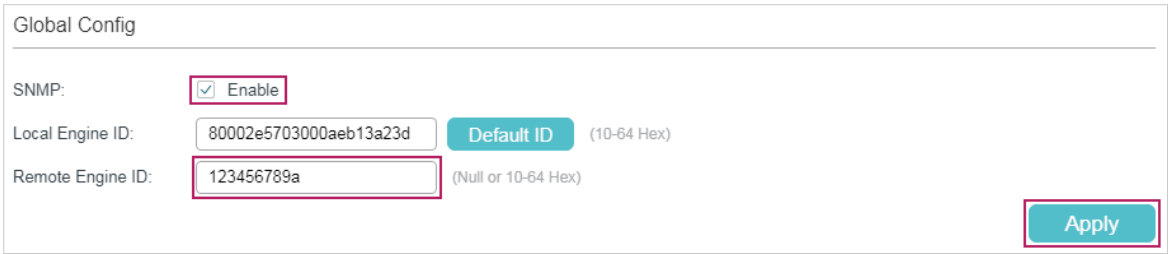


2) In the **SNMP View Config** section, click Add to load the following page. Name the SNMP view as View, set the view type as Include, and set MIB Object ID as 1 (which means all functions). Click **Create**.

Figure 6-3 Creating an SNMP View

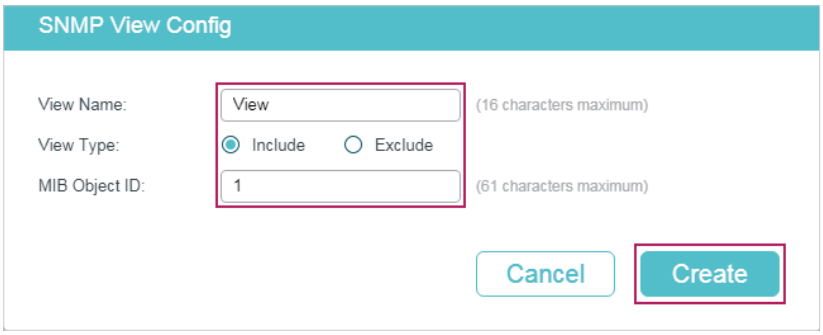


3) Choose **MAINTENANCE > SNMP > SNMP v3 > SNMP Group** and click Add to load the following page. Create a group with the name of nms-monitor, enable authentication and privacy, and add View to Read View and Notify View. Click **Create**.

Figure 6-4 Configuring an SNMP Group

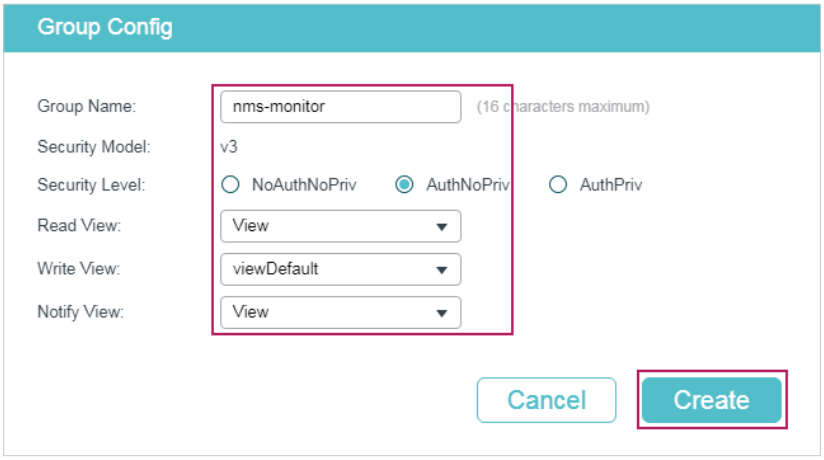


4) Choose **MAINTENANCE > SNMP > SNMP v3 > SNMP User** and click Add to load the following page. Create a user named admin for the NMS, set the user type as Remote User and specify the group name. Set the Security Level in accordance with that of the group nms-monitor. Choose SHA authentication algorithm and DES privacy algorithm, and set corresponding passwords. Click **Create**.

Figure 6-5 Creating an SNMP User

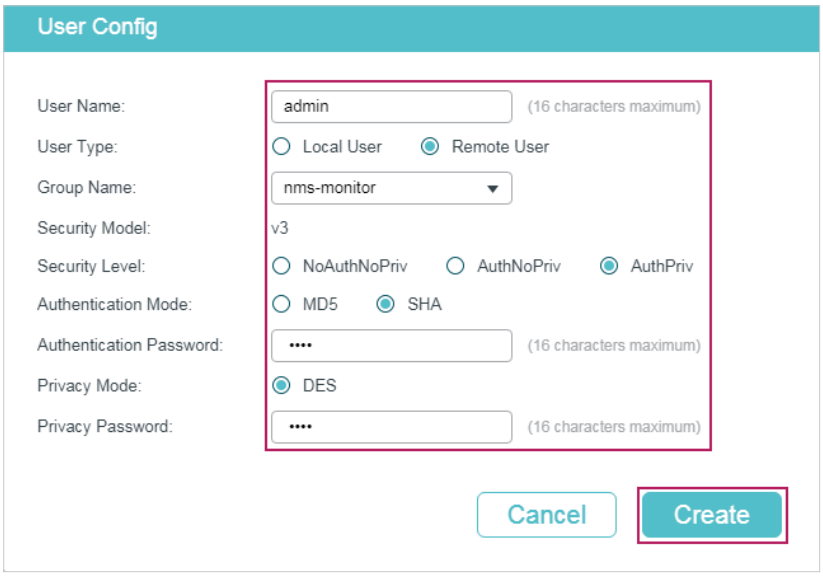


5) Choose **MAINTENANCE > SNMP > Notification > Notification Config** and click Add to load the following page. Choose the IP Mode as IPv4, and specify the IP address of the NMS host and the port of the host for transmitting notifications. Specify the User as admin and choose the type as Inform. Set the retry times as 3, with the timeout period as 100 seconds. Click **Create**.

Figure 6-6 Creating an SNMP Notification Entry

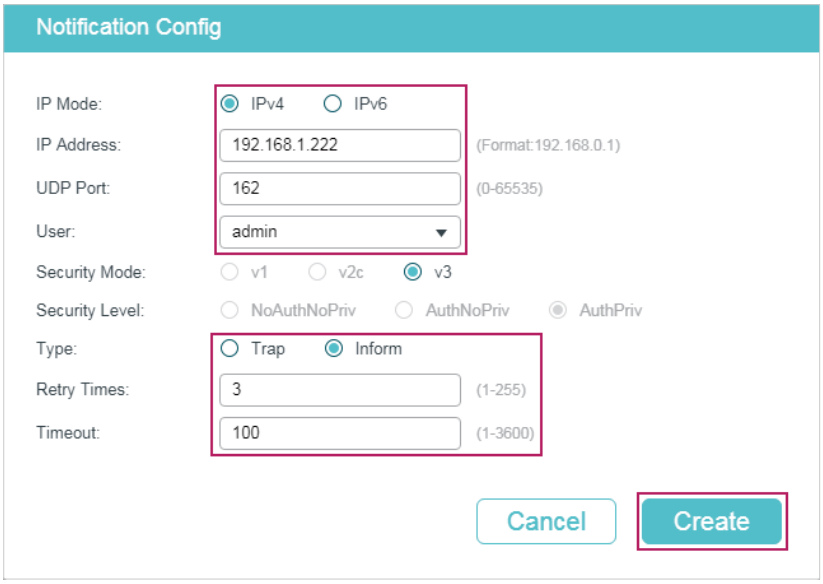

6) Choose **MAINTENANCE > SNMP > Notification > Trap Config** to load the following page. Enable Rate Limit trap and click **Apply**.

Figure 6-7 Enabling Rate Limit Trap

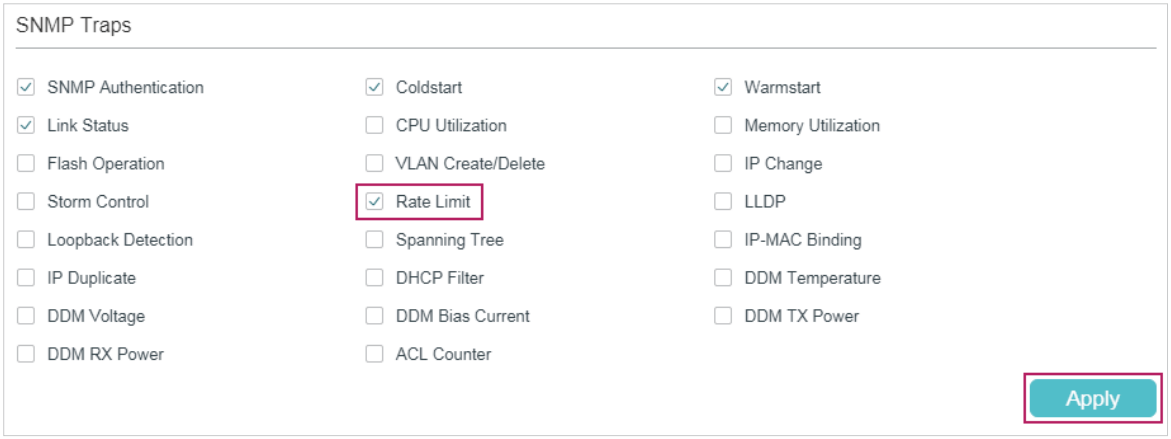

7) Click Save to save the settings.

Configuring RMON

1) Choose **MAINTENANCE > SNMP > RMON > Statistics** and click Add to load the following page. Create two entries and bind them to ports 1/0/1 and 1/0/2 respectively. Set the owner of the entries as monitor and the status as valid.

Figure 6-8 Configuring Statistics Entry 1



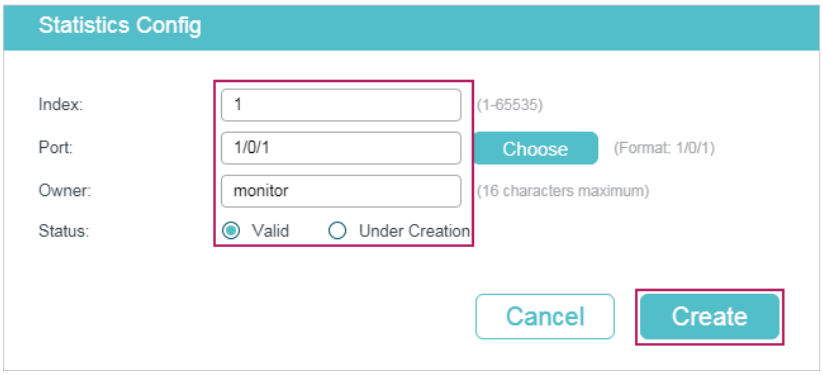


Figure 6-9 Configuring Statistics Entry 2

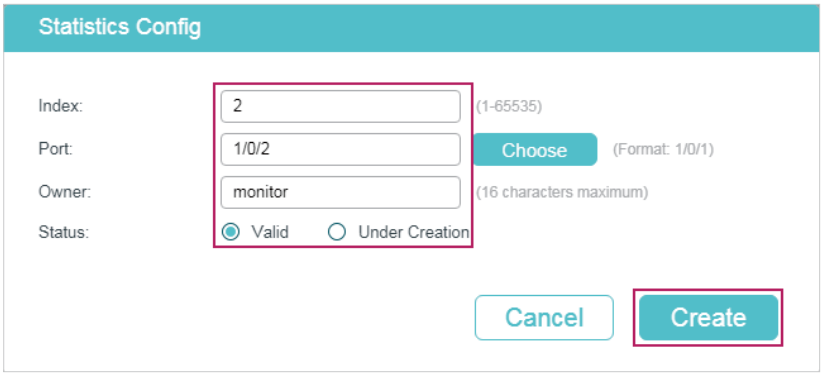


2) Choose the menu **MAINTENANCE > SNMP > RMON > History** to load the following page. Configure entries 1 and 2. Bind entries 1 and 2 to ports 1/0/1 and 1/0/2 respectively, and set the Interval as 100 seconds, Maximum Buckets as 50, the owner of the entries as monitor, and the status as Enable.

Figure 6-10 Configuring the History Entries

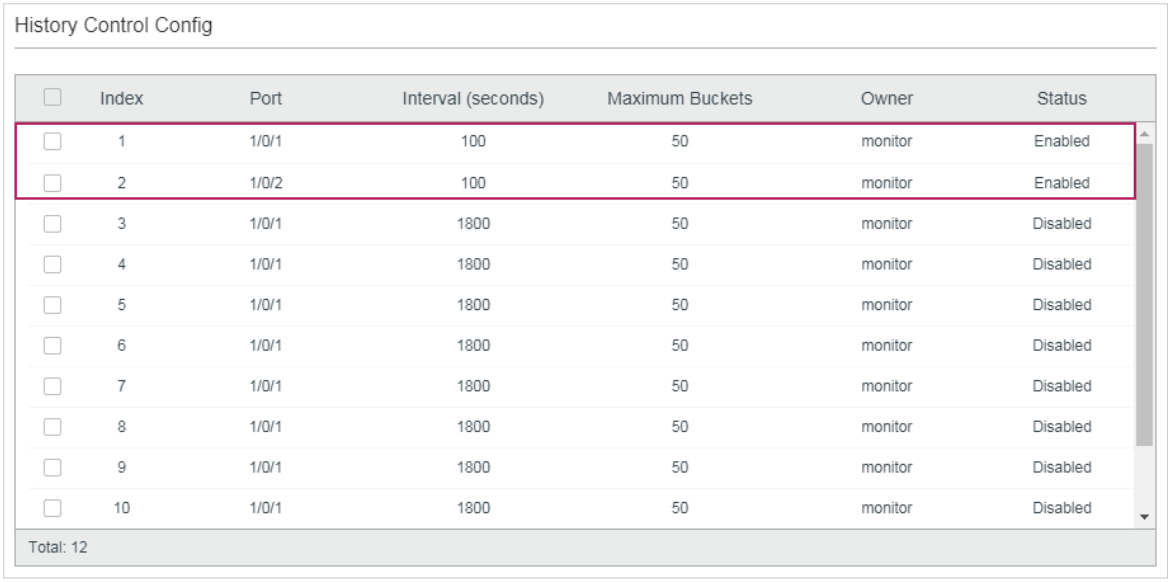

3) Choose the menu **MAINTENANCE > SNMP > RMON > Event** to load the following page. Configure entries 1 and 2. For entry 1, set the SNMP user name as admin, type as Notify, description as "rising_notify", owner as monitor, and status as enable. For entry 2, set the SNMP user name as admin, type as Log, description as "falling_log", owner as monitor, and status as enable.

Figure 6-11 Configuring the Event Entries

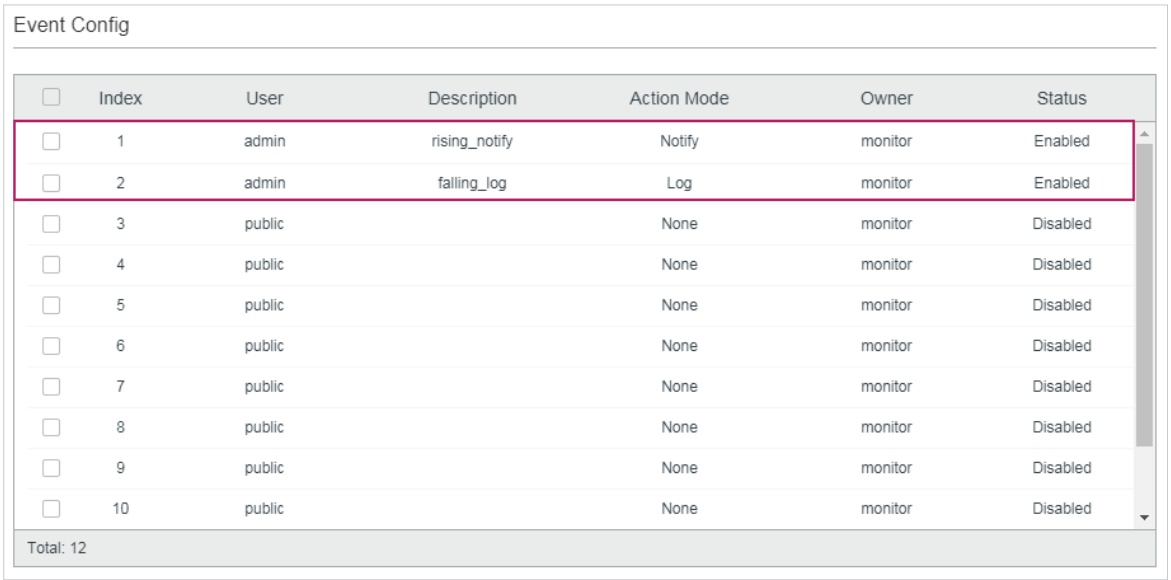

4) Choose **MAINTENANCE > SNMP > RMON > Alarm** to load the following page. Configure entries 1 and 2. For entry 1, set the alarm variable as BPackets, related statistics entry ID as 1 (bound to port 1/0/1), the sample type as Absolute, the rising threshold as 3000, associated rising event entry ID as 1 (which is the notify type), the falling threshold as 2000, the associated falling event entry ID as 2 (which is the log type), the alarm type as All, the interval as 10 seconds, the owner name as monitor. For entry 2, set the associated statistics entry ID as 2 (bound to port 1/0/2). Other configurations are the same as those of entry 1.

Figure 6-12 Configuring the Alarm Entries



5) Click Save to save settings.

6.4 Using the CLI

- Configuring Rate Limit on ports

  Configure the rate limit on required ports of Switch A. For detailed configuration, please refer to *Configuring QoS*.

- Configuring SNMP

1) Enable SNMP and specify the remote engine ID.

   Switch_A#configure

   Switch_A(config)#snmp-server

   Switch_A(config)#snmp-server engineID remote 123456789a

2) Create a view with the name View; set the MIB Object ID as 1 (which represents all functions), and the view type as Include.

   Switch_A(config)#snmp-server view View 1 include

3) Create a group of SNMPv3 with the name of nms-monitor. Enable Auth Mode and Privacy Mode, and set the view as read View and notify view.

   Switch_A(config)#snmp-server group nms-monitor smode v3 slev authPriv read View notify View

4) Create an SNMP user with the name admin. Set the user as a remote user and configure the security mode and security level based on the group. Set the Auth Mode as SHA algorithm, password as 1234, the Privacy Mode as DES, and password as 1234.

   Switch_A(config)#snmp-server user admin remote nms-monitor smode v3 slev authPriv cmode SHA cpwd 1234 emode DES epwd 1234

5) To configure Notification, specify the IP address of the NMS host and UDP port. Set the User, Security Model and Security Level according to configurations of the SNMP User.

Choose the type as Inform, and set the retry times as 3, and the timeout period as 100 seconds.

Switch_A(config)#snmp-server host 192.168.1.222 162 admin smode v3 slev authPriv type inform retries 3 timeout 100

- Enable Bandwith-control Trap

Switch_A(config)#snmp-server traps bandwidth-control

- Configuring RMON

1) Create two Statistics entries to monitor ports 1/0/1 and 1/0/2 respectively. The owner of the entries is set as monitor, and the status is set as valid.

   Switch_A(config)#rmon statistics 1 interface gigabitEthernet 1/0/1 owner monitor status valid

   Switch_A(config)#rmon statistics 2 interface gigabitEthernet 1/0/2 owner monitor status valid

2) Create two History entries and bind them to ports 1/0/1 and 1/0/2 respectively. Set the sample interval as 100 seconds, max buckets as 50, and the owner as monitor.

   Switch_A(config)#rmon history 1 interface gigabitEthernet 1/0/1 interval 100 owner monitor buckets 50

   Switch_A(config)#rmon history 2 interface gigabitEthernet 1/0/2 interval 100 owner monitor buckets 50

3) Create two Event entries named admin, which is the SNMP user name. Set entry 1 as the Notify type and its description as “rising_notify”. Set entry 2 as the Log type and its description as “falling_log”. Set the owner of them as monitor.

   Switch_A(config)#rmon event 1 user admin description rising_notify type notify owner monitor

   Switch_A(config)#rmon event 2 user admin description falling_log type log owner monitor

4) Create two Alarm entries. For entry 1, set the alarm variable as BPackets, associated Statistics entry ID as 1 (bound to port 1/0/1), the sample type as Absolute, the rising threshold as 3000, the associated rising event entry ID as 1 (Notify type), the falling threshold as 2000, the associated falling event entry ID as 2 (the log type), the alarm type as all, the interval as 10 seconds, and the owner name as monitor. For entry 2, set the associated statistics entry ID as 2 (bound to port 1/0/2), while all other configurations are the same as those of entry 1.

   Switch_A(config)#rmon alarm 1 stats-index 1 alarm-variable bpkt s-type absolute rising-threshold 3000 rising-event-index 1 falling-threshold 2000 falling-event-index 2 a-type all interval 10 owner monitor

Switch_A(config)#rmon alarm 2 stats-index 2 alarm-variable bpkt s-type absolute rising-threshold 3000 rising-event-index 1 falling-threshold 2000 falling-event-index 2 a-type all interval 10 owner monitor

Verify the Configurations

Verify global SNMP configurations:

Switch_A(config)#show snmp-server

SNMP agent is enabled.

0 SNMP packets input

0 Bad SNMP version errors

0 Unknown community name

0 Illegal operation for community name supplied

0 Encoding errors

0 Number of requested variables

0 Number of altered variables

0 Get-request PDUs

0 Get-next PDUs

0 Set-request PDUs

0 SNMP packets output

0 Too big errors(Maximum packet size 1500)

0 No such name errors

0 Bad value errors

0 General errors

0 Response PDUs

0 Trap PDUs

Verify SNMP engine ID:

Switch_A(config)#show snmp-server engineID

Local engine ID: 80002e5703000aeb13a23d

Remote engine ID: 123456789a

Verify SNMP view configurations:

```
Switch_A(config)#show snmp-server view
No.  View Name   Type      MOID
---  ----------- -------   ------------------
1    viewDefault include   1
2    viewDefault exclude   1.3.6.1.6.3.15
3    viewDefault exclude   1.3.6.1.6.3.16
4    viewDefault exclude   1.3.6.1.6.3.18
5    View        include   1
```

Verify SNMP group configurations:

```
Switch_A(config)#show snmp-server group
No. Name          Sec-Mode   Sec-Lev    Read-View     Write-View   Notify-View
--- ------------  ---------- ---------- ------------- ------------ ----------
1   nms-monitor   v3         authPriv   View                       View
```

Verify SNMP user configurations:

```
Switch_A(config)#show snmp-server user
No. U-Name    U-Type   G-Name       S-Mode   S-Lev     A-Mode   P-Mode
--- --------- ------   ------       ------   -----     ------   ------
1   admin     remote   nms-monitor  v3       authPriv  SHA      DES
```

Verify SNMP host configurations:

```
Switch_A(config)#show snmp-server host
No. Des-IP          UDP   Name    SecMode   SecLev    Type    Retry Timeout
--- --------------- ----- ------- --------- --------- ------- ----- -------
1   172.168.1.222   162   admin   v3        authPriv  inform  3     100
```

Verify RMON statistics configurations:

```
Switch_A(config)#show rmon statistics
```

```
Index  Port        Owner      State
-----  ----------  ---------  -------
1      Gi1/0/1     monitor    valid
2      Gi1/0/2     monitor    valid
```

Verify RMON history configurations:

```
Switch_A(config)#show rmon history
Index  Port        Interval  Buckets   Owner      State
-----  ---------   --------  ---------  ----------  ---------
1      Gi1/0/1     100       50         monitor    Enable
2      Gi1/0/2     100       50         monitor    Enable
```

Verify RMON event configurations:

```
Switch_A(config)#show rmon event
Index  User       Description       Type       Owner       State
-----  ------     -----------       --------   ----------  ----------
1      admin      rising-notify     Notify     monitor     Enable
2      admin      falling-log       Log        monitor     Enable
```

Verify RMON alarm configurations:

```
Switch_A(config)#show rmon alarm
  Index-State:        1-Enabled
  Statistics index:   1
  Alarm variable:     BPkt
  Sample Type:        Absolute
  RHold-REvent:       3000-1
  FHold-FEvent:       2000-2
  Alarm startup:      All
  Interval:           10
  Owner:              monitor
```

Index-State: 2-Enabled

Statistics index: 2

Alarm variable: BPkt

Sample Type: Absolute

RHold-REvent: 3000-1

FHold-FEvent: 2000-2

Alarm startup: All

Interval: 10

Owner: monitor

7 Appendix: Default Parameters

Default settings of SNMP are listed in the following tables.

Table 7-1 Default Global Config Settings

Parameter	Default Setting
SNMP	Disable
Local Engine ID	Automatically
Remote Engine ID	None

Table 7-2 Default SNMP View Table Settings

View Name	View Type	MIB Object ID
viewDefault	Include	1
viewDefault	Exclude	1.3.6.1.6.3.15
viewDefault	Exclude	1.3.6.1.6.3.16
viewDefault	Exclude	1.3.6.1.6.3.18

Table 7-3 Default SNMP v1/v2c Settings

Parameter	Default Setting
Community Entry	No entries
Community Name	None
Access	Read-only
MIB View	viewDefault

Table 7-4 Default SNMP v3 Settings

Parameter	Default Setting
SNMP Group	
Group Entry	No entries
Group Name	None
Security Model	v1
Security Level	NoAuthNoPriv
Read View	viewDefault
Write View	None
Notify View	None

Parameter	Default Setting
SNMP User	
User Entry	No entries
User Name	None
User Type	Local User
Group Name	None
Security Model	v1
Security Level	noAuthNoPriv
Authentication Mode	MD5 (when Security Level is configured as AuthNoPriv or AuthPriv)
Authentication Password	None
Privacy Mode	DES (when Security Level is configured as AuthPriv)
Privacy Password	None

Default settings of Notification are listed in the following table.

Table 7-5 Default Notification Settings

Parameter	Default Setting
Notification Config	
Notification Entry	No entries
IP Mode	IPv4
IP Address	None
UDP Port	162
User	None
Security Model	v1
Security Level	noAuthNoPriv
Type	Trap
Retry	None in trap mode; 3 times in Inform mode.
Timeout	None in trap mode; 100 seconds in Inform mode.
Trap Config	
Enabled SNMP Traps	SNMP Authentication, Coldstart, Warmstart, Link Status

Default settings of RMON are listed in the following tables.

Table 7-6 Default Statistics Config Settings

Parameter	Default Setting
Statistics Entry	No entries
ID	None
Port	None
Owner	None
IP Mode	Valid

Table 7-7 Default Settings for History Entries

Parameter	Default Setting
Port	1/0/1
Interval	1800 seconds
Max Buckets	50
Owner	monitor
Status	Disable

Table 7-8 Default Settings for Event Entries

Parameter	Default Setting
User	public
Description	None
Type	None
Owner	monitor
Status	Disable

Table 7-9 Default Settings for Alarm Entries

Parameter	Default Setting
Variable	RecBytes
Statistics	0, means no Statistics entries is selected.
Sample Type	Absolute
Rising Threshold	100
Rising Event	None
Falling Threshold	100
Falling Event	None
Alarm Type	All

Parameter	Default Setting
Interval	1800 seconds
Owner	monitor
Status	Disable

Part 39

Diagnosing the Device & Network

CHAPTERS

1. Diagnosing the Device
2. Diagnosing the Network
3. Appendix: Default Parameters


1 Diagnosing the Device

The device diagnostics feature provides cable testing, which allows you to troubleshoot based on the connection status, cable length and fault location.

1.1 Using the GUI

Choose the menu **MAINTENANCE > Device Diagnostics** to load the following page.

Figure 1-1 Diagnosing the Cable

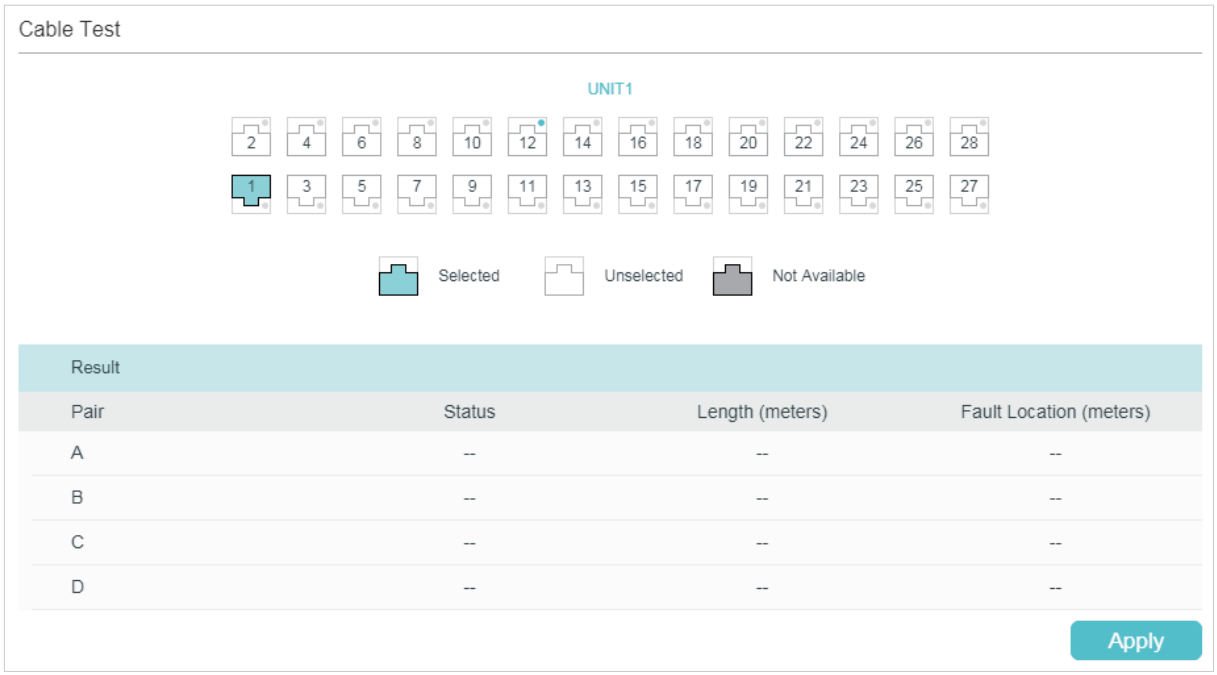

Follow these steps to diagnose the cable:

1) Select your desired port for the test and click **Apply**.
2) Check the test results in the **Result** section.

Pair	Displays the Pair number.
Status	Displays the cable status. Test results include normal, closed, open and crosstalk. Normal : The cable is connected normally. Closed: A short circuit is being caused by abnormal contact of wires in the cable. Open: No device is connected to the other end or the connection is broken. Crosstalk: Impedance mismatch due to the poor quality of the cable.
Length	If the connection status is normal, the length range of the cable is displayed.

Fault Location	If the connection status is short, close or crosstalk, here displays the length from the port to the trouble spot.

1.2 Using the CLI

On privileged EXEC mode or any other configuration mode, you can use the following command to check the connection status of the cable that is connected to the switch.

show cable-diagnostics interface { **fastEthernet** *port* | **gigabitEthernet** *port* | **ten-gigabitEthernet** *port* }

View the cable diagnostics of the connected Ethernet Port.

port: Enter the port number in 1/0/1 format to check the result of the cable test.

show cable-diagnostics careful interface { **fastEthernet** *port* | **gigabitEthernet** *port* | **ten-gigabitEthernet** *port* }

View the cable diagnostics of the connected Ethernet Port. When taking the careful cable test, the switch will only test the cable for the port which is in the link-down status.

port: Enter the port number in 1/0/1 format to check the result of the cable test.

The following example shows how to check the cable diagnostics of port 1/0/2:

Switch#show cable-diagnostics interface gigabitEhternet 1/0/2

Port	Pair	Status	Length	Error
Gi1/0/2	Pair-A	Normal	2 (+/- 10m)	---
	Pair-B	Normal	2 (+/- 10m)	---
	Pair-C	Normal	0 (+/- 10m)	---
	Pair-D	Normal	2 (+/- 10m)	---

2 Diagnosing the Network

The network diagnostics feature provides Ping testing and Tracert testing. You can test connectivity to remote hosts, or to the gateways from the switch to the destination.

With Network Diagnostics, you can:

- Troubleshoot with Ping testing.
- Troubleshoot with Tracert testing.


2.1 Using the GUI

2.1.1 Troubleshooting with Ping Testing

You can use the Ping tool to test connectivity to remote hosts.

Choose the menu **MAINTENANCE > Network Diagnostics > Ping** to load the following page.

Figure 2-1 Troubleshooting with Ping Testing

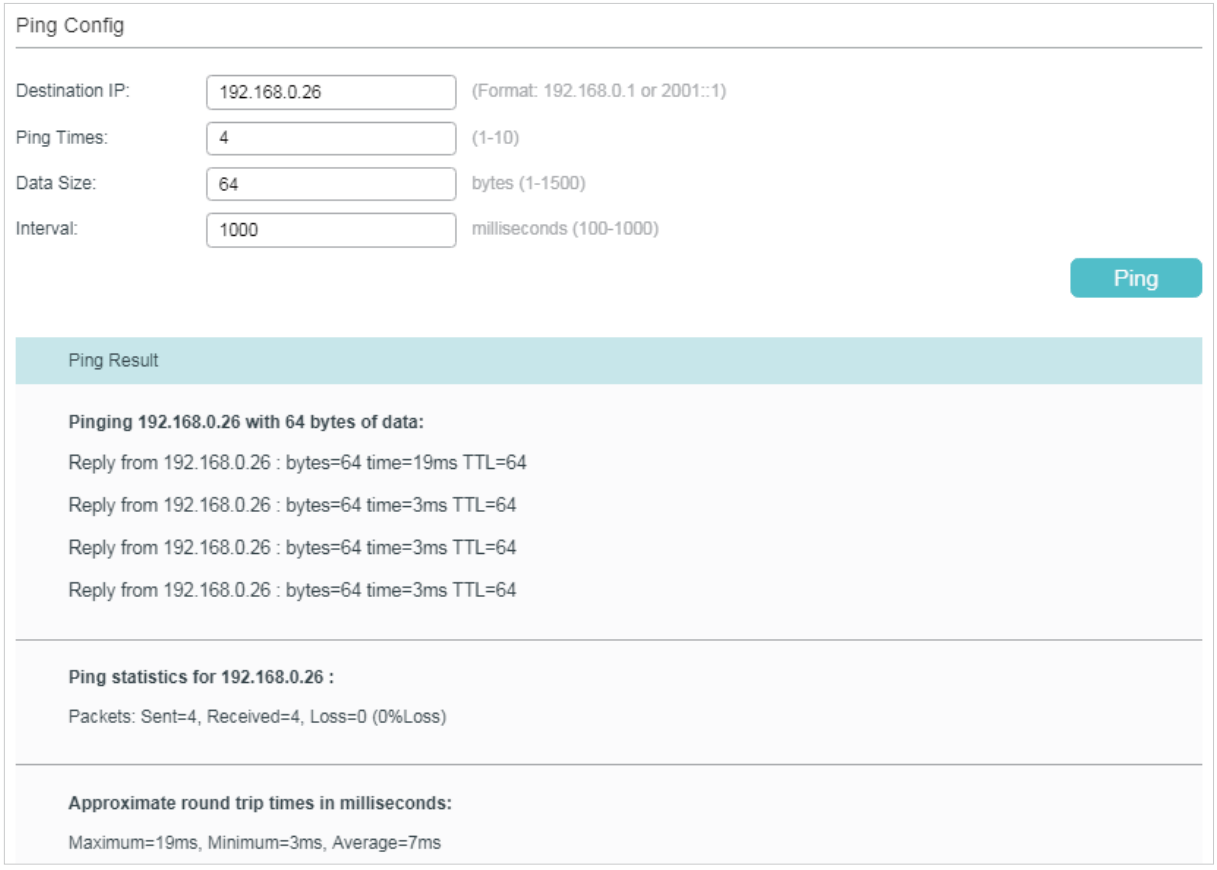

Follow these steps to test the connectivity between the switch and another device in the network:

1) In the **Ping Config** section, enter the IP address of the destination device for Ping test, set Ping times, data size and interval according to your needs, and then click **Ping** to start the test.

Destination IP	Enter the IP address of the destination node for Ping test. Both IPv4 and IPv6 are supported.
Ping Times	Enter the number of times test data will be sent for Ping testing. It is recommended to use the default value of 4.
Data Size	Enter the size of the data sent for Ping testing. It is recommended to keep the default value of 64 bytes.
Interval	Specify the interval at which ICMP request packets are sent. It is recommended to keep the default value of 1000 milliseconds.


2) In the **Ping Result** section, check the test results.

2.1.2 Troubleshooting with Tracert Testing

You can use the Tracert tool to find the path from the switch to the destination, and test connectivity between the switch and routers along the path.

Choose the menu **MAINTENANCE > Network Diagnostics > Tracert** to load the following page.

Figure 2-1 Troubleshooting with Tracert Testing

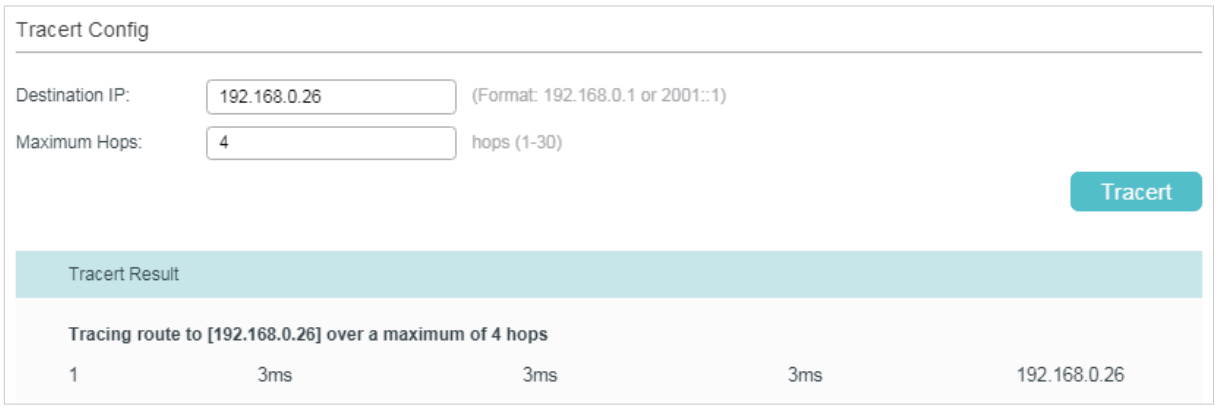

Follow these steps to test connectivity between the switch and routers along the path from the source to the destination:

1) In the **Tracert Config** section, enter the IP address of the destination, set the max hop, and then click **Tracert** to start the test.

Destination IP	Enter the IP address of the destination device. Both IPv4 and IPv6 are supported.
Maximum Hops	Specify the maximum number of the route hops the test data can pass through.

2) In the **Tracert Result** section, check the test results.

2.2 Using the CLI

2.2.1 Configuring the Ping Test

On privileged EXEC mode, you can use the following command to test the connectivity between the switch and one node of the network.

ping [ip | ipv6 **] {** *ip_addr* **} [-n** *count* **] [-l** *size* **] [-i** *interval* **]**

Test the connectivity between the switch and destination device.

ip: The type of the IP address for ping test should be IPv4.

ipv6: The type of the IP address for ping test should be IPv6.

ip_addr: The IP address of the destination node for ping test. If the parameter ip/ipv6 is not selected, both IPv4 and IPv6 addresses are supported, such as 192.168.0.100 or fe80::1234.

count: Specify the amount of times to send test data for Ping testing. The values are from 1 to 10 times; the default is 4 times.

size: Specify the size of the sending data for ping testing. The values are from 1 to 1500 bytes; the default is 64 bytes.

interval: Specify the interval to send ICMP request packets. The values are from 100 to 1000 milliseconds; the default is 1000 milliseconds.

The following example shows how to test the connectivity between the switch and the destination device with the IP address 192.168.0.10. Specify the ping times as 3, the data size as 1000 bytes and the interval as 500 milliseconds:

Switch#ping ip 192.168.0.10 **-n** 3 **-l** 1000 **-i** 500

Pinging 192.168.0.10 with 1000 bytes of data :

Reply from 192.168.0.10 : bytes=1000 time<16ms TTL=64

Reply from 192.168.0.10 : bytes=1000 time<16ms TTL=64

Reply from 192.168.0.10 : bytes=1000 time<16ms TTL=64

Ping statistics for 192.168.0.10:

Packets: Sent = 3 , Received = 3 , Lost = 0 (0% loss)

Approximate round trip times in milli-seconds:

Minimum = 0ms , Maximum = 0ms , Average = 0ms

2.2.2 Configuring the Tracert Test

On privileged EXEC mode, you can use the following command to test the connectivity between the switch and routers along the path from the source to the destination:

tracert [ip | ipv6] *ip_addr* [*maxHops*]

Test the connectivity of the gateways along the path from the source to the destination.

ip: The type of the IP address for tracert test should be IPv4.

ipv6: The type of the IP address for tracert test should be IPv6.

ip_addr: Enter the IP address of the destination device. If the parameter ip/ipv6 is not selected, both IPv4 and IPv6 addresses are supported, such as 192.168.0.100 or fe80::1234.

maxHops: Specify the maximum number of the route hops the test data can pass though. The range is 1 to 30 hops; the default is 4 hops.

The following example shows how to test the connectivity between the switch and the network device with the IP address 192.168.0.100. Set the maxhops as 2:

Switch#tracert 192.168.0.100 2

Tracing route to 192.168.0.100 over a maximum of 2 hops

1 8 ms 1 ms 2 ms 192.168.1.1

2 2 ms 2 ms 2 ms 192.168.0.100

Trace complete.

3 Appendix: Default Parameters

Default settings of Network Diagnostics are listed in the following tables.

Table 3-1 Default Settings of Ping Config

Parameter	Default Setting
Destination IP	192.168.0.1
Ping Times	4
Data Size	64 bytes
Interval	1000 milliseconds

Table 3-2 Default Settings of Tracert Config

Parameter	Default Setting
Destination IP	192.168.0.100
Maximum Hops	4 hops

Part 40

Configuring System Logs

CHAPTERS

1. Overview
2. System Logs Configurations
3. Configuration Example
4. Appendix: Default Parameters

1 Overview

The switch generates messages in response to events, faults, or errors occurred, as well as changes in configuration or other occurrences. You can check system messages for debugging and network management.

System logs can be saved in various destinations, such as the log buffer, log file or remote log servers, depending on your configuration. Logs saved in the log buffer and log file are called local logs, and logs saved in remote log servers are called remote logs. Remote logs facilitate you to remotely monitor the running status of the network.

You can set the severity level of the log messages to control the type of log messages saved in each destination.

2 System Logs Configurations

System logs configurations include:

- Configure the local logs.
- Configure the remote logs.
- Backing up the logs.
- Viewing the log table.

Configuration Guidelines

Logs are classified into the following eight levels. Messages of levels 0 to 4 mean the functionality of the switch is affected. Please take actions according to the log message.

Table 2-1 Levels of Logs

Severity	Level	Description	Example
Emergencies	0	The system is unusable and you have to reboot the switch.	Software malfunctions affect the functionality of the switch.
Alerts	1	Actions must be taken immediately.	The memory utilization reaches the limit.
Critical	2	Cause analysis or actions must be taken immediately.	The memory utilization reaches the warning threshold.
Errors	3	Error operations or unusual processing that will not affect subsequent operations but that should be noted and analyzed.	Wrong command or password is entered.
Warnings	4	Conditions that may cause process failure and that should be noted.	Error protocol packets are detected.
Notifications	5	Normal but significant conditions.	The **shutdown** command is applied to a port.
Informational	6	Normal messages for your information.	The **display** command is used.
Debugging	7	Debug-level messages that you can ignore.	General operational information.

2.1 Using the GUI

2.1.1 Configuring the Local Logs

Choose the menu **MAINTENANCE > Logs > Local Logs** to load the following page.

Figure 2-1 Configuring the Local Logs



Follow these steps to configure the local logs:

1) Select your desired channel and configure the corresponding severity and status.

Channel	Local logs includes 2 channels: log buffer and log file. Log buffer indicates the RAM for saving system logs. The channel is enabled by default. Information in the log buffer is displayed on the **MAINTENANCE > Logs > Logs Table** page. It will be lost when the switch is restarted. Log file indicates the flash sector for saving system logs. Information in the log file will not be lost after the switch is restarted and can be exported on the **MAINTENANCE > Logs > Back Up Logs** page.
Severity	Specify the severity level of the log messages that are saved to the selected channel. Only log messages with a severity level value that is the same or lower than this will be saved. There are eight severity levels marked from 0 to 7. A lower value indicates a higher severity.
Status	Enable or disable the channel.
Sync-Periodic	By default, the log information is saved in the log buffer immediately, and synchronized to the log file every 24 hours. If necessary, you can modify the log synchronization frequency using the CLI.

2) Click **Apply**.


2.1.2 Configuring the Remote Logs

You can configure up to four hosts to receive the switch's system logs. These hosts are called Log Servers. The switch will forward the log message to the servers once a log

message is generated. To display the logs, the servers should run a log server software that complies with the syslog standard.

Choose the menu **MAINTENANCE > Logs > Remote Logs** to load the following page.

Figure 2-2 Configuring the Remote Logs

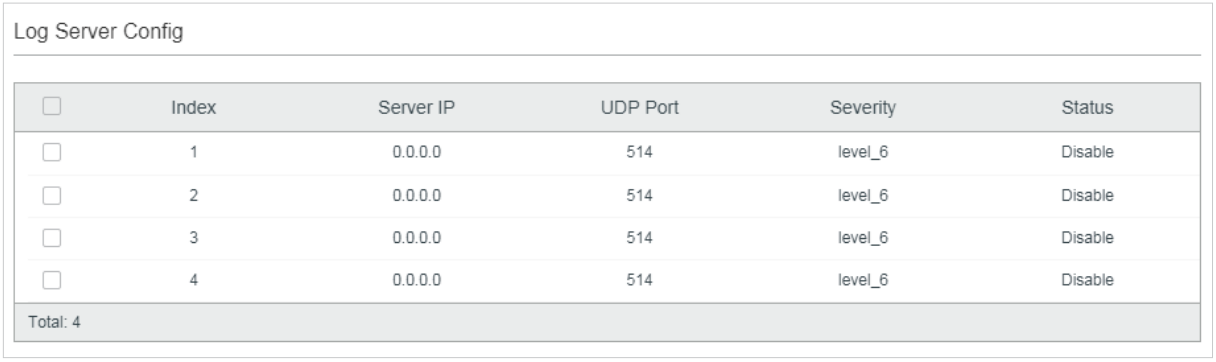

Follow these steps to configure the information of remote log servers:

1) Select an entry to enable the server, and then set the server IP address and severity.

Server IP	Specify an IP address of the log server.
UDP Port	Displays the UDP port used by the server to receive the log messages. The switch uses standard port 514 to send log messages.
Severity	Specify the severity level of the log messages sent to the selected log server. Only log messages with a severity level value that is the same or lower than this will be saved.
Status	Enable or disable the log server.

2) Click **Apply**.

2.1.3 Backing up the Logs

Choose the menu **MAINTENANCE > Logs > Back Up Logs** to load the following page.

Figure 2-3 Backing up the Log File




Click **Back Up Logs** to save the system logs as a file on your computer. If the switch system breaks down, you can check the file for troubleshooting.

2.1.4 Viewing the Log Table

Choose the menu **MAINTENANCE > Logs > Log Table** to load the following page.

Figure 2-4 View the Log Table

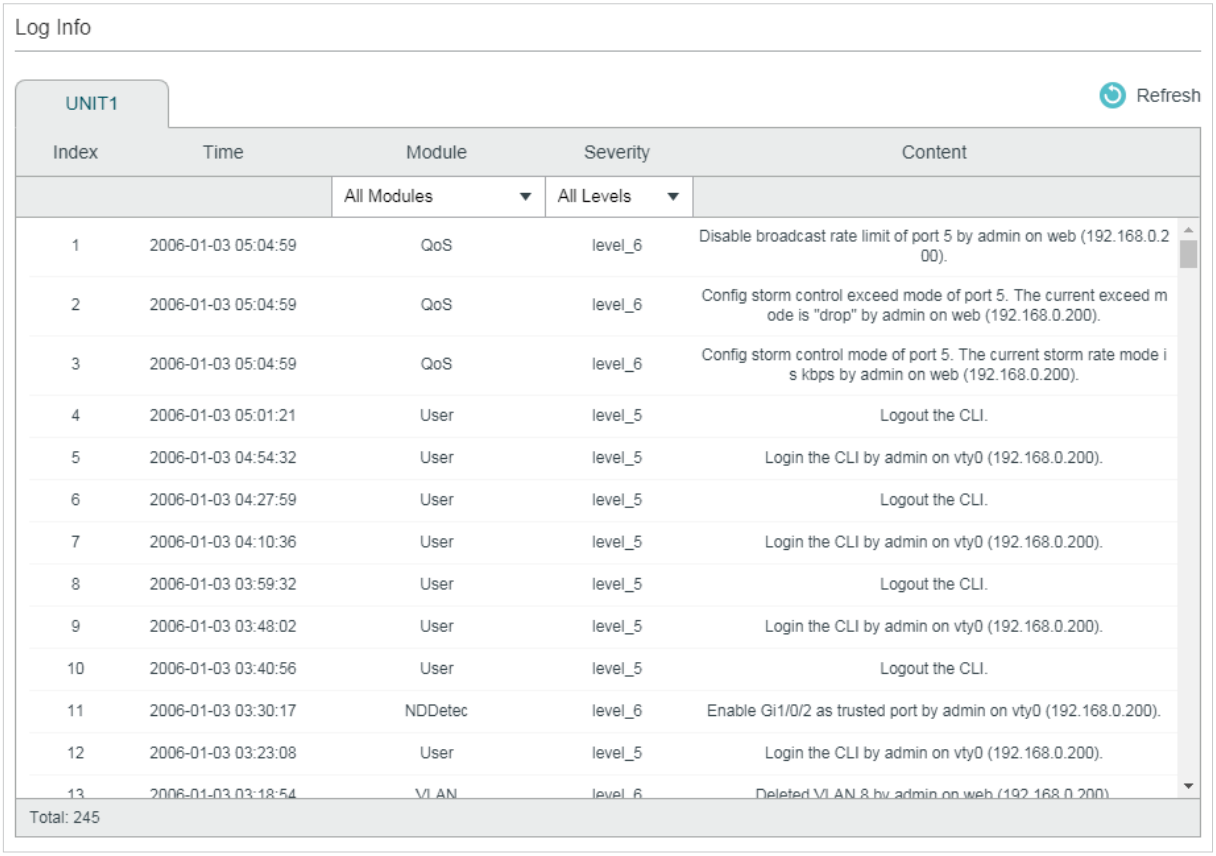

Select a module and a severity to view the corresponding log information.

Time	Displays the time the log event occurred. To get the exact time when the log event occurs, you need to configure the system time on the **SYSTEM > System Info > System Time** Web management page.
Module	Select a module from the drop-down list to display the corresponding log information.
Severity	Select a severity level to display the log information whose severity level value is the same or smaller.
Content	Displays the detailed information of the log event.

2.2 Using the CLI

2.2.1 Configuring the Local Logs

Follow these steps to configure the local logs:

Step 1	**configure** Enter global configuration mode.
Step 2	**logging buffer** Configure the switch to save system messages in log buffer. Log buffer indicates the RAM for saving system logs. Information in the log buffer will be lost when the switch is restarted. You can view the logs with **show logging buffer** command.
Step 3	**logging buffer level** *level* Specify the severity level of the log information that should be saved to the buffer. *level*: Enter the severity level ranging from 0 to 7. A lower value indicates a higher severity. Only log messages with a severity level value that is the same or lower than this will be saved. The default level is 6, indicating that the log information of levels 0 to 6 will be saved in the log buffer.
Step 4	**logging file flash** Configure the switch to save system messages in log file. Log file indicates the flash sector for saving system logs. Information in the log file will not be lost after the switch is restarted. You can view the logs with **show logging flash** command.
Step 5	**logging file flash frequency** { **periodic** *periodic* | **immediate** } Specify the frequency to synchronize the system logs in the log buffer to the flash. *periodic*: Specify the frequency ranging from 1 to 48 hours. By default, the synchronization process takes place every 24 hours. **immediate**: The system log file in the buffer will be synchronized to the flash immediately. This option means frequent operations on the flash and is not recommended.
Step 6	**logging file flash level** *level* Specify the severity level of the log information that should be saved to the flash. *level*: Enter the severity level ranging from 0 to 7. A lower value indicates a higher severity. Only log messages with a severity level value that is the same or lower than this will be saved to the flash. The default level is 3, indicating that the log messages of levels 0 to 3 will be saved in the log flash.
Step 7	**show logging local-config** View the configuration information of the local logs.
Step 8	**end** Return to privileged EXEC mode.
Step 9	**copy running-config startup-config** Save the settings in the configuration file.

The following example shows how to configure the local logs on the switch. Save logs of levels 0 to 5 to the log buffer, and synchronize logs of levels 0 to 2 to the flash every 10 hours:

Switch#configure

Switch(config)#logging buffer

Switch(config)#logging buffer level 5

Switch(config)#logging file flash

Switch(config)#logging file flash frequency periodic 10

Switch(config)#logging file flash level 2

Switch(config)#show logging local-config

Channel	Level	Status	Sync-Periodic
-------	-----	------	-------------
Buffer	5	enable	Immediately
Flash	2	enable	10 hour(s)
Console	5	enable	Immediately
Monitor	5	enable	Immediately

Switch(config)#end

Switch#copy running-config startup-config

2.2.2 Configuring the Remote Logs

You can configure up to four hosts to receive the switch's system logs. These hosts are called Log Servers. The switch will forward the log message to the servers once a log message is generated. To display the logs, the servers should run a log server software that complies with the syslog standard.

Follow these steps to set the remote log:

Step 1	**configure** Enter global configuration mode.

Step 2	**logging host index** *idx host-ip level* Configure a remote host to receive the switch's system logs. The host is called Log Server. You can remotely monitor the settings and operation status of the switch through the log server. *idx*: Enter the index of the log server. The switch supports 4 log servers at most. *host-ip*: Enter the IP address of the log server. *level*: Specify the severity level of the log messages sent to the log server. The range is from 0 to 7, and a lower value indicates a higher severity. Only log messages with a severity level value that is the same or lower than this will be sent. The default is 6, indicating that the log information of levels 0 to 6 will be sent to the log server.
Step 3	**show logging loghost** [*index*] View the configuration information of the log server. *index*: Enter the index of the log server to view the corresponding configuration information. If no value is specified, information of all log hosts will be displayed.
Step 4	**end** Return to privileged EXEC mode.
Step 5	**copy running-config startup-config** Save the settings in the configuration file.

The following example shows how to set the remote log on the switch. Enable log server 2, set its IP address as 192.168.0.148, and allow logs of levels 0 to 5 to be sent to the server:

Switch#configure

Switch(config)# logging host index 2 192.168.0.148 5

Switch(config)# show logging loghost

Index	Host-IP	Severity	Status
1	0.0.0.0	6	disable
2	192.168.0.148	5	enable
3	0.0.0.0	6	disable
4	0.0.0.0	6	disable

Switch(config)#end


Switch#copy running-config startup-config

3 Configuration Example

3.1 Network Requirements

The company network manager needs to monitor network of department A for troubleshooting.

Figure 3-1 Network Topology

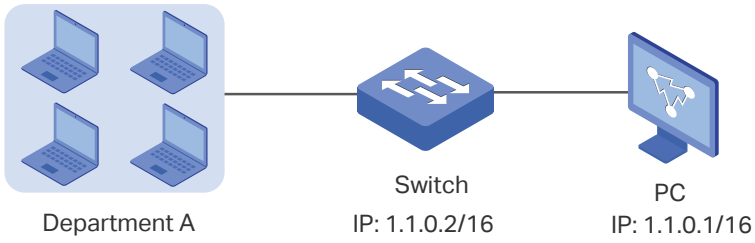

3.2 Configuration Scheme


The network manager can configure the PC as a log server to receive the switch's system logs. Make sure the switch and the PC are reachable to each other; configure a log server that complies with the syslog standard on the PC and set the PC as the log server.

Demonstrated with T2600G-28TS, this chapter provides configuration procedures in two ways: using the GUI and Using the CLI.

3.3 Using the GUI

1) Choose the menu **MAINTENANCE > Logs > Remote Logs** to load the following page. Enable host 1, and set the PC's IP address 1.1.0.1 as the server IP address, and the severity as level_5; click **Apply**.

Figure 3-2 Configuring the Log Server

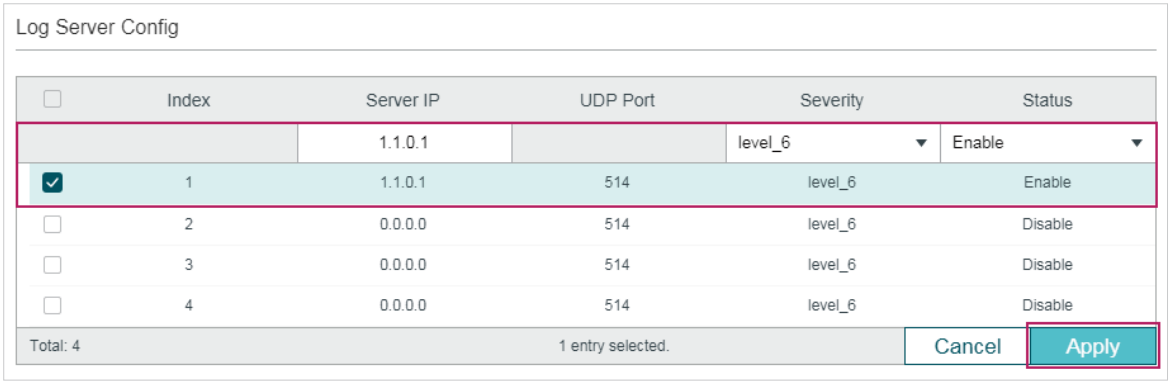

2) Click Save to save the settings.

3.4 Using the CLI

Configure the remote log host.

Switch#configure

Switch(config)# logging host index 1 1.1.0.1 5

Switch(config)#end

Switch#copy running-config startup-config

Verify the Configurations

Switch# show logging loghost

Index	Host-IP	Severity	Status
1	1.1.0.1	5	enable
2	0.0.0.0	6	disable
3	0.0.0.0	6	disable
4	0.0.0.0	6	disable

4 Appendix: Default Parameters

Default settings of maintenance are listed in the following tables.

Table 4-1 Default Settings of Local Logs

Parameter	Default Setting
Status of Log Buffer	Enabled
Severity of Log Buffer	Level_6
Sync-Periodic of Log Buffer	Immediately
Status of Log File	Disabled
Severity of Log File	Level_3
Sync-Periodic of Log File	24 hours

Table 4-2 Default Settings of Remote Logs

Parameter	Default Setting
Server IP	0.0.0.0
UDP Port	514
Severity	Level_6
Status	Disabled

COPYRIGHT & TRADEMARKS

Specifications are subject to change without notice. tp-link is a registered trademark of TP-Link Technologies Co., Ltd. Other brands and product names are trademarks or registered trademarks of their respective holders.

No part of the specifications may be reproduced in any form or by any means or used to make any derivative such as translation, transformation, or adaptation without permission from TP-Link Technologies Co., Ltd. Copyright © 2018 TP-Link Technologies Co., Ltd. All rights reserved.

https://www.tp-link.com

FCC STATEMENT

Product Name：Gigabit L2 Managed Switch

Model Number: T2600G-18TS/T2600G-28TS/T2600G-52TS/T2600G-28MPS/T2600G-28SQ

Responsible party:

TP-Link USA Corporation, d/b/a TP-Link North America, Inc.

Address: 145 South State College Blvd. Suite 400, Brea, CA 92821

Website: https://www.tp-link.com/us/

Tel: +1 626 333 0234

Fax: +1 909 527 6803

E-mail: sales.usa@tp-link.com

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

1) This device may not cause harmful interference.
2) This device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

CE Mark Warning



This is a class A product. In a domestic environment, this product may cause radio interference, in which case the user may be required to take adequate measures.

EU declaration of conformity

TP-Link hereby declares that the device is in compliance with the essential requirements and other relevant provisions of directives 2014/30/EU, 2014/35/EU, 2009/125/EC and 2011/65/EU.

The original EU declaration of conformity may be found at *https://www.tp-link.com/en/ce*

Canadian Compliance Statement

This device complies with Industry Canada license-exempt RSSs. Operation is subject to the following two conditions:

1) This device may not cause interference, and
2) This device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes :

1) l'appareil ne doit pas produire de brouillage;
2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, meme si le brouillage est susceptible d'en compromettre le fonctionnement.

Industry Canada Statement

CAN ICES-3 (A)/NMB-3(A)

NCC Notice

注意！

依據 低功率電波輻射性電機管理辦法

第十二條 經型式認證合格之低功率射頻電機，非經許可，公司、商號或使用者均不得擅自變更頻率、加大功率或變更原設計之特性或功能。

第十四條　低功率射頻電機之使用不得影響飛航安全及干擾合法通行；經發現有干擾現象時，應立即停用，並改善至無干擾時方得繼續使用。前項合法通信，指依電信規定作業之無線電信。低功率射頻電機需忍受合法通信或工業、科學以及醫療用電波輻射性電機設備之干擾。

BSMI Notice

安全諮詢及注意事項

- 請使用原裝電源供應器或只能按照本產品注明的電源類型使用本產品。
- 清潔本產品之前請先拔掉電源線。請勿使用液體、噴霧清潔劑或濕布進行清潔。
- 注意防潮，請勿將水或其他液體潑灑到本產品上。
- 插槽與開口供通風使用，以確保本產品的操作可靠並防止過熱，請勿堵塞或覆蓋開口。
- 請勿將本產品置放於靠近熱源的地方。除非有正常的通風，否則不可放在密閉位置中。
- 請不要私自打開機殼，不要嘗試自行維修本產品，請由授權的專業人士進行此項工作。

此為甲類資訊技術設備，于居住環境中使用時，可能會造成射頻擾動，在此種情況下，使用者會被要求採取某些適當的對策。

限用物質含有情況標示聲明書

產品元件名稱	限用物質及其化學符號					
	鉛 Pb	鎘 Cd	汞 Hg	六價鉻 CrVI	多溴聯苯 PBB	多溴二苯醚 PBDE
PCB	○	○	○	○	○	○
外殼	○	○	○	○	○	○
電源供應板	-	○	○	○	○	○
備考1. ″超出0.1 wt %″ 及 ″超出0.01 wt %″ 系指限用物質之百分比含量超出百分比含量基準值。 備考2.″○″系指該項限用物質之百分比含量未超出百分比含量基準值。 備考3.″-″ 系指該項限用物質為排除項目。						

Продукт сертифіковано згідно с правилами системи УкрСЕПРО на відповідність вимогам нормативних документів та вимогам, що передбачені чинними законодавчими актами України.

EAC


Safety Information

- Keep the device away from water, fire, humidity or hot environments.
- Do not attempt to disassemble, repair, or modify the device.
- Do not use damaged charger or USB cable to charge the device.
- Do not use any other chargers than those recommended

Please read and follow the above safety information when operating the device. We cannot guarantee that no accidents or damage will occur due to improper use of the device. Please use this product with care and operate at your own risk.

この装置は、クラスA情報技術装置です。この装置を家庭環境で使用すると電波妨害を引き起こすことがあります。この場合には使用者が適切な対策を講ずるよう要求されることがあります。
VCCI-A

Explanation of the symbols on the product label

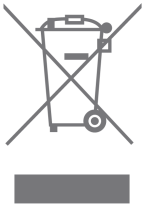Symbol	Explanation
	AC voltage
	Indoor use only.
	RECYCLING This product bears the selective sorting symbol for Waste electrical and electronic equipment (WEEE). This means that this product must be handled pursuant to European directive 2012/19/EU in order to be recycled or dismantled to minimize its impact on the environment. User has the choice to give his product to a competent recycling organization or to the retailer when he buys a new electrical or electronic equipment.