




Quick Installation Guide

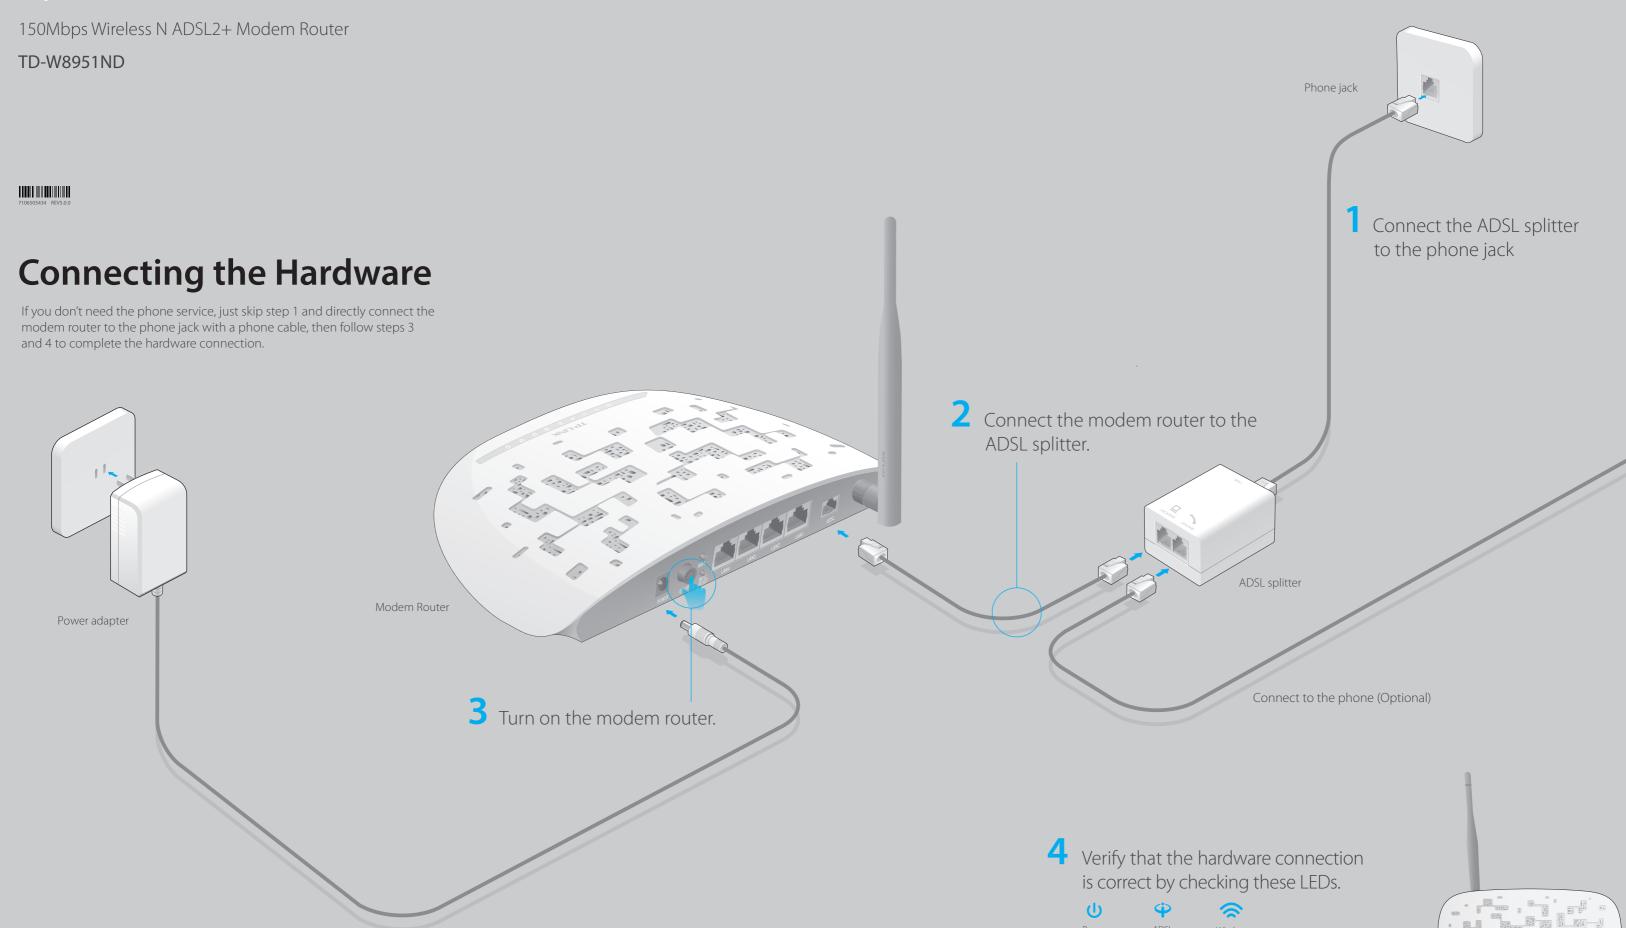

1. The ADSL LED takes about 1 to 2 minutes to stabilize.

2. If the Wireless LED $\stackrel{\bigstar}{\sim}$ is off, please press the WiFi button on the rear panel for 2 seconds, then check the LEDs again in a few seconds.

Configuring the Modem Router

1. Connecting your computer to the modem router (Wired or Wireless).

Wired

Connect the computer to the LAN 1, LAN 2, LAN3 or LAN 4 port on your modem router with an Ethernet cable.



Wireless

Connect wirelessly by using the SSID (wireless network name) and Wireless Password printed on the product label at the bottom of the modem router.



2. Configuring the modem router via a web browser or the CD Setup Wizard.

Please consult your ISP (Internet Service Provider) for the following information before configuring the modem router.						
ISP Connection Type:	VPI:	VCI:				
Connection Type (Encapsulation Type):						
If your ISP Connection Type is PPPoE/PPPoA, please get further information of						
your account username and	bassword.					

Option 1 Via a web browser

A Enter http://tplinkmodem.net or 192.168.1.1 in the address bar of a web browser. Use admin for both username and password, and then click Login.

Note: If the login window does not appear, please refer to FAQ > Q1.

http://tplinkmo	http://tplinkmodem.net	
Username:	admin	
Password:	admin	
	Login	


B Select **Quick Start** from the menu and click **RUN WIZARD**.

Quick Start	Interface Setup	Advanced Setup	Access Management	Maintenance	Status	Help
Thi	s ADSL Route	er is ideal for	RUN WIZARD			

 A Quick Start window will pop up. Click NEXT, and select your Time Zone, then click NEXT. D Complete the **Internet Settings** with the information provided by your ISP and click **NEXT**. Here we use PPPoE/PPPoA for demonstration.


Notes:

- 1. Per FCC regulations, all Wi-Fi products marketed in the U.S. must be fixed to the U.S. region only.
- 2. All the Internet settings in the figure below are used for demonstration only. If you are unsure of the Internet settings, please contact your ISP.

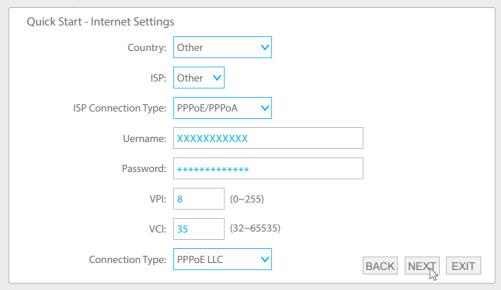

Verify or change the Wlan settings (wireless network settings) and click NEXT to continue.

Note: You may personalize your SSID (wireless network name) and key. Once done, you will have to reconnect to your wireless network using the new SSID and key.

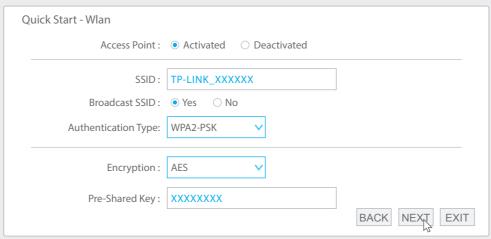


F Click **SAVE** to complete the configuration.

Option 2 Via the CD Setup Wizard (For Windows users only)

Note: Mac OS and Linux users, please refer to Option 1 to configure the modem router.

- A Insert the TP-LINK Resource CD into the CD-ROM drive.
- **B** Choose your language, select **TD-W8951ND** and click **Start Setup**. Follow the on-screen instructions to complete the initial configuration of the modem router.

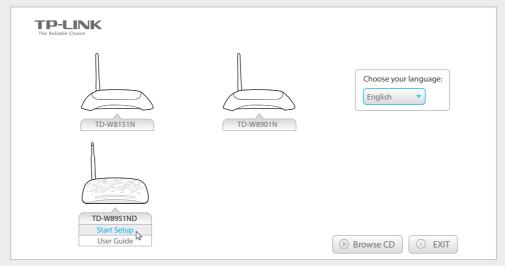

FAQ (Frequently Asked Questions)

Q1. What can I do if the login page does not appear?

- A1. Make sure the computer is connected to the modem router properly.
- A2. If the computer is set to a static or fixed IP address, change it to obtain an IP address automatically from the modem router.
- A3. Verify http://tplinkmodem.net is correctly entered in the web browser and press Enter.
- A4. Use another web browser and try again.
- A5. Reboot your modem router and try again.
- A6. Disable and enable the active network adapter.

Q2. What can I do if I cannot access the Internet?

- A1. Make sure the telephone and Ethernet cables are plugged in correctly.
- A2. Try to log into the web management page of the modem router using the default address at http://tplinkmodem.net. If you can, try the following answers. If you cannot, change your computer to obtain an IP address automatically from the modem router.
- A3. Consult your ISP and make sure all the VPI/VCI, Connection Type, account username and password are correct. If they are not, please replace them with the correct settings and try again.
- A4. Restore the modem router to its factory default settings and reconfigure the modem router by following the instructions in this Quick Installation Guide.
- A5. Please contact our Technical Support if the problem still exists.

Q3. How do I restore the modem router to its factory default settings?

A1. With the modem router powered on, press and hold down the **WPS/RESET** button on the rear panel of the modem router for at least 10 seconds until some LEDs go off, then release the button.



A2. Log into the web management page of the modem router, and go to **Maintenance** > **SysRestart**, select **Factory Default Settings** and click **RESTART**, then wait until the reset process is complete.

WPS/RESET Button Press & Hold 10 seconds

Q4. What can I do if I forget my password?

• Web Management page password:

Refer to FAQ > Q3 to reset the modem router, and then use **admin** (all lowercase) for both username and password to log in.

• Wireless Network password:

A1. The default Wireless Password/PIN is printed on the product label of the modem router.

A2. If the default wireless password has been changed, log into the modem router's web management page and go to **Interface Setup > Wireless** to retrieve or reset your password.

- A1. Check your cables and make sure they are all plugged in correctly, including the telephone lines and power adapter.
- A2. Manually change your DSL settings. Log into the modem router's web management page. Go to **Advanced Setup > ADSL**, change the **ADSL Mode** to **G.DMT**, and click **SAVE**. If this cannot work, try to change the **ADSL Mode** to **ADSL2** and click **SAVE**.
- A3. Restore your modem router to its factory default settings.
- A4. Remove the ADSL splitter, directly connect the modem router to the phone jack and then reconfigure the modem router by following the instructions in this Quick Installation Guide.
- A5. Contact your Internet service provider to verify if the ADSL line is in good status.
- A6. If you have tried all the suggestions above and the problem still exists, contact our Technical Support.