TP-LINK®
The Reliable Choice

Quick
Installation Guide

450Mbps Wireless N Router

TL-WR940N / TL-WR941ND

Typical Connection

7106504890   REV5.0.0
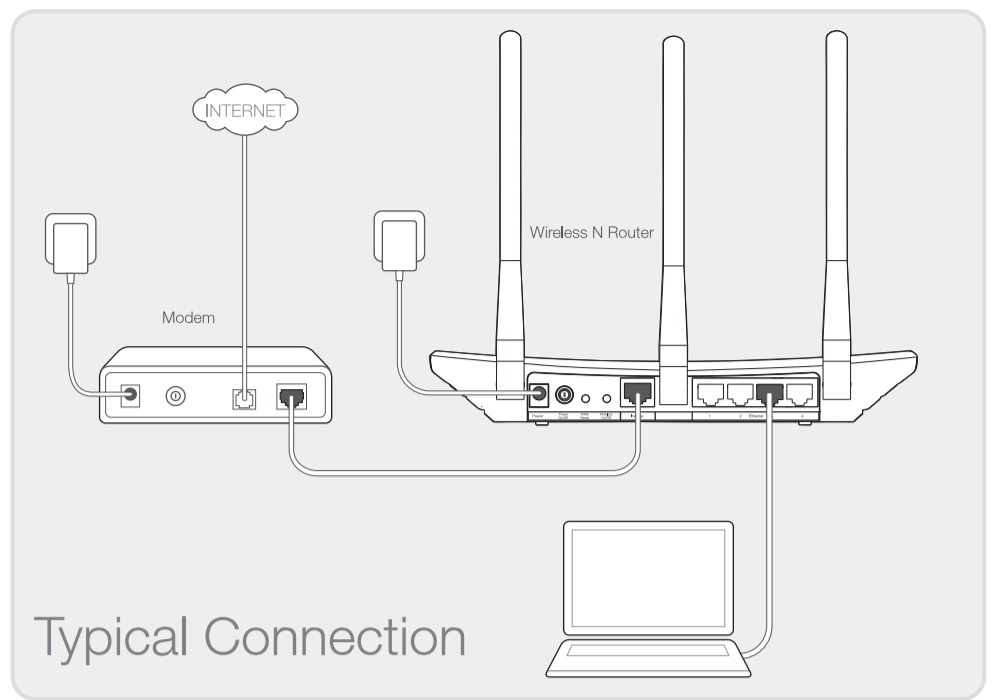
1. Connect the Hardware

1 **Power off** the modem, and remove the backup battery if any.

Power Off

INTERNET

2 Connect the modem to the Internet port on your router using an Ethernet cable.

INTERNET

3 **Power on** the modem, wait for 2 minutes and then **power on** the router.

Power On

INTERNET

Power On

4 Check the following LEDs to ensure the hardware connection is correct.

Power On | Wireless On | Internet Blue

Note: If your Internet comes via an Ethernet cable from the wall instead of any DSL/Cable/Satellite modems, please connect the Ethernet cable directly to the router's WAN port.

2. Configure the Router

Method 1 Via Web Browser

1 Connect your computer to the router (Wired or Wireless).

• **Wired**

Ethernet cable

Or

• **Wireless**

Connect wirelessly by using the default network name (SSID) and password printed on the product label at the bottom of the router.

2 Open a web browser on the computer and configure the router according to the following main clues.

a Enter **http://tplinkwifi.net** in the address bar.

http://tplinkwifi.net

Type in **admin** for both the user name and password and click **Login**.

Note: If the login window does not appear, please refer to FAQ->Q1.

| 👤 | admin |
| 🔑 | admin |

Login

b Click **Next** to continue the Quick Setup.

Quick Setup

To continue, please click the Next button.
To exit, please click the Exit button.

Exit | Next

c Select your WAN Connection Type, or click **Auto-Detect** if you are unsure what your connection type is. Click **Next** and follow the instructions to continue.

Quick Setup-WAN Connection Type

◉ Auto-Detect
○ Dynamic IP (Most Common Cases)
○ Static IP
○ PPPoE/Russian PPPoE
○ L2TP/Russian L2TP
○ PPTP/Russian PPTP

Back | Next

d Verify or change the wireless network settings, and click **Next**.

Note: You may customize your wireless network name and password. If you do so, please note down the new ones.

Quick Setup- Wireless

Wireless Network Name: TP-LINK_XXXX
Region:
Warning:
Wireless Security:
Wireless Password: XXXXXXXX

Back | Next

e Click **Finish** to complete the setup.

Quick Setup-Finish
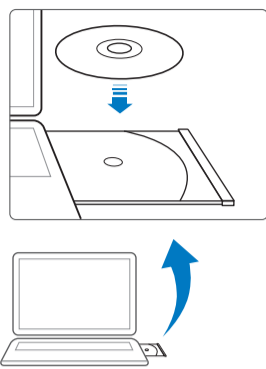
Congratulations!

Back | Finish

☺ **Enjoy!**

Now your wired and wireless devices can connect to the Internet !

Method 2 Via CD Setup Wizard

Note: If you are using a computer that cannot run the mini CD, please refer to Method 1 for configuration.

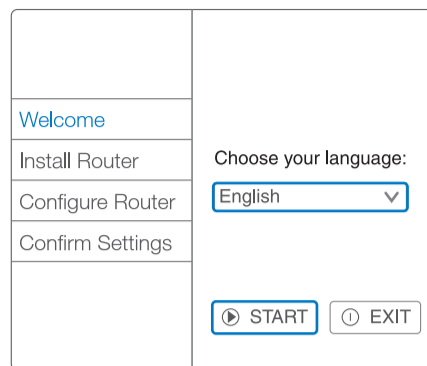**1** Insert the TP-LINK Resource CD into the CD-ROM drive.

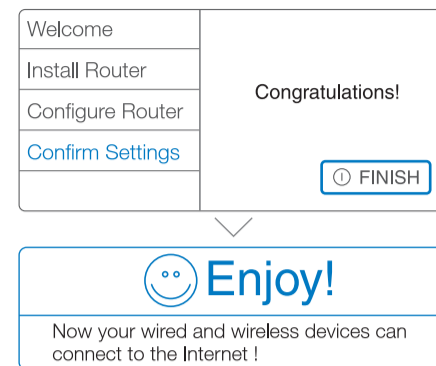**2** Select TL-WR941ND and then click **Easy Setup Assistant**.

Note: If the main page does not display on your computer, browse the files on the CD and double click Autorun.exe.

> TL-WR941ND
> Easy Setup Assistant
> User Guide
>
> ▶ Browse CD   ⓘ EXIT
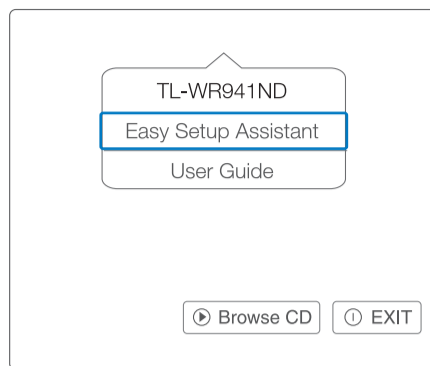
3 Choose your language, click **START** and the Easy Setup Assistant will guide you through the setup process.

> Welcome
> Install Router
> Configure Router
> Confirm Settings
>
> Choose your language:
> English ▽
>
> ▶ START   ⓘ EXIT

4 Click **FINISH** to complete the setup.

> Welcome
> Install Router
> Configure Router
> Confirm Settings
>
> Congratulations!
>
> ⓘ FINISH
>
> 😊 Enjoy!
> Now your wired and wireless devices can connect to the Internet !
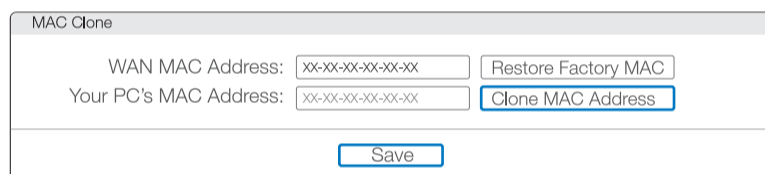
Frequently Asked Questions (FAQ)

Q1. What can I do if the login window does not appear?

A1. If the computer is set to a static or fixed IP address, change it to obtain an IP address automatically.

A2. Verify that 'http://tplinkwifi.net' is correctly entered in the web browser. Alternatively, enter 'http://192.168.0.1' in the web browser and press 'Enter'.

A3. Use another web browser and try again.

A4. Reboot your router and try again.

A5. Disable the network adapter used currently and then enable it again.

Q2. What can I do if I cannot access the Internet?

A1. Check if the Internet is working properly by connecting a computer directly to the modem via Ethernet cable. If not, contact your Internet Service Provider.

A2. Open a web browser, enter 'http://tplinkwifi.net' and try to set up again.

A3. Reboot your router and try again.

Note: For cable modem users, reboot the modem first. If the problem still exists, go to Network>MAC Clone, then click Clone MAC Address and Save.

> MAC Clone
>
> WAN MAC Address: xx-xx-xx-xx-xx-xx   Restore Factory MAC
> Your PC's MAC Address: xx-xx-xx-xx-xx-xx   Clone MAC Address
>
> Save

Q3. How do I restore the router to its factory default settings?

A1. While the router is powered on, press and hold the 'WPS/Reset' button on the rear panel of the router for approximately 8 seconds.

A2. Log in Web Management page of the router, and go to System tools->Factory Defaults, click Restore, then wait until the progress bar loading finished.

WPS/Reset Button
Press & Hold 8 seconds
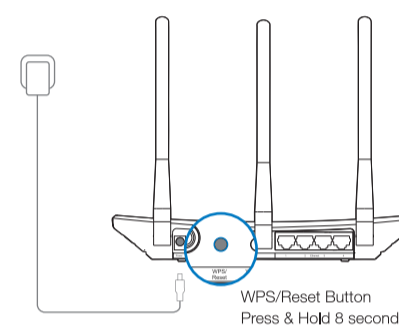
Q4. What can I do if I forget my web management page password?

A. Restore the router to its factory default settings and then use the default User Name 'admin' and Password 'admin' to log in.

Q5. What can I do if I forget my wireless network password?

A1. The factory default password can be found on the product label printed on the bottom of the router.

A2. If you have changed your password, log in to the router's Web Management page, go to Wireless>Wireless Security to obtain or reset your password.

Note: If your questions are not answered here, please refer to http://www.tp-link.com/en/support/faq and click Contact Technical Support for further assistance.

LED Indicators

Icon	Name	Status	Indication
⏻	(Power)	Off	Power is off.
		On	Power is on.
📶	(Wireless)	Off	The wireless function is disabled.
		On	The wireless function is working properly.
🖥	(Ethernet)	Off	No device(s) is connected to the Ethernet port(s) 1/2/3/4 .
		On	There is device(s) connected to the Ethernet port(s) 1/2/3/4.
◎	(Internet)	Blue	The Internet port is connected, and the Internet is accessible.
		Orange	The Internet port is connected, but the Internet is inaccessible.
		Off	The Internet port isn't connected, and the Internet is inaccessible.
🔒	(WPS)	Flashing	WPS button on the router is pressed, and the router is trying to connect a wireless device to its network via WPS.
		On	The connection via WPS is successful.
		Off	The connection via WPS fails.

ЕАС