


Hardware Installation

Before you start, you should prepare the following items


- Windows 2000/XP/Vista/7 computer with print server setup CD
- One USB device with USB port

Hardware Installation

1. Turn off the USB device's power.
2. Connect your USB device to the TL-PS310U.

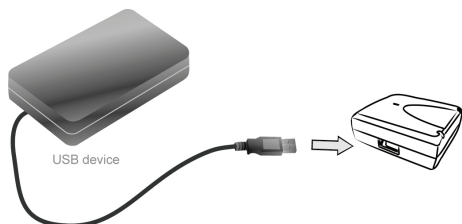

3. Connect the TL-PS310U to the router or switch/HUB with the Ethernet cable.

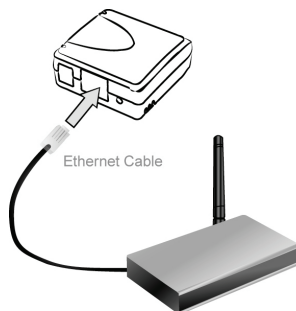

4. Connect the power adapter to the TL-PS310U. When the Link LED lights up, the TL-PS310U is correctly connected to the network.

Factory Default Settings

- IP address: 192.168.0.10/255.255.255.0
- Password: the TL-PS310U does not come with a default password.


Software Installation

1


Install the MFP and Storage Software

- 1 Insert the setup CD into your CD-drive. The auto-run program will be started.

Select **TL-PS310U**

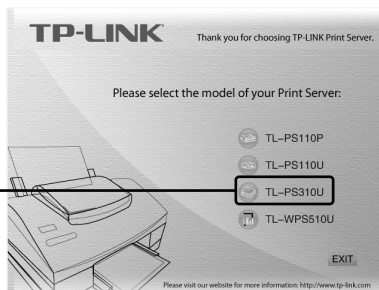


- 2 Choose your operating system to install all software programs.

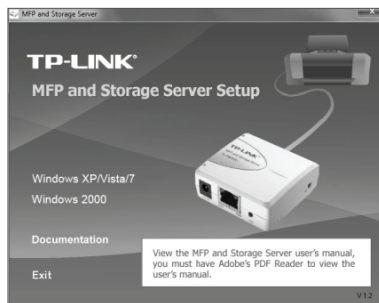

- 3 When the installation completed, please DO restart your computer.

Restart your computer

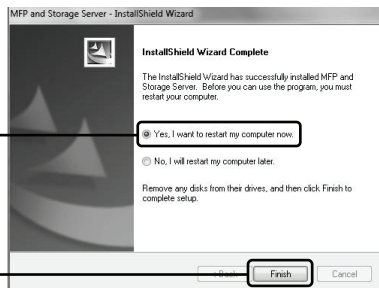

2

Configuring the Print Server

- 1 On your desktop you will see a **new icon**, double-click the icon and it will bring up the MFP and Storage Server setup utility.




- 2 In this screen, you will see the product listed as **MFP and Storage Server -XXXXXX (192.168.0.10)**. If your computer is not in the 192.168.0.x network segment, it'll tell you that the TL-PS310U is in different network segment. In this situation, you need to change the IP of the TL-PS310U.



3

Select the print server, right-click on it and select **Server Configurations**

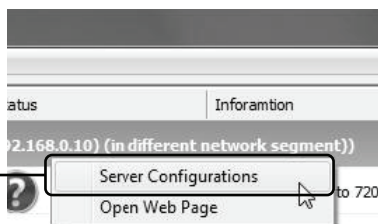

4

Configure the IP address of the print server according to your network. And then click **Set**

Server Configurations

Network Setting :

Server Name : MFP and Storage Server-2B51

Use DHCP

IP Address : 10 . 10 . 10 . 150

Subnet : 255 . 255 . 255 . 0

Set Cancel

Backup Firmware

Update Firmware

Change Password

Restart Server

- 5 Open the above **Server Configuration** screen again and click **Restart Server**, so that you can apply the IP configuration.

The IP address has been changed

Device	Status
<input type="checkbox"/> MFP and Storage Server-2B51	(10.10.10.150)

3


Install the USB Device

The MFP and Storage Server will auto-detect the USB device connecting to the USB port of the TL-PS310U.

Connecting to an USB Printer


1

Select the USB printer you want to connect and click **Connect Device**

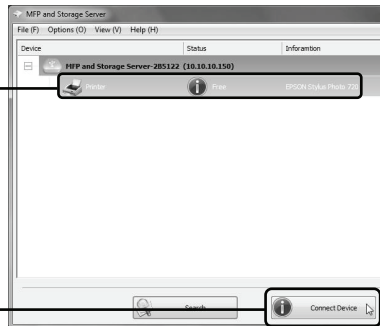

2


Because the "Disconnect Printer when Idle" option is enabled by default, the server will tell you this. Just click **OK**

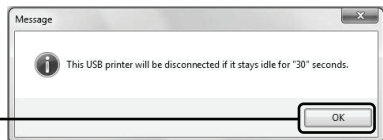

You can disable the "Disconnect Printer when Idle" in the **Option** menu.



3

The windows will detect the printer and install its driver automatically

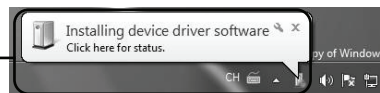


4

After the driver is installed, the printer will be in your system

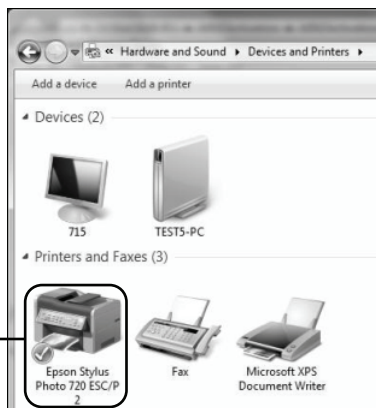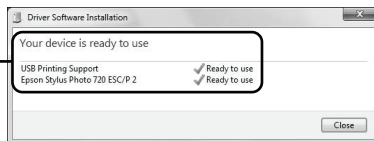

5

After finish installing the printer driver, please disconnect the printer manually. And then right-click the printer icon, you can use the **"Connect Automatically for Printing"** function. You're highly recommended to use this function for printing.

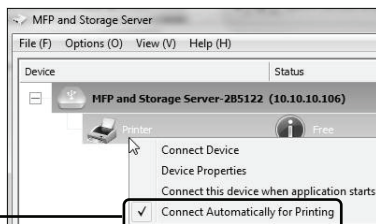


Enable the **"Connect Automatically for Printing"** function

Connecting to an USB Drive

- 1 It's the same as you connect the printer on the MFP and Storage Server.

Select the USB drive you want to connect and click **Connect Device**

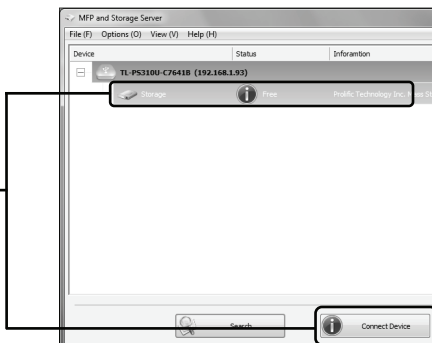

2

After the driver is installed, the Removable Disk will be in your system




4

Disconnect the USB Devices

If you connect the USB devices all the time, other users can't connect and use them. A recommended habit is disconnecting the USB devices when you don't use them.


Disconnect manually

Select the USB device and click **“Disconnect Device”**

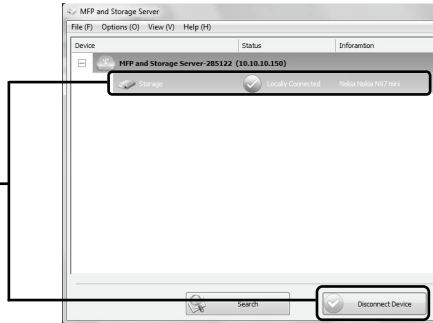

Disconnect when Idle

On the top menu, click **Options**, the **“Disconnect Storage Device When Idle”** and **“Disconnect Printer When Idle”** are on the list

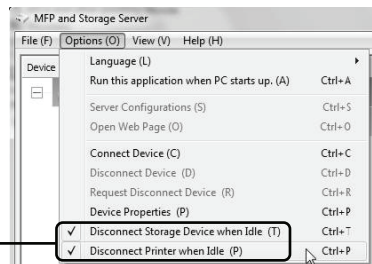

Technical Support

- For more troubleshooting help, go to:
www.tp-link.com/support/faq.asp
- To download the latest Firmware, Driver, Utility and User Guide, go to:
www.tp-link.com/support/download.asp
- For all other technical support, please contact us by using the following details:

Global

Tel: +86 755 26504400

E-mail: support@tp-link.com

Service time: 24hrs, 7days a week

Singapore

Tel: +65 62840493

E-mail: support.sg@tp-link.com

Service time: 24hrs, 7days a week

Germany / Austria / Switzerland

Tel: +49 1805 875465 (German

Service)

E-mail: support.de@tp-link.com

Service time: GMT+ 1 or GMT+ 2
(Daylight Saving Time in Germany)

Except bank holidays in Hesse

Australia & New Zealand

Tel: AU 1300 87 5465

NZ 0800 87 5465

E-mail: support@tp-link.com.au

Service time: Monday to Friday
9:00 AM to 9:00 PM AEST

USA/Canada

Toll Free: +1 866 225 8139

E-mail: support.usa@tp-link.com

Service time: 24hrs, 7days a week

UK

Tel: +44 (0) 845 147 0017

E-mail: support.uk@tp-link.com

Service time: 24hrs, 7days a week