



# User Guide

## Omada Cloud Controller OC200

1910012598 REV1.2.0

July 2019

# CONTENTS

<b>1 Quick Start</b>	<b>1</b>
1.1 Deploy the OC200	2
1.1.1 Deploy the OC200 and EAPs in the Same Subnet	2
1.1.2 Deploy the OC200 and EAPs in Different Subnets	2
1.2 Determine the Management Method	4
1.2.1 Management on the Local Network	4
1.2.2 Management via Cloud Access	5
1.3 Inform the EAPs of the OC200's Address	6
1.4 Log in to the OC200	8
1.4.1 On the Local Network	8
1.4.2 Via Omada Cloud	8
1.4.3 Do the Basic Configurations	8
1.4.4 Log In to the Management Interface	12
1.5 Create Sites and Adopt the EAPs	12
1.5.1 Create Sites	12
1.5.2 Adopt the EAPs	15
1.6 Monitor and Manage the EAPs	16
<b>2 Monitor and Manage the Network</b>	<b>18</b>
2.1 View the Statistics of the Network	19
2.1.1 View the Client Distribution on SSID	19
2.1.2 Have a Quick Look at EAPs and Clients	20
2.1.3 View Current Usage-Top EAPs	20
2.1.4 View Recent Activities	21
2.2 Monitor the Network with the Map	21
2.2.1 Add a Map	22
2.2.2 Monitor the EAPs on the Map	24
2.3 Monitor and Manage the EAPs	25

2.3.1	Manage the EAPs in Different Status.....	25
2.3.2	View the Detailed Information of EAPs.....	26
2.3.3	Manage the EAPs in the Action Column .....	26
<b>2.4</b>	<b>Monitor and Manage Clients .....</b>	<b>28</b>
2.4.1	View the Current Information of Clients .....	28
2.4.2	Manage Clients in the Action Column.....	28
<b>2.5</b>	<b>View Clients Statistics During the Specified Period .....</b>	<b>29</b>
2.5.1	Select a Specified Period .....	29
2.5.2	View the History Information of Clients .....	30
2.5.3	Manage Clients in the Action Column.....	30
<b>2.6</b>	<b>Manage the Rogue APs List .....</b>	<b>30</b>
2.6.1	Manage the Untrusted Rogue APs List .....	31
2.6.2	Manage the Trusted Rogue APs List.....	31
<b>2.7</b>	<b>View Past Guest Authorization.....</b>	<b>32</b>
<b>2.8</b>	<b>View Logs.....</b>	<b>32</b>
<b>3</b>	<b>Configure the EAPs Globally .....</b>	<b>34</b>
<b>3.1</b>	<b>Wireless Network.....</b>	<b>35</b>
3.1.1	Add Wireless Networks.....	35
3.1.2	Configure Advanced Wireless Parameters .....	45
3.1.3	Configure Band Steering .....	48
3.1.4	Configure Mesh.....	49
<b>3.2</b>	<b>Access Control .....</b>	<b>53</b>
<b>3.3</b>	<b>Portal Authentication.....</b>	<b>54</b>
3.3.1	No Authentication.....	55
3.3.2	Simple Password .....	59
3.3.3	Local User.....	63
3.3.4	Voucher .....	70
3.3.5	SMS.....	77
3.3.6	Facebook.....	82

3.3.7	External RADIUS Server .....	84
3.3.8	External Portal Server .....	89
3.3.9	Manage the Guests.....	90
<b>3.4</b>	<b>Free Authentication Policy .....</b>	<b>91</b>
<b>3.5</b>	<b>MAC Filter .....</b>	<b>92</b>
<b>3.6</b>	<b>Scheduler.....</b>	<b>94</b>
<b>3.7</b>	<b>QoS.....</b>	<b>96</b>
<b>3.8</b>	<b>Site Settings .....</b>	<b>100</b>
3.8.1	LED.....	100
3.8.2	Device Account.....	100
3.8.3	Reboot Schedule .....	101
3.8.4	Log Settings .....	102
3.8.5	Batch Upgrade.....	104
3.8.6	SSH .....	105
3.8.7	Management VLAN.....	106
<b>4</b>	<b>Omada Cloud Service .....</b>	<b>107</b>
4.1	Configure the Cloud Access.....	108
4.1.1	Enable Cloud Access .....	108
4.1.2	Manage the Cloud Users .....	108
4.2	Manage the OC200 via Omada Cloud.....	110
4.2.1	Access the OC200 via Omada Cloud .....	111
4.2.2	Change your TP-Link ID information.....	113
<b>5</b>	<b>Configure the EAPs Separately .....</b>	<b>114</b>
5.1	View the Information of the EAP.....	115
5.1.1	Overview .....	115
5.1.2	Basic Information.....	116
5.1.3	LAN.....	117
5.1.4	Radio.....	118
5.2	View Clients Connecting to the EAP .....	119

5.2.1	User.....	119
5.2.2	Guest.....	119
<b>5.3</b>	<b>View Mesh Information of the EAP .....</b>	<b>120</b>
5.3.1	Uplinks .....	120
5.3.2	Downlinks .....	121
<b>5.4</b>	<b>Configure the EAP .....</b>	<b>121</b>
5.4.1	Basic Config.....	122
5.4.2	IP Setting.....	122
5.4.3	Radio.....	123
5.4.4	Load Balance.....	124
5.4.5	WLANs.....	125
5.4.6	LED.....	126
5.4.7	Trunk Settings (Only for EAP330).....	126
5.4.8	Rogue AP Detection .....	127
5.4.9	Local LAN Port Settings (Only for EAP115-Wall and EAP225-Wall) .....	127
5.4.10	Forget this AP.....	128
<b>6</b>	<b>Manage the OC200.....</b>	<b>129</b>
6.1	Status .....	130
6.2	User Account.....	130
6.3	General Setting .....	132
6.3.1	Configure Basic Settings.....	132
6.3.2	Configure Network Settings.....	132
6.3.3	Configure Mail Server .....	133
6.4	History Data Retention.....	135
6.5	Backup&Restore.....	135
6.6	Auto Backup.....	136
6.7	Maintenance .....	139
6.8	Migrate.....	139
6.8.1	Controller Migrate .....	139

6.8.2	Site Migrate.....	143
<b>7</b>	<b>Application Example .....</b>	<b>149</b>
7.1	Basic Configurations .....	150
7.2	Advanced Settings .....	150
7.2.1	Monitor the EAPs with Map.....	150
7.2.2	Configure Portal Authentication.....	151
7.2.3	Create a SSID for the Employees.....	153
7.2.4	Configure Scheduler .....	154
	<b>Appendix: Omada App .....</b>	<b>156</b>
1	Install Omada App on the Mobile Device .....	157
2	Manage your Network in Standalone Mode .....	157
3	Manage your Network in Controller Mode.....	160
3.1	Locally manage your EAPs using the Omada App.....	160
3.2	Remotely manage your EAPs using the Omada App .....	163

# 1

## *Quick Start*

The Omada Cloud Controller (OC200), pre-installed with the Omada Software Controller, can centrally manage multiple EAPs just as the Omada Software Controller does. The difference is that the Omada Software Controller needs to run in a management host, which is unnecessary for the OC200. You just need to deploy an OC200 in the network and keep it running, then you can configure EAPs in batches and conduct real-time monitoring of EAPs locally or remotely through Omada Cloud service.

Follow the steps below to complete the basic settings of OC200.

1. Deploy the OC200
2. Determine the Management Method
3. Inform the EAPs of the OC200's Address
4. Log in to the OC200
5. Create Sites and Adopt the EAPs
6. Monitor and Manage the EAPs

## 1.1 Deploy the OC200

There are two kinds of network topologies which are suitable for OC200 deployment:


- The OC200 and EAPs are in the same subnet.
- The OC200 and EAPs are in different subnets.

Determine your topology according to your need and refer to the following introductions to build your network topology.

### 1.1.1 Deploy the OC200 and EAPs in the Same Subnet

If your need to deploy the OC200 and EAPs in the same subnet, refer to the following network topology.

A router acts as a DHCP server to assign IP addresses to EAPs, clients and OC200. The OC200 and the EAPs are in the same subnet.

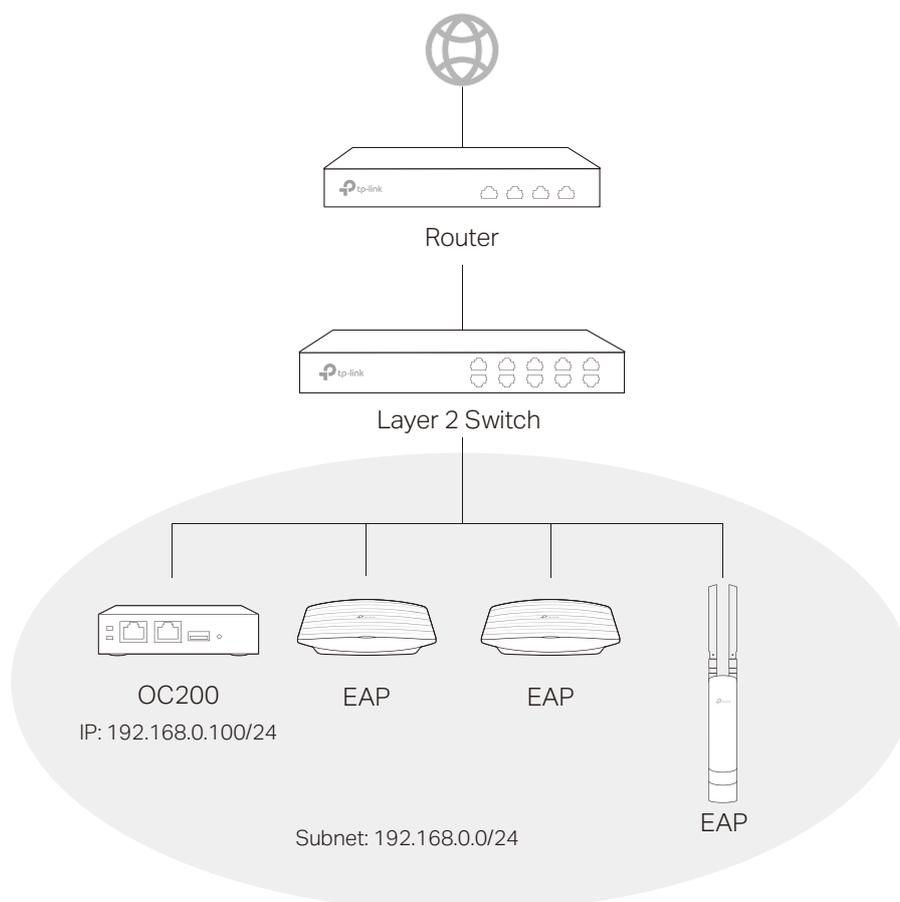


### 1.1.2 Deploy the OC200 and EAPs in Different Subnets

If your need to deploy the OC200 and EAPs in different subnets, refer to the following network topology.

A router acts as the gateway of the network. A Layer 3 switch acts as a DHCP server to assign IP addresses to EAPs, OC200 and clients. The EAPs are in subnet 1, of which the IP network segment is 192.168.0.0/24; the OC200 is in subnet 2, of which the IP network segment is 192.168.1.0/24.

Because the EAPs and the OC200 are in the different networksegment, the EAPs cannot find the OC200 directly. To help the EAPs find the OC200, you need to install an Omada Discover Utility on a host which is in the same subnet with the EAPs. For how to use Omada Discovery Utility, refer to [Inform the EAPs of the OC200's Address](#).

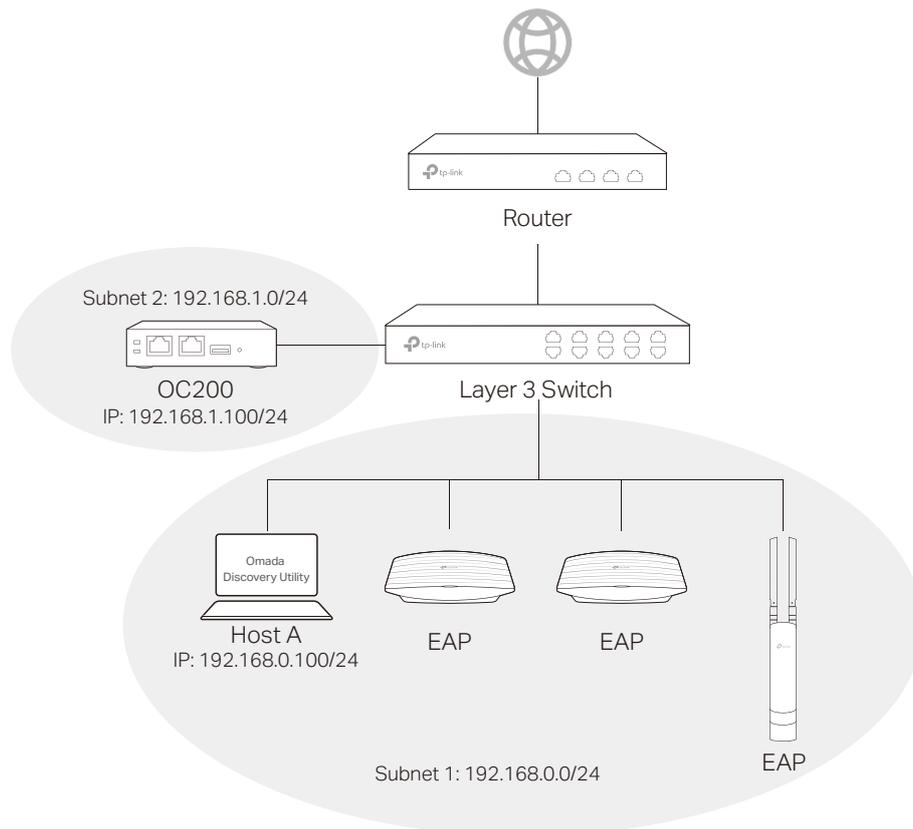

## 1.2 Determine the Management Method


OC200 supports two flexible management methods to centrally manage EAPs:

- Management on the local network
- Management via Cloud Access

Determine your management method according to your needs and refer to the following introductions to build your network topology.

### 1.2.1 Management on the Local Network


To launch the OC200 locally, deploy your management device on the local network. The following topology is an example for the deployment of the management device. As long as there is a route for the management device to access the OC200, the management device can log in to the OC200 to manage the EAPs. For how to log in to the OC200, please refer to [On the Local Network](#).

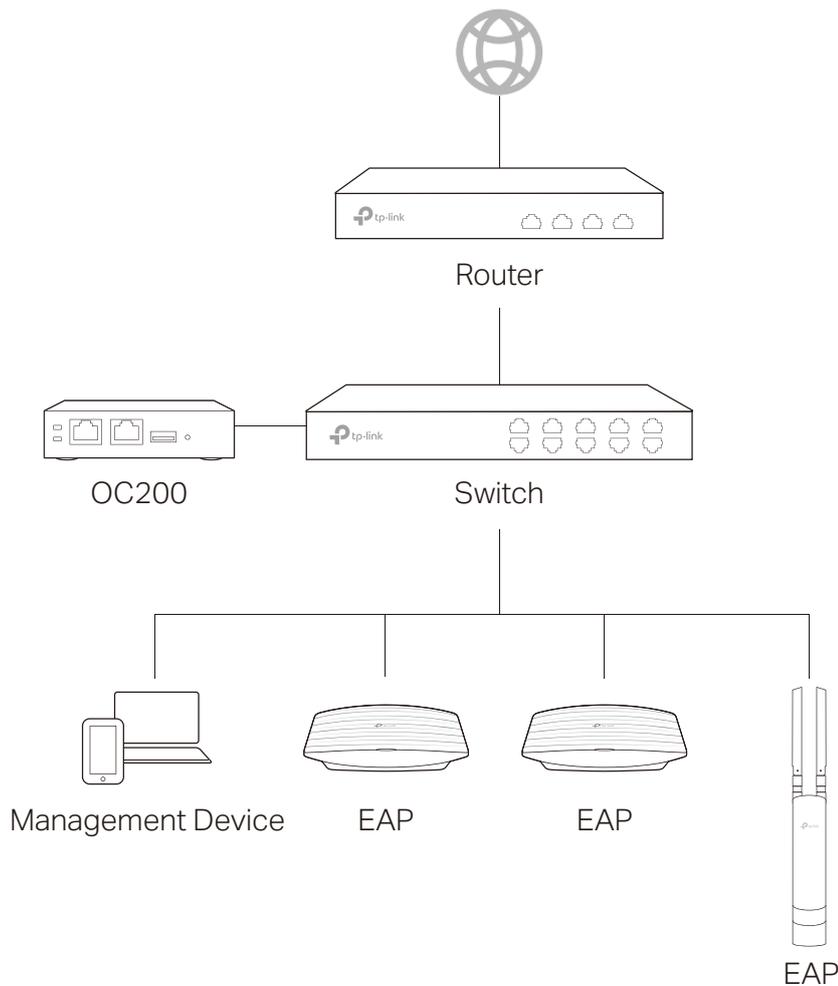

## 1.2.2 Management via Cloud Access

If you need to log in to the OC200 remotely, for example, your EAPs and OC200 are in your office but you want to manage them at home, you can launch the OC200 to manage the EAPs via **Cloud Access**.

The following topology is a typical example. You just need to deploy your OC200 and EAPs on your local network, and use a management device to control them remotely. On the management device, you can open a web browser to remotely launch the OC200 via Omada Cloud. For more details about Cloud Access, refer to [Omada Cloud Service](#).

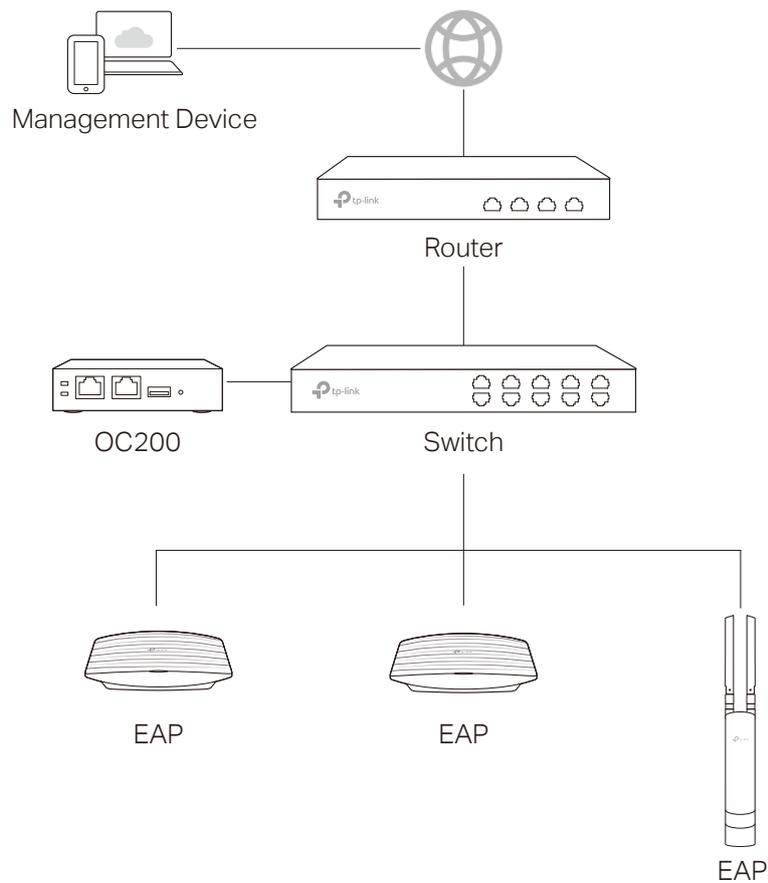

## 1.3 Inform the EAPs of the OC200's Address

If your OC200 and EAPs are in the same network subnet, you can skip this section.

If your OC200 and EAPs are in different subnets, you need to install Omada Discovery Utility on a host that is in the same network segment with the EAPs. Omada Discovery Utility can help EAPs find the OC200.

### System Requirements

Windows 7/8/10/Server


Mac OS X 10.7/10.8/10.9/10.10/10.11

### Install and Use Omada Discovery Utility

Follow the steps below to install Omada Discovery Utility and use it to inform the EAPs of the OC200's IP address:

Follow the steps below to install Omada Discovery Utility and use it to inform the EAPs of the Controller Host's IP address:

1. Download the installation file with the latest version from the website [https://www.tp-link.com/en/download/EAP-Controller.html#EAP\\_Discovery\\_Tool](https://www.tp-link.com/en/download/EAP-Controller.html#EAP_Discovery_Tool).
2. Make sure you have **JRE (Java Runtime Environment)** with version 1.8 installed on your system before installation. If your system loses **JRE**, download **JRE** from the website <https://www.oracle.com/technetwork/java/javase/downloads/jre8-downloads-213315.html> and install it on your system.
3. For Windows OS, run the **start-omada-discovery-utility.bat** to open the Omada Discovery Utility. For Mac OS, use the command **java -jar \*\*** to open the Omada Discovery Utility. Then the following window will pop up. This window shows the information of all EAPs in the same LAN.

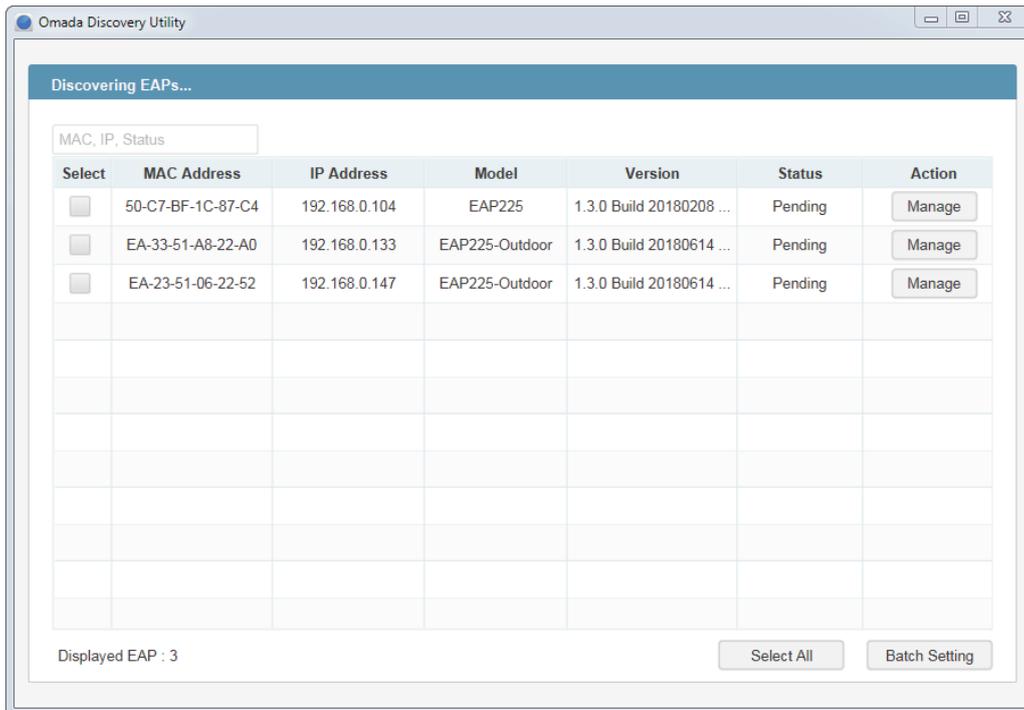

4. Click **Manage** in the **Action** column or select multiple EAPs and click **Batch Setting**.
5. Enter the hostname or IP address of the OC200.
6. Enter the EAP's username and password (both are **admin** by default).

Device Information

Status: Pending

Model: EAP225

IP Address: 192.168.0.104

MAC Address: 50-C7-BF-1C-87-C4

Controller Hostname/IP:

Username:

Password:

7. Click **Apply** to inform the EAP of the OC200's hostname or IP address. Then the connection can be established between the EAP and the OC200.

## 1.4 Log in to the OC200

To use the OC200 to manage EAPs, you first need to log in to the OC200. There are two situations:

- Log in to the OC200 on the local network
- Log in to the OC200 via Omada Cloud

### Tips:

Omada app offers a convenient way to access the OC200 and adopt EAPs. With Local Access and Cloud Access function on the Omada app, you can manage the OC200 at local and remote sites. For more detailed information about Omada app, refer to [Appendix: Omada App](#).

### 1.4.1 On the Local Network

Follow the steps below to enter the management interface of OC200 on the local network:

1. Make sure that your management device has the route to access the OC200.
2. Check the DHCP server (typically a router) for OC200's IP Address. The default fallback IP address of OC200 is 192.168.0.253.  
**Tips:** The fallback IP address is used when OC200 fails to get dynamic IP address from the DHCP server.
3. Launch a web browser and type OC200's IP address in the address bar, then press **Enter** (Windows) or **Return** (Mac).

### 1.4.2 Via Omada Cloud


Follow the steps below to log in to OC200 via Omada cloud:

1. Make sure that your management device and OC200 can access the internet.
2. Launch a web browser and visit <https://omada.tplinkcloud.com> in the address bar, then press **Enter** (Windows) or **Return** (Mac).
3. Enter your TP-Link ID and password to log in. Then click **Add Cloud Controller** and follow the instructions to add your OC200.
4. Click **Launch** in the **Action** column to visit the management interface of OC200.


### 1.4.3 Do the Basic Configurations

In the web browser you can see the configuration page. Follow the setup wizard to complete the basic settings for OC200.

1. Click **Let's Get Started**.

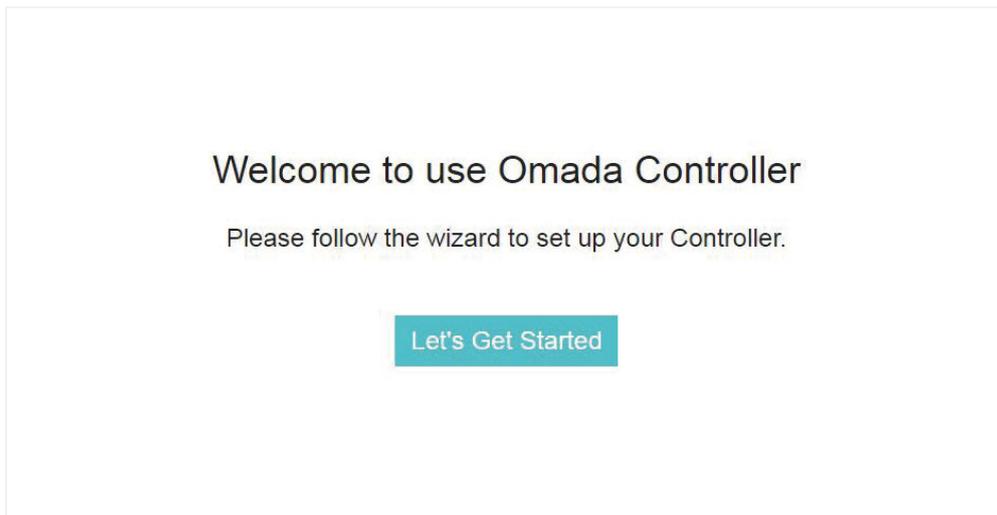

2. Specify a name for OC200 and select the time zone. Click **Next**.

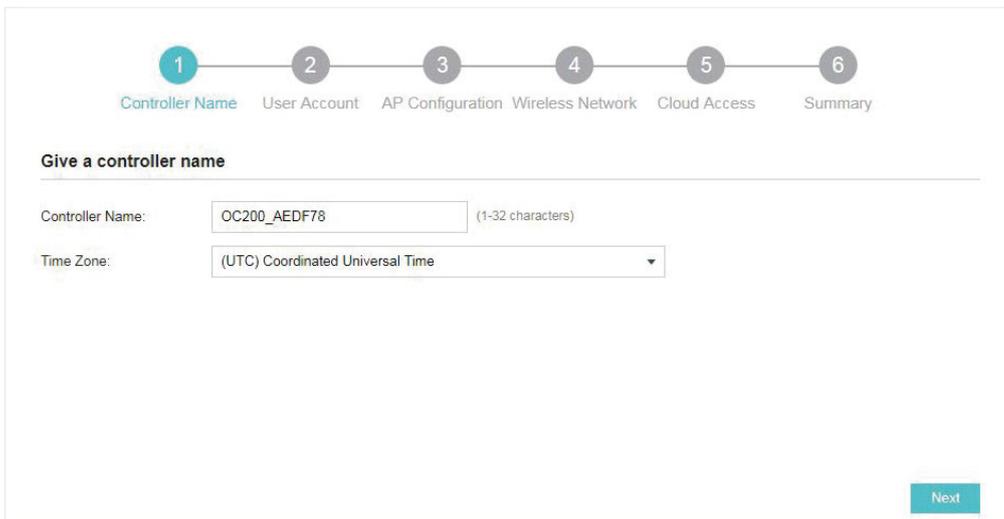

3. Specify a username and password for the login account. Specify the email address for resetting your password in case that you forget the password. After logging in to OC200, set a mail server so that you can receive emails and reset your password. For how to set a mail server, refer to [Configure Mail Server](#). Click **Next**.

1 Controller Name 2 User Account 3 AP Configuration 4 Wireless Network 5 Cloud Access 6 Summary

**Set up a Username and Password for local login.**

Username:  (4-32 characters)

Password:  (6-32 characters, only numbers and letters.)

Confirm Password:

Email Address:  (Optional. Enter your email address to receive mails for resetting your password. The mails are sent from the mail server you set after logging into the Omada Controller.)

[Back](#) [Next](#)

4. The setup page displays all the detected EAPs in the network. Select one or more EAPs to be managed and click **Next**.

1 Controller Name 2 User Account 3 AP Configuration 4 Wireless Network 5 Cloud Access 6 Summary

**Please select the devices you would like to configure**

<input checked="" type="checkbox"/>	↕ AP Name	↕ IP Address	↕ Model	↕ Hardware Version
<input checked="" type="checkbox"/>	50-C7-BF-0B-BE-00	192.168.0.164	EAP225(US)	1.0/2.0

<< < 1 > >> A total of 1 page(s) Page to:  [GO](#)

[Back](#) [Skip](#) [Next](#)

5. Set an SSID name (wireless network name) and password for the EAPs to be managed. OC200 will create two wireless networks, a 2.4GHz one and a 5GHz one, both encrypted in **WPA2-PSK** mode. Click **Next**.

1 Controller Name 2 User Account 3 AP Configuration 4 Wireless Network 5 Cloud Access 6 Summary

### Create a wireless network

Network Name:  (1-32 characters)

Password:  (WPA2-PSK)

Back Skip Next

6. If you want to manage EAPs via Omada cloud, enable the **Cloud Access** button, and bind your TP-Link ID to your OC200, and then click **Next**. If you want to manage EAPs on the local network, you can just click **Skip**. For more details about Omada Cloud, please refer to [Omada Cloud Service](#).

1 Controller Name 2 User Account 3 AP Configuration 4 Wireless Network 5 Cloud Access 6 Summary

### Log in and bind your TP-Link ID

Cloud Access:  ?

Email:

Password:

**Log in and bind** No TP-Link ID? [Register now](#)

Back Skip Next

7. Review your settings and click **Finish**.

1 — 2 — 3 — 4 — 5 — 6  
 Controller Name   User Account   AP Configuration   Wireless Network   Cloud Access   Summary

**Confirm the settings.**

User Account	Wireless Network	Cloud Access
Username: administrator	Network Name: SSID1	Cloud Access: off
Password: 123456	Password: 12345678	TP-Link ID: Not Logged In

Back Finish

### 1.4.4 Log In to the Management Interface

Once the basic configurations are finished, the browser will be redirected to the following page. Log in to the management interface using the username and password you have set in the basic configurations.

tp-link

administrator

.....

Log in

[Forgot password?](#)

## 1.5 Create Sites and Adopt the EAPs

OC200 can manage multiple EAP networks, which are called sites. Multiple sites are logically separated, and each site has its own configurations. There is an initial site named **Default**. The **Default** site cannot be deleted. If you have no need to manage EAPs with different sites, you can edit the default site and skip the **Create Sites** section. However, **Adopt the EAPs** is a necessary step to manage the EAPs.

### 1.5.1 Create Sites

There are three methods to create sites: [Add Sites](#), [Import Sites](#), and [Copy Sites](#). Determine the method according to your need and refer to the following introductions to create sites.

#### Add Sites

Follow the steps below to add a new site directly.

1. Click **Sites: Default** in the top left corner of the page and select **Site Manager**, and then the following window will pop up.

The screenshot shows the 'Site Management' window. At the top left is a search box labeled 'Site Name'. To the right are buttons for 'Import Site' and 'Add'. Below is a table with the following data:

Site Name	Alerts	Connected	Disconnected	Isolated	Users	Guests	Action
Default	0	0	0	0	0	0	[Icon]
Site1	0	0	0	0	0	0	[Check] [Icon] [Trash]
Site2	0	0	0	0	0	0	[Check] [Icon] [Trash]

At the bottom, there are navigation arrows, a page indicator 'A total of 1 page(s)', a 'Page to:' input field, and a 'GO' button.

2. Click **+ Add** and enter a unique name for the new site.

The 'Add Site' dialog box has a title bar with a close button. Inside, there is a label 'Site Name:' followed by an input field containing the text 'Office A'. Below the input field is a teal 'Apply' button.

3. Click **Apply** to create the site.

## Import Sites

You can import the site from another OC200. The site settings and EAPs in the site will be imported to the new site.


### Note:

- This function is available only for local logged-in users.
- The site to be imported must come from a different OC200.

1. Click **Sites: Default** in the top left corner of the page and select **Site Manager**, and then the following window will pop up.

This screenshot is identical to the one in step 1, showing the 'Site Management' window with the same table and navigation elements.

- Click  **Import Site** and enter a unique name for the new site.

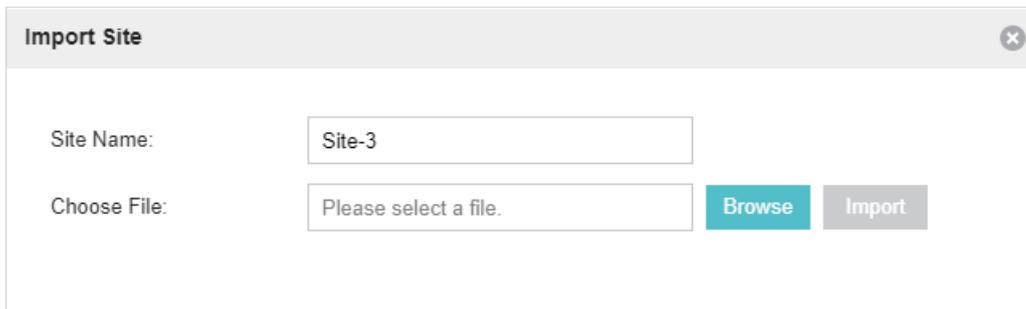

**Import Site** [Close]

Site Name:

Choose File:  **Browse** **Import**

- Click **Browse** to upload the backup file of other site and click **Import** to import the site.



**Import Site** [Close]

Site Name:

Choose File:  **Browse** **Import**


**Tips:**

To export sites (including site settings and EAPs in the sites) from one OC200 to another, use the **Migrate** function. For more details about **Migrate**, refer to [Migrate](#).

## Copy Sites

With **Site Copy**, you can create a new site with the same settings as the existing sites on your controller. Note that only the site settings will be copied. The EAPs will be still managed at the original site.

- Click **Sites: Default** in the top left corner of the page and select **Site Manager**, and then the following window will pop up.

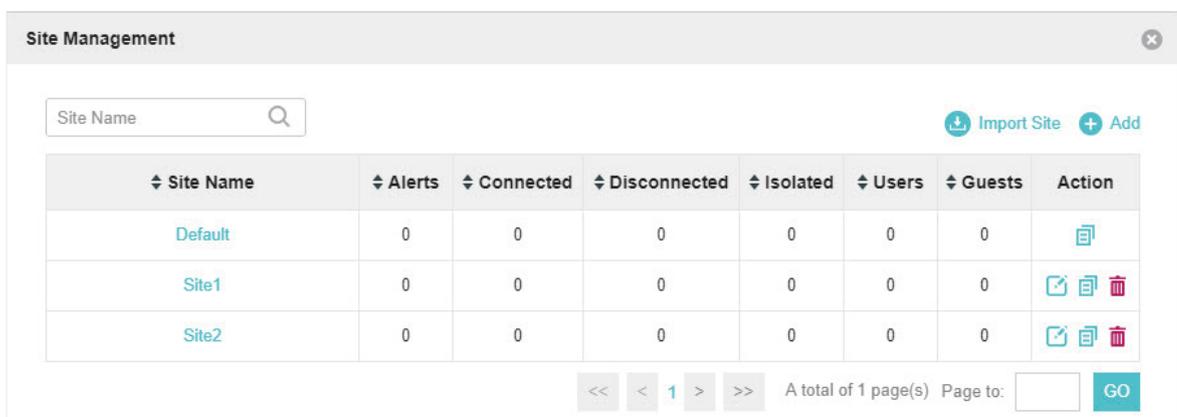

**Site Management** [Close]

Site Name    **Import Site**  **Add**

↕ Site Name	↕ Alerts	↕ Connected	↕ Disconnected	↕ Isolated	↕ Users	↕ Guests	Action
Default	0	0	0	0	0	0	
Site1	0	0	0	0	0	0	  
Site2	0	0	0	0	0	0	  

<< < 1 > >> A total of 1 page(s) Page to:  **GO**

2. Select a site that you want copy all the settings and click  in the **Action** column. Then enter a unique name for the new site.

**Site Copy**
✕

Note: With Site Copy, you can create a new site with the same configuration as the existing site.

New Site Name:

Apply


3. Click **Apply** to create the site.

## 1.5.2 Adopt the EAPs

OC200 can discover all EAPs currently connected in the network and display their connection status. All EAPs are in **Pending** status when first discovered by OC200. To manage the EAPs, you need to adopt them. In the quick setup process, OC200 will automatically adopt the selected EAPs using the default username and password (both are **admin**). However, if you have changed the username or password of your EAPs before, OC200 cannot automatically adopt them, and you need to refer to the following steps to adopt them manually.

To ensure that all EAPs are adopted, follow the steps below:

1. Select a site and go to **Access Points > Pending**. The table displays all the EAPs that have not been adopted.

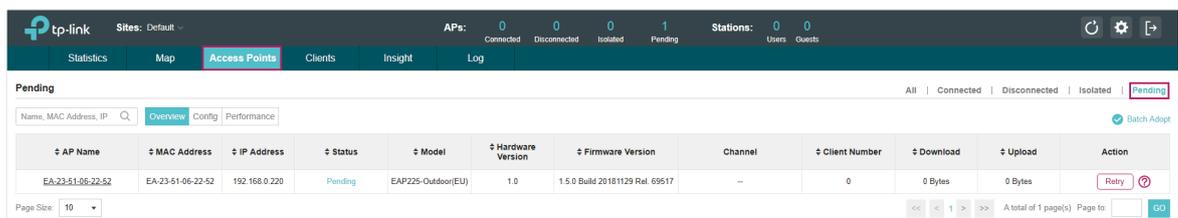

AP Name	MAC Address	IP Address	Status	Model	Hardware Version	Firmware Version	Channel	Client Number	Download	Upload	Action
EA-23-51-06-22-52	EA-23-51-06-22-52	192.168.0.220	Pending	EAP225-Outdoor(EU)	1.0	1.5.0 Build 20181129 Rel. 69517	--	0	0 Bytes	0 Bytes	Retry

2. Click the **Retry** button in the **Action** column and enter the current username and password of the EAP. Click **Apply**.

**AP username and password required** ✕

**Note:** The username and password have been changed for this AP. The Omada Controller cannot adopt it automatically. Please manually enter the correct username and password.

Username:

Password:

Apply

**Tips:**

- If you have a new discovered EAP, you can click the **Adopt** button in the **Action** column to adopt the EAP. OC200 will automatically adopt the EAP using the default username and password (both are **admin**).
- If you have multiple new discovered EAPs, and all of them have the default username and password (both are **admin**), you can click the **Batch Adopt** button to adopt them in batch. But if there are any EAPs with the **Retry** button, it means that the username and password of these EAPs have been changed. You need to first adopt them before batch adopt the rest EAPs.


3. After EAPs are adopted, the status will change from **Pending** to **Connected**. All the EAPs' username and password will become the same as those of the OC200's administrator account you created in the [Basic Configurations](#).

**Tips:**

If you want to change the EAPs' username and password, refer to [Device Account](#).

## 1.6 Monitor and Manage the EAPs

When all the configurations above are finished, you can centrally monitor and manage the EAPs via the OC200's management interface. The management interface is divided into three sections as the following figure shows.

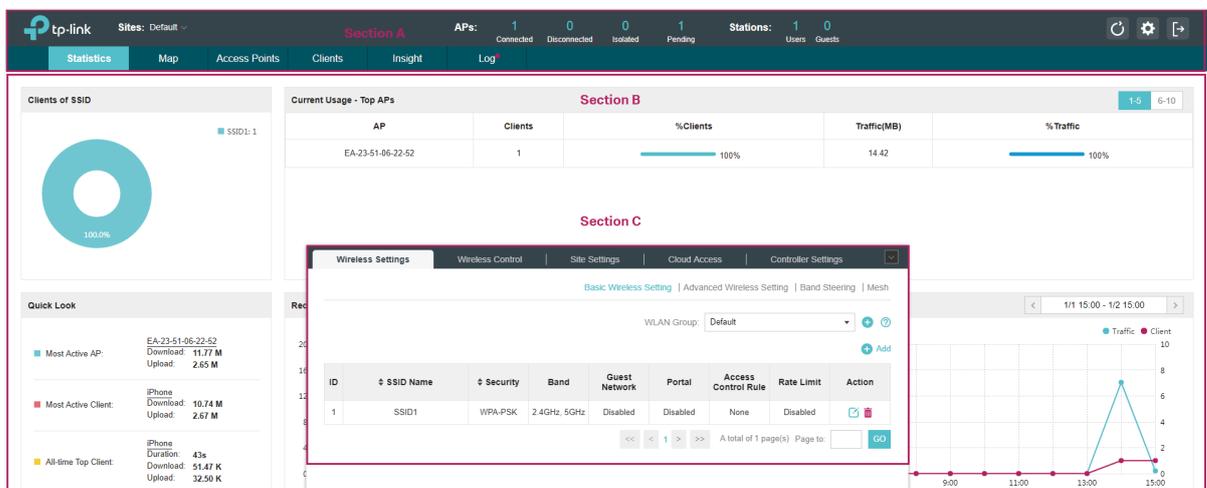

---

#### Section A

In Section A, you can check the status of EAPs and clients in the network. Also, you can click  to refresh the current page, click  to globally configure the wireless network, and click  to sign out from the management interface.

Furthermore, the **Sites** allows you to group your EAPs and manage them in batches. To configure sites, refer to [Create Sites](#).

---

#### Section B

In Section B, you can centrally monitor the EAPs and clients.

---

#### Section C

In Section C, you can globally configure the wireless network. The global configurations will take effect on all the adopted EAPs.

---

# 2


## *Monitor and Manage the Network*

With OC200 you can monitor the EAPs and centrally manage your wireless network. This chapter includes the following sections:

- View the Statistics of the Network
- Monitor the Network with the Map
- Monitor and Manage the EAPs
- Monitor and Manage Clients
- View Clients Statistics During the Specified Period
- Manage the Rogue APs List
- View Past Guest Authorization
- View Logs


## 2.1 View the Statistics of the Network

OC200 collects all statistics of the managed EAPs and displays the statistical information via graphs, pie charts and tables, providing an overview of your wireless network.

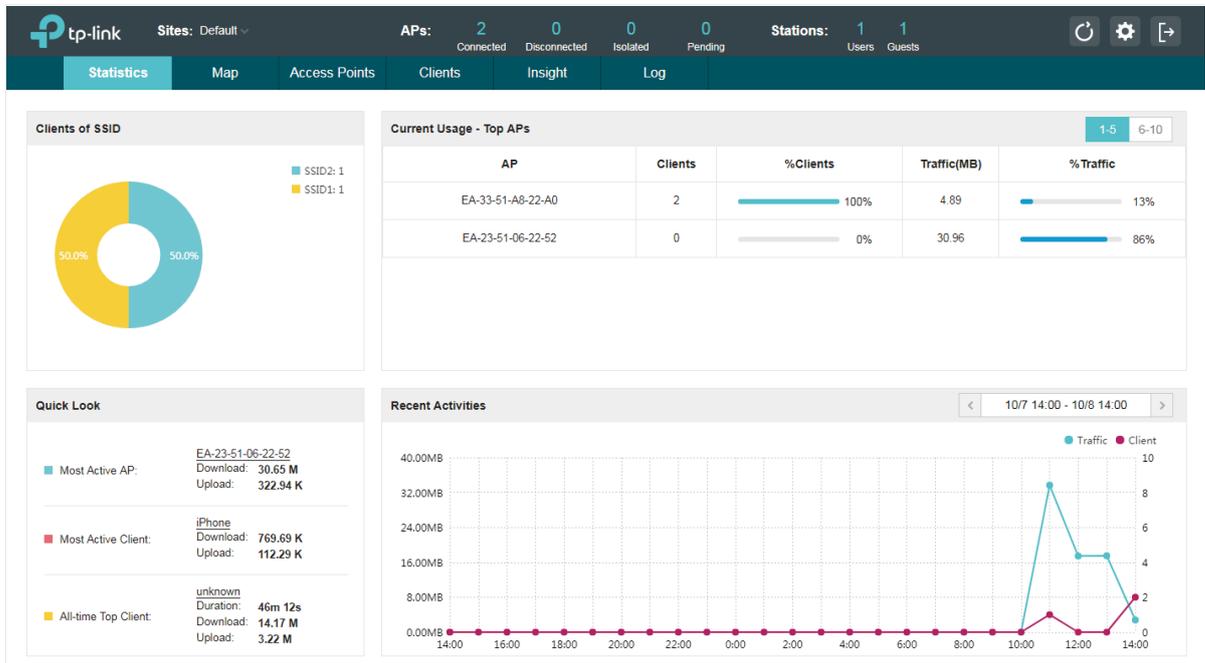

### 2.1.1 View the Client Distribution on SSID

A visual pie chart shows the client distribution on each SSID. For example, the SSID1 has one client, which occupies 50% of all the clients.

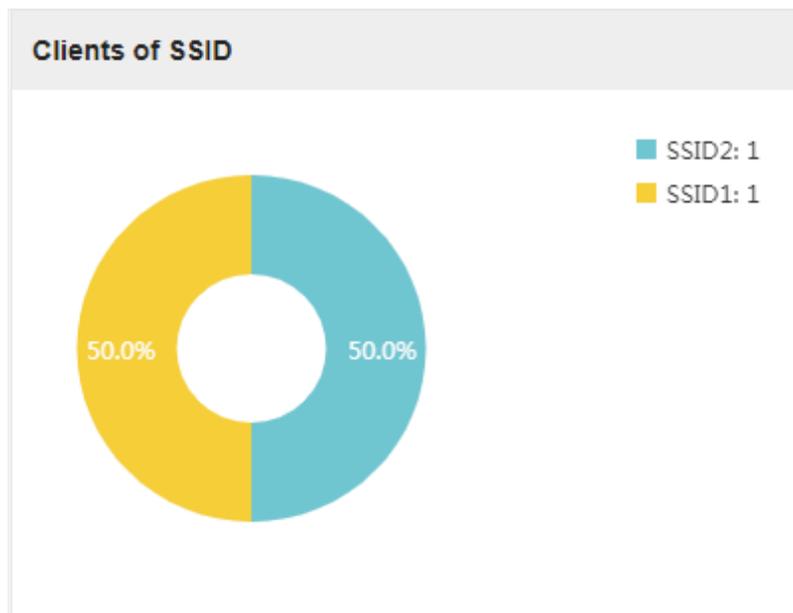

## 2.1.2 Have a Quick Look at EAPs and Clients

This tab displays the **Most Active AP**, the **Most Active Clients** and the **All-Time Top Client**. You can click the MAC address of the EAP or the client to see more details.

Quick Look	
■ Most Active AP:	<a href="#">50-C7-BF-0B-BE-00</a> Download: <b>522.95 K</b> Upload: <b>2.17 M</b>
■ Most Active Client:	<a href="#">meilan-Note5</a> Download: <b>89.77 K</b> Upload: <b>590.66 K</b>
■ All-time Top Client:	<a href="#">meilan-Note5</a> Duration: <b>4m 18s</b> Download: <b>89.77 K</b> Upload: <b>590.66 K</b>

Most Active AP	The current connected AP with the maximum traffic.
Most Active Client	The current connected client with the maximum traffic.
All-time Top Client	The client with the maximum traffic among all the clients that have ever accessed the EAP network.

## 2.1.3 View Current Usage-Top EAPs

This tab lists the number of connected clients and the data traffic condition of the ten APs that use the most traffic currently.


Current Usage - Top APs				
AP	Clients	%Clients	Traffic(MB)	%Traffic
EA-33-51-A8-22-A0	2	 100%	4.89	 13%
EA-23-51-06-22-52	0	 0%	30.96	 86%

Clients	The amount of clients connected to this EAP.
%Clients	The proportion of current connected clients to the Top EAPs' total client amount.
Traffic (MB)	The total amount of data transmitted by this EAP, which equals the sum of the transmission traffic of all the current clients that connect to the AP.
%Traffic	The proportion of the EAP's current data transmission amount to the Top EAPs' total transmission amount.

## 2.1.4 View Recent Activities


The **Recent Activities** statistics can be toggled between a view for the past specific 24 hours and one for the past specific 30 days.

The left ordinate axis indicates the traffic and the right one represents the number of the clients. The abscissa axis shows the selected time period. **Traffic** indicates a visual graph of the network traffic during the selected time period. **Client** indicates a visual graph of the number of the connected clients during the selected time period. For example, the statistics information at 15:00 indicates the traffic size and client number from 14:00 to 15:00. In the following figure, at 11 o'clock, the traffic is about 34MB and there is 1 clients connected to the AP.

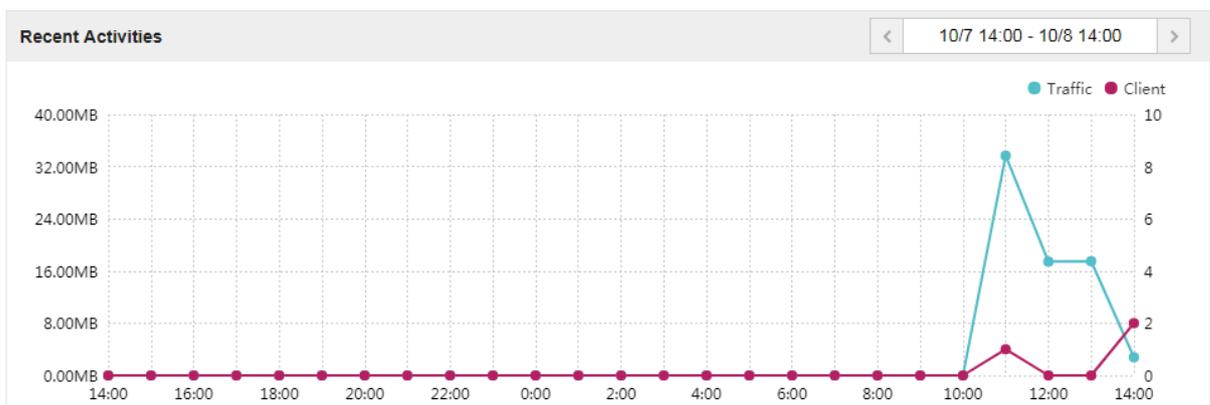

## 2.2 Monitor the Network with the Map


You can upload your local map images and monitor the status and coverage range of each EAP with the map. When you initially launch the OC200, a default map is displayed as the following figure shows. Follow the instructions below to add your own map and manage the EAPs via the map.

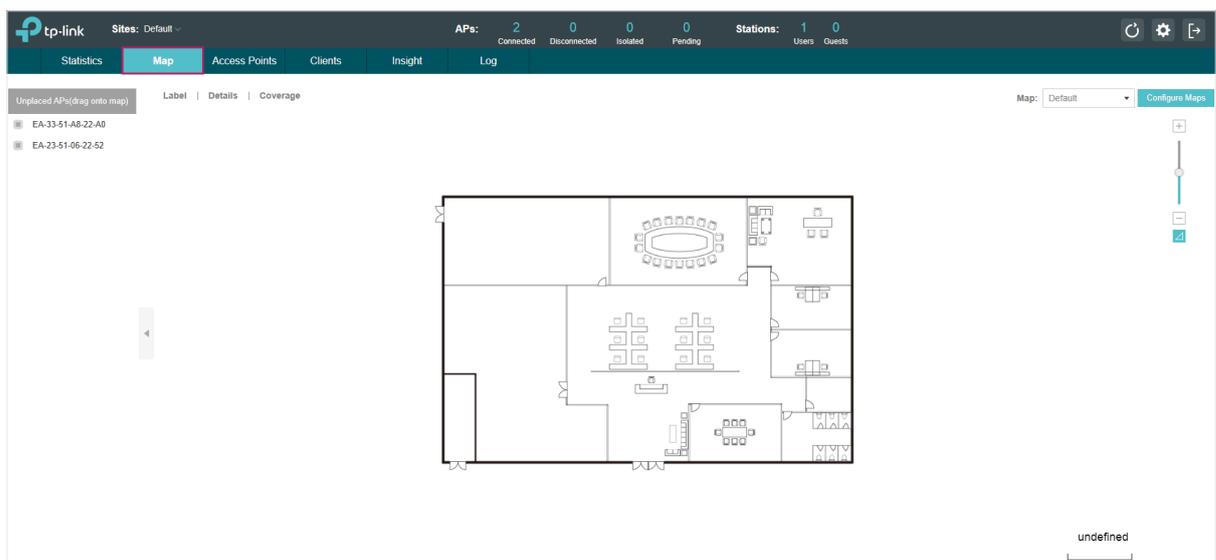


## 2.2.1 Add a Map

Prepare a map image in .jpg, .jpeg, .gif, .png, .bmp, .tiff format. And then follow the steps below to add the map to the OC200.

1. Click **Configure Maps** on the upper right corner of map and click **Add**.

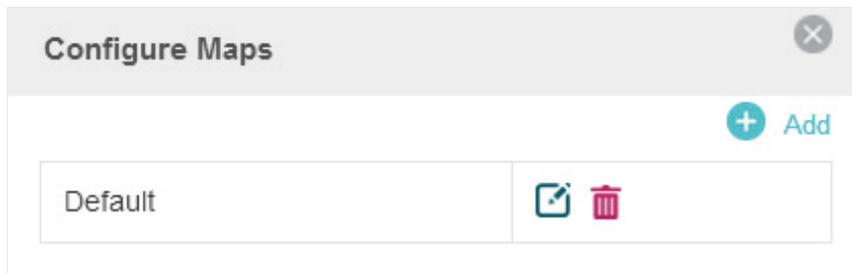


2. Enter the map description, select your map image, and click **Create**.

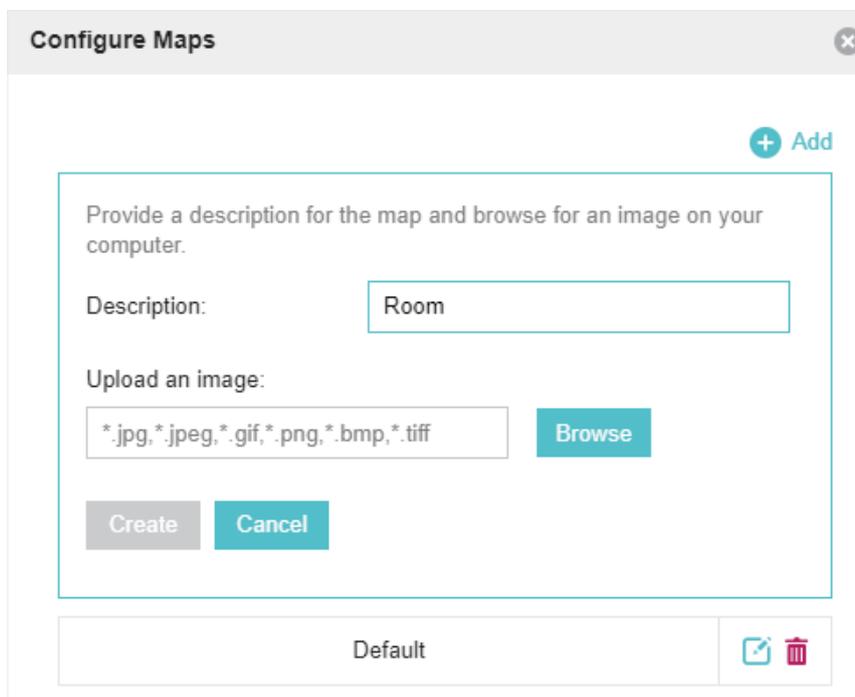


3. Select your local map from the drop-down list on the upper right corner of map area.



4. Click . Draw a line on the map and enter the distance the line represents. Then the Omada Controller will compute and generate the map scale automatically based on your configuration.

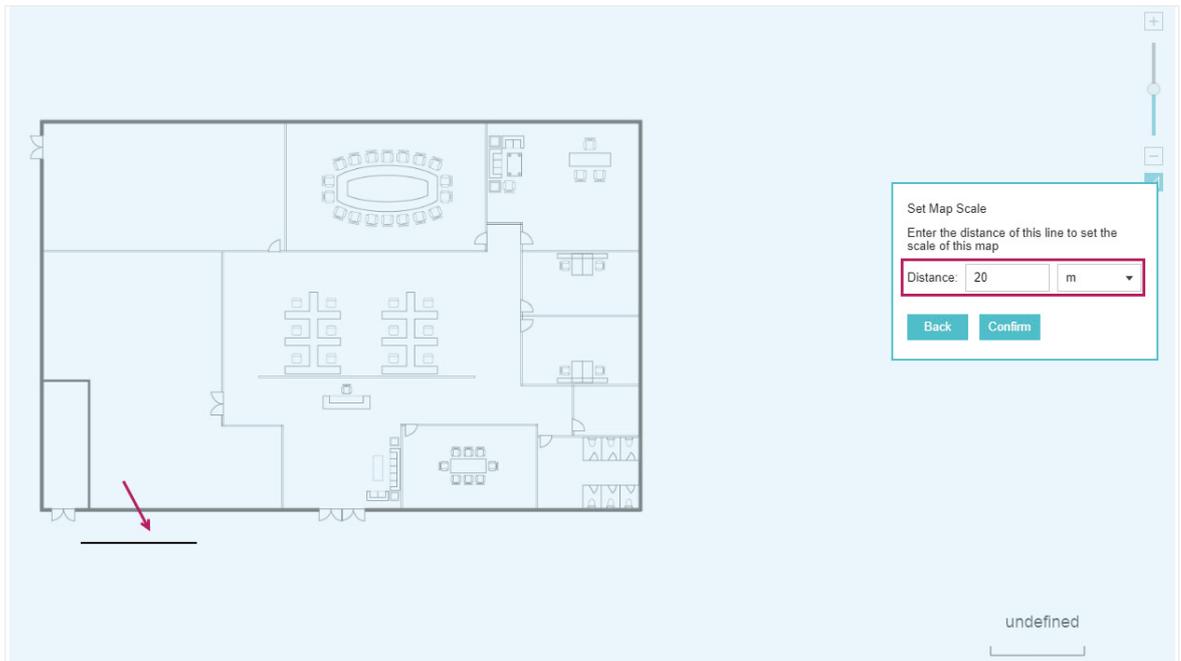

5. Drag the EAPs from the **Unplaced APs** list to the appropriate locations on the map according to their actual locations.

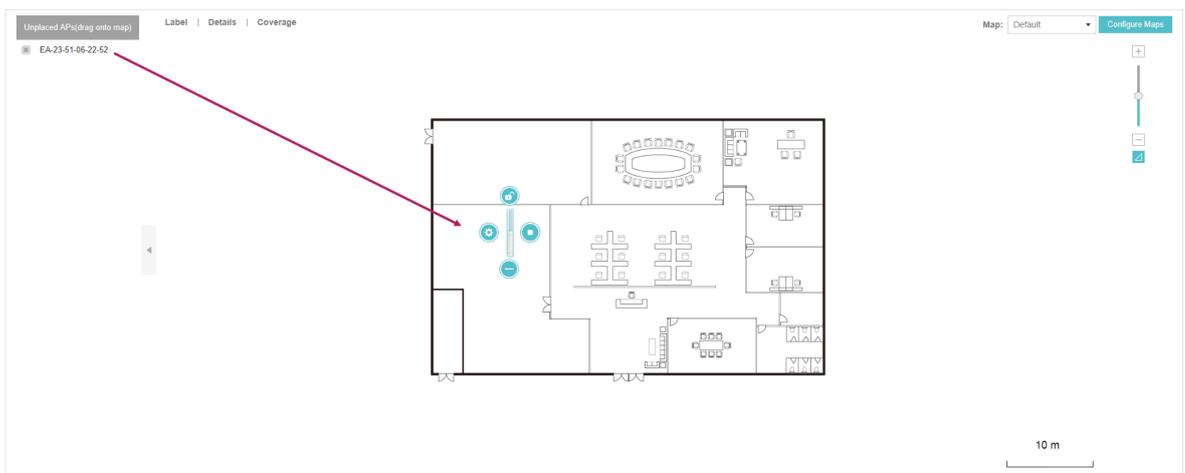

You can click  to reveal additional options:



Lock the selected EAP in the current location on the map.



Unlock the selected EAP and you can drag it to another location.

	Display the EAP's details and configure the wireless parameters. Refer to <a href="#">Configure the EAPs Separately</a> .
	Remove the selected EAP back into the Unplaced APs list.
	Flash the LED of the EAP on the map. Then the LED will flash for 10 minutes or until the cancel button is clicked again.
	Click the button to stop the LED from flashing.

## 2.2.2 Monitor the EAPs on the Map


Click any of the following options to display EAP Label, Details, and Coverage on the map.

**Label** | **Details** | **Coverage**

<b>Label</b>	Display the EAP's name. The default name is the MAC address of the EAP.
<b>Details</b>	Display the EAP's name, MAC address, IP address, transmitting/receiving channel, number of connected users, and number of connected guests.
<b>Coverage</b>	Display a visual representation of the wireless range covered by EAPs. The actual signal coverage may be smaller than the visual coverage on the map because the obstacles around the EAPs will weaken the signal.

## 2.3 Monitor and Manage the EAPs

OC200 can discover all the EAPs currently connected to the network and display the information of them on the **Access Points** page.

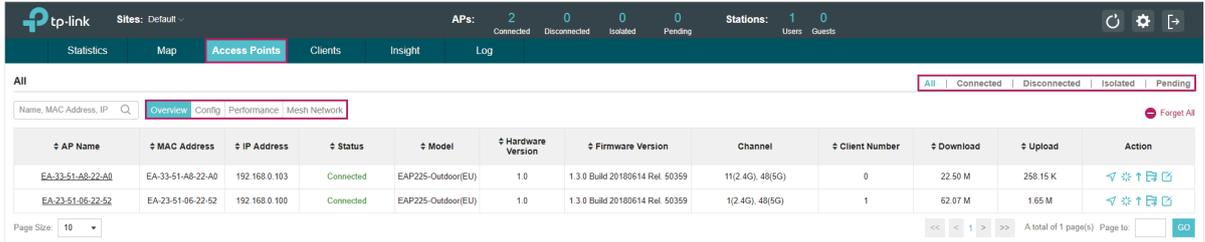

AP Name	MAC Address	IP Address	Status	Model	Hardware Version	Firmware Version	Channel	Client Number	Download	Upload	Action
EA-33-51-A8-22-A0	EA-33-51-A8-22-A0	192.168.0.103	Connected	EAP225-Outdoor(EU)	1.0	1.3.0 Build 20180614 Rel. 50359	11(2.4G), 48(5G)	0	22.50 M	258.15 K	<a href="#">Refresh</a> <a href="#">Settings</a> <a href="#">Forget</a> <a href="#">Forget All</a>
EA-23-51-06-22-52	EA-23-51-06-22-52	192.168.0.100	Connected	EAP225-Outdoor(EU)	1.0	1.3.0 Build 20180614 Rel. 50359	1(2.4G), 48(5G)	1	62.07 M	1.65 M	<a href="#">Refresh</a> <a href="#">Settings</a> <a href="#">Forget</a> <a href="#">Forget All</a>

### 2.3.1 Manage the EAPs in Different Status

According to their connection status, EAPs are divided into four categories: **Connected**, **Disconnected**, **Isolated** and **Pending**. You can view the EAPs in different status on different pages:

[All](#) | [Connected](#) | [Disconnected](#) | [Isolated](#) | [Pending](#)

<b>All</b>	Displays the information of all EAPs in different status.
<b>Connected</b>	<p>Displays the connected EAPs.</p> <p>The status of connected EAPs includes two cases: <b>Connected</b> and <b>Connected (Wireless)</b>.</p> <p><b>Connected:</b> After you adopt a wired EAP in Pending status, its status will become Provisioning, then Configuring and Connected eventually.</p> <p><b>Connected (Wireless):</b> In a mesh network, if an EAP has a successful wireless uplink, its status will become Adopting (Wireless) and then Connected (Wireless).</p> <p>Only connected EAPs can be managed. A connected EAP will turn into a pending one after you <b>forget</b> it. You can refer to <a href="#">Forget this AP</a> to forget an EAP or click <b>Forget All</b> on the page to forget all the connected EAPs.</p>
<b>Disconnected</b>	<p>Displays the disconnected EAPs.</p> <p>If a connected EAP powers off or disconnects from the OC200, it will be in Disconnected status. When a disconnected EAP is reset to factory defaults or forgot, it will turn into a pending one again. You can refer to <a href="#">Forget this AP</a> to forget a EAP or click <b>Forget All</b> on the page to forget all the disconnected EAPs.</p>
<b>Isolated</b>	<p>Displays the isolated EAPs.</p> <p>In a mesh network, when the EAP which has been managed before by the OC200 connects to the network wirelessly and cannot reach the gateway, it goes into the Isolated state. The isolated EAP searches for wireless uplink and the LED on the device turns green and flashes off every 5 seconds. To know more about mesh network, refer to <a href="#">Configure Mesh</a>.</p>

Pending	<p>Displays the pending EAPs.</p> <p>The status of pending EAPs includes three cases: <b>Pending</b>, <b>Pending (Wireless)</b> and <b>Managed by others</b>.</p> <p><b>Pending:</b> All the EAPs with wired network connection are in pending status by default when first discovered by Omada Controller.</p> <p><b>Pending (Wireless):</b> The factory default EAP with mesh functions and no wired network connection is in Pending (Wireless) status when first discovered by the OC200.</p> <p><b>Managed by others:</b> An EAP is located on the same network as the controller, but has been already managed by an existing controller before. You can provide the username/password to unbind the EAP from the existing controller and begin adoption in current controller.</p> <p>Only after pending EAPs are adopted and connected, can you manage them. To adopt pending EAPs, refer to <a href="#">Adopt the EAPs</a>.</p>
---------	--

## 2.3.2 View the Detailed Information of EAPs


You can click **Overview**, **Config**, **Performance** or **Mesh Network** tab to view different detailed information of EAPs.



Overview	Displays the EAP's name, MAC address, IP address, status, model, hardware version, firmware version, channel number of connected clients and download/upload bytes.
Config	Displays the EAP's name, MAC address, IP address, status, model, hardware version, firmware version, WLAN Group bounded with the 2G and 5G of the EAP, and radio of the 2G and 5G.
Performance	Displays the EAP's name, MAC address, IP address, status, model, hardware version, firmware version, number of connected 2G clients and 5G clients, TX(Downloaded Traffic), RX(Uploaded Traffic), TX 2G and TX 5G.
Mesh Network	Displays the EAP's name, MAC address, IP address, status, model, hardware version, firmware version, number of connected clients, hops, uplink APs and downlink APs.

## 2.3.3 Manage the EAPs in the Action Column

You can execute the corresponding operation to the EAP by clicking an icon in the **Action** column.

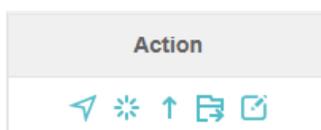

	Locate the EAP in the map.
	Reboot the EAP.




### Upgrade the EAP.

Two options are available for upgrading: upgrade online and upgrade manually.


**Upgrade online:** With Cloud Access enabled on the OC200 and a TP-Link ID bound with the OC200, the latest firmware for the EAP can be detected by the OC200 automatically. And you can upgrade the EAP online by clicking **Upgrade Now**. For more details about Cloud Access, refer to [Omada Cloud Service](#).

**Upgrade manually:** Click **Browse** to locate and choose the upgrade file in your computer, then click **Upgrade** to install the latest EAP firmware. The Status will appear as **Upgrading** until the process is complete and the EAP reconnects to the OC200.

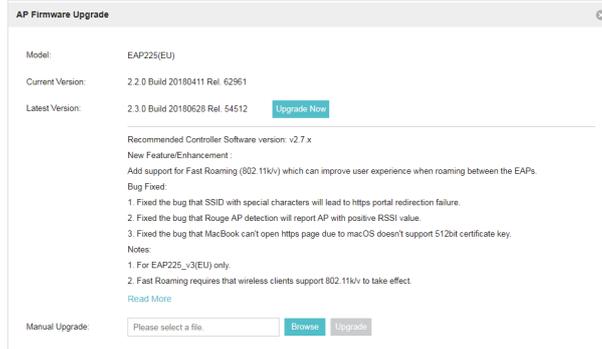


### Move the EAP to a site.

Select a site that has been created and click **Apply**. You can group all the EAPs by this way and centrally manage them on each site.

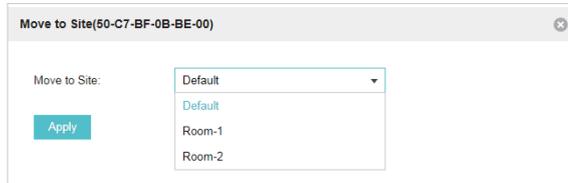

### Configure the EAP.

For detailed instructions about how to configure the EAP on this window, refer to [Configure the EAPs Separately](#).

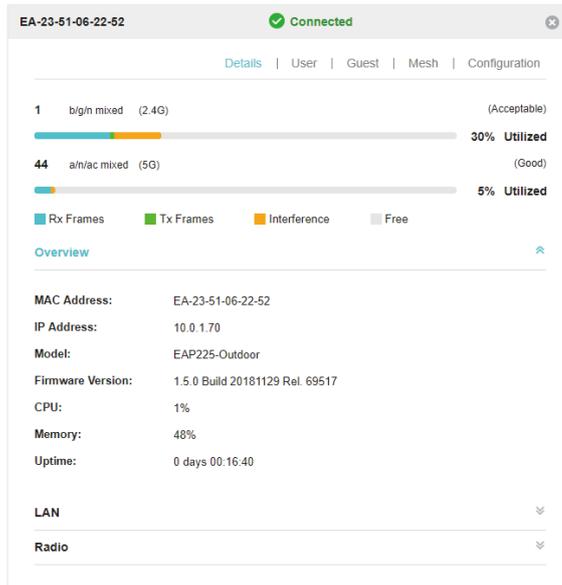

### Note:

- Only managed EAPs can be rebooted or upgraded.
- The EAP which is managed by the OC200 can not be logged in to its own management interface. To log in to the EAP's own management interface, forget the EAP in the OC200 first.

## 2.4 Monitor and Manage Clients

The **Clients** tab displays the clients connected to the EAP network.

Hostname	MAC Address	IP Address	Access Point	SSID	User / Guest	2.4GHz / 5GHz	Download	Upload	Rate (Mbps)	Active Time	Signal	Action
iPhone	D0-A6-37-83-DA-99	192.168.0.104	EA-23-51-06-22-52	1122	User	2.4GHz	19.74 K	46.76 K	65.0	14m 45s		

### 2.4.1 View the Current Information of Clients

The clients are divided into two types: User and Guest. Users are the clients connected to the EAP wireless network without the **Portal Authentication**. Guests are the clients which pass the **Portal Authentication**.

You can click the following tabs to respectively view the detailed information of users and guests.

[All Clients](#) | [Users](#) | [Guests](#)


**All Clients** The page displays the information of all clients including users and guests.

**Users** The page displays the information of Users.

**Guests** The page displays the information of Guests.

### 2.4.2 Manage Clients in the Action Column

You can execute the corresponding operation to the EAP by clicking an icon in the **Action** column:

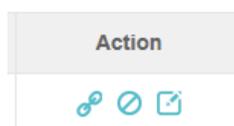

Reconnect the client to the network.

Restrict the client's access to the network.



Configure the rate limit of the client and view the connection history.  
Enter the download limit and upload limit and click **Apply**.

**iPhone (D0-A6-37-83-DA-99)** ✕

[Rate Limit](#) | [Connection History](#)

Note: You can limit the download and upload rate of the client to balance bandwidth usage. The download and upload rate will be limited to the minimum of the value configured in SSID, client and portal configuration.

Download Limit:  Kbps (0-10240000. 0 means no limit.)

Upload Limit:  Kbps (0-10240000. 0 means no limit.)

[Apply](#)



If the client is a Guest, you can click this icon to cancel the authorization for it.

## 2.5 View Clients Statistics During the Specified Period

The **Clients Statistics** page under the **Insight** tab displays the information of clients that have connected to the EAPs network during a specified period.

Hostname	MAC Address	Download	Upload	Duration	Last Seen	Action
iPhone	D0-A6-37-83-DA-99	872.76 K	240.61 K	29m 12s	2018-10-08 15:32:58	<a href="#">🔗</a> <a href="#">🔗</a>
unknown	A4-44-D1-DE-7B-AB	27.92 M	4.81 M	1h 5m 47s	2018-10-08 16:40:27	<a href="#">🔗</a> <a href="#">🔗</a>

### 2.5.1 Select a Specified Period

Select a period from the drop-down menu. Then the page will display clients that have connected to the EAPs network during the period.

Last Seen: All ▼

Last Seen: All

Last Seen: 1 Day

Last Seen: 3 Days

Last Seen: 7 Days

Last Seen: 14 Days

Last Seen: 30 Days

## 2.5.2 View the History Information of Clients

You can click the client's hostname to get its connection history and configure the Rate Limit feature for this client. In addition, you can click the following tabs to view the information of different types of clients:



All	The page displays the history information of all the clients.
User	The page displays the history information of Users. Users are the clients connected to the EAP wireless network without the Portal Authentication.
Guest	The page displays the history information of Guests. Guests are the clients which pass the Portal Authentication.
Blocked	The page displays the clients that have been blocked.
Rate Limited	The page displays the clients that have been limited upload or download rate.



All	The page displays the history information of all clients.
Offline Only	The page displays the history information of the off-line clients.

## 2.5.3 Manage Clients in the Action Column

You can execute the corresponding operation to the EAP in the **Action** column:

	Block the client's access to the network.
	Resume the client's access.
	Configure the rate limit of the client and view the connection history.
	Remove the limit to the client's upload or download rates.

## 2.6 Manage the Rogue APs List

A Rogue AP is an access point that has been installed on a secure network without explicit authorization from a system administrator. The OC200 can scan all channels to detect all nearby

EAPs. If rogue APs are detected, they will be shown on the **Untrusted Rogue APs** list. Besides, you can move the untrusted rogue APs to the **Trusted Rogue APs** list.

By default, the Rogue AP Detection feature is disabled. To allow your EAP to detect nearby APs, you need to enable this feature for this EAP. You can refer to [Rogue AP Detection](#).

## 2.6.1 Manage the Untrusted Rogue APs List

The **Untrusted Rogue APs** page displays the detailed information of untrusted rogue APs.

MAC	SSID	Band	Channel	Security	Beacon	Signal	Last Seen	Action
F4-83-CD-D3-8C-32	rubin	2.4G	1	ON	100	-91	2018-10-08 17:06:14	
50-C7-BF-48-57-1E		2.4G	2	ON	100	-90	2018-10-08 17:06:14	
50-C7-BF-3F-19-F0		5G	36	ON	100	-86	2018-10-08 17:06:14	
98-9C-87-DE-1E-78	Neusoft	2.4G	1	ON	100	-88	2018-10-08 17:06:14	
06-69-6C-56-94-64	NanS	2.4G	1	ON	100	-85	2018-10-08 17:06:14	
C4-71-54-F7-33-8A	Louis_c9_5	5G	36	ON	100	-71	2018-10-08 17:06:14	
50-C7-BF-1C-87-C5	SSID_1	5G	36	ON	100	-52	2018-10-08 17:06:14	
70-4F-57-BF-31-9A	TP-Link_730E	2.4G	1	ON	100	-76	2018-10-08 17:06:14	
C0-4A-00-0A-AA-F7	TP-LINK_AAF7_5G	5G	36	ON	100	-72	2018-10-08 17:06:14	
50-C7-BF-B3-F8-4B	RE365-5G	5G	36	ON	100	-72	2018-10-08 17:06:14	

You can execute the corresponding operation to the EAP in the **Action** column:

- Move the untrusted rogue AP to the Trusted Rogue APs list.
- Delete this record.
- Delete All** Delete all records.

## 2.6.2 Manage the Trusted Rogue APs List

The **Trusted Rogue APs** page displays the detailed information of trusted rogue APs.

MAC	SSID	Band	Channel	Security	Last Seen	Action
70-4F-57-BF-31-9A	TP-Link_730E	2.4G	1	ON	2018-10-08 17:08:28	
C0-4A-00-0A-AA-F7	TP-LINK_AAF7_5G	5G	36	ON	2018-10-08 17:08:28	

You can execute the corresponding operation to the EAP by clicking an icon in the **Action** column:

- Move the trusted rogue AP to the Untrusted Rogue APs list.
- Export** Export and download the current Trusted Rogue APs list and save it on your PC.



Import a saved Trusted Rogue APs list. If the MAC address of an AP appears in list, it will not be detected as a rogue AP.

### Import Trusted AP List

Import Mode:  Replace  Merge

Import Source File:

Please follow the steps below:

1. Select **Replace** (replace the current Trusted Rogue APs list with the one you import) or **Merge** (add the APs in the file to the current Trusted Rogue APs list).
2. Click **Browse** to locate the file and choose it.
3. Click **Import** to import the Trusted Rogue APs list.

## 2.7 View Past Guest Authorization

The Past Guest Authorization page displays the details about all the clients that accessed the network during a certain time period. You can select a period in the drop-down list.


MAC Address	SSID	Radio	Authorized By	Authorized Start Time	Download	Upload
D0-A6-37-83-DA-99	SSID2	2.4GHz	Simple Password	2018-10-08 14:23:32	853.76 K	201.81 K

## 2.8 View Logs

The logs of OC200 can effectively record, classify and manage the system information of the managed EAPs, providing powerful support for you to monitor network operation and diagnose malfunctions. The Logs page displays the log's module, level, content, operator and occurred time.

Module	Level	Content	Operator	Time	Action
AP	Alert	EA-33-51-A8-22-A0(EA-33-51-A8-22-A0) disconnected from LAN	---	2018-12-14 15:46:11	
System	Information	admin(administrator) logged in successfully	admin	2018-12-14 15:44:13	
AP	Information	EA-23-51-06-22-52(EA-23-51-06-22-52) connected to LAN	---	2018-12-14 15:43:54	
System	Information	admin(administrator) logged in successfully	admin	2018-12-14 15:38:34	
AP	Information	EA-33-51-A8-22-A0(EA-33-51-A8-22-A0) connected to LAN	---	2018-12-14 15:34:19	
AP	Notice	EA-33-51-A8-22-A0(EA-33-51-A8-22-A0) changed LAN IP and mask to 10.0.0.195/255.255.252.0	---	2018-12-14 15:33:20	
AP	Notice	EA-33-51-A8-22-A0(EA-33-51-A8-22-A0) changed LAN IP and mask to 192.168.0.254/255.255.255.0	---	2018-12-14 15:33:17	
System	Information	admin(administrator) logged in successfully	admin	2018-12-14 15:32:17	
AP	Information	EA-33-51-A8-22-A0(EA-33-51-A8-22-A0) connected to LAN	---	2018-12-14 15:29:40	
AP	Information	EA-23-51-06-22-52(EA-23-51-06-22-52) connected to LAN	---	2018-12-14 11:31:33	

You can view the alerts on a separate page by clicking **Alerts** in the top right corner of the page. As follows, you can click  to mark the alerts as read.

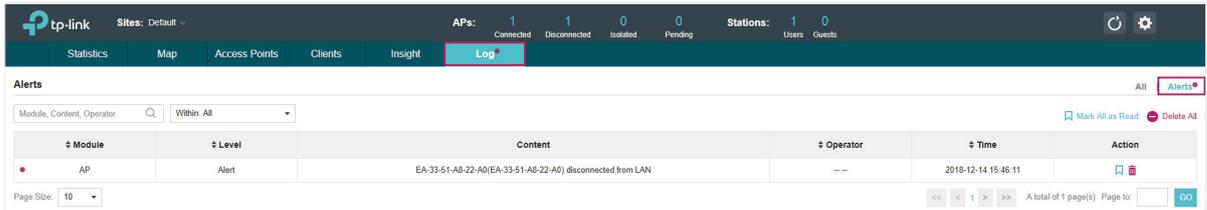

The screenshot shows the TP-Link Omnicast interface. The top navigation bar includes Statistics, Map, Access Points, Clients, Insight, and Log. The Alerts page is displayed, showing a table with columns for Module, Level, Content, Operator, Time, and Action. A single alert is visible: AP, Alert, EA-33-51-A8-22-A0(EA-33-51-A8-22-A0) disconnected from LAN, 2018-12-14 15:46:11. The page also includes search filters, a 'Mark All as Read' button, and a 'Delete All' button.

**Note:**

The logs and alerts of the OC200 with firmware version 1.0.3 or below will be discarded after the firmware is upgraded to version 1.1.0 or above.

# 3

## *Configure the EAPs Globally*

This chapter introduces the global configurations applied to all the managed EAPs. To configure a specific EAP, please refer to [Chapter 5 Configure the EAPs Separately](#).

In global configurations, you can configure the following items:

- Wireless Network
- Access Control
- Portal Authentication
- Free Authentication Policy
- MAC Filter
- Scheduler
- QoS
- Site Settings


## 3.1 Wireless Network

In addition to the wireless network you created in Quick Start, you can add more wireless networks and configure the advanced wireless parameters to improve the network quality.

### 3.1.1 Add Wireless Networks

To add wireless networks, follow the steps below.

1. Go to **Wireless Settings > Basic Wireless Setting**.

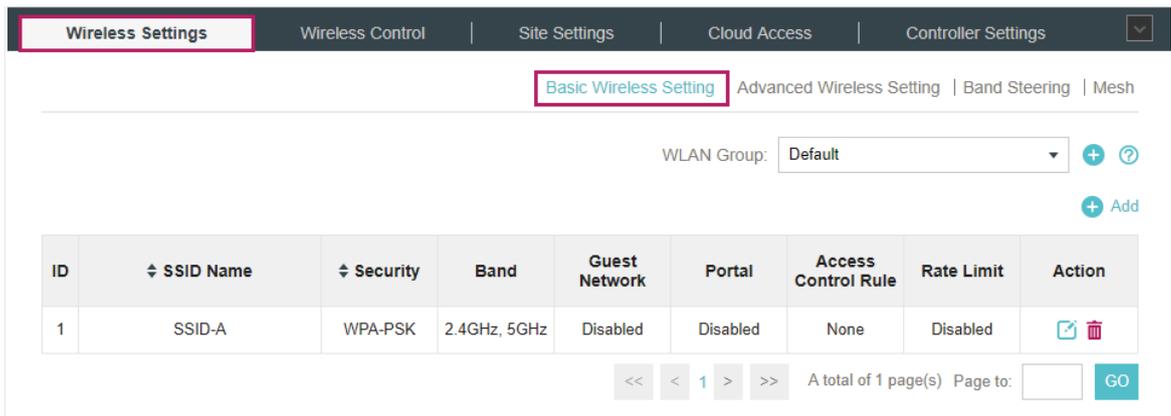

The screenshot shows the 'Wireless Settings' interface. The 'Wireless Settings' tab is selected. Underneath, the 'Basic Wireless Setting' sub-tab is active. A 'WLAN Group' dropdown menu is set to 'Default'. Below this is a table with the following data:

ID	SSID Name	Security	Band	Guest Network	Portal	Access Control Rule	Rate Limit	Action
1	SSID-A	WPA-PSK	2.4GHz, 5GHz	Disabled	Disabled	None	Disabled	 

At the bottom of the table, there are navigation controls: '<<' '<' '1' '>' '>>' and a pagination summary: 'A total of 1 page(s) Page to:  GO'.

2. Click  at the right of **WLAN Group: Default** to add a WLAN group. WLAN groups are an easy way to quickly deploy EAPs by creating a template-based set of SSIDs with wireless parameters. Different WLAN groups can be applied to different EAPs. If you have no need to group your wireless networks, you can use the default WLAN group and skip this step.

3. Specify a name for the group and click **Apply**.



The screenshot shows a 'WLAN Group' configuration dialog box. It has a title bar with 'WLAN Group' and a close button. Inside, there is a 'Name:' label followed by a text input field containing 'Group1'. Below the input field is a blue 'Apply' button.

4. Select the WLAN group **WLAN Group: Default** and click  **Add** to add an SSID to the specific WLAN group.

5. Configure the parameters in the following window.

**Add SSID**
✕

---

**Basic Info** ⤴

SSID Name:

Band:  2.4GHz  5GHz

Guest Network:  Enable ?

Security Mode: WPA-PSK ▼

Wireless Password:  🗑

**Advanced Settings** ⤵

Apply

<b>SSID Name</b>	Enter an SSID name contains up to 32 characters.
<b>Band</b>	Select the radio band to add the SSID.
<b>Guest Network</b>	With this option enabled, guest network will block clients from reaching any private IP subnet.
<b>Security Mode</b>	<p>Select the security mode of the wireless network.</p> <p><b>None:</b> The hosts can access the wireless network without authentication.</p> <p><b>WEP/WPA-Enterprise/WPA-PSK:</b> The hosts need to get authenticated before accessing the wireless network. For the network security, you are suggested to encrypt your wireless network.</p> <p>Settings vary in different security modes and the details are in the following introduction.</p>

**Note:**

- 8 SSIDs can be created on each band at most.
- The SSID on different radio band with the same name will be regarded as an identical SSID entry. When you upgrade your OC200 or restore the backup files from the controller with the version 3.0.5 or below, the SSID entries with the same name will be merged if they are on 2.4GHz and 5GHz in the same WLAN group. All the configurations in the entry will be changed to the parameters of the original SSID on the 2.4GHz radio band.

Following is the detailed introduction of [None](#), [WEP](#), [WPA-Enterprise](#) and [WPA-PSK](#).

## None

The hosts can access the wireless network without authentication. Configure the advanced parameters in the following window.

### Add SSID ✕

**Basic Info** ⌵

**Advanced Settings** ⌴

SSID Broadcast:  Enable

Wireless VLAN:  Enable

Wireless VLAN ID:  (1-4094)

RADIUS MAC Authentication:  Enable

Authentication Server IP:

Authentication Server Port:  (1-65535)

Authentication Server Password:  🗑

MAC Address Format:  ?

Empty Password:  ?

Access Control Rule:  ⌵

Rate Limit:  Enable ?

Download Limit:  Kbps (0-10240000. 0 means no limit.)

Upload Limit:  Kbps (0-10240000. 0 means no limit.)

---

### SSID Broadcast

With the option enabled, EAPs will broadcast the SSID to the nearby hosts, so that those hosts can find the wireless network identified by this SSID. If this option is disabled, users must enter the SSID manually to connect to the EAP.

The option is enabled by default.

---

<b>Wireless VLAN</b>	<p>With this option enabled, the EAP can work together with the switches supporting 802.1Q VLAN. Traffic from the clients in different wireless networks is added with different VLAN tags according to the VLAN settings of the wireless networks. Then the wireless clients in different VLANs cannot directly communicate with each other.</p> <p>To set a wireless VLAN for the wireless network, enable the option and set a VLAN ID in the <b>Wireless VLAN ID</b>.</p>
<b>Wireless VLAN ID</b>	<p>Enter a VLAN ID for the wireless VLAN. Wireless networks with the same VLAN ID are grouped to a VLAN. The value ranges from 1 to 4094.</p>
<b>RADIUS MAC Authentication</b>	<p>With this option enabled, the EAP will send the MAC address of the client to the RADIUS server as the username and password for authentication. If the authorization succeeds, the RADIUS server grants the client access to the network.</p> <p>To set RADIUS MAC Authentication, enable the option and configure the following parameters: <b>Authentication Server IP</b>, <b>Authentication Server Port</b>, <b>Authentication Server Password</b>, <b>MAC Address Format</b>, and <b>Empty Password</b>.</p>
<b>Authentication Server IP</b>	<p>With RADIUS MAC Authentication enabled, enter the IP address of the authentication server.</p>
<b>Authentication Server Port</b>	<p>With RADIUS MAC Authentication enabled, enter the port number you have set on the RADIUS server for authentication requests. The default setting is 1812.</p>
<b>Authentication Server Password</b>	<p>With RADIUS MAC Authentication enabled, enter the authentication password. The authentication server and the OC200 use the password to encrypt passwords and exchange responses.</p>
<b>MAC Address Format</b>	<p>With RADIUS MAC Authentication enabled, select the format to convert a client's MAC address to the RADIUS username.</p>
<b>Empty Password</b>	<p>With the option enabled, a blank password for RADIUS MAC Authentication will be allowed. With the option disabled, the password will be the same as the username.</p>
<b>Access Control Rule</b>	<p>Select an Access Control rule for this SSID. For more information, refer to <a href="#">Access Control</a>.</p>
<b>Rate Limit</b>	<p>With this option enabled, the download and upload rate of each client which connects to the SSID will be limited to balance bandwidth usage. You can limit the download and upload rate for some specific clients by configuring rate limit in client list, refer to <a href="#">Manage Clients in the Action Column</a> to get more details.</p> <p>Note that the download and upload rate will be limited to the minimum of the value configured in SSID, client and portal configuration.</p>
<b>Download Limit</b>	<p>With Rate Limit enabled, specify the limit of download rate. 0 means unlimited.</p>
<b>Upload Limit</b>	<p>With Rate Limit enabled, specify the limit of upload rate. 0 means unlimited.</p>

## WEP

WEP is based on the IEEE 802.11 standard and less safe than WPA-Enterprise and WPA-PSK.

### Note:

WEP is not supported in 802.11n mode or 802.11ac mode. If WEP is applied in 802.11n, 802.11 ac or 802.11n/ac mixed mode, the clients may not be able to access the wireless network. If WEP is applied in 11b/g/n mode (2.4GHz) or 11a/n (5GHz), the EAP may work at a low transmission rate.

Security Mode:	WEP
Key Selected:	Key1
Key Value:	weppw

**Key Selected** Select one key to specify. You can configure four keys at most.

**Key Value** Enter the WEP keys. The length and valid characters are affected by key type.

Configure the advanced parameters in the following window.

### Add SSID

**Basic Info**

---

**Advanced Settings**

Type:  Auto  Open System  Shared Key

WEP Key Format:  ASCII  Hexadecimal

Key Type:  64Bit  128Bit  152Bit

SSID Broadcast:  Enable

Wireless VLAN:  Enable

Wireless VLAN ID:  (1-4094)

Access Control Rule:

Rate Limit:  Enable [?](#)

Download Limit:  Kbps (0-10240000. 0 means no limit.)

Upload Limit:  Kbps (0-10240000. 0 means no limit.)

**Apply**

Type	<p>Select the authentication type for WEP.</p> <p><b>Auto:</b> The O200 can select Open System or Shared Key automatically based on the wireless station's capability and request.</p> <p><b>Open System:</b> Clients can pass the authentication and associate with the wireless network without password. However, correct password is necessary for data transmission.</p> <p><b>Shared Key:</b> Clients have to input password to pass the authentication, otherwise it cannot associate with the wireless network or transmit data.</p>
WEP Key Format	<p>Select <b>ASCII</b> or <b>Hexadecima</b> as the WEP key format.</p> <p><b>ASCII:</b> ASCII format stands for any combination of keyboard characters of the specified length.</p> <p><b>Hexadecimal:</b> Hexadecimal format stands for any combination of hexadecimal digits (0-9, a-f, A-F) with the specified length.</p>
Key Type	<p>Select the WEP key length for encryption.</p> <p><b>64Bit:</b> Enter 10 hexadecimal digits or 5 ASCII characters.</p> <p><b>128Bit:</b> Enter 26 hexadecimal digits or 13 ASCII characters.</p> <p><b>152Bit:</b> Enter 32 hexadecimal digits or 16 ASCII characters.</p>
Key Value	<p>Enter the WEP keys. The length and valid characters are affected by key type.</p>
SSID Broadcast	<p>With the option enabled, EAPs will broadcast the SSID to the nearby hosts, so that those hosts can find the wireless network identified by this SSID. If this option is disabled, users must enter the SSID manually to connect to the EAP.</p> <p>The option is enabled by default.</p>
Wireless VLAN	<p>With this option enabled, the EAP can work together with the switches supporting 802.1Q VLAN. Traffic from the clients in different wireless networks is added with different VLAN tags according to the VLAN settings of the wireless networks. Then the wireless clients in different VLANs cannot directly communicate with each other.</p> <p>To set a wireless VLAN for the wireless network, enable the option and set a VLAN ID in the <b>Wireless VLAN ID</b>.</p>
Wireless VLAN ID	<p>Enter a VLAN ID for the wireless VLAN. Wireless networks with the same VLAN ID are grouped to a VLAN. The value ranges from 1 to 4094.</p>
Access Control Rule	<p>Select an Access Control rule for this SSID. For more information, refer to <a href="#">Access Control</a>.</p>
Rate Limit	<p>With this option enabled, the download and upload rate of each client which connects to the SSID will be limited to balance bandwidth usage. You can limit the download and upload rate for some specific clients by configuring rate limit in client list, refer to <a href="#">Manage Clients in the Action Column</a> to get more details.</p> <p>Note that the download and upload rate will be limited to the minimum of the value configured in SSID, client and portal configuration.</p>
Download Limit	<p>With Rate Limit enabled, specify the limit of download rate. 0 means unlimited.</p>

---

## Upload Limit

With Rate Limit enabled, specify the limit of upload rate. 0 means unlimited.

---

## WPA-Enterprise

The WPA-Enterprise mode requires a RADIUS server to authenticate clients. Since the WPA-Enterprise can generate different passwords for different clients, it is much safer than WPA-PSK. However, it costs much more to maintain and is usually used by enterprise.

Security Mode:	<input type="text" value="WPA-Enterprise"/>
RADIUS Server IP:	<input type="text" value="0.0.0.0"/>
RADIUS Port:	<input type="text" value="0"/> (1-65535,0 means default port 1812)
RADIUS Password:	<input type="password"/>
RADIUS Accounting:	<input checked="" type="checkbox"/> Enable
Accounting Server IP:	<input type="text"/>
Accounting Server Port:	<input type="text" value="1813"/> (1-65535)
Accounting Server Password:	<input type="password"/>
Interim Update:	<input checked="" type="checkbox"/> Enable
Interim Update Interval:	<input type="text" value="600"/> (s, 60-86400)

---

RADIUS Server IP	Enter the IP address of the RADIUS Server.
RADIUS Port	Enter the port number of the RADIUS Server.
RADIUS Password	Enter the shared secret key of the RADIUS server.
RADIUS Accounting	Enable or disable RADIUS accounting feature.
Accounting Server IP	Enter the IP address of the accounting server.
Accounting Server Port	Enter the port number of the accounting server.
Accounting Server Password	Enter the shared secret key of the accounting server.
Interim Update	With this option enabled, you can specify the duration between accounting information updates. By default, the function is disabled.  Enter the appropriate duration between updates for EAPs in <b>Interim Update Interval</b> .
Interim Update Interval	With Interim Update enabled, specify the appropriate duration between updates for EAPs. The default duration is 600 seconds.

---

Configure the advanced parameters in the following window.

### Add SSID

**Basic Info** ⌵

---

**Advanced Settings** ⌴

---

Version:  Auto  WPA  WPA2

Encryption:  Auto  TKIP  AES

Group Key Update Period:  seconds(30-8640000, 0 means no upgrade)

SSID Broadcast:  Enable

Wireless VLAN:  Enable

Wireless VLAN ID:  (1-4094)

Access Control Rule:  ▼

Rate Limit:  Enable ?

Download Limit:  Kbps (0-10240000. 0 means no limit.)

Upload Limit:  Kbps (0-10240000. 0 means no limit.)

---

#### Version

Select the version of WPA-Enterprise.

**Auto:** The EAP will automatically choose the version used by each client device.

**WPA/WPA2:** Two versions of Wi-Fi Protected Access.

---

#### Encryption

Select the Encryption type.

**Auto:** The default setting is Auto and the EAP will select TKIP or AES automatically based on the client device's request.

**TKIP:** Temporal Key Integrity Protocol. TKIP is not supported in 802.11n mode, 802.11ac mode or 802.11n/ac mixed mode. If TKIP is applied in 802.11n, 802.11 ac or 802.11n/ac mixed mode, the clients may not be able to access the wireless network of the EAP. If TKIP is applied in 11b/g/n mode (2.4GHz) or 11a/n mode(5GHz), the device may work at a low transmission rate.

**AES:** Advanced Encryption Standard. We recommend that you select AES as the encryption type because it is more secure than TKIP.

---

#### Group Key Update Period

Specify a group key update period, which instructs the EAP how often it should change the encryption keys. The value can be either 0 or 30~8640000 seconds. 0 means no change of the encryption key anytime.

---

<b>SSID Broadcast</b>	<p>With the option enabled, EAPs will broadcast the SSID to the nearby hosts, so that those hosts can find the wireless network identified by this SSID. If this option is disabled, users must enter the SSID manually to connect to the EAP.</p> <p>The option is enabled by default.</p>
<b>Wireless VLAN</b>	<p>With this option enabled, the EAP can work together with the switches supporting 802.1Q VLAN. Traffic from the clients in different wireless networks is added with different VLAN tags according to the VLAN settings of the wireless networks. Then the wireless clients in different VLANs cannot directly communicate with each other.</p> <p>To set a wireless VLAN for the wireless network, enable the option and set a VLAN ID in the <b>Wireless VLAN ID</b>.</p>
<b>Wireless VLAN ID</b>	<p>Enter a VLAN ID for the wireless VLAN. Wireless networks with the same VLAN ID are grouped to a VLAN. The value ranges from 1 to 4094.</p>
<b>Access Control Rule</b>	<p>Select an Access Control rule for this SSID. For more information, refer to <a href="#">Access Control</a>.</p>
<b>Rate Limit</b>	<p>With this option enabled, the download and upload rate of each client which connects to the SSID will be limited to balance bandwidth usage. You can limit the download and upload rate for some specific clients by configuring rate limit in client list, refer to <a href="#">Manage Clients in the Action Column</a> to get more details.</p> <p>Note that the download and upload rate will be limited to the minimum of the value configured in SSID, client and portal configuration.</p>
<b>Download Limit</b>	<p>With Rate Limit enabled, specify the limit of download rate. 0 means unlimited.</p>
<b>Upload Limit</b>	<p>With Rate Limit enabled, specify the limit of upload rate. 0 means unlimited.</p>

## WPA-PSK

Based on a pre-shared key, WPA-PSK is characterized by high safety and simple settings and is mostly used by common households and small businesses.

The image shows a configuration interface for WPA-PSK. It features two main fields: 'Security Mode' and 'Wireless Password'. The 'Security Mode' field is a dropdown menu currently set to 'WPA-PSK'. The 'Wireless Password' field is an empty text input box with a small eye icon on the right side, indicating that the password is currently hidden.

<b>Wireless Password</b>	<p>Configure the wireless password with ASCII or Hexadecimal characters.</p> <p>For ASCII, the length should be between 8 and 63 characters with combination of numbers, letters (case-sensitive) and common punctuations. For Hexadecimal, the length should be 64 characters (case-insensitive, 0-9, a-f, A-F).</p>
--------------------------	---

Configure the advanced parameters in the following window.

### Add SSID

**Basic Info**

**Advanced Settings**

Version:  Auto  WPA-PSK  WPA2-PSK

Encryption:  Auto  TKIP  AES

Group Key Update Period:  seconds(30-8640000, 0 means no upgrade)

SSID Broadcast:  Enable

Wireless VLAN:  Enable

Wireless VLAN ID:  (1-4094)

Access Control Rule:

Rate Limit:  Enable ?

Download Limit:  Kbps (0-10240000, 0 means no limit.)

Upload Limit:  Kbps (0-10240000, 0 means no limit.)

**Apply**

#### Version

Select the version of WPA-Enterprise.

**Auto:** The EAP will automatically choose the version used by each client device.

**WPA/WPA2:** Two versions of Wi-Fi Protected Access.

#### Encryption

Select the Encryption type.

**Auto:** The default setting is Auto and the EAP will select TKIP or AES automatically based on the client request.

**TKIP:** Temporal Key Integrity Protocol. TKIP is not supported in 802.11n mode, 802.11ac mode or 802.11n/ac mixed mode. If TKIP is applied in 802.11n, 802.11ac or 802.11n/ac mixed mode, the clients may not be able to access the wireless network of the EAP. If TKIP is applied in 11b/g/n mode (2.4GHz) or 11a/n mode(5GHz), the device may work at a low transmission rate.

**AES:** Advanced Encryption Standard. We recommend that you select AES as the encryption type for it is more secure than TKIP.

#### Group Key Update Period

Specify a group key update period, which instructs the EAP how often it should change the encryption keys. The value can be either 0 or 30~8640000 seconds. 0 means the encryption keys will not be changed all the time.

<b>SSID Broadcast</b>	<p>With the option enabled, EAPs will broadcast the SSID to the nearby hosts, so that those hosts can find the wireless network identified by this SSID. If this option is disabled, users must enter the SSID manually to connect to the EAP.</p> <p>The option is enabled by default.</p>
<b>Wireless VLAN</b>	<p>With this option enabled, the EAP can work together with the switches supporting 802.1Q VLAN. Traffic from the clients in different wireless networks is added with different VLAN tags according to the VLAN settings of the wireless networks. Then the wireless clients in different VLANs cannot directly communicate with each other.</p> <p>To set a wireless VLAN for the wireless network, enable the option and set a VLAN ID in the <b>Wireless VLAN ID</b>.</p>
<b>Wireless VLAN ID</b>	<p>Enter a VLAN ID for the wireless VLAN. Wireless networks with the same VLAN ID are grouped to a VLAN. The value ranges from 1 to 4094.</p>
<b>Access Control Rule</b>	<p>Select an Access Control rule for this SSID. For more information, refer to <a href="#">Access Control</a>.</p>
<b>Rate Limit</b>	<p>With this option enabled, the download and upload rate of each client which connects to the SSID will be limited to balance bandwidth usage. You can limit the download and upload rate for some specific clients by configuring rate limit in client list, refer to <a href="#">Manage Clients in the Action Column</a> to get more details.</p> <p>Note that the download and upload rate will be limited to the minimum of the value configured in SSID, client and portal configuration.</p>
<b>Download Limit</b>	<p>With Rate Limit enabled, specify the limit of download rate. 0 means unlimited.</p>
<b>Upload Limit</b>	<p>With Rate Limit enabled, specify the limit of upload rate. 0 means unlimited.</p>


6. Click **Apply**.

### 3.1.2 Configure Advanced Wireless Parameters


Proper wireless parameters can improve the network's stability, reliability and communication efficiency. The advanced wireless parameters consist of **Fast Roaming**, **Beacon Interval**, **DTIM Period**, **RTS Threshold**, **Fragmentation Threshold** and **Airtime Fairness**.

To configure the advanced wireless parameters, follow the steps below.

1. Go to **Wireless Settings > Advanced Wireless Setting**.

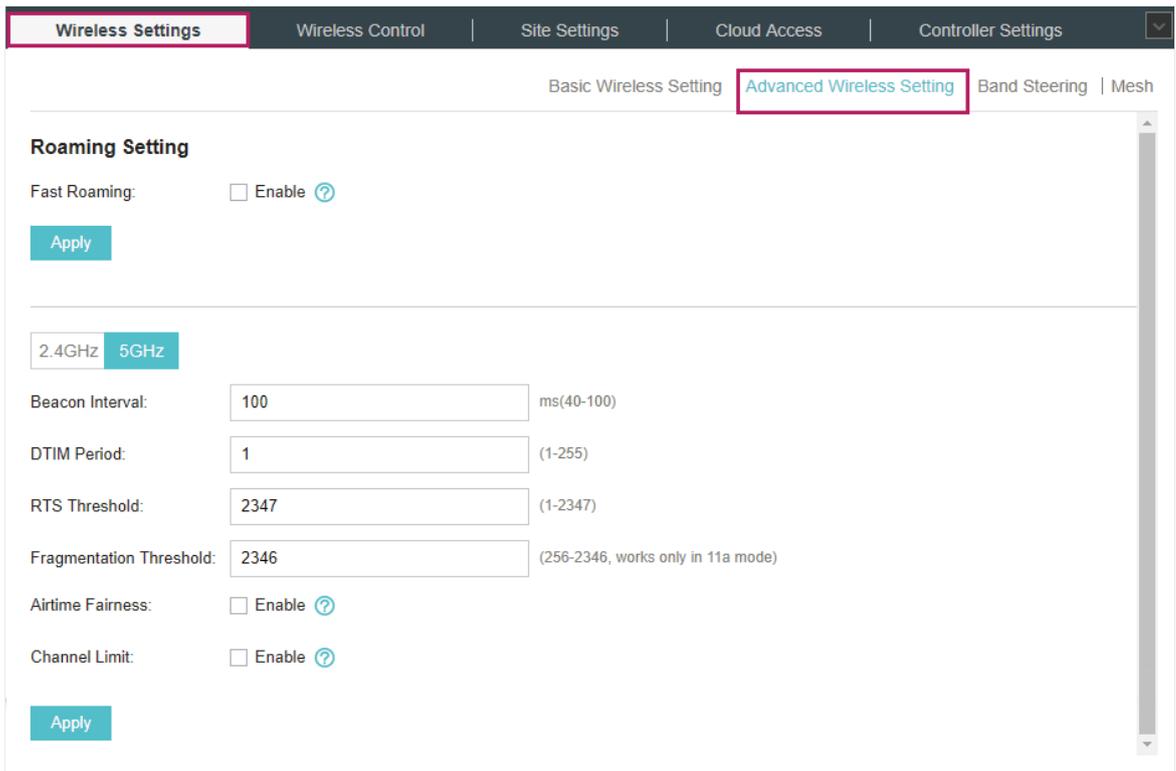

2. Enable **Fast Roaming** and configure the corresponding parameters.

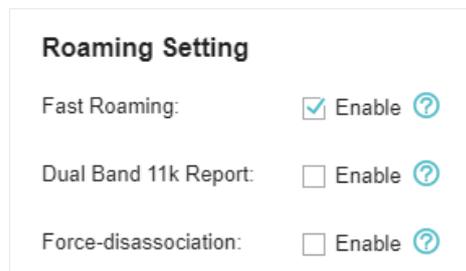

<b>Fast Roaming</b>	With this option enabled, 11k/v capable clients can have improved fast roaming experience when moving among different APs.
<b>Dual Band 11k Report</b>	With this feature disabled, the OC200 provides candidate AP report that contains the APs in the same band as the clients. With this feature enabled, the OC200 provides candidate AP report that contains the APs in both 2.4GHz and 5GHz bands.
<b>Force-disassociation</b>	<p>The OC200 dynamically monitors the link quality of every associated client. When the client's current link quality drops below the predefined threshold and there are some other APs with better signal, the current AP issues an 11v roaming suggestion to the client.</p> <p>With Force-disassociation disabled, the AP only issues a roaming suggestion, but whether to roam or not is determined by the client.</p> <p>With Force-disassociation enabled, the AP not only issues a roaming suggestion but also disassociates the client after a while. Thus the client is supported to re-associate to a better AP. This function is recommended when there are sticky clients that don't roam.</p>

3. Click **Apply**.

4. Select the band frequency  2.4GHz  5GHz .

5. Configure the following parameters.

<b>Beacon Interval</b>	<p>Beacons are transmitted periodically by the EAP to announce the presence of a wireless network for the clients. <b>Beacon Interval</b> value determines the time interval of the beacons sent by the device.</p> <p>You can specify a value between 40 and 100ms. The default is 100ms.</p>
<b>DTIM Period</b>	<p>The DTIM (Delivery Traffic Indication Message) is contained in some Beacon frames. It indicates whether the EAP has buffered data for client devices. The <b>DTIM Period</b> indicates how often the clients served by this EAP should check for buffered data still on the EAP awaiting pickup.</p> <p>You can specify the value between 1-255 Beacon Intervals. The default value is 1, indicating clients check for buffered data on the EAP at every beacon. An excessive DTIM interval may reduce the performance of multicast applications, so we recommend that you keep it by default.</p>
<b>RTS Threshold</b>	<p>RTS (Request to Send) can ensure efficient data transmission. When RTS is activated, the client will send a RTS packet to EAP to inform that it will send data before it send packets. After receiving the RTS packet, the EAP notices other clients in the same wireless network to delay their transmitting of data and informs the requesting client to send data, thus avoiding the conflict of packet. If the size of packet is larger than the <b>RTS Threshold</b>, the RTS mechanism will be activated.</p> <p>If you specify a low threshold value, RTS packets are sent more frequently and help the network recover from interference or collisions that might occur on a busy network. However, it also consumes more bandwidth and reduces the throughput of the packet. We recommend that you keep it by default. The recommended and default value is 2347.</p>
<b>Fragmentation Threshold</b>	<p>The fragmentation function can limit the size of packets transmitted over the network. If a packet exceeds the <b>Fragmentation Threshold</b>, the fragmentation function is activated and the packet will be fragmented into several packets.</p> <p>Fragmentation helps improve network performance if properly configured. However, too low fragmentation threshold may result in poor wireless performance caused by the extra work of dividing up and reassembling of frames and increased message traffic. The recommended and default value is 2346 bytes.</p>
<b>Airtime Fairness</b>	<p>With this option enabled, each client connecting to the EAP can get the same amount of time to transmit data, avoiding low-data-rate clients to occupy too much network bandwidth and improving the network throughput. We recommend that you enable this function under multi-rate wireless networks.</p>
<b>Channel Limit</b>	<p>For the EAPs that support DFS in EU version, there is a Channel Limit option. With this option enabled, out-door EAPs will not use the frequency range 5150MHz-5350MHz to meet local laws and regulation limits in EU member states and EFTA states.</p>

6. Click **Apply**.

### 3.1.3 Configure Band Steering

A client device that is capable of communicating on both the 2.4GHz and 5GHz frequency bands will typically connect to the 2.4GHz band. However, if too many client devices are connected to an EAP on the 2.4GHz band, the efficiency of communication will be diminished. Band Steering can steer dual-band clients to the 5GHz frequency band which supports higher transmission rates and more client devices, and thus to greatly improve the network quality.

To configure Band Steering, follow the steps below.

1. Go to **Wireless Settings > Band Steering**.

The screenshot shows the 'Wireless Settings' interface with the 'Band Steering' tab selected. The 'Band Steering' checkbox is unchecked. The 'Connection Threshold' is set to 20, 'Difference Threshold' is set to 4, and 'Max Failures' is set to 10. An 'Apply' button is visible at the bottom left. A note at the bottom states: 'Note: To run the Band Steering function on a SSID, please create the SSIDs on both of the 2GHz and 5GHz band and make sure they have the same name, security mode and wireless password.'

2. Check the box to enable the Band Steering function.
3. Configure the following parameters to balance the clients on both frequency bands:

#### Connection Threshold/ Difference Threshold

**Connection Threshold** defines the maximum number of clients connected to the 5GHz band. The value of **Connection Threshold** is from 2 to 40, and the default is 20.

**Difference Threshold** defines the maximum difference between the number of clients on the 5GHz band and 2.4GHz band. The value of **Difference Threshold** is from 1 to 8, and the default is 4.

When the following two conditions are both met, the EAP prefers to refuse the connection request on 5GHz band and no longer steers other clients to the 5GHz band:

1. The number of clients on the 5GHz band reaches the **Connection Threshold** value.
2. The difference between the number of clients on the 2.4GHz band and 5GHz band reaches the **Difference Threshold** value.

#### Max Failures

If a client repeatedly attempts to associate with the EAP on the 5GHz band and the number of rejections reaches the value of **Max Failures**, the EAP will accept the request.

The value is from 0 to 100, and the default is 10.

4. Click **Apply**.

### 3.1.4 Configure Mesh

Mesh is used to establish a wireless network or expand a wired network through wireless connection on 5GHz radio band. In practical application, it can help users to conveniently deploy APs without requiring Ethernet cable. After mesh network establishes, the EAPs can be configured and managed within OC200 in the same way as wired EAPs. Meanwhile, because of the ability to self-organize and self-configure, mesh also can efficiently reduce the configuration overhead.


**Note:**

- Only the EAPs with specific firmware are available for mesh function, including EAP225-Outdoor\_1.0 with firmware version 1.3.0 or above and EAP225\_3.0 with firmware version 2.5.0 or above.
- Only the EAPs in the same site can establish a mesh network.

To understand how mesh can be used, the following terms used in OC200 will be introduced:

- **Root AP:** The AP is managed by OC200 with a wired data connection that can be configured to relay data to and from mesh APs (Downlink AP).
- **Isolated AP:** When the EAP which has been managed before by OC200 connects to the network wirelessly and cannot reach the gateway, it goes into the Isolated state.
- **Mesh AP:** An isolated AP will be mesh AP after establishing a wireless connection to the AP with network access.
- **Uplink AP/Downlink AP:** Among mesh APs, the AP that offers the wireless connection for other APs is Uplink AP. A Root AP or an intermediate AP can be the Uplink AP. And the AP that connects to the Uplink AP is called Downlink AP. An uplink AP can offer direct wireless connection for 4 Downlink APs at most.
- **Wireless Uplink:** The action that a Downlink AP connects to the uplink AP.
- **Hops:** In a deployment that uses a root AP and more than one level of wireless uplink with intermediate APs, the uplink tiers can be referred to by root, first hop, second hop and so on. The hops cannot be more than 3.

In a basic mesh network as shown below, there is a root AP that is connected by Ethernet cable, while other isolated APs have no wired data connection. Mesh allows the isolated APs to communicate with pre-configured root AP on the network. Once powered up, factory default or unadopted EAPs can sense the EAP in range and make itself available for adoption within the OC200.

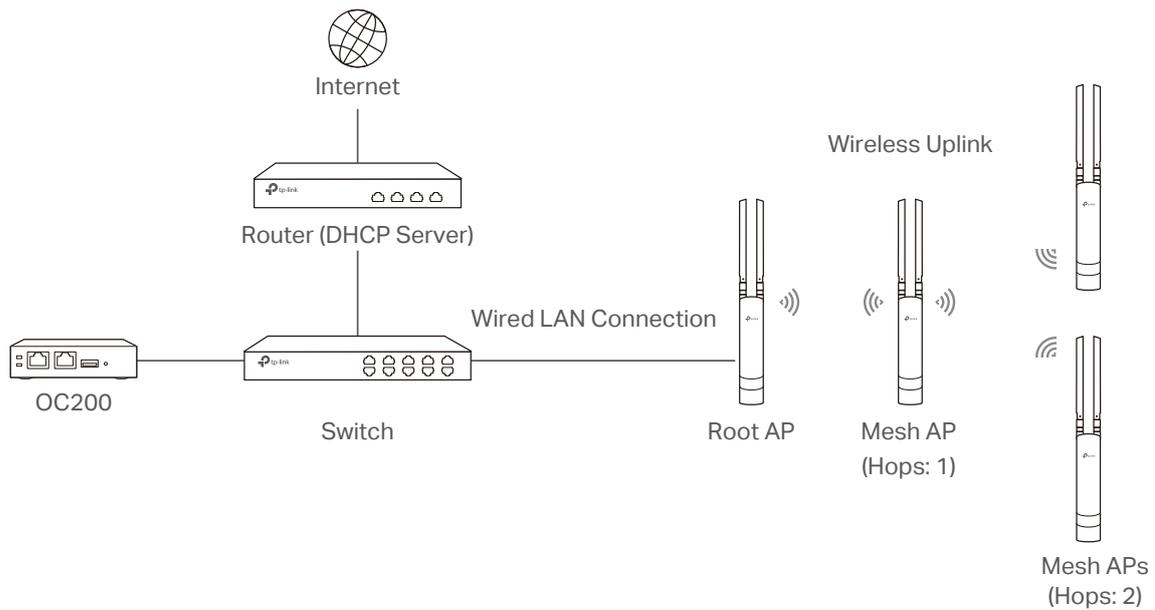


After all the EAPs are adopted, a mesh network is established. Then the EAPs connected to the network wirelessly also can broadcast SSIDs and relay network traffic to and from the network through the uplink AP.

To establish a mesh network, follow the steps below.

- Enable Mesh Function.
- Adopt the Root AP.
- Set up wireless uplink by adopting APs in Pending (Wireless) or Isolated status.

1. Go to **Wireless Settings > Mesh**.

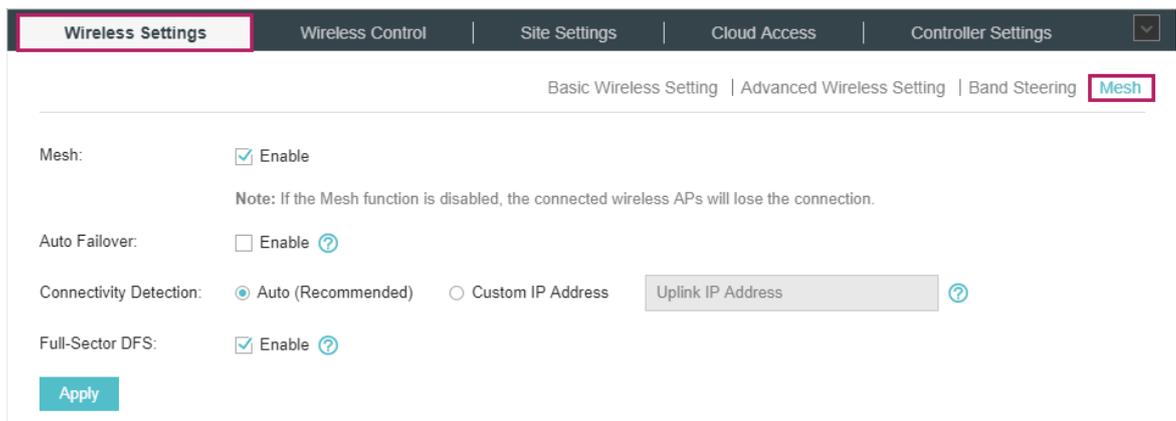

2. Check the box to enable the Mesh function.

3. Configure the following parameters to maintain the mesh network:

## Auto Failover

Enable or disable Auto Failover.

Auto Failover is used for the OC200 to automatically maintain the mesh network. With this feature enabled, the OC200 can automatically select an uplink AP for the isolated EAP to establish Wireless Uplink. Thus the OC200 will automatically select a new uplink AP for the mesh EAPs when the original uplink fails.

## Connectivity Detection

Specify the method of Connection Detection.

In a mesh network, the APs can send ARP request packets to a fixed IP address to test the connectivity. If the link fails, the status of these APs will change to Isolated.

**Auto (Recommended):** Select this method and the mesh APs will send ARP request packets to the default gateway for the detection.

**Custom IP Address:** Select this method and specify a desired IP address. The mesh APs will send ARP request packets to the custom IP address to test the connectivity. If the IP address of the AP is in different network segments from the custom IP address, the AP will use the default gateway IP address for the detection.

## Full-Sector DFS

With this feature enabled, when radar signals are detected on current channel by one EAP, the other EAPs in the mesh network will be also informed. Then all EAPs in the mesh network will switch to an alternate channel.

### 4. Click **Apply**.

### 5. Go to **Access Points > Pending** and adopt the Root AP. Then the status of the Root AP will change into Connected.



The screenshot shows the TP-Link web interface with the 'Access Points' tab selected. The 'Pending' status is highlighted in the top navigation bar. Below the navigation bar, there is a table with the following columns: AP Name, MAC Address, IP Address, Status, Model, Hardware Version, Firmware Version, Client Number, Download, Upload, and Action. The table contains one entry with the following details:

AP Name	MAC Address	IP Address	Status	Model	Hardware Version	Firmware Version	Client Number	Download	Upload	Action
EA-33-51-A8-22-A0	EA-33-51-A8-22-A0	192.168.0.132	Pending	EAP225-Outdoor(EU)	1.0	1.3.0 Build 20180426 Rel. 39248	0	0 Bytes	0 Bytes	Adopt

### 6. Install the EAP that will uplink the Root AP wirelessly. Make sure the intended location is within the range of Root AP. The EAPs that is waiting for Wireless Uplink includes two cases: factory default EAPs and EAPs that has been managed by OC200 before.

#### 1) For the factory default EAP, after powering on the device, the EAP will be in Pending (Wireless) status. Go to **Access Points > Pending** and adopt the EAPs in Pending (Wireless) status.




The screenshot shows the TP-Link web interface with the 'Access Points' tab selected. The 'Pending' status is highlighted in the top navigation bar. Below the navigation bar, there is a table with the following columns: AP Name, MAC Address, IP Address, Status, Model, Hardware Version, Firmware Version, Client Number, Download, Upload, and Action. The table contains one entry with the following details:

AP Name	MAC Address	IP Address	Status	Model	Hardware Version	Firmware Version	Client Number	Download	Upload	Action
EA-23-51-96-22-52	EA-23-51-96-22-52		Pending (Wireless)	EAP225-Outdoor	1.0		0	0 Bytes	0 Bytes	Adopt


After adoption begins, the status of Pending (Wireless) EAP will become Adopting (Wireless) and then Connected (Wireless). It should take roughly 2 minutes to show up Connected (Wireless) within your OC200.

2) For the EAP that has been managed by OC200 before and cannot reach the gateway, it goes into Isolated status when it is discovered again. Go to **Access Points > Isolated**, click .

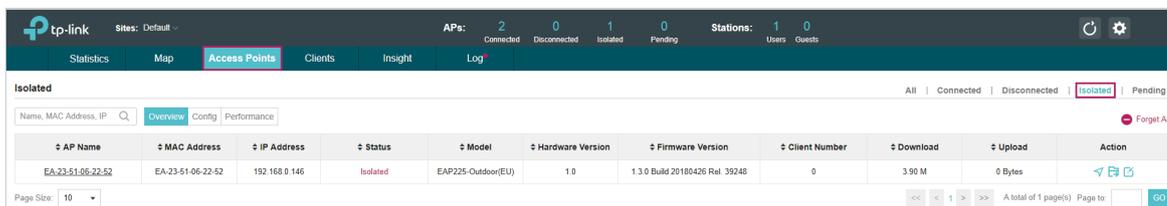

AP Name	MAC Address	IP Address	Status	Model	Hardware Version	Firmware Version	Client Number	Download	Upload	Action
EA-23-51-06-22-52	EA-23-51-06-22-52	192.168.0.146	Isolated	EAP225-Outdoor(EU)	1.0	1.3.0 Build 20180426 Rel. 39248	0	3.90 M	0 Bytes	

The following page will shown, go to **Mesh**, then click  to connect the Uplink AP.

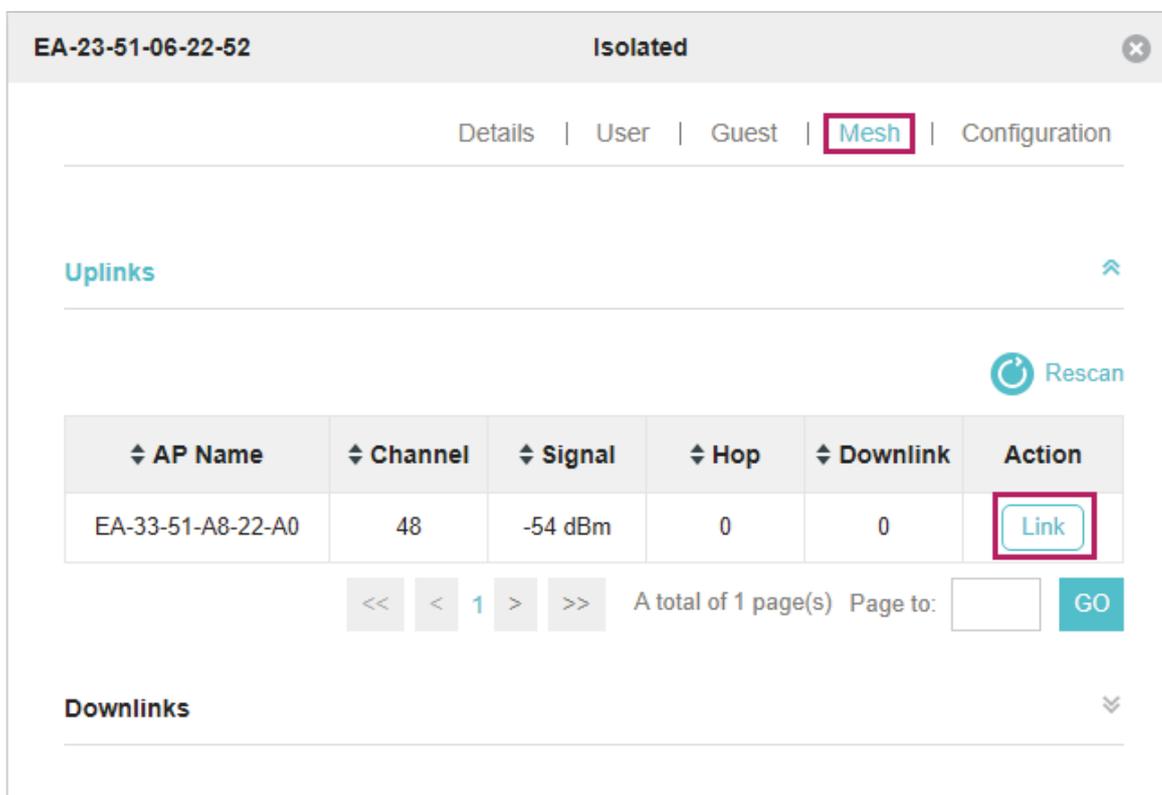

**EA-23-51-06-22-52** **Isolated**

Details | User | Guest | **Mesh** | Configuration

**Uplinks**



AP Name	Channel	Signal	Hop	Downlink	Action
EA-33-51-A8-22-A0	48	-54 dBm	0	0	

<< < 1 > >> A total of 1 page(s) Page to:  

**Downlinks**

Once adoption has finished, your device can be managed by the OC200 in the same way as a wired EAP. You can click the EAP's name on the Access Points tab to view and configure the mesh parameters of the EAP on the pop-up window. Please refer to [View Mesh Information of the EAP](#).


**Tips:**

- You can manually select the uplink AP that you want to connect in the uplink EAP list. To build a mesh network with better performance, we recommend that you select the Uplink AP with the strongest signal, least hop and least Downlink AP.
- You can enable **Auto Failover** to make the OC200 automatically select an uplink AP for the isolated EAP to establish Wireless Uplink. And the OC200 will automatically select a new uplink AP for the mesh EAPs when the original uplink fails.

## 3.2 Access Control

Access Control is used to block or allow the clients to access specific subnets. To configure Access Control rules, follow the steps below.

1. Go to **Wireless Control > Access Control**.

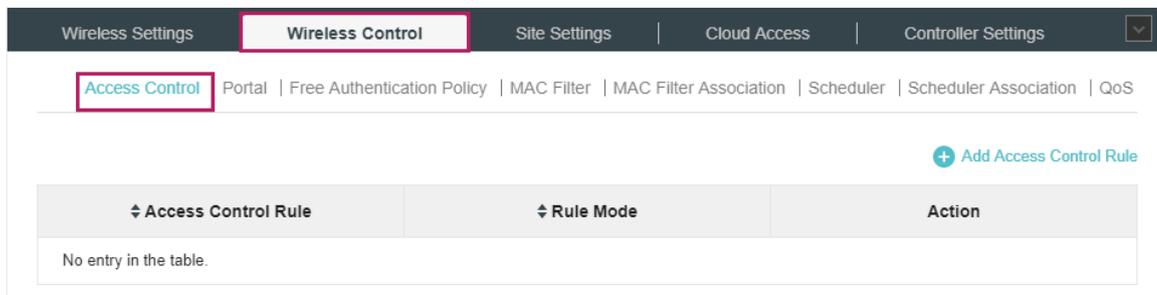

2. Click **+ Add Access Control Rule** to add a new Access Control rule.

3. Configure the following parameters.

<b>Rule Name</b>	Specify a name for this rule.
<b>Rule Mode</b>	Select the mode for this rule. <b>Block:</b> Select this mode to block clients to access the specific subnets. <b>Allow:</b> Select this mode to allow clients to access the specific subnets.
<b>Rule Members</b>	Specify the member subnets for this rule. <b>Subnets:</b> Enter the subnet that will follow the rule mode in the format X.X.X.X/X and click <b>Add New</b> . Up to 16 subnets can be added. <b>Except Subnets:</b> Enter the excepted subnet in the format X.X.X.X/X and click <b>Add New</b> . Up to 16 subnets can be added. The rule mode will not apply to the subnet that is in both of the Subnets list and Except Subnets list.


4. Click **Apply**.

5. Go to **Wireless Settings > Basic Wireless Setting** and enable Access Control function of a selected SSID.


## 3.3 Portal Authentication

Portal authentication enhances the network security by providing authentication service to the clients that just need temporary access to the wireless network. Such clients have to log into a web page to establish verification, after which they will access the network as guests. What's more, you can customize the authentication login page and specify a URL which the newly authenticated clients will be redirected to.

To configure Portal Authentication, go to **Wireless Control > Portal** and click  **Add a New Portal**.

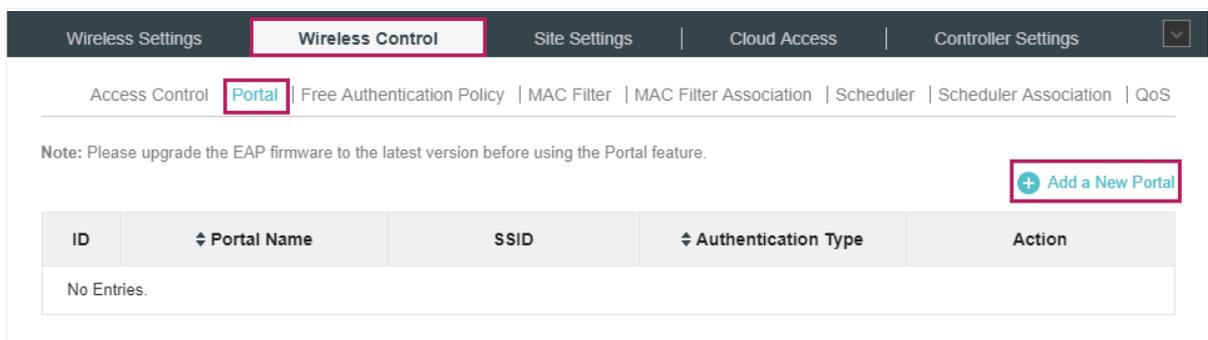

Then the following window will pop up:

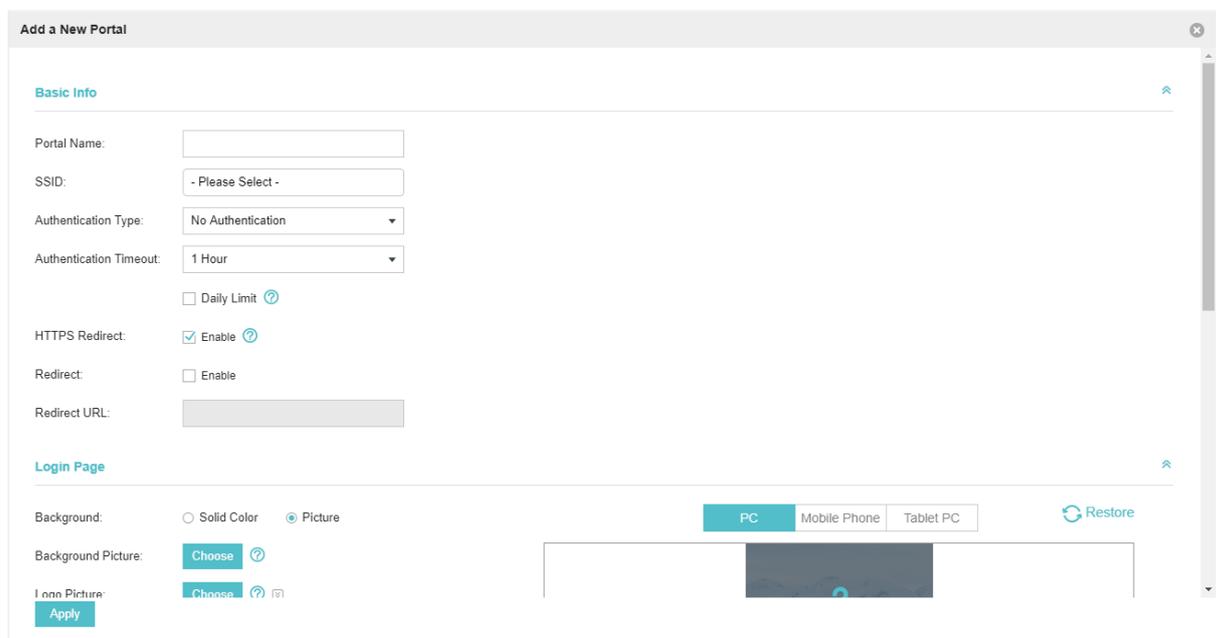

These authentication methods are available: **No Authentication**, **Simple Password**, **Local User**, **Voucher**, **SMS**, **Facebook**, **External RADIUS Server** and **External Portal Server**. The following sections introduce how to configure each Portal authentication.

### 3.3.1 No Authentication

With No Authentication configured, clients can access the network without any authentication.

Follow the steps below to configure No Authentication:

1. Go to **Wireless Settings > Basic Wireless Settings** and create an SSID for the Portal.
2. Go back to the Portal configuration page. In the **Basic Info** section, complete the basic settings for the portal authentication.

The screenshot shows the 'Basic Info' configuration page. It includes the following fields and options:


- Portal Name: [Text input field]
- SSID: [- Please Select -]
- Authentication Type: [No Authentication]
- Authentication Timeout: [1 Hour]
- Daily Limit:  Daily Limit
- HTTPS Redirect:  Enable
- Redirect:  Enable
- Redirect URL: [Text input field]

Configure the following parameters:

<b>Portal Name</b>	Specify a name for the Portal.
<b>SSID</b>	Select an SSID for the Portal.
<b>Authentication Type</b>	Select <b>No Authentication</b> .
<b>Authentication Timeout</b>	<p>With Daily Limit disabled, the client's authentication will expire after the time period you set and the client needs to log in again on the web authentication page to access the network.</p> <p>Options include <b>1 Hour, 8 Hours, 24 Hours, 7 Days</b> and <b>Custom</b>. <b>Custom</b> allows you to define the time in days, hours and minutes. The default value is one hour.</p> <p>With Daily Limit enabled, the client's authentication will expire after the time period you set and the client cannot log in again in the same day.</p> <p>Options include <b>30 Minutes, 1 Hour, 2 Hours, 4 Hours</b> and <b>Custom</b>. <b>Custom</b> allows you to define the time in hours and minutes. The default value is 30 minutes.</p>
<b>Daily Limit</b>	With Daily Limit enabled, after authentication times out, the user cannot get authenticated again in the same day.
<b>HTTPS Redirect</b>	<p>With this function enabled, the unauthorized clients will be redirected to the Portal page when they are trying to browse HTTPS websites.</p> <p>With this function disabled, the unauthorized clients cannot browse HTTPS websites and are not redirected to the Portal page.</p>

<b>Redirect</b>	If you enable this function, the portal will redirect the newly authenticated clients to the configured URL.
<b>Redirect URL</b>	If the Redirect function above is enabled, enter the URL that a newly authenticated client will be redirected to.

3. In the **Login Page** section, configure the login page for the Portal.

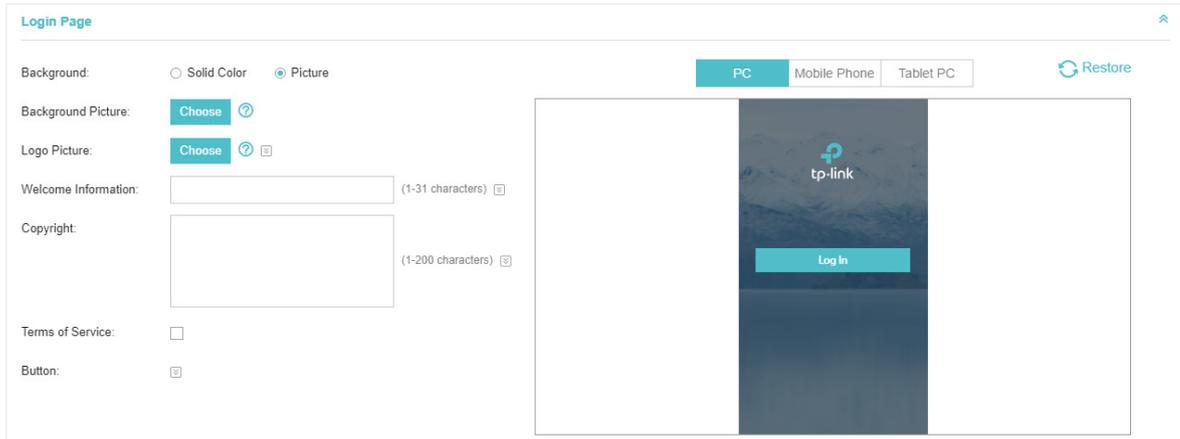

Configure the following parameters:

<b>Background</b>	Select the background type. Two types are supported: <b>Solid Color</b> and <b>Picture</b> .
<b>Background Color</b>	If <b>Solid Color</b> is selected, configure your desired background color through the color picker or by entering the RGB value manually.
<b>Background Picture</b>	If <b>Picture</b> is selected, click the <b>Choose</b> button and select a picture from your PC. Drag and scale the clipping region to edit the picture and click <b>Confirm</b> .
<b>Logo Picture</b>	Click the <b>Choose</b> button and select a picture from your PC. Drag and scale the clipping region to edit the picture and click <b>Confirm</b> . In addition, you can click  and configure the logo position. The options include <b>Middle</b> , <b>Upper</b> and <b>Lower</b> .

Logo Picture: **Choose**  


Logo Position: Middle 

---

### Welcome Information

Specify the welcome information.

In addition, you can click  and select your desired text color for the welcome information through the color picker or by entering the RGB value manually.

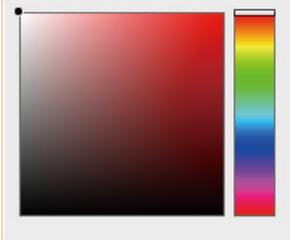
Welcome Information:	<input type="text"/>	(1-31 characters) 
	<input type="text" value="#ffffff"/>	(RGB value)
Welcome Information Color:		

---

### Copyright

Specify the copyright information.

In addition, you can click  and select your desired text color for Copyright information through the color picker or by entering the RGB value manually.

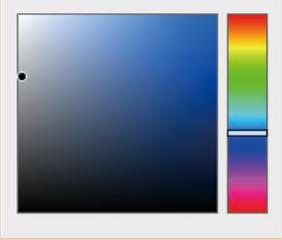Copyright:	<input type="text"/>	(1-200 characters) 
	<input type="text" value="#A7A9AC"/>	(RGB value)
Copyright Color:		

---

### Terms of Service

Enable or disable Terms of Service. With this option enabled, specify the terms of service in the following box.

Terms of Service:	<input checked="" type="checkbox"/> Enable
<div style="border: 1px solid #ccc; height: 80px; width: 100%;"></div>	


## Button

Click  and configure the button.

**Button Position:** Set the position of the login button. The options include **Middle**, **Upper** and **Lower**.

**Button Color:** Select your desired login button color through the color picker or by entering the RGB value manually.

**Button Text Color:** Select your desired text color for the button through the color picker or by entering the RGB value manually.

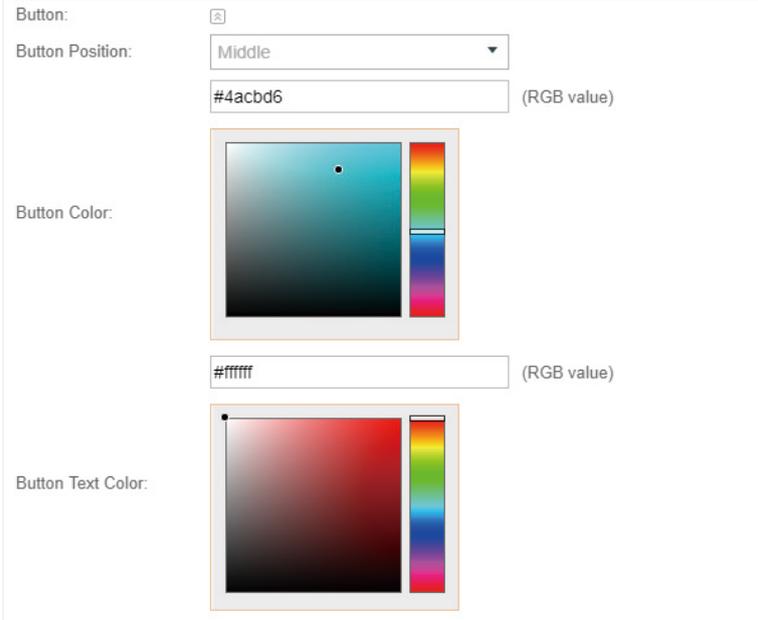

Button: 

Button Position:


(RGB value)

Button Color: 

(RGB value)

Button Text Color: 

4. In the **Advertisement** section, select whether to display advertisement pictures for users and configure the related parameters.

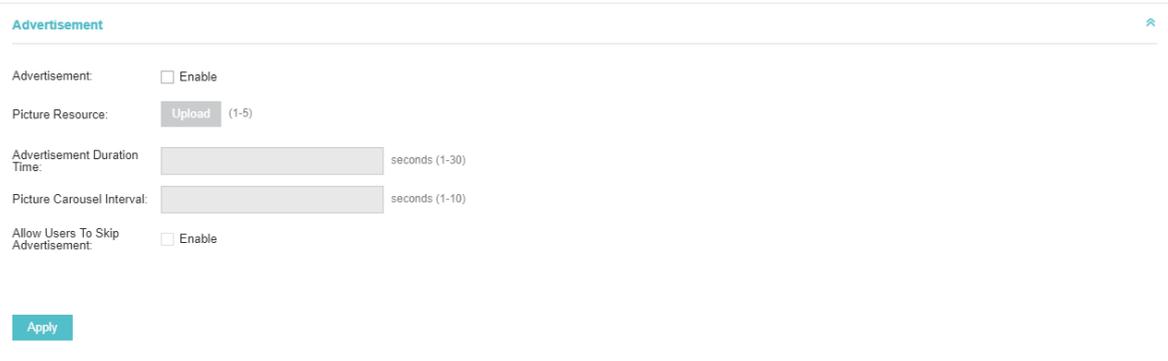

**Advertisement** 

Advertisement:  Enable

Picture Resource:  (1-5)

Advertisement Duration Time:  seconds (1-30)

Picture Carousel Interval:  seconds (1-10)

Allow Users To Skip Advertisement:  Enable

Configure the following parameters:

## Advertisement

Specify whether to enable the Advertisement feature. With this feature enabled, you can add advertisement pictures on the authentication page. These advertisement pictures will be displayed before the login page appears. You can also allow users to skip the advertisement by enabling **Allow Users to Skip Advertisement**. The advertisement picture should be less than 2MB. And only JPG, PNG, BMP, GIF and JPEG file types are supported.

Picture Resource	Upload advertisement pictures. When several pictures are added, they will be played in a loop.
Advertisement Duration Time	Specify how long the advertisement will be displayed for. For this duration, the pictures will be played in a loop. If the duration time is not enough for all the pictures, the rest will not be displayed.
Picture Carousel Interval	Specify the picture carousel interval. For example, if this value is set as 5 seconds, the first picture will be displayed for 5 seconds, followed by the second picture for 5 seconds, and so on.
Allow Users To Skip Advertisement	Specify whether to enable this feature. With this feature enabled, the user can click the <b>Skip</b> button to skip the advertisement.

5. Click **Apply**.

### 3.3.2 Simple Password

With this Simple Password configured, clients are required to enter the correct password to pass the authentication.

Follow the steps below to configure No Simple Password Portal:

1. Go to **Wireless Settings > Basic Wireless Settings** and create an SSID for the Portal.
2. Go back to the Portal configuration page. In the **Basic Info** section, complete the basic settings for the portal authentication.

The screenshot shows the 'Basic Info' configuration page for a portal. The fields are as follows:


- Portal Name: [Text input field]
- SSID: [- Please Select -]
- Authentication Type: [Simple Password]
- Password: [Text input field with eye icon]
- Authentication Timeout: [1 Hour]
- HTTPS Redirect: [checked] Enable
- Redirect: [unchecked] Enable
- Redirect URL: [Text input field]

Configure the following parameters:

Portal Name	Specify a name for the Portal.
SSID	Select an SSID for the Portal.
Authentication Type	Select <b>Simple Password</b> .
Password	Set the password for authentication.

<b>Authentication Timeout</b>	<p>The client's authentication will expire after the time period you set and the client needs to log in again on the web authentication page again to access the network.</p> <p>Options include <b>1 Hour, 8 Hours, 24 Hours, 7 Days</b> and <b>Custom</b>. <b>Custom</b> allows you to define the time in days, hours and minutes. The default value is one hour.</p>
<b>HTTPS Redirect</b>	<p>With this function enabled, the unauthorized clients will be redirected to the Portal page when they are trying to browse HTTPS websites.</p> <p>With this function disabled, the unauthorized clients cannot browse HTTPS websites and are not redirected to the Portal page.</p>
<b>Redirect</b>	<p>If you enable this function, the portal will redirect the newly authenticated clients to the configured URL.</p>
<b>Redirect URL</b>	<p>If the Redirect function above is enabled, enter the URL that a newly authenticated client will be redirected to.</p>

3. In the **Login Page** section, configure the login page for the Portal.

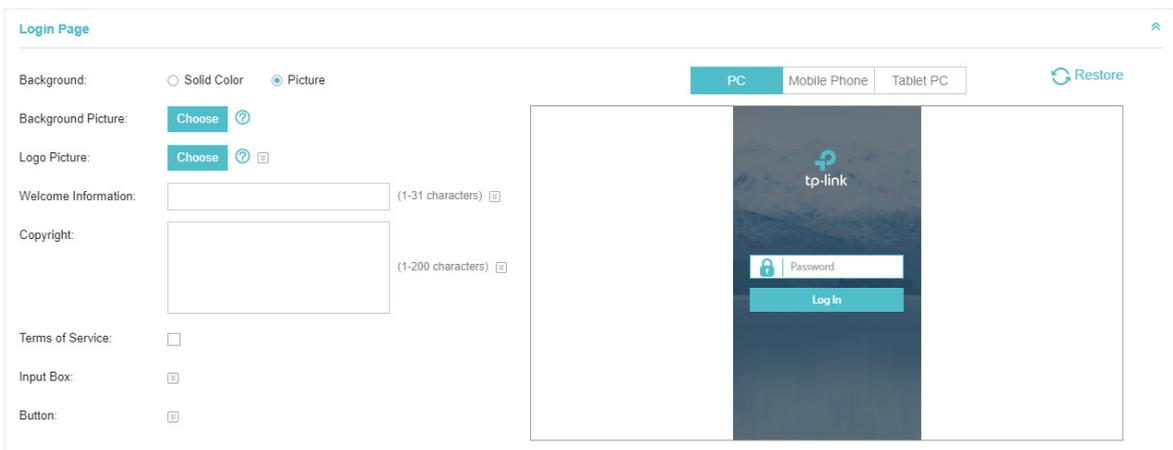

Configure the following parameters:


<b>Background</b>	<p>Select the background type. Two types are supported: <b>Solid Color</b> and <b>Picture</b>.</p>
<b>Background Color</b>	<p>If <b>Solid Color</b> is selected, configure your desired background color through the color picker or by entering the RGB value manually.</p>
<b>Background Picture</b>	<p>If <b>Picture</b> is selected, click the <b>Choose</b> button and select a picture from your PC. Drag and scale the clipping region to edit the picture and click <b>Confirm</b>.</p>

---

### Logo Picture

Click the **Choose** button and select a picture from your PC. Drag and scale the clipping region to edit the picture and click **Confirm**.

In addition, you can click  and configure the logo position. The options include **Middle**, **Upper** and **Lower**.

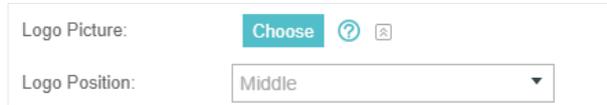


---

### Welcome Information

Specify the welcome information.

In addition, you can click  and select your desired text color for the welcome information through the color picker or by entering the RGB value manually.

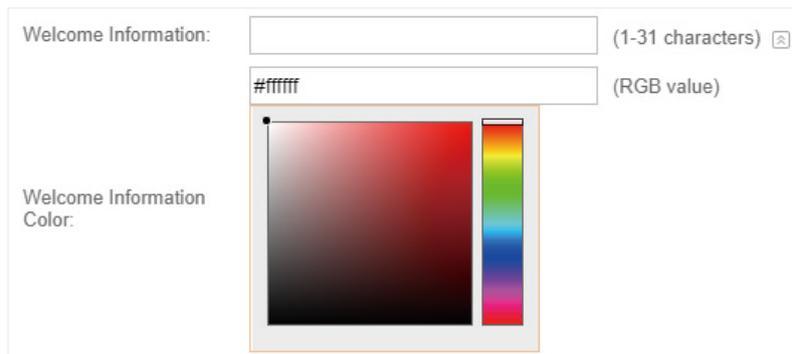

---

### Copyright

Specify the copyright information.


In addition, you can click  and select your desired text color for Copyright information through the color picker or by entering the RGB value manually.



---

### Terms of Service

Enable or disable Terms of Service. With this option enabled, specify the terms of service in the following box.

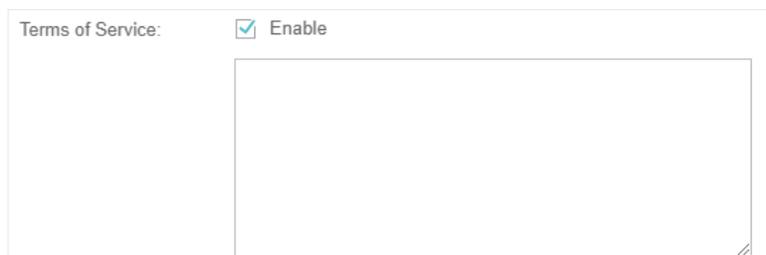

---

## Input Box

Click  and configure the input box.

Select your desired color for the input box through the color picker or by entering the RGB value manually.



---


## Button

Click  and configure the button.

**Button Position:** Set the position of the login button. The options include **Middle**, **Upper** and **Lower**.

**Button Color:** Select your desired login button color through the color picker or by entering the RGB value manually.

**Button Text Color:** Select your desired text color for the button through the color picker or by entering the RGB value manually.

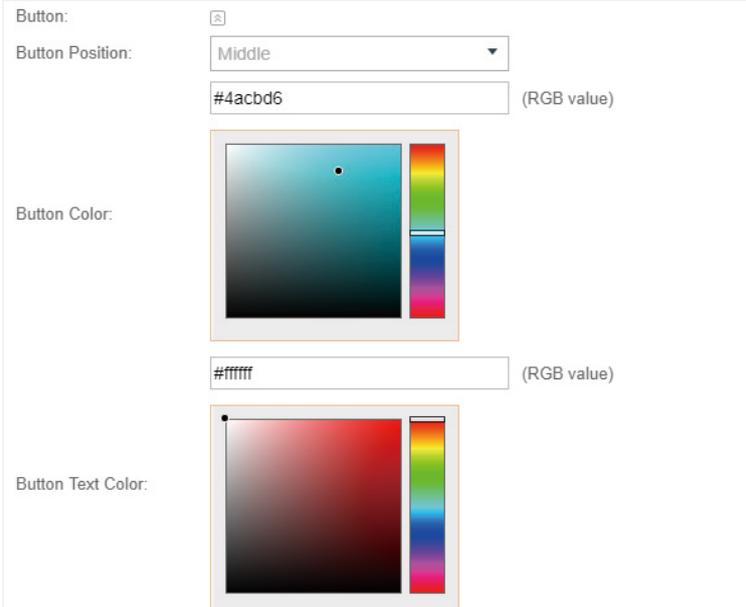

- 
4. In the **Advertisement** section, select whether to display advertisement pictures for users and configure the related parameters.

Configure the following parameters:

<b>Advertisement</b>	Specify whether to enable the Advertisement feature. With this feature enabled, you can add advertisement pictures on the authentication page. These advertisement pictures will be displayed before the login page appears. You can also allow users to skip the advertisement by enabling <b>Allow Users to Skip Advertisement</b> . The advertisement picture should be less than 2MB. And only JPG, PNG, BMP, GIF and JPEG file types are supported.
<b>Picture Resource</b>	Upload advertisement pictures. When several pictures are added, they will be played in a loop.
<b>Advertisement Duration Time</b>	Specify how long the advertisement will be displayed for. For this duration, the pictures will be played in a loop. If the duration time is not enough for all the pictures, the rest will not be displayed.
<b>Picture Carousel Interval</b>	Specify the picture carousel interval. For example, if this value is set as 5 seconds, the first picture will be displayed for 5 seconds, followed by the second picture for 5 seconds, and so on.
<b>Allow Users To Skip Advertisement</b>	Specify whether to enable this feature. With this feature enabled, the user can click the <b>Skip</b> button to skip the advertisement.

5. Click **Apply**.

### 3.3.3 Local User

With this Local User configured, clients are required to enter the correct username and password of the login account to pass the authentication. You can create multiple accounts and assign different accounts for different users.

#### Configure Local User Portal

Follow the steps below to configure Local User Portal:

1. Go to **Wireless Settings > Basic Wireless Settings** and create an SSID for the Portal.
2. Go back to the Portal configuration page. In the **Basic Info** section, complete the basic settings for the portal authentication.

**Basic Info**

Portal Name:

SSID:

Authentication Type:  [User Management](#)

HTTPS Redirect:  Enable

Redirect:  Enable

Redirect URL:

Configure the following parameters:

<b>Portal Name</b>	Specify a name for the Portal.
<b>SSID</b>	Select an SSID for the Portal.
<b>Authentication Type</b>	Select <b>Local User</b> .
<b>User Management</b>	You can click this button to configure user accounts for authentication later. Please refer to <a href="#">Create Local User Accounts</a> .
<b>HTTPS Redirect</b>	With this function enabled, the unauthorized clients will be redirected to the Portal page when they are trying to browse HTTPS websites.  With this function disabled, the unauthorized clients cannot browse HTTPS websites and are not redirected to the Portal page.
<b>Redirect</b>	If you enable this function, the portal will redirect the newly authenticated clients to the configured URL.
<b>Redirect URL</b>	If the Redirect function above is enabled, enter the URL that a newly authenticated client will be redirected to.

3. In the **Login Page** section, configure the login page for the Portal.

**Login Page**

Background:  Solid Color  Picture

Background Picture:

Logo Picture:

Welcome Information:  (1-31 characters)

Copyright:  (1-200 characters)

Terms of Service:

Input Box:

Button:

PC Mobile Phone Tablet PC



Configure the following parameters:

<b>Background</b>	Select the background type. Two types are supported: <b>Solid Color</b> and <b>Picture</b> .
-------------------	--

---

**Background Color** If **Solid Color** is selected, configure your desired background color through the color picker or by entering the RGB value manually.


---

**Background Picture** If **Picture** is selected, click the **Choose** button and select a picture from your PC. Drag and scale the clipping region to edit the picture and click **Confirm**.

---

**Logo Picture** Click the **Choose** button and select a picture from your PC. Drag and scale the clipping region to edit the picture and click **Confirm**.

In addition, you can click  and configure the logo position. The options include **Middle**, **Upper** and **Lower**.

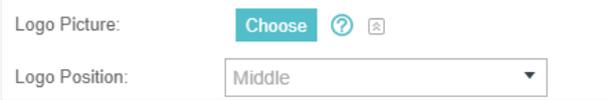

---

**Welcome Information** Specify the welcome information.


In addition, you can click  and select your desired text color for the welcome information through the color picker or by entering the RGB value manually.



---

**Copyright** Specify the copyright information.

In addition, you can click  and select your desired text color for Copyright information through the color picker or by entering the RGB value manually.

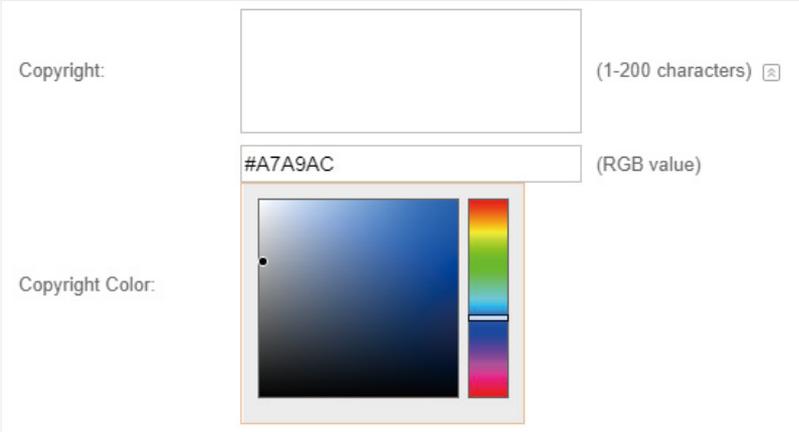

---

## Terms of Service

Enable or disable Terms of Service. With this option enabled, specify the terms of service in the following box.

Terms of Service:  Enable

---

## Input Box


Click  and configure the input box.

Select your desired color for the input box through the color picker or by entering the RGB value manually.

Input Box: 

#4acbd6 (RGB value)

Input Box Color:

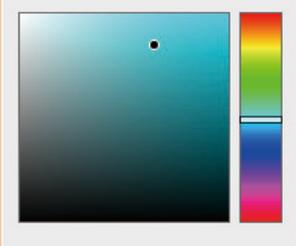

---

## Button

Click  and configure the button.

**Button Position:** Set the position of the login button. The options include **Middle**, **Upper** and **Lower**.

**Button Color:** Select your desired login button color through the color picker or by entering the RGB value manually.

**Button Text Color:** Select your desired text color for the button through the color picker or by entering the RGB value manually.

Button: 

Button Position: Middle


#4acbd6 (RGB value)

Button Color:



#ffffff (RGB value)

Button Text Color:

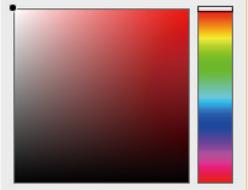

- In the **Advertisement** section, select whether to display advertisement pictures for users and configure the related parameters.

Configure the following parameters:

<b>Advertisement</b>	Specify whether to enable the Advertisement feature. With this feature enabled, you can add advertisement pictures on the authentication page. These advertisement pictures will be displayed before the login page appears. You can also allow users to skip the advertisement by enabling <b>Allow Users to Skip Advertisement</b> . The advertisement picture should be less than 2MB. And only JPG, PNG, BMP, GIF and JPEG file types are supported.
<b>Picture Resource</b>	Upload advertisement pictures. When several pictures are added, they will be played in a loop.
<b>Advertisement Duration Time</b>	Specify how long the advertisement will be displayed for. For this duration, the pictures will be played in a loop. If the duration time is not enough for all the pictures, the rest will not be displayed.
<b>Picture Carousel Interval</b>	Specify the picture carousel interval. For example, if this value is set as 5 seconds, the first picture will be displayed for 5 seconds, followed by the second picture for 5 seconds, and so on.
<b>Allow Users To Skip Advertisement</b>	Specify whether to enable this feature. With this feature enabled, the user can click the <b>Skip</b> button to skip the advertisement.

- Click **Apply**.

## Create Local User Accounts

Follow the steps below to create the user accounts for authentication:

- In the **Basic Info** section on the portal configuration page, click **User Management**. Or you can click **Sites: Default** in the top left corner of the page and select **Hotspot Manager**. The management page will appear. Go to the **User** page and click **Create User**.



2. The following window will pop up. Configure the required parameters and click **Apply**.

**Create New User**
✕

Username:  (1-100 letters, digits or special characters)

Password:  (1-100 letters, digits or special characters)

Authentication Timeout:  (Format: YYYY-MM-DD)

MAC Address Binding Type:

Maximum Users:  (1-2048)

Name:  (1-50 characters, Optional)

Telephone:  (1-50 characters, Optional)

Rate Limit (Download):  Enable

Rate Limit (Download):  Kbps (0-10240000)

Rate Limit (Upload):  Enable

Rate Limit (Upload):  Kbps (0-10240000)

Traffic Limit:  Enable

Traffic Limit:  MBytes (1-1048576)


Configure the following parameters:

Username	Specify the username. The username should not be the same as any existing one.
Password	Specify the password. Users will be required to enter the username and password when they attempt to access the network.
Authentication Timeout	Specify the authentication timeout for formal users. After timeout, the users need to log in again on the web authentication page to access the network.
MAC Address Binding Type	<p>There are three types of MAC binding: <b>No Binding</b>, <b>Static Binding</b> and <b>Dynamic Binding</b>.</p> <p><b>Static Binding:</b> Specify a MAC address for this user account. Then only the user with the this MAC address can use the username and password to pass the authentication.</p> <p><b>Dynamic Binding:</b> The MAC address of the first user that passes the authentication will be bound. Then only this user can use the username and password to pass the authentication.</p>

Maximum Users	Specify the maximum number of users that can use this account to pass the authentication.
Name	Specify a name for identification.
Telephone	Specify a telephone number for identification.
Rate Limit (Download)	Select whether to enable download rate limit. With this option enabled, you can specify the limit of download rate.
Rate Limit (Upload)	Select whether to enable upload rate limit. With this option enabled, you can specify the limit of upload rate.
Traffic Limit	Select whether to enable traffic limit. With this option enabled, you can specify the total traffic limit for the user. Once the limit is reached, the user can no longer use this account to access the network.

3. In the same way, you can add more user accounts. The created user accounts will be displayed in the list. Users can use the username and password of the account to pass the portal authentication.

By default, the account Status is , which means that the user account is enabled and valid. You can also click this button to disable the user account. The icon will be changed to , which means that the user account is disabled.

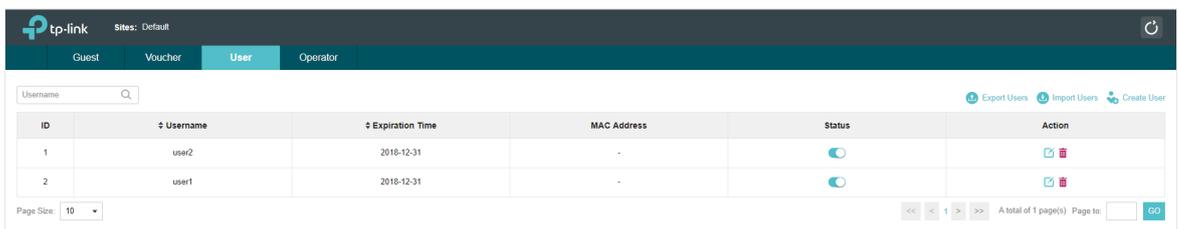

Additionally, you can click [Export Users](#) to backup all the user account information into a CSV file or XLS file and save the file to your PC. If needed, you can click [Import Users](#) and select the file to import the account information to the list.

**Note:**

Using Excel to open the CSV file may cause some numerical format changes, and the number may be displayed incorrectly. If you use Excel to edit the CSV file, please set the cell format as text.

## Create Operator Accounts

Operator account can be used to remotely manage the Local User Portal and Voucher Portal. Other users can visit the URL <https://OC200's IP Address:443/hotspot> (For example:

https://192.168.0.64:443/hotspot) and use the Operator account to enter the portal management page.

**Note:**

- Make sure the host that is used to enter the portal management page with operator account can communicate with the OC200.
- Only the user that log in to the OC200 with the administrator role can add or remove the operator account for portal management.
- The users who enter the portal management page by operator account can only create local user accounts and vouchers and manage the clients.

Follow the steps below to create Operator account.

1. Go to the **Operator** page.



2. Click  **Create Operator** and the following window will pop up.

3. Specify the **Name**, **Password** and **Notes** of the Operator account.
4. Select **Site Privileges** from the drop-down list (multiple options available) for the Operator account.
5. Click **Apply** to create an Operator account. Then other users can use this account to enter the hotspot management page.

### 3.3.4 Voucher

With Voucher configured, you can distribute the vouchers automatically generated by the OC200 to the clients. Clients can use the vouchers to access the network.

#### Configure Voucher Portal

Follow the steps below to configure Voucher Portal:

1. Go to **Wireless Settings > Basic Wireless Settings** and create an SSID for the Portal.


- Go back to the Portal configuration page. In the **Basic Info** section, complete the basic settings for the portal authentication.

Configure the following parameters:

<b>Portal Name</b>	Specify a name for the Portal.
<b>SSID</b>	Select an SSID for the Portal.
<b>Authentication Type</b>	Select <b>Voucher</b> .
<b>User Management</b>	You can click this button to configure vouchers for authentication later. Please refer to <a href="#">Create Vouchers</a> .
<b>HTTPS Redirect</b>	With this function enabled, the unauthorized clients will be redirected to the Portal page when they are trying to browse HTTPS websites.  With this function disabled, the unauthorized clients cannot browse HTTPS websites or be redirected to the Portal page.
<b>Redirect</b>	If you enable this function, the portal will redirect the newly authenticated clients to the configured URL.
<b>Redirect URL</b>	If the Redirect function above is enabled, enter the URL that a newly authenticated client will be redirected to.

- In the **Login Page** section, configure the login page for the Portal.

Configure the following parameters:

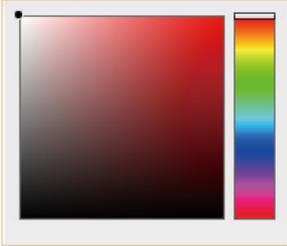Background	Select the background type. Two types are supported: <b>Solid Color</b> and <b>Picture</b> .
Background Color	If <b>Solid Color</b> is selected, configure your desired background color through the color picker or by entering the RGB value manually.
Background Picture	If <b>Picture</b> is selected, click the <b>Choose</b> button and select a picture from your PC. Drag and scale the clipping region to edit the picture and click <b>Confirm</b> .
Logo Picture	<p>Click the <b>Choose</b> button and select a picture from your PC. Drag and scale the clipping region to edit the picture and click <b>Confirm</b>.</p> <p>In addition, you can click  and configure the logo position. The options include <b>Middle</b>, <b>Upper</b> and <b>Lower</b>.</p>
<div style="border: 1px solid #ccc; padding: 5px;"> <p>Logo Picture: <span style="float: right;"><b>Choose</b>  </span></p> <p>Logo Position: <span style="float: right;">Middle </span></p> </div>	
Welcome Information	<p>Specify the welcome information.</p> <p>In addition, you can click  and select your desired text color for the welcome information through the color picker or by entering the RGB value manually.</p>
<div style="border: 1px solid #ccc; padding: 5px;"> <p>Welcome Information: <input type="text" value=""/> (1-31 characters) </p> <p>#ffffff (RGB value)</p> <p>Welcome Information Color: </p> </div>	
Copyright	<p>Specify the copyright information.</p> <p>In addition, you can click  and select your desired text color for Copyright information through the color picker or by entering the RGB value manually.</p>
<div style="border: 1px solid #ccc; padding: 5px;"> <p>Copyright: <input type="text" value=""/> (1-200 characters) </p> <p>#A7A9AC (RGB value)</p> <p>Copyright Color: </p> </div>	

---

## Terms of Service

Enable or disable Terms of Service. With this option enabled, specify the terms of service in the following box.

Terms of Service:  Enable

---

## Input Box


Click  and configure the input box.

Select your desired color for the input box through the color picker or by entering the RGB value manually.

Input Box: 

(RGB value)

Input Box Color:

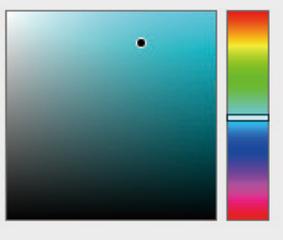

---

## Button

Click  and configure the button.

**Button Position:** Set the position of the login button. The options include **Middle**, **Upper** and **Lower**.

**Button Color:** Select your desired login button color through the color picker or by entering the RGB value manually.


**Button Text Color:** Select your desired text color for the button through the color picker or by entering the RGB value manually.

Button: 

Button Position:


(RGB value)

Button Color:

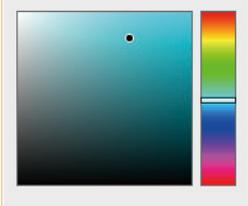


(RGB value)

Button Text Color:

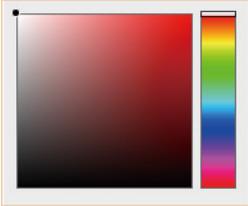

- In the **Advertisement** section, select whether to display advertisement pictures for users and configure the related parameters.

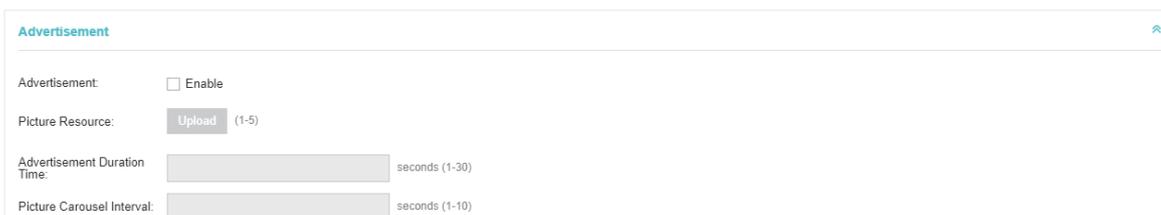

Configure the following parameters:

<b>Advertisement</b>	Specify whether to enable the Advertisement feature. With this feature enabled, you can add advertisement pictures on the authentication page. These advertisement pictures will be displayed before the login page appears. You can also allow users to skip the advertisement by enabling <b>Allow Users to Skip Advertisement</b> . The advertisement picture should be less than 2MB. And only JPG, PNG, BMP, GIF and JPEG file types are supported.
<b>Picture Resource</b>	Upload advertisement pictures. When several pictures are added, they will be played in a loop.
<b>Advertisement Duration Time</b>	Specify how long the advertisement will be displayed for. For this duration, the pictures will be played in a loop. If the duration time is not enough for all the pictures, the rest will not be displayed.
<b>Picture Careusel Interval</b>	Specify the picture carousel interval. For example, if this value is set as 5 seconds, the first picture will be displayed for 5 seconds, followed by the second picture for 5 seconds, and so on.
<b>Allow Users To Skip Advertisement</b>	Specify whether to enable this feature. With this feature enabled, the user can click the <b>Skip</b> button to skip the advertisement.

- Click **Apply**.

## Create Vouchers

Follow the steps below to create vouchers for authentication:

- In the **Basic Info** section, click **Voucher Manager**. Or you can click **Sites: Default** in the top left corner of the page and select **Hotspot Manager**. The voucher management page will appear. Go to the **Voucher** page and click **Create Vouchers**.



- The following window will pop up. Configure the required parameters and click **Apply**.

**Create Vouchers**
✕

Code Length:

Amount:

Type:

Duration:

Rate Limit (Download):  Enable

Rate Limit (Download):

Rate Limit (Upload):  Enable

Rate Limit (Upload):

Traffic Limit:  Enable

Traffic Limit:

Note:

(6-10)

(1-500)

Kbps (0-10240000)

Kbps (0-10240000)

MBytes (1-1048576)

(Optional)

Configure the following parameters:

<b>Code Length</b>	Specify the length of the voucher codes to be created.
<b>Amount</b>	Enter the voucher amount to be generated.
<b>Type</b>	<p>Select <b>Single Use</b> or <b>Multi Use</b>.</p> <p>Single Use means one voucher can only be distributed to one client. Multi Use means one voucher can be distributed to several clients, who can use the same voucher to access the network at the same time.</p> <p>If you select Multi Use, enter the value of <b>Max Users</b>. When the number of clients who is connected to the network with the same voucher reaches the value, no more clients can use this voucher to access the network.</p>
<b>Duration</b>	<p>Select the period of validity of the Voucher.</p> <p>The options include <b>8 hours</b>, <b>2 days</b> and <b>User-defined</b>. The period of valid of the voucher is reckoned from the time when it is used for the first time.</p>
<b>Rate Limit (Download)</b>	Select whether to enable download rate limit. With this option enabled, you can specify the limit of download rate.
<b>Rate Limit (Upload)</b>	Select whether to enable upload rate limit. With this option enabled, you can specify the limit of upload rate.


### Traffic Limit

Specify the total traffic limit for one voucher. Once the limit is reached, the client can no longer access the network using the voucher.

### Notes

Enter a description for the Voucher (optional).


3. The Vouchers will be generated and displayed on the page.

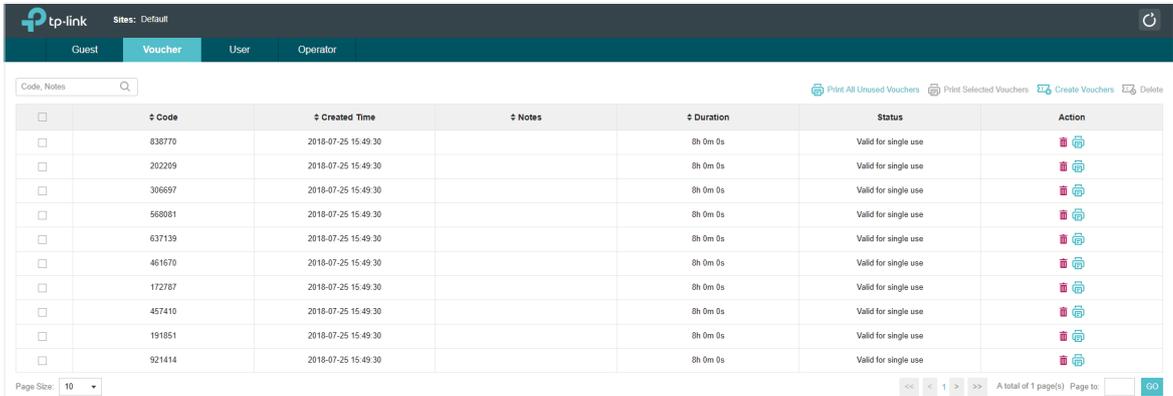

The screenshot shows the tp-link Voucher management interface. The table displays the following data:

<input type="checkbox"/>	Code	Created Time	Notes	Duration	Status	Action
<input type="checkbox"/>	838770	2018-07-25 15:49:30		8h 0m 0s	Valid for single use	
<input type="checkbox"/>	202209	2018-07-25 15:49:30		8h 0m 0s	Valid for single use	
<input type="checkbox"/>	306697	2018-07-25 15:49:30		8h 0m 0s	Valid for single use	
<input type="checkbox"/>	568081	2018-07-25 15:49:30		8h 0m 0s	Valid for single use	
<input type="checkbox"/>	637139	2018-07-25 15:49:30		8h 0m 0s	Valid for single use	
<input type="checkbox"/>	461670	2018-07-25 15:49:30		8h 0m 0s	Valid for single use	
<input type="checkbox"/>	172787	2018-07-25 15:49:30		8h 0m 0s	Valid for single use	
<input type="checkbox"/>	457410	2018-07-25 15:49:30		8h 0m 0s	Valid for single use	
<input type="checkbox"/>	191851	2018-07-25 15:49:30		8h 0m 0s	Valid for single use	
<input type="checkbox"/>	921414	2018-07-25 15:49:30		8h 0m 0s	Valid for single use	

4. Click to print a single voucher; click Print Selected Vouchers to print your selected vouchers; click Print All Unused Vouchers to print all unused vouchers.

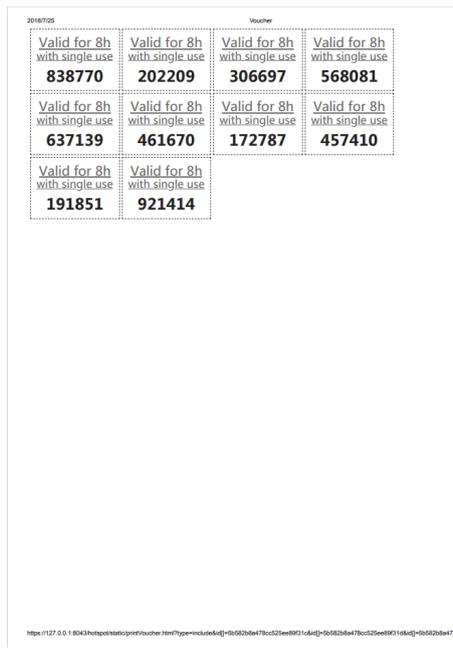

5. Distribute the vouchers to clients, and then they can use the codes to pass authentication.

6. When the vouchers are invalid, you can click to delete the Voucher or click Delete to delete the selected vouchers.

## Create Operator Accounts

Operator account can be used to remotely manage the Local User Portal and Voucher Portal. Other users can visit the URL <https://OC200's IP Address:443/hotspot> (For example:


https://192.168.0.64:443/hotspot) and use the Operator account to enter the portal management page.

**Note:**


- Make sure the host that is used to enter the portal management page with operator account can communicate with the OC200.
- Only the user that log in to the OC200 with the administrator role can add or remove the operator account for portal management.
- The users who enter the portal management page by operator account can only create local user accounts and vouchers and manage the clients.

Follow the steps below to create Operator account.

1. Go to the **Operator** page.

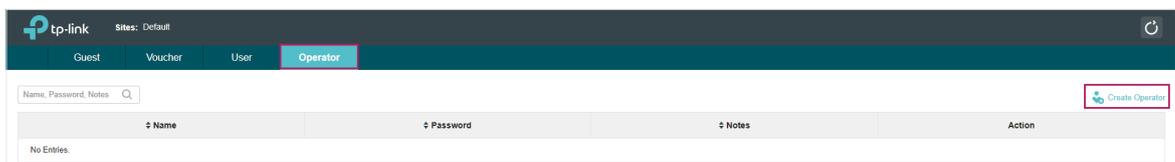

2. Click  **Create Operator** and the following window will pop up.

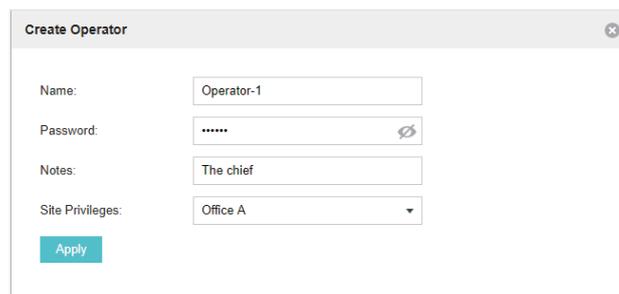

3. Specify the **Name**, **Password** and **Notes** of the Operator account.
4. Select **Site Privileges** from the drop-down list (multiple options available) for the Operator account.
5. Click **Apply** to create an Operator account. Then other users can use this account to enter the hotspot administrative system.

### 3.3.5 SMS

With SMS portal configured, client can get verification codes using their mobile phones and enter the received codes to pass the authentication.

Follow the steps below to configure SMS Portal:

1. Go to [www.twilio.com/try-twilio](http://www.twilio.com/try-twilio) and get a Twilio account. Buy the Twilio service for SMS. Then get the account information, including ACCOUNT SID, AUTH TOKEN and Phone number.
2. Go to **Wireless Settings > Basic Wireless Settings** and create an SSID for the Portal.

- Go back to the Portal configuration page. In the **Basic Info** section, complete the basic settings for the portal authentication.

**Basic Info** ⌵

---

Portal Name:

SSID:

Authentication Type:

We provide Twilio API service. Please configure your account information:

Twilio SID:

Auth Token:

Phone Number:  (E.g., +17704505791)

Maximum User:  (0-10, 0 means no limit)

Preset Country Code:  (E.g., +1, optional)

Authentication Timeout:

HTTPS Redirect:  Enable [?](#)

Redirect:  Enable


Redirect URL:

Configure the following parameters:

<b>Portal Name</b>	Specify a name for the Portal.
<b>SSID</b>	Select an SSID for the Portal.
<b>Authentication Type</b>	Select <b>SMS</b> .
<b>Twilio SID</b>	Enter the Account SID for Twilio API Credentials.
<b>Auth Token</b>	Enter the Authentication Token for Twilio API Credentials.
<b>Phone Number</b>	Enter the phone number that is used to send verification messages to the clients.
<b>Maximum Users</b>	A telephone can get several codes via messages one by one, and different clients can use different codes to pass the authentication. However, the number of clients that is allowed to be authenticated using the same telephone at the same time has a upper limit.  Specify the upper limit in this field.
<b>Authentication Timeout</b>	The client's authentication will expire after the time period you set and the client needs to log in again on the web authentication page to access the network.  Options include <b>1 Hour</b> , <b>8 Hours</b> , <b>24 Hours</b> , <b>7 Days</b> and <b>Custom</b> . <b>Custom</b> allows you to define the time in days, hours and minutes. The default value is one hour.
<b>Preset Country Code</b>	Set the default country code that will be filled automatically on the authentication page.

<b>HTTPS Redirect</b>	<p>With this function enabled, the unauthorized clients will be redirected to the Portal page when they are trying to browse HTTPS websites.</p> <p>With this function disabled, the unauthorized clients cannot browse HTTPS websites and are not redirected to the Portal page.</p>
<b>Redirect</b>	If you enable this function, the portal will redirect the newly authenticated clients to the configured URL.
<b>Redirect URL</b>	If the Redirect function above is enabled, enter the URL that a newly authenticated client will be redirected to.

4. In the **Login Page** section, configure the login page for the Portal.

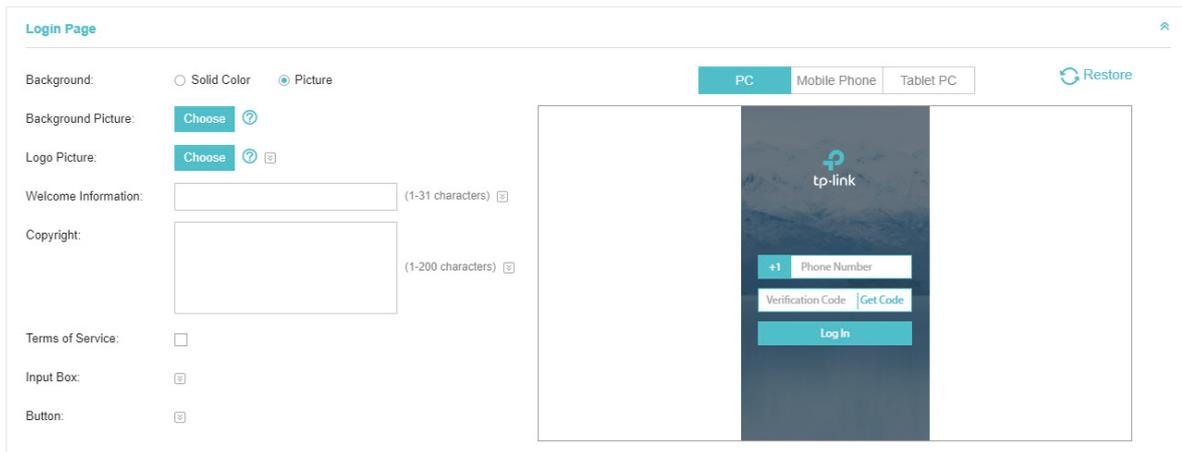

Configure the following parameters:

<b>Background</b>	Select the background type. Two types are supported: <b>Solid Color</b> and <b>Picture</b> .
<b>Background Color</b>	If <b>Solid Color</b> is selected, configure your desired background color through the color picker or by entering the RGB value manually.
<b>Background Picture</b>	If <b>Picture</b> is selected, click the <b>Choose</b> button and select a picture from your PC. Drag and scale the clipping region to edit the picture and click <b>Confirm</b> .
<b>Logo Picture</b>	<p>Click the <b>Choose</b> button and select a picture from your PC. Drag and scale the clipping region to edit the picture and click <b>Confirm</b>.</p> <p>In addition, you can click  and configure the logo position. The options include <b>Middle</b>, <b>Upper</b> and <b>Lower</b>.</p>

Logo Picture: Choose  

Logo Position: Middle 

---

### Welcome Information

Specify the welcome information.

In addition, you can click  and select your desired text color for the welcome information through the color picker or by entering the RGB value manually.


Welcome Information:	<input type="text"/>	(1-31 characters) 
	<input type="text" value="#ffffff"/>	(RGB value)
Welcome Information Color:		

---

### Copyright

Specify the copyright information.

In addition, you can click  and select your desired text color for Copyright information through the color picker or by entering the RGB value manually.

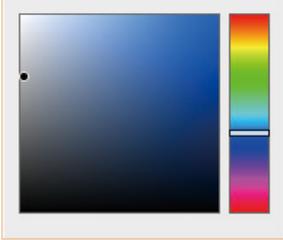Copyright:	<input type="text"/>	(1-200 characters) 
	<input type="text" value="#A7A9AC"/>	(RGB value)
Copyright Color:		

---

### Terms of Service


Enable or disable Terms of Service. With this option enabled, specify the terms of service in the following box.

Terms of Service:	<input checked="" type="checkbox"/> Enable
<div style="border: 1px solid #ccc; height: 80px; width: 100%;"></div>	

## Input Box

Click  and configure the input box.

Select your desired color for the input box through the color picker or by entering the RGB value manually.

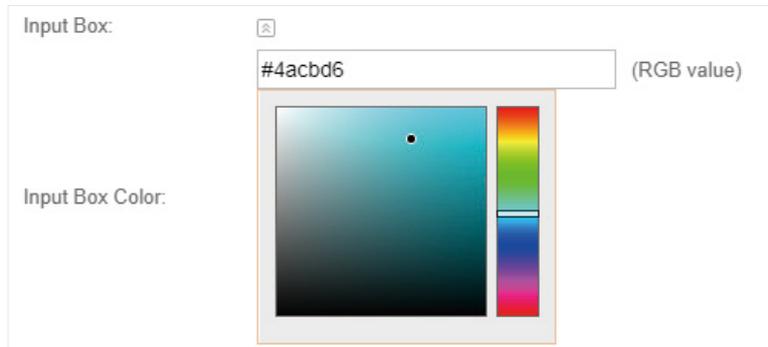


## Button

Click  and configure the button.


**Button Position:** Set the position of the login button. The options include **Middle**, **Upper** and **Lower**.

**Button Color:** Select your desired login button color through the color picker or by entering the RGB value manually.

**Button Text Color:** Select your desired text color for the button through the color picker or by entering the RGB value manually.

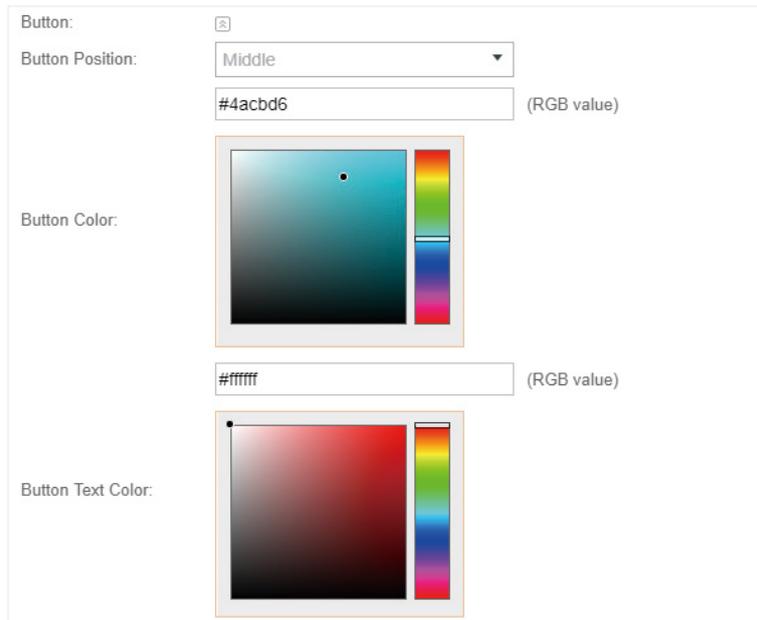

5. In the **Advertisement** section, select whether to display advertisement pictures for users and configure the related parameters.

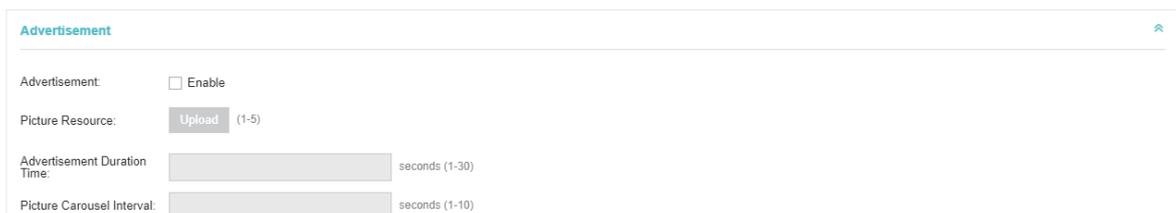

Configure the following parameters:

Advertisement	Specify whether to enable the Advertisement feature. With this feature enabled, you can add advertisement pictures on the authentication page. These advertisement pictures will be displayed before the login page appears. You can also allow users to skip the advertisement by enabling <b>Allow Users to Skip Advertisement</b> . The advertisement picture should be less than 2MB. And only JPG, PNG, BMP, GIF and JPEG file types are supported.
Picture Resource	Upload advertisement pictures. When several pictures are added, they will be played in a loop.
Advertisement Duration Time	Specify how long the advertisement will be displayed for. For this duration, the pictures will be played in a loop. If the duration time is not enough for all the pictures, the rest will not be displayed.
Picture Careusel Interval	Specify the picture carousel interval. For example, if this value is set as 5 seconds, the first picture will be displayed for 5 seconds, followed by the second picture for 5 seconds, and so on.
Allow Users To Skip Advertisement	Specify whether to enable this feature. With this feature enabled, the user can click the <b>Skip</b> button to skip the advertisement.

6. Click **Apply**.

For more details about how to configure SMS Portal, you can go to <https://www.tp-link.com/en/configuration-guides.html> and download the configuration guide for SMS Portal.

### 3.3.6 Facebook

With Facebook Portal configured, when clients connect to your Wi-Fi, they will be redirected to your Facebook page. To access the internet, clients need to pass the authentication on the page.

**Note:**

OC200 will automatically create Free Authentication Policy entries for the Facebook Portal. You don't need to create them manually.

Follow the steps below to configure Facebook Portal:

1. Go to <https://www.facebook.com/> and get a Facebook account. Create your Facebook page according to your needs.
2. Go to **Wireless Settings > Basic Wireless Settings** and create an SSID for the Portal.
3. Go back to the Portal configuration page. In the **Basic Info** section, complete the settings for the portal authentication.

**Basic Info** ↕

---

Portal Name:

SSID:

Authentication Type:

Facebook Page Configuration:

Facebook Checkin Location:

HTTPS Redirect:  Enable [?](#)

Configure the following parameters:

<b>Portal Name</b>	Specify a name for the Portal.
<b>SSID</b>	Select an SSID for the Portal.
<b>Authentication Type</b>	Select <b>Facebook</b> .
<b>Facebook Page Configuration</b>	Click this button to specify the Facebook Page.
<b>Facebook Checkin Location</b>	If the Facebook page is successfully got by the OC200, the name of the Facebook page will be displayed here.
<b>HTTPS Redirect</b>	<p>With this function enabled, the unauthorized clients will be redirected to the Portal page when they are trying to browse HTTPS websites.</p> <p>With this function disabled, the unauthorized clients cannot browse HTTPS websites and are not redirected to the Portal page.</p>

For more details about how to configure Facebook Portal, you can go to <https://www.tp-link.com/en/configuration-guides.html> and download the configuration guide for Facebook Portal.

### 3.3.7 External RADIUS Server

If you have a RADIUS server, you can configure External RADIUS Server Portal. With this type of portal, you can get two types of portal customization: Local Web Portal and External Web Portal. The authentication login page of Local Web Portal is provided by the built-in portal server of the OC200. The External Web Portal is provided by external portal server.

**Note:**

OC200 will automatically create Free Authentication Policy entries for the External RADIUS Portal.

Follow the steps below to configure External RADIUS Server Portal:

1. Go to **Wireless Settings > Basic Wireless Settings** and create an SSID for the Portal.
2. Go back to the Portal configuration page. In the **Basic Info** section, complete the basic settings for the portal authentication.

The screenshot shows the 'Basic Info' configuration page for an External RADIUS Server Portal. The fields are as follows:

- Portal Name: [Text Input]
- SSID: [- Please Select -]
- Authentication Type: [External RADIUS Server]
- Authentication Timeout: [1 Hour]
- RADIUS Server IP: [Text Input]
- RADIUS Port: [1812] (1-65535)
- RADIUS Password: [Text Input]
- Authentication Mode: [PAP]
- NAS ID: [TP-Link]
- RADIUS Accounting:  Enable
- Accounting Server IP: [Text Input]
- Accounting Server Port: [1813] (1-65535)
- Accounting Server Password: [Text Input]
- Interim Update:  Enable
- Interim Update Interval: [600] (s, 60-86400)
- Portal Customization: [Local Web Portal]
- HTTPS Redirect:  Enable
- Redirect:  Enable
- Redirect URL: [Text Input]


Configure the following parameters:

Portal Name	Specify a name for the Portal.
SSID	Select an SSID for the Portal.
Authentication Type	Select External RADIUS Server.

Authentication Timeout	<p>The client's authentication will expire after the time period you set and the client needs to log in again on the web authentication page to access the network.</p> <p>Options include <b>1 Hour, 8 Hours, 24 Hours, 7 Days, Custom</b>. <b>Custom</b> allows you to define the time in days, hours, and minutes. The default value is one hour.</p>
RADIUS Server IP	Enter the IP address of the RADIUS server.
RADIUS Port	Enter the port number you have set on the RADIUS server.
RADIUS Password	Enter the password you have set on the RADIUS server.
Authentication Mode	Select the authentication protocol for the RADIUS server. Two authentication protocols are available: <b>PAP</b> and <b>CHAP</b> .
NAS ID	Configure a Network Access Server Identifier (NAS ID) using 1 to 64 characters on the portal. The NAS ID is sent to the RADIUS server by the controller through an authentication request packet. With the NAS ID which classifies users to different groups, the RADIUS server can send a customized authentication response. The default value is <b>TP-Link</b> .
RADIUS Accounting	Enable or disable RADIUS Accounting feature.
Accounting Server IP	Enter the IP address of the accounting server.
Accounting Server Port	Enter the port number of the accounting server. The default port number is 1813.
Accounting Server Password	Enter the shared secret key of the accounting server.
Interim Update	<p>With this option enabled, you can specify the duration between accounting information updates. By default, the function is disabled.</p> <p>Enter the appropriate duration between updates for EAPs in <b>Interim Update Interval</b>.</p>
Interim Update Interval	With Interim Update enabled, specify the appropriate duration between updates for EAPs. The default duration is 600 seconds.
Portal Customization	<p>Select Local Web Portal or External Web Portal.</p> <p><b>Local Web Portal:</b> If this option is selected, refer to step 3 to configure the login page and step 4 to configure the advertisement.</p> <p><b>External Web Portal:</b> If this option is selected, follow the steps below.</p> <ol style="list-style-type: none"> <li>1. Configure the external RADIUS server.</li> <li>2. Enter the authentication login page's URL provided by the external portal server in the External Web Portal URL field.</li> </ol> <p>Note that you should update the External Web Portal after you upgrade your controller with old version to version 3.1.4 or above. Otherwise, the External Web Portal will not take effect.</p>

<b>HTTPS Redirect</b>	<p>With this function enabled, the unauthorized clients will be redirected to the Portal page when they are trying to browse HTTPS websites.</p> <p>With this function disabled, the unauthorized clients cannot browse HTTPS websites and are not redirected to the Portal page.</p>
<b>Redirect</b>	<p>If you enable this function, the portal will redirect the newly authenticated clients to the configured URL.</p> <p>It is disabled by default.</p>
<b>Redirect URL</b>	<p>If the Redirect function above is enabled, enter the URL that a newly authenticated client will be redirected to.</p>

3. Local Web Portal is configured, configure the login page for the Portal in the **Login Page** section.

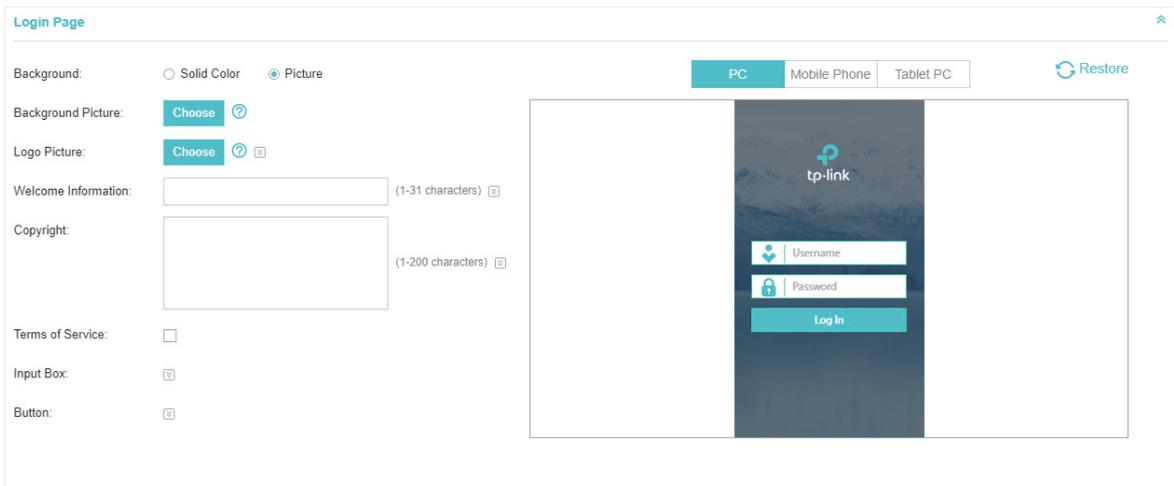

Configure the following parameters:

<b>Background</b>	Select the background type. Two types are supported: <b>Solid Color</b> and <b>Picture</b> .
<b>Background Color</b>	If <b>Solid Color</b> is selected, configure your desired background color through the color picker or by entering the RGB value manually.
<b>Background Picture</b>	If <b>Picture</b> is selected, click the <b>Choose</b> button and select a picture from your PC. Drag and scale the clipping region to edit the picture and click <b>Confirm</b> .
<b>Logo Picture</b>	<p>Click the <b>Choose</b> button and select a picture from your PC. Drag and scale the clipping region to edit the picture and click <b>Confirm</b>.</p> <p>In addition, you can click <input type="checkbox"/> and configure the logo position. The options include <b>Middle</b>, <b>Upper</b> and <b>Lower</b>.</p>

Logo Picture:


Logo Position:

---

### Welcome Information

Specify the welcome information.

In addition, you can click  and select your desired text color for the welcome information through the color picker or by entering the RGB value manually.

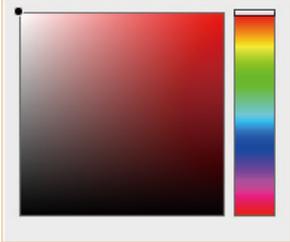
Welcome Information:	<input type="text"/>	(1-31 characters) 
	<input type="text" value="#ffffff"/>	(RGB value)
Welcome Information Color:		

---

### Copyright

Specify the copyright information.

In addition, you can click  and select your desired text color for Copyright information through the color picker or by entering the RGB value manually.

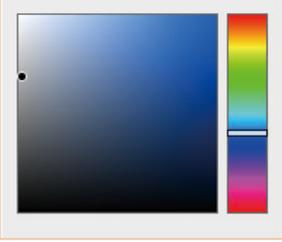Copyright:	<input type="text"/>	(1-200 characters) 
	<input type="text" value="#A7A9AC"/>	(RGB value)
Copyright Color:		

---

### Terms of Service


Enable or disable Terms of Service. With this option enabled, specify the terms of service in the following box.

Terms of Service:	<input checked="" type="checkbox"/> Enable
<div style="border: 1px solid #ccc; height: 80px; width: 100%;"></div>	

## Input Box

Click  and configure the input box.

Select your desired color for the input box through the color picker or by entering the RGB value manually.

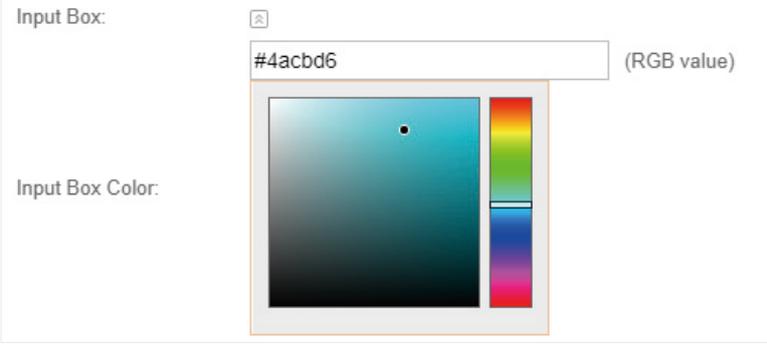


## Button

Click  and configure the button.


**Button Position:** Set the position of the login button. The options include **Middle**, **Upper** and **Lower**.

**Button Color:** Select your desired login button color through the color picker or by entering the RGB value manually.

**Button Text Color:** Select your desired text color for the button through the color picker or by entering the RGB value manually.

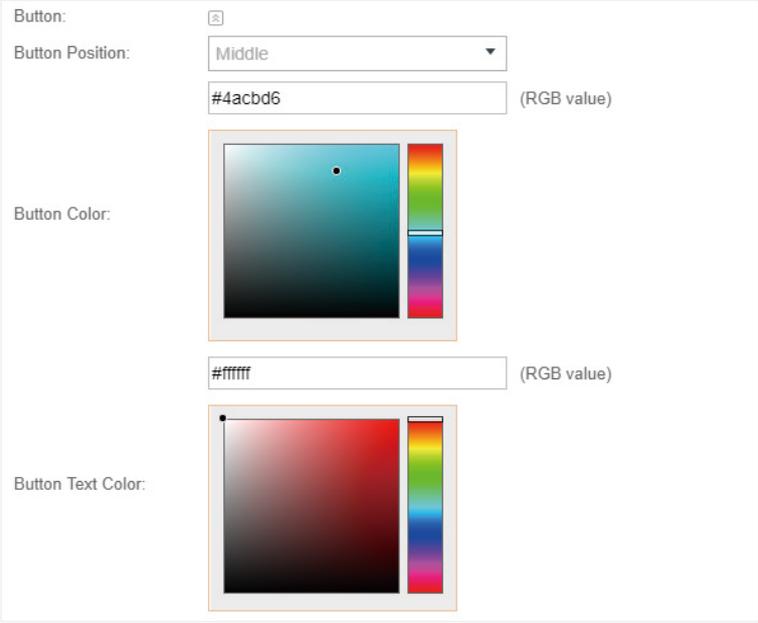

4. If **Local Web Portal** is configured, select whether to display advertisement pictures for users and configure the related parameters in the **Advertisement** section, .

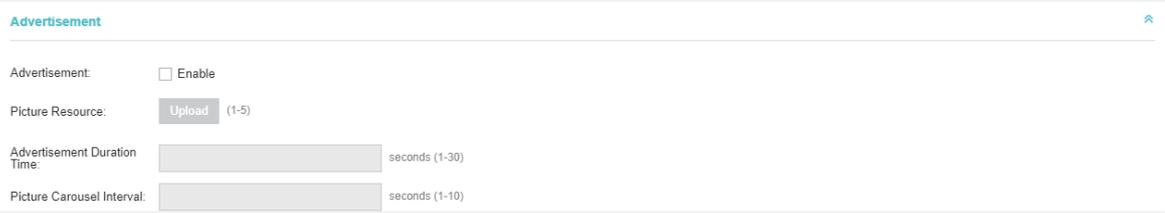

Configure the following parameters:

Advertisement	Specify whether to enable the Advertisement feature. With this feature enabled, you can add advertisement pictures on the authentication page. These advertisement pictures will be displayed before the login page appears. You can also allow users to skip the advertisement by enabling <b>Allow Users to Skip Advertisement</b> . The advertisement picture should be less than 2MB. And only JPG, PNG, BMP, GIF and JPEG file types are supported.
Picture Resource	Upload advertisement pictures. When several pictures are added, they will be played in a loop.
Advertisement Duration Time	Specify how long the advertisement will be displayed for. For this duration, the pictures will be played in a loop. If the duration time is not enough for all the pictures, the rest will not be displayed.
Picture Careusel Interval	Specify the picture carousel interval. For example, if this value is set as 5 seconds, the first picture will be displayed for 5 seconds, followed by the second picture for 5 seconds, and so on.
Allow Users To Skip Advertisement	Specify whether to enable this feature. With this feature enabled, the user can click the <b>Skip</b> button to skip the advertisement.

5. Click **Apply**.

### 3.3.8 External Portal Server

The option of External Portal Server is designed for the developers. They can customized their own authentication type according to the interface provided by OC200, e.g. message authentication and WeChat authentication etc.

1. Go to **Wireless Settings > Basic Wireless Settings** and create an SSID for the Portal.
2. Go back to the Portal configuration page. In the **Basic Info** section, complete the settings for the portal authentication.

The screenshot shows a configuration form titled "Basic Info". It contains the following fields and options:

- Portal Name: A text input field.
- SSID: A dropdown menu with the text "- Please Select -".
- Authentication Type: A dropdown menu with "External Portal Server" selected.
- External Portal Server: A text input field.
- HTTPS Redirect: A checkbox labeled "Enable" which is checked, with a help icon to its right.
- At the bottom left, there is a blue "Apply" button.


Portal Name	Specify a name for the Portal.
SSID	Select an SSID for the Portal.

Authentication Type	Select <b>External Portal Server</b> .
External Portal Server	Enter the complete authentication URL that redirect to an external portal server, for example:  http://192.168.0.147:8880/portal/index.php or http://192.168.0.147/portal/index.html
HTTPS Redirect	With this function enabled, the unauthorized clients will be redirected to the Portal page when they are trying to browse HTTPS websites.  With this function disabled, the unauthorized clients cannot browse HTTPS websites and are not redirected to the Portal page.

3. Click **Apply**.

### 3.3.9 Manage the Guests

On the Guest page, you can view the information of clients that have passed the portal authentication and manage the clients. You can click **Sites: Default** in the top left corner of the page and select **Hotspot Manager** to visit the Guest page.

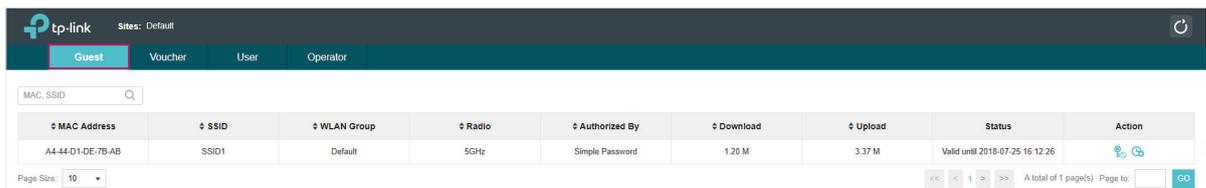

You can select an icon to execute the corresponding operation:



Restrict the client to access the network.



Extend the effective time.


#### Tips:

With Operator account, you can visit the URL **https://OC200's IP Address:443/hotspot** (For example: **https://192.168.0.64:443/hotspot**) to remotely visit the Guest page. For detailed information about Operator account, refer to [Create Operator Accounts](#).

## 3.4 Free Authentication Policy


Free Authentication Policy allows some specified clients to access the network resources without authentication. Follow the steps below to add free authentication policy.

1. Go to **Wireless Control > Free Authentication Policy**.

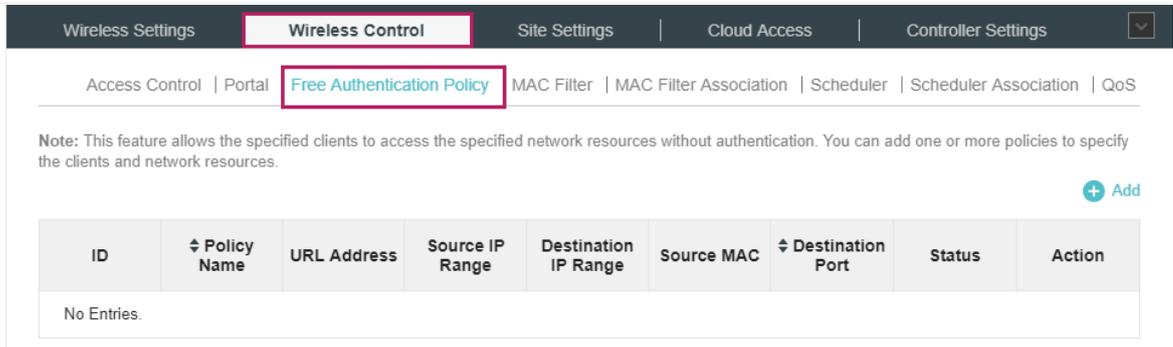

The screenshot shows the 'Free Authentication Policy' configuration page. The top navigation bar includes 'Wireless Settings', 'Wireless Control' (highlighted), 'Site Settings', 'Cloud Access', and 'Controller Settings'. Below the navigation bar, there are several tabs: 'Access Control', 'Portal', 'Free Authentication Policy' (highlighted), 'MAC Filter', 'MAC Filter Association', 'Scheduler', 'Scheduler Association', and 'QoS'. A note states: 'Note: This feature allows the specified clients to access the specified network resources without authentication. You can add one or more policies to specify the clients and network resources.' To the right of the note is a '+ Add' button. Below the note is a table with the following columns: ID, Policy Name, URL Address, Source IP Range, Destination IP Range, Source MAC, Destination Port, Status, and Action. The table currently contains the text 'No Entries'.

2. Click **+ Add** and the following window will pop up.

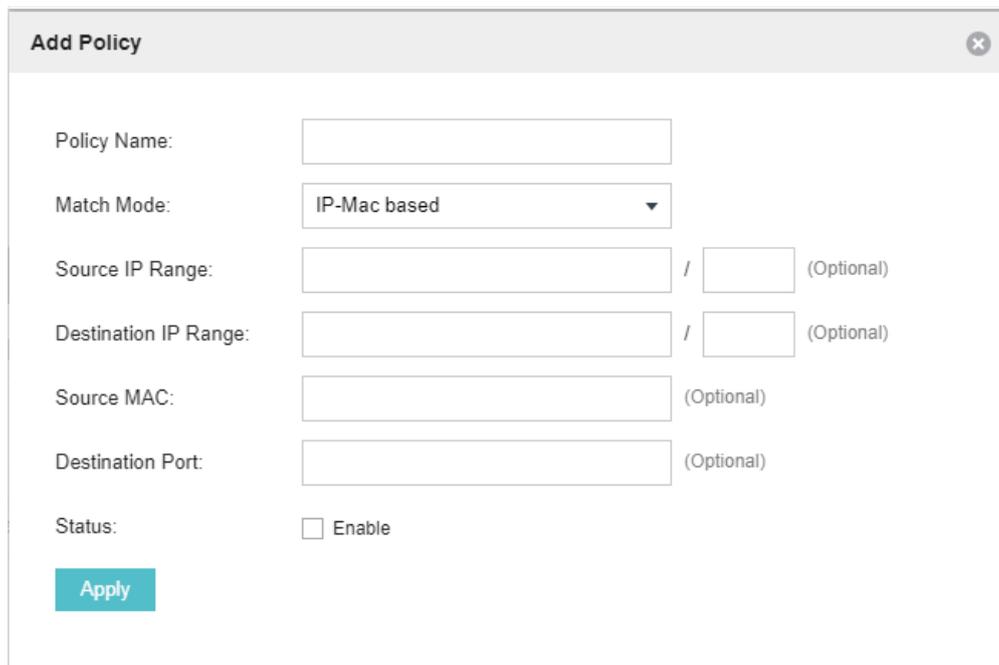

The 'Add Policy' dialog box contains the following fields and options:

- Policy Name:
- Match Mode:
- Source IP Range:  /  (Optional)
- Destination IP Range:  /  (Optional)
- Source MAC:  (Optional)
- Destination Port:  (Optional)
- Status:  Enable
- 

3. Configure the following parameters. When all conditions are met, the client can access the network without authentication.

Policy Name	Specify a name for the policy.
Match Mode	Select the match mode for the policy. Two options are provided: <b>URL:</b> With this option selected, configure an URL that is allowed to be visited by the clients without authentication. <b>IP-MAC Based:</b> With this option selected, configure Source IP Range, Destination IP Range, Source MAC and Destination MAC to specify the specific clients and service that will follow the Free Authentication feature.
URL	Set the URL.
Source IP Range	Set the Source IP Range with the subnet and mask length of the clients.
Destination IP Range	Set the Destination IP Range with the subnet and mask length of the server.
Source MAC	Set the MAC address of client.
Destination Port	Enter the port the service uses.
Status	Check the box to enable the policy.


4. Click **Apply** and the policy is successfully added.

## 3.5 MAC Filter

MAC filter can be used to allow or block the listed clients to access the network. Thereby it can effectively control client's access to the wireless network.

Follow the steps below to configure MAC Filter.

1. Go to **Wireless Control > MAC Filter** to add MAC Filter group and group members.

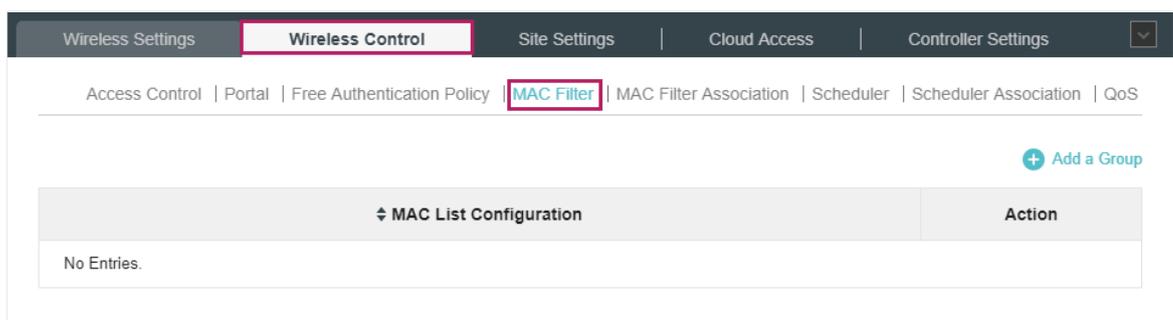


1) Click **+ Add a Group** and specify a name for the group.

**Add a Group** ✕

MAC Filter Name:

**Apply**


2) Click **Apply** and the group will be successfully added as shown below.

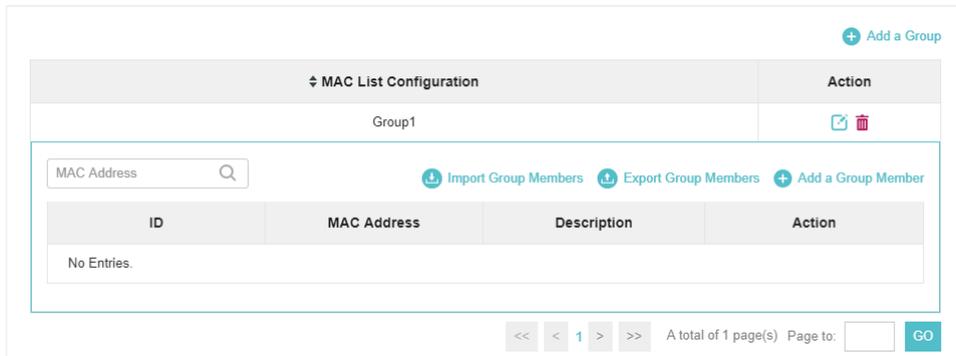

3) Click **+ Add a Group Member** and enter a MAC address in the format as shown below.

The 'Add a Group Member' dialog box is shown. It has a title bar with a close button. The form contains two input fields: 'MAC Address' with the value 'AA-BB-CC-DD-EE-FF' and 'Description' with the value 'User 1'. An 'Apply' button is located at the bottom left.

4) Click **Apply** to add the MAC address into the MAC filter group.

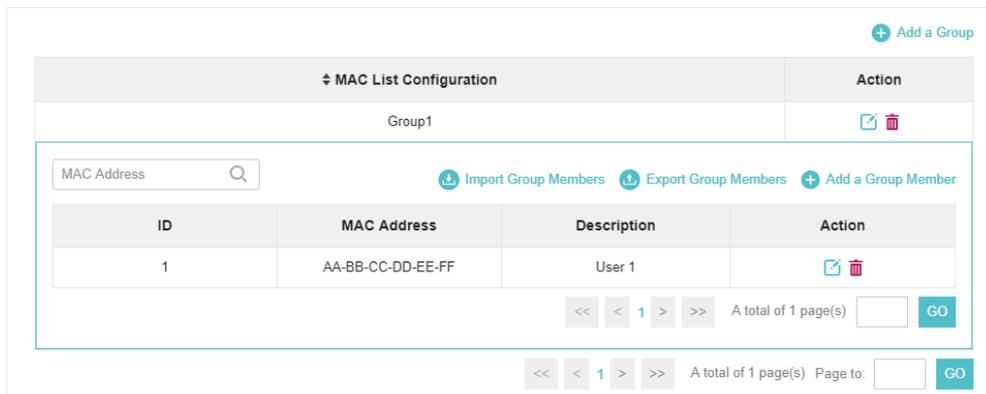

2. You can add more groups or members according to your need.

**Note:**

You can click **Import Group Members** to export the group members to a excel file and save the file on your PC. If needed, you can also click **Export Group Members** to import the group members to the OC200.

3. Go to **Wireless Control > MAC Filter Association** to associate the added MAC Filter group with SSID.

Wireless Settings | **Wireless Control** | Site Settings | Cloud Access | Controller Settings

Access Control | Portal | Free Authentication Policy | MAC Filter | **MAC Filter Association** | Scheduler | Scheduler Association | QoS

MAC Filtering:  Enable

Apply

2.4GHz 5GHz Default

ID	SSID Name	Band	MAC Filter Name	Action	Setting
1	SSID1	2.4GHz	Group1	Allow	Apply

<< < 1 > >> A total of 1 page(s) Page to:  GO

- 1) Check the box and click **Apply** to enable MAC Filtering function.
- 2) Select a band frequency (2.4GHz or 5GHz) and a WLAN group.
- 3) In the MAC Filter Name column of the specified SSID, select a MAC Filter group in the drop-down list. Then select **Allow/Deny** in the Action column to allow/deny the clients in the MAC Filter group to access the network.
- 4) Click **Apply** in the Setting column.

## 3.6 Scheduler

With the Scheduler, the EAPs or its' wireless network can automatically turn on or off at the time you set. For example, you can use this feature to schedule the radio to operate only during the office working time in order to achieve security goals and reduce power consumption. You can also use the Scheduler to make clients can only access the wireless network during the time period you set in the day.

Follow the steps below to configure Scheduler.

1. Go to **Wireless Control > Scheduler**.

Wireless Settings | **Wireless Control** | Site Settings | Cloud Access | Controller Settings

Access Control | Portal | Free Authentication Policy | MAC Filter | MAC Filter Association | **Scheduler** | Scheduler Association | QoS

+ Add a Profile

Profile Configuration	Action
No Entries.	

1) Click [+ Add a Profile](#) and specify a name for the profile.




**Add a Profile** ✕

Profile Name:

[Apply](#)

2) Click **Apply** and the profile will be added.

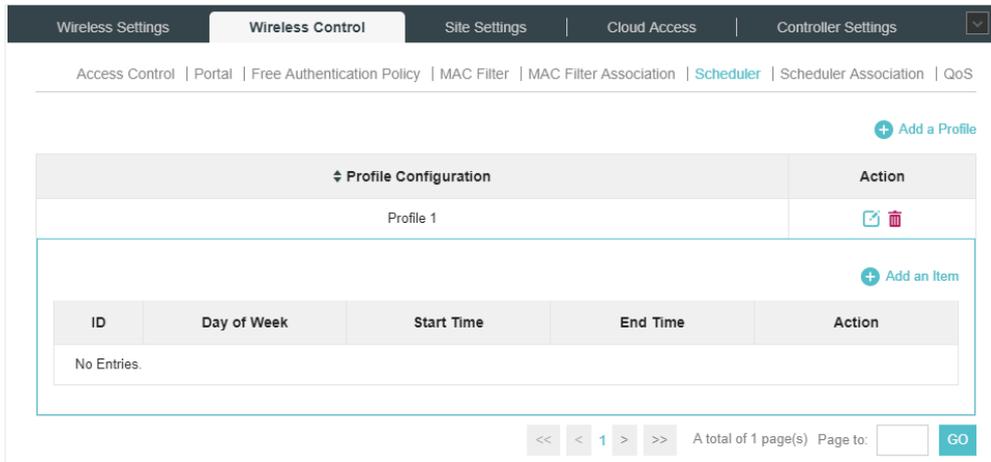

Wireless Settings | **Wireless Control** | Site Settings | Cloud Access | Controller Settings ⌵

Access Control | Portal | Free Authentication Policy | MAC Filter | MAC Filter Association | **Scheduler** | Scheduler Association | QoS

[+ Add a Profile](#)


Profile Configuration				Action
Profile 1				<a href="#">✎</a> <a href="#">✖</a>

[+ Add an Item](#)

ID	Day of Week	Start Time	End Time	Action
No Entries.				

<< < 1 > >> A total of 1 page(s) Page to:  [GO](#)

3) Click [+ Add an Item](#) and configure the parameters to specify a period of time.

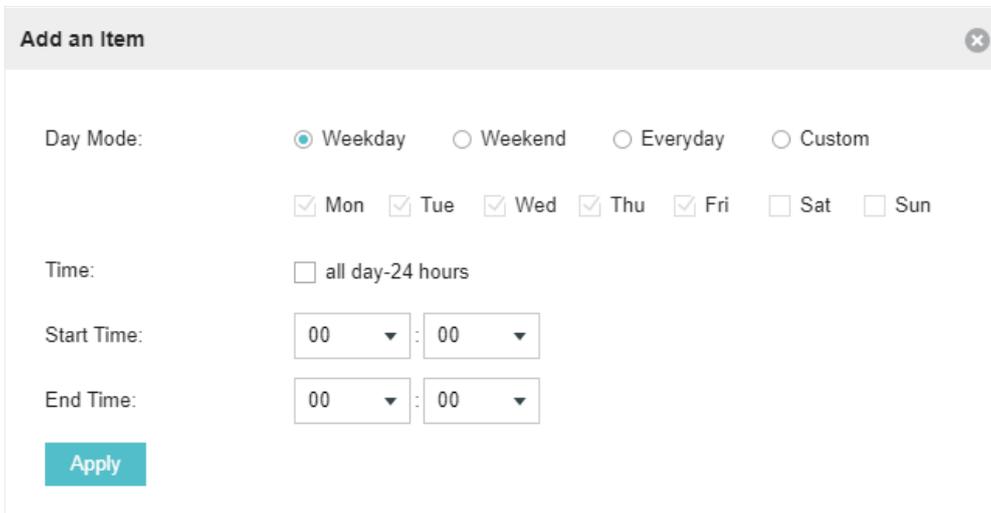

**Add an Item** ✕

Day Mode:  Weekday  Weekend  Everyday  Custom

Mon  Tue  Wed  Thu  Fri  Sat  Sun

Time:  all day-24 hours

Start Time:  :

End Time:  :

[Apply](#)

4) Click **Apply** and the profile is successfully added in the list.

## 2. Go to **Wireless Control > Scheduler Association**.

Wireless Settings | **Wireless Control** | Site Settings | Cloud Access | Controller Settings

Access Control | Portal | Free Authentication Policy | MAC Filter | MAC Filter Association | Scheduler | **Scheduler Association** | QoS

Scheduler:  Enable

Association Mode: Associated with SSID

Apply

2.4GHz 5GHz Default

ID	SSID Name	Band	Profile Name	Action	Setting
1	SSID1	2.4GHz	None	Radio Off	Apply

<< < 1 > >> A total of 1 page(s) Page to:  GO

- 1) Check the box to enable Scheduler function.
- 2) Select **Associated with SSID** (the profile will be applied to the specific SSID on all the EAPs) or **Associated with AP** (the profile will be applied to all SSIDs on the specific EAP). Then click **Apply**.
- 3) Select a band frequency (2.GHz or 5GHz) and a WLAN group.
- 4) In the Profile Name column of the specified SSID or AP, select a profile you added before in the drop-down list. Select **Radio On/Radio Off** to turn on or off the wireless network during the time interval set for the profile.
- 5) Click **Apply** in the Setting column.

## 3.7 QoS

The OC200 allows you to configure the quality of service (QoS) on the EAP for optimal throughput and performance when handling differentiated wireless traffic, such as Voice-over-IP (VoIP), other types of audio, video, streaming media, and traditional IP data.

To configure QoS on the EAP, you should set parameters on the transmission queues for different types of wireless traffic and specify minimum and maximum wait times (through contention windows) for transmission. In normal use, we recommend that you keep the default values for the EAPs and station EDCA (Enhanced Distributed Channel Access).

Follow the steps below to configure QoS.

1. Go to **Wireless Control > QoS**.

Wireless Settings | **Wireless Control** | Site Settings | Cloud Access | Controller Settings

Access Control | Portal | Free Authentication Policy | MAC Filter | MAC Filter Association | Scheduler | Scheduler Association | **QoS**

2.4GHz | 5GHz

Restore to Default Values: [Restore](#)

Wi-Fi Multimedia(WMM):  Enable

No Acknowledgement:  Enable

Unscheduled Automatic Power Save Delivery:  Enable

**AP EDCA Parameters** ⌵

**Station EDCA Parameters** ⌵

[Apply](#)

2. Enable or disable the following features.

**Wi-Fi Multimedia (WMM)** By default enabled. With WMM enabled, the EAPs have the QoS function to guarantee the high priority of the transmission of audio and video packets. If 802.11n only mode is selected in 2.4GHz (or 802.11n only, 802.11ac only, or 802.11 n/ac mixed mode in 5GHz), the WMM should be enabled. If WMM is disabled, the 802.11n only mode cannot be selected in 2.4GHz (or 802.11n only, 802.11ac only, or 802.11 n/ac mixed mode in 5GHz).

**No Acknowledgment** By default disabled. You can enable this function to specify that the EAPs should not acknowledge frames with QoS No Ack. Enabling No Acknowledgment can bring more efficient throughput but higher error rates in a noisy Radio Frequency (RF) environment.

**Unscheduled Automatic Power Save Delivery** By default enabled. As a power management method, it can greatly improve the energy-saving capacity of clients.

3. Click **AP EDCA Parameters** and the following page will appear. AP EDCA parameters affect traffic flowing from the EAP to the client station. We recommend that you use the defaults.

**AP EDCA Parameters** ⌵

Queue	Arbitration Inter_Frame Space	Minimum Contention Window	Maximum Contention Window	Maximum Burst
Data 0(Voice)	1	3	7	1504
Data 1(Video)	1	7	15	3008
Data 2(Best Effort)	3	15	63	0
Data 3(Background)	7	15	1023	0

<b>Queue</b>	<p><b>Queue</b> displays the transmission queue. By default, the priority from high to low is Data 0, Data 1, Data 2, and Data 3. The priority may be changed if you reset the EDCA parameters.</p> <p><b>Data 0 (Voice)</b>—Highest priority queue, minimum delay. Time-sensitive data such as VoIP and streaming media are automatically sent to this queue.</p> <p><b>Data 1 (Video)</b>—High priority queue, minimum delay. Time-sensitive video data is automatically sent to this queue.</p> <p><b>Data 2 (Best Effort)</b>—Medium priority queue, medium throughput and delay. Most traditional IP data is sent to this queue.</p> <p><b>Data 3 (Background)</b>—Lowest priority queue, high throughput. Bulk data that requires maximum throughput and is not time-sensitive is sent to this queue (FTP data, for example).</p>
<b>Arbitration Inter-Frame Space</b>	A wait time for data frames. The wait time is measured in slots. Valid values for <b>Arbitration Inter-Frame Space</b> are from 0 to 15.
<b>Minimum Contention Window</b>	<p>A list to the algorithm that determines the initial random backoff wait time (window) for retry of a transmission.</p> <p>This value can not be higher than the value for the <b>Maximum Contention Window</b>.</p>
<b>Maximum Contention Window</b>	<p>The upper limit (in milliseconds) for the doubling of the random backoff value. This doubling continues until either the data frame is sent or the Maximum Contention Window size is reached.</p> <p>This value must be higher than the value for the <b>Minimum Contention Window</b>.</p>
<b>Maximum Burst</b>	<b>Maximum Burst</b> specifies the maximum burst length allowed for packet bursts on the wireless network. A packet burst is a collection of multiple frames transmitted without header information. The decreased overhead results in higher throughput and better performance.

- Click **Station EDCA Parameters** and the following page will appear. Station EDCA parameters affect traffic flowing from the client station to the EAP. We recommend that you use the defaults.


Station EDCA Parameters 				
Queue	Arbitration Inter_Frame Space	Minimum Contention Window	Maximum Contention Window	TXOP Limit
Data 0(Voice)	<input type="text" value="2"/>	<input type="text" value="3"/> ▼	<input type="text" value="7"/> ▼	<input type="text" value="1504"/>
Data 1(Video)	<input type="text" value="2"/>	<input type="text" value="7"/> ▼	<input type="text" value="15"/> ▼	<input type="text" value="3008"/>
Data 2(Best Effort)	<input type="text" value="3"/>	<input type="text" value="15"/> ▼	<input type="text" value="1023"/> ▼	<input type="text" value="0"/>
Data 3(Background)	<input type="text" value="7"/>	<input type="text" value="15"/> ▼	<input type="text" value="1023"/> ▼	<input type="text" value="0"/>

Queue	<p><b>Queue</b> displays the transmission queue. By default, the priority from high to low is Data 0, Data 1, Data 2, and Data 3. The priority may be changed if you reset the EDCA parameters.</p> <p><b>Data 0 (Voice)</b>—Highest priority queue, minimum delay. Time-sensitive data such as VoIP and streaming media are automatically sent to this queue.</p> <p><b>Data 1 (Video)</b>—High priority queue, minimum delay. Time-sensitive video data is automatically sent to this queue.</p> <p><b>Data 2 (Best Effort)</b>—Medium priority queue, medium throughput and delay. Most traditional IP data is sent to this queue.</p> <p><b>Data 3 (Background)</b>—Lowest priority queue, high throughput. Bulk data that requires maximum throughput and is not time-sensitive is sent to this queue (FTP data, for example).</p>
Arbitration Inter-Frame Space	<p>A wait time for data frames. The wait time is measured in slots. Valid values for <b>Arbitration Inter-Frame Space</b> are from 0 to 15.</p>
Minimum Contention Window	<p>A list to the algorithm that determines the initial random backoff wait time (window) for retry of a transmission. This value can not be higher than the value for the <b>Maximum Contention Window</b>.</p>
Maximum Contention Window	<p>The upper limit (in milliseconds) for the doubling of the random backoff value. This doubling continues until either the data frame is sent or the Maximum Contention Window size is reached.</p> <p>This value must be higher than the value for the <b>Minimum Contention Window</b>.</p>
TXOP Limit	<p>The <b>TXOP Limit</b> is a station EDCA parameter and only applies to traffic flowing from the client station to the EAP. The Transmission Opportunity (TXOP) is an interval of time, in milliseconds, when a WME client station has the right to initiate transmissions onto the wireless medium (WM) towards the EAP. The valid values are multiples of 32 between 0 and 8192.</p>

5. Click **Apply**.


## 3.8 Site Settings

You can configure the site-specific settings on the **Site Settings** page. To switch sites, select a different site from the **Sites** drop-down menu at the top of any screen.

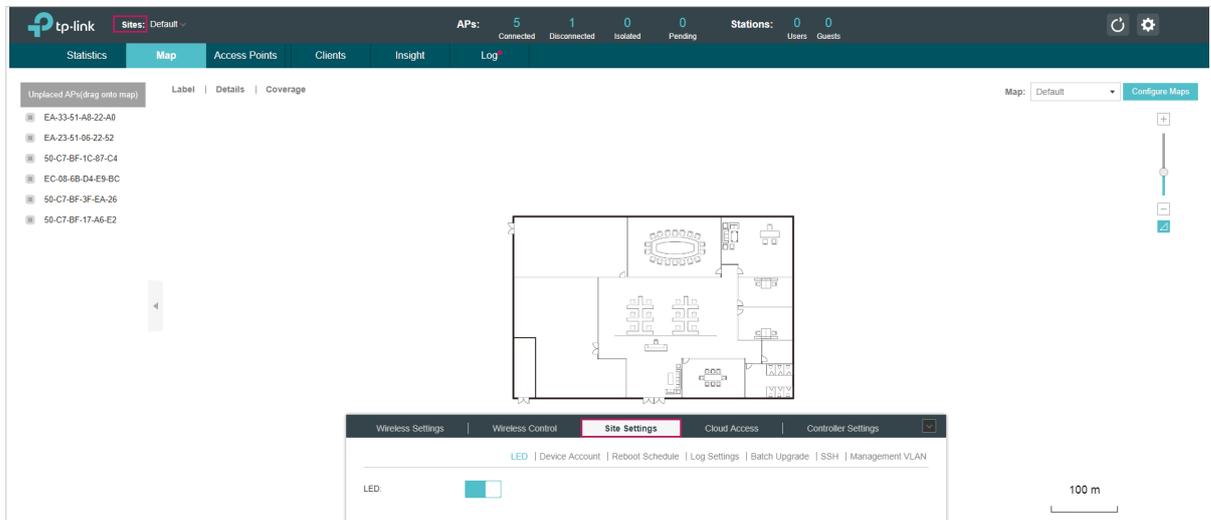

### 3.8.1 LED

You can change the LED light status on the EAPs on the page **Site Settings > LED**.

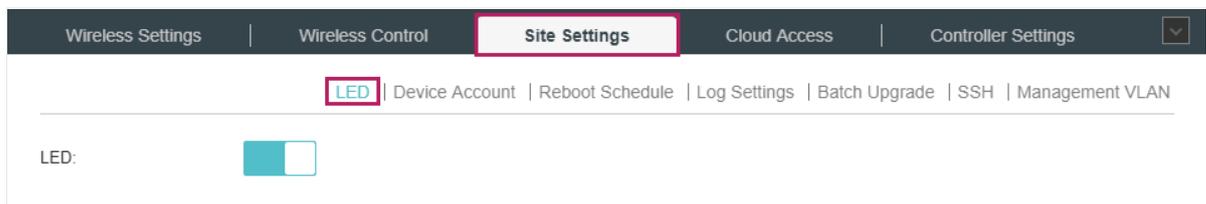

By default, the LED status is , which means that the LED lights of all the EAPs on the site are on. You can click this button to change the LED light status. The icon will be changed to , which means that all the LED lights are off.

### 3.8.2 Device Account

When the EAPs are adopted at the first time, their username and password will become the same as those of the OC200 which are specified at Basic Configurations. You can specify a new username and password for the adopted EAPs in batches.

Follow the steps below to change EAPs' username and password.

1. Go to **Site Settings > Device Account**.

The screenshot shows the 'Site Settings' page with the 'Device Account' tab selected. The form includes a note, current and new username/password fields, and an 'Apply' button.

Wireless Settings | Wireless Control | **Site Settings** | Cloud Access | Controller Settings

LED | **Device Account** | Reboot Schedule | Log Settings | Batch Upgrade | SSH | Management VLAN

**Note:** You can specify a new username and password for the device account. The new account will be applied to all the managed EAP devices.

Current Username:

Current Password:

New Username:

New Password:

**Apply**

2. Specify a new username and password for the EAPs.

3. Click **Apply**.

**Note:**

- The new account will be applied to the EAPs but not the OC200. To change the OC200's username and password, please refer to [User Account](#).
- Device account can be only viewed and changed when you log in to the OC200 as the administrator. While the operator and observer accounts do not have the permission.

### 3.8.3 Reboot Schedule

You can reboot all the EAPs in the network periodically as needed. Follow the steps below to configure Reboot Schedule.

1. Go to **Site Settings > Reboot Schedule**.

The screenshot shows the 'Site Settings' page with the 'Reboot Schedule' tab selected. The form includes an 'Enable' checkbox, a 'Timing Mode' dropdown, a 'Reboot Time' time selector, and an 'Apply' button.

Wireless Settings | Wireless Control | **Site Settings** | Cloud Access | Controller Settings

LED | Device Account | **Reboot Schedule** | Log Settings | Batch Upgrade | SSH | Management VLAN

Reboot Schedule:  Enable

Timing Mode:  ▼

Reboot Time:  :  :

**Apply**

2. Check the box to enable the function.


3. Choose **Daily**, **Weekly** or **Monthly** in the **Timing Mode** drop-down list and set a specific time to reboot the EAPs.

4. Click **Apply**.

## 3.8.4 Log Settings

Follow the steps below to choose the way to receive system logs.

1. Go to **Site Settings > Log Setting**.

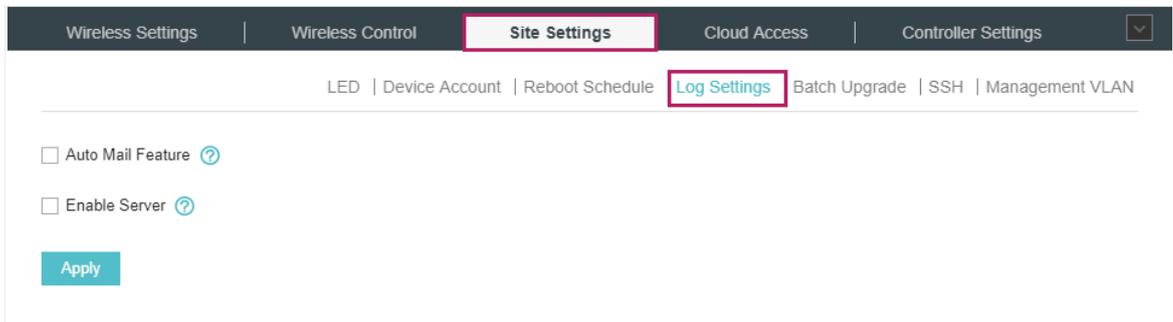

Wireless Settings | Wireless Control | **Site Settings** | Cloud Access | Controller Settings

LED | Device Account | Reboot Schedule | **Log Settings** | Batch Upgrade | SSH | Management VLAN

Auto Mail Feature ?

Enable Server ?

Apply


2. Check the box to choose the ways to receive system logs and click **Apply**. Two ways are available: **Auto Mail Feature** and **Server**. You can choose more than one way.

### Note:

The logs and alerts of the OC200 with version 1.0.3 or below will be discarded after the OC200 is upgraded to version 1.1.0 or above.

## Auto Mail Feature

If Auto Mail Feature is enabled, system logs will be sent to a specified mailbox. Check the box to enable the feature and configure the parameters.

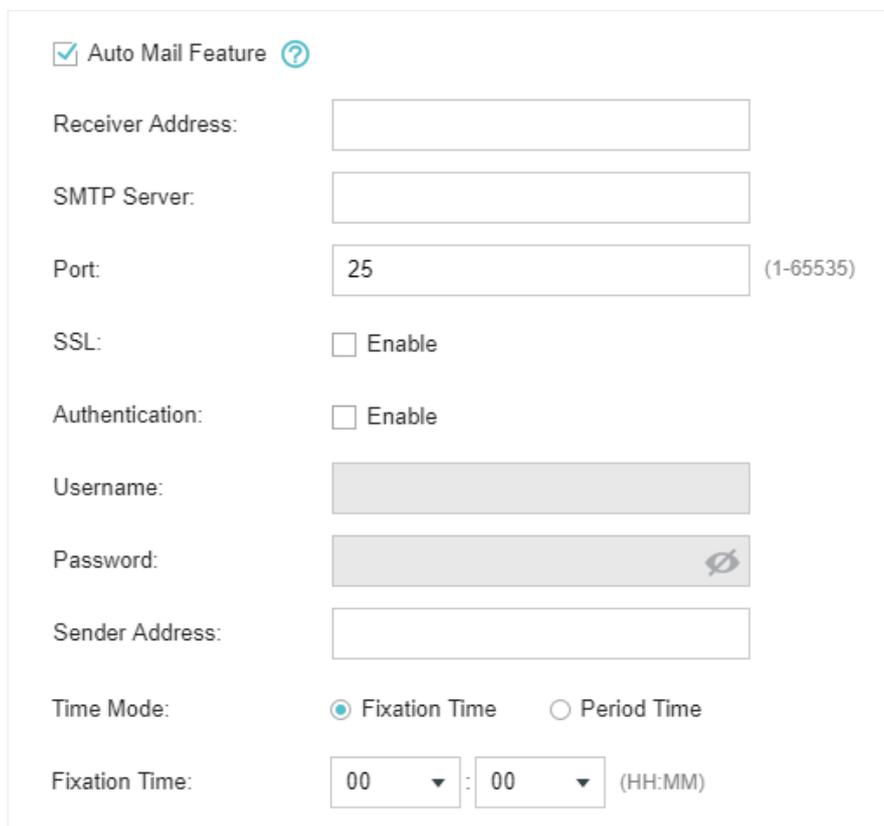

Auto Mail Feature ?

Receiver Address:

SMTP Server:

Port:  (1-65535)

SSL:  Enable

Authentication:  Enable

Username:

Password:

Sender Address:

Time Mode:  Fixation Time  Period Time

Fixation Time:  :  (HH:MM)

Receiver Address	Enter the receiver's E-mail address.
SMTP Server	Enter the IP address or domain name of the SMTP server.
Port	The SMTP server uses port 25 as default. If SSL is enabled, the port number will automatically change to 465.
SSL	You can check the box to enable SSL (Security Socket Layer) to enhance secure communications over the internet.
Authentication	You can check the box to enable mail server authentication. Enter the sender's mail account name and password.
Username	Enter the sender's mail account name.
Password	Enter the sender's mail password.
Sender Address	Enter the sender's E-mail address.
Time Mode	Select Time Mode. System logs can be sent at specific time or time interval.
Fixation Time	If you select Fixation Time, specify a fixed time to send the system log mails. For example, 08:30 indicates that the mail will be sent at 8:30 am everyday.
	<div style="border: 1px solid #ccc; padding: 5px; width: fit-content; margin: 0 auto;"> <p>Time Mode: <input checked="" type="radio"/> Fixation Time <input type="radio"/> Period Time</p> <p>Fixation Time: <input type="text" value="00"/> : <input type="text" value="00"/> (HH:MM)</p> </div>
Period Time	If you select Period Time, specify a period time to regularly send the system log mail. For example, 6 indicates that the mail will be sent every six hours.
	<div style="border: 1px solid #ccc; padding: 5px; width: fit-content; margin: 0 auto;"> <p>Time Mode: <input type="radio"/> Fixation Time <input checked="" type="radio"/> Period Time</p> <p>Period Time: <input type="text"/> Hours(1-24)</p> </div>

## Server

If Server is enabled, system logs will be sent to a server. Check the box to enable the feature and configure the parameters.

Enable Server

System Log Server IP:

System Log Server Port:

More Client Detail Log:

System Log Server IP	Enter the IP address of the server.
System Log Server Port	Enter the port of the server.
More Client Detail Log	With the option enabled, the logs of clients will be sent to the server.

### 3.8.5 Batch Upgrade

You can upgrade your EAPs of the same model in batches using Batch Upgrade. Two options are available for upgrading: upgrade online and upgrade manually.

#### Upgrade Online

The latest firmware for the EAPs can be detected by the OC200 automatically, and you can upgrade the EAPs online. Thus you do not need to save the firmware files locally in advance.

Follow the steps below to upgrade the EAPs online according to their model.

1. Go to **Site Settings > Batch Upgrade**. The device model, amount, current firmware and available firmware will appear on the **Firmware list**.

Wireless Settings | Wireless Control | **Site Settings** | Cloud Access | Controller Settings

LED | Device Account | Reboot Schedule | Log Settings | **Batch Upgrade** | SSH | Management VLAN

**Firmware List**

Check for firmware upgrade

Device Model	Connected	Current Firmware	Available Firmware	Action
EAP225(EU) 3.0	1	2.2.0 Build 20180411 Rel. 62961	2.3.0 Build 20180628 Rel. 54512 ⓘ	⬆️ ⬆️
EAP225-Outdoor(EU) 1.0	2	1.3.0 Build 20180614 Rel. 50359	Up to date	⬆️ ⬆️

<< < 1 > >> A total of 1 page(s) Page to:  GO

2. Click ⓘ in the **Action** column to upgrade the device.

After upgrading, the device will reboot automatically.

#### Tips:

- You can click **Check for firmware upgrade** to check if the latest firmware is available.
- You can click ⓘ in the **Available Firmware** column to view the release note of the firmware, which can help you know the new features or improvements of this firmware.

#### Upgrade Manually

The latest firmware files can be downloaded from the download center of TP-Link Website. Then you can upgrade the EAPs manually.

Follow the steps below to upgrade the EAPs manually according to their model.

1. Visit <https://www.tp-link.com/en/support/download/> to download the latest firmware file of the corresponding model.

2. Go to **Site Settings > Batch Upgrade**.

Wireless Settings | Wireless Control | **Site Settings** | Cloud Access | Controller Settings

LED | Device Account | Reboot Schedule | Log Settings | **Batch Upgrade** | SSH | Management VLAN

**Firmware List**

Check for firmware upgrade

Device Model	Connected	Current Firmware	Available Firmware	Action
EAP225(EU) 3.0	1	2.2.0 Build 20180411 Rel. 62961	2.3.0 Build 20180628 Rel. 54512 ⓘ	<a href="#">↑</a> <a href="#">↑</a>
EAP225-Outdoor(EU) 1.0	2	1.3.0 Build 20180614 Rel. 50359	Up to date	<a href="#">↑</a> <a href="#">↑</a>

<< < 1 > >> A total of 1 page(s) Page to:  **GO**

3. Click [↑](#) in the **Action** column to upgrade the device.

**Upload Firmware** [Close]

Upgrade File:  **Browse** **Upgrade**

4. Click **Browse** to locate and choose the proper firmware file for the model.

5. Click **Upgrade** to upgrade the device.

After upgrading, the device will reboot automatically.


**Note:**

- The EAP cannot be upgraded manually when you access the OC200 via Omada Cloud.
- To avoid damage, please do not turn off the device while upgrading.

### 3.8.6 SSH

SSH is a protocol working in application layer and transport layer. It can provide a secure, remote connection to a device. After enabling SSH Login here, you can log in to the EAPs via SSH. Follow the steps below to configure SSH on the OC200:

1. Go to **Site Setting > SSH**. Enter the port number of the SSH server.

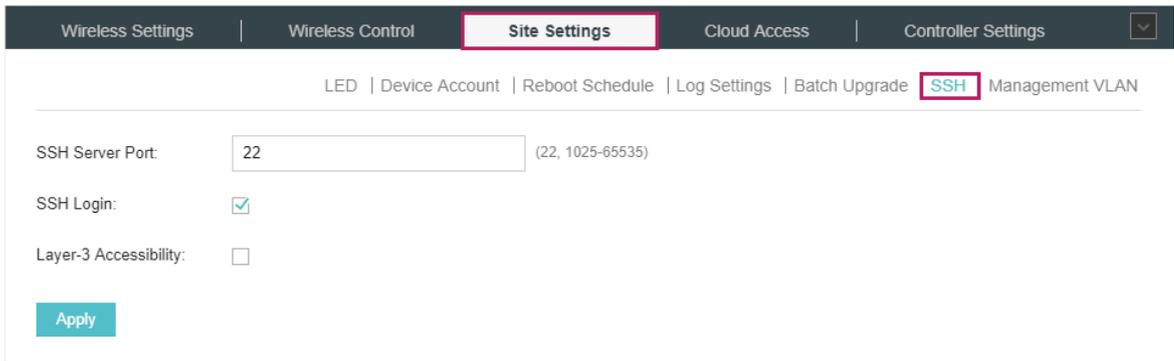

The screenshot shows the 'Site Settings' page in a web interface. The 'SSH' tab is selected and highlighted with a red box. Below the navigation bar, there are links for 'LED', 'Device Account', 'Reboot Schedule', 'Log Settings', 'Batch Upgrade', 'SSH', and 'Management VLAN'. The 'SSH' link is also highlighted with a red box. The configuration fields are: 'SSH Server Port' with a text input containing '22' and a range '(22, 1025-65535)'; 'SSH Login' with a checked checkbox; and 'Layer-3 Accessibility' with an unchecked checkbox. An 'Apply' button is located at the bottom left.


2. Check the box to enable **SSH Login**. If you want to log in to the EAP from a different subnet via SSH, enable **Layer-3 Accessibility**.
3. Click **Apply**.

### 3.8.7 Management VLAN

Management VLAN provides a safer way for you to manage the EAP. With Management VLAN enabled, only the hosts in the management VLAN can manage the EAP. Since most hosts cannot process VLAN TAGs, connect the management host to the network via a switch, and set up correct VLAN settings for the switches on the network to ensure the communication between the host and the EAP in the management VLAN.

Follow the steps below to configure Management VLAN.

1. Go to **Site Setting > Management VLAN**. Check the box to enable Management VLAN.

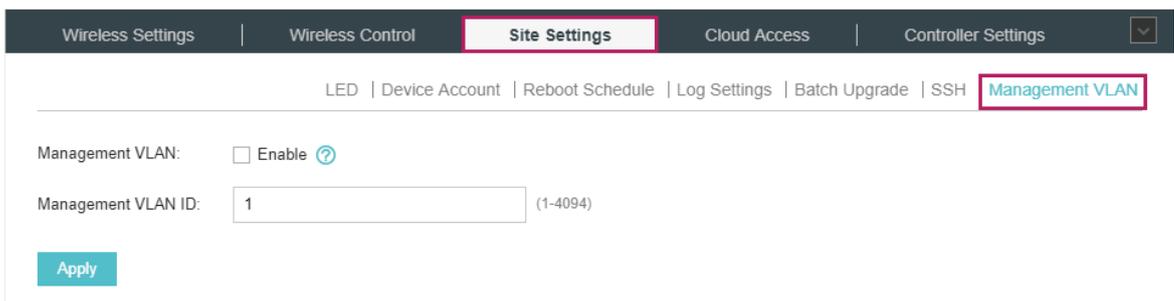

The screenshot shows the 'Site Settings' page in a web interface. The 'Management VLAN' tab is selected and highlighted with a red box. Below the navigation bar, there are links for 'LED', 'Device Account', 'Reboot Schedule', 'Log Settings', 'Batch Upgrade', 'SSH', and 'Management VLAN'. The 'Management VLAN' link is also highlighted with a red box. The configuration fields are: 'Management VLAN' with an unchecked checkbox and a help icon; and 'Management VLAN ID' with a text input containing '1' and a range '(1-4094)'. An 'Apply' button is located at the bottom left.

2. Specify the Management VLAN ID. The default VLAN ID is 1.
3. Click **Apply**.

# 4

## *Omada Cloud Service*

TP-Link Omada Cloud Service provides a better way to realize remote management. With Cloud Access enabled on the OC200 and a TP-Link ID bound with your OC200, you can easily monitor and manage your wireless network. To ensure that your EAPs stay new and get better over time, the Omada Cloud will notify you when a newer firmware upgrade is available. Surely you can also manage multiple OC200s with a single TP-Link ID.

Follow the steps below to configure Cloud Access and access the OC200 via Omada Cloud:


1. [Configure the Cloud Access](#)
2. [Manage the OC200 via Omada Cloud](#)

## 4.1 Configure the Cloud Access

### 4.1.1 Enable Cloud Access

You can configure the OC200 via Omada Cloud only when Cloud Access is enabled on the OC200 and you have been added as a Cloud User.

On the page **Cloud Access** you can configure Cloud Access. Click the button to enable the **Cloud Access**. The Cloud Access status is , which means that the Cloud Access is enabled.

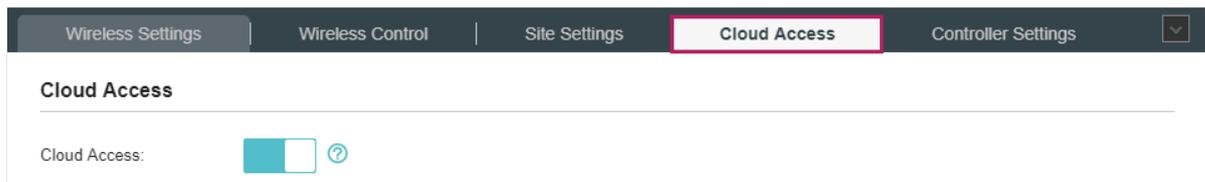

### 4.1.2 Manage the Cloud Users


To configure and manage OC200 through Cloud service, you need to have a TP-Link ID, and bind your TP-Link ID to the OC200. Then you can remotely access the OC200 as a Cloud User.

#### Note:

To register a TP-Link ID and bind it to your OC200, make sure that the management host can access the internet.

#### Register a TP-Link ID

In the Quick Setup process, you can register a TP-Link ID and bind it to your OC200. If you have skipped the registration during the Quick Setup process, you can go to **Cloud Access**. Click **Register Now** and follow the instructions to register a TP-Link ID.

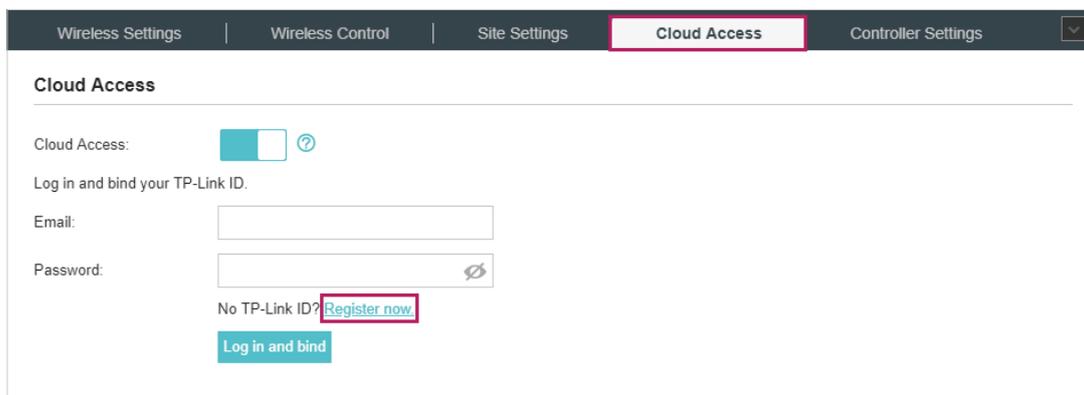

#### Log in and bind your TP-Link ID

After activating your TP-Link ID, come back to **Cloud Access** page to log in and bind your TP-Link ID to your OC200.

Wireless Settings | Wireless Control | Site Settings | **Cloud Access** | Controller Settings

### Cloud Access

Cloud Access:  ?

Log in and bind your TP-Link ID.

Email:

Password:

No TP-Link ID? [Register now.](#)

**Log in and bind**

The TP-Link ID which is bound with the OC200 for the first time will be automatically bound as an administrator. And only one TP-Link ID can be bound with the OC200 as an administrator. An administrator account can add or remove other TP-Link IDs to or from the same OC200 as Cloud Users.

Wireless Settings | Wireless Control | Site Settings | **Cloud Access** | Controller Settings

### Cloud Access Online

Cloud Access:  ?

TP-Link ID (Owner): administrator@tp-link.com **Unbind**

[+ Add Cloud User](#)

TP-Link ID	Role	Site	Created Time	Action
administrator@tp-link.com	administrator	All Sites	2018-08-14 11:21:28	

<< < 1 > >> A total of 1 page(s) Page to:  **GO**

## Add new Cloud Users

After you have an administrator TP-Link ID, you can add new Cloud Users. Click [+ Add Cloud User](#) , enter another TP-Link ID as needed and click **Save**.

### Add Cloud User ✕

TP-Link ID:

No TP-Link ID? [Register now.](#)

Role:  ▼

Site Privileges:  ▼

**Apply**

TP-Link ID	Enter the TP-Link ID that you want to add as the new Cloud User. If you do not have another TP-Link ID, you can click <b>Register Now</b> and follow the instructions to register a TP-Link ID.
Role	<p>Select the role for the new Cloud User from the drop-down list. Two options are provided:</p> <p><b>Operator:</b> An Operator account can change the settings of the privileged sites that are given by the administrator. And the Operator account cannot manage the cloud users and change settings.</p> <p><b>Observer:</b> An Observer account can only view the status and settings of the privileged sites that are given by the administrator but not change the settings.</p> <p>Both the Operator and Observer accounts cannot manage the cloud users and settings. Thus Operator and Observer accounts can only be created or deleted by the administrator.</p>
Site Privileges	Select the privileged sites (multiple options available) for the Operator or Observer accounts from the drop-down list.

## Unbind a TP-Link ID

You can click **Unbind** to unbind your administrator TP-Link ID. Note that Unbind operation cannot be performed when you log in to the OC200 through Omada Cloud service.

Cloud Access:  ?

TP-Link ID (Owner): administrator@tp-link.com **Unbind**


[+ Add Cloud User](#)

↕ TP-Link ID	Role	Site	Created Time	Action
administrator@tp-link.com	administrator	All Sites	2018-08-03 18:29:46	
operator001@tp-link.com	operator	site2	2018-08-14 11:42:23	
operator002@tp-link.com	operator	Default	2018-08-14 17:34:39	
observer@tp-link.com	observer	site1	2018-08-15 16:00:20	

<< < 1 > >> A total of 1 page(s) Page to:  **GO**

## 4.2 Manage the OC200 via Omada Cloud

With Cloud Access enabled, you can manage your OC200 remotely using your TP-Link ID. You can refer to the following topology.

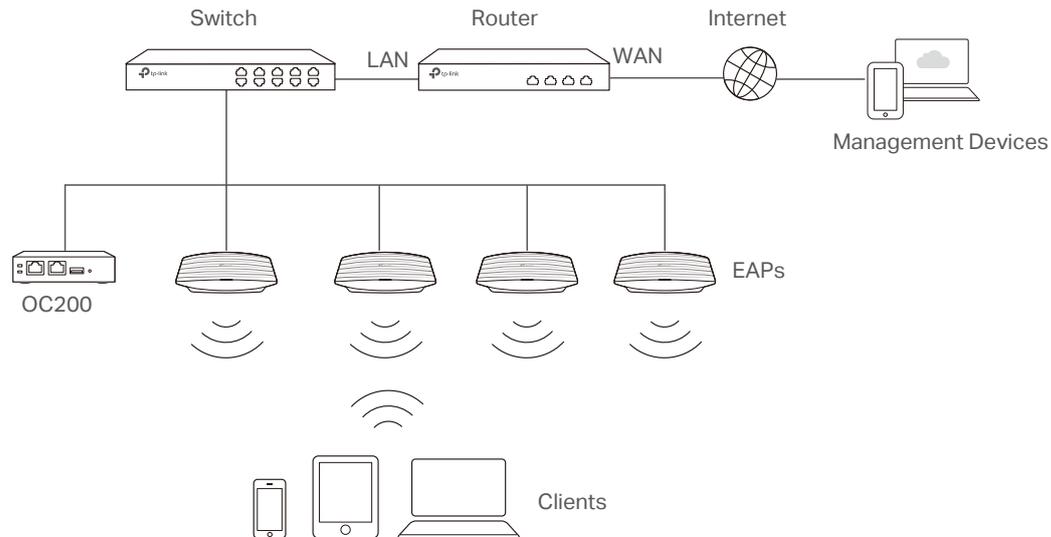

Before you remotely access your OC200, make sure that the following requirements have been met:


- Cloud Access is enabled on the OC200.
- Your OC200 has been bound with a TP-Link ID. If you don't have a TP-Link ID, refer to [Register a TP-Link ID](#) to get one.
- Both your OC200 and management devices have internet access.

## 4.2.1 Access the OC200 via Omada Cloud

1. Launch a web browser and type <https://omada.tplinkcloud.com> in the address bar, then press **Enter** (Windows) or **Return** (Mac).




2. Enter your TP-Link ID and password and click **Log In**.

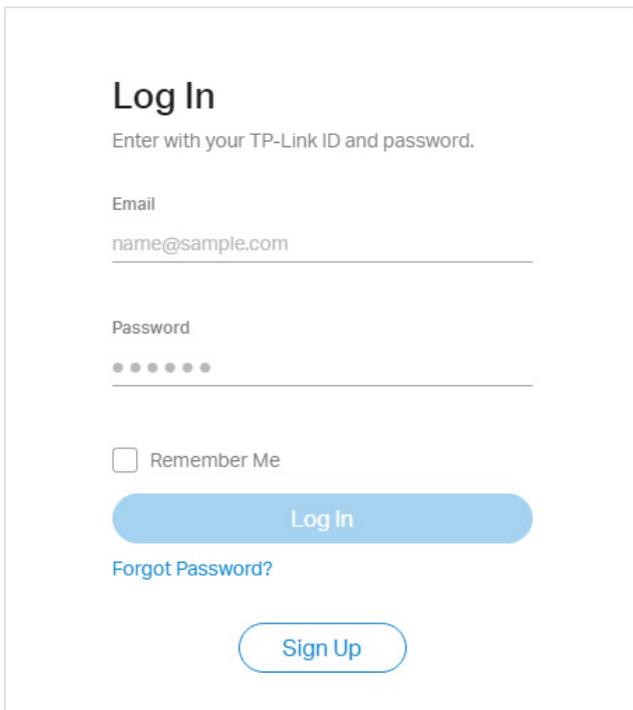

The login form is titled "Log In" and includes the instruction "Enter with your TP-Link ID and password." It features an "Email" field with the placeholder "name@sample.com", a "Password" field with five dots for masking, a "Remember Me" checkbox, a blue "Log In" button, a "Forgot Password?" link, and a "Sign Up" button.


3. After you log in to Omada Cloud, a list of controllers that has been bound with your TP-Link ID will appear. If the OC200 does not appear on the list, you can click  to refresh the current page.

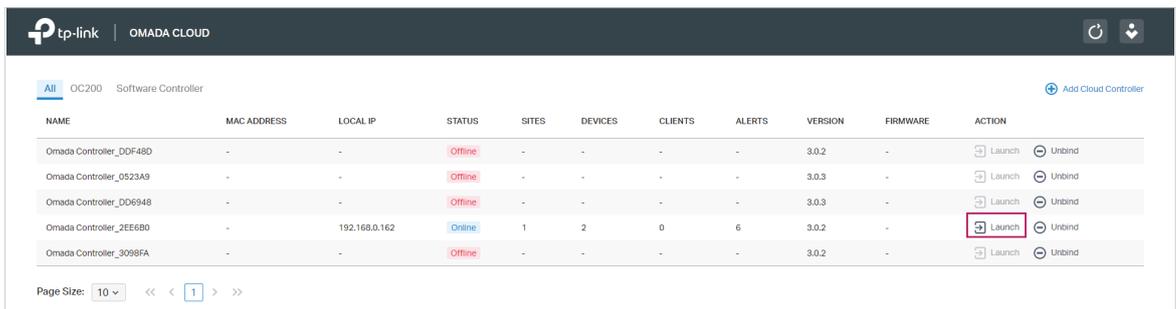

The screenshot shows the Omada Cloud interface with a table of controllers. The table has columns for NAME, MAC ADDRESS, LOCAL IP, STATUS, SITES, DEVICES, CLIENTS, ALERTS, VERSION, FIRMWARE, and ACTION. The controller "Omada Controller\_2EE6B0" is highlighted with a red box around its "Launch" button.

NAME	MAC ADDRESS	LOCAL IP	STATUS	SITES	DEVICES	CLIENTS	ALERTS	VERSION	FIRMWARE	ACTION
Omada Controller_DDF480	-	-	Offline	-	-	-	-	3.0.2	-	Launch Unbind
Omada Controller_0523A9	-	-	Offline	-	-	-	-	3.0.3	-	Launch Unbind
Omada Controller_DD6948	-	-	Offline	-	-	-	-	3.0.3	-	Launch Unbind
Omada Controller_2EE6B0	-	192.168.0.162	Online	1	2	0	6	3.0.2	-	Launch Unbind
Omada Controller_3098FA	-	-	Offline	-	-	-	-	3.0.2	-	Launch Unbind

Click **Launch** to access your OC200. Then you can configure and manage your OC200.

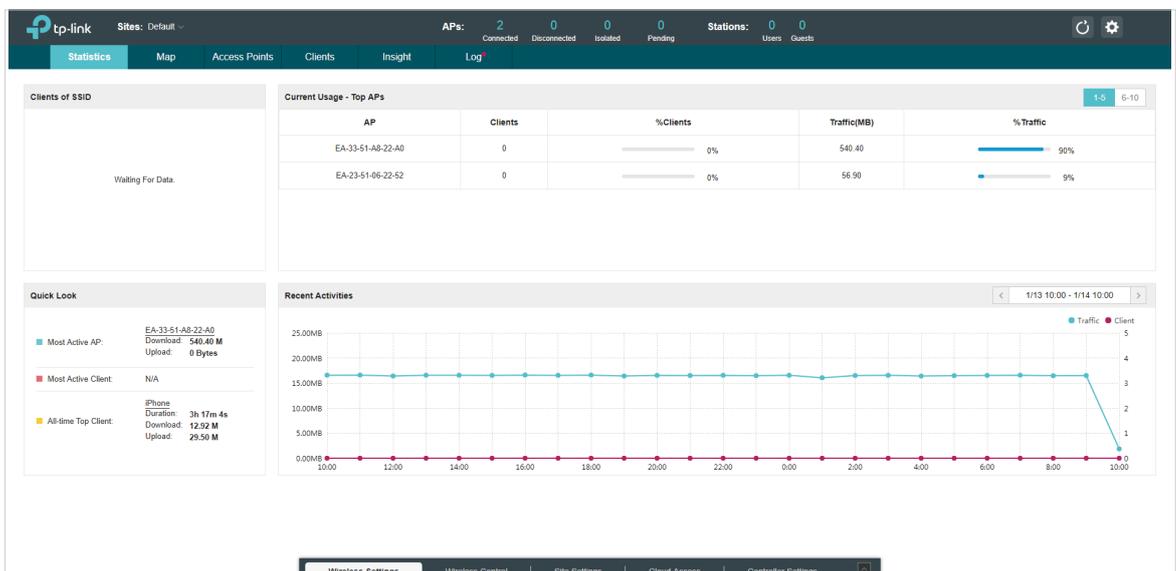


**Note:**

- To remove the OC200 from your cloud account, you can click  Unbind .
- To log out Omada Cloud, click  and select **Log Out**.

## 4.2.2 Change your TP-Link ID information


You can change your TP-Link ID information on the Omada Cloud page. Click  and select **My TP-Link ID**, the cloud accounting settings will appear.

You can have a nickname for your TP-Link ID. Enter your nick name and click **Save**.

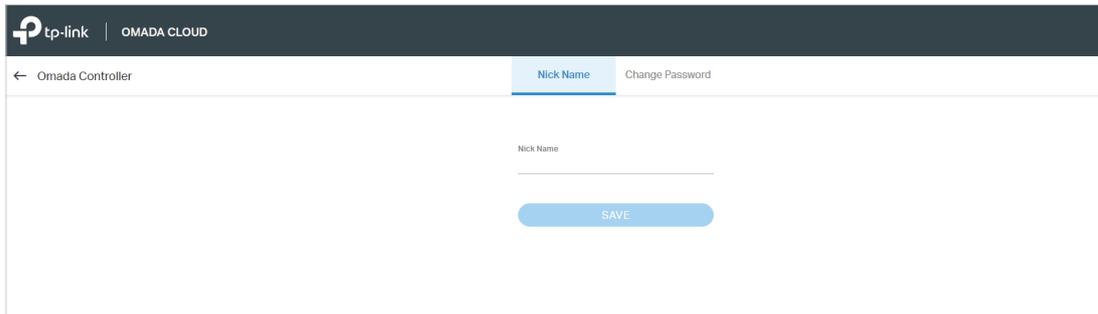

The screenshot shows the Omada Cloud interface. At the top, there is a dark header with the TP-Link logo and 'OMADA CLOUD'. Below the header, there is a navigation bar with a back arrow and 'Omada Controller', and two tabs: 'Nick Name' (which is selected) and 'Change Password'. The main content area contains a single text input field labeled 'Nick Name' and a blue 'SAVE' button centered below it.

You can also change the password of your TP-Link ID. Enter the current password, then a new password twice and click **Save**.

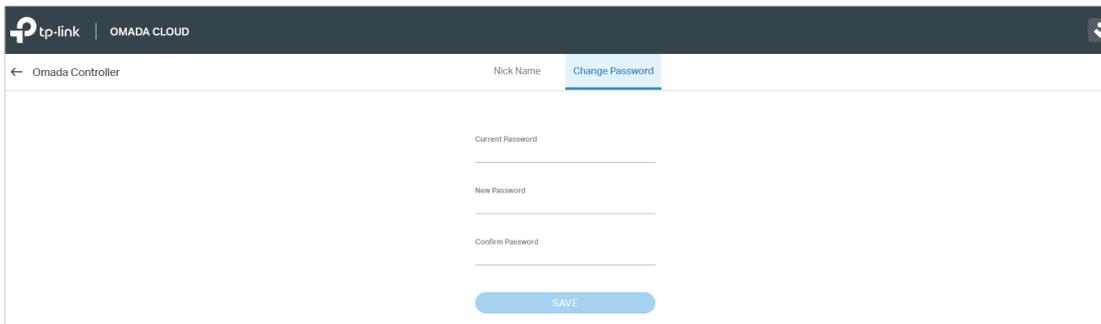

The screenshot shows the Omada Cloud interface. At the top, there is a dark header with the TP-Link logo and 'OMADA CLOUD'. Below the header, there is a navigation bar with a back arrow and 'Omada Controller', and two tabs: 'Nick Name' and 'Change Password' (which is selected). The main content area contains three text input fields labeled 'Current Password', 'New Password', and 'Confirm Password', and a blue 'SAVE' button centered below them.

# 5

## *Configure the EAPs Separately*

In addition to global configuration, you can configure the EAPs separately and the configuration results will be applied to a specified EAP.

To configure a specified EAP, please click the EAP's name on the **Access Points** tab or click  of connected EAP on the map. Then you can view the EAP's detailed information and configure the EAP on the pop-up window.


This chapter includes the following contents:

- View the Information of the EAP
- View Clients Connecting to the EAP
- View Mesh Information of the EAP
- Configure the EAP

# 5.1 View the Information of the EAP

## 5.1.1 Overview

The active channel information on each radio band will be displayed in a bar graph, which indicates its percentages of the following: Rx Frames (blue), Tx Frames (green), Interference (orange), and Free bandwidth (gray). The percentage of channel utilization is also displayed with the corresponding evaluation.

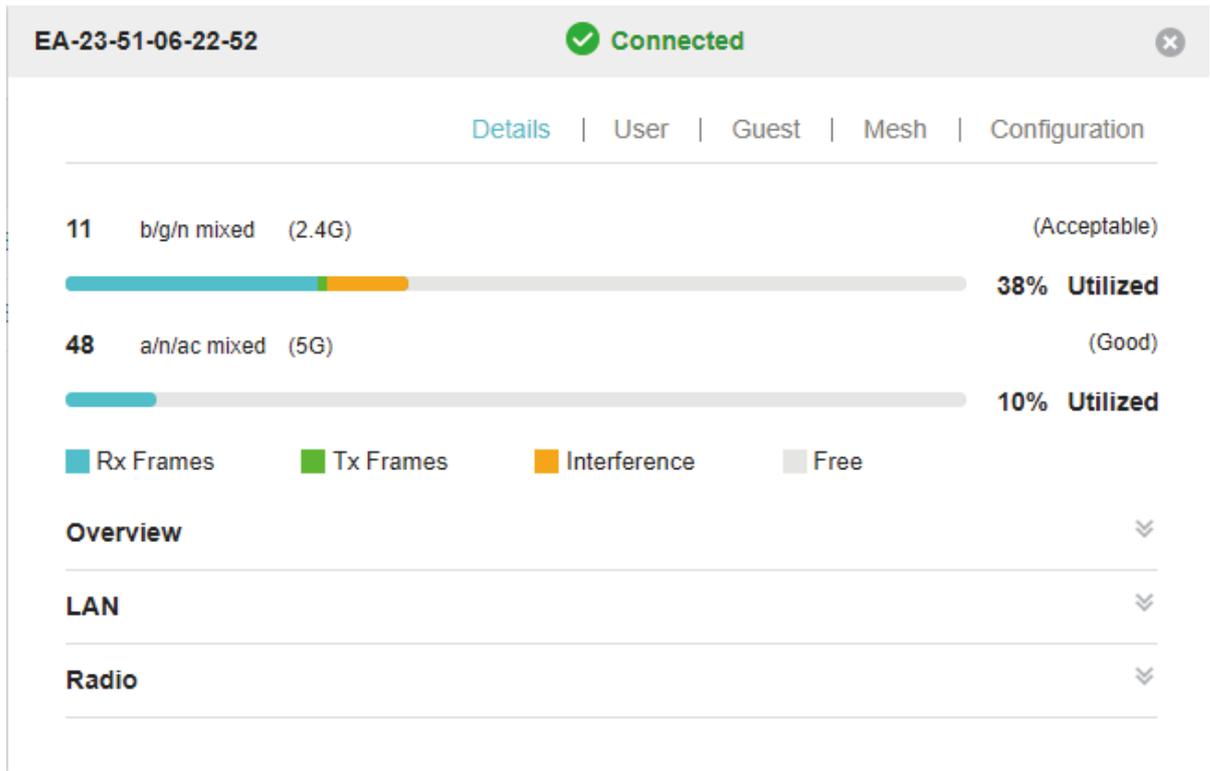

You can click a point on either bar graph for more details:

Tx Pkts/Bytes	5730951 / 1.11 G
Rx Pkts/Bytes	39200052 / 8.72 G
Tx Error/Dropped	0.0% / 0.0%
Rx Error/Dropped	0.0% / 0.0%
Ch.Util.(Busy/Rx/Tx)	38% / 28% / 1%

Tx Pkts/Bytes	Displays the amount of data transmitted as packets and bytes.
Rx Pkts/Bytes	Displays the amount of data received as packets and bytes.

Tx Error/Dropped	Displays the percentage of transmit packets that have errors and the percentage of packets that were dropped.
Rx Error/Dropped	Displays the percentage of receive packets that have errors and the percentage of packets that were dropped.
Ch.Util.(Busy/Rx/Tx)	<p>Displays channel utilization statistics.</p> <p><b>Busy:</b> This number is the sum of Tx, Rx, and also non-WiFi interference, which indicates how busy the channel is.</p> <p><b>Rx:</b> This number indicates how often the radio is in active receive mode.</p> <p><b>Tx:</b> This number indicates how often the radio is in active transmit mode.</p>

## 5.1.2 Basic Information

Click **Overview** to view the basic information of the EAP which includes EAP's MAC address (or name you set), IP address, model, firmware version, the usage rate of CPU and Memory and uptime (indicates how long the EAP has been running without interruption).

EA-23-51-06-22-52
✔ Connected
✕

Details

User | Guest | Mesh | Configuration

<b>11</b>	b/g/n mixed (2.4G)	(Acceptable)
<div style="display: flex; align-items: center;"> <div style="width: 38%; height: 10px; background: linear-gradient(to right, #00a09a, #ffc000);"></div> <div style="margin-left: 10px; text-align: right;"><b>38% Utilized</b></div> </div>		
<b>48</b>	a/n/ac mixed (5G)	(Good)
<div style="display: flex; align-items: center;"> <div style="width: 10%; height: 10px; background-color: #00a09a;"></div> <div style="width: 80%; height: 10px; background-color: #ccc;"></div> <div style="width: 10%; height: 10px; background-color: #00a09a;"></div> </div> <div style="display: flex; justify-content: space-between; margin-top: 5px;"> <span><b>10% Utilized</b></span> </div>		

Rx Frames
 Tx Frames
 Interference
 Free

Overview

⤴

<b>MAC Address:</b>	EA-23-51-06-22-52
<b>IP Address:</b>	10.0.1.70
<b>Model:</b>	EAP225-Outdoor
<b>Firmware Version:</b>	1.5.0 Build 20181129 Rel. 69517
<b>CPU:</b>	0%
<b>Memory:</b>	49%
<b>Uptime:</b>	6 days 01:22:53

**LAN** ⤴

---

**Radio** ⤴

---

### 5.1.3 LAN

Click LAN to view the traffic information of the LAN port, including the total number of packets, the total size of data, the total number of packets loss, and the total size of error data in the process of receiving and transmitting data.

The screenshot displays a network management interface with a grey header bar containing the ID "EA-23-51-06-22-52" and a green "Connected" status with a checkmark icon. Below the header, there are navigation tabs: "Details" (highlighted with a red box), "User", "Guest", "Mesh", and "Configuration".

The main content area shows two radio status entries:

- Radio 11: b/g/n mixed (2.4G), (Acceptable) status. A progress bar shows 35% Utilized. The bar is composed of cyan (Rx Frames), green (Tx Frames), orange (Interference), and grey (Free).
- Radio 48: a/n/ac mixed (5G), (Good) status. A progress bar shows 8% Utilized.

Below the radio status, there is an "Overview" section with a downward arrow. Underneath, the "LAN" tab is highlighted with a red box. This section displays the following statistics:

Rx Packets:	3301213
Rx Bytes:	516.97 M
Rx Drop Packets:	0
Rx Errors:	0 Bytes
Tx Packets:	261708
Tx Bytes:	122.03 M
Tx Drop Packets:	0
Tx Errors:	0 Bytes

At the bottom, there is a "Radio" section with a downward arrow.

## 5.1.4 Radio

Click **Radio** to view the radio information including the frequency band, the wireless mode, the channel width, the channel, and the transmitting power. You can also view parameters of receiving/transmitting data on each radio band.

EA-23-51-06-22-52 ✔ Connected ✕

---

Details | [User](#) | [Guest](#) | [Mesh](#) | [Configuration](#)

---

**11**   b/g/n mixed   (2.4G) (Acceptable)

 **35% Utilized**

**48**   a/n/ac mixed   (5G) (Good)

 **8% Utilized**

■ Rx Frames   ■ Tx Frames   ■ Interference   ■ Free

**Overview** ⌵

---

**LAN** ⌵

---

Radio ⌶

---


2.4GHz 5GHz

<b>Mode:</b>	802.11b/g/n mixed
<b>Channel Width:</b>	20/40MHz
<b>Channel:</b>	11 / 2462MHz
<b>Tx Power:</b>	20
<b>Rx Packets:</b>	45441772
<b>Rx Bytes:</b>	10.28 G
<b>Rx Drop Packets:</b>	0
<b>Rx Errors:</b>	0 Bytes
<b>Tx Packets:</b>	6534936
<b>Tx Bytes:</b>	1.26 G
<b>Tx Drop Packets:</b>	0
<b>Tx Errors:</b>	0 Bytes

## 5.2 View Clients Connecting to the EAP

### 5.2.1 User

The **User** page displays the information of clients connecting to the SSID with Portal disabled, including their MAC addresses and connected SSIDs. You can click the client's MAC address to get its connection history.

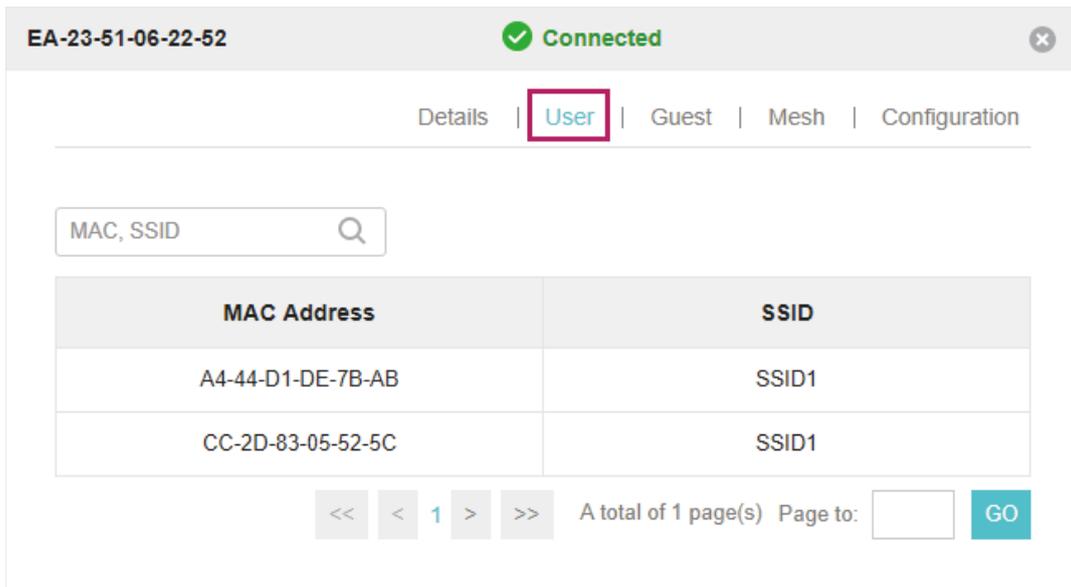


The screenshot shows a management interface window titled "EA-23-51-06-22-52" with a "Connected" status. The navigation menu includes "Details", "User" (highlighted with a red box), "Guest", "Mesh", and "Configuration". Below the menu is a search bar labeled "MAC, SSID". A table displays the following data:

MAC Address	SSID
A4-44-D1-DE-7B-AB	SSID1
CC-2D-83-05-52-5C	SSID1

At the bottom, there are pagination controls: "<< < 1 > >>" and "A total of 1 page(s) Page to: [input] GO".

### 5.2.2 Guest

The **Guest** page displays the information of clients connecting to the SSID with Portal enabled, including their MAC addresses and connected SSIDs. You can click the client's MAC address to get its connection history.

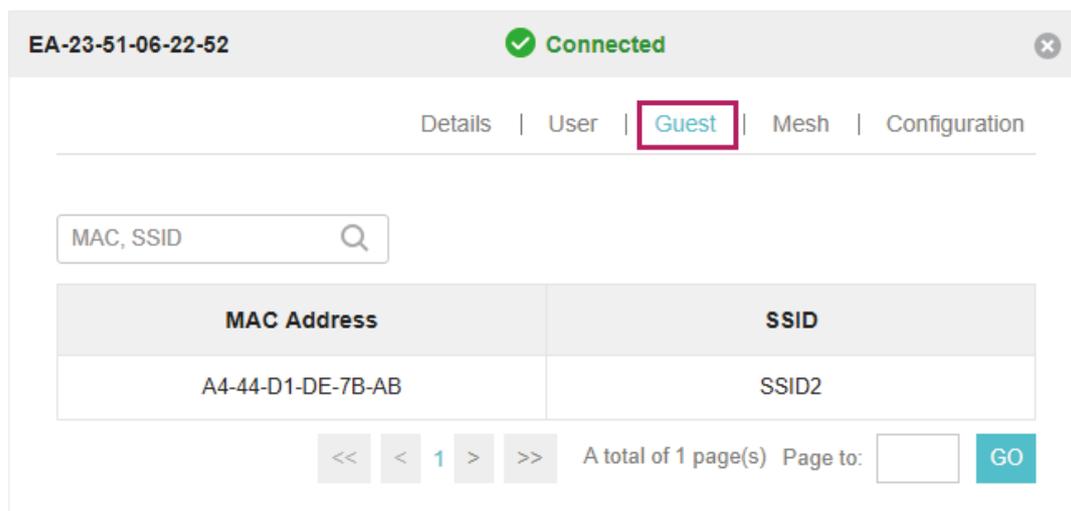

The screenshot shows a management interface window titled "EA-23-51-06-22-52" with a "Connected" status. The navigation menu includes "Details", "User", "Guest" (highlighted with a red box), "Mesh", and "Configuration". Below the menu is a search bar labeled "MAC, SSID". A table displays the following data:

MAC Address	SSID
A4-44-D1-DE-7B-AB	SSID2

At the bottom, there are pagination controls: "<< < 1 > >>" and "A total of 1 page(s) Page to: [input] GO".

## 5.3 View Mesh Information of the EAP

The Mesh page is used to view and configure the mesh parameters of the EAP.

### 5.3.1 Uplinks

Here you can view the parameters of the uplink APs or click [Link](#) to change the uplink AP.

AC-84-C6-02-E0-CE ✔ Connected (Wireless) ✕

Details | User | Guest | **Mesh** | Configuration

---

**Uplinks** ⤴

 Rescan

↕ AP Name	↕ Channel	↕ Signal	↕ Hop	↕ Downlink	Action
EA-23-51-06-22-52	40	-35 dBm	0	2	Linked <span>!</span>
EA-33-51-A8-22-A0	40	-38 dBm	1	0	<a href="#">Link</a>

<< < 1 > >> A total of 1 page(s) Page to:  [GO](#)

**Downlinks** ⤵

#### Tips:

- You can click  Rescan to search the available uplink APs and the Uplink list will refresh.
- To build a mesh network with better performance, we recommend that you select the Uplink AP with the strongest signal, least hop and least Downlink AP.

## 5.3.2 Downlinks

Here you can view the downlink APs.

EA-33-51-A8-22-A0 ✓ Connected (Wireless)

Details | User | Guest | Mesh | Configuration

Uplinks ⌵

Downlinks ⌶

AP Name	Signal
AC-84-C6-02-E0-CE	-52 dBm

<< < 1 > >> A total of 1 page(s) Page to:  GO

## 5.4 Configure the EAP

The Configuration page is used to configure the EAP. All the configurations will only take effect on this device.

EA-23-51-06-22-52 ✓ Connected

Details | User | Guest | Mesh | Configuration

Basic Config ⌶

Name:

Apply

IP Setting ⌵

Radio ⌵

Load Balance ⌵

WLANS ⌵

Rogue AP Detection ⌵

Forget this AP ⌵

## 5.4.1 Basic Config

Here you can change the name of the EAP.




Basic Config

Name:

Apply

## 5.4.2 IP Setting

You can configure an IP address for this EAP. Two options are provided: DHCP and Static.

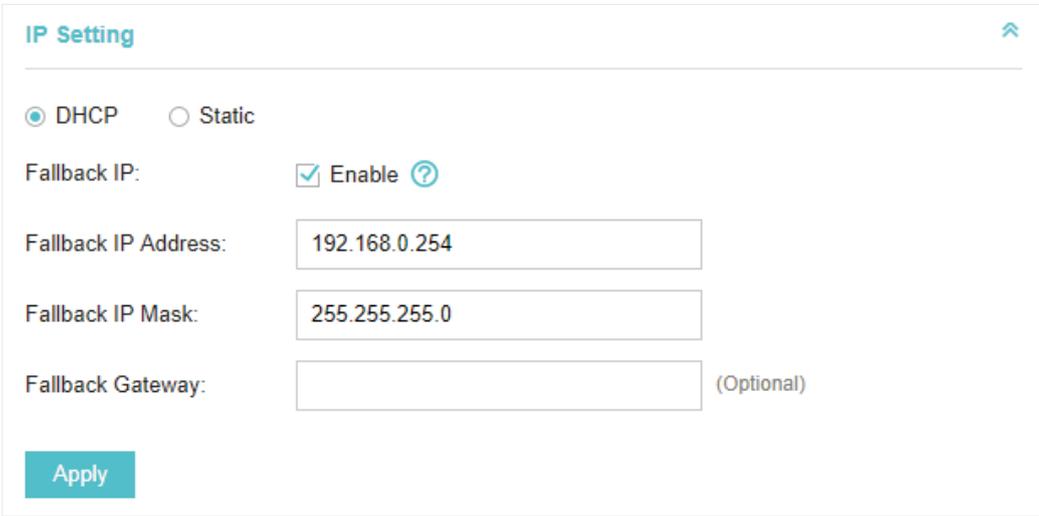

IP Setting

DHCP  Static

Fallback IP:  Enable ?

Fallback IP Address:

Fallback IP Mask:

Fallback Gateway:  (Optional)

Apply

### Get a Dynamic IP Address From the DHCP Server

1. Configure your DHCP server.
2. Select **DHCP** on the page above.
3. Enable the Fallback IP feature. When the device cannot get a dynamic IP address, the fallback IP address will be used.
4. Set IP address, IP mask and gateway for the fallback address and click **Apply**.

### Manually Set a Static IP Address for the EAP

1. Select **Static**.
2. Set the IP address, IP mask and gateway for the static address and click **Apply**.

### 5.4.3 Radio

Radio settings directly control the behavior of the radio in the EAP and its interaction with the physical medium; that is, how and what type of signal the EAP emits.

Select the frequency band (2.4GHz/5GHz) and configure the following parameters.

<b>Status</b>	Enabled by default. If you disable the option, the radio on the frequency band will turn off.
<b>Mode</b>	Select the IEEE 802.11 mode the radio uses.  When the frequency of 2.4GHz is selected, 802.11b/g/n mixed, 802.11b/g mixed, and 802.11n only modes are available:  <b>802.11b/g/n mixed:</b> All of 802.11b, 802.11g, and 802.11n clients operating in the 2.4GHz frequency can connect to the EAP. We recommend that you select the 802.11b/g/n mixed mode.  <b>802.11b/g mixed:</b> Both 802.11b and 802.11g clients can connect to the EAP.  <b>802.11n only:</b> Only 802.11n clients can connect to the EAP.  When the frequency of 5GHz is selected, 802.11 n/ac mixed, 802.11a/n mixed, 802.11 ac only, 802.11a only, and 802.11n only modes are available:  <b>802.11n/ac mixed:</b> Both 802.11n clients and 802.11ac clients operating in the 5GHz frequency can connect to the EAP.  <b>802.11a/n mixed:</b> Both 802.11a clients and 802.11n clients operating in the 5GHz frequency can connect to the EAP.  <b>802.11ac only:</b> Only 802.11ac clients can connect to the EAP.  <b>802.11a only:</b> Only 802.11a clients can connect to the EAP.  <b>802.11n only:</b> Only 802.11n clients can connect to the EAP.

Channel Width	<p>Select the channel width of the EAP. The available options differ among different EAPs.</p> <p>For some EAPs, available options include <b>20MHz</b>, <b>40MHz</b> and <b>20/40MHz</b>.</p> <p>For other EAPs, available options include <b>20MHz</b>, <b>40MHz</b>, <b>80MHz</b> and <b>20/40/80MHz</b>.</p> <p>The 20/40 MHz and 20/40/80MHz channels enable higher data rates but leave fewer channels available for use by other 2.4GHz and 5GHz devices. When the radio mode includes 802.11n, we recommend that you set the channel bandwidth to 20/40 MHz or 20/40/80MHz to improve the transmission speed.</p>
Channel	<p>Select the channel used by the EAP to improve wireless performance. The range of available channels is determined by the radio mode and the country setting. If you select Auto for the channel setting, the EAP scans available channels and selects a channel where the least amount of traffic is detected.</p>
Tx Power (EIRP)	<p>Select the Tx Power (Transmit Power) in the 4 options: <b>Low</b>, <b>Medium</b>, <b>High</b> and <b>Custom</b>. Low, Medium and High are based on the Min. Txpower (Minimum transmit power) and Max. TxPower (Maximum transmit power. It may vary among different countries and regions).</p> <p><b>Low:</b> <math>\text{Min. TxPower} + (\text{Max. TxPower} - \text{Min. TxPower}) * 20\%</math> (round off the value)</p> <p><b>Medium:</b> <math>\text{Min. TxPower} + (\text{Max. TxPower} - \text{Min. TxPower}) * 60\%</math> (round off the value)</p> <p><b>High:</b> Max. TxPower</p> <p><b>Custom:</b> Enter a value manually.</p>

## 5.4.4 Load Balance

By setting the maximum number of clients accessing the EAPs, Load Balance helps to achieve rational use of network resources.

**Load Balance** ⤴

---

2.4GHz
5GHz

Max Associated Clients:  Enable

(1-99)

RSSI Threshold:  Enable ?

(-95-0 dBm)

Apply

Select the frequency band (2.4GHz/5GHz) and configure the parameters.

<b>Max Associated Clients</b>	Enable this function and specify the maximum number of connected clients. While more clients requesting to connect, the EAP will disconnect those with weaker signals.
<b>RSSI Threshold</b>	Enable this function and enter the threshold of <b>RSSI</b> (Received Signal Strength Indication). When the clients' signal is weaker than the <b>RSSI Threshold</b> you've set, the clients will be disconnected from the EAP.

## 5.4.5 WLANs

You can specify a different SSID name and password to override the previous SSID. After that, clients can only see the new SSID and use the new password to access the network. Follow the steps below to override the SSID.

**WLANs**

WLAN Group: Default

Name	Band	Overrides	Action
SSID1	2.4GHz, 5GHz		
SSID2	2.4GHz		

1. Select the WLAN group.
2. Click and the following window will pop up.

**SSID Override(SSID1)**

Enable:  Enable On AP

VLAN:  Use VLAN ID  (1-4094)

SSID:

PSK:  (WPA-PSK)

**Apply**

3. Check the box to enable the feature.
4. You can join the overridden SSID in to a VLAN. Check the **Use VLAN ID** box and specify a VLAN ID.
5. Specify a new name and password for the SSID.
6. Click **Apply** to save the configuration.

## 5.4.6 LED

You can change the LED status of each EAP.

### LED ↑

---

Use Site Setting     On     Off

Using Site Setting	The LED status will be the same as the site settings.
On	Turn on the LED.
Off	Turn off the LED.

## 5.4.7 Trunk Settings (Only for EAP330)

The trunk function can bundles multiple Ethernet links into a logical link to increase bandwidth and improve network reliability.

### Trunk Settings ↑

---


Status:  Enable

Mode:

Status	Enable this function.  The EAP330 has two 1000Mbps Ethernet ports. If the Trunk function is enabled and the ports are in the speed of 1000Mbps Full Duplex, the whole bandwidth of the trunk link is up to 4Gbps (2000Mbps * 2).
Mode	Select the applied mode of Trunk Arithmetic from the drop-down list.  <b>MAC_DA + MAC_SA:</b> When this option is selected, the arithmetic will be based on the source and destination MAC addresses of the packets.  <b>MAC_DA:</b> When this option is selected, the arithmetic will be based on the destination MAC addresses of the packets.  <b>MAC_SA:</b> When this option is selected, the arithmetic will be based on the source MAC addresses of the packets.

## 5.4.8 Rogue AP Detection

With this option enabled, the EAP will detect rogue APs in all channels. You can view the results in **Insight > Untrusted Rogue APs** page.

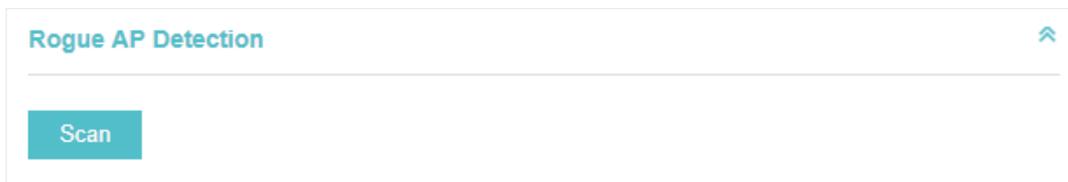

Rogue AP Detection 


Scan

### Note:

For some specific versions of the firmware, some EAPs will detect rogue APs automatically when this option is enabled.

## 5.4.9 Local LAN Port Settings (Only for EAP115-Wall and EAP225-Wall)

You can configure the LAN port of the EAP. Here we use EAP225-Wall as an example.

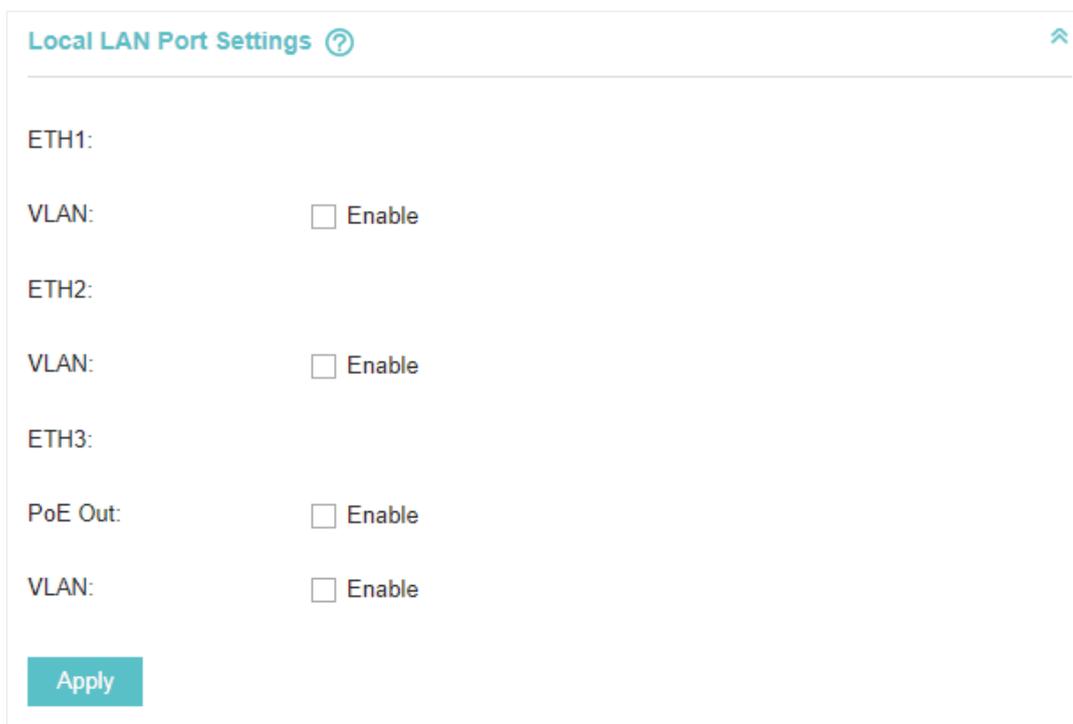

Local LAN Port Settings 

ETH1:

VLAN:  Enable

ETH2:

VLAN:  Enable

ETH3:

PoE Out:  Enable

VLAN:  Enable

Apply

---

### VLAN

Enable this feature and specify the VLAN that the EAP is added to, and then the hosts connected to this EAP can only communicate with the devices in this VLAN. The valid values are from 1 to 4094, and the default is 1.

---

### PoE Out

If your EAP has PoE OUT port, you can enable this option to supply power to the connected device on this port.

The EAP that has no PoE OUT port does not support this feature.

---

## 5.4.10 Forget this AP

If you no longer want to manage this EAP, you may remove it. All the configurations and history about this EAP will be deleted. It is recommended to back up the configurations of this EAP before you forget it.

**Forget this AP** ⤴

---

If you no longer wish to manage this AP, you may remove it. Note that all configurations and history with respect to this AP will be lost.

[Forget](#)

# 6

## *Manage the OC200*

This chapter mainly introduces how to manage the user account and configure system settings. This chapter includes the following contents.

- Status
- User Account
- General Setting
- History Data Retention
- Backup&Restore
- Auto Backup
- Maintenance

## 6.1 Status

The Status page displays the basic information of the OC200.

Wireless Settings | Wireless Control | Site Settings | Cloud Access | **Controller Settings**

**Status** | User Account | General Settings | History Data Retention | Backup&Restore | Auto Backup | Maintenance | Migrate

**Status**

Controller Name: OC200\_3.1.13

MAC Address: AC-84-C6-AE-20-DC      Model: OC200 1.0

System Time: June 03, 2019 06:45:40      Firmware Version: 1.1.1 Build 20190419 Rel.43063

Uptime: 0 day, 4h 0m 44s      Controller Version: 3.1.13

**Storage**

Disk

2.29 GB free of 3.01 GB

Copyright © 2013-2019 TP-Link Technologies Co., Ltd.

**Status**      Displays the basic information of the OC200.

**Storage**      Displays the storage of the OC200 and the external USB storage device.

Tips: The external USB storage device will appear here after you have plugged it into the USB port. The USB storage device can be used for backing up data automatically. Note that this function is only available when OC200 is powered by a PoE device.

## 6.2 User Account

You can use different user account to log in to the OC200. User has three roles: administrator, operator and observer. The administration authority varies among different roles.


**Administrator**      The first administrator account is created in the Basic Configuration process and this account can not be deleted. An administrator can change the settings of the EAP network and create and delete user accounts.

**Operator**      An operator account can be created or deleted by the administrator. The operator can change the settings of the EAP network.

**Observer**      An observer account can be created or deleted by the administrator. The observer can only view the status and settings of the EAP network but not change the settings.

Follow the steps below to add user account.

1. Go to **Controller Settings > User Account**.

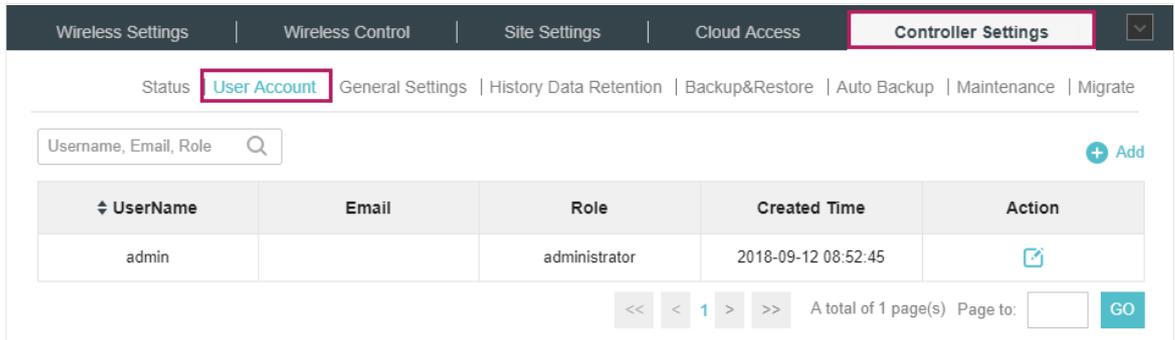

2. Click **+ Add** and the following window will pop up.

The 'Add User' dialog box contains the following fields:

- UserName:
- Email:  (Optional)
- Role:  (with a help icon)
- Password:  (with a clear icon)
- Confirm Password:  (with a clear icon)
- Site Privileges:

An 'Apply' button is located at the bottom left of the dialog.

3. Specify the username, Email and password of the account.

4. Select the role from the drop-down list.

- If you select **operator** or **observer**, you also need to select the **Site Privileges**.
- If you select **administrator**, the **Site Privileges** option will not appear and all sites are available for the administrator user.

5. Click **Apply** to add the user account.

**Note:**

- You can refer to the **Role** page to view the user role's type, description information, permission scope and created time.
- The user account cannot be used to log in to the OC200 through Omada Cloud Service. To access the OC200 via Cloud Access, you should be a cloud user. To add a cloud user, refer to [Manage the Cloud Users](#).

## 6.3 General Setting

Go to **Controller Settings > General Setting** page and configure the basic settings of OC200.

### 6.3.1 Configure Basic Settings

The screenshot shows the 'General Settings' page under 'Controller Settings'. The 'Basic Settings' section includes the following fields:

- Controller Name: OC200\_AE20DC
- Time Zone: (UTC) Coordinated Universal Time
- NTP Server I: 0.0.0.0
- NTP Server II: 0.0.0.0
- Reset Button:  (with a help icon)

An 'Apply' button is located at the bottom left of the settings panel.

Controller Name	Specify a name for the OC200.
Time Zone	Specify the time zone for OC200.
NTP Server I	Specify the primary NTP server for the OC200.
NTP Server II	Specify the secondary NTP server for the OC200.
Reset Button	With this option enabled, the OC200 can be reset via its hardware reset button; otherwise can only be reset in the Maintenance page.

#### Note:

Only local logged-in users can configure Time Zone, NTP Server I, NTP Server II and Reset Button.

### 6.3.2 Configure Network Settings

Choose the way for the OC200 to get IP settings. By default, it is DHCP.

#### ■ Choose the Configuration Mode as DHCP

The screenshot shows the 'Network Settings' page. The 'Configuration Mode' is set to DHCP. The 'Fallback IP Address' is 192.168.0.253 and the 'Fallback Netmask' is 255.255.255.0. An 'Apply' button is located at the bottom left of the settings panel.

Configuration Mode	Choose the configuration mode as DHCP
Fallback IP Address	Specify the fallback IP address for the OC200. The fallback is used when the OC200 failed to get an IP address from the DHCP server.
Fallback Netmask	Specify the mask of the fallback IP address.

■ **Choose the Configuration Mode as Static**

**Network Settings**

---

Configuration Mode:     Static     DHCP

IP Address:           

Netmask:             

Gateway:            

Primary DNS:        

Secondary DNS:       (Optional)

Configuration Mode	Choose the configuration mode as Static.
IP Address	Enter an IP address for the OC200.
Netmask	Enter the mask of the IP address.
Gateway	Enter the IP address of the default gateway for the OC200.
Primary DNS	Enter the IP address of the Primary DNS server.
Secondary DNS	(Optional) Enter the IP address of the Secondary DNS server.

### 6.3.3 Configure Mail Server

With the Mail Server, you can reset the login password of the user account if necessary. An email with the link of resetting password will be sent from the OC200. It is different from the SMTP Server, which is just for the system log emails sending.

Follow the steps below to configure mail server.

1. Go to **Controller Settings > General Setting** and click **Mail Server**.

**Mail Server** ⓘ

Controller Hostname/IP:

Enable SMTP Server

**Apply**

2. Enter the hostname or IP address of the OC200. The default IP address of the OC200 is **127.0.0.1**. You can keep it or customize the hostname or IP address which can be visited by the management host.

When the email with the link of resetting password are sent out, the OC200 or IP address will be specified in the Controller URL in every message.

3. Check the box to enable **SMTP Server**, and then the following screen will appear.

**Mail Server** ⓘ

Controller Hostname/IP:

Enable SMTP Server

Mail Server:

Port:

Enable SSL

Enable Auth

Username:

Password:

Specify Sender Address:

**Apply**

4. Configure the following parameters.

<b>Mail Server</b>	Enter the IP address or domain of SMTP Server.
<b>Port</b>	The SMTP server uses port 25 as default. You can enable SSL (Security Socket Layer) to enhance secure communications over the Internet. If SSL is enabled, the port number will automatically change to 465.
<b>Enable Auth</b>	Check the box to enable authentication (Optional).
<b>Username/Password</b>	If you enable authentication, enter the username and password required by the mail server.
<b>Specify Sender Address</b>	Specify the sender's mail address. Enter the email address that will appear as the sender for resetting password.

5. Click **Apply** to save the configuration.

**Note:**


Specify the account email address based on the Mail server to receive the email for resetting password.

## 6.4 History Data Retention

History Data Retention allows users to determine the retention of logs and client statistics. The logs and client statistics beyond the specified number of days will be cleared. For example, with **7 days** selected, only the logs and client statistics in recent 7 days will be retained, and the data beyond 7 days will be cleared from the OC200.

Follow the steps below to configure Historical Data Retention:

1. Go to **Controller Settings > History Data Retention**.

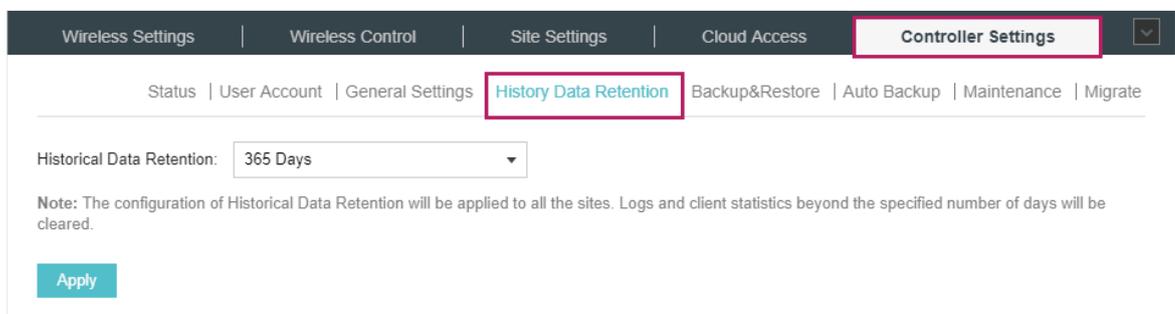

2. Select the length of time in days that data will be retained from the drop-down list. Seven options are provided: **7 days**, **30 days**, **60 days**, **90 days**, **180 days**, and **365 days**.

3. Click **Apply**.

## 6.5 Backup&Restore

You can save the current configurations and data in the OC200 as a backup file and if necessary, restore the configurations using the backup file. We recommend that you back up the settings before upgrading the device. This function is available only for local logged-in users.

Follow the steps below to back up and restore the configurations.

1. Go to **Controller Settings > Backup&Restore**.

2. Select the length of time in days that data will be backed up in the **Retained Data Backup** drop-down list. For example, with **7days** selected, the data only in recent 7days will be backed up.

Wireless Settings | Wireless Control | Site Settings | Cloud Access | **Controller Settings**

Status | User Account | General Settings | History Data Retention | **Backup&Restore** | Auto Backup | Maintenance | Migrate

Retained Data Backup:

Note: Retained Data Backup has been set as Settings Only, no data will be backed up.

---

Restore File:

Note: 1. The configurations in all the sites will be backed up or restored.  
2. The statistics of 100 EAP devices at most and other limited data can be restored to the OC200. The statistics beyond the limit will be discarded.

3. Click **Backup** to save the backup file.

4. If necessary, click **Browse** to locate and choose the backup file. Then click Restore to restore the configurations.

You can import the configuration files from the Omada Software Controller into the OC200 by using the Restore function. Note that some parameters will be changed and you need to configure again. For more detailed information, refer to the article: [How to restore the configuration files from Omada Software Controller into OC200?](#)

**Note:**

- If you do not want to back up historical data, you can select **Settings only** to get only the settings saved in the backup files.
- If you do not want to back up data manually, you can enable the **Auto Backup** function. Please refer to [Auto Backup](#).
- When you restore the backup files whose **Auto Backup** function is enabled, you need to configure **Auto Backup** again. Please refer to [Auto Backup](#).

## 6.6 Auto Backup

With Auto Backup enabled, the OC200 settings will be scheduled to back up the configuration and data automatically at the specified time.

Follow the steps below to configure Auto Backup function.

1. Go to **Controller Settings > Auto Backup**.

Wireless Settings | Wireless Control | Site Settings | Cloud Access | **Controller Settings**

Status | User Account | General Settings | History Data Retention | Backup&Restore | **Auto Backup** | Maintenance | Migrate

Auto Backup:  Enable [?](#)

Occurrence:

Backup Time:  :

Retained Data Backup:

Note: Historical Data Retention has been set as Settings Only, no data will be retained.

Maximum Number of Files:  (1-50)

Saving Path:

[Apply](#)

[Backup Files List](#)

File Name	Backup Time	Size	Action
No Entries.			

2. Check the box to enable Auto Backup function.
  3. Select how often to perform Auto Backup in the **Occurrence**. You can choose **Daily**, **Weekly**, **Monthly** or **Yearly** from drop-down list. Then set an appropriate time to back up files in the **Backup Time**.
- Note:** When you choose the Occurrence as Monthly, please carefully choose the backup date in Backup Time. For example, if you choose to automatically backup the data on the 31th day of every month. When it comes to June, which is only 30 days long, the auto backup will not take effect
4. Select the length of time in days that data will be backed up in the **Retained Data Backup**. For example, with **7days** selected, the data only in recent 7days will be backed up.
  5. Specify the maximum number of backup files to save in the **Maximum Number of Files**. The default is 7.
  6. Select the saving path for the data. Choose the external USB storage device.

You can view the name, backup time and size of the backup files in the **Backup Files List**.

Wireless Settings | Wireless Control | Site Settings | Cloud Access | **Controller Settings**

Status | User Account | General Settings | History Data Retention | Backup&Restore | **Auto Backup** | Maintenance | Migrate

Auto Backup:  Enable ⓘ

Occurrence:

Backup Time:  :

Retained Data Backup:

Note: Historical Data Retention has been set as Settings Only, no data will be retained.

Maximum Number of Files:  (1-50)

Saving Path:

**Backup Files List**

File Name	Backup Time	Size	Action
autobackup_7days_20180821_1630.cfg	08/21/2018 16:30	3 KB	  

<< < 1 > >> A total of 1 page(s) Page to:

You can execute the corresponding operation to the backup files by clicking an icon in the Action column.



Restore the data and configurations in the backup file.



Download the backup file.



Delete the backup file.


**Note:**

- To back up data manually and restore the data to the OC200, configure **Backup&Restore** function. Please refer to [Backup&Restore](#).
- If you do not want to back up historical data, you can select **Settings only** to get only the settings saved in the backup files.
- The auto backup files will be stored in the external USB storage device. This function is only available when OC200 is powered by a PoE device.

## 6.7 Maintenance

On the **Controller Settings > Maintenance** page, you can reboot, rest or upgrade the firmware of the OC200.

When you launch the OC200 via Cloud Access, you can check the firmware and upgrade it online. When you launch the OC200 locally, you can upgrade it online, or manually select a firmware to upgrade it.

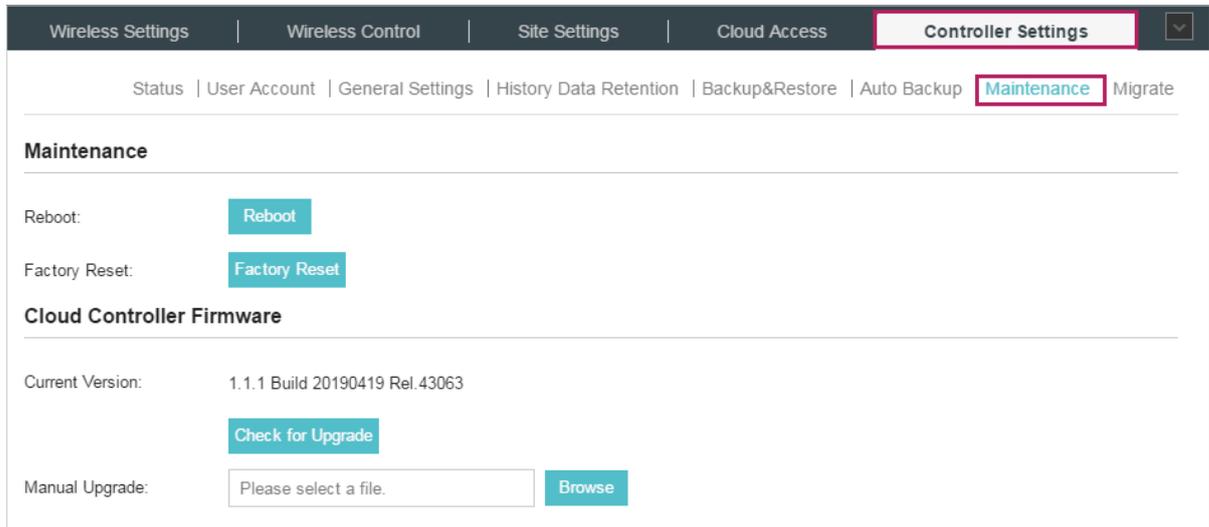

## 6.8 Migrate

Migrate function allows users to migrate the configurations and data to any other site or OC200.

For Migrating all the configurations and data from the current OC200 to any other OC200, refer to [Controller Migrate](#).

For Migrating the configurations and data from the existing site to any other OC200, refer to [Site Migrate](#).

### 6.8.1 Controller Migrate

With Controller Migrate function, you can migrate your configurations and data from the current OC200 to any other OC200 that has the same version.

The process of migrating configurations and data from the current OC200 to any other OC200 can be summarized in three steps: Export Controller, Migrate Controller and Migrate Devices.


Follow the steps below to migrate your OC200.

#### Note:

- The connection to internet will be lost for several minutes during the migration. Clients need to connect the wireless network again after the migration is completed. Please choose the time to start migration operation carefully.
- Exporting Controller and Migrating Controller are available only for local logged-in users.

- Export Controller


1. Go to **Controller Settings > Migrate > Controller Migrate.**

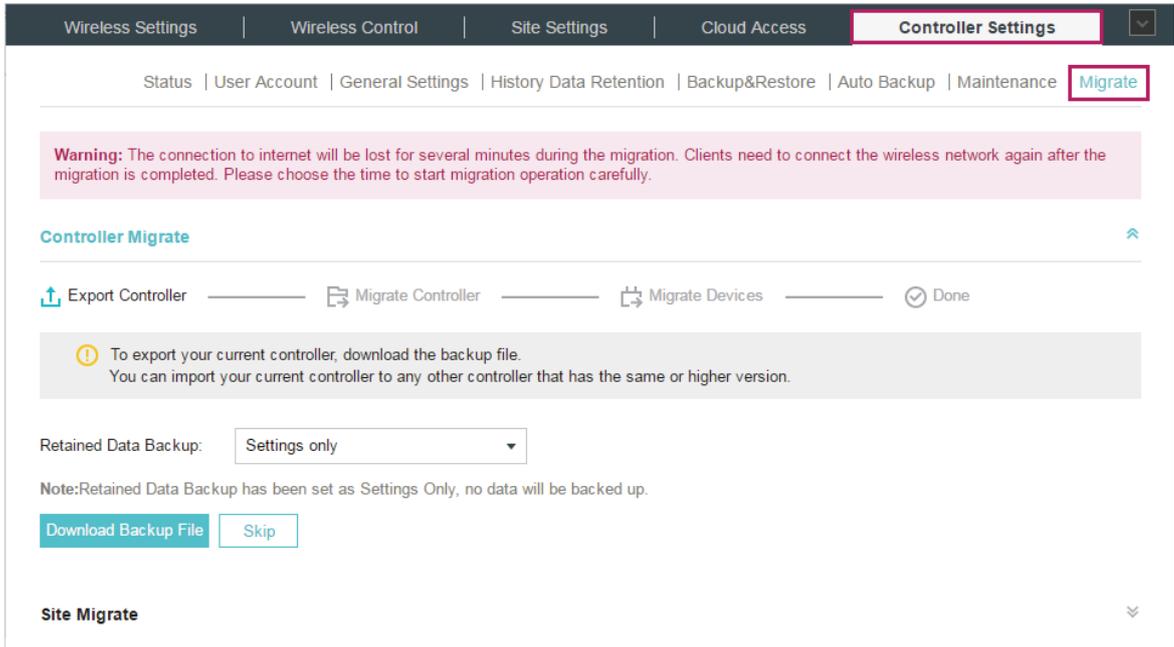

2. Select the length of time in days that data to be imported into the second controller in the **Retained Data Backup** drop-down list. For example, with **7 days** selected, the data only in recent 7 days will be imported into the second controller.
3. Click **Download Backup File** to download the file of the current controller. If you have backed up the file, click **Skip**.


- Migrate Controller

1. Start and log in to the second OC200, go to **Controller Settings > Backup&Restore > Restore File.**

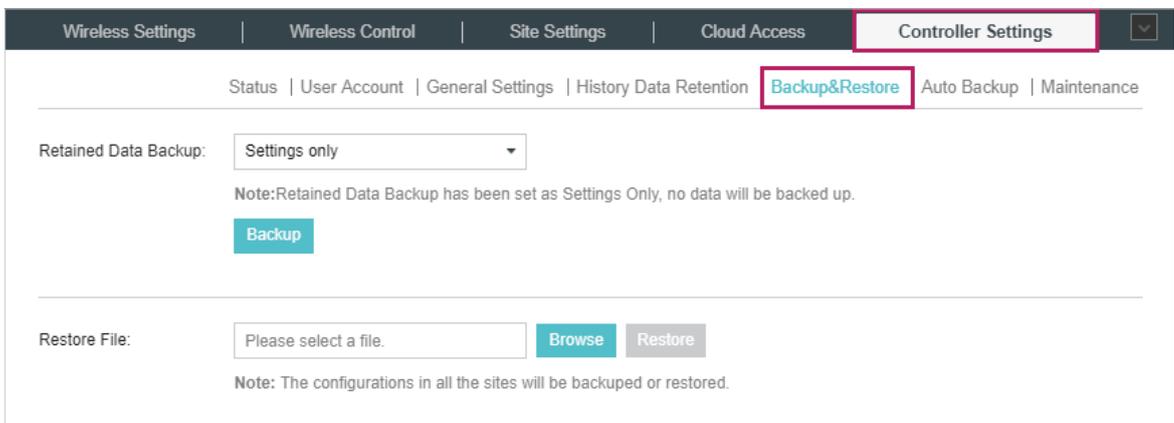


2. Click **Browse** to locate and choose the file of your controller to be imported. Then click **Restore** to upload the file.

3. After the file has been restored to the second controller, go back to the export controller and click **Confirm**.

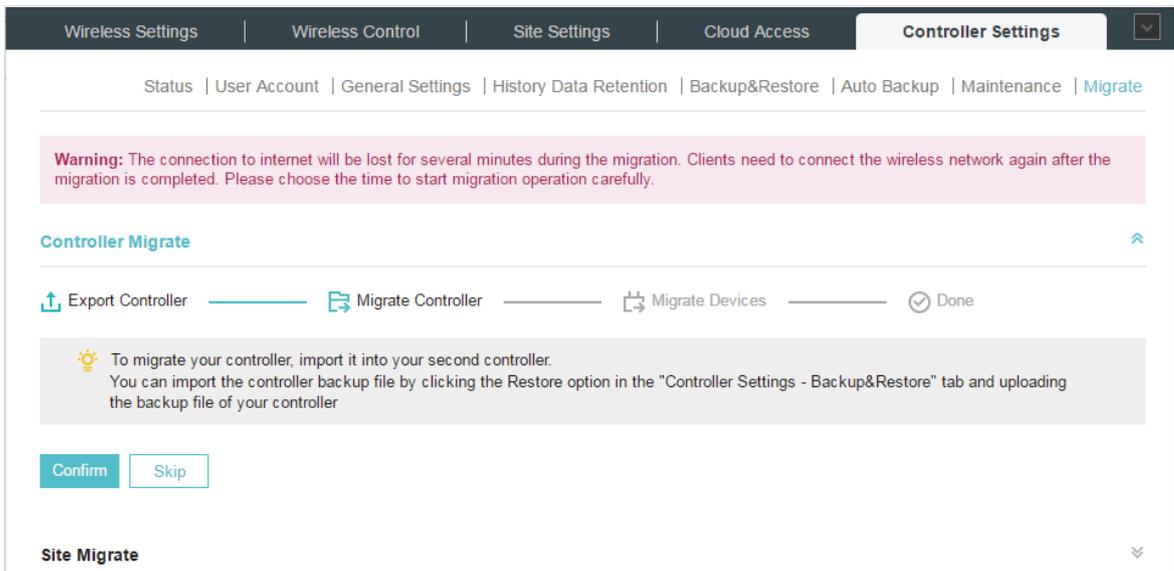

#### ■ Migrate Devices

1. Click **Browse** to locate and choose the file of your controller to be imported. Then click **Restore** to upload the file.
2. Enter the IP address or URL of your second controller into **Controller URL/IP** input field. In this case, the IP address of the second controller is 10.0.3.23.

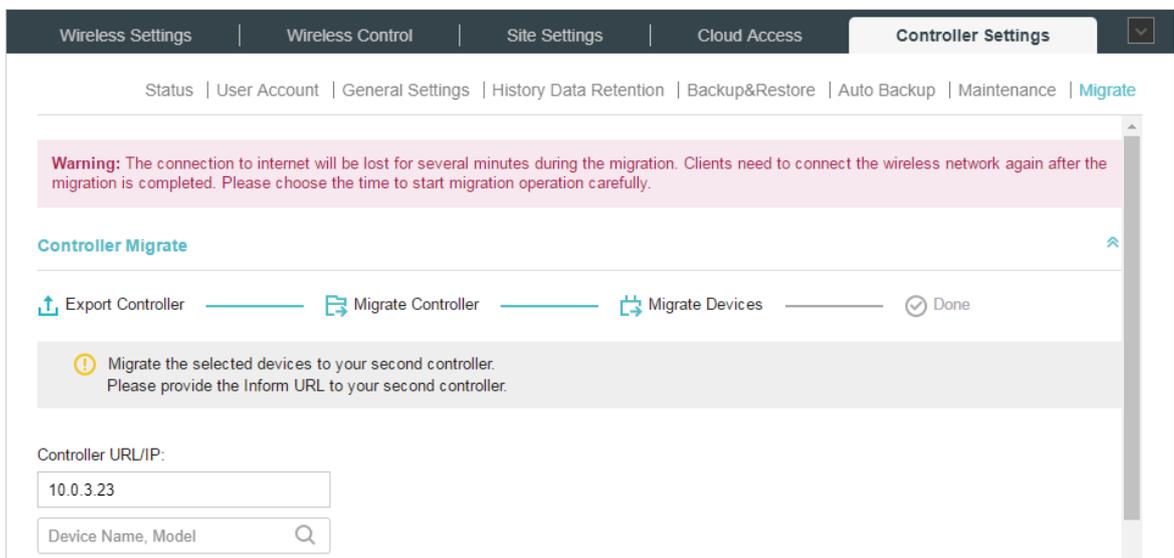

#### **Note:**

Make sure that you enter the correct IP address of the second controller to establish the communication between EAPs and your second controller. Otherwise the EAPs cannot be adopted by the second controller.

3. Select the devices that are to be migrated by clicking the boxes next to each devices. By default, all the devices are selected.

Wireless Settings | Wireless Control | Site Settings | Cloud Access | **Controller Settings**

Status | User Account | General Settings | History Data Retention | Backup&Restore | Auto Backup | Maintenance | [Migrate](#)

**Warning:** The connection to internet will be lost for several minutes during the migration. Clients need to connect the wireless network again after the migration is completed. Please choose the time to start migration operation carefully.

**Controller Migrate**

Export Controller | **Migrate Controller** | Migrate Devices | Done

ⓘ Migrate the selected devices to your second controller. Please provide the Inform URL to your second controller.

Controller URL/IP:

<input checked="" type="checkbox"/>	↕ Device Name	↕ Site	↕ Status	↕ Model	↕ Hardware Version
<input checked="" type="checkbox"/>	EA-33-51-A8-22-A0	Default	Connected	EAP225-Outdoor(EU)	1.0
<input checked="" type="checkbox"/>	EA-23-51-06-22-52	Default	Connected	EAP225-Outdoor(EU)	1.0

Selected 2 of 2 items. << < 1 > >> A total of 1 page(s) Page to:  **GO**

**Migrate Devices**

4. Click **Migrate Devices** to migrate the selected devices to the second controller.
5. Verify that all the migrated devices are visible and connected on the second controller. Note that this may take several minutes. When all the migrated devices are in **Connected** status on the **Access Points** page on the second controller, click **Forget Devices** to finish the migration process.

Wireless Settings | Wireless Control | Site Settings | Cloud Access | **Controller Settings**

Status | User Account | General Settings | History Data Retention | Backup&Restore | Auto Backup | Maintenance | [Migrate](#)


ⓘ To finish the migration process, forget the successfully migrated devices. Please visit the device page in your second controller and check if all of the migrated devices are visible and connected. This process may take several minutes.

<input checked="" type="checkbox"/>	↕ Device Name	↕ Site	↕ Status	↕ Model	↕ Hardware Version
<input checked="" type="checkbox"/>	EA-23-51-06-22-52	Default	Connected	EAP225-Outdoor(EU)	1.0
<input checked="" type="checkbox"/>	EA-33-51-A8-22-A0	Default	Connected	EAP225-Outdoor(EU)	1.0

Selected 2 of 2 items. << < 1 > >> A total of 1 page(s) Page to:  **GO**

**Forget Devices**

When the migration process is completed, all the configuration and data are migrated to the second controller. You can uninstall the previous controller if necessary.

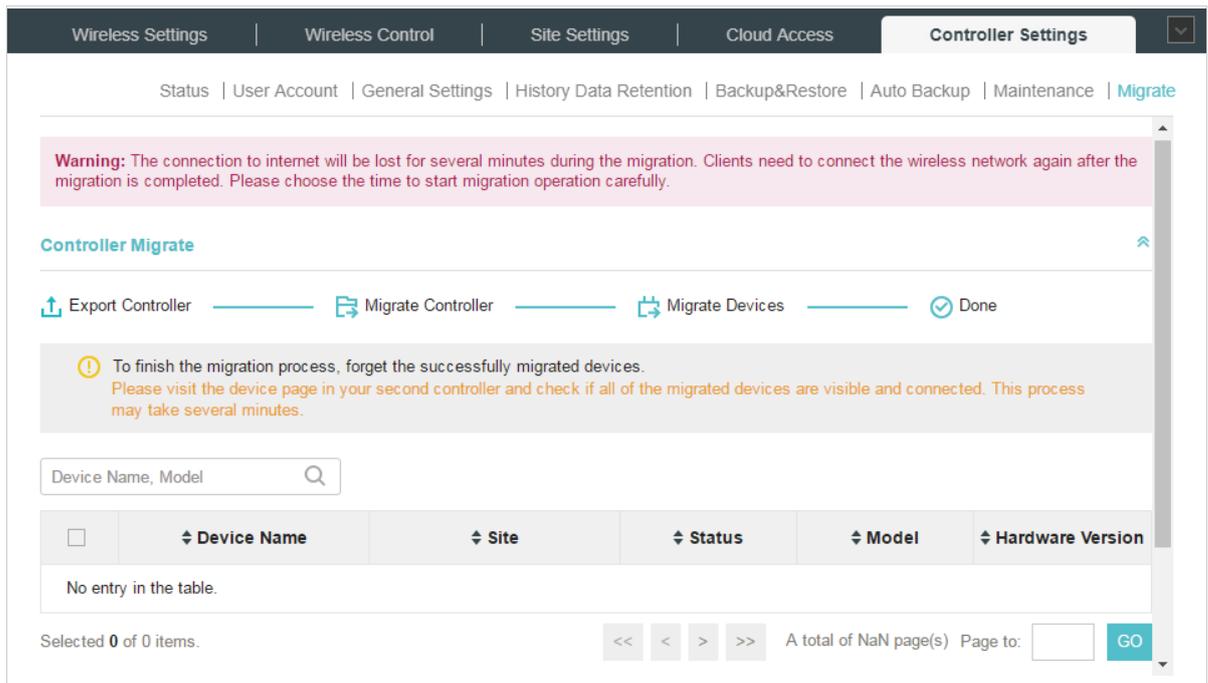

## 6.8.2 Site Migrate

With Site Migrate function, you can migrate your configurations and data of a site to any other controller that has the same version.

The process of migrating configurations and data from a site to another controller can be summarized in three steps: Export Site, Migrate Site and Migrate Devices.


Follow the steps below to migrate a site to another controller.

### Note:

The connection to internet will be lost for several minutes during the migration. Clients need to connect the wireless network again after the migration is completed. Please choose the time to start migration operation carefully.

#### ■ Export Site

1. Go to **Controller Settings > Migrate > Site Migrate**.

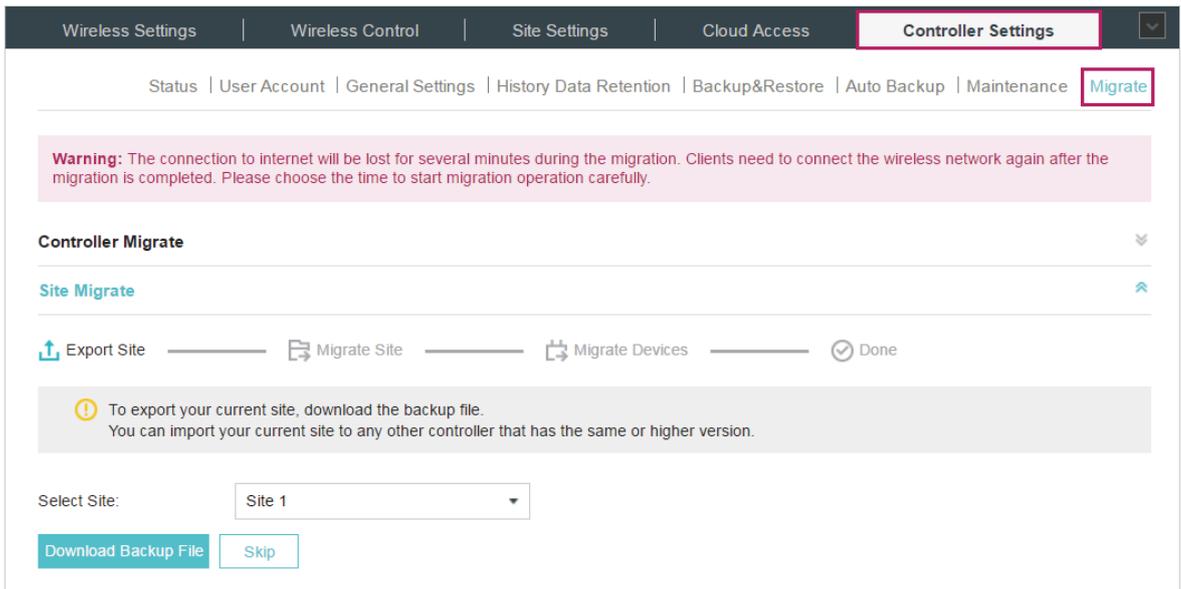

2. Select the site to be imported into the second controller in the **Select Site** drop-down list.
3. Click **Download Backup File** to download the file of the current site. If you have backed up the file, click **Skip**.

■ Migrate Site

1. Start and log in to the second controller, click **Sites: Default** in the top left corner of the page and select **Site Manager**, and then the following window will pop up.



2. Click **Import Site** and enter a unique name for the new site.



3. Click **Browse** to upload the file of the site to be imported and click **Import** to import the site.




**Import Site** [Close]

Site Name:

Choose File:  **Browse** **Import**

4. After the file has been imported to the second controller, go back to the export controller and click **Confirm**.

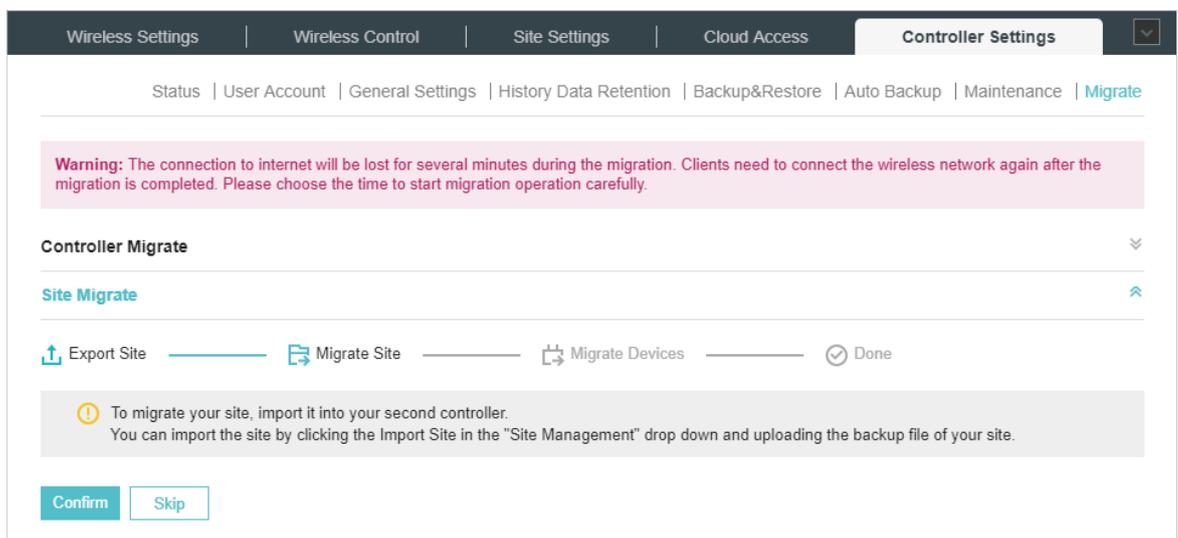

Wireless Settings | Wireless Control | Site Settings | Cloud Access | **Controller Settings**

Status | User Account | General Settings | History Data Retention | Backup&Restore | Auto Backup | Maintenance | [Migrate](#)

**Warning:** The connection to internet will be lost for several minutes during the migration. Clients need to connect the wireless network again after the migration is completed. Please choose the time to start migration operation carefully.

**Controller Migrate** [Dropdown]

**Site Migrate** [Up Arrow]

[Export Site](#) — [Migrate Site](#) — [Migrate Devices](#) — [Done](#)

⚠ To migrate your site, import it into your second controller.  
You can import the site by clicking the Import Site in the "Site Management" drop down and uploading the backup file of your site.

**Confirm** **Skip**

## ■ Migrate Devices

1. Enter the IP address or URL of your second controller into **Controller URL/IP** input field. In this case, the IP address of the second controller is 10.0.3.14.

The screenshot shows the 'Controller Settings' page with the 'Migrate' tab selected. A warning message states: 'Warning: The connection to internet will be lost for several minutes during the migration. Clients need to connect the wireless network again after the migration is completed. Please choose the time to start migration operation carefully.' Below this, the 'Controller Migrate' section is expanded to show 'Site Migrate'. A progress bar indicates the steps: 'Export Site' (completed), 'Migrate Site' (completed), 'Migrate Devices' (in progress), and 'Done' (not started). A note says: 'Migrate the selected devices to your second controller. Please provide the Inform URL to your second controller.' The 'Controller URL/IP' field contains '10.0.3.14'. Below it is a search field for 'Device Name, Model'. At the bottom, a table header is visible with columns: 'Device Name', 'Status', 'Model', and 'Hardware Version'.

### Note:

Make sure that you enter the correct IP address of the second controller to establish the communication between EAPs and your second controller. Otherwise the EAPs cannot be adopted by the second controller.

2. Select the devices that are to be migrated by clicking the boxes next to each devices. By default, all the devices are selected.

Warning: The connection to internet will be lost for several minutes during the migration. Clients need to connect the wireless network again after the migration is completed. Please choose the time to start migration operation carefully.

**Controller Migrate**

**Site Migrate**

Export Site — Migrate Site — Migrate Devices — Done

ⓘ Migrate the selected devices to your second controller. Please provide the Inform URL to your second controller.

Controller URL/IP:

Device Name, Model

<input checked="" type="checkbox"/>	↕ Device Name	↕ Status	↕ Model	↕ Hardware Version
<input checked="" type="checkbox"/>	EA-23-51-06-22-52	Connected	EAP225-Outdoor(EU)	1.0
<input checked="" type="checkbox"/>	EA-33-51-A8-22-A0	Connected	EAP225-Outdoor(EU)	1.0

Selected 2 of 2 items. << < 1 > >> A total of 1 page(s) Page to:  **GO**

3. Click **Migrate Devices** to migrate the selected devices to the second controller.
4. Verify that all the migrated devices are visible and connected on the second controller. Note that this may take several minutes. When all the migrated devices are in **Connected** status on the **Access Points** page on the second controller, click **Forget Devices** to finish the migration process.

Status | User Account | General Settings | History Data Retention | Backup&Restore | Auto Backup | Maintenance | **Migrate**

ⓘ To finish the migration process, forget the successfully migrated devices. Please visit the device page in your second controller and check if all of the migrated devices are visible and connected. This process may take several minutes.

Device Name, Model

<input checked="" type="checkbox"/>	↕ Device Name	↕ Site	↕ Status	↕ Model	↕ Hardware Version
<input checked="" type="checkbox"/>	EA-23-51-06-22-52	Default	Connected	EAP225-Outdoor(EU)	1.0
<input checked="" type="checkbox"/>	EA-33-51-A8-22-A0	Default	Connected	EAP225-Outdoor(EU)	1.0

Selected 2 of 2 items. << < 1 > >> A total of 1 page(s) Page to:  **GO**

**Forget Devices**

When the migration process is completed, all the configuration and data are migrated to the second controller. You can delete the previous site if necessary.

The screenshot shows the 'Controller Settings' page with a navigation menu at the top: Wireless Settings, Wireless Control, Site Settings, Cloud Access, and Controller Settings. Below the menu is a breadcrumb trail: Status | User Account | General Settings | History Data Retention | Backup&Restore | Auto Backup | Maintenance | **Migrate**. A warning message states: 'Warning: The connection to internet will be lost for several minutes during the migration. Clients need to connect the wireless network again after the migration is completed. Please choose the time to start migration operation carefully.' The main section is titled 'Controller Migrate' and includes a 'Site Migrate' link. A progress bar shows four steps: 'Export Site' (completed), 'Migrate Site' (in progress), 'Migrate Devices' (pending), and 'Done' (pending). A note below the progress bar says: 'To finish the migration process, forget the successfully migrated devices. Please visit the device page in your second controller and check if all of the migrated devices are visible and connected. This process may take several minutes.' Below this is a search box for 'Device Name, Model' and a table with columns: Device Name, Status, Model, and Hardware Version. The table currently contains the text 'No entry in the table.'

# 7

## *Application Example*

A factory has a wireless network with three EAPs managed by the OC200. The network administrator wants to :


- Monitor the EAPs with the Map.
- Enable Portal function to drive customers' attention to the ads of the supermarket when customers attempt to access the network. The costumers need to use a simple password to pass the authentication.
- Allow the employees of the restaurant to access the network resources without portal authentication.
- Schedule the radio to operate only during the working time (8:00 am to 22:00 pm) in order to reduce power consumption.

Follow the steps below to achieve the requirements above.

## 7.1 Basic Configurations

Follow the steps below to do the basic configuration.

1. Connect the devices as the following topology shows.

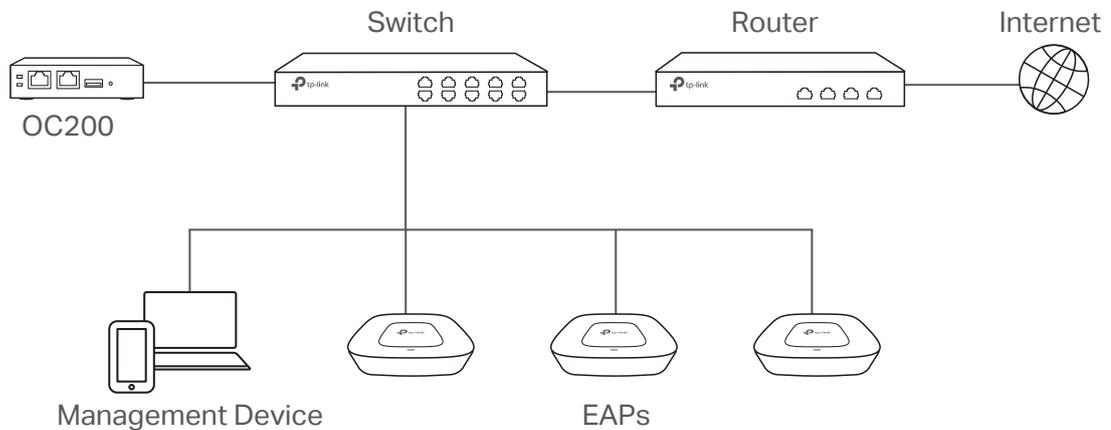

2. Launch the OC200 and follow the instructions to complete some initial configurations.
3. Log into the management interface of OC200.
4. Adopt the pending EAPs.


## 7.2 Advanced Settings

After the basic configuration, refer to the following content to meet the network administrator's requirements.

### 7.2.1 Monitor the EAPs with Map

Follow the steps below to create a map and monitor the EAPs with the map.

1. Go to the **Map**.
2. Import a local map and set the map scale.
3. Drag the EAPs to the appropriate locations on the map.
4. Click **Coverage** and you can see the representation of the EAPs' wireless coverage.

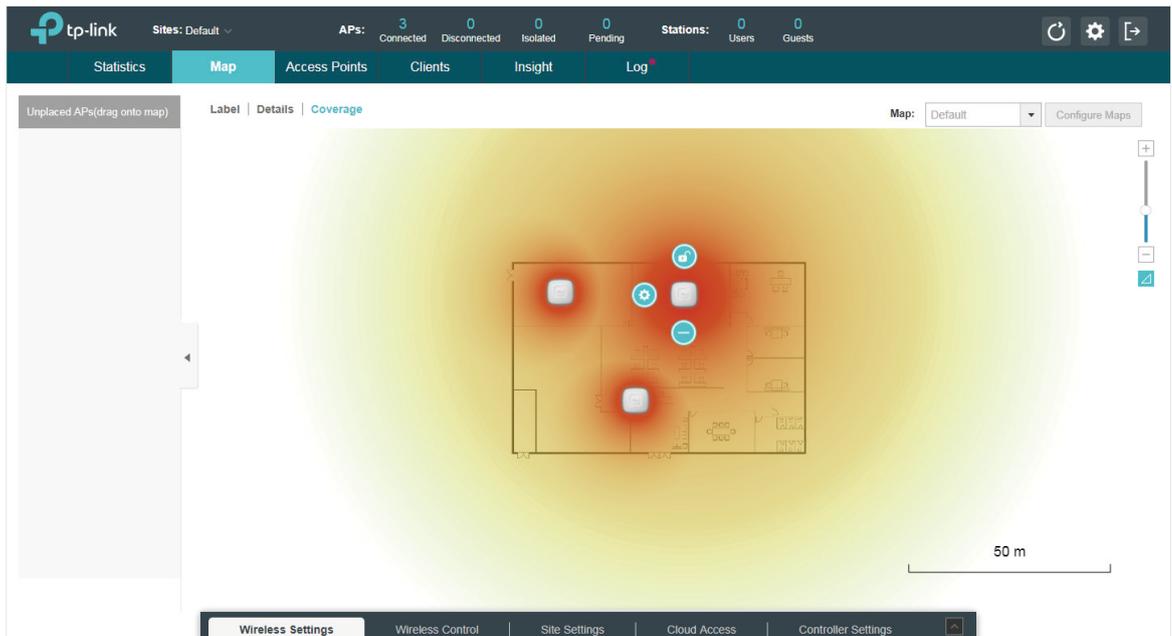

## 7.2.2 Configure Portal Authentication

Follow the steps below to configure Portal function.

1. Go to **Wireless Settings > Basic Wireless Settings** and edit the SSID we created in the basic configuration.

**Edit SSID** ✕

**Basic Info** ⤴

---

SSID Name:

Band:  2.4GHz  5GHz

Guest Network:  Enable ?

Security Mode:  ▼

**Advanced Settings** ⤵

---

Apply

To make it easier for customers to connect, change the Security Mode from WPA-PSK to None. Customers can connect to the EAPs without password and be redirected to the Portal Authentication where the correct password will be required.

2. Open the global configuration window and go to **Wireless Control > Portal**. Click + **Add a New Portal**. The configuration window will pop up.

3. In the **Basic Info** section, complete the basic settings for the portal.

The screenshot shows the 'Add a New Portal' configuration page, specifically the 'Basic Info' section. The settings are as follows:

- Portal Name: Guest
- SSID: SSID1
- Authentication Type: Simple Password
- Password: [Redacted]
- Authentication Timeout: 1 Hour
- HTTPS Redirect:  Enable
- Redirect:  Enable
- Redirect URL: http://www.restaurant.com

1) Specify a name for the portal.

2) Select an SSID for the portal.

3) Select the Authentication Type as Simple Password. Specify a simple password for the guests.

4) Select the **Authentication Timeout**. For example, 1 Hour is suitable for the customers at the restaurant.

5) Enable the **Redirect** to drive the costumers to the restaurant's homepage after successful login. We can put some promotion information on the page.

4. In the **Login Page** section, configure the login page.

The screenshot shows the 'Edit Portal' configuration page, specifically the 'Login Page' section. The settings are as follows:

- Background:  Solid Color  Picture
- Background Color: #b5e3e7 (RGB Value)
- Logo Picture: Choose 5b7e1694478c0f1ba5b95358
- Welcome Information: Welcome to our restaurant (1-31 characters)
- Copyright: Copyright 2018 (1-200 characters)
- Terms of Service:
- Input Box:

The preview shows a mobile phone view of the login page with the following content:

- Header: PC Mobile Phone Tablet PC Restore
- Welcome to our restaurant
- Password input field
- Log In button
- Copyright 2018

5. In the Advertisement section, upload two pictures of the restaurant and set the related parameters.

**Advertisement** ⌵

Advertisement:  Enable

Picture Resource: Upload (1-5)

5b7e2147478c0f1ba5b9535b -

5b7e2150478c0f1ba5b9535e -

Advertisement Duration Time:  seconds (1-30)

Picture Carousel Interval:  seconds (1-10)

Allow Users To Skip Advertisement:  Enable

Apply

6. Click **Apply**.

### 7.2.3 Create a SSID for the Employees

We have created a SSID in the basic configuration for the customers. Here we need to create another SSID for the employees to allow them to access the network without portal authentication. In addition, the new SSID should be invisible for the customers.

Follow the steps below to create a SSID for the employees.

1. Open the global configuration window and go to **Wireless Settings > Basic Wireless Settings**.
2. Click **Add** to add a new SSID.

**Add SSID** ✕

**Basic Info** ⌵

---

SSID Name:

Band:  2.4GHz  5GHz

Guest Network:  Enable ?

Security Mode:  ▾

Wireless Password:  👁

**Advanced Settings** ⌵

---

Apply

Configure the parameters.

- 1) Disable the **SSID Broadcast** to hide this SSID from the customers.


- 2) Specify the **SSID Name**, **Security Mode** and **Wireless Password**. Let the employees manually enter the SSID name and password, and choose the security mode you set to access the network.
- 3) Click **Apply** to save the configuration.

## 7.2.4 Configure Scheduler

Follow the steps below to schedule the radio to operate only during the working time (from 8:00 to 22:00).

1. Open the global configuration window and go to **Wireless Control > Scheduler**.


- 1) Add a profile.

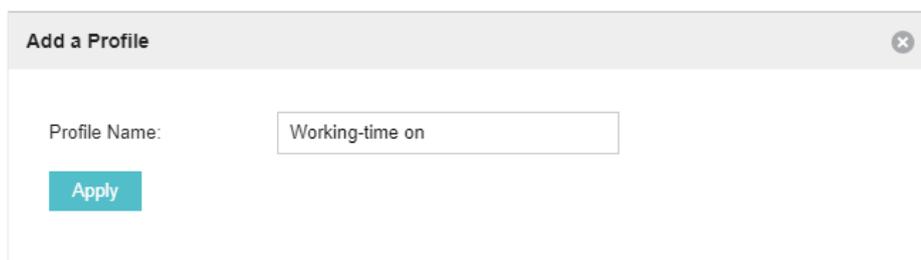

**Add a Profile** ✕

Profile Name:

- 2) Add an item for the profile. The parameters are set as shown on the following screen.

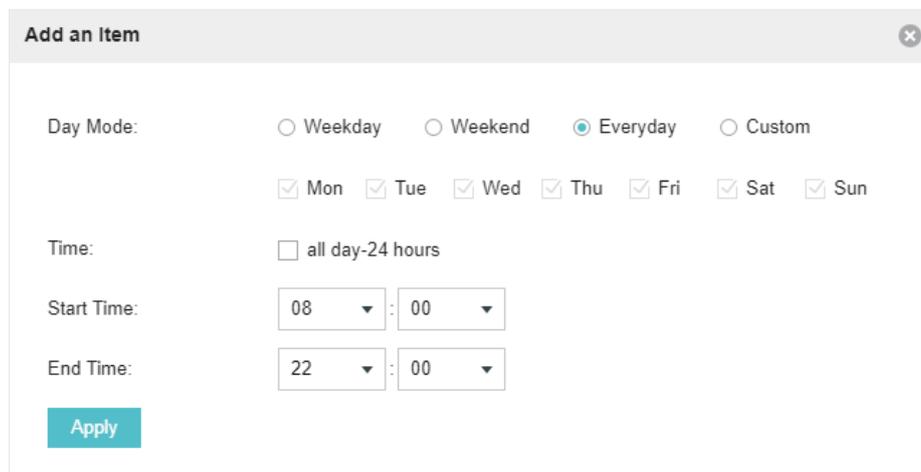

**Add an Item** ✕

Day Mode:  Weekday  Weekend  Everyday  Custom

Mon  Tue  Wed  Thu  Fri  Sat  Sun

Time:  all day-24 hours

Start Time:  :

End Time:  :

## 2. Go to Scheduler Association tab.

The screenshot shows the 'Scheduler Association' configuration page. At the top, there is a navigation bar with tabs: 'Wireless Settings', 'Wireless Control' (highlighted), 'Site Settings', 'Cloud Access', and 'Controller Settings'. Below this is a breadcrumb trail: 'Access Control | Portal | Free Authentication Policy | MAC Filter | MAC Filter Association | Scheduler | Scheduler Association | QoS'. The 'Scheduler Association' tab is highlighted.

Configuration options:

- Scheduler:  Enable
- Association Mode:
- Buttons:
- Band selection:

ID	SSID Name	Band	Profile Name	Action	Setting
1	SSID1	2.4GHz	<input type="text" value="Working-time on"/>	<input type="text" value="Radio On"/>	<input type="button" value="Apply"/>
2	SSID2	2.4GHz	<input type="text" value="Working-time on"/>	<input type="text" value="Radio On"/>	<input type="button" value="Apply"/>

Page navigation: << < 1 > >> A total of 1 page(s) Page to:

- 1) Enable the function and select **Associated with SSID**. Click **Apply**.
- 2) In the **Profile Name** column of both SSIDs, select the profile we just created.
- 3) In the **Action** column of both SSIDs, select **Radio On**.
- 4) Click **Apply** in the **Setting** column of both SSIDs.
- 5) Select **5GHz** and do the same configurations as above.

## **Appendix: Omada App**

Omada app is a mobile application designed for Omada series EAP products. It allows you to conveniently monitor and manage your network. The Omada app can be used for Standalone and Controller modes.

This appendix introduces how to use Omada app to manage your network and includes the following sections:

- [Install Omada App on the Mobile Device](#)
- [Manage your Network in Standalone Mode](#)
- [Manage your Network in Controller Mode](#)

# 1 Install Omada App on the Mobile Device

Omada app runs on iOS and Android devices, such as smart phones and tablets. Launch the Apple App Store (iOS) or Google Play store (Android) and search “TP-Link Omada” or simply scan the QR code to download and install the app.




# 2 Manage your Network in Standalone Mode

For a relatively small-scale network which has a few EAPs (usually less than three) and only basic functions are required, standalone mode is recommended. You can use a mobile device to configure each EAP individually for basic functionality without configuring an OC200 or Omada Software Controller. Note that the EAP which is managed by the OC200 or the Omada Software Controller is inaccessible in standalone mode.

Refer to the topology below, make sure that the following requirements have been met:

- An Ethernet connection from your Omada EAP to the LAN with a DHCP server.
- The supported firmware version of the EAP. EAP245, EAP225, EAP115, EAP110, EAP225-Outdoor, EAP110-Outdoor, EAP115-Wall and EAP225-Wall are currently supported. To check the firmware versions of the supported EAPs, please refer to [www.tp-link.com/omada\\_compatibility\\_list](http://www.tp-link.com/omada_compatibility_list). More products will be supported by Omada app in the near future as firmware updates are released.
- A compatible iOS or Android device with Omada app.

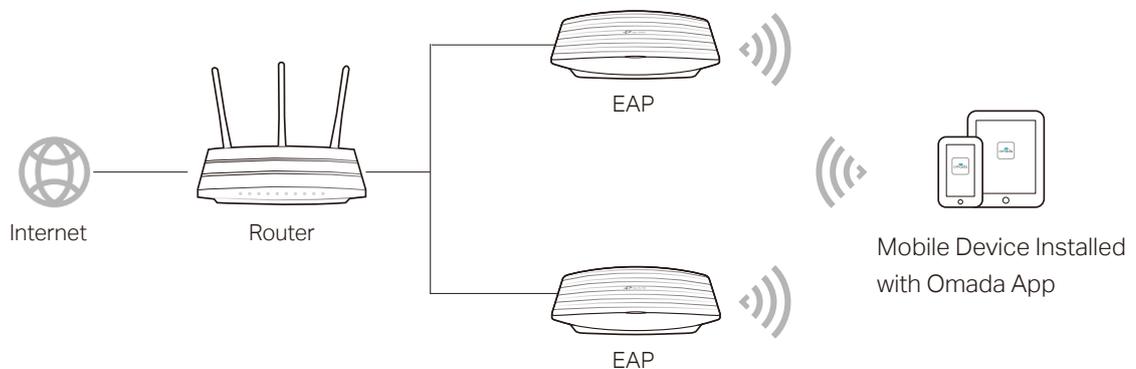


Follow the steps below to manage your network via Omada app in standalone mode. The following page is exemplified with the iOS version of the app. The Android version is similar.


1. Connect your mobile device to the EAP by using the default SSID (format: **TP-Link 2.4GHz/5GHz\_XXXXXX**) printed on the label.



2. Launch the Omada app, tap **Standalone APs** and wait for the EAP to be discovered automatically.

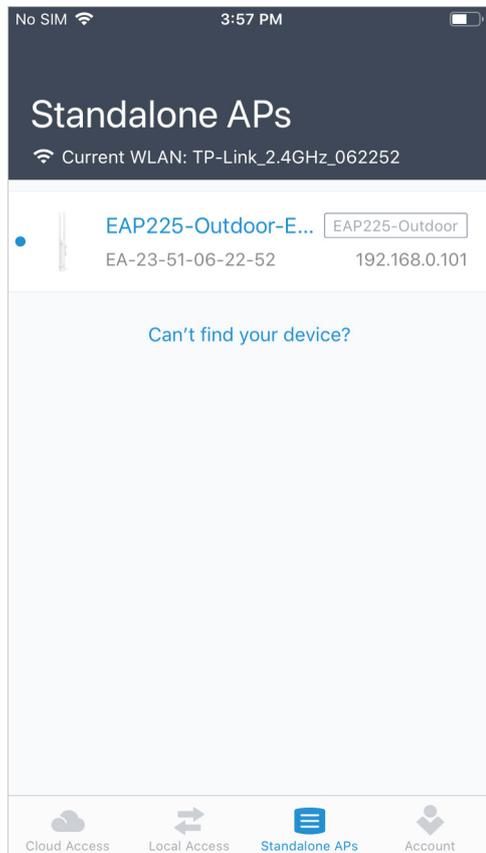


3. Tap on the EAP appearing on the page. Set a new username and password for your login account of the EAP.

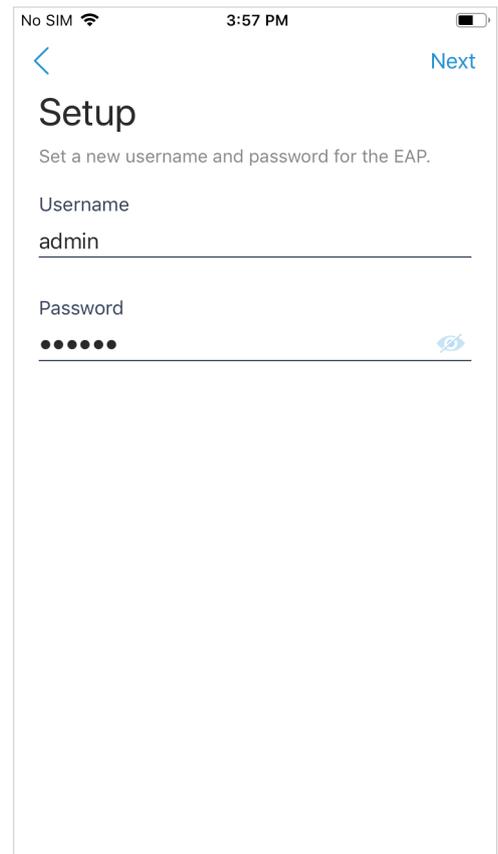

**Tips:**

All the EAPs in the same subnet will be discovered by Omada app and shown on the page. You can tap the discovered EAP to configure directly.


4. Edit the default SSID and password to keep your wireless network secure. Tap **Next**.

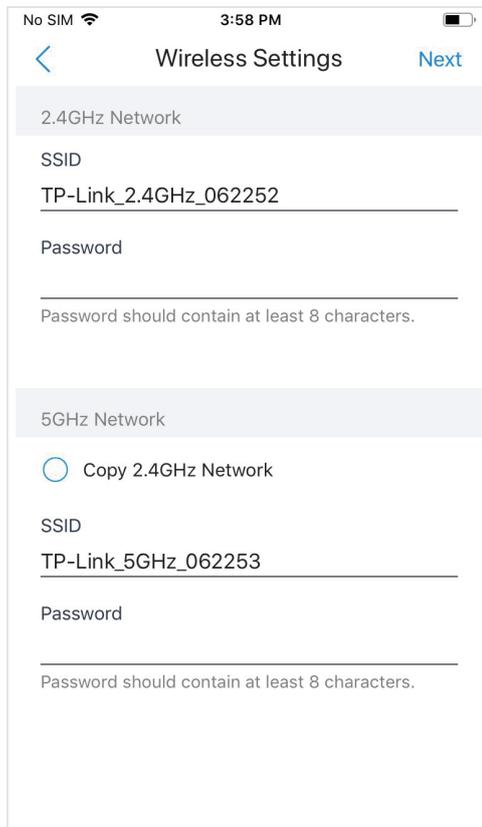

**Note:**

The settings will take effect after several minutes. For operation system differences, the wireless network connection will be different. When the default SSID of the EAP is changed, normally mobile device join the new wireless network automatically. For the unsupported operation system, you should manually connect to the new SSID.

5. You can view the name of the EAP and other information including wireless parameters and clients. And you can tap  to change the settings of radio, SSID and device account.

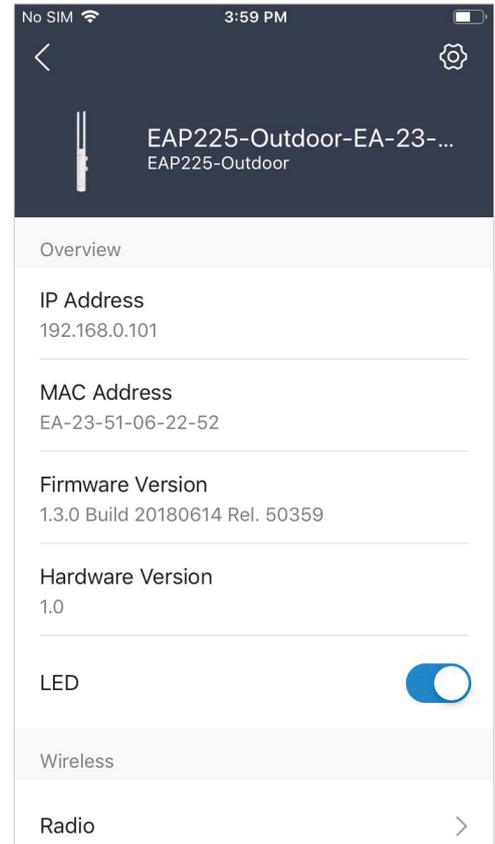

**Tips:**

- Omada app is designed to help you quickly configure some basic settings. For advanced configuration, you can use controller mode. And when your EAP is managed by the controller, you can not use standalone mode.
- In standalone mode, only one user is allowed to log in to the management page of the EAP at the same time. Thus the management web page of the EAP cannot be logged in to when using the Omada app and vice versa. Also only one user can log in to the EAP via Omada app.

### 3 Manage your Network in Controller Mode

For a large-scale network which has mass EAPs and advanced functions are required, controller mode is recommended. Controller mode allows you to configure and automatically synchronize unified wireless settings to all EAPs in the network.

Omada app offers a convenient way to access the OC200 and adopt EAPs. With Local Access and Cloud Access function on the Omada app, you can manage the OC200 at local and remote sites.


**Note:**

The OC200 needs to be kept running when using Omada app to access the OC200.

#### 3.1 Locally manage your EAPs using the Omada App

Local Access function on Omada app is designed for accessing the OC200 which is in the same subnet with your mobile devices. Refer to the topology below, make sure that the following requirements have been met:

- An Ethernet connection from your Omada EAP to the LAN with a DHCP server.
- The version of the Omada Software Controller is 3.0.2 or above.
- A compatible iOS or Android device with Omada app.

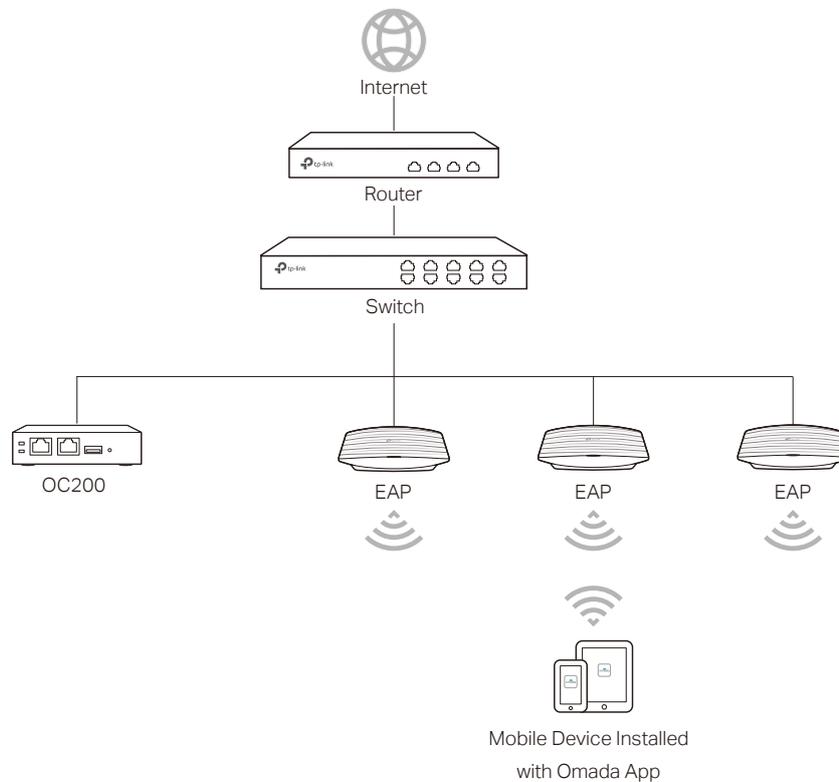


Follow the steps below to manage your network via Omada app in controller mode locally. The following page is exemplified with the iOS version of the app. The Android version is similar.


1. Connect your mobile device to the EAP by using the default SSID (format: **TP-Link 2.4GHz/5GHz\_XXXXXX**) printed on the label at the bottom of the product. Note that the EAP should be in the same subnet with the OC200.




2. Launch the Omada app, go to **Local Access**, tap the **+** button on the upper-right corner to add the OC200. Normally Omada app will discover all the OC200 devices which are in the same subnet and show them in the **Auto** column. If the OC200 cannot be found, you can add it by entering the IP address and port of the OC200 in the **Manual** column.

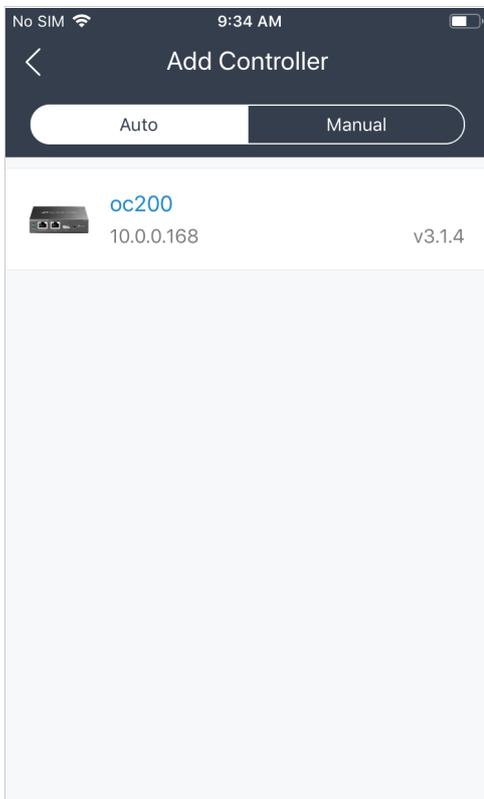

3. Tap the OC200, the login page will show. Enter the username and password of the OC200, then tap **Log In** to launch the OC200.

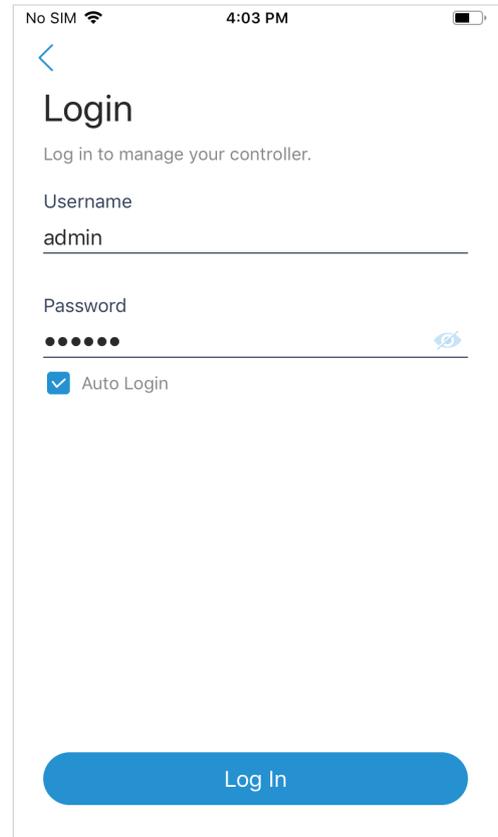

4. On the **APs** screen, tap the EAP that is pending for the adoption. And you can use the functions at the bottom to navigate various screens of the OC200 including the wireless statistics, clients information and basic settings.

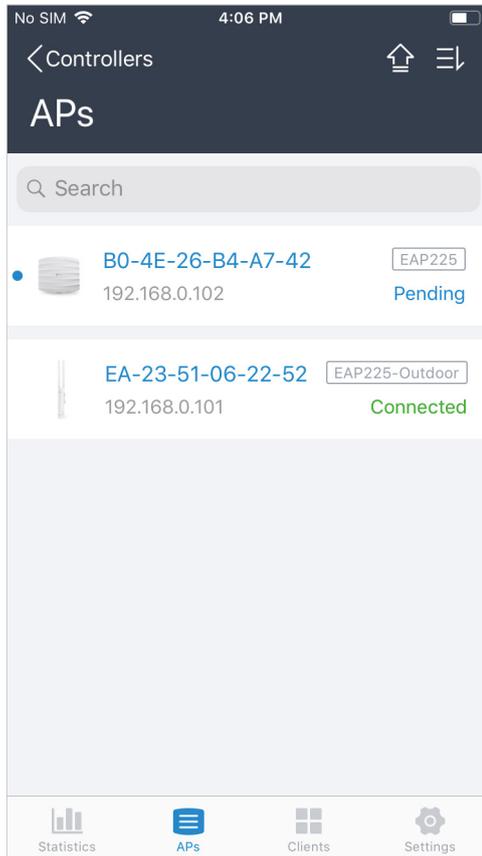


## 3.2 Remotely manage your EAPs using the Omada App

Cloud Access function on Omada app is designed for accessing the OC200 via Omada Cloud service. Thus, you can configure your OC200 and manage EAPs at any time, from anywhere.


Refer to the topology below, make sure that the following requirements have been met:

- Both your OC200 and mobile device have internet access.
- A compatible iOS or Android device with Omada app.
- Cloud Access is enabled on the OC200. The OC200 has been bound with a TP-Link ID. For more details about the Cloud Access on the OC200, refer to the [Omada Cloud Service](#).

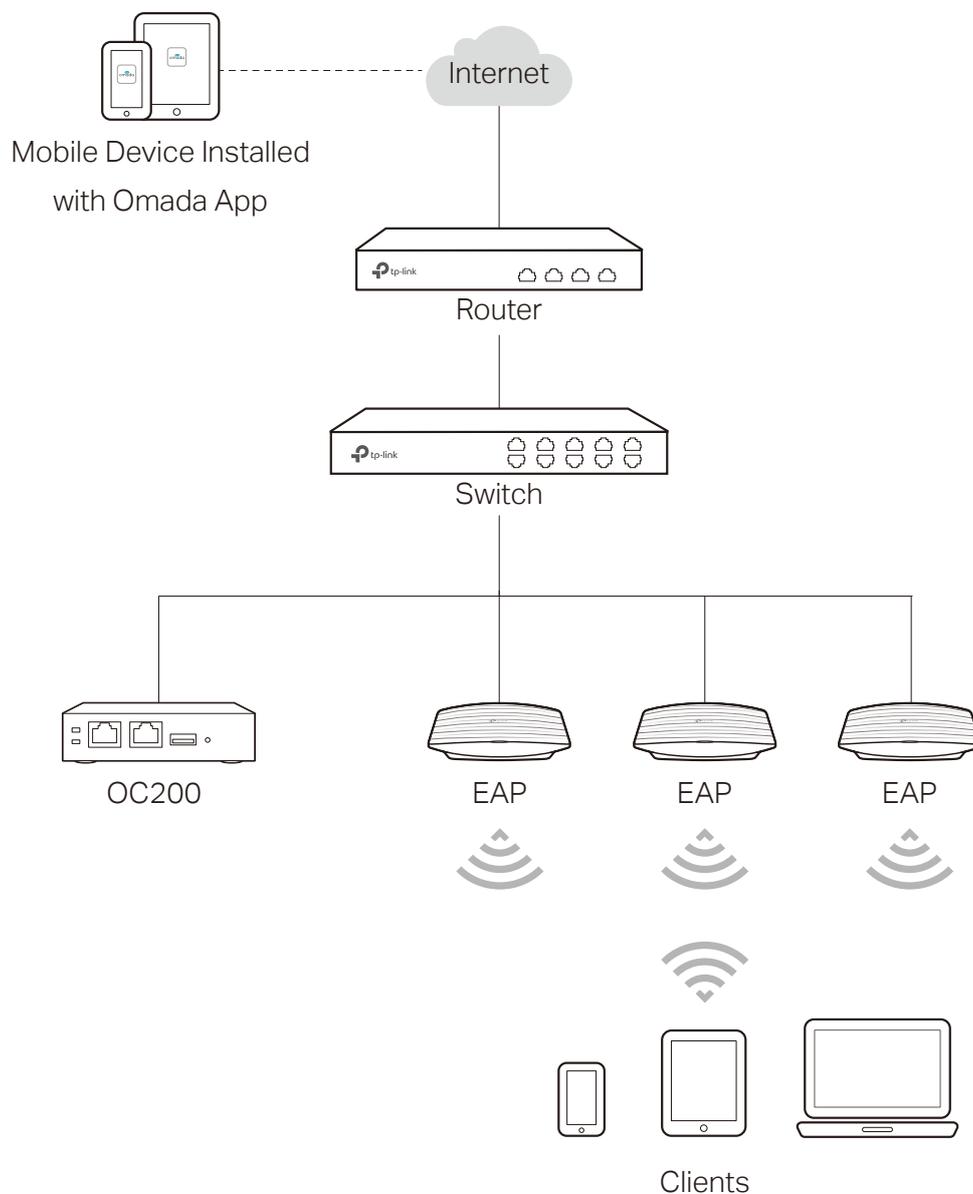


Follow the steps below to manage your network via Omada app in controller mode remotely. The following page is exemplified with the iOS version of the app. The Android version is similar.

1. Launch the Omada app, go to **Cloud Access** and tap **Go to Log In** to log in to Omada Cloud with your TP-Link ID.

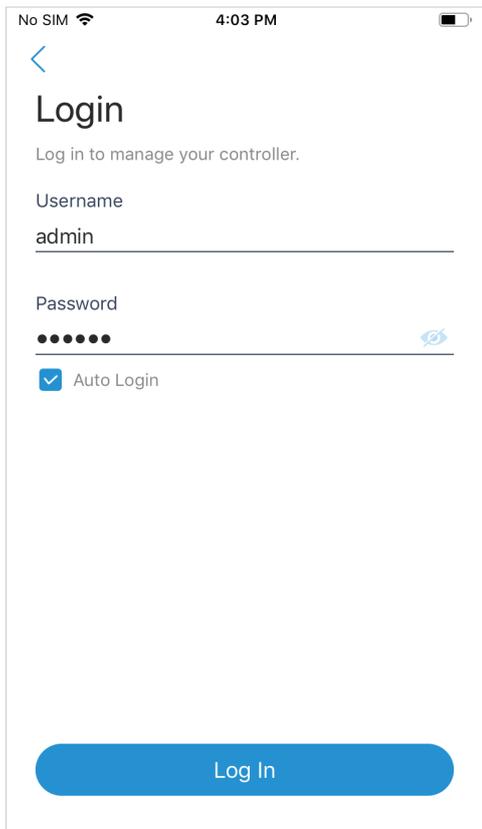

2. On the **Cloud Access** page, tap the **+** button on the upper right corner, the following page will appear. Then tap **Next**.

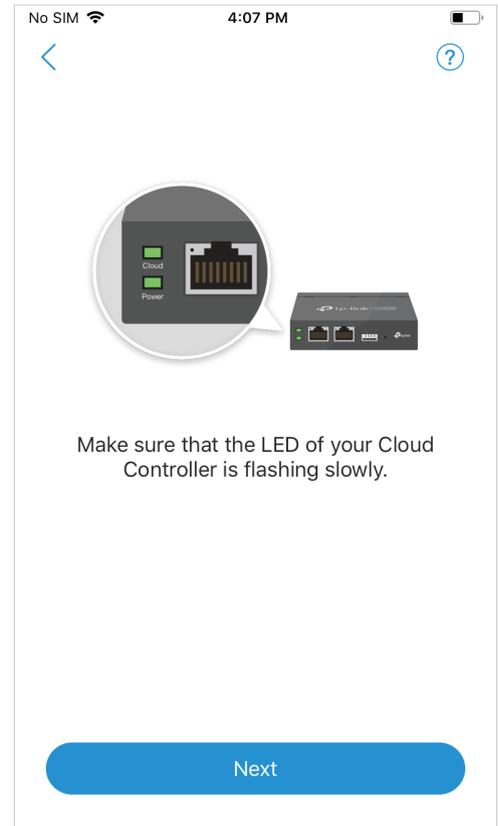


3. Scan the QR code which is printed on the back of the Cloud Controller, or manually enter the device key to bind the OC200 to your TP-Link ID.


**Tips:**

You can also log in to the OC200 and bind the TP-Link ID to the OC200. For more detailed information, refer to the [Omada Cloud Service](#).

4. All the online OC200 which are bound with your TP-Link ID will appear on the page. Tap the OC200 to launch and configure the controller.

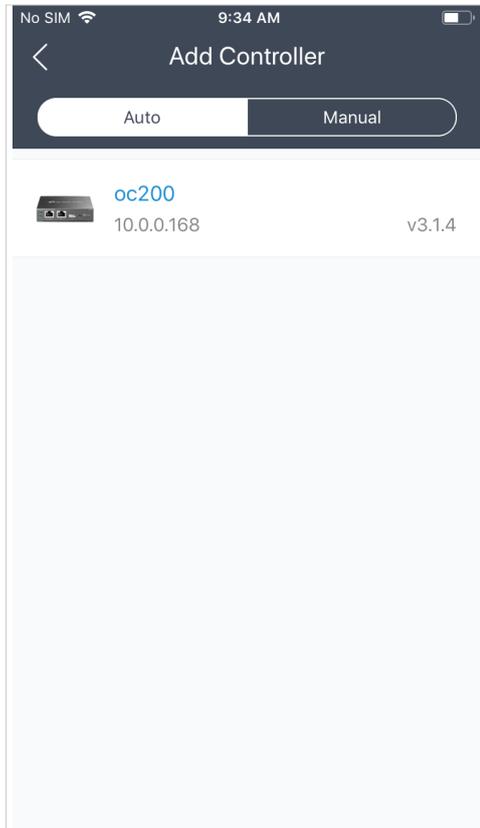

5. On the **APs** screen, tap the EAP that is pending for the adoption. And you can use the functions at the bottom to navigate various screens of the Omada Controller including the wireless statistics, clients information and basic settings.

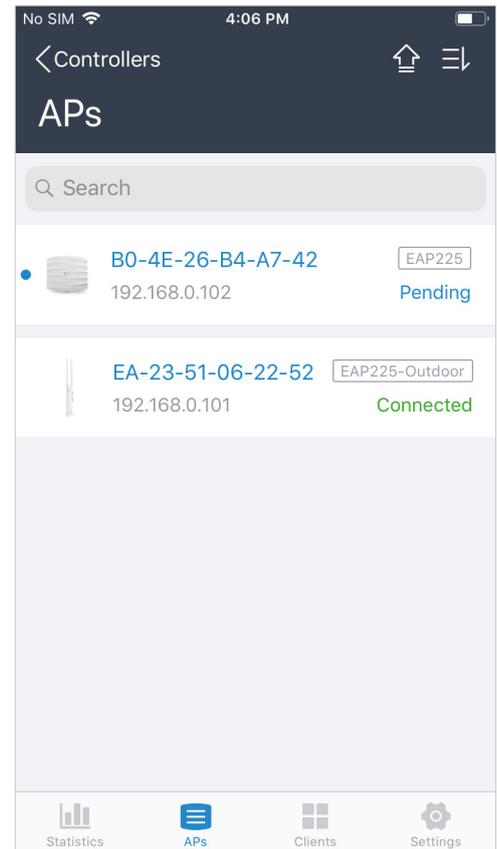

## COPYRIGHT & TRADEMARKS

Specifications are subject to change without notice.  tp-link is a registered trademark of TP-Link Technologies Co., Ltd. Other brands and product names are trademarks or registered trademarks of their respective holders.

No part of the specifications may be reproduced in any form or by any means or used to make any derivative such as translation, transformation, or adaptation without permission from TP-Link Technologies Co., Ltd. Copyright © 2019 TP-Link Technologies Co., Ltd.. All rights reserved.

## FCC STATEMENT

Product Name: Omada Cloud Controller

Model Number: OC200

Responsible party:

TP-Link USA Corporation, d/b/a TP-Link North America, Inc.

Address: 145 South State College Blvd. Suite 400, Brea, CA 92821

Website: <https://www.tp-link.com/us/>

Tel: +1 626 333 0234

Fax: +1 909 527 6803

E-mail: [sales.usa@tp-link.com](mailto:sales.usa@tp-link.com)

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/ TV technician for help. This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- 1) This device may not cause harmful interference.
- 2) This device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

## CE Mark Warning



This is a class B product. In a domestic environment, this product may cause radio interference, in which case the user may be required to take adequate measures.

## EU declaration of conformity

TP-Link hereby declares that the device is in compliance with the essential requirements and other relevant provisions of directives 2014/30/EU, 2014/35/EU, 2009/125/EC and 2011/65/EU.

The original EU declaration of conformity may be found at <https://www.tp-link.com/en/ce>

## Canadian Compliance Statement

This device complies with Industry Canada license-exempt RSSs. Operation is subject to the following two conditions:

- 1) This device may not cause interference, and
- 2) This device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes :

- 1) l'appareil ne doit pas produire de brouillage;
- 2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

## Industry Canada Statement

CAN ICES-3 (B)/NMB-3(B)

## NCC Notice

注意!

依據 低功率電波輻射性電機管理辦法

第十二條 經型式認證合格之低功率射頻電機，非經許可，公司、商號或使用者均不得擅自變更頻率、加大功率或變更原設計之特性或功能。

第十四條 低功率射頻電機之使用不得影響飛航安全及干擾合法通行；經發現有干擾現象時，應立即停用，並改善至無干擾時方得繼續使用。前項合法通信，指依電信規定作業之無線電信。低功率射頻電機需忍受合法通信或工業、科學以及醫療用電波輻射性電機設備之干擾。

## BSMI Notice

安全諮詢及注意事項

- 請使用原裝電源供應器或只能按照本產品注明的電源類型使用本產品。
- 清潔本產品之前請先拔掉電源線。請勿使用液體、噴霧清潔劑或濕布進行清潔。
- 注意防潮，請勿將水或其他液體潑灑到本產品上。
- 插槽與開口供通風使用，以確保本產品的操作可靠並防止過熱，請勿堵塞或覆蓋開口。
- 請勿將本產品置放於靠近熱源的地方。除非有正常的通風，否則不可放在密閉位置中。
- 請不要私自打開機殼，不要嘗試自行維修本產品，請由授權的專業人士進行此項工作。

## 限用物質含有情況標示聲明書

產品元件名稱	限用物質及其化學符號					
	鉛 Pb	鎘 Cd	汞 Hg	六價鉻 CrVI	多溴聯苯 PBB	多溴二苯醚 PBDE
PCB	○	○	○	○	○	○
外殼	○	○	○	○	○	○

備考1."○"系指該項限用物質之百分比含量未超出百分比含量基準值。  
備考2."-"系指該項限用物質為排除項目。



Продукт сертифіковано згідно с правилами системи УкрСЕПРО на відповідність вимогам нормативних документів та вимогам, що передбачені чинними законодавчими актами України.



## Safety Information

- Keep the device away from water, fire, humidity or hot environments.
- Do not attempt to disassemble, repair, or modify the device.
- Do not use damaged charger or USB cable to charge the device.

Please read and follow the above safety information when operating the device. We cannot guarantee that no accidents or damage will occur due to improper use of the device. Please use this product with care and operate at your own risk.

## Explanation of the symbols on the product label

Symbol	Explanation
	DC voltage
	Indoor use only.
	<b>RECYCLING</b> This product bears the selective sorting symbol for Waste electrical and electronic equipment (WEEE). This means that this product must be handled pursuant to European directive 2012/19/EU in order to be recycled or dismantled to minimize its impact on the environment.
	User has the choice to give his product to a competent recycling organization or to the retailer when he buys a new electrical or electronic equipment.