


# Quick Installation Guide

AC750 Wireless Dual Band 4G LTE Router

Archer MR200

## Connect the Hardware

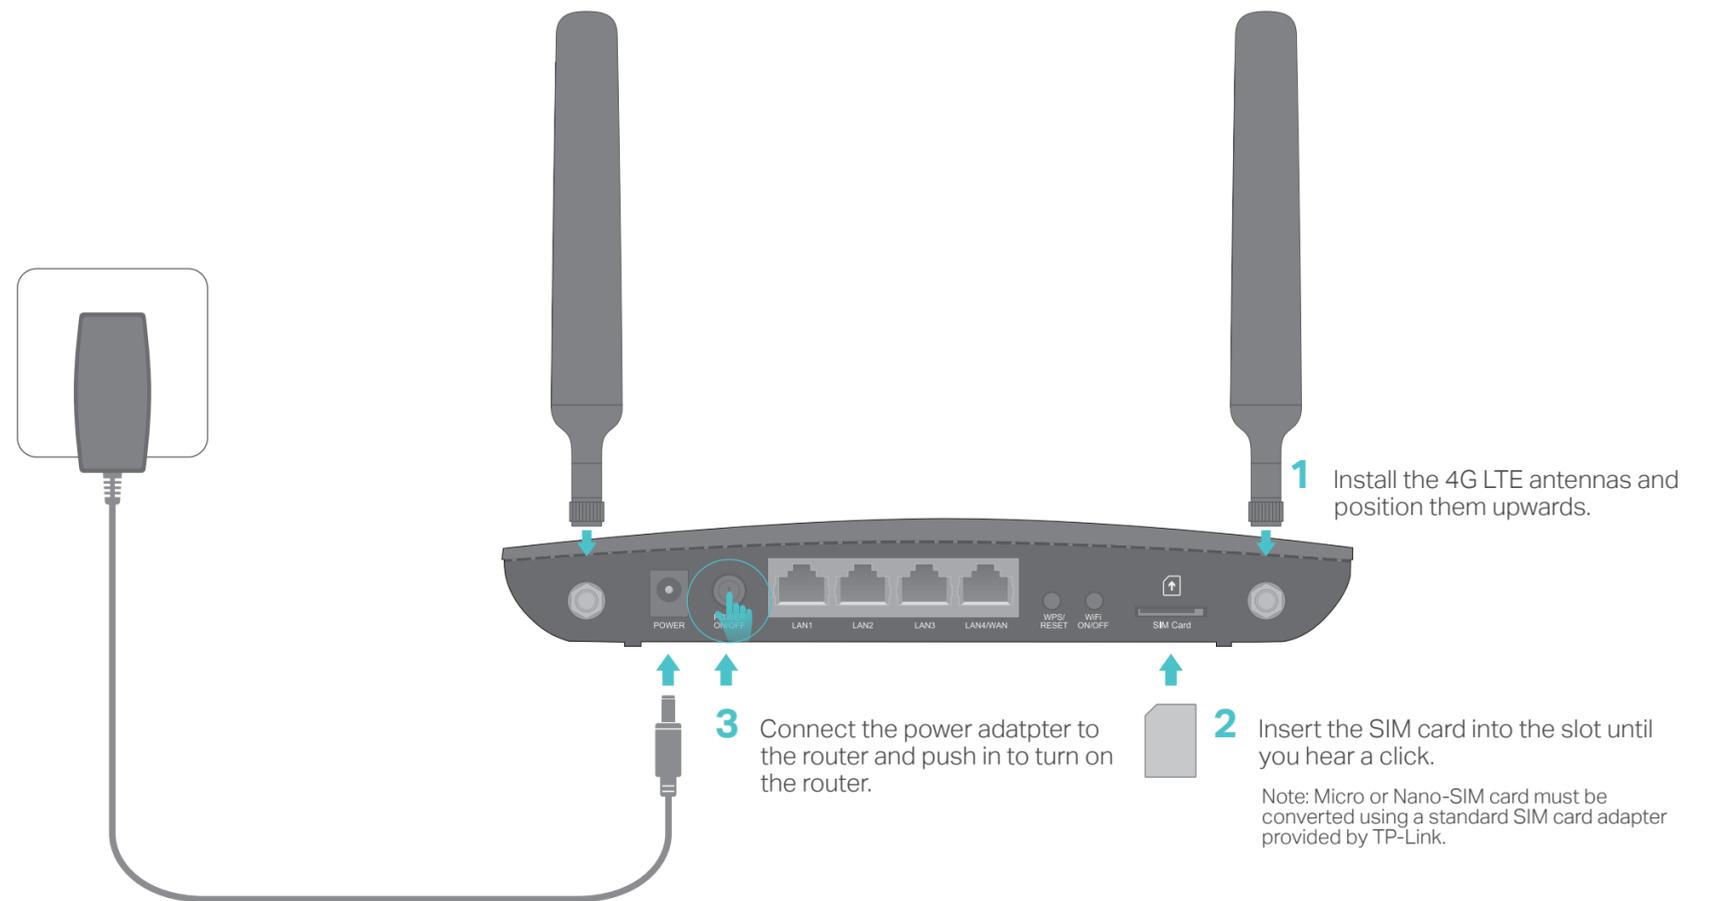

## Verify the Hardware Connection

Verify the hardware connection by checking the following LEDs' status. If the internet LED  is on, your router is connected to the internet successfully.



Note: If the internet LED does not turn on, please refer to FAQ > Q2.



For better internet connection, make sure **3 or 4 bars** of the Signal Strength LED  are lit. Otherwise, try relocating the router to a location that may receive a stronger mobile network signal, such as near a window.

## Enjoy the Internet


**Wired:** Connect your computers to the router's LAN ports via Ethernet cables.

**Wireless:** Connect wireless devices using the SSID (network name) and Wireless Password printed on the product label at the bottom of the router.




# Customize the 4G LTE Router

1. Make sure your computer is connected to the router (via wired or wireless).
2. Launch a web browser and type in <http://tplinkmodem.net> or **192.168.1.1**. Create a new password (1-15 characters) and click **Save**.  
Note: If the login page does not appear, please refer to [FAQ > Q1](#).

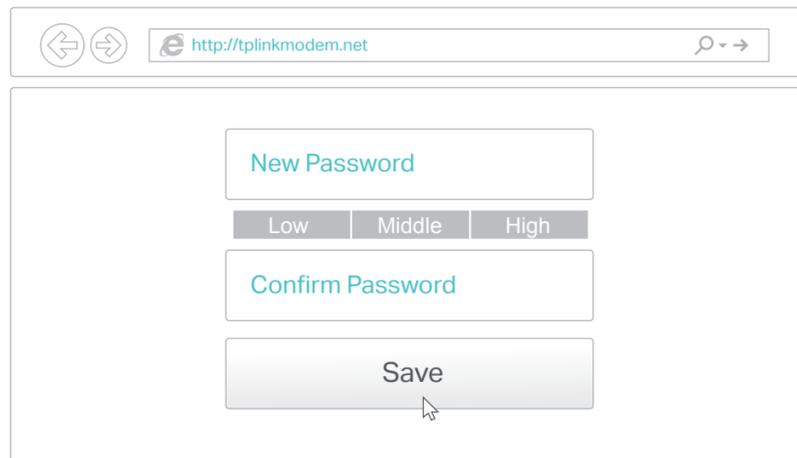

3. Enter the new password that you created and click **Log in**.  
Note: For subsequent logins, use your password that you have created.
4. Follow the step-by-step instructions of the **Quick Setup** to complete the initial configuration. On the Wireless Settings page, you can customize your 2.4GHz and 5GHz wireless network names and passwords.

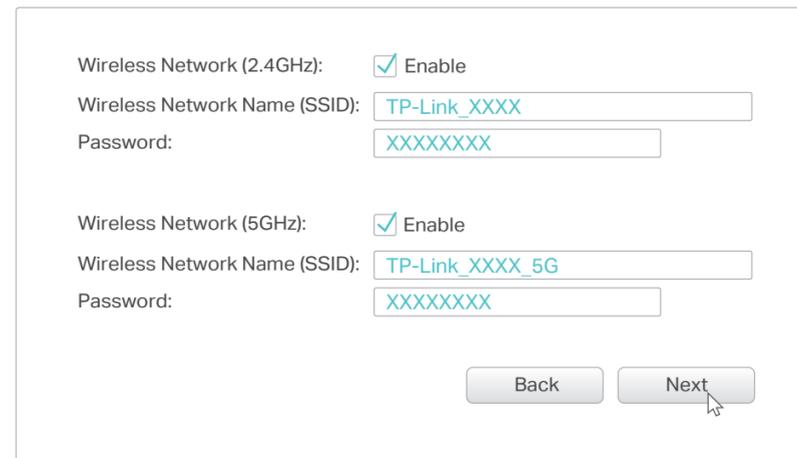

Note: The router can also be used (or configured) in Wireless Router Mode for ADSL/Cable connections. For more advanced configurations, please refer to the User Guide on TP-Link official website at [www.tp-link.com](http://www.tp-link.com).

# LED Indicators

LED	Status	Indication
⏻ (Power)	On	The system has started up successfully.
	Flashing	The system is starting up or firmware is being upgraded. Do not disconnect or power off your router.
	Off	Power is off.
🌐 (Internet)	On	The router is connected to the internet.
	Off	There is no internet connection.
4G (4G)	On	The router is connected to the 4G network.
	Off	The router is disconnected from the 4G network.
📶 (Wireless)	On	At least one wireless radio band (2.4 GHz or 5 GHz) is enabled.
	Off	The wireless radio band is disabled.
🖥️ (LAN)	On	At least one LAN port is connected to a powered-on device.
	Off	No LAN port is connected to a powered-on device.
🔄 (WPS)	On/Off	This light remains on for 5 minutes when a WPS connection is established, then turns off.
	Flashing	WPS connection is in progress. This may take up to 2 minutes.
📶 (Signal Strength)	On	Indicates the signal strength received from the mobile internet network. More lit bars indicate a better signal strength.
	Off	There is no mobile internet signal.

# Tether App

To manage your network conveniently on your mobile device, scan the QR code to download the Tether App.



# FAQ (Frequently Asked Questions)

- Q1. What should I do if I cannot access the web management page?**
- A1. If the computer is set to a static IP address, change its settings to obtain an IP address automatically.
  - A2. Make sure <http://tplinkmodem.net> or <http://192.168.1.1> is correctly entered in the web browser.
  - A3. Use another web browser and try again.
  - A4. Reboot your router and try again.
  - A5. Disable and enable the active network adapter in use.
- Q2. What should I do if I cannot access the internet?**
- A1. Verify that your SIM card is an LTE, WCDMA or GSM card.
  - A2. Verify that your SIM card is in your internet service provider's service area.
  - A3. Verify that your SIM card has sufficient credit.
  - A4. Check the LAN connection:  
Open a web browser and enter <http://tplinkmodem.net> or <http://192.168.1.1> in the address bar. If the login page does not appear, refer to [FAQ > Q1](#) and then try again.
  - A5. Check your ISP parameters:
    - 1) Open a web browser and log in to the web management page.
    - 2) Go to **Advanced > Network > Internet** to verify the parameters (including the APN, Username and Password) provided by your ISP are correctly entered. If the parameters are incorrect, click **Create Profile** and enter the correct parameters, then select the new profile from the **Profile Name** list.

- A6. Check the PIN settings:
  - 1) Open a web browser and log in to the web management page.
  - 2) Go to **Advanced > Network > PIN Management** to verify if PIN is required. If it is, enter the correct PIN provided by your ISP, and click **Apply**.
- A7. Check the Data Limit:
  - 1) Open a web browser and log in to the web management page.
  - 2) Go to **Advanced > Network > Data Settings** to verify if the **Total/Monthly Used** exceeds the **Total/Monthly Allowance**. If it does, click **Correct** and set **Total/Monthly Used** to 0 (zero), or disable **Data Limit**.
- A8. Check the Mobile Data:
  - 1) Open a web browser and log in to the web management page.
  - 2) Go to **Advanced > Network > Internet** to verify that **Mobile Data** is enabled. If it is not, enable it to access the internet.
- A9. Check the Data Roaming:
  - 1) Confirm with your ISP if you are in a roaming service area. If you are, open a web browser and log in to the web management page.
  - 2) Go to **Advanced > Network > Internet** to enable **Mobile Roaming**.

**Q3. How do I restore the router to its factory default settings?**

- A1. With the router powered on, press and hold the **WPS/RESET** button on the rear panel of the router until the Power LED starts flashing, then release the button. Wait while the router resets.
- A2. Log in to the web management page of the router, and go to **Advanced > System Tools > Backup & Restore**, click **Factory Restore** and wait until the reset process is complete.



WPS/RESET Button  
Press and hold until the Power LED starts flashing

**Q4. What should I do if I forget my web management page password?**

- A. Refer to [FAQ > Q3](#) to reset the router, and then set a new password using 1-15 characters.

**Q5. What should I do if I forget my wireless network password?**

- A1. The default Wireless Password is printed on the product label of the router.
- A2. If the default Wireless Password has been changed, log in to the router's web management page and go to **Basic > Wireless** to retrieve or reset your password.

For technical support and other information, please visit <http://www.tp-link.com/support>