


Hello, Touch P5

Start Here >>


Before You Start

If your Internet connection is through an Ethernet cable from the wall, instead of through a modem, connect the Ethernet cable directly to the router's Internet port, and skip step 2,3,4.

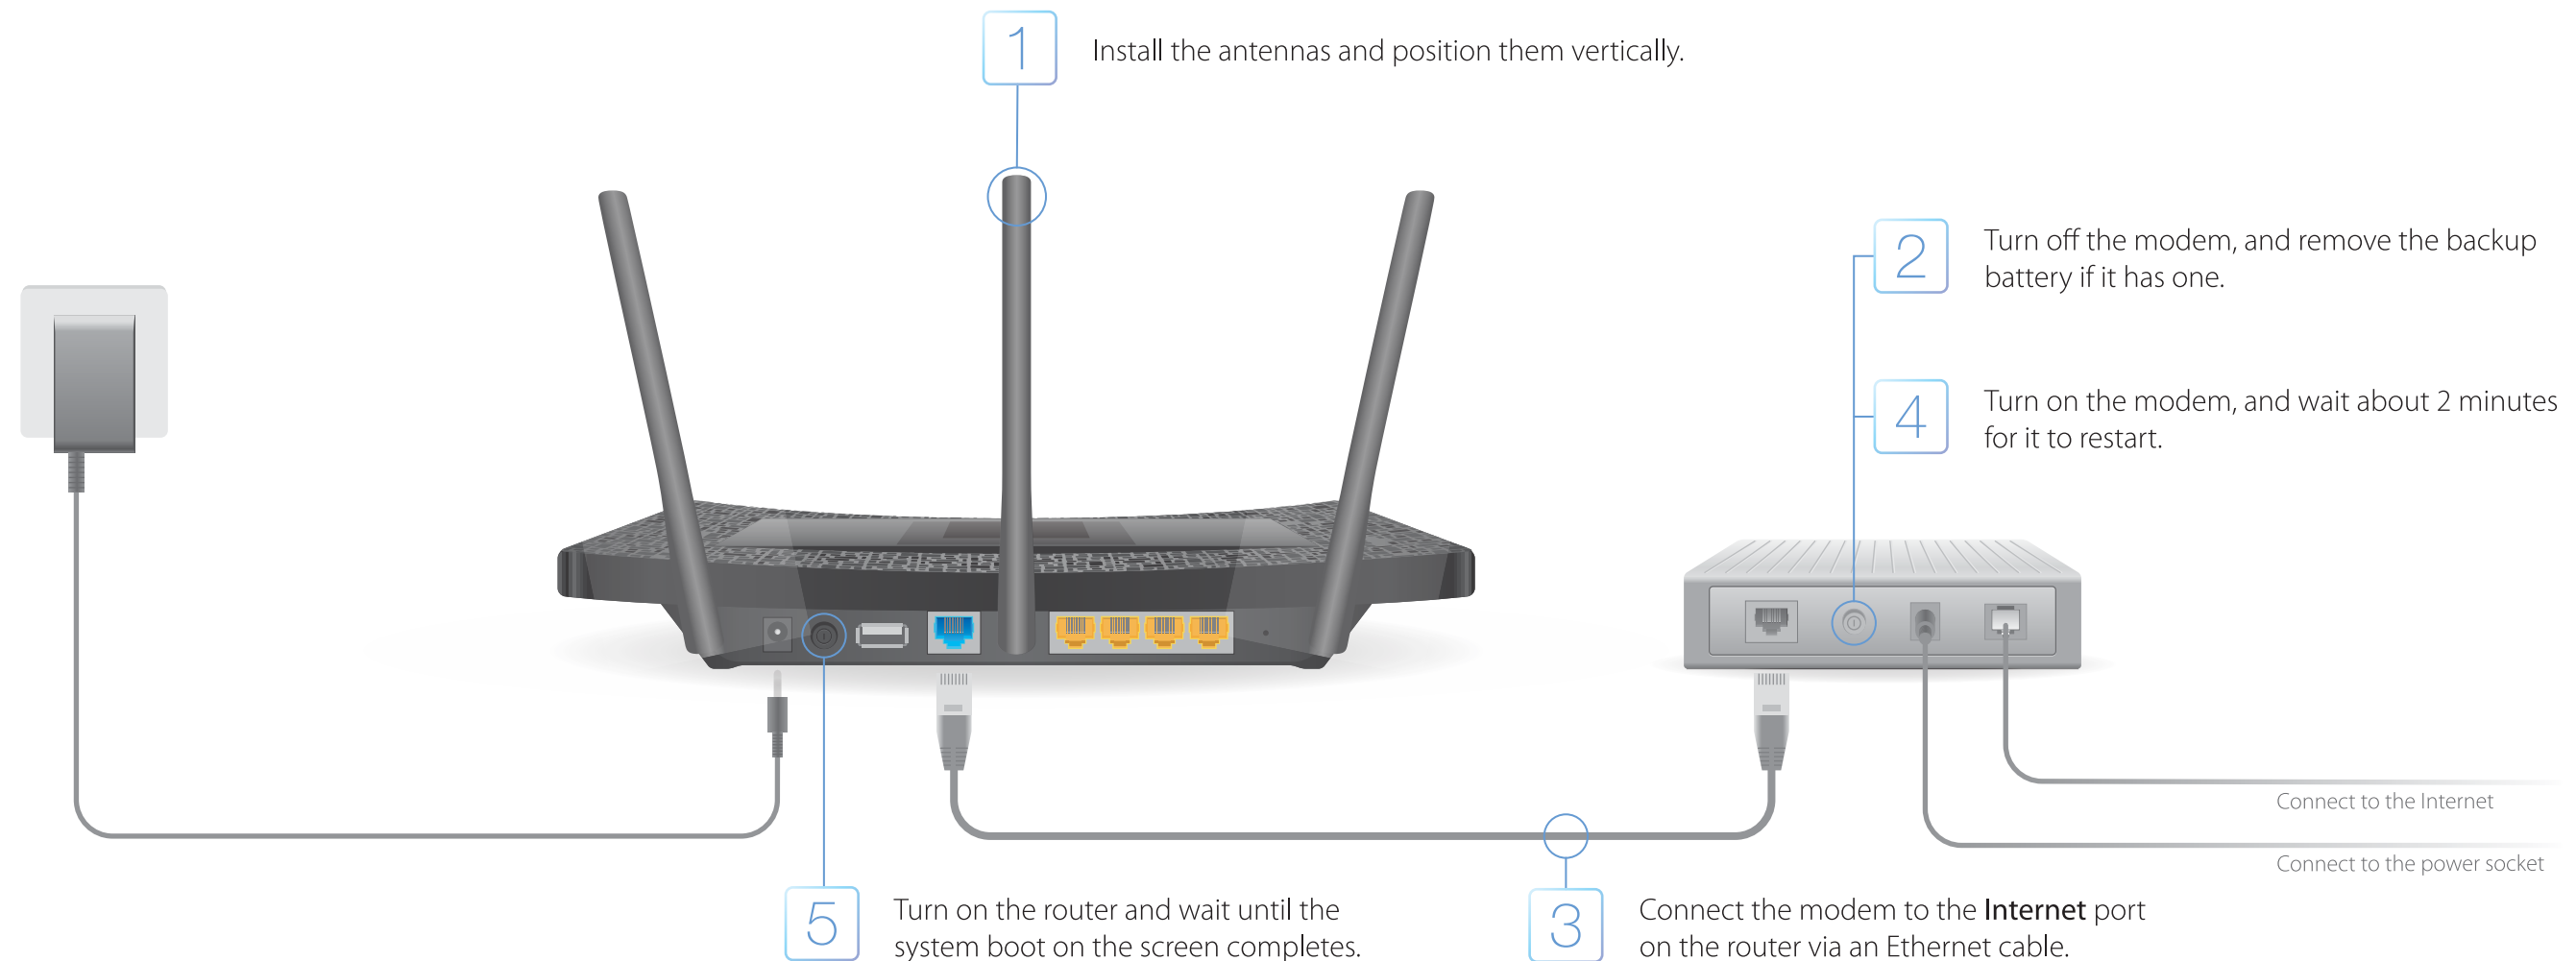

6 Configure the router on the touchscreen display.


Create a new administrator password (recommended) and tap **Save**, then follow the Quick Setup to complete the initial configuration.

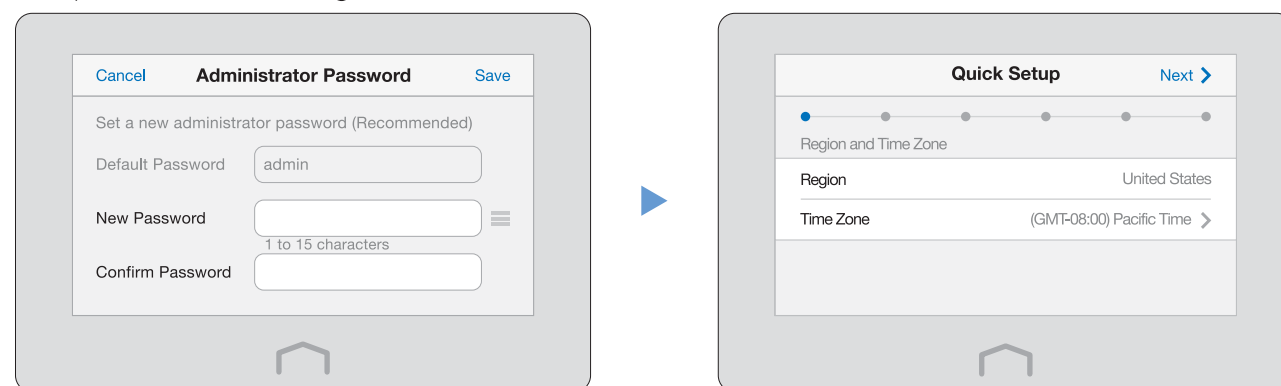

Note: Per FCC regulations, all Wi-Fi products marketed in the U.S. is fixed to the U.S. region.



Connect your devices to the router wirelessly or via an Ethernet cable.

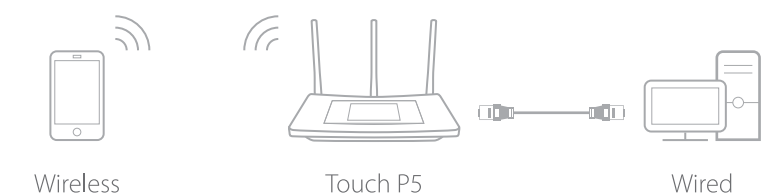


Note: If you have not changed the SSID and password during the configuration, use the default SSID and password printed on the bottom of the router to join the wireless network.

Touchscreen Display


The screen will go to sleep if it idles for 3 minutes by default. Tap the screen to wake it up.

Home Screen

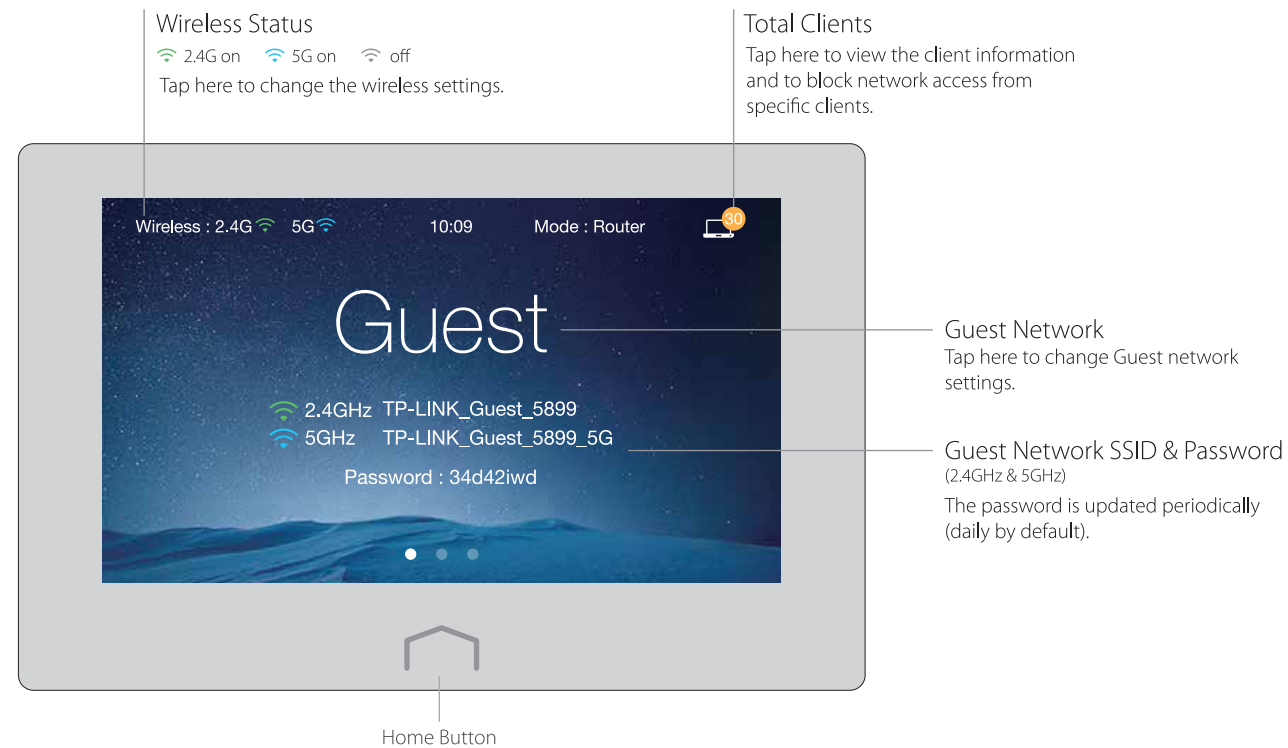

Menu Screen


Tap the icons to perform various functions of the router, such as Quick Setup, Mode Selection, Parental Controls, etc.

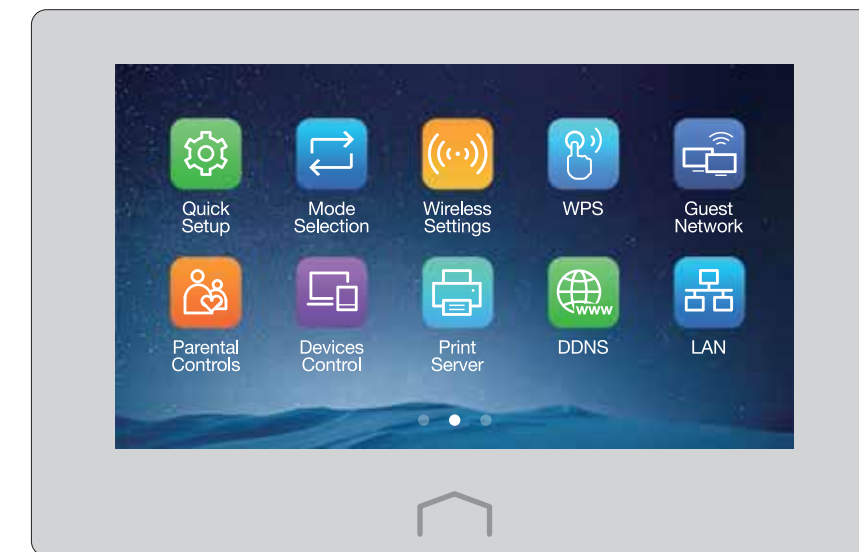

Note: You also can manage the router through the web-based management interface at <http://tplinkwifi.net> (Enter **admin** for the username and your administrator password to log in.)

USB Features

Use the USB ports for media sharing, storage sharing and printer sharing across your local network. You can also set up an FTP server to access your files remotely through the Internet.

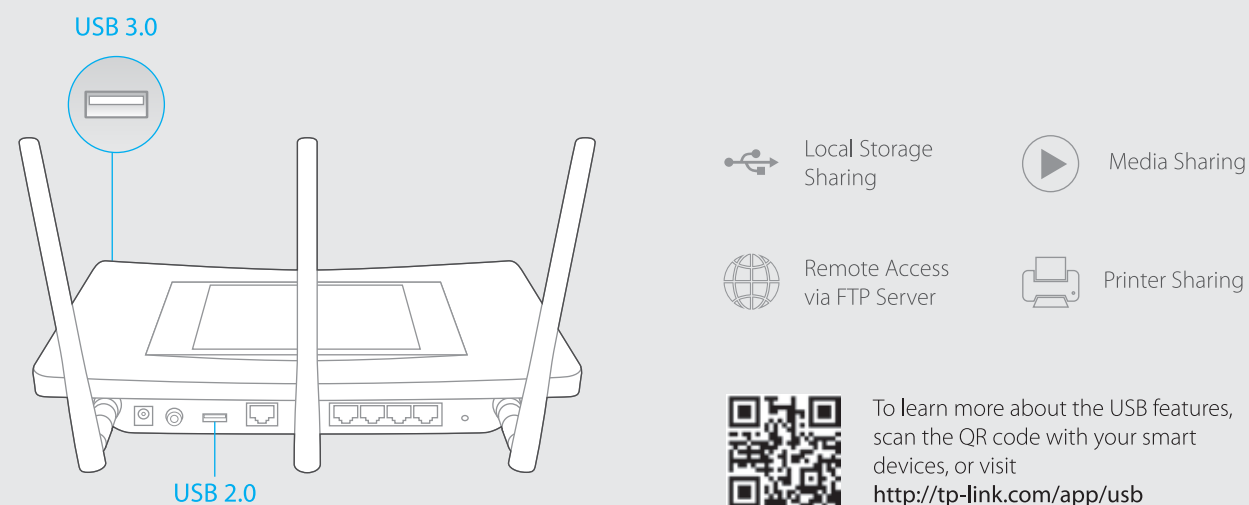

FAQ (Frequently Asked Questions)

Q1. What can I do if I cannot access the Internet?

- A1. Check if the Internet is working properly by connecting a computer directly to the modem via an Ethernet cable. If not, contact your Internet Service Provider.
- A2. Tap **Quick Setup** on the menu screen to run the setup again.
- A3. Tap **Reboot & Reset** on the menu screen, select **Reboot** to reboot the router and try again.
- A4. If your Internet Connection Type is **Dynamic IP**, go through **Quick Setup** and enter the MAC address that is registered with your ISP, then reboot both the modem and the router.

Q2. What can I do if I forgot my administrator password?

- A. While the router is powered on, press and hold the **Reset** button on the back until the Touch P5 logo displays to restore the router to its factory default settings, and create a new administrator password.

Q3. What can I do if I forgot my wireless network password?

- A1. Tap **Wireless Settings** on the menu screen to obtain the security password, both for 2.4GHz and 5GHz wireless network.
- A2. For the Guest network, the password displays on the home screen.


Q4. How do I restore the router to its factory default settings?

- A1. Tap **Reboot & Reset** on the menu screen, and then tap **Reset**.
- A2. While the router is powered on, press and hold the **Reset** button on the back until the Touch P5 logo displays.

Configuring the Router


1. Connect your computer to the router (wired or wireless). Wired

Turn off the Wi-Fi on your computer and connect the devices as shown below.

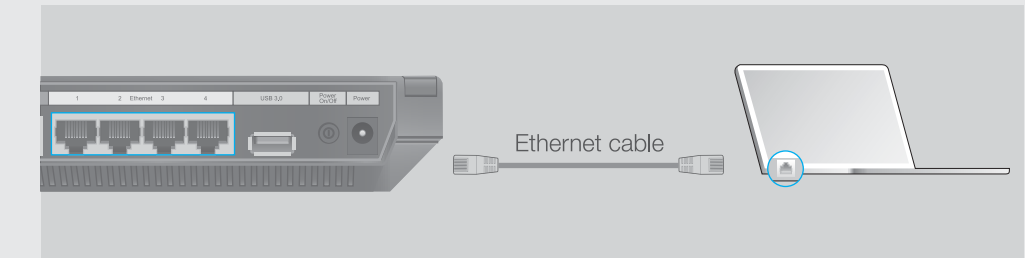

Wireless


Connect wirelessly by using the SSIDs (network names) and Wireless Password printed on the product label at the bottom of the router.

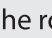You can also connect by pressing the WPS button  on the front panel of the router. For more information about WPS, refer to the User Guide at www.tp-link.com.


2. Configure the router via a web browser.

A Enter **<http://tplinkwifi.net>** or **<http://192.168.0.1>** in the address bar of a web browser. Use **admin** for both username and password, and click **Login**.

Note: If the login page does not appear, please refer to FAQ > Q1.

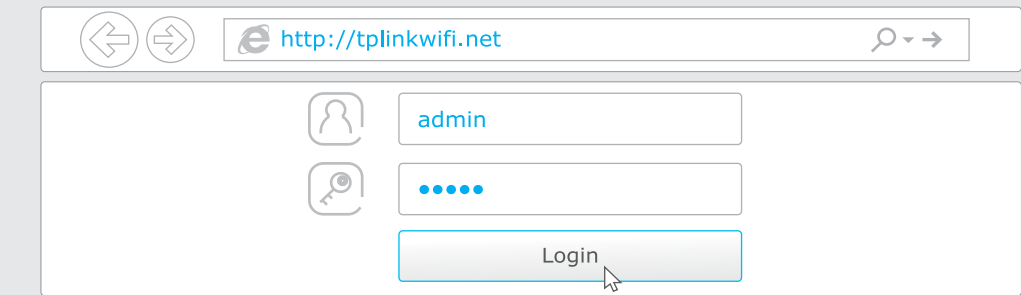


B Create a new username and password, then click **Confirm**. Re-login using the new credentials.

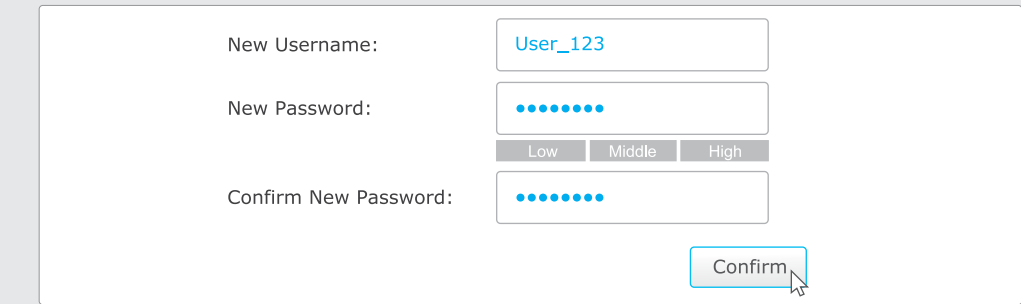


C Click **Quick Setup**, select your region and time zone, and click **Next**.

Note: Per FCC regulations, all Wi-Fi products marketed in the U.S. is fixed to the U.S. region.

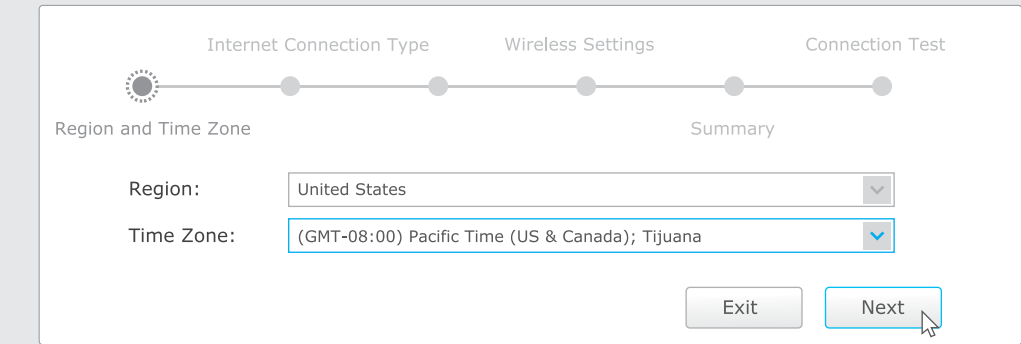


D Select your Internet Connection Type, or click **Auto Detect** if you are unsure of what your connection type is. Click **Next** and follow the instructions. Put in the **Username** and **Password** from Unifi, click **Next**

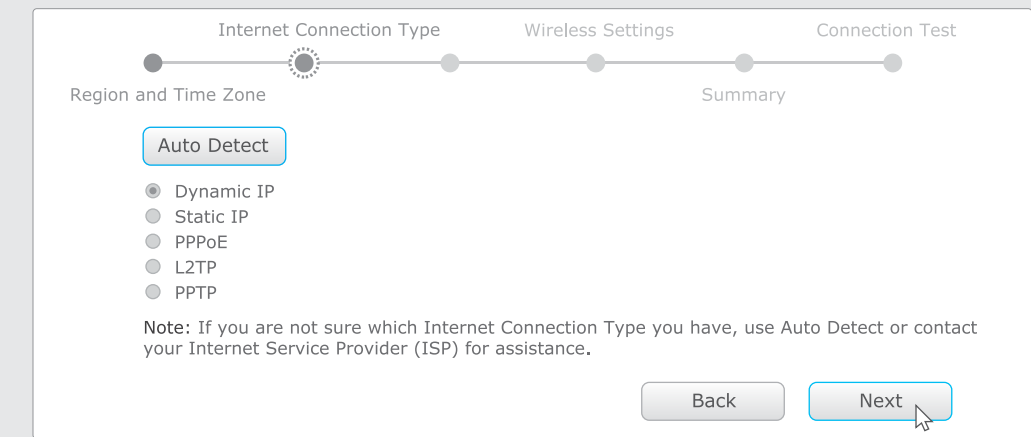


E Use the default or change the wireless settings, and click **Next**.

Note: If you change the default SSID and password, please note the new wireless settings.

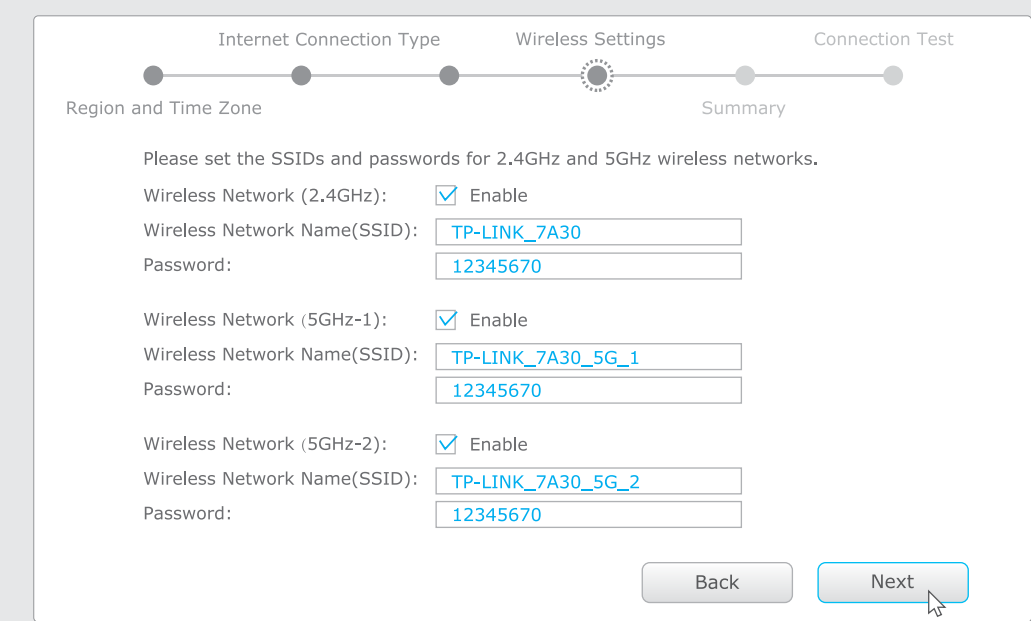


F Confirm your settings, and then click **Save**.

G Test your Internet connection, then click **Finish** to complete the Quick Setup.

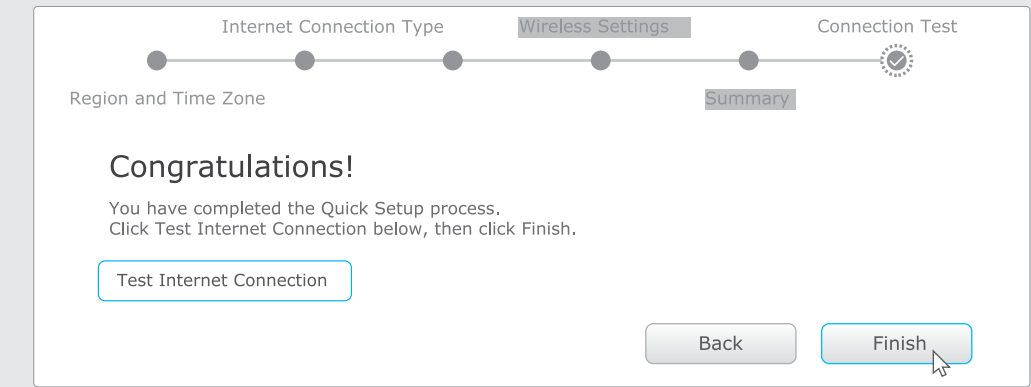


Second part is the settings of the Unifi IPTV.

Step 1 Please go to the Advance-Network-IPTV:

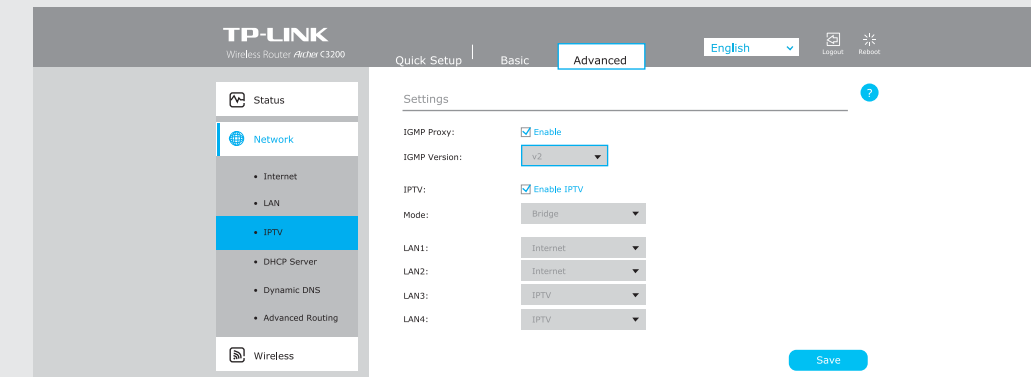

Step 2 Click Enable IPTV and choosing the mode as Malaysia Unifi, IGMP Version as V3 then click save.

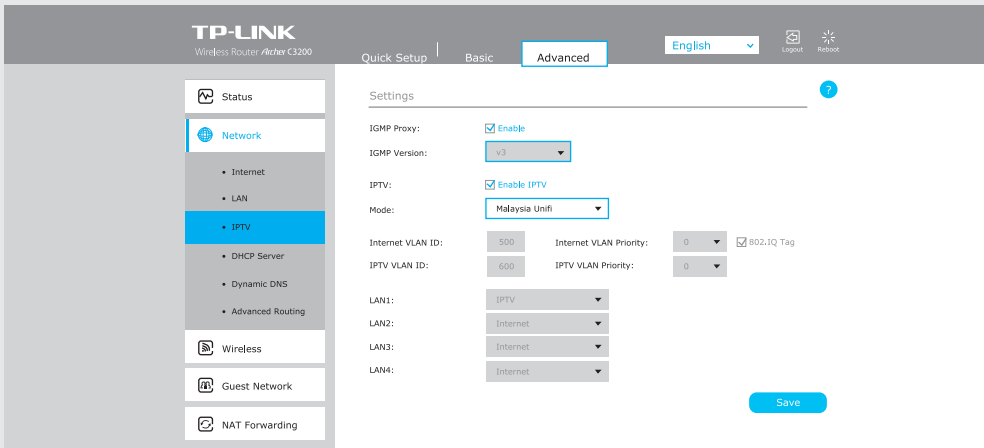

Step 3 Connect your TV to LAN 1 and try the IPTV service.

FAQ (Frequently Asked Questions)

Q1. What can I do if the login page does not appear?

- A1. If the computer is set to a static or fixed IP address, change the setting to obtain an IP address automatically.
- A2. Verify that <http://tplinkwifi.net> is correctly entered in the web browser. Alternatively, enter <http://192.168.0.1> or <http://192.168.1.1> in the web browser and press **Enter**.
- A3. Use another web browser and try again.
- A4. Reboot your router and try again.
- A5. Disable then re-enable the network adapter being used.

Q2. What can I do if I cannot access the Internet?

- A1. Check if the Internet is working properly by connecting a computer directly to the modem using an Ethernet cable. If it is not, contact your Internet Service Provider.
- A2. Log in to the Web Management page of the router, and go to the **Basic > Network Map** page to check whether the Internet IP address is valid or not. If it is, please run the Quick Setup again; otherwise, recheck the hardware connection.
- A3. For cable modem users, log in to the Web Management page of the router. Go to **Advanced > Network > Internet > MAC Clone**, click **Use Current Computer MAC Address** and click **Save**, then reboot both the modem and the router.
- A4. Reboot your router and try again.

Q3. How do I restore the router to its factory default settings?

- A1. While the router is powered on, press and hold the **Reset** button on the back for about 7 seconds until all LEDs go off, then release the button.
- A2. Log in to the Web Management page of the router. Go to **Advanced > System tools > Backup & Restore**, and click **Factory Restore**. The router will restore and reboot automatically.

Q4. What can I do if I forgot my web management password?

- A. Refer to FAQ > Q3 to reset the router, and then use the default **admin** (all lowercase) for both username and password to log in.

Q5. What can I do if I forgot my wireless network password?

- A1. The factory default Wireless Password/PIN is printed on the product label of the router.
- A2. Log in to the router's Web Management page, and go to **Basic > Wireless** to obtain or reset your wireless password.