

tapo

User Manual

Robot Vacuum & Mop



Setup & Maintenance Videos

Scan QR code or visit
[https://www.tp-link.com/support/
setup-video/#robot-vacuum](https://www.tp-link.com/support/setup-video/#robot-vacuum)



*Images may differ from actual products.

©2025 TP-Link 7100000999 REV1.2.0

Contents

Safety Information	1
Package Contents	1
Overview	2
Setup and Use	4
Position the Dock	4
Remove Protective Strips	5
Turn On Robot Vacuum	5
Charge Robot Vacuum	5
Download Tapo App and Connect to Wi-Fi	6
Cleaning	7
Mopping	8
Care and Maintenance	9
Empty the Dustbin	10

Clean the Filter	10
Clean the Main Brush	11
Clean the Side Brush	11
Clean the Caster Wheel	12
Clean Main Wheels	12
Clean the LiDAR and Sensors	13
Clean the Charging Contacts	13
Troubleshooting	14
Frequently Asked Questions	16
Voice Prompts for Issues	17

IMPORTANT SAFETY INSTRUCTIONS

READ ALL INSTRUCTIONS

BEFORE USING THIS APPLIANCE

WARNING – To reduce the risk of fire, electric shock, or injury:

- Do not leave appliance when plugged in. Unplug from outlet when not in use and before servicing.
- Do not use outdoors or on wet surfaces.
- Do not allow to be used as a toy. Close attention is necessary when used by or near children.
- Use only as described in this manual. Use only manufacturer's recommended attachments.
- Do not use with damaged cord or plug. If appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, return it to a service center.
- Do not handle plug or appliance with wet hands.
- Use extra care when cleaning on stairs.
- Do not put any object into openings. Do not use with any opening blocked; keep free of dust, lint, hair, and anything that may reduce air flow.
- Do not use to pick up flammable or combustible liquids, such as gasoline, or use in areas where they may be present.
- When battery pack is not in use, keep it away from other metal objects, like paper clips, coins, keys, nails, screws or other small metal objects, that can make a connection from one terminal to another. Shorting the battery terminals together may cause burns or a fire.
- Do not charge the battery at ambient temperature below 39°F (4°C) or above 104 °F (40°C). Also keeping the temperature range of between 39-104°F when storing unit or during use.
- To reduce the risk of electric shock, this appliance has a polarized plug (one blade is wider than the other). This plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician to install the proper outlet. Do not change the plug in any way.
- Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.
- Turn off all controls before unplugging.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- Do not use without dust bag and/or filters in place.
- Prevent unintentional starting. Ensure the switch is in the off-position before connecting to battery pack, picking up or carrying the appliance. Carrying the appliance with your finger on the switch or energizing appliance that have the switch on invites accidents.
- Recharge only with the charger specified by the manufacturer. A charger that is suitable for one type of battery pack may create a risk of fire when used with another battery pack.

- Use appliances only with specifically designated battery packs. Use of any other battery packs may create a risk of injury and fire.
- Under abusive conditions, liquid may be ejected from the battery; avoid contact. If contact accidentally occurs, flush with water. If liquid contacts eyes, additionally seek medical help. Liquid ejected from the battery may cause irritation or burns.
- Do not use a battery pack or appliance that is damaged or modified. Damaged or modified batteries may exhibit unpredictable behavior resulting in fire, explosion or risk of injury.
- Do not expose a battery pack or appliance to fire or excessive temperature. Exposure to fire or temperature above 130°C may cause explosion.
- Follow all charging instructions and do not charge the battery pack or appliance outside of the temperature range specified in the instructions. Charging improperly or at temperatures outside of the specified range may damage the battery and increase the risk of fire.
- Have servicing performed by a qualified repair person using only identical replacement parts. This will ensure that the safety of the product is maintained.
- Do not modify or attempt to repair the appliance except as indicated in the instructions for use and care.
- Place the cords from other appliances out of the area to be cleaned.
- Do not operate the vacuum in a room where an infant or child is sleeping.
- Do not operate the vacuum in an area where there are lit candles or fragile objects on the floor to be cleaned.
- Do not operate the vacuum in a room that has lit candles on furniture that the vacuum may accidentally hit or bump into.
- Do not allow children to sit on the vacuum.
- Do not use the vacuum on a wet surface.
- Household use only
- The appliance must only be supplied at safety extra-low voltage defined in the standard of EN 60335-1 corresponding to the marking on the appliance. (for EU region)
- This charging dock can only charge lithium batteries and can only charge one battery at a time. The capacity of the battery does not exceed 2600mAh.

SAVE THESE INSTRUCTIONS

TP-Link hereby declares that the device is in compliance with the essential requirements and other relevant provisions of directives 2014/53/EU, 2009/125/EC, 2011/65/EU and (EU) 2015/863. The original EU declaration of conformity may be found at <https://www.tapo.com/en/support/ce/>

TP-Link hereby declares that the device is in compliance with the essential requirements and other relevant provisions of the Radio Equipment Regulations 2017.

The original UK declaration of conformity may be found at <https://www.tapo.com/support/ukca/>

Safety Information

Keep the device away from water, fire, humidity or hot environments.

This appliance contains batteries that are only replaceable by skilled persons.

Do not attempt to disassemble, repair, or modify the device. If you need service, please contact us.

Warning

Avoid replacement of a battery with an incorrect type that can defeat a safeguard.

Avoid disposal of a battery into fire or a hot oven, or mechanically crushing or cutting of a battery, that can result in an explosion.

Do not leave a battery in an extremely high temperature surrounding environment that can result in an explosion or the leakage of flammable liquid or gas; Do not leave a battery subjected to extremely low air pressure that may result in an explosion or the leakage of flammable liquid or gas.

Children should be supervised to ensure that they do not play with the appliance.

The appliance is only to be used with the charging station (Tapo RVB102, Tapo RVB102-WH) provided with the appliance.

WARNING: For the purposes of recharging the battery, only use the detachable supply unit provided with this appliance:

NLB060200W1J5S58/SA182V-200060U/NLB060200W1U5S58/NLB060200W1K5S95/SA182H-200060S/NLB060200W1E5S58
SA182V-190060B/SA182H-190060S/SA182V-190060V/SA182V-190060IV/SA182V-190060U

The appliance contains a 2600mAh lithium-ion battery.

This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

Operating Temperature: 32 ~ 104°F (0 ~ 40°C)

Storage temperature: -4 ~ 140°F (-20 ~ 60°C)

When the battery is charged: 32 ~ 113°F (0 ~ 45°C)

For EU/UK Region

Operating Frequency:

2400MHz~2483.5MHz / 20dBm (Wi-Fi)

2402~2480MHz / 10dBm (Bluetooth)

TP-Link Systems Inc.

10 Mauchly, Irvine, CA 92618



Direct Current




For indoor use only




A specific detachable supply unit is required for connecting the equipment to the supply mains.




Package Contents

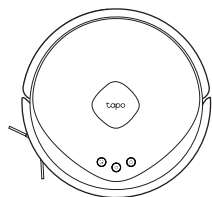


Robot Vacuum

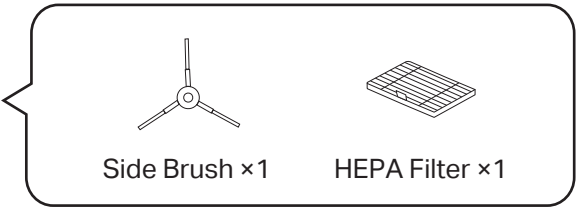

*One side brush and one HEPA Filter installed on the robot vacuum

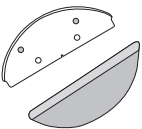


Mopping Attachment ×1

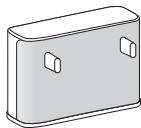


Charging Dock



Power Cord ×1




Cleaning Brush ×1



User Manual ×1

Overview

Robot Vacuum

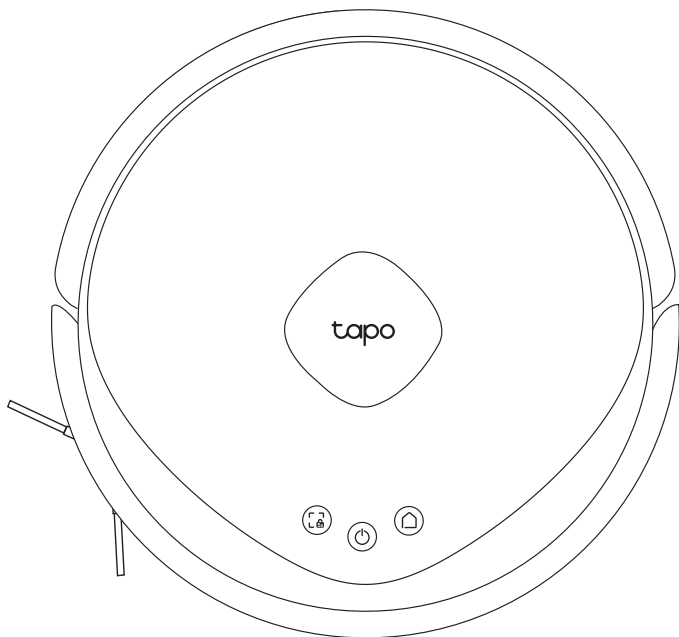

Power/Clean

- Press and hold for 3 seconds: Turn on/off the robot vacuum.
- Press once: Start/pause cleaning.

Dock

- Return to the dock to charge.

Spot Cleaning/Child Lock



- Press once: Start spot cleaning.
- Press and hold for 5 seconds: Turn on/off the child lock.

+ **Combo Button**



- Press and hold for 5 seconds:
Enter setup mode; reset Wi-Fi.
- Press and hold for 10 seconds:
Restore to factory default settings.

LED

- **Pulse/Flash Red:** Battery level < 20%; Error (Refer to P17 for help)
- **Pulse Orange:** Battery level between 20% and 80% (Charging)
- **Pulse Green :** Battery level > 80% (Charging); Turning on
- **Solid Green:** Fully charged
- **Pulse White:** Standby mode

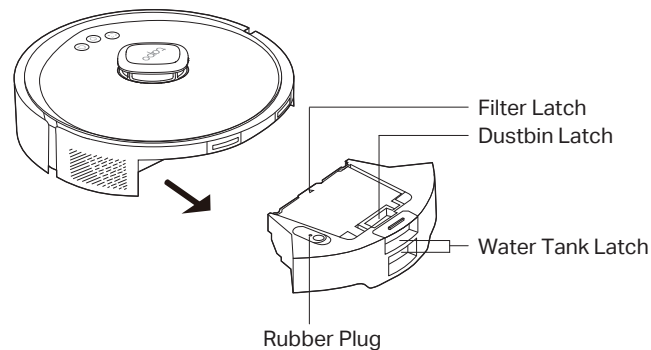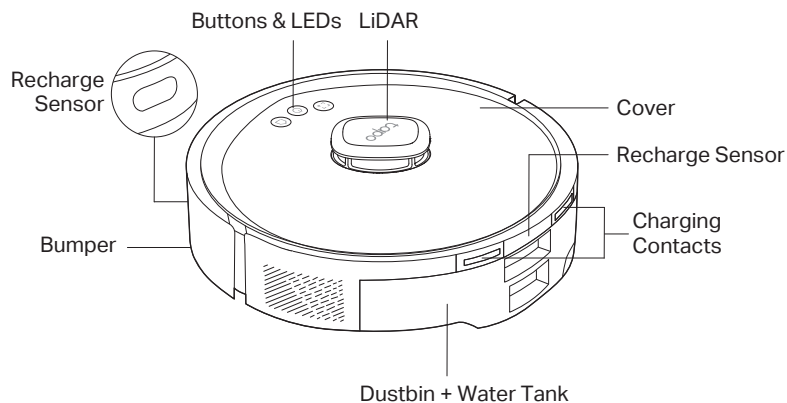


! Do NOT add any cleaning agents.
Wipe the water tank dry after adding water.

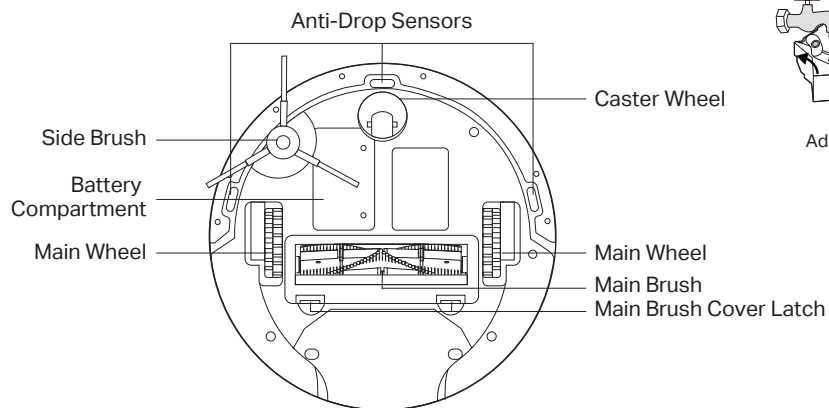

Add Water




Open Dustbin



HEPA Filter

Open Lid

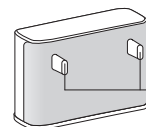


Charging Dock

Charging Contacts

1 Position the Dock


1. Position the dock on a hard, level surface against a wall, ensuring 1.5m (4.9ft) of clear space in front and 0.5m (1.6ft) to the left and right.
2. Connect the power cord to the dock and power source. Keep the cable tidy.

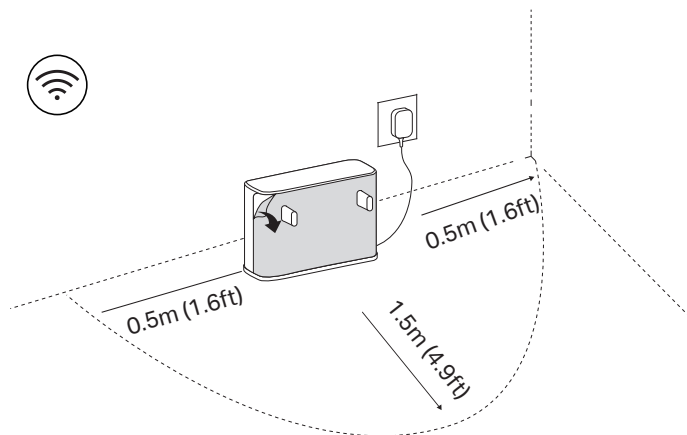


Notes

- Peel off the protective film for optimal performance.
- Make sure the area receives good Wi-Fi signals.
- Always keep the dock powered on; otherwise, the robot vacuum will not automatically return. Do not move the dock frequently.


Important Tips

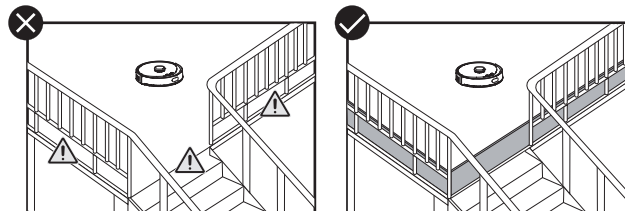


Install a physical barrier when using the robot vacuum on elevated surfaces (e.g., lofts or split-level floors) to prevent accidental falls and avoid injury or damage.

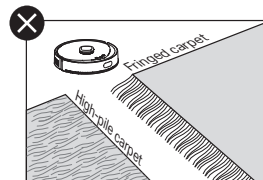

Do not use on high-pile or fringed carpets.

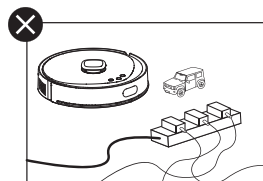


Remove power cords and small objects from the floor.

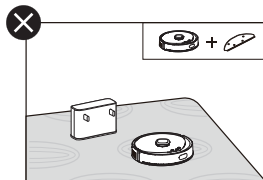

Avoid placing the dock on carpet when using the mopping attachment; if necessary, place the dock on the hard floor or a waterproof pad.


2 Remove Protective Strips

Remove the protective strips on both sides of the front bumper.

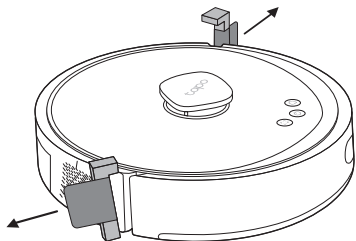


3 Turn On Robot Vacuum

Press and hold  for 3 seconds to turn on the robot vacuum. You will hear either "Turning On" or a beep, indicating a successful power-on.

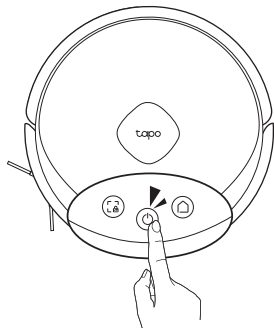

4 Charge Robot Vacuum

Place the robot vacuum on the charging dock or tap  to send it back to the dock to charge. It will return to the dock at the end of a cleaning job and whenever it needs to recharge.

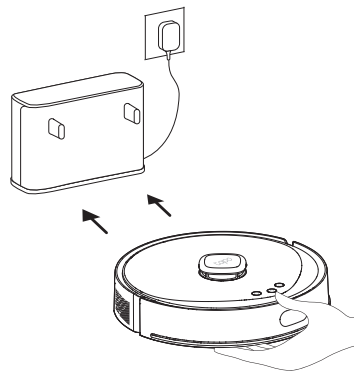

Notes


- When you place the robot vacuum on the charging dock, the robot vacuum will turn on automatically.
- We recommend that you fully charge the robot vacuum for about 4 hours prior to starting the first cleaning job.

5 Download the Tapo App and Connect to Wi-Fi

1. Download the Tapo app from the App Store or Google Play, then log in.




2. Open the Tapo app, tap the ⊕ icon, and select your model. Follow the step-by-step instructions to set up your robot vacuum and connect to your home Wi-Fi.

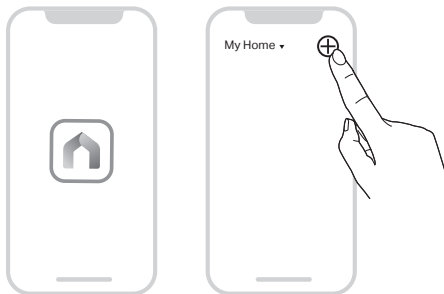

In the Tapo app, you can enjoy the following features.

- **Smart Maps**
Start quick mapping and create smart maps of your home to tell your robot vacuum where to clean.
- **Cleaning Modes & Preferences**
Customize vacuum power, cleaning times, and cleaning areas.
- **Scheduled Cleaning**
Set an automatic cleaning schedule, then the robot vacuum will clean automatically at the set time and return to the dock after cleaning.
- **Custom Zones, Carpet Areas, and Virtual Walls**
Add no-go zones, carpet areas, and virtual walls to prevent access to certain areas and rooms.

6 Cleaning

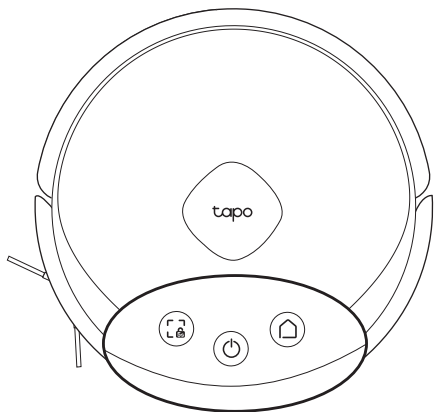

Press Once

Start/pause cleaning.




Press Once

Start spot cleaning.

Notes

- Cleaning cannot start if the battery is too low. Charge your robot vacuum first.
- Before cleaning, remove power cords, small objects, and high-pile carpets from the floor.
- If the cleaning area is too small, the area may be cleaned twice.
- If the battery level becomes too low during cleaning, the robot vacuum will automatically return to the dock to charge and then resume cleaning.


The robot vacuum will automatically explore and clean your home in neat rows. It will return to the charging station at the end of a cleaning job and whenever it needs to recharge.

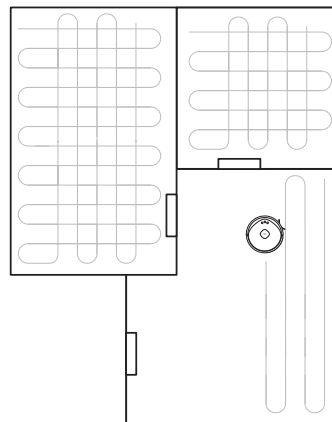

In Spot Cleaning mode, it will clean a rectangular area of 1.5m × 1.5m (4.9ft × 4.9ft) centered on itself. You can also customize the cleaning pattern in the Tapo app.


7 Mopping

1. Take out the dustbin and water tank.

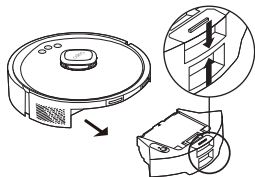


2. Remove the rubber plug and add water to the water tank.


 To prevent corrosion, do NOT add any cleaning agents. Only use cool or room temperature water and be careful not to wet the metal contacts.




3. Wipe the water tank with a clean, dry cloth.



4. Install the washable mop cloth and the mop cloth mount.

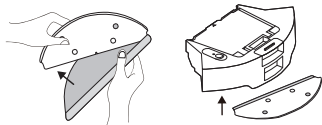


5. Re-install the dustbin and water tank.

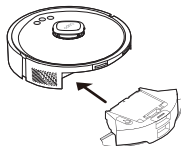


Notes

- Avoid using the mopping attachment on thick or high-pile carpets.
- Vacuum floors before starting the first mopping cycle.
- To prevent wetting the carpet, add a no-go zone, virtual wall, or carpet area on the Tapo app.
- The ability to cross obstacles is reduced when mopping.
- It is recommended to wash the mop cloth after each use.


1. Remove the mop cloth mount.

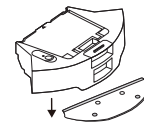


2. Remove the washable mop cloth.



3. Clean the mop cloth.



4. Sun dry the mop cloth and mop cloth mount.



8 Care and Maintenance


To maintain optimal performance, maintain the robot vacuum according to the following guidelines.

Part	Maintenance Frequency	Replacement Frequency*
Dustbin	Clean/wash as needed	/
Filter	Once a week	3-6 months
Main Brush	Every 2 weeks	6-12 months
Main Brush Cover	Every 2 weeks	6-12 months
Side Brush	Once a month	3-6 months
Mop Cloth	After each use	2-3 months
Caster Wheel	Clean as needed	/
Main Wheels	Once a month	/
Sensors	Once a month	/
Charging Contacts	Once a month	/


*Replacement frequency may vary depending on the actual situation. Parts should be replaced if visible wear appears.

Empty the Bin


1. Remove the dustbin.

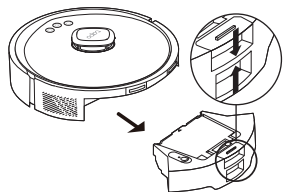

2. Open the dustbin to empty the dustbin.

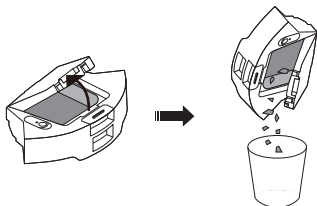


3. Place the dustbin back inside the robot vacuum.

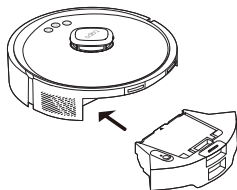


Clean the Filter

1. Remove the dustbin and open the lid.




2. Remove the filter and clean the filter.

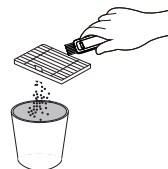


3. Wash the dustbin and filter.

⚠ Do not wash with hot water or detergents.

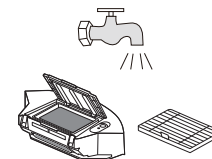


4. Air-dry the dustbin and filter thoroughly, then reinstall the filter as it was originally positioned.

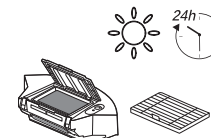


Clean the Main Brush

1. Turn the robot vacuum over, then unlatch and remove the main brush cover.


■ If you have installed the mopping attachment, uninstall it from the robot vacuum first.

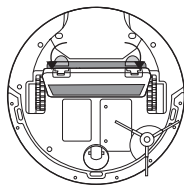


2. Remove the brush and its end cap.

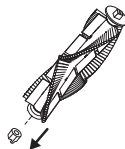

3. Remove any hair or debris with the cleaning brush.

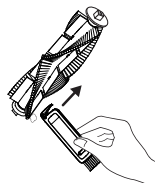


4. Reinstall the cap and main brush. Press on the main brush cover to lock it in place.

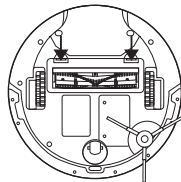


Clean the Side Brush

1. Use a screwdriver to unscrew the side brush **clockwise**, remove debris, and wipe with a damp cloth if necessary.
2. Turn the side brush **anticlockwise** to secure it tightly and ensure it's properly installed.

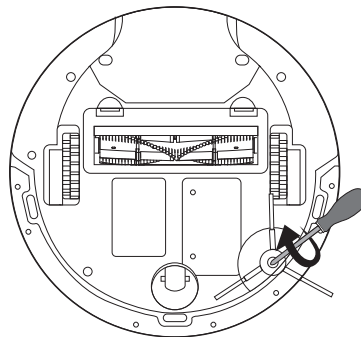


Clean the Caster Wheel

1. Pull firmly to remove the caster wheel and remove hair or dirt.
2. Reinstall the caster wheel and press it firmly into place.

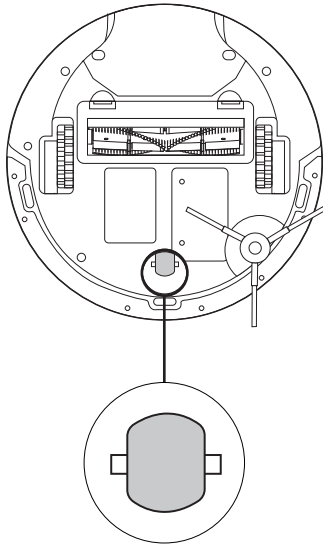



Clean the Main Wheels

Wipe the main wheels with a clean, dry cloth.

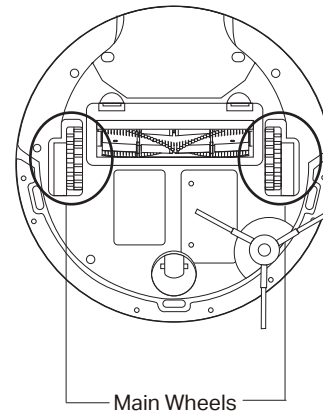



Clean the LiDAR and Sensors

Wipe the LiDAR and sensors with a clean, dry cloth.
Using a wet cloth may cause damage.

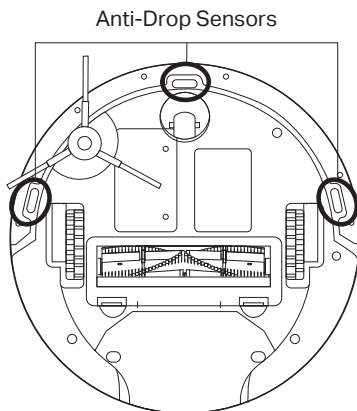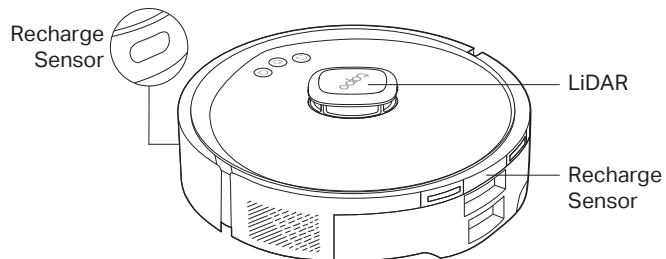

Clean the Charging Contacts

Wipe the charging contacts with a clean, dry cloth.
Using a wet cloth may cause damage.

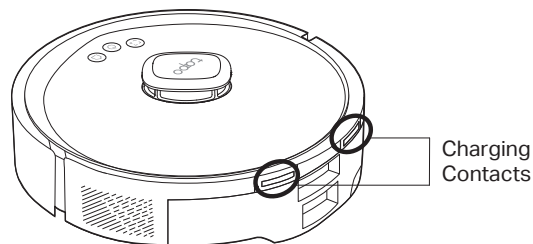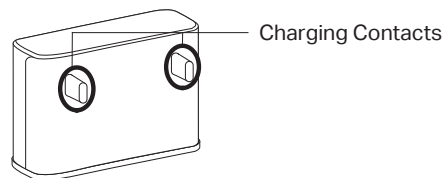

9 Troubleshooting



Scan for more

Issue	Solution
Setup failure	1. Check if the robot vacuum is turned on. If not, press and hold  for 3 seconds to turn it on. 2. The battery level is low. Please place the robot vacuum on the dock to charge, and the robot vacuum will turn on automatically when it is ready.
Failed to find the device in the Tapo app	1. Check if the robot vacuum is turned on. If not, press and hold  for 3 seconds to turn it on. 2. Ensure your phone/tablet's Bluetooth is turned on. 3. Move your phone/tablet closer to the robot vacuum. 4. Simultaneously press and hold  and  for more than 5 seconds to put your robot vacuum into setup mode, then try again. 5. If the problem persists, try using another phone or tablet to download the Tapo app and set it up again.
Failed to connect to Home Wi-Fi	1. Ensure your home Wi-Fi is a 2.4GHz network. 2. Ensure you have entered the correct Wi-Fi password. 3. The Wi-Fi signal may be too weak. Please move the robot vacuum closer to the router. 4. Simultaneously press and hold  and  for more than 5 seconds to put your robot vacuum into setup mode, then try again. 5. If the problem persists, try using another phone or tablet to download the Tapo app and set it up again.
Charging failure	1. Make sure that the power adapter of the dock is plugged in. 2. Poor contact. Please clean up the spring contacts on the dock and the charging contacts on the robot vacuum.
Recharge failure	1. Remove the protective film from the robot vacuum and dock before use. 2. Ensure that there are no foreign objects obstructing the bottom of the dock. 3. Ensure the robot vacuum starts cleaning from the dock every time and the map on the Tapo app shows the icon of the dock. 4. There may be many obstacles near the dock. Please check and place the dock in an open area. 5. The robot vacuum may be far from the dock. Please place the robot vacuum near the dock and try again.

Issue	Solution
Abnormal Noise	There may be foreign matter entangled in the main brush, side brush, or wheels. Please clean up after shutdown.
Poor Cleaning	1. There may be too much dust on the floor. Please increase the vacuum power in the Tapo app and set two or more cleaning times. 2. The dustbin may be full. Please empty the dustbin. 3. The main brush may be entangled by foreign matter. Please check and clean the main brush. 4. The filter may be clogged. Please clean or replace the filter.
Schedule is not working	1. The battery level may be low. Please charge the battery until it is above 20% (not docked) or 30% (docked). 2. The cleaning is already in progress when the schedule starts. 3. Check if Do Not Disturb is set in the Tapo app. Make sure the schedule is not within the set Do Not Disturb period. 4. There is no internet access for your Wi-Fi network and your robot vacuum has restarted. Make sure your network has internet.
Offline	1. Ensure the Tapo app and the robot vacuum firmware is up to date. 2. Ensure the area receives good Wi-Fi signals. 3. Ensure your router is working properly. Reboot the router and robot vacuum. 4. Try to change the router's channel to 6, and width to 20MHz. 5. Try to change the router's DNS to 8.8.8.8. 6. If the robot vacuum does not respond, press and hold ⏻ for 5 seconds to force shutdown, then press and hold ⏻ for 3 seconds to turn it on and check.



If the corresponding issues cannot be solved by referring to the above methods, please contact our Technical Support at <https://www.tp-link.com/support/contact-technical-support/>.



Scan for Support

10 Frequently Asked Questions (FAQ)



Scan for more

Question	Answer
How much time does it take to charge the robot vacuum?	It takes about 4 hours to fully charge the robot vacuum.
Can I add my preferred cleaning agents to the water tank?	No. The cleaning agents may corrode the water tank or affect the lifetime of your robot vacuum. Please add only water to the water tank.
Can the robot vacuum work on a wet surface?	The robot vacuum is not waterproof and should not operate on wet surfaces. Ensure you clean up any water in damp environments like bathrooms before use to prevent damage from liquids entering the robot vacuum.
What floor types does the robot vacuum support?	The robot vacuum can clean most floor types, such as hard floors, hardwood, tile, marble floors, carpet (not high-pile carpet), rugs, etc. For optimal performance, we recommend either removing high-pile carpets or setting specific carpet areas in the Tapo app.



If the corresponding issues cannot be solved by referring to the above methods, please contact our Technical Support at <https://www.tp-link.com/support/contact-technical-support/>.



Scan for Support

11 Voice Prompts for Issues

Voice Prompt	Solution
Error 1 - 7	Press and hold the power button (⏻) for 3 seconds to turn the robot vacuum off, then press and hold for another 3 seconds to turn it back on to reboot. If the issue persists, please scan the QR code on the page to contact the technical support.
Unable to find charging base. Stop heading home.	Please refer to the FAQ "What to do if my Tapo Robot Vacuum cannot recharge?" (https://www.tp-link.com/support/faq/3496/) for help.
Restricted area detected. Please move to a new location to start.	Check if the robot vacuum is in a no-go zone or on a restricted carpet (No Cleaning/Vacuum Only). Move it to a new location or adjust carpet settings in the Tapo app.
Failed to locate. Stop cleaning.	1. Check if the map matches the current environment. 2. Check if you have enabled the Auto Switch feature for map management in the Tapo App. 3. Make sure the dock is placed in a spacious area with no obstacles around it. 4. Check if the LiDAR is dirty or obscured and clean it. 5. Reboot and try again.
The laser sensor is stuck or entangled. Please check.	1. Check if there are any foreign objects stuck in the LiDAR sensor and clean it with a clean, soft, and dry cloth. 2. Reboot and try again. If the issue persists, please scan the QR code on the page to contact technical support.
Anti-drop sensor blocked. Please wipe.	Check if the robot vacuum is near the edge of a drop-off or on dark-colored or long-pile carpets. If so, set no-go zones for these areas in the Tapo app. If not, turn over the robot vacuum, check if the anti-drop sensors are dirty, and clean it with a clean, soft, and dry cloth.
Front bumper stuck. Please check.	1. Check if there are any foreign objects stuck in the front bumper and clean it with a clean and dry cloth. 2. Manually press the front bumper gently from different angles to check if it rebounds normally. If the issue persists, please scan the QR code on the page to contact technical support.



If the corresponding issues cannot be solved by referring to the above methods, please contact our Technical Support at <https://www.tp-link.com/support/contact-technical-support/>.



Scan for Support

Voice Prompt	Solution
Main brush is stuck. Please remove and clean it.	1. Turn over the robot vacuum. 2. Remove the main brush to check if there are any foreign objects or accumulated hair stuck and clean it (Refer to P11). 3. Reinstall the main brush cover properly and try again. If the issue persists, reboot and try again.
Side brush is stuck. Please check.	1. Turn over the robot vacuum. 2. Remove the side brush to check if there are any foreign objects stuck and clean it (Refer to P11). 3. Reinstall the side brush properly and try again. If the issue persists, reboot and try again.
Wheel is stuck. Please check and move to a new position to retry.	Check if it is stuck under furniture such as the sofa or bed and unable to move. If so, set no-go zones for these areas in the Tapo app. If not, turn over the robot vacuum and check if there are any foreign objects stuck in the main wheels, then clean it. Tools such as scissors or tweezers can be used if necessary. If the issue persists, reboot and try again.
The wheel is suspended. Please put the device on the ground to start.	1. Place the robot vacuum on the ground to start. 2. Reboot and try again. If the issue persists, please scan the QR code on the page to contact the technical support.
Please return the 2-in-1 dustbin with water tank	Ensure the 2-in-1 dustbin with water tank is securely installed, and listen for a clear click sound. If the issue persists, reboot and try again.
Mop cloth mount removed. Exiting Mopping Mode.	Ensure the mop cloth mount is securely installed, and listen for a clear click sound. If the issue persists, reboot and try again.



If the corresponding issues cannot be solved by referring to the above methods, please contact our Technical Support at <https://www.tp-link.com/support/contact-technical-support/>.



Scan for Support

Energy Saving Mode

When the robot vacuum is docked, press and hold the Power button  and the Dock button  for more than 15 seconds until the LED turns off. It will then enter the Energy Saving mode.

In this mode, only the charging feature will be active. All other functions, including LEDs and sensors, will be disabled, and Wi-Fi will be disconnected.

To exit Energy Saving mode, press the Power button  on the robot vacuum; it will automatically revert to the Normal mode.



Need some help?

Visit **www.tapo.com/support/**

for technical support, user guides, FAQs, warranty & more

